

FAQ • 07/2016

Where do you find the latest updates of the operating systems of S7-41x CPUs?



<https://support.industry.siemens.com/cs/ww/en/view/40945038>

This entry is from the Siemens Industry Online Support. The general terms of use (http://www.siemens.com/terms_of_use) apply.

Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks. In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions only form one element of such a concept.

Customer is responsible to prevent unauthorized access to its plants, systems, machines and networks. Systems, machines and components should only be connected to the enterprise network or the internet if and to the extent necessary and with appropriate security measures (e.g. use of firewalls and network segmentation) in place.

Additionally, Siemens' guidance on appropriate security measures should be taken into account. For more information about industrial security, please visit <http://www.siemens.com/industrialsecurity>.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends to apply product updates as soon as available and to always use the latest product versions. Use of product versions that are no longer supported, and failure to apply latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under <http://www.siemens.com/industrialsecurity>.

Table of content

1	Operating system for S7-41x CPUs	3
1.1	PCS 7 CPU 410-5H	3
1.2	CPU 412.....	4
1.3	CPU 413.....	5
1.4	CPU 414.....	6
1.5	CPU 416.....	8
1.6	CPU 417.....	10

1 Operating system for S7-41x CPUs

1.1 PCS 7 CPU 410-5H

PCS 7 CPU 410-5H	Order no.	Operating system firmware version	STEP 7 Version	Link zur Downloadseite
CPU 410-5H	6ES7 410-5HX08-0AB0	V8.0.2	PCS 7 V8.0 SP1 + HUP CPU 410-5H	Entry ID: 109476571
		V8.1.2	*	

*The CPU 410-5H firmware V8.1.x can be used independently of SIMATIC PCS 7 V8.1. In this way you can also benefit from the corrections for the CPU410-5H listed below if you are using SIMATIC PCS 7 V8.0.

1.2 CPU 412

CPU 412	Order no.	Operating system firmware version	STEP 7 Version	Link to the download page
CPU 412-1 MPI CPU 412-1 MPI/DP	6ES7 412-1XF00-0AB0	A3	---	Entry ID: 109475012
	6ES7 412-1XF01-0AB0	A9	---	
	6ES7 412-1XF02-0AB0	A9	---	
	6ES7 412-1XF03-0AB0	V3.1.4	---	
	6ES7 412-1XF04-0AB0	V4.1.1	STEP 7 V5.2 SP1 HF3	Entry ID: 109474988
	6ES7 412-1XJ05-0AB0	V5.3.5	STEP 7 V5.3 SP2	Entry ID: 109474827
	6ES7 412-1XJ07-0AB0	V7.0.0	STEP 7 V5.4 + HSP261 V2.0/ S7 Distributed Safety V5.4 + SP5	
CPU 412-2 MPI/DP	6ES7 412-2XG00-0AB0	V3.1.4	---	Entry ID: 109475012
	6ES7 412-2XG04-0AB0	V4.1.1	STEP 7 V5.2 SP1 HF3	Entry ID: 109474988
	6ES7 412-2XJ05-0AB0	V5.3.5	STEP 7 V5.3 SP2	Entry ID: 109474827
	6ES7 412-2XK07-0AB0	V7.0.0	STEP 7 V5.4 + HSP261 V2.0/ S7 Distributed Safety V5.4 + SP5	
CPU 412-2 PN	6ES7 412-2EK06-0AB0	V6.0.4	STEP 7 V5.5	Entry ID: 109474874
	6ES7 412-2EK07-0AB0	V7.0.0	STEP 7 V5.5 + HSP262/ S7 Distributed Safety V5.4 + SP5	
CPU 412-3H	6ES7 412-3HJ14-0AB0	V4.5.7	STEP 7 V5.3 SP2/ F-Systems	Entry ID: 109474703
CPU 412-5H	6ES7 412-5HK06-0AB0	V6.0.6	STEP 7 V5.5 SP2 HF1/ F-Systems	Entry ID: 109474550

1.3 CPU 413

CPU 413	Order no.	Operating system firmware version	STEP 7 Version	Link to the download page
CPU 413-1	6ES7 413-1XG00-0AB0	A3	---	Entry ID: 109475012
	6ES7 413-1XG01-0AB0	A9	---	
	6ES7 413-1XG02-0AB0	A9	---	
CPU 413-2	6ES7 413-2XG00-0AB0	A4	---	Entry ID: 109475012
	6ES7 413-2XG01-0AB0	A9	---	
	6ES7 413-2XG02-0AB0	A9	---	

1.4 CPU 414

CPU 414	Order no.	Operating system firmware version	STEP 7 Version	Link to the download page
CPU 414-1	6ES7 414-1XG00-0AB0	A3	---	Entry ID: 109475012
	6ES7 414-1XG01-0AB0	A9	---	
	6ES7 414-1XG02-0AB0	A9	---	
CPU 414-2, MPI/DP	6ES7 414-2XG00-0AB0	A4	---	Entry ID: 109475012
	6ES7 414-2XG01-0AB0	A9	---	
	6ES7 414-2XG02-0AB0	A9	---	
	6ES7 414-2XG03-0AB0	V3.1.4	---	
	6ES7 414-2XG04-0AB0	V4.1.1	STEP 7 V5.2 SP1 HF3	Entry ID: 109474988
	6ES7 414-2XJ00-0AB0	A9	---	Entry ID: 109475012
	6ES7 414-2XJ01-0AB0	A9	---	
	6ES7 414-2XK05-0AB0	V5.3.5	STEP 7 V5.3 SP2	Entry ID: 109474827
	6ES7 414-2XL07-0AB0	V7.0.0	STEP 7 V5.4 + HSP261 V2.0/ S7 Distributed Safety V5.4 + SP5	
CPU 414-3	6ES7 414-3XJ00-0AB0	V3.1.4	---	Entry ID: 109475012
	6ES7 414-3XJ04-0AB0	V4.1.1	STEP 7 V5.2 SP1 HF3	Entry ID: 109474988
	6ES7 414-3XM05-0AB0	V5.3.5	STEP 7 V5.3 SP2	Entry ID: 109474827
	6ES7 414-3XM07-0AB0	V7.0.0	STEP 7 V5.4 + HSP261 V2.0/ S7 Distributed Safety V5.4 + SP5	
CPU 414-3 PN/DP	6ES7 414-3EM05-0AB0	V5.3.2	STEP 7 V5.4 SP4	Entry ID: 109474827
	6ES7 414-3EM06-0AB0	V6.0.4	STEP 7 V5.5	Entry ID: 109474874
	6ES7 414-3EM07-0AB0	V7.0.0	STEP 7 V5.5 + HSP262/ S7 Distributed Safety V5.4 + SP5	

1 Operating system for S7-41x CPUs

CPU 414	Order no.	Operating system firmware version	STEP 7 Version	Link to the download page
CPU 414F-3 PN/DP	6ES7 414-3FM06-0AB0	V6.0.4	STEP 7 V5.5/ S7 Distributed Safety V5.4	Entry ID: 109474874
	6ES7 414-3FM07-0AB0	V7.0.0	STEP 7 V5.5 + HSP262/ S7 Distributed Safety V5.4 + SP5	
CPU 414-4H	6ES7 414-4HJ00-0AB0	V3.1.5	STEP 7 V5.0 SP2/ F-Systems	Entry ID: 6741018
	6ES7 414-4HJ04-0AB0	V4.0.12	STEP 7 V5.0 SP2/ F-Systems	Entry ID: 109474747
	6ES7 414-4HM14-0AB0	V4.5.7	STEP 7 V5.3 SP2/ F-Systems	Entry ID: 109474703
	6ES7 414-4HR14-0AB0	V4.5.7	STEP 7 V5.3 SP2/ F-Systems	Entry ID: 109474703
CPU 414-5H	6ES7 414-5HM06-0AB0	V6.0.6	STEP 7 V5.5 SP2 HF 1/ F-Systems	Entry ID: 109474550

1.5 CPU 416

CPU 416	Order no.	Operating system firmware version	STEP 7 Version	Link to the download page
CPU 416-1	6ES7 416-1XJ00-0AB0	A3	---	Entry ID: 109475012
	6ES7 416-1XJ01-0AB0	A9	---	
	6ES7 416-1XJ02-0AB0	A9	---	
CPU 416-2	6ES7 416-2XK00-0AB0	A9	---	Entry ID: 109475012
	6ES7 416-2XK01-0AB0	A9	---	
	6ES7 416-2XK02-0AB0	V3.1.4	---	
	6ES7 416-2XK04-0AB0	V4.1.1	STEP 7 V5.2 SP1 HF3	Entry ID: 109474988
	6ES7 416-2XL00-0AB0	A9	---	Entry ID: 109475012
	6ES7 416-2XL01-0AB0	A9	---	
	6ES7 416-2XN05-0AB0	V5.3.5	STEP 7 V5.3 SP2	Entry ID: 109474827
	6ES7 416-2XP07-0AB0	V7.0.0	STEP 7 V5.4 + HSP261 V2.0/ S7 Distributed Safety V5.4 + SP5	
CPU 416F-2	6ES7 416-2FK02-0AB0	V3.1.4	---	Entry ID: 109475012
	6ES7 416-2FK04-0AB0	V4.1.1	STEP 7 V5.2 SP1 HF3	Entry ID: 109474988
	6ES7 416-2FN05-0AB0	V5.3.5	Step 7 V5.3 SP2/ S7 Distributed Safety V5.4	Entry ID: 109474827
	6ES7 416-2FP07-0AB0	V7.0.0	STEP 7 V5.4 + HSP261 V2.0/ S7 Distributed Safety V5.4 + SP5	
CPU 416-3	6ES7 416-3ER05-0AB0	V5.3.2	STEP 7 V5.4 SP4	Entry ID: 109474827
	6ES7 416-3XL00-0AB0	V3.1.4	---	Entry ID: 109475012
	6ES7 416-3XL04-0AB0	V4.1.1	STEP 7 V5.2 SP1 HF3	Entry ID: 109474988
	6ES7 416-3XR05-0AB0	V5.3.5	STEP 7 V5.3 SP2	Entry ID: 109474827
	6ES7 416-3XS07-0AB0	V7.0.0	STEP 7 V5.4 + HSP261 V2.0/ S7 Distributed Safety V5.4 SP5	

1 Operating system for S7-41x CPUs

CPU 416	Order no.	Operating system firmware version	STEP 7 Version	Link to the download page
CPU 416-3 PN/DP	6ES7 416-3ES06-0AB0	V6.0.4	STEP 7 V5.5	Entry ID: 109474874
	6ES7 416-3ES07-0AB0	V7.0.0	STEP 7 V5.5 + HSP262/ S7 Distributed Safety V5.4 + SP5	
CPU 416F-3 PN/DP	6ES7 416-3FR05-0AB0	V5.3.2	STEP 7 V5.4 SP4/ S7 Distributed Safety V5.4	Entry ID: 109474827
	6ES7 416-3FS06-0AB0	V6.0.4	STEP 7 V5.5/ S7 Distributed Safety V5.4 SP1	Entry ID: 109474874
	6ES7 416-3FS07-0AB0	V7.0.0	STEP 7 V5.5 + HSP262/ S7 Distributed Safety V5.4 + SP5	
CPU 416-5H	6ES7 416-5HS06-0AB0	V6.0.6	STEP 7 V5.5 SP2 HF1	Entry ID: 109474550

1.6 CPU 417

CPU 417	Bestell-Nr.	Operating system firmware version	STEP 7 Version	Link to the download page
CPU 417-4	6ES7 417-4XL00-0AB0	V3.1.4	---	Entry ID: 109475012
	6ES7 417-4XL04-0AB0	V4.1.1	STEP 7 V5.2 SP1 HF3	Entry ID: 109474988
	6ES7 417-4XT05-0AB0	V5.3.5	STEP 7 V5.3 SP2	Entry ID: 109474827
	6ES7 417-4XT07-0AB0	V7.0.0	STEP 7 V5.4 + HSP261/ S7 Distributed Safety V5.4 + SP5	
CPU 417-4H	6ES7 417-4HL00-0AB0	V2.1.5	---	Entry ID: 6741018
	6ES7 417-4HL01-0AB0	V3.1.5	---	
	6ES7 417-4HL04-0AB0	V4.0.12	STEP 7 V5.2 SP1 HF3/ F-Systems	Entry ID: 109474747
	6ES7 417-4HT14-0AB0	V4.5.7	STEP 7 V5.3 SP2/ F-Systems	Entry ID: 109474703
CPU 417-5H	6ES7 417-5HT06-0AB0	V6.0.6	STEP 7 V5.5 SP2 HF1/ F-Systems	Entry ID: 109474550