

System	Title	SW	Edition	Order number	Languages					
					de	en	fr	it	es	cs
High performance converters SINAMICS S										
Basic servo drive SINAMICS S110										
S110	Equipment Manual		01/11	6SL3097-4AC10-0xP2	x	x	x	x	x	
S110	Function Manual	4.4 SP1	06/12	6SL3097-4AB10-0xP4	x	x	x	x	x	
S110	List Manual	4.4	06/12	6SL3097-4AP10-0xP3	x	x	x	x	x	
S110	Function Manual Getting Started		10/08	6SL3097-4AG10-0xP0	x	x	x	x	x	
SINAMICS S120 Built-In Units										
S120	Control Units and Additional System Components		01/13	6SL3097-4AH00-0xP3	x	x	x	x	x	
S120	booksize power units		01/13	6SL3097-4AC00-0xP5	x	x	x	x	x	
S120	chassis power units		01/12	6SL3097-4AE00-0xP2	x	x	x	x	x	
S120	Manual AC Drive		01/13	6SL3097-4AL00-0xP3	x	x	x	x	x	
S120	Liquid Cooled Chassis Power Units		01/12	6SL3097-4AM00-0xP2	x	x	x	x	x	
S120	Commissioning Manual	4.5	01/13	6SL3097-4AF00-0xP3	x	x	x	x	x	
S120	Function Manual Drive Functions	4.6	01/13	6SL3097-4AB00-0xP3	x	x	x	x	x	
S120	Safety Integrated Function Manual	4.6	01/13	6SL3097-4AR00-0xP4	x	x	x	x	x	
S120/150	List Manual	4.6	01/13	6SL3097-4AP00-0xP4	x	x	x	x	x	
SINAMICS / SIMOTION	DCC Editor		02/12	6SL3097-4AN00-0xP1	x	x	x			
SINAMICS / SIMOTION	Description of the DCC Standard Blocks	4.3	02/12	6SL3097-4AQ00-0xP2	x	x	x	x	x	
S120	Guidelines for machine configuration	2.6	10/09	6FC5397-6CP10-0xA1	x	x				
S120	Booksize SIMODRIVE Cabinet integration		09/07	6SL3097-0AT00-0xP0	x	x				x
S120	Combi Manual		07/12	6SL3097-4AV00-0xP3	x	x				
S120	Getting Started	4.6	01/13	6SL3097-4AG00-0xP2	x	x	x	x	x	
S120	High Frequency Drive	4.5	01/13	6SL3097-4AH10-0xP2	x	x				
S120	CANopen Interface Commissioning Manual	4.6	01/13	6SL3097-4AA00-0xP0	x	x	x	x	x	
	Free function blocks	4.5	01/12		x	x				x
	EMC design guidelines configuration manual		01/12	6FC5297-0AD30-0xP3	x	x	x	x	x	
General performance converters SINAMICS G										
SINAMICS G110D distributed frequency inverter										
G110D	Parameter Manual	3.3	05/09		x	x				
G110D	Getting Started	3.3	05/09		x	x				
G110D	Operating Instructions	3.4	06/10		x	x				
SINAMICS G110 Built-in units										
G110	Compatibility SINAMICS G110 versus MICROMASTER 410		2003		x	x				
	Operating Instructions: BOP - Basic Operator Panel				x	x				
	MICROMASTER 4: EMC Design Guidelines				x	x				
G110	Getting Started Guide		04/03		x	x	x	x	x	
G110	DIN RAIL MOUNTING KIT INSTALLATIONS				x	x	x	x		
G110	PC Connection Kit				x	x	x	x		
G110	Compact Operating Manual		04/04		x	x	x	x		
G110	Getting Started Guide		11/04		x	x	x	x		
G110	Operating Instructions (Compact)		11/04		x	x	x	x	x	
G110	Parameter List	1.1/1.2	11/04	6SL3298-0BA11-0xP0	x	x	x	x	x	
G110	Getting Started Guide		04/05		x	x	x	x	x	
G110	Operatin Instructions	1.0/1.1	04/05	6SL3298-0AA11-0xP0	x	x	x	x	x	
SINAMICS G150 Cabinet Units										
	Free function blocks	4.5	01/12		x	x				x
SINAMICS G120P pump, fan and compressor inverters										
G120P	Power Module PM230 (IP120)		06/11		x	x	x	x	x	
SINAMICS G120D distributed frequency interters										
G120D	Control Units CU240D	3.0	05/07		x	x				
G120D	Control Units CU240D DP, CU240D DP-F, Power Modules PM250C	1.0	04/07		x	x				
G120D	Control Units CU240D DP, CU240D DP-F	1.0	04/07		x	x				
G120D	Control Units CU240D DP, CU240D DP-F, CU240D DP-F, CU240D PN, CU240D PN-F		09/07		x	x				
G120D	Control Units CU240D DP, CU240D DP-F, CU240D DP-F, CU240D PN, CU240D PN-F Power Modules PM250C		09/07		x	x				
G120D	Power Modules PM250D		06/08		x	x				
G120D	Control Units CU240D		09/08		x	x				
G120D	Control Units CU240D DP, CU240D DP-F, CU240D DP-F, CU240D PN, CU240D PN-F	3.2	10/08		x	x				
G120D	Control Units CU240D DP, CU240D DP-F, CU240D DP-F, CU240D PN, CU240D PN-F Power Modules PM250C	3.2	10/08		x	x				
G120D	List Manual Control Units CU240D-2 Control Units CU250D-2	4.6	01/13		x	x				
	Frequenzy converter with Control Units CU250D-2	4.5	03/12		x	x	x	x	x	
	Getting Started	4.5	03/12		x	x	x	x	x	
	Frequenzy converter with Control Units CU240D-2		03/12		x	x	x	x	x	
G120D	converter with control units CU240D-2 and CU250D-2	4.6	01/13		x	x	x	x	x	
G120D	frequency converter with control units CU240D-2		01/13		x	x	x	x	x	
G120D	frequency converter with control units CU250D-2	4.6	01/13		x	x	x	x	x	
	EMC design guidelines configuration manual		01/12	6FC5297-0AD30-0xP3	x	x	x	x	x	

System	Title	SW	Edition	Order number	Languages					
					de	en	fr	it	es	cs
SINAMICS G120C Built-in Units										
G120	Safety Integrated Function Manual	4.3.2	07/10				x	x		
G120C	Frequency inverter	4.4	01/11				x	x		x
G120/G120C	Safety Integrated Function Manual	4.4	01/11				x	x		
G120/G120C	Screening Plates		2012				x			
G120/G120C/G120D	Safety Integrated Function Manual	4.6	01/13				x	x		x
	Residual risks of built-in units SINAMICS G IN IP20 degree of protection		06/11				x	x		
	Braking Resistor for SINAMICS G120 Power Modules PM240-2 Frame Size A to C		12/11				x	x	x	
G120C	Inverter		01/11				x	x	x	x
G120C	Frequency Inverter	4.4	01/11				x	x	x	x
G120C	Frequency Converter	4.5	03/12				x	x	x	x
G120C	Frequency Converter	4.5	03/12				x	x	x	x
G120C	Power Modules PM240-2 Frame Size A to C Line Reactor (Line Commutating Choke)		04/11				x	x	x	x
G120C	List Manual	4.6	01/13				x	x		
G120C	Converter Getting Started	4.6	01/13				x	x	x	x
G120C	Operating instructions Converter	4.6	01/13				x	x	x	x
G120, G120C, G120D	Function Manual Safety Integrated	4.5	08/12				x	x		x
SINAMICS G120 Built-in units										
Control Units										
G120	Product Information: Control Units CU240S		05/06				x	x		
G120	Product Information: Control Units CU240S, Power Modules PM250 / PM260	2.1	11/06				x	x		
G120	Control Unit CU240S, CU240S DP, CU240S DP-F	2.1	11/06				x	x		
G120	Control Unit CU240S, CU240S DP, CU240S DP-F	2.1	11/06				x	x		
G120/ G120D	SIMATIC ET 200S FC, SIMATIC ET 200 pro FC	3.0	06/07				x	x		
G120	Control Units CU240S CU240S DP CU240S DP-F CU240S PN	3.0	05/07				x	x		
G120	Control Unit CU240S CU240S DP CU240S DP-F CU240S PN	3.0	06/07				x	x		
G120	Control Units CU240S	3.2	11/08				x	x		
G120	Control Units CU240E, CU240S, CU240S DP, CU240S DP-F, CU240S PN, CU240S PN-F		10/07				x	x		
G120	Control Unit CU240S, CU240S DP, CU240S DP-F, CU240S PN, CU240S PN-F	3.0/3.1	10/07				x	x		
G120	Control Unit CU240E	3.2	07/08				x	x		
G120	Control Units CU240E, CU240S	3.2	11/08				x	x		
G120	inverter Control Units CU230P-2	4.2	03/09				x	x		
G120	Parameter Manual Control Units CU230P-2	4.3	11/09				x	x		
G120	inverter Control Units CU230P-2 HVAC; CU230P-2 CAN; CU230P-2 DP	4.3.2	05/10				x	x		
G120	inverter with Control Units CU230P-2	4.4	01/11				x	x		
G120	inverter with Control Units CU240B-2 and CU240E-2	4.4	01/11				x	x		x
G120	CU240S and CU240E Control Units	3.2	03/09				x	x	x	
G120/G120C	Screening Plates		2012				x			
G120	Control Unit CU240S, CU240S DP, CU240S DP-F	2.0	04/06				x	x	x	x
G120	Control Units CU240S, CU240S DP, CU240S DP-F		07/06				x	x	x	x
G120	Control Units CU240S, CU240S DP, CU240S DP-F, CU240S PN	3.0	06/07				x	x	x	x
G120	Control Units CU240E	3.0/3.1	10/07				x	x	x	x
G120	CU240S, CU240S DP, CU240S DP-F, CU240S PN, CU240S PN-F	3.0/3.1	10/07				x	x	x	x
G120	Control Units CU240E	3.1/3.2	10/08				x	x	x	x
G120	CU240S / CU240S DP / CU240S DP-F / CU240S PN / CU240S PN-F	3.0/3.1	10/08				x	x	x	x
G120	Inverter with CU240B-2 and CU240E-2 Control Units	4.3.2	07/10				x	x	x	x
G120	Inverter with CU240B-2 and CU240E-2 Control Units	4.4	01/11				x	x	x	x
G120	Frequency converters with Control Units CU230P-2; CU240B-2; CU240E-2	4.5	04/12				x	x	x	x
G120	frequency converter with the CU240B-2 and CU240E-2 Control Units	4.5	04/12				x	x	x	x
G120	Control Units CU230P-2, FW 4.3	4.3	02/10				x	x	x	x
G120	Frequency inverters with Control Units CU230P-2 HVAC, CU230P-2 DP, CU230P-2 CAN	4.3.2	07/10				x	x	x	x
G120	Frequency inverters with Control Units CU230P-2 HVAC, CU230P-2 DP, CU230P-2 CAN	4.4	01/11				x	x	x	x
G120	Control Units CU240B/E-2	4.6	01/13				x	x		
G120	List Manual Control Units CU230P-2	4.6	01/13				x	x		
G120	List Manual Control Units CU250S-2	4.6	01/13				x	x		
G120	Getting Started converter with CU250S-2 Control Unit	4.6	01/13				x	x		
G120	Operating Instructions converter with the CU250S-2 Control Unit in the vector mode	4.6	01/13				x	x		
G120	Function Manual Basic Positioner	4.6	01/13				x	x		
G120	Operating instructions frequency converter with Control Units CU230P-2 HVAC, CU230P-2 DP, CU230P-2 CAN, CU230P-2 BT	4.5	03/12				x	x	x	x
G120	Operating instructions Converters with Control Units CU230P-2 HVAC, CU230P-2 DP, CU230P-2 PN, CU230P-2 CAN, CU230P-2 B1	4.6	01/13				x	x	x	x
G120	Getting Started converter with Control Units CU230P-2; CU240B-2; CU240E-2	4.6	01/13				x	x	x	x
G120	Operating Instructions converters with CU240B-2 and CU240E-2 Control Units	4.6	01/13				x	x	x	x
G120	Getting Started Frequency converters with Control Units CU230P-2; CU240B-2; CU240E-2	4.5	03/12				x	x	x	x

System	Title	SW	Edition	Order number	Languages					
					de	en	fr	it	es	cs
Power Modules										
G120	Power Module PM250		11/06		x	x				
G120	Power Modules PM260		06/07		x	x				
G120	Power Module				x	x				x
G120	Power Module PM260		07/09		x	x				
G120	Power Module PM250		07/09		x	x				
G120/G120C	Residual risks of built-in units SINAMICS G in IP20 degree of protection		06/11		x	x				
G120	Power Module PM240		07/09		x	x				
G120	Power Module PM240-2		01/12		x	x				
G120P	Power Module PM230, IP20 / Push through		03/12		x	x				
G120	PM240-2 Power Module		11/11		x	x	x	x	x	
SINAMICS G120	Hardware Installation Manual Power Module PM240		03/13		x					
Options										
G120	Screen Termination Kit PM240 Power Modules		2008		x	x				
G120	DIN Rail Fitting Instructions		2006		x	x				
G120	Brake Module Instructions Relay Brake Module, Safe Brake Module		2007		x	x				
G120	Input Choke Installation Instructions FS A-C				x	x				
G120	fan replacement frame sizes A to F		2009		x	x				
G120	Description: Sine-wave filter, sizes A to F+		04/09		x	x				
SINAMICS	Intelligent Operator Panel (IOP)		02/09		x	x				
SINAMICS	Basic Operator Panel 2 (BOP-2)				x	x				x
G120	Brake Relay Instructions		2011		x	x				
G120	Intelligent Operator Panel (IOP)	1.2	11/11		x	x				
SINAMICS	Intelligent Operator Panel (IOP)	1.3	04/12		x	x				x
SINAMICS	Intelligent Operator Panel (IOP)	1.4	03/13		x	x				
BOP – Basic Operator Panel	Operating Instructions BOP – Basic Operator Panel		05/10		x	x				
G120C	Braking Resistors for SINAMICS G120C Power Modules PM240-2 Frame Size A to C		12/11		x	x	x			
G110/G120	PC Connection Kit				x	x	x	x	x	
MICROMASTER 440 / SINAMICS G120	Instruction Sheet: Braking Resistors		05/09		x	x	x	x	x	
G120C	Power Modules PM240-2 Frame Size A to C Line Reactor (Line Commutating Choke)		04/11		x	x	x	x	x	
G120	Frequency converters with Control Units CU230P-2; CU240B-2; CU240E-2	4.4	01/11		x	x	x	x	x	
G120	Inverters with the Control Units CU230P-2; CU240B-2; CU240E-2	4.3.2	06/10		x	x	x	x	x	
SINAMICS V20 basic frequency inverter										
SINAMICS V20	Inverter		02/13		x	x	x	x	x	x
SINAMICS V20	Getting Started		02/13		x	x	x	x	x	x
Converter for SIMATIC ET 200 I/O stations										
EF 200pro FC frequency converter										
	Operating Instructions: SIMATIC ET 200pro FC		11/07		x	x				
	Parameter manual: Frequency Converters ET 200pro FC	3.0	06/07		x	x				
	Product information: Supplement to Operating Instructions		11/07		x	x				
	SINAMICS G120, SINAMICS G120D, SIMATIC ET 200S FC, SIMATIC ET 200 pro FC	3.0	06/07		x	x				
ET 200S FC frequency converter										
	ET 200S FC 变频器参数表		11/04							x
	List Manual (Parameter list) Frequency Converter ET 200S FC, Control Unit ICU24, ICU24(F) Power Module IPM25		03/05		x	x				
	Operating Instructions: Frequency Converter ET 200S FC		10/06		x	x				
	Operating Instructions: Frequency Converter ET 200S FC		06/07		x	x				
	Parameter Manual: ET 200S FC Control Units ICU24, ICU24 F		06/07		x	x				
	SINAMICS G120, SINAMICS G120D, SIMATIC ET 200S FC, SIMATIC ET 200 pro FC	3.0	06/07		x	x				
	Operating Instructions: Frequency Converter ET 200S FC		03/05		x	x	x	x	x	
	Acceptance log for ET 200S FC Failsafe		03/05		x	x	x	x	x	
	Parameter Manual: Frequency Converter ET 200S FC, Power Module IPM25, Control Unit ICU24 / ICU24F		07/05		x	x	x	x	x	
motors										
Geared motors										
Geared Motors 2KG1 / 2KG2										
	MICROSTARTER 1LA7/9, 1LA6 Enclosure for the operating manual		07/04		x	x				
	Mounting Instructions for Rotary pulse encoder 1XP8001-1, 1XP8001-2		05/06		x	x	x	x	x	
	Supplementary sheet to operating instructions ECOFAST Energy Plug 1LA7/9 axis height 56 to 132		07/07		x	x	x	x	x	
Geared Motors 2KG3 / 2KG4										
	Betriebsanleitung: Getriebemotoren		11/06		x	x				
	Operating Instructions: Worm geared motors		03/05		x	x				
	Supplement Forced Ventilation		03/06		x	x				
	Mounting Instructions: Rotary pulse encoder 1XP8004-10 EnDat (P30)		11/05		x	x	x	x	x	
	Mounting Instructions: Rotary pulse encoder 1XP8004-20 SSI		10/05		x	x	x	x	x	
	Mounting Instructions: Rotary pulse encoder 1XP8003-10 Resolver (P32)		11/05		x	x	x	x	x	
	Mounting Instructions: Rotary pulse encoder 1XP8002-1x HTL		10/05		x	x	x	x	x	
	Mounting Instructions: Rotary pulse encoder 1XP8002-2x TTL		10/05		x	x	x	x	x	
	Supplementary sheet to operating instructions ECOFAST Energy Plug 1LA7/9 axis height 56 to 132		07/07		x	x	x	x	x	

System	Title	SW	Edition	Order number	Languages					
					de	en	fr	it	es	cs
Geared Motors Motox 2KJ1										
	Manual BA 2310: MODULOG Motors M up to Size 200				x	x				
	Operating Manuals for MOTOX Gearboxes and Geared Motors		06/11			x				
	Operating Instructions BA 2012: MOTOX Worm Gearbox S				x	x				x
	Operating Instructions BA 2011: MOTOX-SC Worm Gear Units and Gear Motors		04/06		x	x	x	x	x	
	Mounting Instructions: absolute encoder 1XP8014-10 / 1XP8024-10 EnDa		02/11		x	x	x	x	x	
	Mounting Instructions: Resolver 1XP8013 / 1XP8023		12/07		x	x	x	x	x	
	Mounting instructions: absolute encoder 1XP8014-20 / 1XP8024-20 SS		02/11		x	x	x	x	x	
	Mounting Instructions: Incremental encoder 1XP8012 TTL / 1XP8032 TTL		02/11		x	x	x	x	x	
	Mounting instructions: Incremental encoder 1XP8012 / 1XP8032 HTL		02/11		x	x	x	x	x	
	Mounting instructions: TTL-encoder 1XP8042-1x HTL / 1XP8052-1x HTL				x	x	x	x	x	
	Supplement page 1XP8002-1x HTL / 1XP80x4-10 EnDat01 / 1XP80x4-20 SSI Power Supply [Up]		02/11		x	x	x	x	x	
	Operating instructions BA 2515: MOTOX Gearbox for monorail conveyors		04/11		x	x				
	Operating Instructions BA 2019: MOTOX Input Units		05/10		x	x	x	x	x	x
	Operating Instructions BA 2510: MOTOX Optional add-on units		05/10		x	x	x	x	x	x
	Operating Instructions BA 2320: LA / LG Motors		05/10		x	x	x	x	x	x
	Operating instructions BA 2010: MOTOX Gearbox		05/11		x	x	x	x	x	x
Geared Motors Cavex 2KJ1										
	Betriebsanleitung BA 6801: CAVEX-Aufzugantrieb der Bauart CG 45 Größe 120		10/09		x					
	Operating Instructions: CAVEX Elevator Drives of Types CG 26 Sizes 100, 112, 135, 170		08/09		x	x				
	Manual BA 6700: CAVEX worm and wheel sets				x	x				
	Operating Instructions BA 6802: CAVEX Moving Stairway Drives Types CG 26 Size 100, 112, 135, 170		09/03		x	x	x	x	x	
	Operating Instructions BA 6610: CAVEX Worm-Gear Units Type C.. Sizes 63 to 630		03/05		x	x	x	x	x	x
	Operating Instructions BA 6611: CAVEX Worm-Gear Units Type CS.. Sizes 63 to 630		03/05		x	x	x	x	x	x
	Operating Instructions BA 6612: CAVEX-Worm-Gear Units Type CD.. Sizes 100 to 630		03/05		x	x	x	x	x	x
Motors for Motion Control										
SIMOTICS A Application specific motors										
SINAMICS SIMOVERT MASTERDRIVES MICROMASTER SIEMOSYN	Motors 1FU8		09/03	6SN1197-0AC80-0xP0	x	x				
SIMOTICS S Servomotors										
SINAMICS	1FT6 Synchronous Motors		12/04	6SN1197-0AD12-0xP0	x	x		x		x
	SINAMICS S120 1FK7 Synchronous Motors		12/06	6SN1197-0AD16-0xP1	x	x	x	x	x	
SINAMICS S110 / S120	Configuration Manual for synchronous motors 1FK7, Generation 2		10/11	6SN1197-0AD16-0xP4	x	x	x	x	x	
SINAMICS S120	Configuration Manual for 1FT7 synchronous motors		07/11	6SN1197-0AD13-0xP4	x	x	x	x	x	x
SIMOTICS M Main Motors										
	Induction Motors 1PH7 (PM)		05/07	6SN1197-0AC71-0xP0	x	x	x	x	x	x
SINAMICS S120	Configuration manual 1PH7 Induction Motors (Machine tools)		04/09	6SN1197-0AD72-0xP0	x	x	x	x	x	x
SINAMICS S120	Induction Motors Configuration Manual 1PH4		08/08	6SN1197-0AD64-0xP1	x	x	x	x	x	x
SINAMICS S120	Configuration Manual Synchronous Built-in Motors 1FE1		06/10	6SN1197-0AC01-0xP0	x	x				
SINAMICS	1PH8 Main Motor Configuration Manual		05/12	6SN1197-0AD74-0xP1	x	x	x	x	x	x
SINAMICS S120	Configuration Manual 1FM6/1PM4 Hollow-Shaft Motors for Main Spindle Drives		04/08	6SN1197-0AD23-0xP0	x	x	x	x	x	x
SIMOTICS L Linear Motors										
SINAMICS	Drive Technologies Peak and continuous load motors in the 1FN3 product family		08/09	6SN1197-0AB86-0xP0	x	x				
	Drive technology, safety instructions for direct drives		12/11	6SN1197-0AB71-0xP0	x	x	x	x	x	x
SINAMICS	Configuration Manual Drive Technologies SIMOTICS L-1FN6 linear motors		06/12	6SN1197-0AB78-0xP4	x	x	x	x	x	x
Torque motors										
SINAMICS S120	Drive Technology 1FW6 Built-in torque motors		05/09	6SN1197-0AE00-0xP3	x	x	x	x	x	x
	Drive technology, safety instructions for direct drives		12/11	6SN1197-0AB71-0xP0	x	x	x	x	x	x
SINAMICS S120	Configuration Manual, 1FW3 Complete Torque Motors		07/11	6SN1197-0AD70-0xP5	x					
	Operating instructions, 1FW3 complete torque motors		07/11		x	x				
SINAMICS S120	Manuel de configuration moteur-couple complet 1FW3		08/09	6SN1197-0AD70-0xP4			x	x	x	x
SINAMICS S120	Configuration Manual, SIMOTICS T-1FW3 Complete Torque Motors		04/12	6SN1197-0AD70-0xP6	x	x	x	x	x	
	Betriebsanleitung Selbstgekühlte Einbau-Torquemotoren SIMOTICS T-1FW6		02/13	6SN1197-0AF02-0xP0	x					
SINAMICS S120	Projektiertungshandbuch Antriebstechnik Selbstgekühlte Einbau-Torquemotoren SIMOTICS T-1FW6		02/13	6SN1197-0AE01-0xP0	x					
SINAMICS S120	Configuration Manual drive technology SIMOTICS T-1FW6 built-in torque motors		09/12	6SN1197-0AE00-0xP6	x	x				
Motor spindle										
SINAMICS S120	Configuration Manual 2SP1 ECS Motor Spindle		02/11	6SN1197-0AC04-0xP1	x	x	x	x	x	x

System	Title	SW	Edition	Order number	Languages					
					de	en	fr	it	es	cs
frequency inverter MICROMASTER										
MICROMASTER 3										
Standard										
MICROMASTER	Operating Instructions dutch		1998	6SE9286-4AA64	x	x				
MICROMASTER	Operating Instructions chinese		1997	6SE9286-4AA73	x	x				
MICROMASTER	Operating Instructions turkish		1998	6SE9286-4AA81	x	x				
MICROMASTER	Operating Instructions norwegian		1998	6SE9286-4AA74	x	x				
MICROMASTER	Operating Instructions portuguese		1998	6SE9286-4AA76	x	x				
MICROMASTER	ERRATA SHEET - MICROMASTER (6SE92 series) Operating Instructions (H1750-U049-A)		1997		x	x				
MICROMASTER	Operating Instructions		1998	6SE9286-4AB63	x	x				
MICROMASTER	Operating Instructions				x	x				
MICROMASTER	Operating Instructions		1999	6SE9286-4AA86	x	x	x	x		
MICROMASTER	Drives 6SE92 Getting Started		1999	6SE9286-4BA86	x	x	x	x		
Vector										
MICROMASTER Vector	SENSORLESS VECTOR CONTROL (SVC) Application Note		1999			x				
MICROMASTER Vector, MIDIMASTER Vector	MIDIMASTER Vector, Operating Instructions Chinese		1998	6SE3286-4AB53	x	x				
MICROMASTER Vector, MIDIMASTER Vector	Operating Instructions Danish		1999	6SE3286-4AB66-Z	x	x				
MICROMASTER Vector, MIDIMASTER Vector	Operating Instructions turkish		1998	6SE3286-4AB61	x	x				
MICROMASTER Vector, MIDIMASTER Vector	Operating Instructions, Norwegian		1998	6SE3286-4AB54	x	x				
MICROMASTER Vector, MIDIMASTER Vector	Operating Instructions Portuguese		2000	6SE3286-4AB56	x	x				
MICROMASTER Vector, MIDIMASTER Vector	Operating Instructions Swedish		1998	6SE3286-4AB68	x	x				
MICROMASTER Vector, MIDIMASTER Vector	Operating Instructions				x	x				
MICROMASTER Vector, MIDIMASTER Vector	Operating Instructions		1999	6SE3286-4AB66	x	x	x	x		
MICROMASTER Vector, MIDIMASTER Vector	Getting Started		06/99	6SE3286-4BA86	x	x	x	x		
MIDIMASTER	Update Note		1998		x	x	x	x		
Eco										
MICROMASTER ECO & MIDIMASTER ECO	OPERATING INSTRUCTIONS	1.19			x	x				
MICROMASTER Eco, MIDIMASTER Eco	Operating Instructions		1999	6SE9586-4AA86	x	x	x	x		
MICROMASTER Eco	Reference Manuals		08/98	6SE9586-4AB86	x	x			x	
MICROMASTER/MIDIMASTER ECO 6SE95	Additional Information	1.19	2001		x	x	x	x		
Integrated (1UA7)										
MICROMASTER Integrated	Motor Adaptation Guidelines				x	x				
COMBIMASTER / MICROMASTER Integrated	Catalogue DA 64.8 2001		11/01		x	x				
MICROMASTER, MICROMASTER Vector, MICROMASTER Integrated & COMBIMASTER	AS-i Slave Module				x	x				
COMBIMASTER and MICROMASTER Integrated	Reference Manual		1999	6SE9996-0XA35	x	x	x	x		
COMBIMASTER & MICROMASTER Integrated	Operating Instructions		08/99	6SE9996-0XA36	x	x	x	x		
Accessories										
MICROMASTER, MICROMASTER Vector, MICROMASTER Integrated & COMBIMASTER	AS-i Slave Module				x	x				
MIDIMASTER and MICROMASTER Vector	Electronic Braking Unit		1998		x	x				
PROFIBUS-DP Communications Modules CB15; CB155	Operating Instructions		04/01		x	x				
BRAKE OPTIONS	Operating Instructions				x	x				
Enhanced Operator Panel OPM2	Operating Instruction				x	x				
IP56 MIDIMASTER Vector & IP56 MIDIMASTER Eco Communications Module Mounting Panel	Additional Information		2002		x	x				
PROFIBUS-DP	Communications Module CB15/CB155				x	x			x	
MICROMASTER 4										
MICROMASTER 410										
MICROMASTER 4	EMC Design Guidelines				x	x				
MICROMASTER 410	DIN Rail Mounting Kit mit Schrimanschlußplate				x	x				
MICROMASTER 4	Parameter list		10/01	6SE6400-5EB00-0xP0	x	x	x	x		
MICROMASTER 410	FLAT PLATE VARIANT, INSTALLATION INSTRUCTIONS		10/02		x	x	x	x		
MICROMASTER 410	Getting Started Guide				x	x	x	x	x	
MICROMASTER 410	Operating Instructions		07/05	6SE6400-5EA00-0xP0	x	x	x	x	x	
MICROMASTER 410 OP - Operator Panel	Operating Instructions				x	x	x	x		
MICROMASTER 410	MICROMASTER 410 to PC Connection Kit				x	x	x	x		
MICROMASTER 410	MICROMASTER 410 to PC Connection Kit				x	x	x	x		
MICROMASTER 410	DIN RAIL MOUNTING KIT				x	x	x	x		
MICROMASTER 410	MICROMASTER 410 to PC Connection Kit		10/03		x	x	x	x		
MICROMASTER 411 / COMBIMASTER 411										
MICROMASTER / COMBIMASTER 411	Electromechanical Brake Control Option				x	x				
MICROMASTER / COMBIMASTER 411	Profibus Module		03/02		x	x				
MICROMASTER / COMBIMASTER 411	Wall Mounting Kit				x	x				
MICROMASTER 411 & COMBIMASTER 411 AS-i Module	Operating Instructions		01/03		x	x				
COMBIMASTER 411 & MICROMASTER 411	Communications Modules				x	x				
MICROMASTER 411 & COMBIMASTER 411	Operating Instructions		07/05	6SE6400-5CA00-0xP0	x	x				
MICROMASTER 411 ECOFAST & COMBIMASTER 411 ECOFAST	Operating Instructions		06/04	6SE6400-5CC00-0xP0	x	x				
COMBIMASTER 411 & MICROMASTER 411	Getting Started Guide		07/05		x	x				
MICROMASTER 4	EMC Design Guidelines				x	x				
MICROMASTER 411 DeviceNet Option Module	Operating Instructions		10/02		x	x	x	x		
COMBIMASTER 411 & MICROMASTER 411	Parameter List	1.2	08/02	6SE6400-5CE00-0xP0	x	x	x	x		

System	Title	SW	Edition	Order number	Languages					
					de	en	fr	it	es	cs
MICROMASTER 420										
MICROMASTER 420 0,12 kW - 11 kW	Operating Instructions		10/06	6SE6400-5AA00-0xP0	x	x	x	x	x	
MICROMASTER 420 0,12 kW - 11 kW	Operating Instructions (Compact)		10/06		x	x	x	x	x	
MICROMASTER 420	Parameter List		10/06	6SE6400-5BA00-0xP0	x	x	x	x	x	
MICROMASTER 420/430/440	Getting Started Guide		01/09		x	x	x	x	x	
MICROMASTER 430										
MICROMASTER 430 7,5 kW - 250 kW	Operating Instructions (Compact)		10/06		x	x				
MICROMASTER 4	EMC Design Guidelines				x	x				
MICROMASTER 430 GX - Fan Transformer	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 430 FX - Power Supply	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 430 GX - Power Supply	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 430 FX - CIB	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 430 GX - CIB	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 430 GX - Powerblock	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 430 FX - Fan	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 430 FX - Terminal Block X9	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 430 FX - Fan Transformer	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 430 GX - Terminal Block X9	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 430 GX - Fan	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 430 FX - Powerblock	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 430 7,5 kW - 250 kW	Operating Instructions		10/06	6SE6400-5AE00-0xP0	x	x	x	x	x	
MICROMASTER 430	Parameter List		10/06	6SE6400-5AF00-0xP0	x	x	x	x	x	
MICROMASTER 420/430/440	Getting Started Guide		01/09		x	x	x	x	x	
MICROMASTER 420/430/440	Getting Started Guide		10/08		x	x	x	x	x	
MICROMASTER 440										
MICROMASTER 4	EMC Design Guidelines				x	x				
MICROMASTER 440 0,12 kW - 250 kW	Operating Instructions (Compact)		10/06		x	x				
MICROMASTER 440 GX - Power Supply	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 440 FX - CIB	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 440 FX - Fan Transformer	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 440 GX - Fan	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 440 GX - Terminal Block X9	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 440 FX - Fan	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 440 GX - CIB	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 440 GX - Fan Transformer	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 440 FX - Power Supply	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 440 GX - Powerblock	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 440 FX - Powerblock	Maintenance Instructions		05/09		x	x	x	x	x	
MICROMASTER 440	Parameter List		01/06	6SE6400-5BB00-0xP0	x	x	x	x	x	
MICROMASTER 440 0,12 kW - 250 kW	Operating Instructions		10/06	6SE6400-5AW00-0xP0	x	x	x	x	x	
MICROMASTER 420/430/440	Getting Started Guide		01/09		x	x	x	x	x	
MICROMASTER 420/430/440	Getting Started Guide		10/08		x	x	x	x	x	
Accessories										
Asian Advanced Operator Panel (AAOP)	Getting Started Guide									x
MICROMASTER DeviceNet Option Module	Operating Instructions		09/01		x	x				
CANopen Option Module MICROMASTER 420/430/440	Operating Instructions		01/05		x	x				
MICROMASTER 410	DIN Rail Mounting Kit mit Schrimanschlußplate				x	x				
ASIAN ADVANCED OPERATOR PANEL (AAOP)	Operating Instructions		2003		x	x				x
MICROMASTER Encoder Module	Operating Instructions		04/04		x	x				
MICROMASTER 4 Frame Size A to C	Line Commutating Choke - Installation Instructions		12/06		x	x				
Output Choke - MICROMASTER 4 Frame Size A to C	Installation Instructions				x	x				
MICROMASTER 4, Sizes A to F; LC Filter; MICROMASTER 4, Sizes FX and GX	Sinusoidal Filter		04/09		x	x				
MICROMASTER / COMBIMASTER 411	Electromechanical Brake Control Option				x	x				
	Profibus Module		03/02		x	x				
	Wall Mounting Kit				x	x				
MICROMASTER 410 OP - Operator Panel	Operating Instructions				x	x	x	x	x	
MICROMASTER 410	MICROMASTER 410 to PC Connection Kit				x	x	x	x	x	
MICROMASTER 410	DIN RAIL MOUNTING KIT				x	x	x	x	x	
BOP - Basic Operator Panel	Operating Instructions				x	x	x	x	x	
MICROMASTER 410	MICROMASTER 410 to PC Connection Kit		10/03		x	x	x	x	x	
	Gland Plate Installation Instructions		10/03		x	x	x	x	x	
MICROMASTER 4 Frame Size A to C EMC Filter	Installation Instructions				x	x	x	x	x	
	PC to MM4 Connection Kit, Installation Instructions		10/03		x	x	x	x	x	
AOP	AOP to PC Connection Kit, Installation Instructions		10/03		x	x	x	x	x	
AOP	AOP Mounting Kit		10/03		x	x	x	x	x	
BOP/AOP	BOP/AOP Single Drive Mounting Kit		10/03		x	x	x	x	x	
	Installation Instructions Input/Output Chokes (FSD to FSF)				x	x	x	x	x	
ADVANCED OPERATOR PANEL (AOP)	Operating Instructions		07/05		x	x	x	x	x	
DeviceNet Module	Getting Started Guide				x	x	x	x	x	
Advanced Operator Panel (AOP)	Getting Started Guide				x	x	x	x	x	
CANopen Module	Getting Started Guide				x	x	x	x	x	
PROFIBUS Module	Getting Started Guide				x	x	x	x	x	
Braking Resistors MICROMASTER 440 / SINAMICS G120	Instruction Sheet		05/09		x	x	x	x	x	