

System	Title	Edition	Order number	Languages					
				deu	eng	fra	ita	esp	chs
<b>SINAMICS S High Performance Converters</b>									
<b>SINAMICS S110 Basic Servo Drives</b>									
	SINAMICS S110 Equipment Manual	01/2011	6SL3097-4AC10-0xP2	X	X	X	X	X	
	SINAMICS S110 List Manual	06/2012	6SL3097-4AP10-0xP3	X	X	X	X	X	
	SINAMICS S110 Function Manual Getting Started	10/2008	6SL3097-4AG10-0xP0	X	X	X	X	X	
	SINAMICS S110 Function Manual	06/2012	6SL3097-4AB10-0xP4	X	X	X	X	X	
<b>SINAMICS S120 Built-In Units</b>									
	SINAMICS S120 Manual Control Units and Additional System Components	04/2014	6SL3097-4AH00-0xP4	X	X	X	X	X	
	SINAMICS S120 Manual Combi	04/2014	6SL3097-4AV00-0xP4	X	X			X	
	SINAMICS S120 Manual Cabinet Modules	03/2013		X	X	X	X	X	
	SINAMICS S120 Manual booksize power units	04/2014	6SL3097-4AC00-0xP6	X	X	X	X	X	
	SINAMICS S120 Manual air-cooled chassis power units	04/2014	6SL3097-4AE00-0xP4	X	X	X	X	X	
	SINAMICS S120 Manual Chassis Power Units, Liquid-cooled	04/2014	6SL3097-4AM00-0xP4	X	X	X	X	X	
	SINAMICS S120 Function Manual Drive Functions	04/2014	6SL3097-4AB00-0xP4	X	X	X	X	X	
	SINAMICS S120 Commissioning Manual	04/2014	6SL3097-4AF00-0xP4	X	X	X	X	X	
	SINAMICS S120 Function Manual Safety Integrated	01/2013	6SL3097-4AR00-0xP4	X	X	X	X	X	
	SINAMICS S120 Manual AC Drive	04/2014	6SL3097-4AL00-0xP4	X	X	X	X	X	
	SINAMICS S120/S150 List Manual	04/2014	6SL3097-4AP00-0xP5	X	X	X	X	X	
	SINAMICS S120 Getting Started	04/2014	6SL3097-4AG00-0xP3	X	X	X	X	X	
	MOTION CONTROL Configuration Manual EMC installation guidelines / basic system requirements	01/2012	6FC5297-0AD30-0xP3	X	X	X	X	X	
	SINAMICS/SIMOTION Programming and Operating Manual DCC Editor	04/2014	6SL3097-4AN00-0xP2	X	X	X	X		
	SINAMICS/SIMOTION Function Manual Description of the Standard DCC Blocks	04/2014	6SL3097-4AQ00-0xP3	X	X	X	X		
<b>SINAMICS S120M Distributed Servo Drives</b>									
	SINAMICS S120M Equipment Manual Distributed Servo Drive Technology	11/2013	6SL3097-4AW00-0xP2	X	X	X	X	X	
<b>SINAMICS G General Performance Converters</b>									
<b>SINAMICS G110 Built-In Units</b>									
	SINAMICS G110 Parameter List	11/2004	6SL3298-0BA11-0xP0	X	X	X	X	X	
	SINAMICS G110 Operating Instructions	04/2005	6SL3298-0AA11-0xP0	X	X	X	X	X	
<b>SINAMICS G110D Distributed Inverters</b>									
	SINAMICS G110D Parameter Manual	06/2010		X	X				
	SINAMICS G110D Operating Instructions	06/2010		X	X				
<b>SINAMICS G110M Distributed, motor-integrated inverter</b>									
	SINAMICS G110M List Manual	04/2014		X	X			X	
	SINAMICS G110M Operating Instructions	05/2014		X	X				
	SINAMICS G110M Getting Started	05/2014		X	X				
	SINAMICS G110M Installation Instructions Power Module	02/2014		X	X	X	X	X	
	SINAMICS G110M Installation Instructions 24 V Power Supply Unit (PSU)	02/2014		X	X	X	X	X	
<b>SINAMICS G120 Built-In Units</b>									
<b>SINAMICS G120 General Documents</b>									
	SINAMICS G120 Function Manual Safety Integrated	07/2010		X	X				
	SINAMICS G120, G120P, G120C, G120D, G110M Function Manual Fieldbuses	04/2014		X	X			X	
	MOTION CONTROL Configuration Manual EMC installation guidelines / basic system requirements	01/2012	6FC5297-0AD30-0xP3	X	X	X	X	X	
<b>SINAMICS G120 Modular converters</b>									
	SINAMICS G120 Function Manual Basic Positioner	04/2014		X	X			X	
	SINAMICS G120 List Manual Control Units CU240B-2/CU240E-2	04/2014		X	X			X	
	SINAMICS G120 Operating Instructions Converter with the CU240B-2 and CU240E-2 Control Units	04/2014		X	X	X	X	X	
	SINAMICS G120 Getting Started Converter with Control Units CU230P-2; CU240B-2; CU240E-2	04/2014		X	X	X	X	X	
	SINAMICS G120 List Manual Control Units CU250S-2	04/2014		X	X			X	
	SINAMICS G120 Operating Instructions Converter with CU250S-2 Control Unit	04/2014		X	X	X	X	X	
	SINAMICS G120 Compact Operating Instructions CU250S-2 Control Units	05/2014		X	X	X	X	X	
	SINAMICS G120 Operating Instructions Chemical industry module CM240NE with CU250S-2 DP	03/2014		X	X				
	SINAMICS G120 Getting Started Power Module, PM240-2	01/2014		X	X	X	X	X	
	SINAMICS G120P Hardware Installation Manual PM230 Power Module IP55	07/2012		X	X				
	SINAMICS G120P Hardware Installation Manual Power Module PM230, IP20 / Push through	03/2012		X	X				
	SINAMICS G120 Hardware Installation Manual Power Module PM240	07/2009		X	X				
	SINAMICS G120 Hardware Installation Manual Power Module PM240-2	01/2014		X	X			X	
	SINAMICS G120 Getting Started Power Module	01/2008		X	X	X	X	X	
	SINAMICS G120 Hardware Installation Manual PM250 Power Module	09/2012		X	X				
	SINAMICS G120 Hardware Installation Manual Power Module PM260	08/2013		X	X				
<b>SINAMICS G120 Operator Panels</b>									
	SINAMICS G110D, SINAMICS G110M, SINAMICS G120, SINAMICS G120C, SINAMICS G120D Operating Instructions Intelligent Operator Panel (IOP)	07/2014		X	X				
	SINAMICS Operating Instructions Basic Operator Panel 2 (BOP-2)	03/2010		X	X			X	
<b>SINAMICS G120 Options</b>									
	SINAMICS G120 Instructions Brake Relay	01/2011		X	X				
	SINAMICS G120 Description SINUS-Filter Sizes A to C (380 - 480 V), Sizes D to F (380 - 480 V), Frame Size F+	05/2013		X	X				
	SINAMICS G120 DIN Rail Fitting Instructions	01/2006		X	X				
	MICROMASTER 440 / SINAMICS G120 Instruction Sheet Braking Resistors	05/2009		X	X	X	X	X	
	SINAMICS G120 Installation Instructions Input Choke FS A-C	04/2011		X	X				
	SINAMICS G120 Fan replacement sizes A to F	01/2009		X	X				
	Installation Instructions Braking Resistors for SINAMICS G120C/PM240-2 Frame Size A to C	12/2011		X	X	X			
	SINAMICS G120C Installation Instructions Power Modules PM240-2 Frame Size A to C Line Reactor (Line Commutating Choke)	04/2011		X	X	X	X	X	
<b>SINAMICS G120C Built-In Units</b>									

System	Title	Edition	Order number	Languages					
				deu	eng	fra	ita	esp	chs
	SINAMICS G120C Operating Instructions SINAMICS G120C converter	04/2014		X	X	X	X	X	X
	SINAMICS G120C List Manual	04/2014		X	X				X
	SINAMICS G120C Getting Started SINAMICS G120C converter	04/2014		X	X	X	X	X	X
<b>SINAMICS G120D Distributed Inverters</b>									
	SINAMICS G120D List Manual Control Units CU240D-2/CU250D-2	04/2014		X	X				X
	SINAMICS G120D Getting Started SINAMICS G120D converter with control units CU240D-2 and CU250D-2	04/2014		X	X	X	X	X	X
	SINAMICS G120D Operating Instructions Converter with control units CU250D-2	04/2014		X	X	X	X	X	X
	SINAMICS G120D Parameter Manual Control Units CU240D	09/2008		X	X				
	SINAMICS G120D Operating Instructions Converter with control units CU240D-2	04/2014		X	X	X	X	X	X
	SINAMICS G120D Instruction Sheet PM250D Power Modules	06/2008		X	X				
<b>SINAMICS G120P for Pumps, Fans and Compressors</b>									
	SINAMICS G120P Hardware Installation Manual PM230 Power Module IP55	07/2012		X	X				
	SINAMICS G120 List Manual CU230P-2 Control Units	04/2014		X	X	X	X	X	X
	SINAMICS G120 Operating Instructions Converter with CU230P-2 Control Units	04/2014		X	X	X	X	X	X
	SINAMICS G120 Getting Started Converter with Control Units CU230P-2; CU240B-2; CU240E-2	04/2014		X	X	X	X	X	X
	SINAMICS G120P Hardware Installation Manual Power Module PM330	04/2014		X	X	X	X	X	X
	SINAMICS G120P Operating Instructions Line filter	04/2014		X	X	X	X	X	X
	SINAMICS G120P Operating Instructions Line reactors	04/2014		X	X	X	X	X	X
	SINAMICS G120P Operating Instructions Braking resistors	04/2014		X	X	X	X	X	X
	SINAMICS G120P Operating Instructions Output reactors	04/2014		X	X	X	X	X	X
	SINAMICS G120P Operating Instructions dV/dt filter plus Voltage Peak Limiter	04/2014		X	X	X	X	X	X
	SINAMICS G120P Operating Instructions dV/dt filter compact plus Voltage Peak Limiter	04/2014		X	X	X	X	X	X
	SINAMICS G120P Operating Instructions Inverter cabinet units	04/2014		X	X	X	X	X	X
<b>Converters for SIMATIC ET 200 Distributed IO</b>									
	SINAMICS G120, SINAMICS G120D, SIMATIC ET 200S FC, SIMATIC ET 200 pro FC Function Manual	06/2007		X	X				
	SIMATIC ET 200S FC, SIMATIC ET 200pro FC Operating Instructions	11/2007		X	X				
	SIMATIC ET 200pro FC Frequency Converters Parameter manual	06/2007		X	X				
<b>SINAMICS V Basic Performance Converters</b>									
<b>SINAMICS V20 Basic Inverters</b>									
	SINAMICS V20 Getting Started	02/2013		X	X	X	X	X	X
	SINAMICS V20 Operating Instructions SINAMICS V20 Inverter	02/2013		X	X	X	X	X	X
<b>SINAMICS V60 Basic Servo Drive System</b>									
	SINAMICS V60 Getting Started Controlled Power Module (CPM60.1)	04/2014			X				X
<b>SINAMICS V70 Basic Servo Drive System</b>									
	SINAMICS/SIMOTICS SINAMICS V70, SIMOTICS S-1FL6 Operating Instructions	08/2013		X	X	X	X	X	X
<b>SINAMICS V90 Basic Servo Drive System</b>									
	SINAMICS V90/SIMOTICS S-1FL6 Getting Started	04/2014			X		X		X
	SINAMICS V90 Operating Manual SINAMICS V-ASSISTANT Online Help	04/2014			X				X
	SINAMICS V90/SIMOTICS S-1FL6 Operating Instructions	04/2014			X		X		X
<b>Motors for Motion Control</b>									
<b>SIMOTICS S Servomotors</b>									
	SINAMICS S120 Configuration Manual for 1FT7 synchronous motors	07/2011	6SN1197-0AD13-0xP4	X	X	X	X	X	X
	SINAMICS S110 / S120 Configuration Manual for synchronous motors 1FK7, Generation 2	10/2011	6SN1197-0AD16-0xP4	X	X	X	X	X	X
<b>SIMOTICS M Main Motors</b>									
	SINAMICS S Configuration Manual Induction Motors 1PH7 (PM)	05/2007	6SN1197-0AC71-0xP0	X	X	X	X	X	X
	SINAMICS S Configuration manual 1PH7 Induction Motors (Machine tools)	04/2009	6SN1197-0AD72-0xP0	X	X	X	X	X	X
	SINAMICS S120 Configuration Manual SIMOTICS M-1PH8 Main Motor	05/2012	6SN1197-0AD74-0xP1	X	X	X	X	X	X
<b>SIMOTICS L Linear Motors</b>									
	SINAMICS S120 Configuration Manual Drive Technologies Peak and continuous load motors in the 1FN3 product family	08/2009	6SN1197-0AB86-0xP0	X	X				
	SINAMICS S120 Configuration Manual Drive Technologies SIMOTICS L-1FN6 linear motors	06/2012	6SN1197-0AB78-0xP4	X	X	X	X	X	X
<b>SIMOTICS T Torque Motors</b>									
	SINAMICS S120 Configuration Manual Drive technology SIMOTICS T-1FW3 Complete Torque Motors	07/2013	6SN1197-0AD70-0xP7	X	X	X	X	X	
	SINAMICS S120 Configuration Manual Drive Technology SIMOTICS T-1FW6 built-in torque motors	09/2012	6SN1197-0AE00-0xP6	X	X				
<b>Sensor systems</b>									
	SIMODRIVE sensor User Manual Absolute Value Encoder with PROFIBUS-DP	07/2005	6SN1197-0AB10-0xP4	X	X				