

Sinamics		Sinamics		Sinamics																				
Titel	Title	Titolo	S120	S110	MLFB	German	English	Italian	French	Spanish	Chinese	Chinese trad	Korean	Portug.	Jap.	Polish	Russian	Swedish	Czech	Hungarian	Danish	Dutch		
Projekthandbuch Industrial Security	Configuration Manual Industrial Security	Manuale di Programmazione Industrial Security	x	x	6FC5397-5EP40-5*A2	A	B	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
			x	x	6FC5397-5EP40-6*A0	A	B	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
Gerätehandbuch	Equipment Manual	Manuale del prodotto	-	x	6SL3097-4AC10-0*P1	A	B	C	D	E	-	-	-	-	-	-	-	-	-	-	-	-	-	
			-	x	6SL3097-4AC10-0*P2	A	B	C	D	E	-	-	-	-	-	-	-	-	-	-	-	-	-	
			-	x	6SL3097-4AC10-0*P4	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	-
			-	x	6SL3097-4AC10-0*P5	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	-
Gerätehandbuch Control Units	Equipment Manual Control Units	CU e componenti suppl.	x	-	6SL3097-4AH00-0*P3	A	B	C	D	E	R	-	-	-	T	-	P	-	-	-	-	-	-	
			x	-	6SL3097-4AH00-0*P5	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
			x	-	6SL3097-4AH00-0*P6	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	-
			x	-	6SL3097-4AH00-0*P7	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	-
Gerätehandbuch Leistungsteile Booksize	Equipment Manual Booksize	Parti di potenza, Booksize	x	-	6SL3097-4AC00-0*P5	A	B	C	D	E	R	-	-	-	T	-	-	-	-	-	-	-	-	
			x	-	6SL3097-4AC00-0*P6	A	B	C	D	E	R	-	-	-	T	-	P	-	-	-	-	-	-	
			x	-	6SL3097-4AC00-0*P7	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	-
			x	-	6SL3097-4AC00-0*P8	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	-
			x	-	6SL3097-4AC00-1*P0	A	B	C	D	E	R	-	-	-	-	T	-	-	-	-	-	-	-	-
Gerätehandbuch Leistungsteile Booksize C/D-Type	Equipment Manual Booksize C/D-Type	Parti di potenza, Booksize C/D-Type	x	-	6SL3097-4AC20-0*P0	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
			x	-	6SL3097-4AC20-0*P1	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
			x	-	6SL3097-4AC20-0*P2	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	-
Gerätehandbuch Leistungsteile Chassis	Equipment Manual Chassis	Parti di potenza, Chassis	x	-	6SL3097-4AE00-0*P3	A	B	C	D	E	R	-	-	-	-	-	P	-	-	-	-	-	-	
			x	-	6SL3097-4AE00-0*P4	A	B	C	D	E	R	-	-	-	-	-	P	-	-	-	-	-	-	
			x	-	6SL3097-4AE00-0*P5	A	B	C	D	E	R	-	-	-	-	-	P	-	-	-	-	-	-	-
			x	-	6SL3097-4AE00-0*P6	A	B	C	D	E	R	-	-	-	-	-	P	-	-	-	-	-	-	-
Gerätehandbuch Leistungsteile Chassis flüssigkeitsgekühlt	Manual Water-cooled chassis power units for common cooling circuits	Parti di potenza, Chassis raffreddate ad acqua per circuiti di raffreddamento comuni	x	-	6SL3097-4AM00-0*P4	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
			x	-	6SL3097-4AM00-0*P5	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
			x	-	6SL3097-4AM00-0*P6	A	B	C	D	E	R	-	-	-	-	-	P	-	-	-	-	-	-	-
			x	-	6SL3097-4AM00-0*P7	A	B	C	D	E	R	-	-	-	-	-	P	-	-	-	-	-	-	-
Gerätehandbuch Leistungsteile Chassis wassergekühlt für gemeinsame Kühlkreisläufe	Equipment Manual Chassis Liquid Cooled	Parti di potenza, Chassis raffreddato ad acqua	x	-	6SL3097-4AM10-0*P0	A	B	C	D	E	R	-	-	-	-	-	P	-	-	-	-	-	-	
			x	-	6SL3097-4AL00-0*P3	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
Gerätehandbuch AC-Drive	Equipment Manual AC-Drive	Parti di potenza, AC-Drive	x	-	6SL3097-4AL00-0*P4	A	B	C	D	E	R	-	-	-	T	-	-	-	-	-	-	-	-	
			x	-	6SL3097-4AL00-0*P5	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
			x	-	6SL3097-4AL00-0*P6	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	-
			x	-	6SL3097-5AL00-0*P0	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	-
			x	-	6SL3097-4AV00-0*P3	A	B	-	-	-	-	R	M	L	K	-	-	-	-	-	-	-	-	-
Gerätehandbuch Combi	Equipment Manual Combi	Parti di potenza Combi	x	-	6SL3097-4AV00-0*P4	A	B	-	-	-	R	M	L	K	-	-	-	-	-	-	-	-	-	
			x	-	6SL3097-4AV00-0*P5	A	B	-	-	-	R	M	L	K	-	-	-	-	-	-	-	-	-	-
			x	-	6SL3097-4AV00-0*P6	A	B	-	-	-	R	M	L	K	-	-	-	-	-	-	-	-	-	-
			x	-	6SL3097-4AV00-0*P7	A	B	-	-	-	R	M	L	K	-	-	-	-	-	-	-	-	-	-
			x	-	6SL3097-5AV00-0*P0	A	B	-	-	-	R	M	L	K	-	-	-	-	-	-	-	-	-	-
Gerätehandbuch S120M	Equipment Manual S120M	Manuale del prodotto S120M	x	-	6SL3097-4AW00-0*P2	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
			x	-	6SL3097-4AW00-0*P3	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	

\* = placeholder for the language

- = not available

fett/bold = Neu / new

Sinamics		Sinamics		Sinamics																				
Titel	Title	Titolo	S120	S110	MLFB	German	English	Italian	French	Spanish	Chinese	Chinese trad	Korean	Portug.	Jap.	Polish	Russian	Swedish	Czech	Hungarian	Danish	Dutch		
Gerätehandbuch Aufbauanleitung Offshore	Equipment Manual Installation instructions Offshore	Parti di potenza costruzione Offshore	x	-	6SL3097-0AU00-0*P1	A	B	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
Systemhandbuch Schaltschrankintegration	System Manual Cabinet integration	Manuale di sistema, Integrazione armadio elettrico	x	-	6SL3097-0AT00-0*P0	A	B	C	-	-	R	-	-	-	-	-	-	-	-	-	-	-	-	
Systemhandbuch High Frequency Drive	System Manual High Frequency Drive	Manuale di sistema, High Frequency Drive	x	-	6SL3097-4AH10-0*P2	A	B	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
Programmier- und Bedienhandbuch DCC	Programming and Operating Manual DCC	Manuale operativo e di progr. DCC	x	-	6SL3097-4AH10-0*P3	A	B	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
			x	-	6SL3097-4AN00-0*P1	A	B	C	D	E	-	-	-	-	-	-	-	-	-	-	-	-	-	
			x	-	6SL3097-4AN00-0*P2	A	B	C	D	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
			x	-	6SL3097-4AN00-0*P3	A	B	C	D	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
DOConCD	DOConCD	DOConCD	x	-	6SL3097-4AN00-0*P4	A	B	C	D	E	-	-	-	-	-	-	-	-	-	-	-	-	-	
			x	-	6SL3097-2CA00-0*G5	Y	Y	Y	Y	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Manual Collection, mehrsprachig 05/11	Manual Collection, multilingual 05/11	Manual Collection, multilingua 05/11	x	x	6SL3097-2CA00-0*G6	Y	Y	Y	Y	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
Manual Collection, mehrsprachig 08/12	Manual Collection, multilingual 08/12	Manual Collection, multilingua 08/12	x	x	6SL3097-4CA00-0*G0	Y	Y	Y	Y	Y	-	-	-	-	-	-	-	-	-	-	-	-	-	
Manual Collection, mehrsprachig 05/13	Manual Collection, multilingual 05/13	Manual Collection, multilingua 05/13	x	x	6SL3097-4CA00-0*G1	Y	Y	Y	Y	Y	-	-	-	-	-	-	-	-	-	-	-	-	-	
Manual Collection, mehrsprachig 06/14	Manual Collection, multilingual 06/14	Manual Collection, multilingua 06/14	x	x	6SL3097-4CA00-0*G2	Y	Y	Y	Y	Y	-	-	-	-	-	-	-	-	-	-	-	-	-	
Manual Collection, mehrsprachig 06/14	Manual Collection, multilingual 06/14	Manual Collection, multilingua 06/14	x	x	6SL3097-4CA00-0*G3	Y	Y	Y	Y	Y	-	-	-	-	-	-	-	-	-	-	-	-	-	
<b>SW4.3 SP1</b>	<b>SW4.3 SP1</b>	<b>SW4.3 SP1</b>																						
Listen	Lists	Manuale delle liste	-	x	6SL3097-4AP10-0*P1	A	B	C	D	E	-	-	-	-	T	-	-	-	-	-	-	-	-	
<b>SW4.4</b>	<b>SW4.4</b>	<b>SW4.4</b>																						
Funktionshandbuch	Function Manual	Manuale di guida alle funzioni	-	x	6SL3097-4AB10-0*P3	A	B	C	D	E	-	-	-	-	-	-	-	-	-	-	-	-	-	
Listen	Lists	Manuale delle liste	-	x	6SL3097-4AP10-0*P3	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
<b>SW4.4 SP1</b>	<b>SW4.4 SP1</b>	<b>SW4.4 SP1</b>																						
Funktionshandbuch	Function Manual	Manuale di guida alle funzioni	-	x	6SL3097-4AB10-0*P4	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
<b>SW4.4 SP3</b>	<b>SW4.4 SP3</b>	<b>SW4.4 SP3</b>																						
Listen	Lists	Manuale delle liste	-	x	6SL3097-4AP10-0*P4	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
<b>SW4.6</b>	<b>SW4.6</b>	<b>SW4.6</b>																						
FH S120 Safety Integrated	FH S120 Safety Integrated	Funzioni Safety Integrated S120	x	-	6SL3097-4AR00-0*P4	A	B	C	D	E	R	-	-	-	-	-	P	-	-	-	-	-	-	
Getting Started	Getting Started	Getting Started	x	-	6SL3097-4AG00-0*P2	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
Inbetriebnahmehandbuch	Commissioning Manual	Manuale di M.I.S	x	-	6SL3097-4AF00-0*P3	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
Inbetriebnahmehandbuch CANopen	Commissioning Manual CANopen	Manuale di M.I.S CANopen	x	-	6SL3097-4AA00-0*P0	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
FH Antriebsfunktionen	FH Firmware Drive	Funzioni dell'azionamento	x	-	6SL3097-4AB00-0*P3	A	B	C	D	E	R	-	-	-	-	-	P	-	-	-	-	-	-	
Listen	Lists	Manuale delle liste	x	-	6SL3097-4AP00-0*P4	A	B	C	D	E	R	-	-	-	T	-	P	-	-	-	-	-	-	
<b>SW4.7</b>	<b>SW4.7</b>	<b>SW4.7</b>																						
FH DCC-Standardbausteine	FH DCC Standard Blocks	FH blocchi standard DCC	x	-	6SL3097-4AQ00-0*P3	A	B	C	D	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
Listen	Lists	Manuale delle liste	x	-	6SL3097-4AP00-0*P5	A	B	C	D	E	R	-	-	K	T	-	P	-	-	-	-	-	-	
FH S120 Safety Integrated	FH S120 Safety Integrated	Funzioni Safety Integrated S120	x	-	6SL3097-4AR00-0*P5	A	B	C	D	E	R	-	-	-	-	-	P	-	-	-	-	-	-	
Inbetriebnahmehandbuch	Commissioning Manual	Manuale di M.I.S	x	-	6SL3097-4AF00-0*P4	A	B	C	D	E	R	-	-	-	-	-	P	-	-	-	-	-	-	
Getting Started	Getting Started	Getting Started	x	-	6SL3097-4AG00-0*P3	A	B	C	D	E	R	-	-	-	-	-	P	-	-	-	-	-	-	
FH Antriebsfunktionen	FH Firmware Drive	Funzioni dell'azionamento	x	-	6SL3097-4AB00-0*P4	A	B	C	D	E	R	-	-	-	-	-	P	-	-	-	-	-	-	
Inbetriebnahmehandbuch CANopen	Commissioning Manual CANopen	Manuale di M.I.S CANopen	x	-	6SL3097-4AA00-0*P1	A	B	C	D	E	R	-	-	-	-	-	P	-	-	-	-	-	-	
Systemhandbuch Hydraulic Drive	System Manual Hydraulic Drive	Manuale di sistema Hydraulic Drive	x	-	6SL3097-4BA00-0*P0	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
Systemhandbuch Hydraulic Drive	System Manual Hydraulic Drive	Manuale di sistema Hydraulic Drive	x	-	6SL3097-4BA00-0*P1	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	

\* = placeholder for the language  
 - = not available  
 fett/bold = Neu / new

Sinamics		Sinamics		Sinamics																				
Titel	Title	Titolo	S120	S110	MLFB	German	English	Italian	French	Spanish	Chinese	Chinese trad	Korean	Portug.	Jap.	Polish	Russian	Swedish	Czech	Hungarian	Danish	Dutch		
<b>SW4.8</b>		<b>SW4.8</b>		<b>SW4.8</b>																				
FH DCC-Standardbausteine	FH DCC Standard Blocks	FH blocchi standard DCC	x	-	6SL3097-4AQ00-0*P4	A	B	C	D	E	-	-	-	-	-	-	-	-	-	-	-	-	-	
Listen	Lists	Manuale delle liste	x	-	6SL3097-4AP00-0*P8	A	B	C	D	E	R	-	-	K	T	-	P	-	U	-	-	-	-	
Getting Started	Getting Started	Getting Started	x	-	6SL3097-4AG00-0*P4	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
Inbetriebnahmehandbuch	Commissioning Manual	Manuale di M.I.S	x	-	6SL3097-4AF00-0*P5	A	B	C	D	E	R	-	-	-	T	-	-	-	-	-	-	-	-	
FH S120 Safety Integrated	FH S120 Safety Integrated	Funzioni Safety Integrated S120	x	-	6SL3097-4AR00-0*P6	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
Systemhandbuch Hydraulic Drive	System Manual Hydraulic Drive	Manuale di sistema Hydraulic Drive	x	-	6SL3097-4BA00-0*P2	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
Inbetriebnahmehandbuch CANopen	Commissioning Manual CANopen	Manuale di M.I.S CANopen	x	-	6SL3097-4AA00-0*P2	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
FH Antriebsfunktionen	FH Firmware Drive	Funzioni dell'azionamento	x	-	6SL3097-4AB00-0*P5	A	B	C	D	E	R	-	-	K	T	-	P	-	-	-	-	-	-	
Inbetriebnahmehandbuch STARTDRIVE	Commissioning Manual STARTDRIVE	Manuale di M.I.S STARTDRIVE	x	-	6SL3097-4AA10-0*P0	A	B	-	-	-	-	-	-	-	T	-	-	-	-	-	-	-	-	
<b>SW5.1</b>		<b>SW5.1</b>		<b>SW5.1</b>																				
Getting Started mit STARTER	Getting Started with STARTER	Getting Started con STARTER	x	-	6SL3097-4AG00-0*P5	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
FH S120 Safety Integrated	FH S120 Safety Integrated	Funzioni Safety Integrated S120	x	-	6SL3097-4AR00-0*P7	A	B	C	D	E	R	-	-	K	T	-	P	-	-	-	-	-	-	
Getting Started mit Startdrive	Getting Started with Startdrive	Getting Started con Startdrive	x	-	6SL3097-4AG30-0*P0	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
Inbetriebnahmehandbuch mit STARTER	Commissioning Manual with STARTER	Manuale per la messa in servizio von STARTER	x	-	6SL3097-4AF00-0*P6	A	B	C	D	E	R	-	-	-	T	-	-	-	-	-	-	-	-	
Inbetriebnahmehandbuch mit STARTDRIVE	Commissioning Manual with STARTDRIVE	Manuale per la messa in servizio con Startdrive	x	-	6SL3097-4AA10-0*P1	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
Inbetriebnahmehandbuch CANopen	Commissioning Manual CANopen	Manuale di M.I.S CANopen	x	-	6SL3097-4AA00-0*P3	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
FH DCC-Standardbausteine	FH DCC Standard Blocks	FH blocchi standard DCC	x	-	6SL3097-4AQ00-0*P5	A	B	C	D	E	-	-	-	-	-	-	-	-	-	-	-	-	-	
FH Antriebsfunktionen	FH Firmware Drive	Funzioni dell'azionamento	x	-	6SL3097-4AB00-0*P6	A	B	C	D	E	R	-	-	K	T	-	P	-	-	-	-	-	-	
Listen	Lists	Manuale delle liste	x	-	6SL3097-4AP00-1*P0	A	B	C	D	E	R	-	-	K	T	-	P	-	-	-	-	-	-	
<b>SW5.1 SP1</b>		<b>SW5.1 SP1</b>		<b>SW5.1 SP1</b>																				
FH Antriebsfunktionen (Starter)	FH Drive functions (STARTER)	Funzioni dell'azionamento (Starter)	x	-	6SL3097-5AB00-0*P0	A	B	C	D	E	R	-	-	K	-	-	P	-	-	-	-	-	-	
FH S120 Safety Integrated	FH S120 Safety Integrated	Funzioni Safety Integrated S120	x	-	6SL3097-5AR00-0*P0	A	B	C	D	E	R	-	-	-	-	-	-	-	-	-	-	-	-	
Listen	Lists	Manuale delle liste	x	-	6SL3097-5AP00-0*P0	A	B	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

\* = placeholder for the language

- = not available

fett/bold = Neu / new