

CPU	Order Number
SIMATIC S7-1500 CPUs	
CPU 1518-4 PN/DP	6ES7518-4AP00-0AB0
CPU 1518F-4 PN/DP	6ES7518-4FP00-0AB0
CPU 1518-4 PN/DP ODK	6ES7518-4AP00-3AB0
CPU 1518F-4 PN/DP ODK	6ES7518-4FP00-3AB0
CPU 1518-4 PN/DP MFP	6ES7518-4AX00-1AC0
CPU 1518F-4 PN/DP MFP	6ES7518-4FX00-1AC0
CPU 1517-3 PN/DP	6ES7517-3AP00-0AB0
CPU 1517F-3 PN/DP	6ES7517-3FP00-0AB0
CPU 1517TF-3 PN/DP	6ES7517-3UP00-0AB0
CPU 1517T-3 PN/DP	6ES7517-3TP00-0AB0
CPU 1516-3 PN/DP	6ES7516-3AN00-0AB0
	6ES7516-3AN01-0AB0
CPU 1516F-3 PN/DP	6ES7516-3FN00-0AB0
	6ES7516-3FN01-0AB0
CPU 1516TF-3 PN/DP	6ES7516-3UN00-0AB0
CPU 1516T-3 PN/DP	6ES7516-3TN00-0AB0
CPU 1515-2 PN	6ES7515-2AM00-0AB0
	6ES7515-2AM01-0AB0
CPU 1515F-2 PN	6ES7515-2FM00-0AB0
	6ES7515-2FM01-0AB0
CPU 1515TF-2 PN	6ES7515-2UM01-0AB0
CPU 1515T-2 PN	6ES7515-2TM01-0AB0
CPU 1513-1 PN	6ES7513-1AL00-0AB0
	6ES7513-1AL01-0AB0
	6ES7513-1AL02-0AB0
CPU 1513F-1 PN	6ES7513-1FL00-0AB0
	6ES7513-1FL01-0AB0
	6ES7513-1FL02-0AB0
CPU 1511-1 PN	6ES7511-1AK00-0AB0
	6ES7511-1AK01-0AB0
	6ES7511-1AK02-0AB0
CPU 1511F-1 PN	6ES7511-1FK00-0AB0
	6ES7511-1FK01-0AB0
	6ES7511-1FK02-0AB0
CPU 1511TF-1 PN	6ES7511-1UK01-0AB0
CPU 1511T-1 PN	6ES7511-1TK01-0AB0
CPU 1511C-1 PN	6ES7511-1CK00-0AB0
	6ES7511-1CK01-0AB0
CPU 1512C-1 PN	6ES7512-1CK00-0AB0
	6ES7512-1CK01-0AB0

This entry is from the Service&Support portal of Siemens AG,
Siemens Industry Online Support.

The general terms of use

CPU	Order Number
SIMATIC S7-1200 CPUs	
CPU 1211C	6ES7211-1AE40-0XB0
	6ES7211-1HE40-0XB0
	6ES7211-1BE40-0XB0
CPU 1212C	6ES7212-1AE40-0XB0
	6ES7212-1HE40-0XB0
	6ES7212-1BE40-0XB0
CPU 1212FC	6ES7212-1AF40-0XB0
	6ES7212-1HF40-0XB0
CPU 1214C	6ES7214-1AG40-0XB0
	6ES7214-1BG40-0XB0
	6ES7214-1HG40-0XB0
CPU 1214FC	6ES7214-1AF40-0XB0
	6ES7214-1HF40-0XB0
CPU 1215C	6ES7215-1AG40-0XB0
	6ES7215-1BG40-0XB0
	6ES7215-1HG40-0XB0
CPU 1215FC	6ES7215-1AF40-0XB0
	6ES7215-1HF40-0XB0
CPU 1217C	6ES7217-1AG40-0XB0
SIMATIC S7-300 CPUs	
CPU 313C-2 DP	6ES7313-6CE00-0AB0
	6ES7313-6CE01-0AB0
	6ES7313-6CF03-0AB0
	6ES7313-6CG04-0AB0
CPU 314C-2 DP	6ES7314-6CF00-0AB0
	6ES7314-6CF01-0AB0
	6ES7314-6CF02-0AB0
	6ES7314-6CG03-0AB0
	6ES7314-6CH04-0AB0
CPU 314C-2 PN/DP	6ES7314-6EH04-0AB0
CPU 315-2 DP	6ES7315-2AF83-0AB0
	6ES7315-2AF03-0AB0
	6ES7315-2AG10-0AB0
	6ES7315-2AH14-0AB0
CPU 315-2 PN/DP	6ES7315-2EG10-0AB0
	6ES7315-2EG10-0AB0
	6ES7315-2EH13-0AB0
	6ES7315-2EH14-0AB0
CPU 315F-2 DP	6ES7315-6FF00-0AB0
	6ES7315-6FF00-0AB0
	6ES7315-6FF01-0AB0
	6ES7315-6FF04-0AB0
CPU 315F-2 PN/DP	6ES7315-2FH10-0AB0
	6ES7315-2FH13-0AB0
	6ES7315-2FJ14-0AB0
CPU 316-2 DP	6ES7316-2AG00-0AB0

This entry is from the Service&Support portal of Siemens AG,
Siemens Industry Online Support.

The general terms of use

CPU	Order Number
CPU 317-2 DP	6ES7317-2AJ10-0AB0
	6ES7317-2AK14-0AB0
CPU 317-2 PN/DP	6ES7317-2EJ10-0AB0
	6ES7317-2EK13-0AB0
	6ES7317-2EK14-0AB0
CPU 317F-2 DP	6ES7317-6FF00-0AB0
	6ES7317-6FF03-0AB0
	6ES7317-6FF04-0AB0
CPU 317F-2 PN/DP	6ES7317-2FJ10-0AB0
	6ES7317-2FK13-0AB0
	6ES7317-2FK14-0AB0
CPU 318-2 DP	6ES7318-2AJ00-0AB0
CPU 319-3 PN/DP	6ES7318-3EL00-0AB0
	6ES7318-3EL01-0AB0
CPU 319F-3 PN/DP	6ES7318-3FL00-0AB0
	6ES7318-3FL01-0AB0
CPU 315T-2 DP	6ES7315-6TG10-0AB0
	6ES7315-6TH13-0AB0
CPU 315T-3 PN/DP	6ES7315-7TJ10-0AB0
CPU 317T-2 DP	6ES7317-6TJ10-0AB0
	6ES7317-6TK13-0AB0
CPU 317T-3 PN/DP	6ES7317-7TK10-0AB0
CPU 317TF-2 DP	6ES7317-6TF14-0AB0
CPU 317TF-3 PN/DP	6ES7317-7UL10-0AB0
SIMATIC S7-400 CPUs	
CPU 412-1	6ES7412-1XF03-0AB0
	6ES7412-1XF04-0AB0
	6ES7412-1XJ05-0AB0
	6ES7412-1XJ07-0AB0
CPU 412-2 DP	6ES7412-2XG00-0AB0
	6ES7412-2XG04-0AB0
	6ES7412-2XJ05-0AB0
	6ES7412-2XK07-0AB0
CPU 412-2 PN	6ES7412-2EK06-0AB0
	6ES7412-2EK07-0AB0
CPU 414-2 DP	6ES7414-2XG03-0AB0
	6ES7414-2XG04-0AB0
	6ES7414-2XK05-0AB0
	6ES7414-2XL07-0AB0
CPU 414-3 DP	6ES7414-3XJ00-0AB0
	6ES7414-3XJ04-0AB0
	6ES7414-3XM05-0AB0
	6ES7414-3XM07-0AB0
CPU 414-3 PN/DP	6ES7414-3EM05-0AB0
	6ES7414-3EM06-0AB0
	6ES7414-3EM07-0AB0
CPU 414F-3 PN/DP	6ES7414-3FM06-0AB0
	6ES7414-3FM07-0AB0

This entry is from the Service&Support portal of Siemens AG,
Siemens Industry Online Support.

The general terms of use

CPU	Order Number
CPU 416-2 DP	6ES7416-2XK02-0AB0
	6ES7416-2XK04-0AB0
	6ES7416-2XN05-0AB0
	6ES7416-2XP07-0AB0
CPU 416F-2 DP	6ES7416-2FK02-0AB0
	6ES7416-2FK04-0AB0
	6ES7416-2FN05-0AB0
	6ES7416-2FP07-0AB0
CPU 416-3 DP	6ES7416-3XL00-0AB0
	6ES7416-3XL04-0AB0
	6ES7416-3XR05-0AB0
	6ES7416-3XS07-0AB0
CPU 416-3 PN/DP	6ES7416-3ER05-0AB0
	6ES7416-3ES06-0AB0
	6ES7416-3ES07-0AB0
CPU 416F-3 PN/DP	6ES7416-3FR05-0AB0
	6ES7416-3FS06-0AB0
	6ES7416-3FS07-0AB0
CPU 417-4	6ES7417-4XL00-0AB0
	6ES7417-4XL04-0AB0
	6ES7417-4XT05-0AB0
	6ES7417-4XT07-0AB0
CPU 410 SMART	6ES7410-5HN08-0AB0
CPU 410E	6ES7410-5HM08-0AB0
SIMATIC S7-400 H-CPUs	
CPU 412-3H	6ES7412-3HJ14-0AB0
CPU 414-4H	6ES7414-4HJ00-0AB0
	6ES7414-4HJ04-0AB0
	6ES7414-4HM14-0AB0
CPU 417-4H	6ES7417-4HL00-0AB0
	6ES7417-4HL01-0AB0
	6ES7417-4HL04-0AB0
	6ES7417-4HT14-0AB0
CPU 412-5H	6ES7412-5HK06-0AB0
CPU 414-5H	6ES7414-5HM06-0AB0
CPU 416-5H	6ES7416-5HS06-0AB0
CPU 417-5H	6ES7417-5HT06-0AB0
SIMATIC PCS 7 CPU 410 Single AS mit CPU 410-5H	6ES7654-5C...-....
	6ES7654-6C...-....
SIMATIC PCS 7 CPU 410 Redundancy AS mit CPU 410-5H	6ES7656-5C...-....
	6ES7656-6C...-....
CPU 410-5H	6ES7410-5HX08-0AB0
SIMATIC M7	
CPU 388-4 ab V5.0	6ES7388-4BN00-0AC0
CPU 486-3 ab V5.0	6ES7486-3AA00-0AB0
CPU 488-3 ab V5.0	6ES7488-3AA00-0AB0

This entry is from the Service&Support portal of Siemens AG,
Siemens Industry Online Support.

The general terms of use

CPU	Order Number
SIMATIC C7	
C7-626 P/DP	6ES7626-DG03-0AE3 6ES7626-DG04-0AE3
C7-633 DP	6ES7633-2BF01-0AE3 6ES7633-2BF02-0AE3
C7-634 DP	6ES7634-2BF01-0AE3 6ES7634-2BF02-0AE3
C7-635 OP	6ES7635-2EC00-0AE3 6ES7635-2EC01-0AE3 6ES7635-2EC02-0AE3
C7-635 TB	6ES7635-2EB00-0AE3 6ES7635-2EB01-0AE3 6ES7635-2EB02-0AE3
C7-636 Key	6ES7636-2EC00-0AE3
C7-636 Touch	6ES7636-2EB00-0AE3
SIMATIC Distributed I/O	
IM 151-7 CPU	6ES7151-7AA10-0AB0 6ES7151-7AA11-0AB0 6ES7151-7AA13-0AB0 6ES7151-7AA20-0AB0 6ES7151-7AA21-0AB0
IM 151-7F CPU	6ES7151-7FA00-0AB0 6ES7151-7FA01-0AB0 6ES7151-7FA20-0AB0 6ES7151-7FA21-0AB0
IM 151-8 PN/DP CPU	6ES7151-8AB00-0AB0 6ES7151-8AB01-0AB0
IM 151-8F PN/DP CPU	6ES7151-8FB00-0AB0 6ES7151-8FB01-0AB0
IM 154-8 PN/DP CPU	6ES7154-8AB01-0AB0
IM 154-8F PN/DP CPU	6ES7154-8FB01-0AB0
IM 154-8FX PN/DP CPU	6ES7154-8FX00-0AB0
CPU 1510SP-1 PN	6ES7510-1DJ00-0AB0 6ES7510-1DJ01-0AB0
CPU 1510SP F-1 PN	6ES7510-1SJ00-0AB0 6ES7510-1SJ01-0AB0
CPU 1512SP-1 PN	6ES7512-1DK00-0AB0 6ES7512-1DK01-0AB0
CPU 1512SP F-1 PN	6ES7512-1SK00-0AB0 6ES7512-1SK01-0AB0
CPU 1516PRO-2 PN	6ES7516-2PN00-0AB0
CPU 1516PRO F-2 PN	6ES7516-2GN00-0AB0

This entry is from the Service&Support portal of Siemens AG,
Siemens Industry Online Support.

The general terms of use