


SIEMENS

SIRIUS

中文 备用零件为 软起动器 3RW51
推翻素描

EN Spare parts for soft starter 3RW51
Exploded sketches

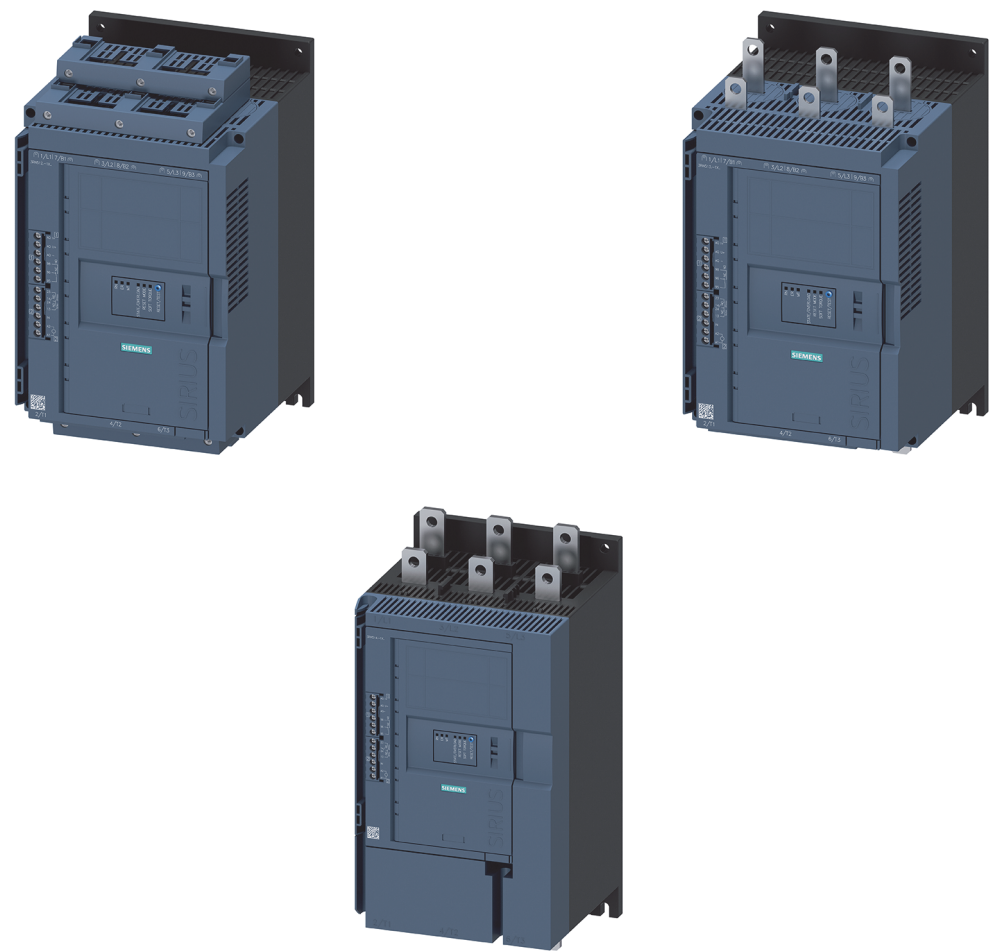

中文		⚠ 危险	触摸带电部件有生命危险 该设备 / 部件带有危险电压。触摸带电部件可造成严重身体伤害甚至死亡。电源电压断开后，设备内的危险电压仍然会存在最长 2 分钟。只能由有资质的专业人员进行安装、调试和维护。请遵守操作说明和相关软起动器手册中的说明。
		⚠ DANGER	Danger to life when live parts are touched This device/part carries dangerous voltages. Death or serious injury will result if you touch live parts. The dangerous voltage is still present inside the device for up to 2 minutes after the supply voltages have been disconnected. Installation, commissioning and maintenance by qualified technicians only. Read the information provided in the operating instructions and manuals of the corresponding Soft Starter.


SIEMENS AG
Technical Assistance
Breslauer Str. 5
D-90766 Fürth

Telephone: +49 (911) 895-5900 (8°° - 17°° CET)
Fax: +49 (911) 895-5907
E-mail: technical-assistance@siemens.com
Internet: www.siemens.com/sirius/technical-assistance

<http://support.industry.siemens.com>




3RW511.-.....
3RW512.-.....
3RW513.-.....

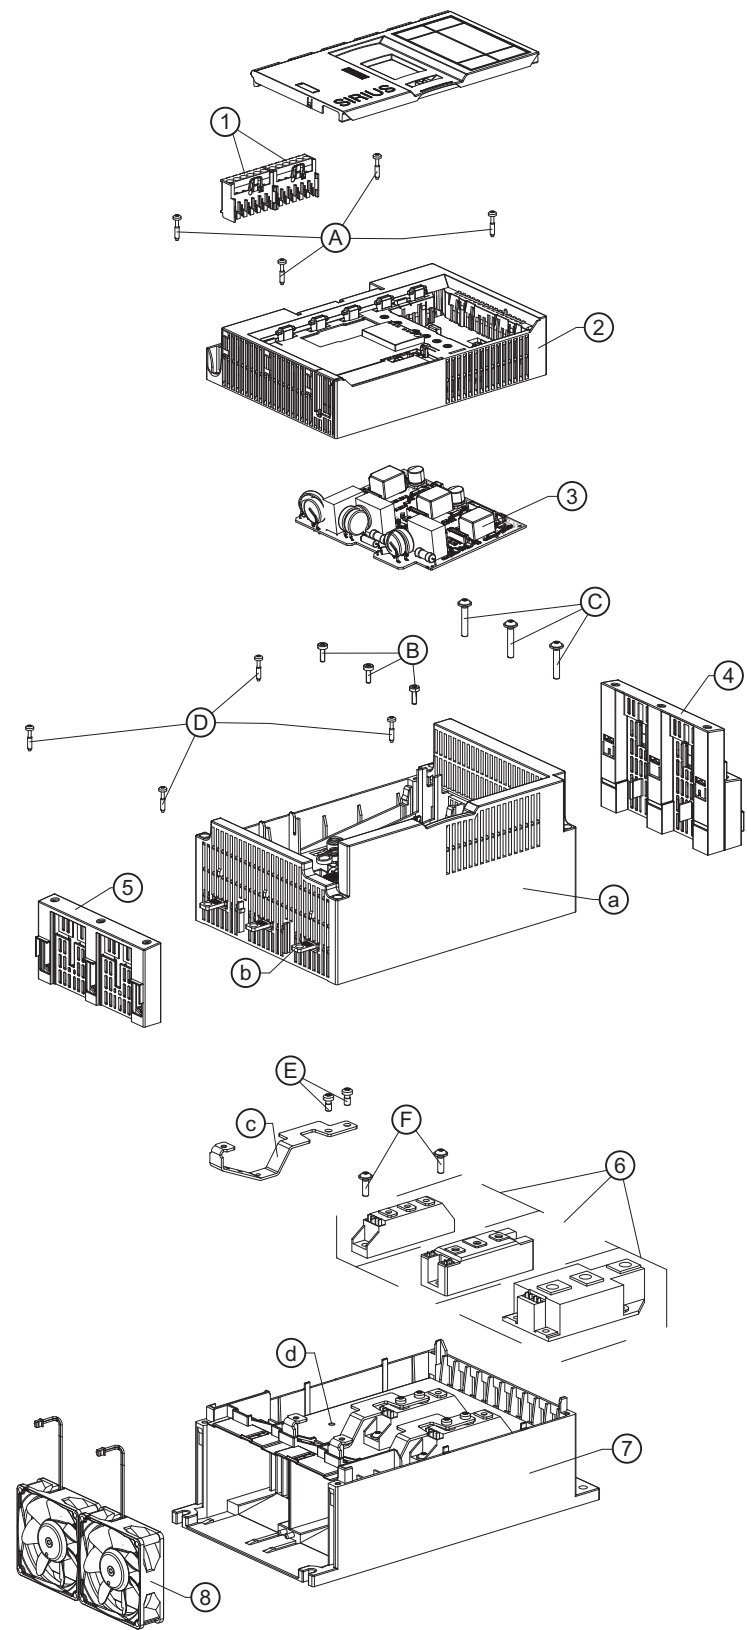

Position	Article Number (Spare Part)	Article Number (Soft Starter)
1	3RW5980-1TR00	3RW51.-.....
2	3RW5910-1UA10	3RW51.-.....
3	3RW5913-0PY04	3RW512.-..... 3RW513.-.....
4	3RW5912-0TB00	3RW511.-..... 3RW512.-.....
5	3RW5982-0TB00	3RW511.-..... 3RW512.-.....
6	3RW5912-0SA04	3RW5113-..... (3x)
	3RW5912-0SB04	3RW5114-..... (3x)
	3RW5912-0SC04	3RW5115-..... (3x)
	3RW5912-0SD04	3RW5116-..... (3x)
	3RW5912-0SE04	3RW5117-..... (3x)
	3RW5952-0SF04	3RW5124-..... (3x)
	3RW5952-0SH04	3RW5125-..... 3RW5126-..... (3x)
	3RW5952-0SJ04	3RW5127-..... (3x)
	3RW5953-0SL04	3RW5134-..... 3RW5135-..... (3x)
	3RW5953-0SM04	3RW5136-..... (3x)
7	3RW5953-0GB00	3RW511.-..... 3RW512.-..... 3RW513.-.....
8	3RW5983-0FF00	3RW5126-..... 3RW5127-..... 3RW513.-..... (2x)

Position	Assembly	Screws	Tightening torque
A	2 - a	3,5 mm x 19	140 Ncm
B	b - c	M4 x 12	230 Ncm
C	b - 6	M5 x 28	350 Ncm
C	b - 6	M6 x 29	350 Ncm
C	b - 6	M8 x 30	900 Ncm
D	a - 7	3,5 mm x 19	140 Ncm
E	c - 6	M5 x 10	350 Ncm
E	c - 6	M6 x 10	350 Ncm
E	c - 6	M8 x 12	900 Ncm
F	6 - d	M5 x 16	350 Ncm

3RW514.-.....

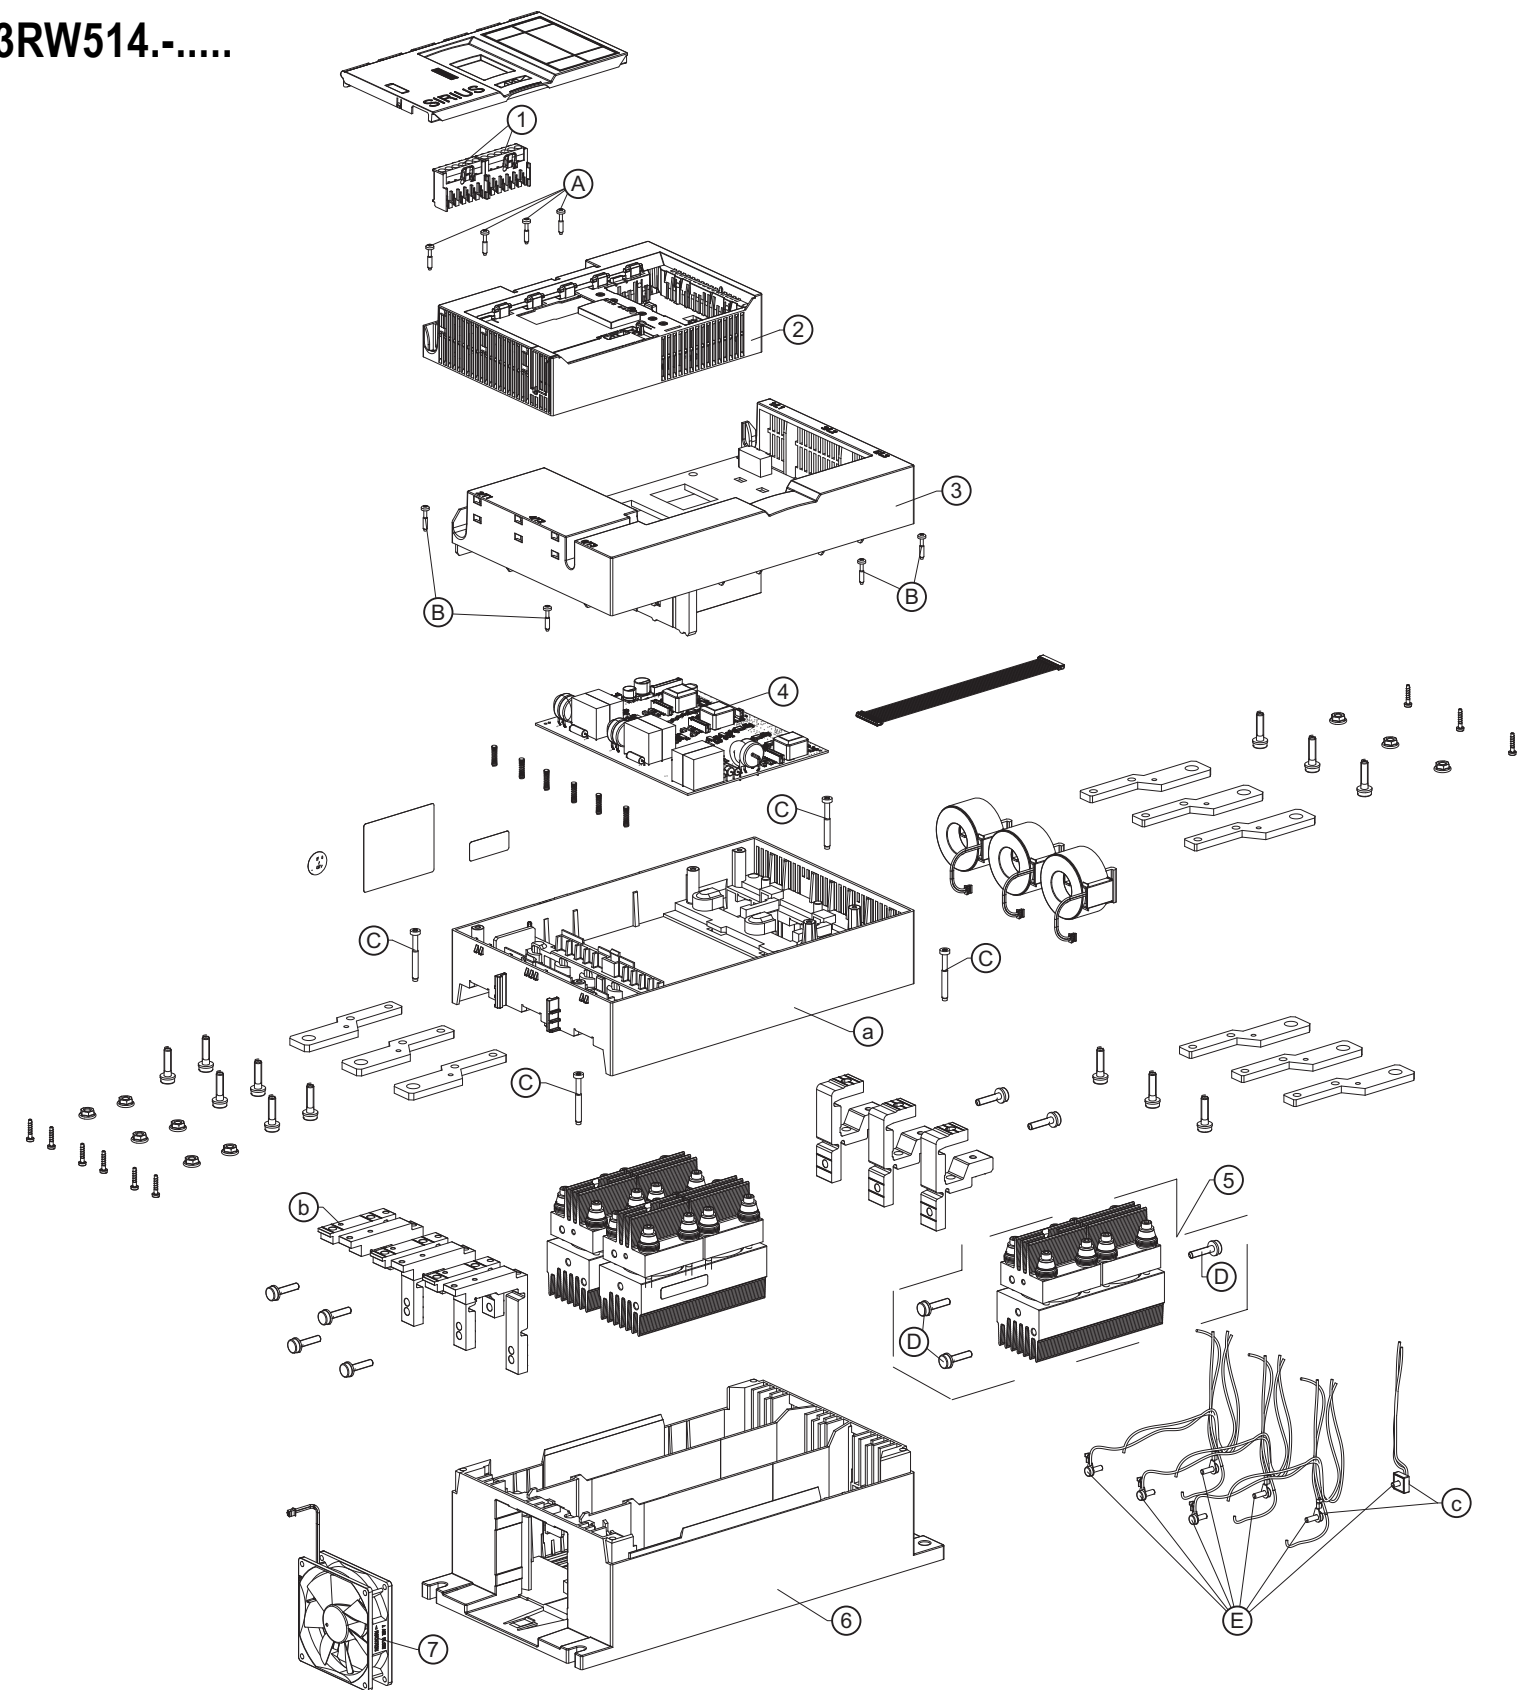

Position	Article Number (Spare Part)	Article Number (Soft Starter)
1	3RW5980-1TR00	3RW51..-.....
2	3RW5910-1UA10	3RW51..-.....
3	3RW5954-0GF00	3RW514.-.....
4	3RW5914-0PY04	3RW514.-.....
5	3RW5924-0SN05	3RW5143-..... (3x)
	3RW5924-0SQ05	3RW5144-..... 3RW5145-..... (3x)
	3RW5924-0SS05	3RW5146-..... 3RW5147-..... (3x)
	3RW5924-0ST05	3RW5148-..... (3x)
6	3RW5954-0GB00	3RW514.-.....
7	3RW5984-0FF00	3RW514.-.....

Position	Assembly	Screw	Tightening torque
A	2 - 3	3,5 mm x 19	140 Ncm
B	3 - a	3,5 mm x 19	140 Ncm
C	a - 6	5 mm x 40	350 Ncm
D	b - 5	M6 x 25	1200 Ncm
E	c - 5	M4 x 12	220 Ncm