

# SIEMENS

## SITRANS F

### Electromagnetic flowmeters SITRANS MAG 8000

#### Operating Instructions




Introduction	1
Safety notes	2
Description	3
Installing/Mounting	4
Connecting	5
Commissioning	6
Operation	7
Service and maintenance	8
Diagnostics and Troubleshooting	9
Technical data	10
Spare parts/Accessories	A
Flow Tool	B
Qualification certificate	C
Unit conversion table	D
Parameter lists	E
Sizing sensor	F
Certificates and support	G
Features	H

7ME681. SITRANS F M MAG 8000  
7ME682. SITRANS F M MAG 8000 CT

## Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 <b>DANGER</b>
indicates that death or severe personal injury <b>will</b> result if proper precautions are not taken.
 <b>WARNING</b>
indicates that death or severe personal injury <b>may</b> result if proper precautions are not taken.
 <b>CAUTION</b>
indicates that minor personal injury can result if proper precautions are not taken.
<b>NOTICE</b>
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

### Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### Proper use of Siemens products

Note the following:

 <b>WARNING</b>
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

### Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

# Table of contents

<b>1</b>	<b>Introduction</b>	<b>7</b>
1.1	Purpose of this documentation	7
1.2	Items supplied	7
1.3	History	8
1.4	Checking the consignment	8
1.5	Security information	8
1.6	Transportation and storage	9
1.7	Notes on warranty	9
<b>2</b>	<b>Safety notes</b>	<b>11</b>
2.1	General safety instructions	11
2.2	Laws and directives	11
2.3	Conformity with European directives	12
2.4	Lithium batteries	12
2.5	Installation in hazardous area	12
<b>3</b>	<b>Description</b>	<b>13</b>
3.1	System components	13
3.2	Operating principle	13
3.3	Design	13
3.4	Benefits	15
<b>4</b>	<b>Installing/Mounting</b>	<b>17</b>
4.1	Sensor installation	18
4.1.1	Locating the sensor	18
4.1.2	Orienting the sensor	20
4.1.3	Mounting the sensor	22
4.2	Potential equalization	25
4.3	Grounding	25
4.4	Cathodic-protected pipes	27
4.5	Potting and direct burial	28
4.6	Transmitter installation	29
4.7	MAG 8000 CT	30
4.7.1	Sealing of MAG 8000 CT	30
4.7.1.1	Verification sealing	30
4.7.1.2	User sealing	31

4.7.2	Installation conditions.....	32
4.7.2.1	MID option (MI-001).....	32
4.7.2.2	PTB K7.2.....	32
<b>5</b>	<b>Connecting.....</b>	<b>35</b>
5.1	General safety requirements.....	36
5.2	Remote version.....	37
5.3	Power supply.....	38
5.4	Outputs.....	40
5.5	Communication modules.....	41
5.6	Electrical connection PTB K7.2.....	43
5.7	Connection of add-on modules.....	44
<b>6</b>	<b>Commissioning.....</b>	<b>45</b>
6.1	SIMATIC PDM.....	45
6.2	Initial commissioning via SIMATIC PDM.....	45
6.2.1	Configuring the device.....	47
6.3	Setting the basic parameters.....	52
6.4	Unit selection.....	57
6.5	Output configuration.....	57
6.6	Data protection.....	59
<b>7</b>	<b>Operation.....</b>	<b>61</b>
7.1	Operation via key and display.....	61
7.2	Display symbols.....	62
7.3	Default display information and accessible display menus.....	63
7.4	Operator menu.....	66
7.5	Internal data handling.....	72
7.6	Battery-powered operation.....	73
<b>8</b>	<b>Service and maintenance.....</b>	<b>79</b>
8.1	Maintenance.....	79
8.2	MAG 8000 service guidelines.....	79
8.3	Replacing transmitter or PCB board.....	80
8.4	Battery replacement.....	81
8.5	Power up with battery reset, date and time set up.....	83
8.6	Verification.....	84
8.7	Transport.....	85
8.8	Return procedure.....	85
8.9	Disposal.....	86



---

8.9.1	Battery disposal.....	87
<b>9</b>	<b>Diagnostics and Troubleshooting .....</b>	<b>89</b>
9.1	Fault codes.....	89
9.2	Built-in functions.....	91
9.3	Flow simulation .....	93
<b>10</b>	<b>Technical data .....</b>	<b>95</b>
10.1	MAG 8000 water meter .....	95
10.2	Sensor.....	96
10.3	Transmitter .....	97
10.4	Power supply.....	98
10.5	Modbus RTU .....	99
10.6	Output characteristics .....	100
10.7	Meter uncertainty .....	105
10.8	FM Fire Service applications (MAG 8000 and MAG 8000 CT) .....	107
10.9	MAG 8000 CT (7ME6820) (Revenue program) water meter type approval.....	107
10.10	MAG 8000 CT (7ME6820) (Revenue program) MID option (MI-001) .....	108
10.11	The effect of temperature MAG 8000 (7ME6810) and MAG 8000 CT (7ME6820) .....	110
10.12	Dimensions and drawings .....	111
<b>A</b>	<b>Spare parts/Accessories.....</b>	<b>117</b>
A.1	Ordering of spare parts .....	117
<b>B</b>	<b>Flow Tool.....</b>	<b>119</b>
B.1	Flow Tool.....	119
B.2	Initial commissioning via Flow Tool.....	119
B.3	Configuring the device .....	120
B.4	Setting the basic parameters .....	122
B.5	Unit selection.....	126
B.6	Output configuration.....	129
B.7	Default display information and accessible display menus .....	130
B.8	Internal data handling.....	130
B.9	Battery configuration .....	132
<b>C</b>	<b>Qualification certificate .....</b>	<b>133</b>
C.1	Commissioning.....	133
C.2	Enabling insulation test .....	134
C.3	Uploading the device data to the pc.....	135
C.4	Generating the qualification certificate .....	136

C.5	Result evaluation.....	138
<b>D</b>	<b>Unit conversion table .....</b>	<b>139</b>
<b>E</b>	<b>Parameter lists.....</b>	<b>141</b>
E.1	1-99 .....	141
E.2	100-199 .....	142
E.3	200-299 .....	144
E.4	300-399 .....	147
E.5	400-499 .....	150
E.6	500-599 .....	150
E.7	600-799 .....	152
E.8	800-899 .....	157
<b>F</b>	<b>Sizing sensor .....</b>	<b>161</b>
F.1	Sizing table DN 25 to 1200 (1" to 48") .....	161
<b>G</b>	<b>Certificates and support.....</b>	<b>163</b>
G.1	Technical support.....	163
<b>H</b>	<b>Features .....</b>	<b>165</b>
	<b>Index.....</b>	<b>171</b>

# Introduction

## 1.1 Purpose of this documentation

These instructions contain all information required to commission and use the device. Read the instructions carefully prior to installation and commissioning. In order to use the device correctly, first review its principle of operation.


The instructions are aimed at persons mechanically installing the device, connecting it electronically, configuring the parameters and commissioning it, as well as service and maintenance engineers.

### See also

Technical support (Page 163)

## 1.2 Items supplied

- SITRANS F M MAG 8000 Standard, MAG 8000 CT
- Siemens Process Instrumentation documentation disk containing certificates, and manuals

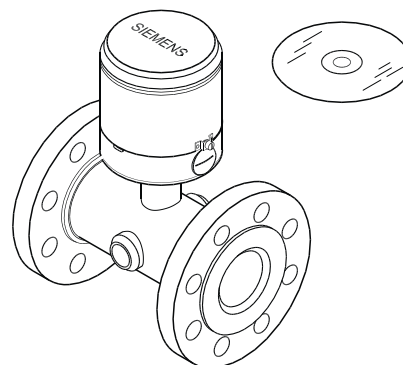

---

### Note

Scope of delivery may vary, depending on version and add-ons. Make sure the scope of delivery and the information on the nameplate correspond to your order and the delivery note.

---

## Inspection

1. Check for mechanical damage due to possible improper handling during shipment. All claims for damage are to be made promptly to the shipper.
2. Make sure the items supplied, and the information on the nameplate corresponds to the ordering information.

### 1.3 History


The contents of these instructions are regularly reviewed and corrections are included in subsequent editions. We welcome all suggestions for improvement.

The following table shows the most important changes in the documentation compared to each previous edition.

Edition	Remarks
07/2019	<ul style="list-style-type: none"><li>• MAG 8000 Irrigation discontinued and removed</li></ul>
11/2018	<ul style="list-style-type: none"><li>• Update for software version 3.09</li><li>• Technical data and Appendix C.2 updated</li></ul>
05/2014	<ul style="list-style-type: none"><li>• NMI M 10 approval for MAG 8000 Irrigation</li></ul>
10/2012	<ul style="list-style-type: none"><li>• Primary operation software changed from Flow Tool to PDM (Flow Tool moved to appendix)</li><li>• Qualification Certificate functionality added</li></ul>
03/2010	<ul style="list-style-type: none"><li>• Integration of MAG 8000 for irrigation applications</li><li>• Restructuring of the document</li></ul>

### 1.4 Checking the consignment

1. Check the packaging and the delivered items for visible damages.
2. Report any claims for damages immediately to the shipping company.
3. Retain damaged parts for clarification.
4. Check the scope of delivery by comparing your order to the shipping documents for correctness and completeness.

 <b>WARNING</b>
<b>Using a damaged or incomplete device</b>
Risk of explosion in hazardous areas.
<ul style="list-style-type: none"><li>• Do not use damaged or incomplete devices.</li></ul>

### 1.5 Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and

only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit

<https://www.siemens.com/industrialsecurity>.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under

<https://www.siemens.com/industrialsecurity>.

## 1.6 Transportation and storage

To guarantee sufficient protection during transport and storage, observe the following:

- Keep the original packaging for subsequent transportation.
- Devices/replacement parts should be returned in their original packaging.
- If the original packaging is no longer available, ensure that all shipments are properly packaged to provide sufficient protection during transport. Siemens cannot assume liability for any costs associated with transportation damages.

### NOTICE

#### Insufficient protection during storage

The packaging only provides limited protection against moisture and infiltration.

- Provide additional packaging as necessary.

Special conditions for storage and transportation of the device are listed in Technical data (Page 95).

## 1.7 Notes on warranty

The contents of this manual shall not become part of or modify any prior or existing agreement, commitment or legal relationship. The sales contract contains all obligations on the part of Siemens as well as the complete and solely applicable warranty conditions. Any statements regarding device versions described in the manual do not create new warranties or modify the existing warranty.

The content reflects the technical status at the time of publishing. Siemens reserves the right to make technical changes in the course of further development.



## Safety notes

### 2.1 General safety instructions

 <b>CAUTION</b>
--

<p><b>Correct, reliable operation of the product requires proper transport, storage, positioning and assembly as well as careful operation and maintenance.</b></p>
---

<p>Only qualified personnel should install or operate this instrument.</p>
--

---

#### Note

Alterations to the product, including opening or improper modifications of the product are not permitted.

If this requirement is not observed, the CE mark and the manufacturer's warranty will expire.

### 2.2 Laws and directives

#### General requirements

Installation of the equipment must comply with national regulations. For example EN 60079-14 for the European Community.

#### Instrument safety standards

The device has been tested at the factory, based on the safety requirements. In order to maintain this condition over the expected life of the device the requirements described in these Operating Instructions must be observed.

<b>NOTICE</b>
---------------

<b>Material compatibility</b>
-------------------------------

<p>Siemens Flow Instruments can provide assistance with the selection of wetted sensor parts. However, the full responsibility for the selection rests with the customer and Siemens Flow Instruments can take no responsibility for any failure due to material incompatibility.</p>
---

## 2.3 Conformity with European directives


The CE marking on the device symbolizes the conformity with the following European directives:

Electromagnetic compatibility EMC 2014/30/EU	Directive of the European Parliament and of the Council on the harmonisation of the laws of the Member States relating to electromagnetic compatibility
Low voltage directive LVD 2014/35/EU	Directive of the European Parliament and of the Council on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits
Atmosphère explosible ATEX 2014/34/EU	Directive of the European Parliament and the Council on the harmonisation of the laws of the Member States relating to equipment and protective systems intended for use in potentially explosive atmospheres
Pressure equipment directive PED 2014/68/EU	Directive of the European Parliament and of the Council on the harmonisation of the laws of the Member States relating to the making available on the market of pressure equipment
Measuring instruments directive MID 2014/32/EU	Directive of the European Parliament and the Council on the harmonisation of the laws of the Member States relating to the making available on the market of measuring instruments

The applicable directives can be found in the EU declaration of conformity of the specific device.

## 2.4 Lithium batteries

Lithium batteries are primary power sources with high energy content designed to provide the highest possible degree of safety.

 <b>WARNING</b>
<b>Potential hazard</b>
Lithium batteries may present a potential hazard if they are abused electrically or mechanically. Observe the following precautions when handling and using lithium batteries:
<ul style="list-style-type: none"><li>• Do not short-circuit, recharge or connect with false polarity.</li><li>• Do not expose to temperatures beyond the specified temperature range.</li><li>• Do not incinerate.</li><li>• Do not crush, puncture or open cells or disassemble.</li><li>• Do not weld or solder to the battery's body.</li><li>• Do not expose contents to water.</li></ul>

## 2.5 Installation in hazardous area

This device is not approved for use in hazardous areas.



## Description

### 3.1 System components

A SITRANS F M MAG 8000 water meter system includes:

- A transmitter and a sensor. The transmitter is either compact mounted (integral) or remote mounted at a distance of maximum 30 m (100 ft).
- An internally or externally mounted battery supply or 115 to 230 V AC or 12/24 V AC/DC power supply with battery backup.

#### Communication solutions

The following communication modules are available:

- RS 232/RS 485 Modbus RTU
- Encoder interface for AMR solutions
- 3G/UMTS module

### 3.2 Operating principle

MAG 8000 is a microprocessor-based water meter with graphical display and key for optimum customer operation and information on site. The transmitter drives the magnetic field in the sensor, evaluates the flow signal from the sensor, and calculates the volume passing through. It delivers the required information via the integrated pulse output or communication interfaces as part of a system solution. Its intelligent functionality, information and diagnostics ensure optimum meter performance and information to optimize water supply and billing.

MAG 8000 Standard and MAG 8000 CT can be ordered as a Basic or an Advanced version.

### 3.3 Design

MAG 8000 is a battery-supplied magnetic inductive water meter for revenue, district metering application.



Figure 3-1 MAG 8000 product program

### Compact



Figure 3-2 MAG 8000 Standard compact

### Remote



Figure 3-3 MAG 8000 Standard remote

### Custody transfer

Compact and remote versions.



Figure 3-4 MAG 8000 CT (compact version)

<b>SIEMENS</b>			
<b>SITRANS F M MAG 8000 CT</b>			
Order No:	7ME68204PN461CA0	MAWP (PS) at 0.1°C/32°F (TS):	16bar/232psi
Serial No.:	618502H477	MAWP (PS) at 50°C/232°F (TS):	16bar/232psi
Size DN: 150 (6 inch.)	Lining: EPDM	T. media min.:	0.1°C/32°F
Sensor material:	ASTM A 105	T. media max.:	50°C/122°F
Meter orientation:	Horizontal (H)	Process connection:	AS 4087 PN16
Enclosure:	E2,M1 IP68/NEMA 6P	Year of Manuf.:	2017
Fluid Group: PED/L2	Cal Factor: 0.898271	Software version:	3.09
		Q3: 630 m <sup>3</sup> /h	Q3/Q1: 250
Certification No.:	DK-0200-MI001-011		
Siemens AG, DE-76181 Karlsruhe			
Made in France			


Figure 3-5 MAG 8000 CT nameplate example

## 3.4 Benefits

- Simple placement of the meter - bury the meter underground or in a floating chamber. The IP 68 (NEMA 6P) design is unaffected by meter position or in-line piping stresses, and there is no requirement for filters.
- Minimal pressure loss - an unrestricted flow tube ensures minimal pressure loss, even at the highest flow rates. Overall network system pressures can be reduced, helping to prevent leakage from burst pipes and excess stress placed on pumping stations. This also saves energy.
- Zero maintenance - designed without moving parts and a battery lifetime of up to 15 years.
- Measurement in both directions - only one meter required for measuring in both direction.
- Intelligent meter - only one meter for leak detection, data logger function, and self-detection of errors.

*3.4 Benefits*

## Installing/Mounting

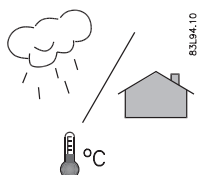

MAG 8000 water meters are suitable for indoor and outdoor installations.

- Make sure that pressure and temperature specifications indicated on the device nameplate / label are not exceeded.

### General information

This chapter describes how to install the water meter in the compact version as well as in the remote version.

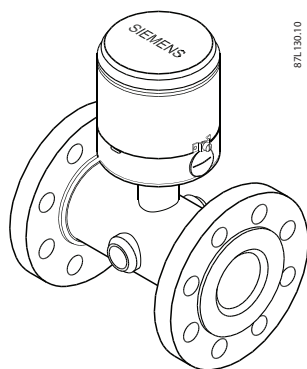


Figure 4-1 Compact installation

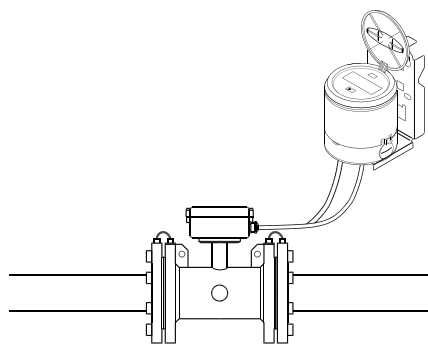


Figure 4-2 Remote installation

The installation consists of two steps:

1. Sensor installation.
2. Transmitter installation (remote version only).


## 4.1 Sensor installation

The sensor installation consists of three steps:


1. Locating the sensor.
2. Orienting the sensor.
3. Mounting the sensor.

### 4.1.1 Locating the sensor


Ensure that the sensor is located in the most optimum place and where no magnetic field is present.

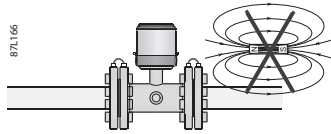

### Flow direction

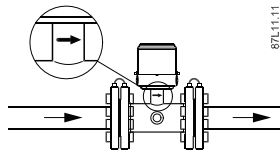

Ensure that sensor is mounted in correct flow direction as indicated on label.

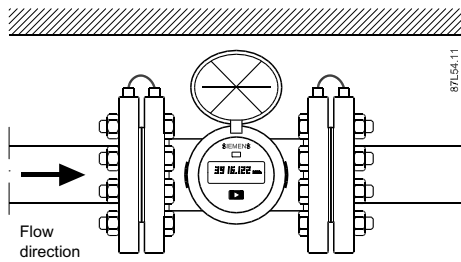


If process flow direction is opposite of flow direction indicated on sensor label, forward flow rates can be restored via parameter 327, if factor is adjusted to "-1".


MAG 8000 CT is approved for bidirectional measurement.

### Inlet and outlet condition

To achieve most accurate flow measurement it is essential to have certain straight inlet and outlet pipe lengths as shown ( $D_i$ : sensor diameter). MAG 8000 CT is approved for installation with 0D of straight pipe upstream from the sensor and 0D of straight pipe downstream from the sensor. It is, however, recommended to follow the installation guidelines for the MAG 8000 Standard water meter for optimal measurement performance.

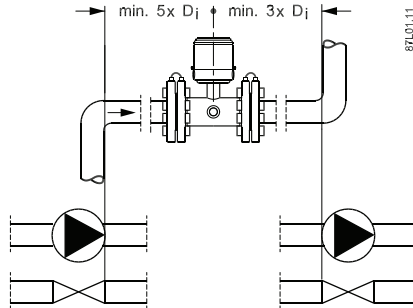


### Sensor must be completely full of liquid

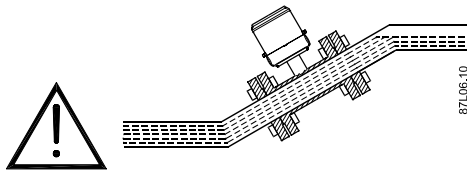

Therefore avoid:


- Air in pipe.
- Installation at the highest point in pipe system.
- Installation in vertical pipes with free outlet.

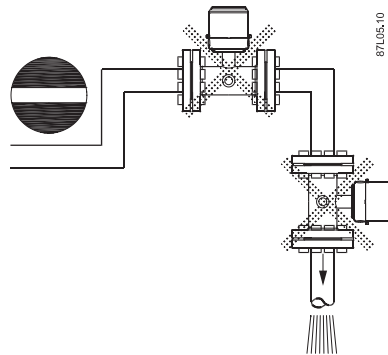

4.1 Sensor installation

Partially filled pipes


For partially filled pipes or pipes with downwards flow and free outlet, sensor must be mounted in a U-tube.

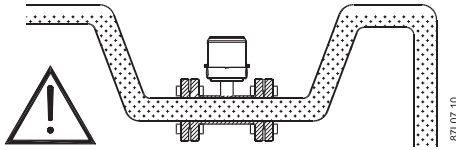

4.1.2 Orienting the sensor

MAG 8000 CT DN 50 to DN 150 can be installed in all orientations, while DN 200 to DN 400 can only be installed horizontally.

Horizontal pipes

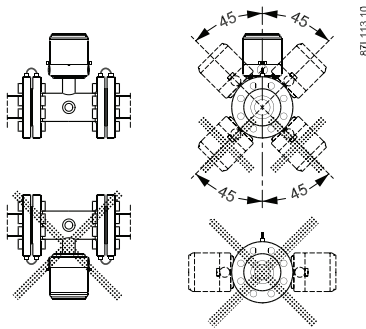

Sensor must be mounted as shown in upper part of figure. Do not mount sensor as shown in lower part of figure as electrodes then will be positioned at top where air bubbles may occur and in bottom, where mud, sludge, sand etc. may deposit and cover the electrode, thus impacting the measurement.

If "Empty Pipe Detection" is used, sensor should be tilted 45° as shown in upper right figure to maximize full pipe detection and provide accurate volume calculations.


Note

Physical installation of battery pack may influence battery capacity. Optimal battery capacity is achieved with battery pack in an upright position. Installation examples marked with dotted cross will affect battery capacity.




### Vertical pipes (MAG 8000)

Recommended installation is in a vertical/inclined pipe to minimize wear and deposits in sensor.

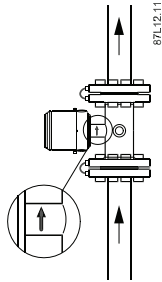


### Installation in large pipes (MAG 8000)

The water meter can be installed between two reducers (e.g. DIN 28545).

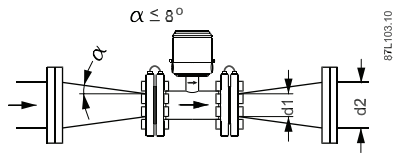

With an 8° reducer, the following pressure drop curve applies. The curves are applicable to water.

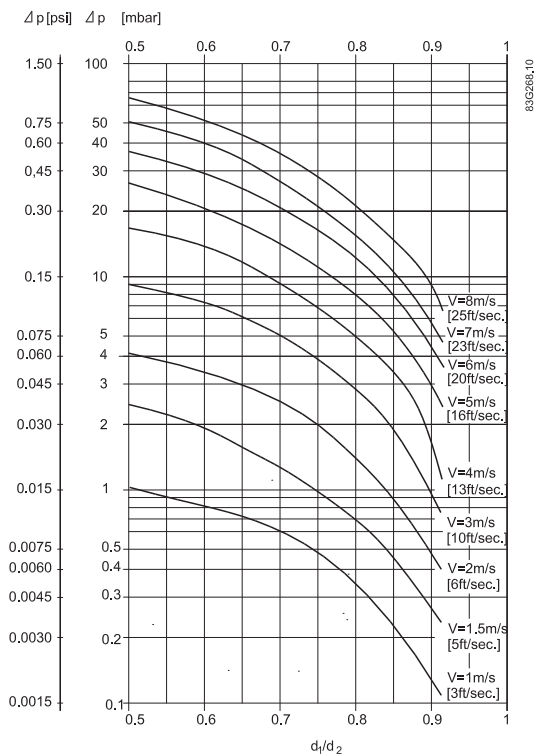


4.1 Sensor installation

*Example:*

A flow velocity of 3 m/s (10 ft./sec.) (V) in a sensor with a diameter reduction from DN 100 to DN 80 (4" to 3") ( $d_1/d_2 = 0.8$ ) gives a pressure drop of 2.9 mbar (0.04 psi).

**4.1.3 Mounting the sensor**

1. Install gaskets.
2. Ensure connection flange has a smooth surface and is in line with sensor.

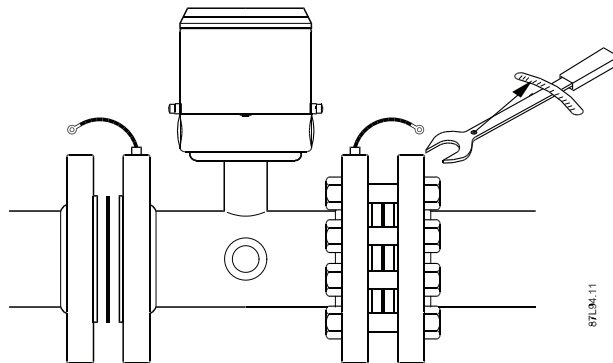

Gaskets are recommended but not included in water meter delivery.

**Advice for gasket selection:**

- Only use flat rubber gaskets.
- Thickness 1 to 6 mm (0.0 to 0.02 ft) dependent on gap/tolerance.
- Inner diameter must be larger than bore of water meter.
- Material should be compatible with process fluid.
- Hardness should be maximum 75 Shore A.

**Vibrations**

In installations with strong vibrations remote installation of the transmitter is recommended. Alternatively mitigate vibrations by installing pipe support in close proximity to the flowmeter.

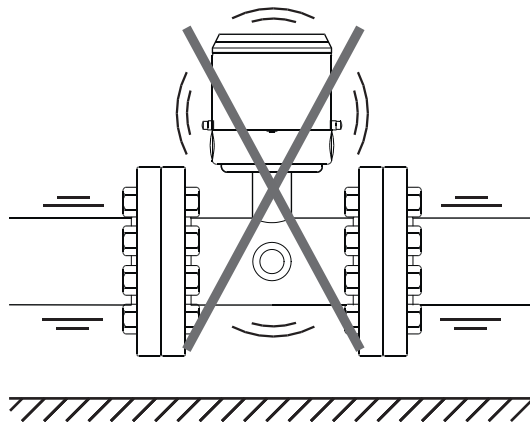


Figure 4-3 Avoid vibrations

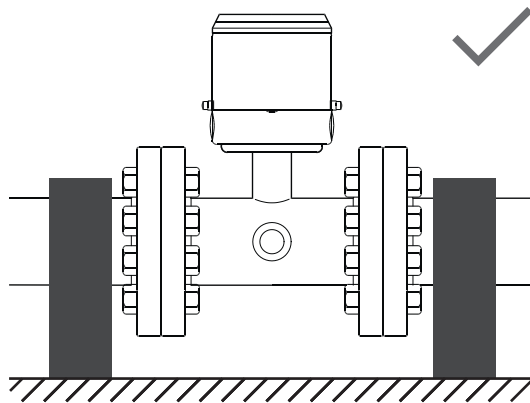


Figure 4-4 Pipe support variant 1


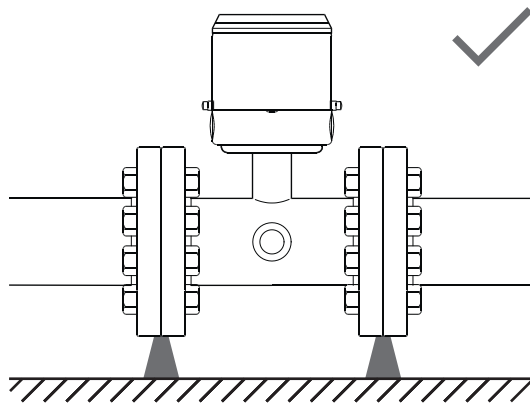


Figure 4-5 Pipe support variant 2

**Maximum allowable torques**

Standard bolts must be well lubricated and tightened evenly around gasket.

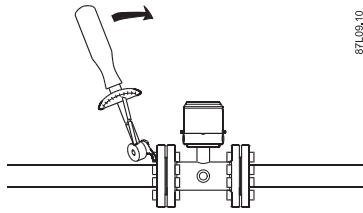

Leakage/damage to water meter or piping may arise if bolts are overtightened.

**Torque calculations**

All values are theoretical and are calculated on the assumption that:

- All bolts are new and material selection is according to EN 1515-1 table 2.
- Gasket material not exceeding 75 shore A is used between the water meter and mating flanges.
- All bolts are galvanized and adequately lubricated.
- Flanges are made of carbon steel.
- Water meter and mating flanges are correctly aligned.


**Torques for 7ME6810 and 7ME6820**

Nominal size		PN 10		PN 16		PN 40		Class 150		AWWA	
Mm	inch	Nm	f/lbs	Nm	f/lbs	Nm	f/lbs	Nm	f/lbs	Nm	f/lbs
25	1"	N/A	N/A	N/A	N/A	10	7	7	5	N/A	N/A
40	1½"	N/A	N/A	N/A	N/A	16	12	9	7	N/A	N/A
50	2"	N/A	N/A	25	18	N/A	N/A	25	18	N/A	N/A
65	2½"	N/A	N/A	25	18	N/A	N/A	25	18	N/A	N/A
80	3"	N/A	N/A	25	18	N/A	N/A	34	25	N/A	N/A
100	4"	N/A	N/A	25	18	N/A	N/A	26	19	N/A	N/A
125	5"	N/A	N/A	29	21	N/A	N/A	42	31	N/A	N/A
150	6"	N/A	N/A	50	37	N/A	N/A	57	42	N/A	N/A
200	8"	50	37	50	37	N/A	N/A	88	65	N/A	N/A
250	10"	50	37	82	61	N/A	N/A	99	73	N/A	N/A
300	12"	57	42	111	82	N/A	N/A	132	97	N/A	N/A
350	14"	60	44	120	89	N/A	N/A	225	166	N/A	N/A
400	16"	88	65	170	125	N/A	N/A	210	155	N/A	N/A
450	18"	92	68	170	125	N/A	N/A	220	162	N/A	N/A
500	20"	103	76	230	170	N/A	N/A	200	148	N/A	N/A
600	24"	161	119	350	258	N/A	N/A	280	207	N/A	N/A
700	28"	200	148	304	224	N/A	N/A	N/A	N/A	200	148
750	30"	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	240	177
800	32"	274	202	386	285	N/A	N/A	N/A	N/A	260	192

Nominal size		PN 10		PN 16		PN 40		Class 150		AWWA	
900	36"	288	213	408	301	N/A	N/A	N/A	N/A	240	177
1000	40"	382	282	546	403	N/A	N/A	N/A	N/A	280	207
1050	42"	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	280	207
1100	44"	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	290	214
1200	48"	395	292	731	539	N/A	N/A	N/A	N/A	310	229

## 4.2 Potential equalization

Liquid potential equalization or grounding is accomplished with built-in grounding electrodes and/or grounding rings. The electrodes ensure electrical connection between liquid and meter providing a stable and accurate measurement.

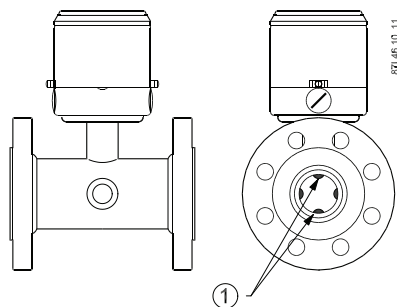


- ① Built-in grounding electrode (7ME6810 and 7ME6820)

## 4.3 Grounding

The sensor body must be grounded using grounding/bonding straps and/or grounding rings to protect flow signal against stray electrical noise and/or lightning. This ensures that noise is carried through sensor body and that the measuring area within sensor body is noise-free.

### Metal pipes

Connect straps to both flanges with 6 mm (1/4") screws.

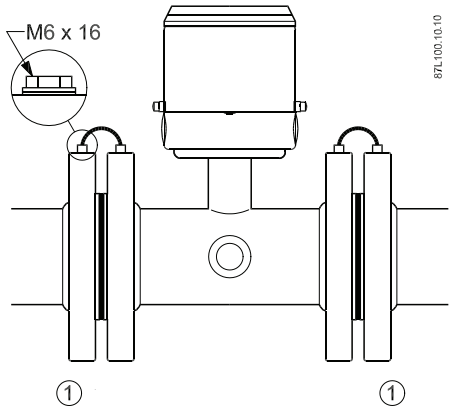


① Metal pipes

Bonding/grounding straps are part of delivery and pre-mounted on water meter.

### Plastic pipes and lined metal pipes

Use optional grounding rings at both ends.

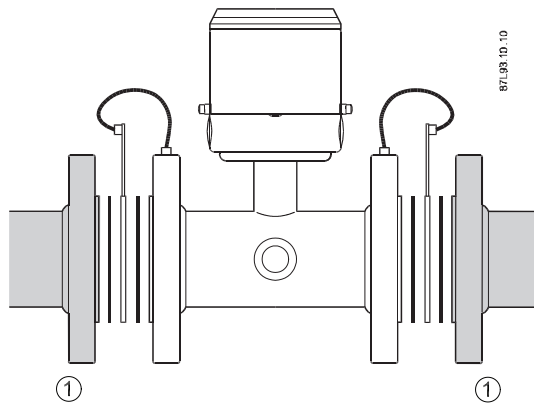


① Plastic pipes or lined metal pipes

Grounding rings are not included in delivery.

### Combination of metal and plastic pipes

Use straps for metal pipe and grounding rings for plastic pipe.

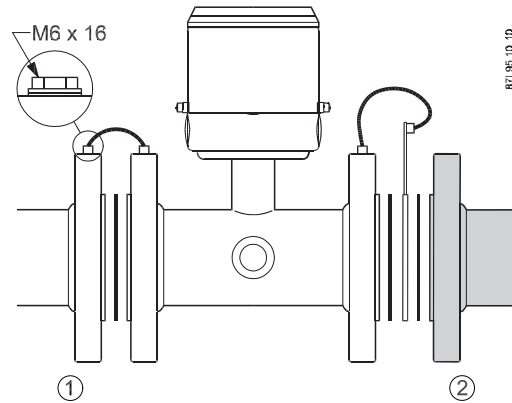

- ① Metal pipe
- ② Plastic pipe


Bonding/grounding straps, grounding rings and straps are not included in delivery.

#### Note

All straps or grounding wires must be 12 AWG (or heavier) copper wire and connected with 6 mm screws.

## 4.4 Cathodic-protected pipes

Pay special attention to meter installation in cathodic-protected pipe.

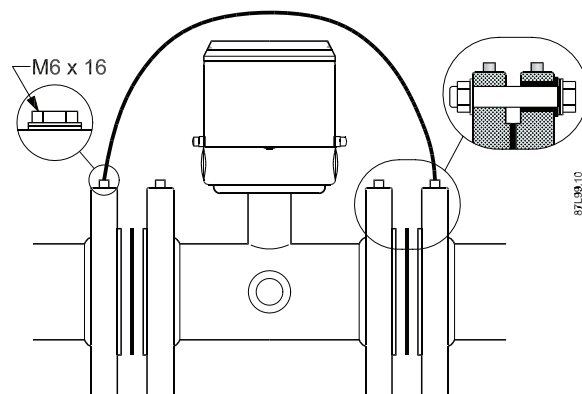

Isolate meter from pipeline by mounting isolation sleeves and washers on flange bolts and connect a wire dimensioned to manage the cathodic current and environmental influence, between pipelines.


## 4.5 Potting and direct burial

### NOTICE

#### Electrical connections

Do not pot meter before electrical connections have been made.

Meter is rated IP68/NEMA 6P from the factory as standard. If cable glands are used, IP68/NEMA 6P enclosure rating is obtained by potting transmitter bottom with Sylgard potting kit. Otherwise only an IP67/NEMA 4 rating is obtained.

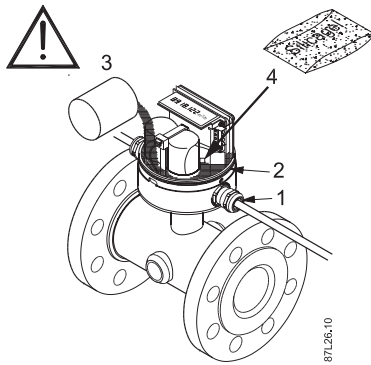

#### Sealing of transmitter

1. Select the proper gland size to fit installed cable size.
2. Mount O-ring properly and correctly and grease with gel.
3. Fill Sylgard potting kit in bottom part of casing.
4. Renew Silicagel bag (placed behind battery cup) to prevent condensation within meter, if necessary.
5. Mount the enclosure carefully and make sure not to damage the O-ring.

#### Note

##### Potting


Ensure not to fill Sylgard potting kit in the space for the battery pack.

Ensure Silicagel bag is not in contact with Sylgard potting.

See also Potting kit instruction (<http://support.automation.siemens.com/WW/view/en/43208835>).



### Direct burial of remote sensor

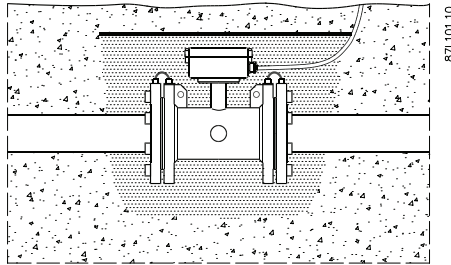

Remote sensor is protected to IP68/NEMA 6P and can be buried.

The use of pea gravel, at least 300 mm (12 inches) all around sensor, is mandatory to provide some drainage and to prevent dirt from solidifying on sensor.

It also helps to locate the sensor should excavation be necessary. Before covering pea gravel with earth, use electrical cable identification tape above gravel.

Run remote sensor cable through a plastic conduit of minimum 50 mm (2 inches).

## 4.6 Transmitter installation

Mount bracket on a wall as shown below or on a horizontal or a vertical pipe using ordinary hose clips or duct straps.

### Wall mounting

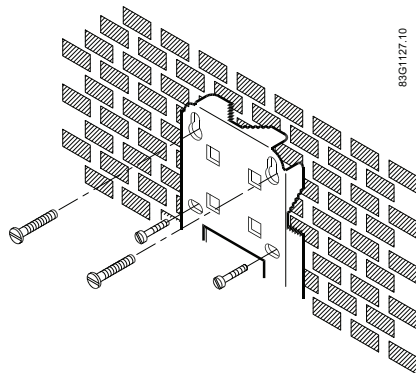


Figure 4-6 Wall mounting

### Pipe mounting

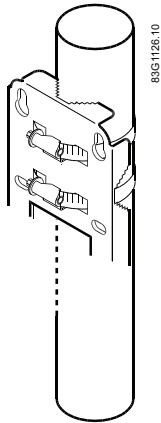


Figure 4-7 Pipe mounting - vertical

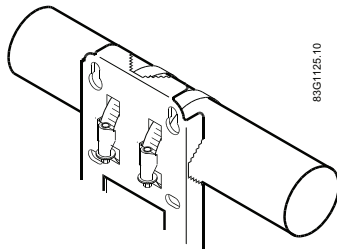


Figure 4-8 Pipe mounting - horizontal

## 4.7 MAG 8000 CT

Calibration sealing has been carried out at calibration.

### 4.7.1 Sealing of MAG 8000 CT

#### 4.7.1.1 Verification sealing

---

**Note**

The verification sealing is done at factory after initial verification.

---

**Note****For type-approved and verified MID MAG 8000 CT products**

The verification sealing may only be broken by an authorized person, with the acceptance and under direction of the local authorities.

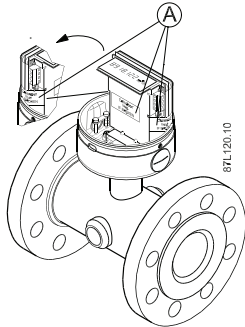



Figure 4-9 MAG 8000 CT verification sealing (A)

#### 4.7.1.2 User sealing


**Note**

User sealing has to be done after commissioning by an authorized person.

1. Lead one or two wires through the sealing bolts.
2. Seal the ends of each wire.

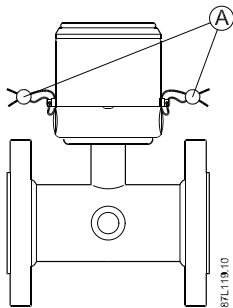

MAG 8000 CT user sealing (A) - compact

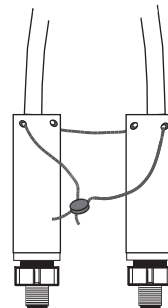

MAG 8000 CT user sealing - remote

## 4.7.2 Installation conditions

### 4.7.2.1 MID option (MI-001)

MAG 8000 CT are approved for MI-001 under the following installation conditions.

- DN 50 to 150 (2" to 6") in any orientation
- DN 200 to 600 (8" to 24") only in horizontal installation
- Compact or remote with max. 30 m (98 ft.) cable
- Power supply 3.6 V Lithium Battery 12 to 24 V AC/V DC, 115 to 230 V AC


---

#### Note

##### **Straight pipe upstream and downstream**

- DN 50 to DN 150 requires 0x D of straight pipe upstream and downstream from the sensor.
  - DN > DN 400 requires 3x D of straight pipe upstream and 3x D downstream from the sensor
- 

Other restrictions may apply (see certificate).

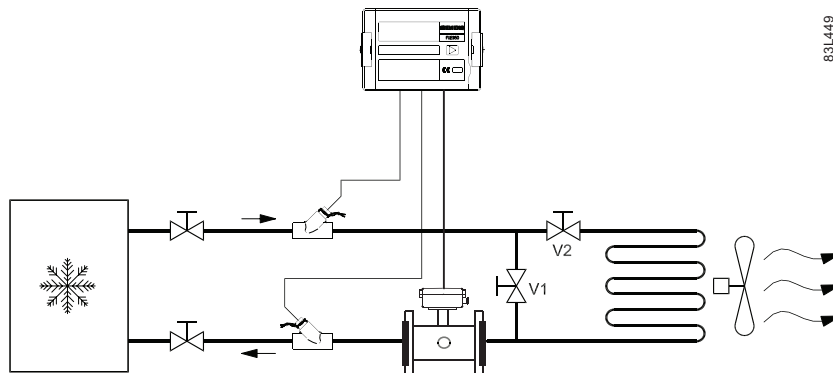

### 4.7.2.2 PTB K7.2

MAG 8000 CT are approved for PTB K7.2 under the following installation conditions.

- DN 50 to DN 150 (2" to 6") in any orientation
- DN 200 to DN 600 (8" to 24") only in horizontal installation
- Compact or remote with max. 30 m (98 ft.) cable
- Power supply 3.6 V Lithium Battery 12 to 24 V AC/V DC, 115 to 230 V AC

---

#### Note

##### **Straight pipe upstream and downstream**

- DN 50 to DN 150 requires 0x D of straight pipe upstream and downstream from the sensor.
  - DN > DN 400 requires 3x D of straight pipe upstream and 3x D downstream from the sensor
-

Other restrictions may apply (see certificate)




## Connecting

This chapter consists of general safety requirements as well as a description of how to connect the device.

The connection of the device is done in four steps.

1. Wiring sensor and transmitter (remote version only).
2. Connecting power supply.
3. Connecting outputs.
4. Connecting add-on module.

### Connection diagram

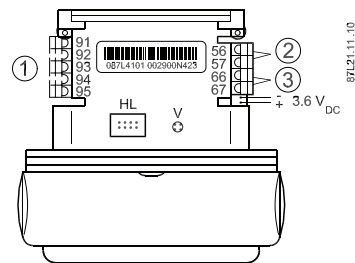

- ① Module Interface (Option)
- ② Output A
- ③ Output B

The 3.6 V DC battery connector - male and pulse connection terminals are placed in the right side of the PCB board - see figure.

Connection for add-on interface modules is placed on the left side.

HL = Hardware lock key connection

V = Verification button (enables verification mode for 4 hours)

To configure the outputs via PDM, see "Output configuration" (Page 57).

To configure the outputs via Flow Tool, see "Output configuration" (Page 129) in the Flow Tool appendix.

## 5.1 General safety requirements

 **WARNING**

**The pertinent regulations must be observed for electrical installation.**

- Never install the device with the mains voltage switched on!
- Danger of electric shock!
- The electrodes and magnetic current line may only be connected when the device is not connected to the power supply.
- If the housing is under voltage (power supply), the cover may be unscrewed by qualified personnel only.

 **WARNING**

**Mains supply from building installation Class II**


A switch or circuit breaker (max. 15 A) must be installed in close proximity to the equipment and within easy reach of the operator. It must be marked as the disconnecting device for the equipment.





## 5.3 Power supply

Connection diagram for 115 to 230 V AC (mains) or 12/24 V AC/DC (line) power supply

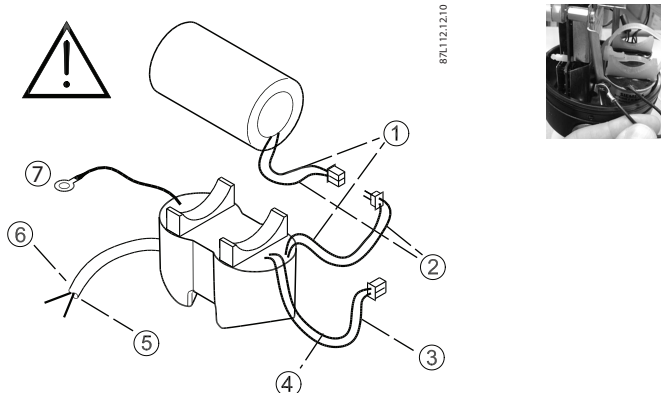

- |                                  |                      |
|----------------------------------|----------------------|
| Backup battery connection        | ① Red                |
|                                  | ② Black              |
| MAG 8000 PCB connection          | ③ Blue               |
|                                  | ④ Yellow             |
| External power supply connection | ⑤ Blue (Neutral / -) |
|                                  | ⑥ Brown (Line / +)   |
| Shielding                        | ⑦ Shielding wire     |

It is mandatory to connect the shielding wire to the MAG 8000 device earthing; otherwise IrDA communication will not work satisfactorily.

### 115 to 230 V AC (mains) power supply


Mains power input	Factory mounted PUR cable with 2 x 1 mm <sup>2</sup> (brown wire, blue wire) cable length = 3 m
	Brown wire - L (Line, +) and blue wire - N (Neutral, -)
Mains power output	Female battery connector with blue and yellow wires; blue wire is ground. Female battery connector has to be connected to male connector 3.6 V DC on PCB board
Battery backup input	Male battery connector with black and red wires; black wire is ground. Male battery connector has to be connected to female connector on backup battery
Functional ground	Black wire with terminal must be connected to the device encapsulation with a screw
Mains power supply has to be connected to a switch near water meter according to IEC 61010-1 clause 5.4.3.d	

### 12/24 V AC/DC (line) power supply

Line power input	Factory mounted PUR cable with 2 x 1 mm <sup>2</sup> (brown wire, blue wire) cable length = 3 m
	Brown wire - L (line, hot, positive) and blue wire - N (neutral, cold, negative)
Line power output	Female battery connector with blue and yellow wires; blue wire is ground. Female battery connector has to be connected to male connector 3.6 V DC on PCB board

Battery backup input	Male battery connector with black and red wires; black wire is ground. Male battery connector has to be connected to female connector on backup battery
Functional ground	Black wire with terminal must be connected to the device encapsulation with a screw

## Cable installation

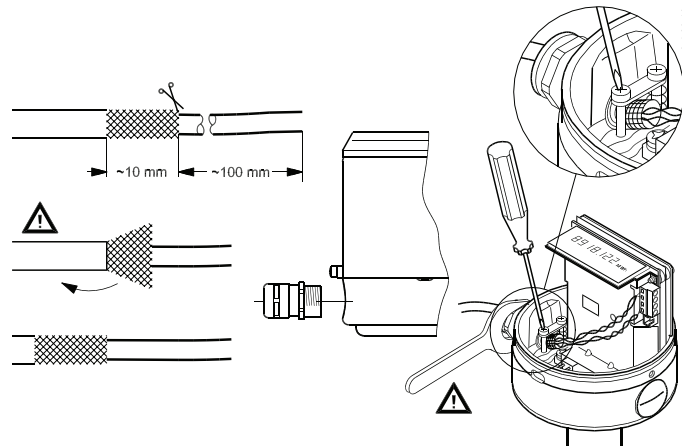


Choose the correct glands for the selected cable type, see Accessories for glands selection. Ensure shield is mounted under cable clamps - do not make pig tails.

### Note

Mains or line-powered PUR cable (no shield) has to be mounted under cable clamps. All cable glands have to be sufficiently tightened to ensure IP-rating.

## 5.4 Outputs

### Pulse output connection diagram for MAG 8000

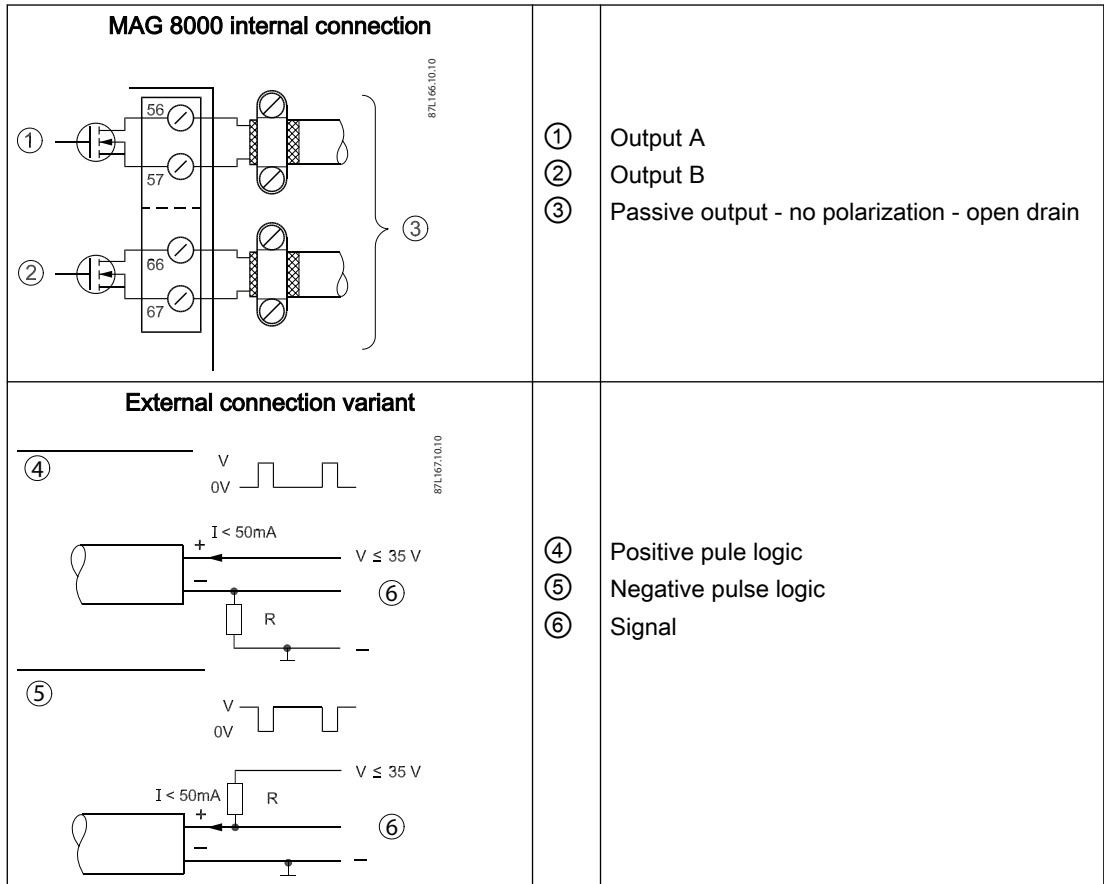

Pulse output can be configured as volume, alarm or call-up, see Commissioning (Page 57).

Pulse output is not polarized and can be connected for positive or negative logic.

Pull up/down resistor (R) is selected in relation to power supply voltage (V) and with a max. current (I) of 50 mA.


#### Note

##### Pulse output isolation

The MAG 8000 pulse output has a functional isolation only and must therefore be connected to equipment complying with the Low Voltage Directive in order to be considered safe.


## 5.5 Communication modules

### RS 232 connection diagram

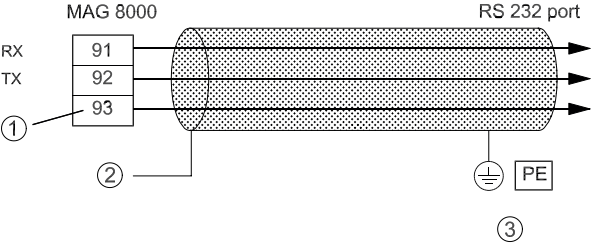

87L109.10.10

- ① Common
- ② Connect shield to encapsulation
- ③ Shield must be connected to protective ground

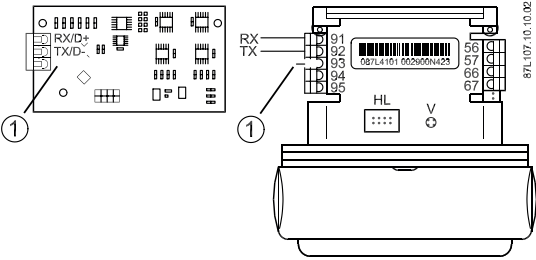


- ① Common

A Modbus over serial line cable must be shielded.


At one end of each cable its shield must be connected to protective ground. If a connector is used at this end, connector shell must be connected to cable shield.

### RS 485 connection diagram

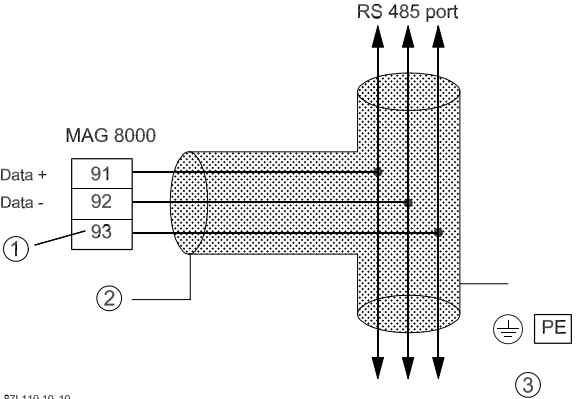

87L110.10.10

- ① Common
- ② Connect shield to encapsulation
- ③ Shield must be connected to protective ground

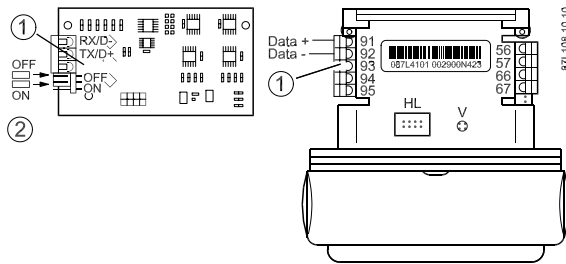

- ① Common
- ② Termination

A Modbus RS 485 must use a balanced pair (for D+ - D-) and a third wire (for common).

For the balanced pair used in an RS 485 system, a characteristic impedance with a value between 100 and 120 ohms must be used.

Shield must always be connected to MAG 8000 encapsulation using cable clamp as shown in figure in section cable installation, see Power supply (Page 38).

**Bus termination:**

All RS 485-based networks must be terminated correctly to function properly. A termination must be placed at each end of segment.

The Modbus RTU module can add a 120 ohm termination if a jumper is placed beside terminals in position "ON".

Termination is set to "ON" from factory.

**Encoder interface connection diagram**

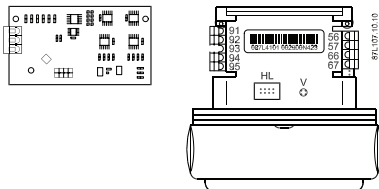
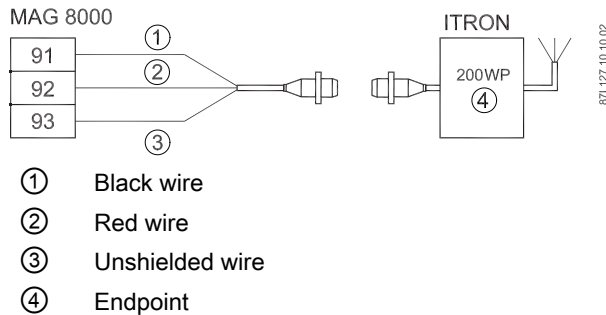


Figure 5-1 Encoder interface cable connection between MAG 8000 and ITRON 200WP with Itron cable


Connect black wire to terminal 91, red wire to terminal 92 and unshielded wire to terminal 93.

**⚠ WARNING**

**Unshielded wire**


It is important that unshielded wire does not touch any metal parts of MAG 8000 housing.

Other radio interface cable has to be a 3-wire cable with a shield connected to MAG 8000 housing (mounting cable shield is shown to the right).

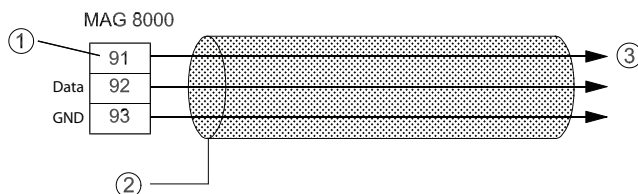


87L129.10.10

- ① Power clock
- ② Connect shield to encapsulation
- ③ Radio interface

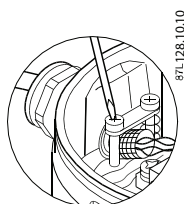

## 5.6 Electrical connection PTB K7.2

Additional Electrical connection for PTB K7.2 approved MAG 8000 CT with FUE950 Energy Calculator (7ME3480).

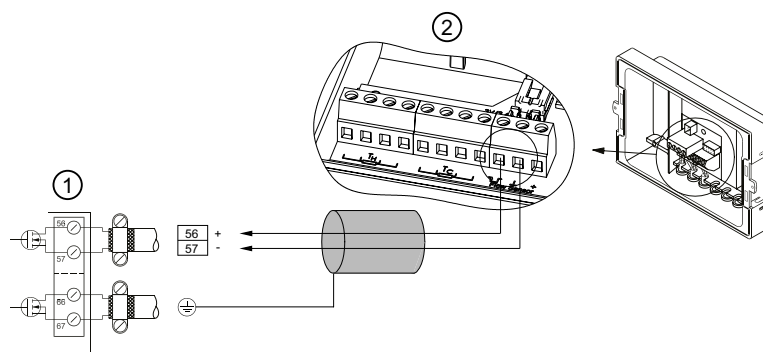

- ① MAG 8000 CT pulse output
- ② Energy calculator

## 5.7 Connection of add-on modules

When the add-on module has been installed, the electrical connections are available on terminal rows 91-97.

### For more information

Refer to the relevant BUS communication Quick Start or Operating Instructions available at the SITRANS F literature CD or on the internet, at : [www.siemens.com/flowdocumentation](http://www.siemens.com/flowdocumentation) ([www.siemens.com/flowdocumentation](http://www.siemens.com/flowdocumentation)).

### Information on the operation of communication modules

For information on how to operate the various communication modules, see:

- 3G/UMTS add-on module Operating Instructions (<https://support.industry.siemens.com/cs/ww/en/view/109751612>)
- Modbus RTU Operating Instructions (<http://support.automation.siemens.com/WW/view/en/54091509>)



# Commissioning

The meter can be configured using a PC software package - either SIMATIC PDM or Flow Tool.

Both SIMATIC PDM and Flow Tool are software packages for configuring, parameterizing, commissioning and maintaining devices (e.g. transducers) and for configuring networks and PCs.

For commissioning via Flow Tool, refer to the appendix "Flow Tool" (Page 119).

## 6.1 SIMATIC PDM

Among other features, SIMATIC PDM contains a simple monitoring of process values, interrupts and status/diagnosis signals of device. This chapter describes how to set up SIMATIC PDM and how to configure the device for commissioning.

---

### Note

For instructions on installation and operation of SIMATIC PDM, refer to the SIMATIC PDM Getting Started

---


## 6.2 Initial commissioning via SIMATIC PDM

This chapter describes how to install the PDM device driver (EDD). The newest EDD driver is available on the internet (<http://support.automation.siemens.com/WW/view/en/19701862/133100>).

The PDM device driver (EDD) is compatible with PDM 6, PDM 8 and PDM 9.


Install the EDD files from SIMATIC PDM "Manage Device Catalog" via the following steps:

Windows START menu → program folder "SIMATIC" → SIMATIC PDM → Manage device catalog.

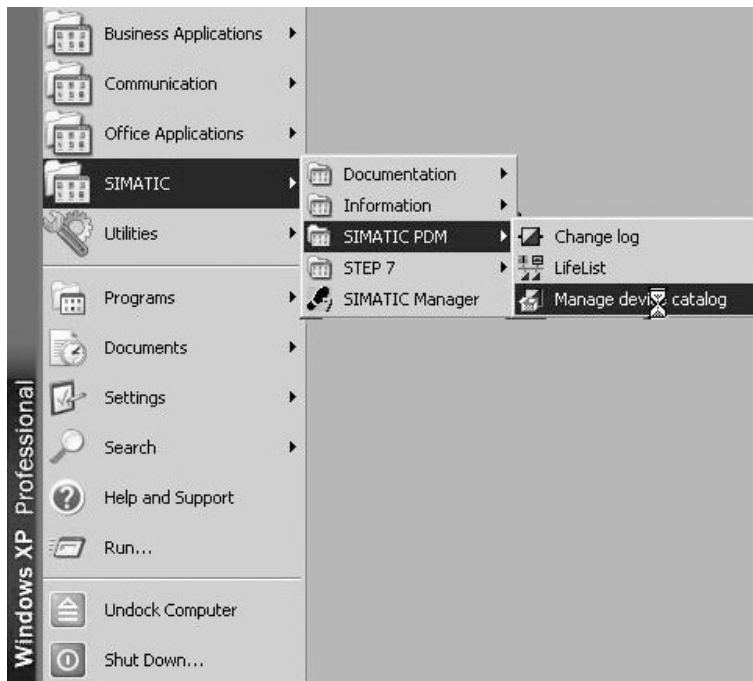

In the SIMATIC PDM "Manage Device Catalog" window, click on "Browse" and navigate to the driver and the path where the file was downloaded and saved. The PDM will show a tree with the Software options. Click on the "Siemens" checkbox to select all options.

Click OK to install the new EDD files.

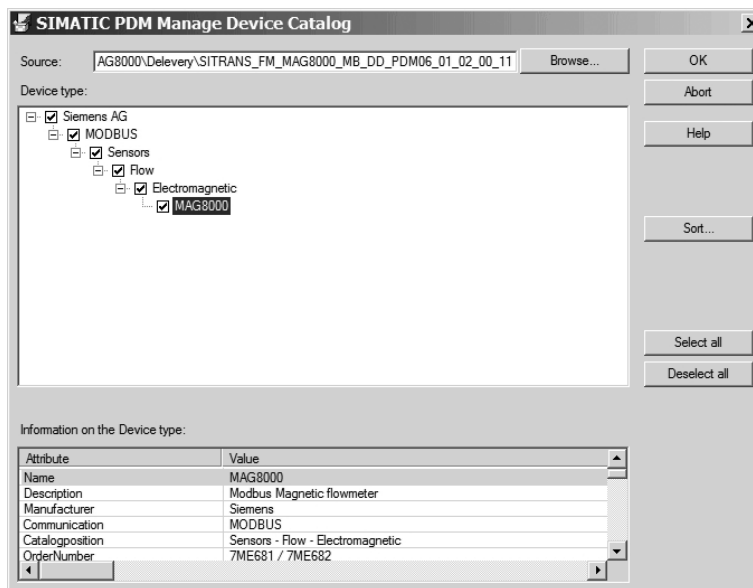


## 6.2.1 Configuring the device

This chapter describes how to set up the meter for communication with the PC. The options in both SIMATIC PDM and Flow Tool software are the same; only the views on the PC screen differ.


### Setting up meter

1. Click on "File".
2. Select "New".
3. Assign a new project name in the "Name" box, e.g. MAG8000.

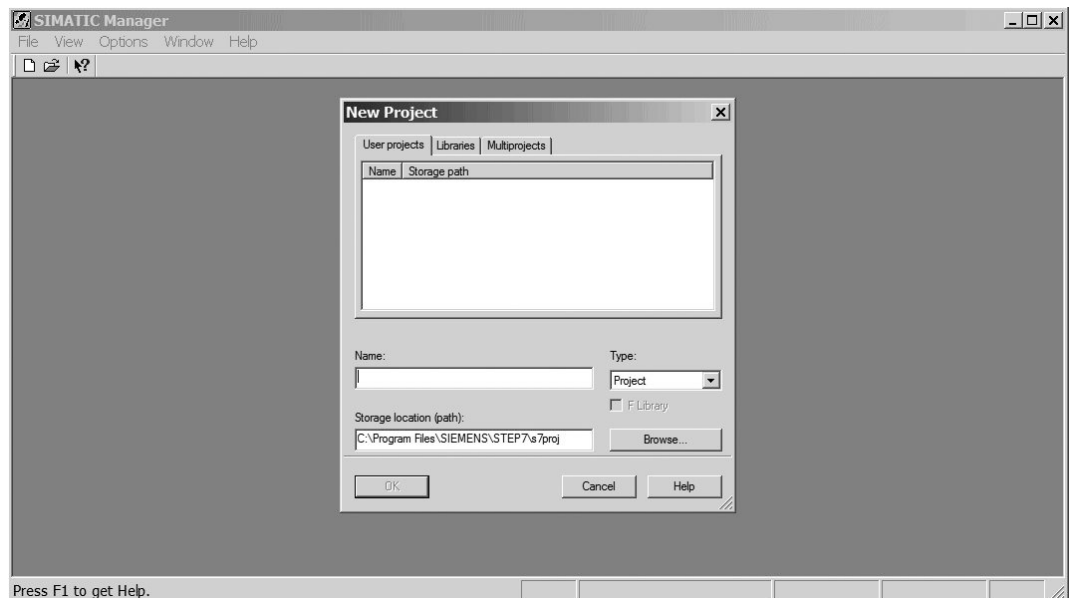


4. In Process Device Network View, right-click on "Net" → select "Insert New Object" → "MODBUS net".

5. Right-click on "MODBUS net" → select "Object Properties...".

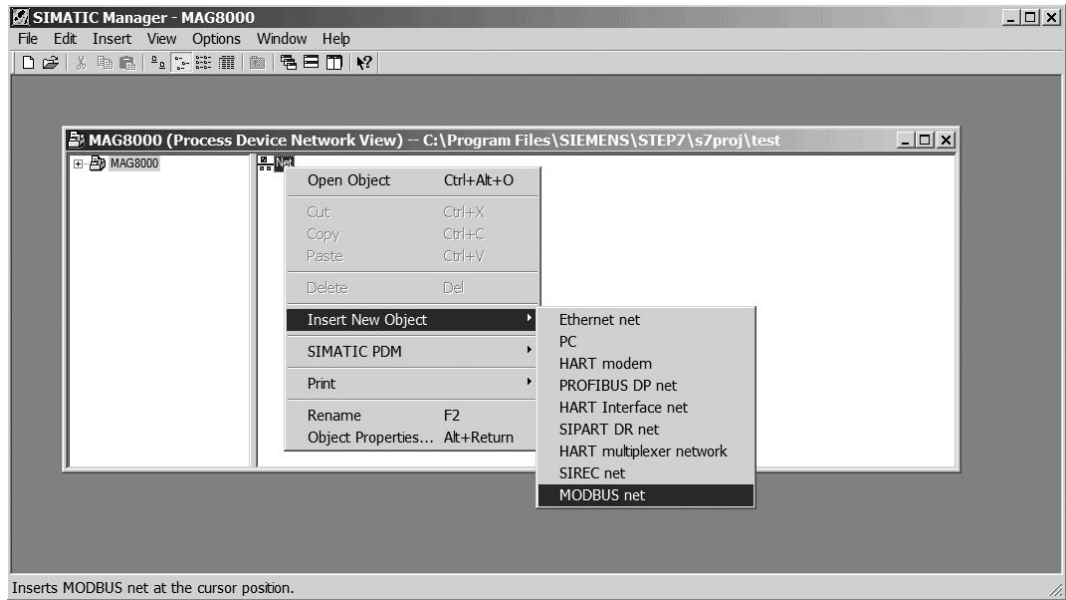

6. Click on "Connection" tab and select "activated" for IrDA. Click "OK".

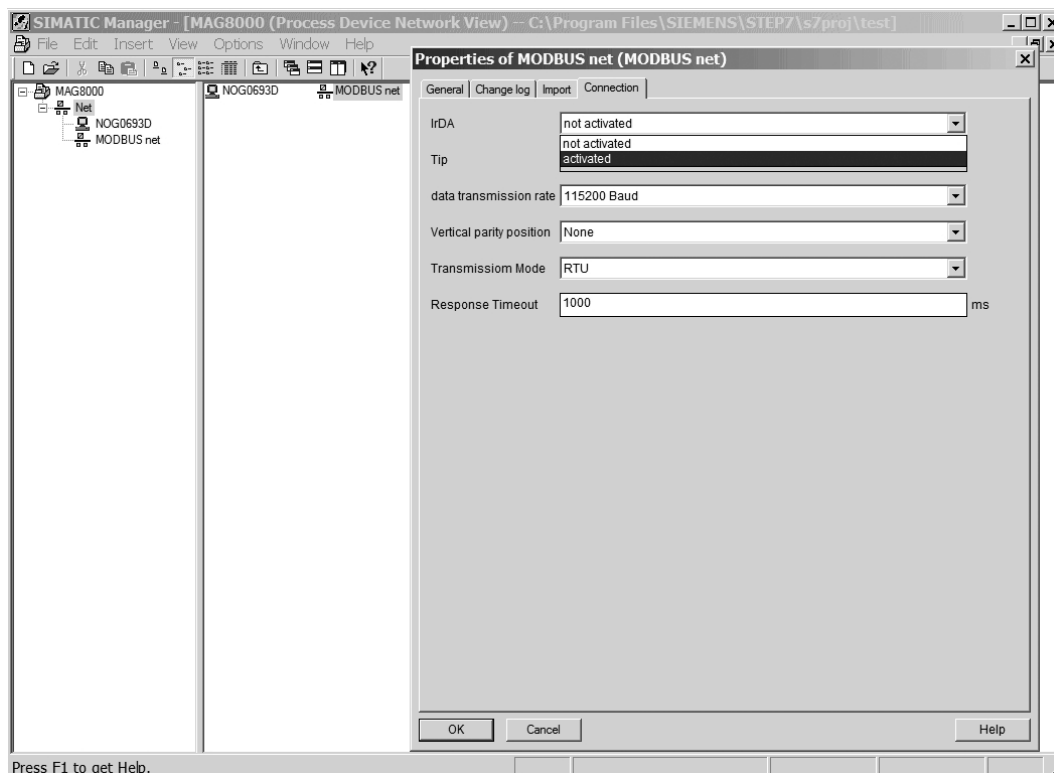


### Note

#### Maximum data transmission rate


The maximum data transmitter rate for the MAG 8000 is 19 200 baud.

 If the IrDA adapter is connected properly, a small IrDA icon will appear in the Windows notification area.




When placing mouse at this icon, the device information will be shown (e.g. "MAG8000 SN1234 is in range").

7. In Process Device Network View, right-click on "MODBUS net" → "Insert New Object" → "MODBUS device".

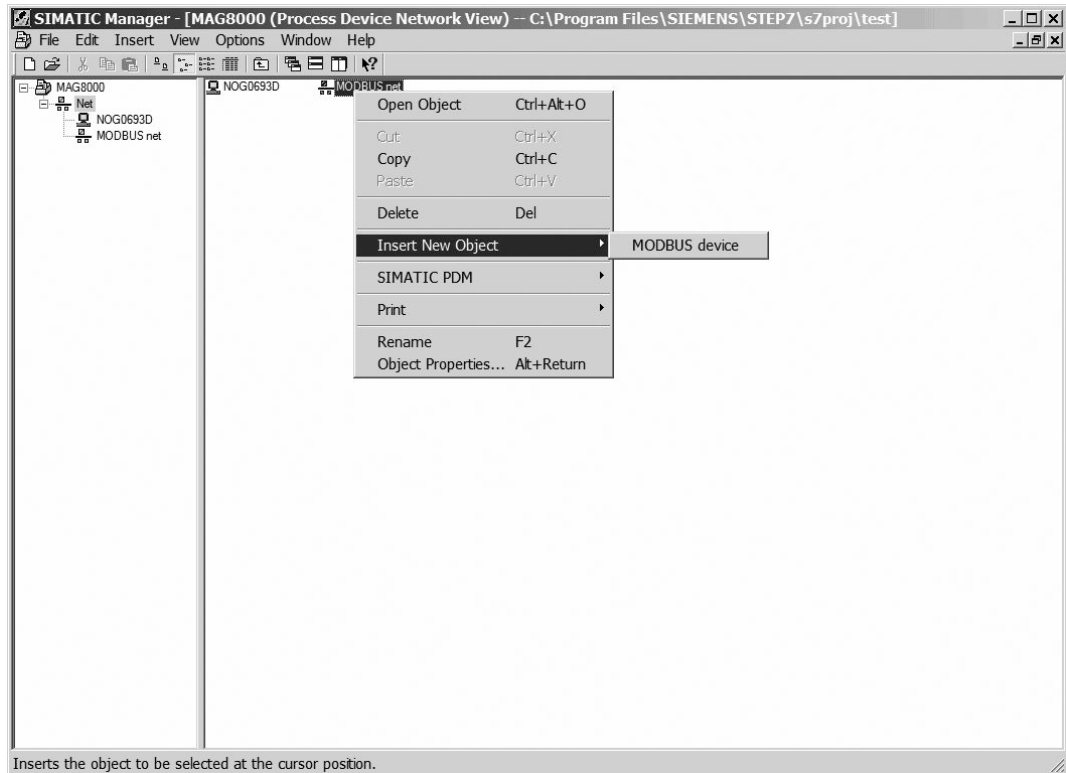


8. Click on "Assign". In new pop-up window, click on "Flow" → "Electromagnetic" → "Siemens AG" → "MAG8000".
9. Select the proper device (MAG 8000 Advanced, MAG 8000 Basic, MAG 8000 CT Advanced, or MAG 8000 CT Basic) depending on transmitter version to be controlled.

10. Click on "OK".

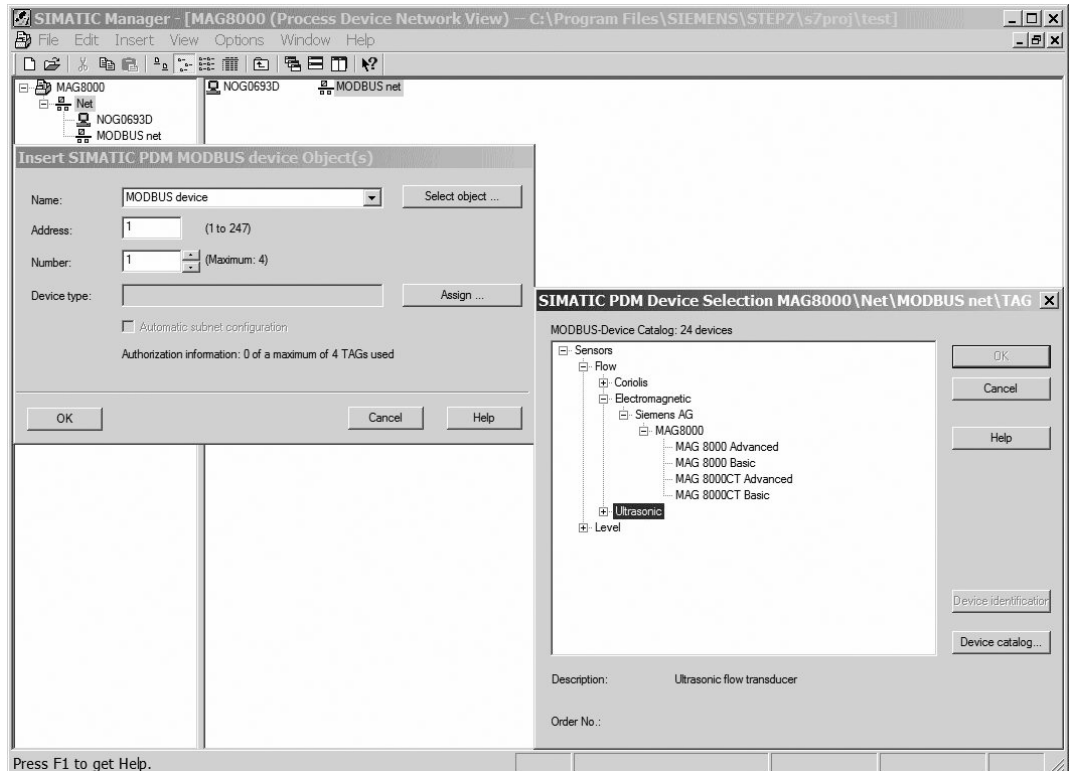

11. Double-click created device, e.g. "MAG8000 Advanced". A new window will pop up for device parameter configuration.

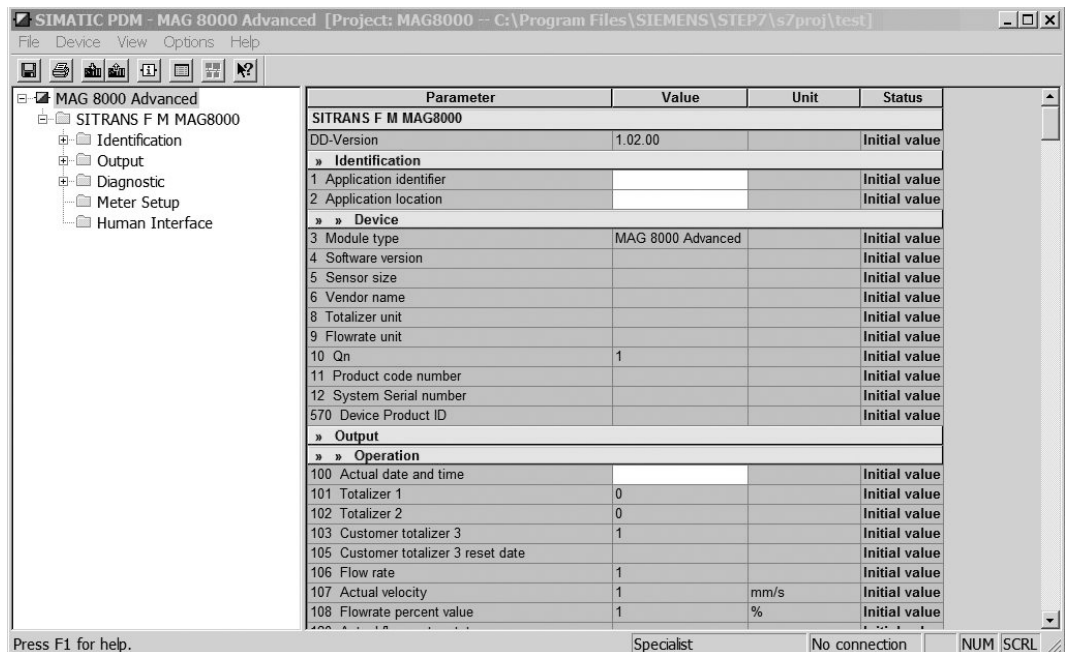

### 6.3 Setting the basic parameters

**Note**

**No factory reset**

The device is delivered with factory settings that are not stored as default values. Because no default values are present in the meter, an automatic return to factory values is not possible.

#### Enter password


The "User" dialog box is always displayed on the first start-up after installation of SIMATIC PDM but not on the first start-up for a specific device.

You can also use the menu command "Options" → "Settings" to specify whether you are permanently registered as a "Maintenance engineer" or "Specialist" and/or whether to disable the display of the "User" dialog box. Refer to SIMATIC PDM help manual for more details of "Maintenance engineer" and "Specialist".

Proceed as follows:

Click the appropriate button ("Maintenance engineer" or "Specialist").

If the option "Specialist" is selected, enter the password in the "Password" box in order to work with additional parameters. The default password is "1000", and can be changed after gaining access to the meter.

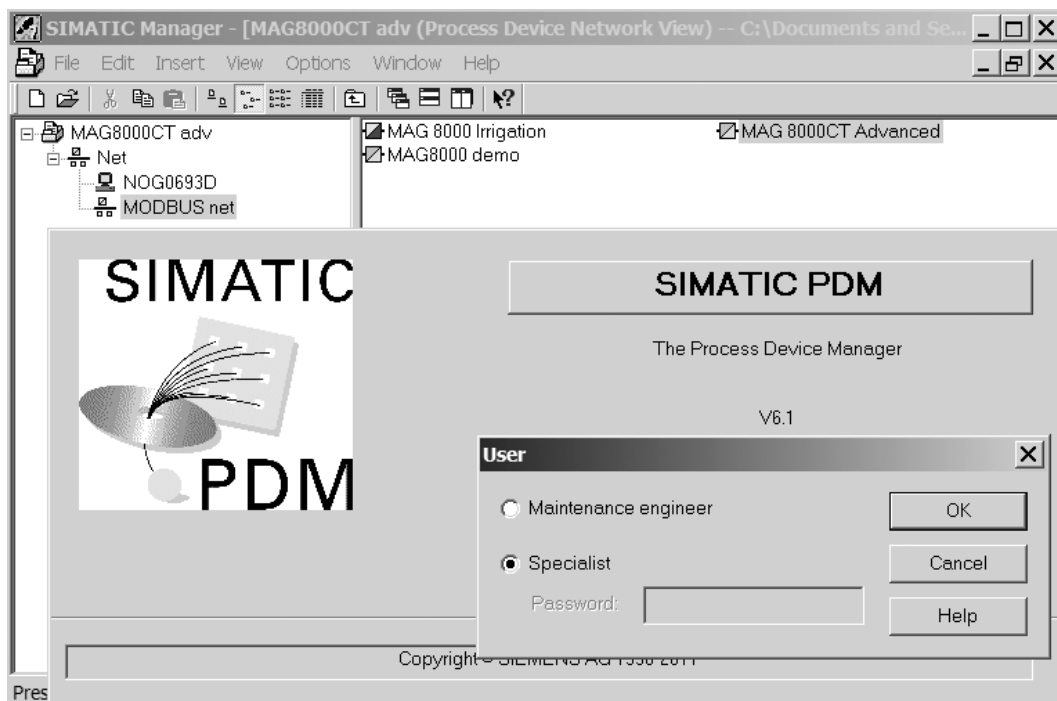





6.3 Setting the basic parameters

Each parameter has a description (prompt) advising how the parameter can be programmed and which settings are programmable.

The figure below shows alarm status with the marked alarms enabled. Click on "Transfer" to instantly synchronize alarm configurations between the PC and the device.



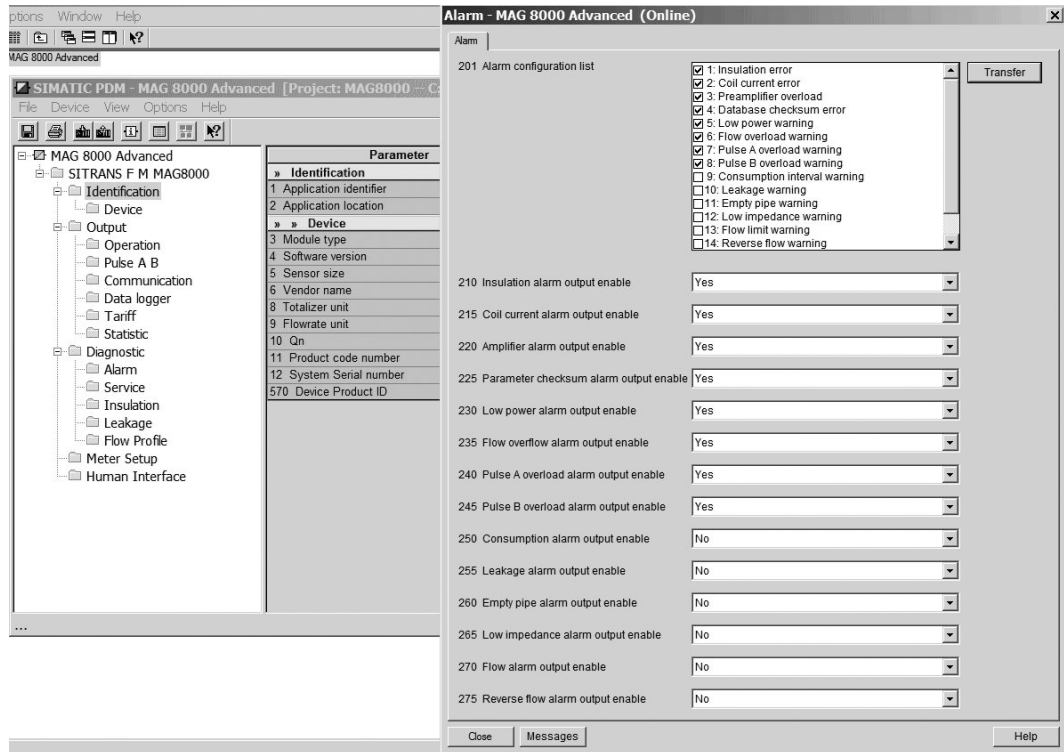


Figure 6-1 Alarm status - marked alarms are enabled


Select "Device" → "Download to Device..." to download all the changed parameters to the device.

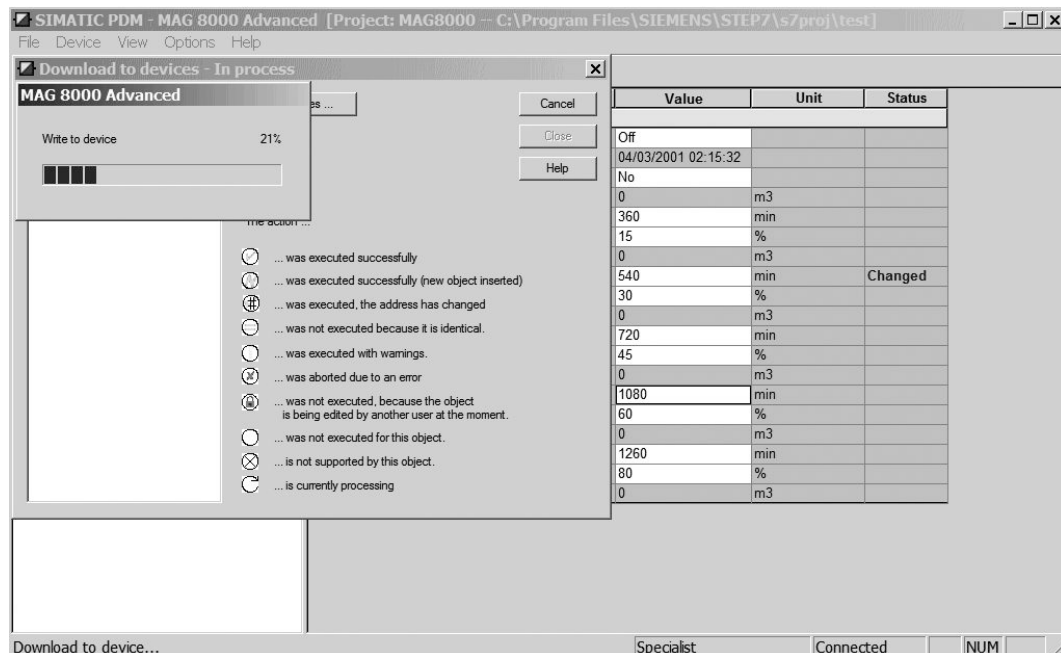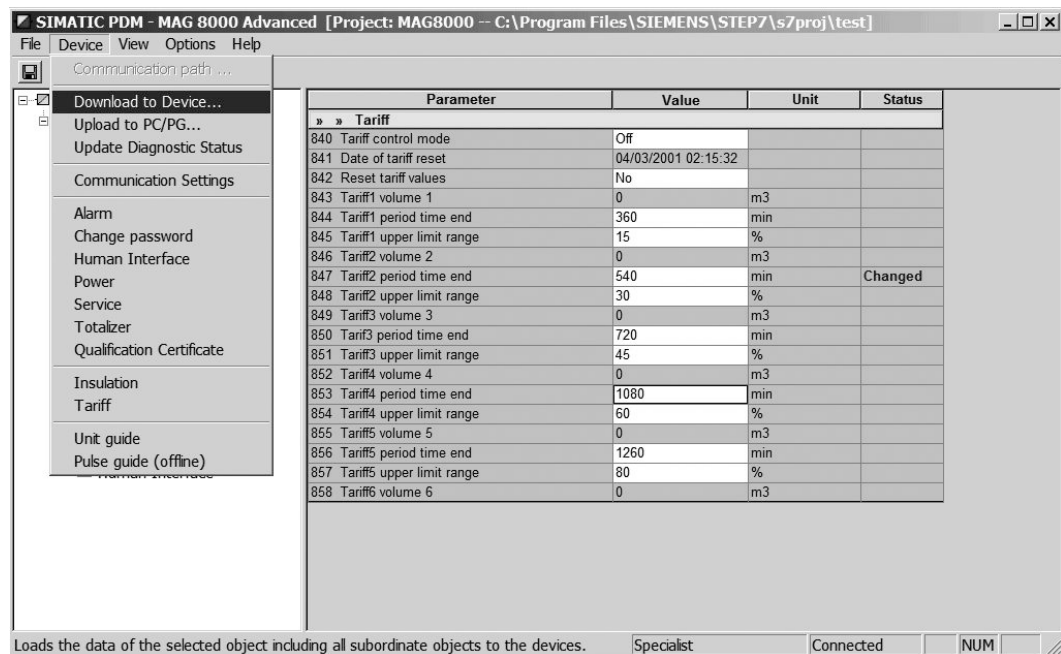


The meter configuration and parameters can also be exported as PDM data, and imported to another location, e.g. another project or PC.

In the SIMATIC Manager view, right-click on the PDM object to be exported, select "Export...". In the subsequent dialog box, specify the type of export as well as the name and location where the PDM file containing the exported data is to be saved. Confirm the entries by clicking "OK".

6.3 Setting the basic parameters

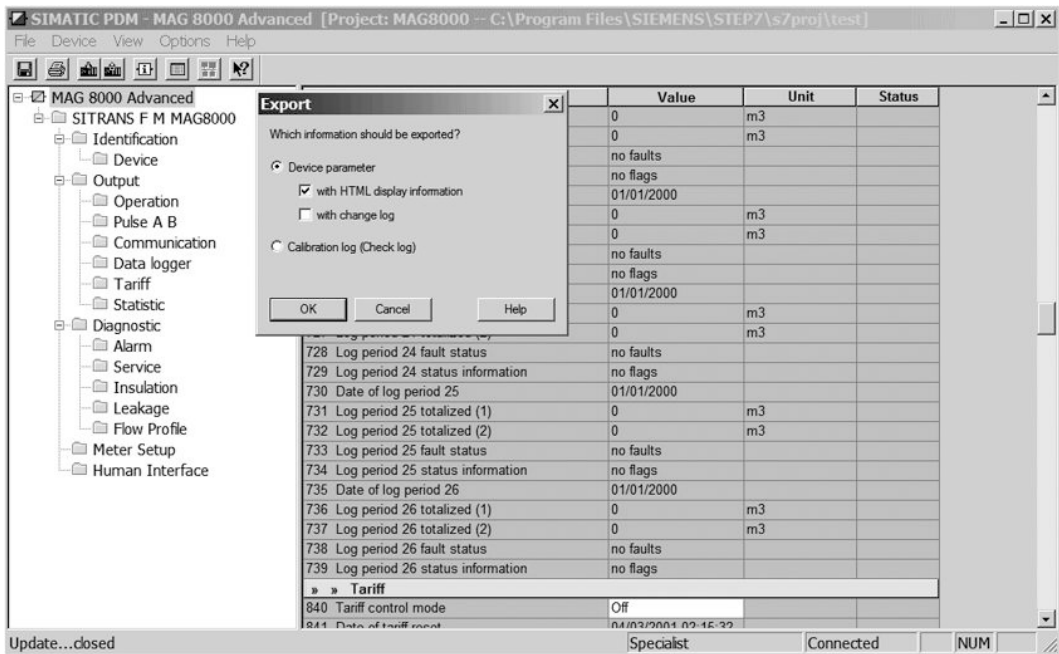

During the export process, a dialog box is displayed showing export progress. After the export is completed, the status "Result" is displayed.

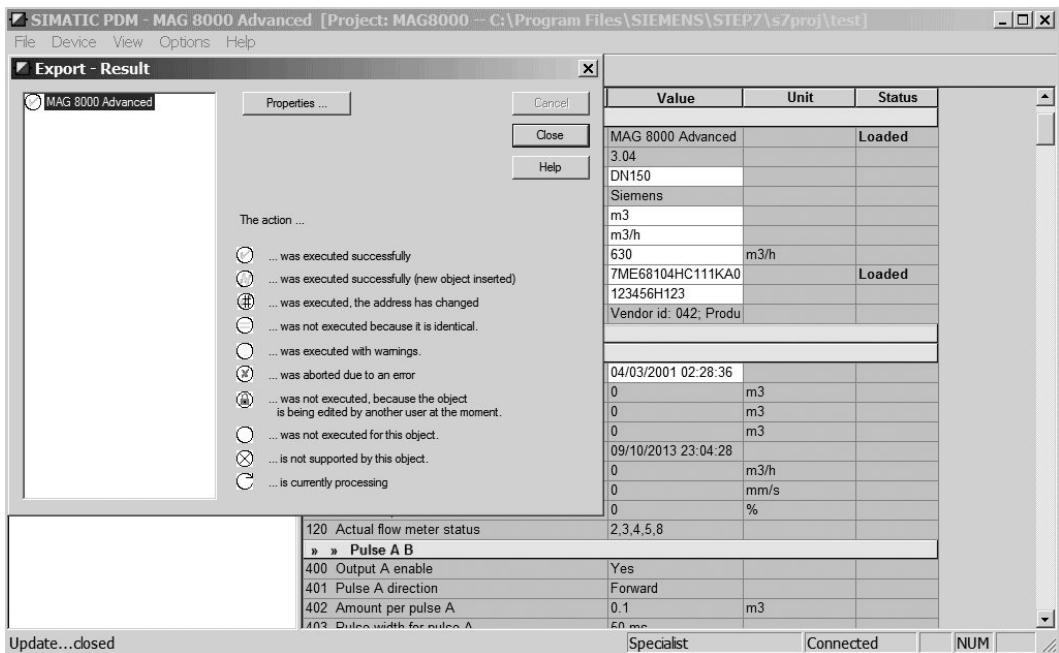

See also

[www.siemens.com/flow](http://www.siemens.com/flow) ([www.siemens.com/flow](http://www.siemens.com/flow))

## 6.4 Unit selection

The device is delivered with totalizer and flow rate units in m and m<sup>3</sup>/h, respectively, as standard. However, it is possible to manually configure the device to operate with other units.

### Changing the units

1. Select "Device" → "Unit guide".
2. Select the new unit from the list.
3. Click on "Apply Change of Units".

Afterwards, the change must be stored into the transmitter via "Download to Device".

## 6.5 Output configuration

Pulse output can be configured as volume pulse, alarm or call-up. Default factory setting is with output A enabled for forward flow and output B for alarm output.

### Output configuration in SIMATIC PDM

Select "Output". The software window shows the parameters for output configuration. Each parameter has its own guideline for selecting the correct parameter setting.


Parameter	Value	Unit	Status
<b>» » Output</b>			
<b>» » Operation</b>			
100 Actual date and time	04/03/2001 02:28:36		
101 Totalizer 1	0	m3	
102 Totalizer 2	0	m3	
103 Customer totalizer 3	0	m3	
105 Customer totalizer 3 reset date	09/10/2013 23:04:28		
106 Flow rate	0	m3/h	
107 Actual velocity	0	mm/s	
108 Flowrate percent value	0	%	
120 Actual flow meter status	2,3,4,5,8		
<b>» » Pulse A B</b>			
400 Output A enable	Yes		
401 Pulse A direction	Forward		
402 Amount per pulse A	0.1	m3	
403 Pulse width for pulse A	50 ms		
404 Output B enable	Yes		
405 Pulse B function	Alarm		
<b>» » Communication</b>			
420 Device Communication Address	1		
421 Baudrate	19200		
422 Parity	Even 1 stop		
423 Interframe space	35		
424 Response delay	5	ms	
511 Communication module type	No module		
<b>» » Data logger</b>			
600 Log interval	Monthly		

Loads the data of the selected object including all subordinate objects to the PC. Specialist No connection NUM

See "Output characteristics" (Page 100) for more information on how the outputs work.

## 6.6 Data protection

### Using hardware key

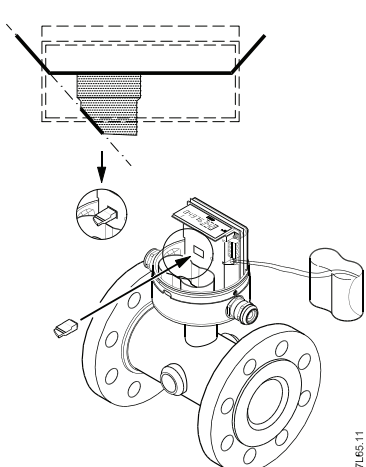 <p style="text-align: right; font-size: small;">87165:11</p>	<p>A hardware key is installed in the HL hole to change protected parameters. The HL hole is located in the front of the PCB board behind the battery.</p>																												
	<p><b>MAG 8000 Standard / MAG 8000 CT)</b></p> <table border="1"> <thead> <tr> <th><i>Parameter no.</i></th> <th><i>Parameter name</i></th> </tr> </thead> <tbody> <tr> <td>-</td> <td>New Password</td> </tr> <tr> <td>5</td> <td>Sensor tube diameter</td> </tr> <tr> <td>7</td> <td>Meter No.</td> </tr> <tr> <td>8</td> <td>Totalizer unit</td> </tr> <tr> <td>9</td> <td>Flow unit</td> </tr> <tr> <td>10</td> <td>Qn (Q3)</td> </tr> <tr> <td>300</td> <td>Totalizer unit factor</td> </tr> <tr> <td>301</td> <td>Flow unit factor</td> </tr> <tr> <td>302</td> <td>Pipe size</td> </tr> <tr> <td>321</td> <td>Calibration date</td> </tr> <tr> <td>323</td> <td>Calibration factor</td> </tr> <tr> <td>325</td> <td>Sensor offset</td> </tr> <tr> <td>332</td> <td>Max. sensor excitation frequency</td> </tr> </tbody> </table>		<i>Parameter no.</i>	<i>Parameter name</i>	-	New Password	5	Sensor tube diameter	7	Meter No.	8	Totalizer unit	9	Flow unit	10	Qn (Q3)	300	Totalizer unit factor	301	Flow unit factor	302	Pipe size	321	Calibration date	323	Calibration factor	325	Sensor offset	332
<i>Parameter no.</i>	<i>Parameter name</i>																												
-	New Password																												
5	Sensor tube diameter																												
7	Meter No.																												
8	Totalizer unit																												
9	Flow unit																												
10	Qn (Q3)																												
300	Totalizer unit factor																												
301	Flow unit factor																												
302	Pipe size																												
321	Calibration date																												
323	Calibration factor																												
325	Sensor offset																												
332	Max. sensor excitation frequency																												
<p><b>Additional protected parameters (MAG 8000 CT)</b></p> <table border="1"> <thead> <tr> <th><i>Parameter no.</i></th> <th><i>Parameter name</i></th> </tr> </thead> <tbody> <tr> <td>101</td> <td>Totalizer 1</td> </tr> <tr> <td>102</td> <td>Totalizer 2</td> </tr> <tr> <td>303</td> <td>Operation excitation frequency</td> </tr> <tr> <td>305</td> <td>Decimal point place</td> </tr> <tr> <td>310</td> <td>Flow direction totalizer 1</td> </tr> <tr> <td>312</td> <td>Flow direction totalizer 2</td> </tr> <tr> <td>327</td> <td>Adjustment factor</td> </tr> <tr> <td>328</td> <td>Low flow cut-off</td> </tr> <tr> <td>332</td> <td>Empty pipe impedance</td> </tr> <tr> <td>420</td> <td>Device Communication Address</td> </tr> <tr> <td>550</td> <td>Coil current active</td> </tr> <tr> <td>551</td> <td>Fix flow mode active</td> </tr> </tbody> </table>		<i>Parameter no.</i>	<i>Parameter name</i>	101	Totalizer 1	102	Totalizer 2	303	Operation excitation frequency	305	Decimal point place	310	Flow direction totalizer 1	312	Flow direction totalizer 2	327	Adjustment factor	328	Low flow cut-off	332	Empty pipe impedance	420	Device Communication Address	550	Coil current active	551	Fix flow mode active		
<i>Parameter no.</i>	<i>Parameter name</i>																												
101	Totalizer 1																												
102	Totalizer 2																												
303	Operation excitation frequency																												
305	Decimal point place																												
310	Flow direction totalizer 1																												
312	Flow direction totalizer 2																												
327	Adjustment factor																												
328	Low flow cut-off																												
332	Empty pipe impedance																												
420	Device Communication Address																												
550	Coil current active																												
551	Fix flow mode active																												





# Operation

## 7.1 Operation via key and display

The meter is designed with a single key and a symbolic display for optimal dialog.

### Display

Display is divided into 3 areas.

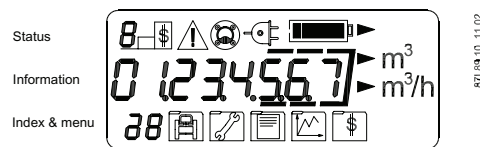


Figure 7-1 Display

- Top area with symbols for status information.
- Middle area with actual information.
- Bottom area with index for actual information and selected menu.

Some of the information has additional information connected and display will automatically toggle between information, see menu overview (Page 66). If key is not pressed for 10 minutes, display will time-out and return to default configured operator menu.

### Key

There are three different ways the interface key will respond to being pressed:

1. A brief press (less than 2 seconds) will advance screen to next index or menu.
2. A short press (2 to 5 seconds) will enter a menu or escape menu selection.
3. A long press (more than 5 seconds) while in the operator menu (⏏) will activate a reset of selected value (e.g., call-up function) indicated by an "r".

A flashing "r" indicates a reset. A request for time and date setup is shown during power-up.

7.2 Display symbols

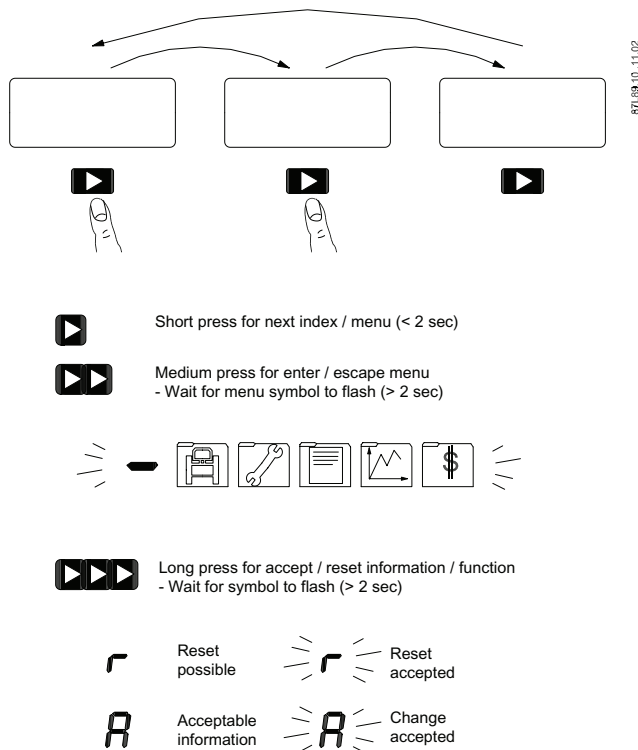


Figure 7-2 Key and display operation

It will take 3 to 5 minutes for the capacitive touch key's self-calibration once the MAG 8000 transmitter enclosure is removed and mounted again. There will be no response from the touch key during self-calibration.

## 7.2 Display symbols

Top area of display shows status bar.

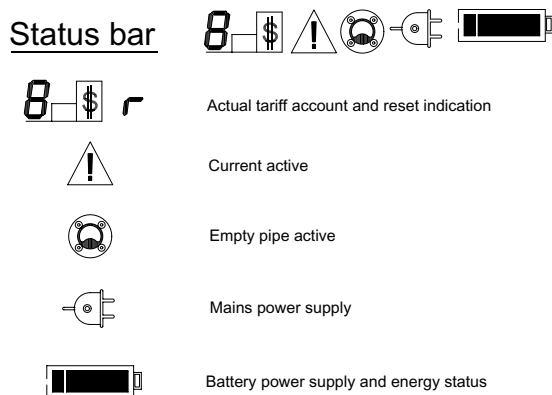


Figure 7-3 Status bar

Status information symbols show actual operation of meter.

7.3 Default display information and accessible display menus

**Tariff** symbol shows actual accounting tariff. In operator menu, tariff value will change to "r" if information is resettable.

**Alarm** symbol is active when an alarm is active and shown independently of alarm output configuration.

**Empty pipe** symbol indicates an empty pipe condition. To conserve power and prevent false readings due to exposed measurement electrodes, flow measurement is disabled until a full pipe is detected and the symbol has disappeared.

Power supply type is automatically detected by meter.

**Plug** symbol indicates that mains power is supplied.

**Battery** symbol indicates that battery power is supplied. It also indicates remaining battery capacity, see Operation menu index 1 (Page 66) for more information.

Bottom part of display shows menu bar.

Menu bar

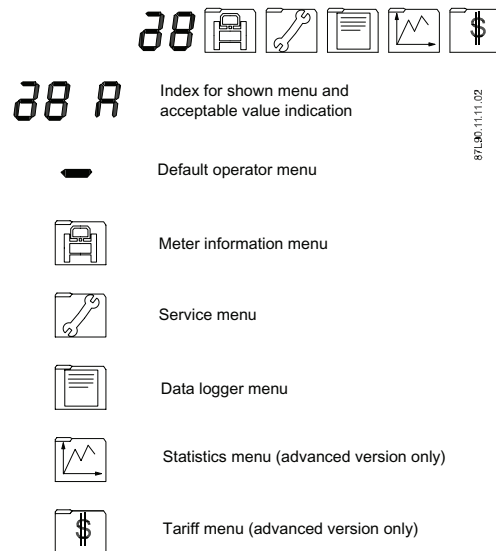


Figure 7-4 Menu bar

The **menu bar icons** indicate actual selected menu and related index for selected information. Display overview shows relation between menu, index and information.

Only operator menu (—) has information and functions that can be reset. During power-up function battery power can be preset to 100% capacity and time and date can be adjusted - an "A" in index shows acceptable values. The menu shown in each menu index is the menu bar.


### 7.3 Default display information and accessible display menus

Parameter 131 defines the default display information with selection between

- Totalizer 1 (Index 1)
- Totalizer 2 (Index 2)
- Actual flow rate (Index 3, updated with selected measuring frequency)

7.3 Default display information and accessible display menus

- Fault codes (Index 4)
- Net totalizer

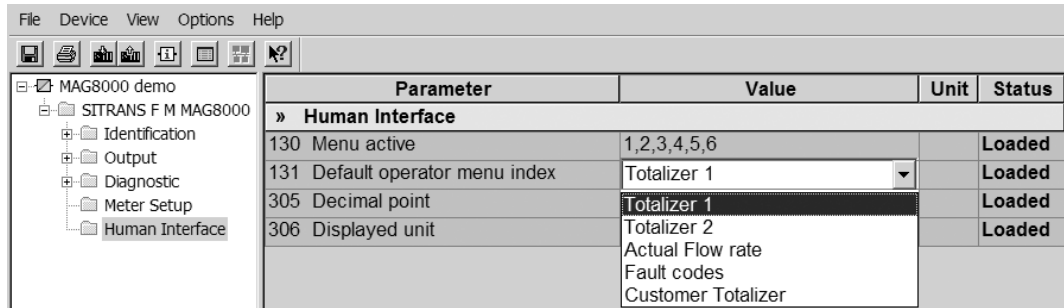

The screenshot shows the configuration software interface for the SITRANS MAG 8000. The left pane shows a tree view with 'Human Interface' selected. The main pane displays a table of parameters:

Parameter	Value	Unit	Status
» Human Interface			
130 Menu active	1,2,3,4,5,6		Loaded
131 Default operator menu index	Totalizer 1		Loaded
305 Decimal point	Totalizer 1		Loaded
306 Displayed unit	Totalizer 2 Actual Flow rate Fault codes Customer Totalizer		Loaded

Default information is shown after power-up as well as after no key operation for 10 minutes.

Parameter 130 defines accessible display menus with selection of one or more of the following menus:

- Operator menu
- Meter info menu
- Service menu
- Data logger menu
- Statistic menu (advanced version only)
- Revenue menu (advanced version only)

7.3 Default display information and accessible display menus

The screenshot shows the SIMATIC software interface. On the left is a navigation tree with 'Human Interface' selected. The main area is divided into two parts: a table of parameters and a detailed configuration window titled 'Human Interface - MAG8000 demo (Online)'.

Parameter	Value	Unit	Status
<b>Human Interface</b>			
Menu active	1,2,3,4,5,6		Loaded
Default operator menu index	Totalizer 1		Loaded
Decimal point	Automatic point adjust		Loaded
Displayed unit	Use m3 unit		Loaded

**Human Interface - MAG8000 demo (Online)**

Human Interface

131 Default operator menu index: Totalizer 1

305 Decimal point: Automatic point adjust

306 Displayed unit: Use m3 unit

130 Menu active:

- 1: Operator menu
- 2: Meter info menu
- 3: Service menu
- 4: Log menu
- 5: Statistic menu
- 6: Revenue menu
- 7: Not Used

Transfer

Close Messages Help

## **7.4 Operator menu**

The operator menu consists of several indexes described in the following.

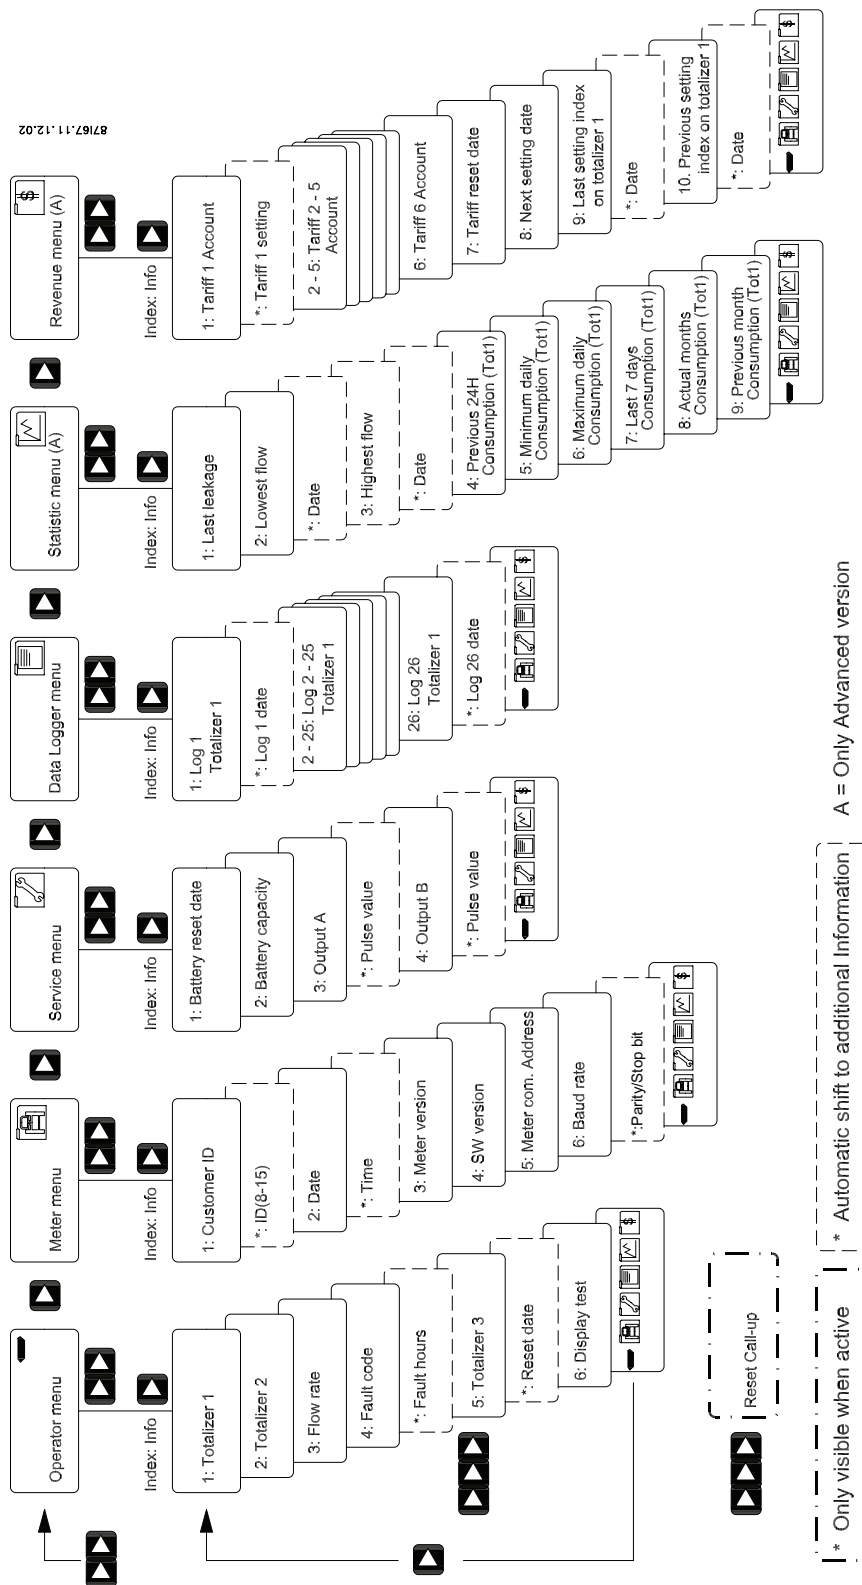


Figure 7-5 Menu overview

A = Only Advanced version

\* Automatic shift to additional Information

\* Only visible when active

### Index 1

#### Totalizer 1

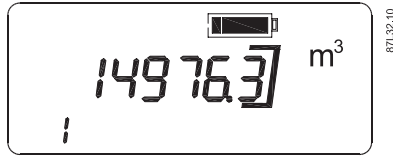


Figure 7-6 Operator menu - Totalizer 1

Flow volume totalizer 1 (factory-configured for forward flow calculation).

For MAG 8000, the value of totalizer 1 can be reset to zero or set to any value desired via PDM or Flow Tool (example - replacing an existing old meter).

### Index 2

#### Totalizer 2



Figure 7-7 Operator menu - Totalizer 2

Flow volume totalizer 2 (factory-configured for reverse flow). A negative value indicates reverse flow calculation.

For MAG 8000, the value of totalizer 2 can be reset to zero or set to any value desired via PDM or Flow Tool (example - replacing an existing old meter).

### Index 3

#### Flow rate

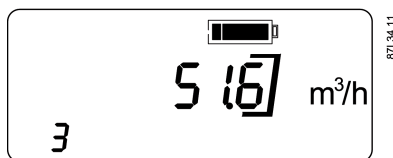


Figure 7-8 Operator menu - Flow rate

Index 3 shows actual flow rate. If a negative value is indicated, flow is in reverse direction.



MAG 8000 CT

**Note**

For MAG 8000 CT, the value of totalizer 1 or 2 can only be reset to zero if verification sealing is broken and a hardware key is mounted on device.

**Index 4**

Active alarm

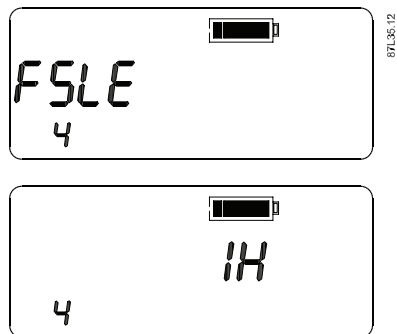


Figure 7-9 Operator menu - Active alarm

Faults are indicated with the lowest number first. The left of display indicates 3 alarm conditions: low power warning (5), leakage warning (L), and empty pipe warning (E).

Faults 1 to 4 affect meter performance and remain active until alarm condition disappears. Faults 5 to d are warnings that will disappear when alarm condition has been corrected and they are reset via communication interface.

Fault evaluation and service guidelines are made in service section.

After all faults have disappeared, display shows total hours of faults until meter was reset.

Fault information. Each number indicates a dedicated fault:

1	Insulation fault
2	Coil current fault*)
3	Amplifier overload fault*)
4	Data base checksum fault
5	Low power warning (alarm limits are configurable)
6	Flow overload > Qmax. (Q4) (125% Qn) flow overload
7	Pulse output 1 overflow > PF [Hz] pulse output 1 overflow
8	Pulse output 2 overflow > PF [Hz] pulse output 2 overflow
9	Consumption interval warning (alarm limits are configurable)
L	Leakage warning (alarm limits are configurable)
E	Empty pipe / low conductivity - when enabled*
C	High conductivity / low impedance warning (alarm limits are configurable)

d	High flow rate warning (alarm limits are configurable)
A	Reverse high flow rate warning (alarm limits are configurable)

\*) Meter disables measurement to reduce power consumption during fatal faults.

### Index 5

#### Customer totalizer

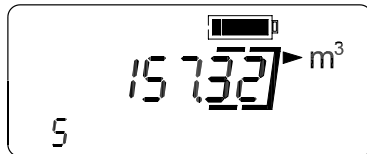


Figure 7-10 Operator menu - Totalizer

For the CT version the totalizer is neither configurable nor resttable.

### Display test


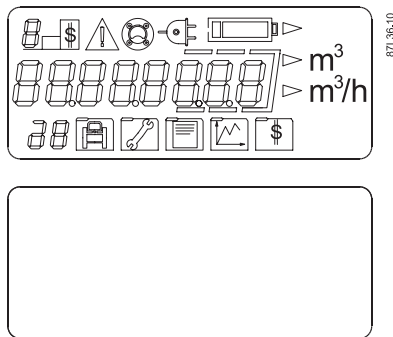


Figure 7-11 Operator menu - Display test

All segments of display are alternately flashed on and off during this test.

### Menu selection

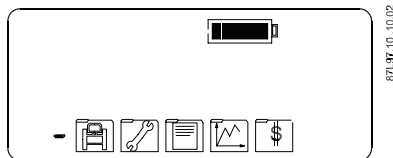

▶ Short press for enter / escape menu  
 - Wait for menu symbol to flash (> 2 sec)



Figure 7-12 Operator menu - Menu selection


If key is pressed shortly (2 to 5 seconds), menu selection will flash indicating that a new selection can be made.

After toggling to desired menu, a short press on key will enable chosen menu, which must be activated in parameter 130 in advance.

### Index 0 (when active)

Call up reset



 Long press for accept / reset information / function  
- Wait for symbol to flash (> 2 sec)

 Reset possible       Reset accepted


Figure 7-13 Operator menu - Call up reset

Call-up reset window (index 0) is only shown when call-up function is activated. "r" indicates that it can be reset by a long press on key. When releasing key while "r" is flashing, call-up function will be reset and window disappears.

## 7.5 Internal data handling


### Meter status

Meter status parameter (120) gives a fast indication of reliability of revenue data.

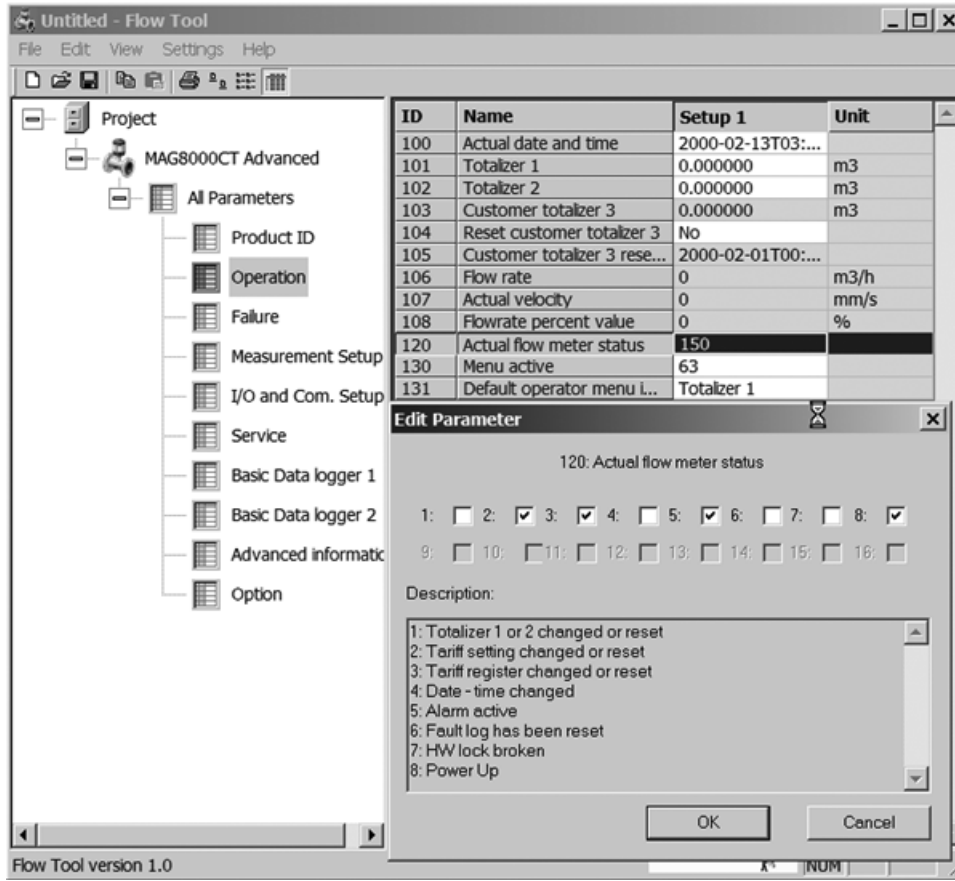

## Data logger / Consumption alarm

The integrated data logger has 26 logging periods in which data can be stored daily, weekly or monthly. The logger stores the consumption for totalizer 1 and totalizer 2 in the selected period. Forward consumption is stored as a positive value and reverse consumption is stored as a negative value. Alarm and meter status are also stored for the same period to indicate alarms that have been active, or that revenue data has been influenced in the specific period.

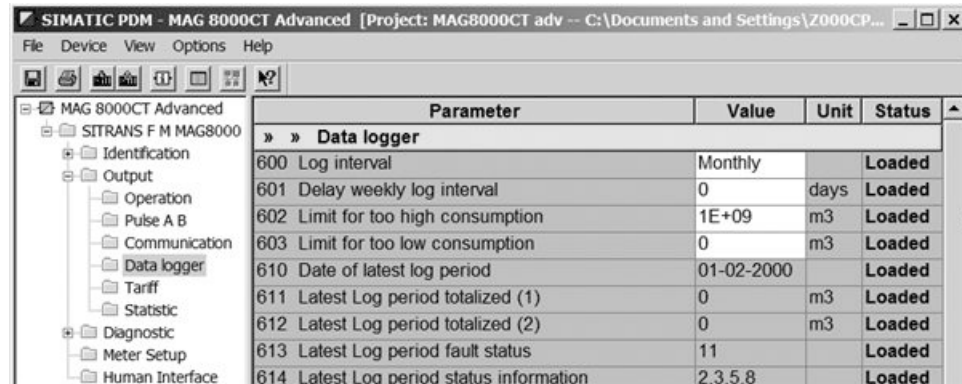

Parameter	Value	Unit	Status
<b>Data logger</b>			
600 Log interval	Monthly		Loaded
601 Delay weekly log interval	0	days	Loaded
602 Limit for too high consumption	1E+09	m3	Loaded
603 Limit for too low consumption	0	m3	Loaded
610 Date of latest log period	01-02-2000		Loaded
611 Latest Log period totalized (1)	0	m3	Loaded
612 Latest Log period totalized (2)	0	m3	Loaded
613 Latest Log period fault status	11		Loaded
614 Latest Log period status information	2,3,5,8		Loaded

The logged information has a time and date stamp. The data logger never stops storing data - old data is overwritten following the first in/first out principle, i.e. log 1 is the last stored information which is moved to log 2 when the next logging is made and so on.

The consumption alarm indicates that the actual consumption on totalizer 1 is above or below the consumption limits.

### Note

#### Invalid log date

If the log date "00.00.2000" is shown in the device display, the log period was never set.

## 7.6 Battery-powered operation

The MAG 8000 Standard (7ME6810) and MAG 8000 CT (7ME6820) are factory-configured for 7 years of typical operation on internal battery pack (2 D-cell). High or low temperature, frequent use of IrDA communication, high pulse output rate, high excitation frequency in leakage detection mode, and use of add-on communication module will reduce actual operation time.

The MAG 8000 power management function controls each power consuming element and measures the temperature for optimal calculation of remaining battery power capacity.

### Battery status and alarm indication

Battery power capacity for operation is indicated in 3 levels.

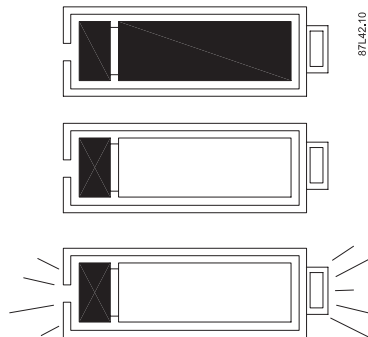


Figure 7-14 Battery status

- Full symbol indicates battery capacity is above battery alarm level (% preset parameter 206).
- Low symbol indicates that battery should be replaced; however, measurement will remain active. Level is based on a preset alarm level.
- When low symbol is flashing, measurement and communication is disabled until battery pack has been replaced and reset.

"Low battery" is a selectable % (parameter 206) of 100% full capacity. The meter calculates the remaining capacity every four hours, including all consuming elements and the influence of temperature changes.

### Consumption and operation time calculation

Battery operation time depends on connected battery pack as well as operation conditions of meter. Every 4 hours the advanced power management system calculates the real power consumption and remaining operation capacity.

Power consumption calculation includes flow measurement, meter dialog (communication and display) and pulse output.

Temperature is also measured to control and adjust its influence on the battery capacity.

The internal 2 D-cell battery pack has a nominal capacity of 33 Ah giving a typical operation of 7 years for MAG 8000 Standard and MAG 8000 CT. The nominal capacity of external battery

pack (4 D-cell) is 66 Ah and gives typically 10 years operation time for MAG 8000 Standard and MAG 8000 CT.



Scenario - Revenue application	
Output A	Pulse - 10 Hz
Output B	Alarm or Call up
Meter dialog	1 hour per month
Excitation frequency	1/15 Hz
Country main frequency	50 Hz / 60 Hz

**MAG 8000 Standard (7ME6810) and MAG 8000 CT (7ME6820)**

Excitation frequency (24 hours operation)		1/60 Hz	1/30 Hz	1/15 Hz	1/5 Hz	1.5625 Hz	3.125 Hz	6.25 Hz
Two D-Cell battery 33 Ah Internal bat- tery pack	DN 25 to 150 (1" to 6")	9 years	9 years	7 years	43 months	8 months	3 months	2 months
	DN 200 to 600 (8" to 24")	9 years	6 years	4 years	22 months	3 months	1 month	N/A
	DN 700 to 1200 (28" to 48")	7 years	4 years	2 years	1 year	1 month	N/A	N/A
Four D-Cell battery 66 Ah External bat- tery pack	DN 25 to 150 (1" to 6")	15 years	15 years	14 years	86 months	16 months	7 months	4 months
	DN 200 to 600 (8" to 24")	15 years	13 years	8 years	44 months	7 months	3 months	N/A
	DN 700 to 1200 (28" to 48")	14 years	9 years	5 years	2 years	3 months	N/A	N/A

Typical operation time of 7 years is based on an operation time/temperature profile of 5% at 0 °C (32 °F), 80% at 15 °C (59 °F) and 15% at 50 °C (122 °F), 0.1 % at menu 3 operation and 0.1 % at IrDA operation, and no use of add-on communication module.

Leakage detection (advanced version only) will affect battery operation time if a higher excitation frequency is selected during leakage period.

The effect of other temperatures is shown in the figure below.

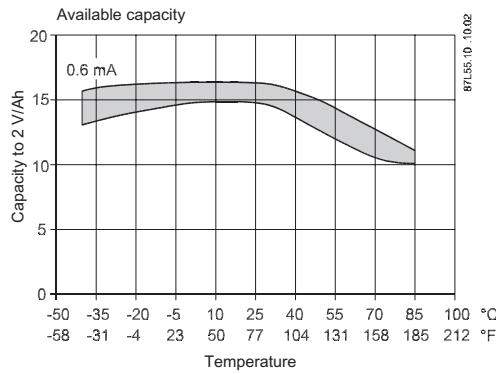


Figure 7-15 Available capacity of one D-cell battery in relation to discharge current and temperature


**Note**

Installation orientation of battery pack may influence battery capacity. Optimal battery capacity is achieved with battery pack in an upright position.



### Battery configuration

The battery figures show power management information, which can be accessed via "Device" → "Power".

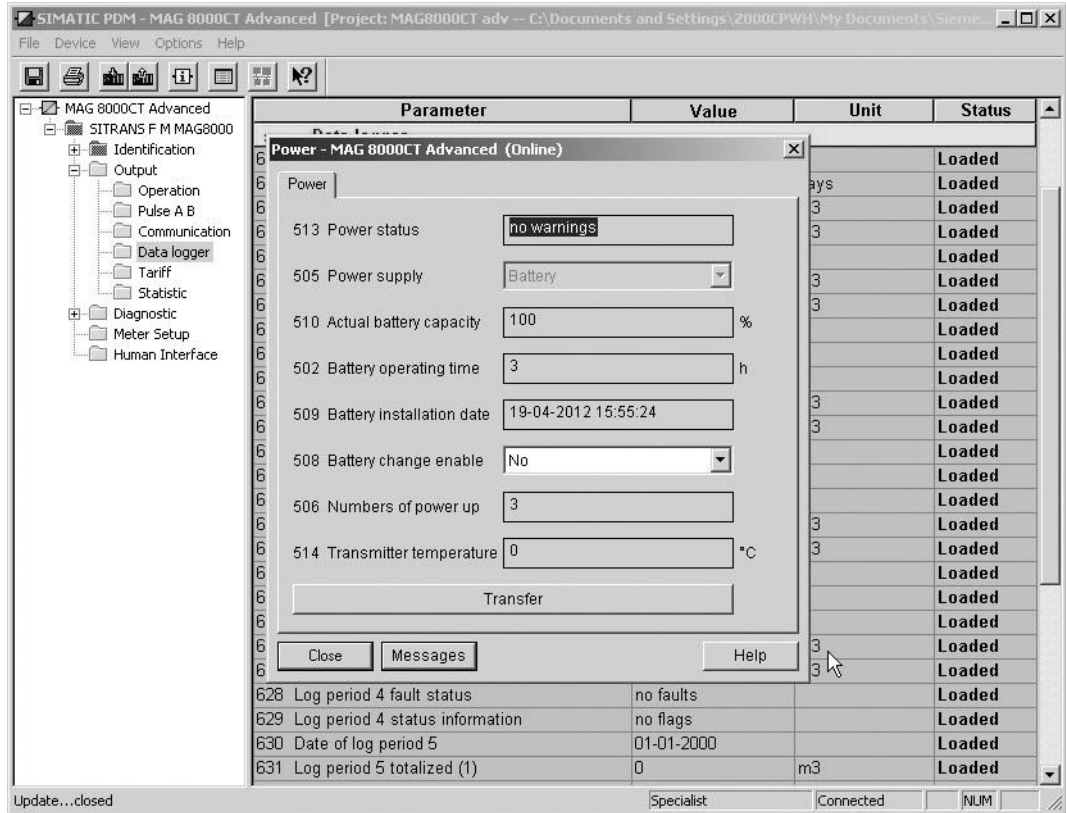

At each battery replacement the actual battery capacity is reset to 100% (parameters 508 to 510), which is then reduced with real meter consumption every 4 hours.

Power related alarm settings are located in "Alarm" group, e.g. "Battery limit" (parameter 206), which is the level at which low power alarm is activated generating an alarm or call-up (if configured), as well as low power fault related parameters 230 to 234.

When switching between battery power from the internal and the external battery packs, "Battery power" (parameter 507) must be adjusted to match the actual number of batteries connected.



## Service and maintenance

### 8.1 Maintenance

The device is maintenance-free. However, a periodic inspection according to pertinent directives and regulations must be carried out.

An inspection can include check of:

- Ambient conditions
- Seal integrity of the process connections, cable entries, and cover screws
- Reliability of power supply, lightning protection, and grounds

<b>NOTICE</b>
Repair and service must be carried out by Siemens authorized personnel only.

**Note**

Siemens defines flow sensors as non-repairable products.

### 8.2 MAG 8000 service guidelines

The MAG 8000 battery-operated water meters are based on a very reliable measurement technology and the advanced alarm monitoring and diagnostics provide valuable information concerning the meter performance, faults, and service conditions.

Optimal meter performance requires proper meter selection, proper installation, and proper commissioning for the particular application. This service guideline section indicates how to detect and solve the most common problems. Meter and application problems are indicated by the alarm program via the main fault and warning symbol on the display and the comprehensive data logging and monitoring available via the communication interface.

Alarm monitoring includes individual registration of each alarm, how many hours the alarm has been active, when the alarm first appeared, and when it disappeared last. The alarm log can be reset with its own date and time registration. A common fault hour counter includes all active alarms in one counter. Additionally, active alarms are logged in the data logger to monitor when the alarms have been activated.

Fatal faults 1 through 4 are the most important to resolve as they influence the operation of the meter. Fatal faults will disappear as soon as the alarm condition is corrected.

## 8.3 Replacing transmitter or PCB board

The MAG 8000 and MAG 8000 CT do not have a removable SENSORPROM. Therefore special care must be taken when replacing a damaged or defective transmitter or PCB board to ensure proper operation and continued accuracy. There are 3 ways to achieve an easy and successful replacement meter:

1. Order a transmitter replacement kit as a spare part, which comes with the factory default settings and original product label. To order you need to provide a serial number 087L4166 is for compact version, 087L4202 is for remote version.
2. Order a complete transmitter as a spare part with default settings and a blank product label. Final configuration is done on-site. Missing data and configuration can be uploaded from the old meter, or it can be read from the old meter product label.
3. Order only a replacement PCB board. The PCB board can only be ordered for basic or advanced versions with default settings. When making the configuration on-site, the service mode must be selected in the Flow Tool/SIMATIC PDM and the hardware key must be mounted on the PCB board, to change important parameters.

---

### Note

#### Re-verification

If MAG 8000 CT transmitter or sensor must be replaced, a re-verification of the whole flowmeter is necessary, to re-obtain custody transfer approval. The re-verification must be performed by an authorized person, with the acceptance and under direction of the local authorities.

---

---

### Note

#### SITRANS F M Verificator


The SITRANS F M Verificator cannot be used with MAG 8000.

---


## 8.4 Battery replacement

### Replacing battery

1. Loosen screws on transmitter top.
2. Remove transmitter top using a screwdriver.

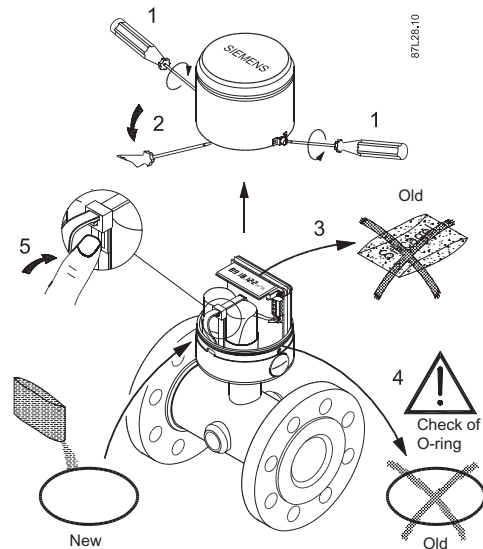

3. Dispose of silica gel bag.
4. Replace O-ring to ensure continued IP68 enclosure rating.
  - Check O-ring for damage or deformity.
  - Smear O-ring with acid-free lubricating gel.
5. Push locking tab and loosen strip.

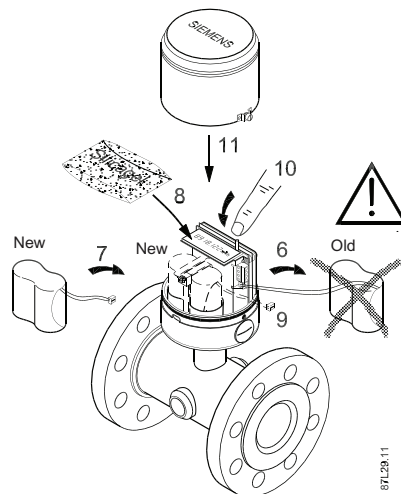

6. Remove battery pack with power still connected.

8.4 Battery replacement

7. Place and secure new battery pack.


---

**Note**


Battery packs must be installed with the top part in upwards direction to reach maximum capacity.

---

8. Add new Silica gel bag
- Remove plastic bag from new silica gel bag.
  - Place new silica gel bag on top of battery pack to prevent condensation within meter.
  - To maintain IP68 enclosure the silica gel bag may **not** be in contact with the Sylgard.
9. Disconnect old battery pack and connect new one.
10. Press key within 6 seconds to reset battery (i.e. operating time and remaining capacity) when display shows:

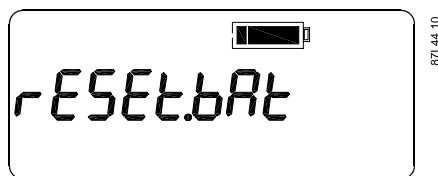

11. Mount top lid.
12. Fasten screws to reassemble meter completely.

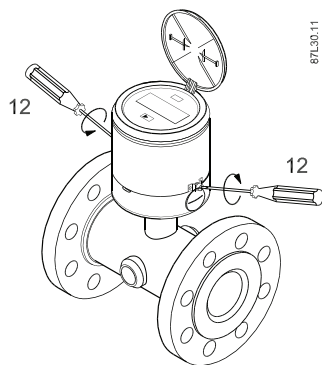

If necessary, adjust time and date via software, see "Power up with battery reset, date and time set up".

---

**Note**

**Re-verification**

All sealed MAG 8000 CT meters must be re-verified when sealings (marked "A") have been broken. The re-verification must be performed by an authorized person, with the acceptance and under direction of the local authorities.

---


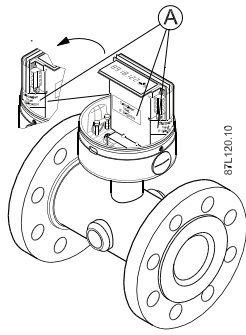


Figure 8-1 Verification sealings

## 8.5 Power up with battery reset, date and time set up

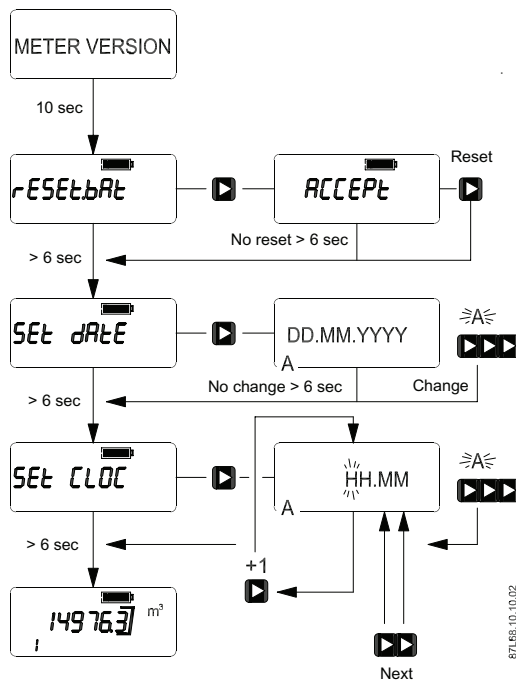

When new batteries have been installed, power-up procedure will enable resetting battery capacity and setting up date and time. Battery capacity reset, date and time can also be corrected via parameters 508 and 100.

When battery plug is connected, meter will display meter version for 10 seconds. Display will then show "rESEt.bAt" indicating the option to reset internal battery power calculation. To execute reset, press key within 6 seconds. If key is not pressed, meter will proceed to set date, set clock, and finally normal operation mode.


If key is pressed within reset battery time, display will indicate "Accept" to ensure that reset should take place. Reset will take place only if key is pressed again within the next 6 seconds. If not, normal operation will begin.

For setting up date and time, the different key function must be used - see Operator menu (Page 66). An "A" indicates an acceptable value and a flashing "A" indicates that value is stored when key is released.

Reset function also sets actual date as battery replacement date.

## 8.6 Verification

Without changing parameters, verification mode increases measurement frequency to provide maximum measurements per second. This function is especially useful to minimize calibration time when validating water meter accuracy. Frame around digits will blink slowly to indicate that verification mode is enabled. Maximum pulse rate on output A is increased to 1 kHz and pulse width is set to 0.5 ms. When verification mode is exited the previous pulse setting is restored. Pulse widths other than 1 ms can be selected by storing new pulse values. This setting remains when verification mode is exited.

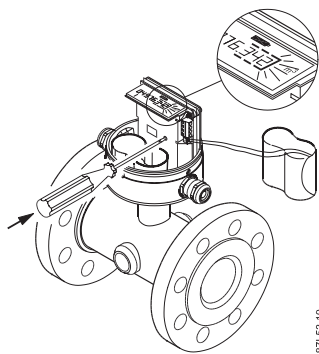

### Activation of verification mode

Verification mode is enabled in one of the following ways:

- Pressing verification button through hole in front screen.
- Writing integer '1' to parameter 320.

### Verification mode

The following indicate that meter is in verification mode:

- Frame surrounding digits in LCD starts flashing.
- Excitation frequency is set to maximum allowable frequency.
  - (ExcitationFreqNo = ExcitationFreqNoLimit)
- Resolution in display is set to 3 digits after decimal point.
  - (DecimalPoint = 3)



## Deactivation of verification mode

Verification mode is deactivated in one of the following ways:

- Pressing verification button again.
- Writing integer '0' to parameter 320 (Calibration mode).

Verification mode automatically stops after 4 hours, unless manually deactivated.

## 8.7 Transport

### NOTICE

#### Transport with fitted battery

If the battery is still present in the device when transporting, it could become loose as a result of vibrations and cause damage within the device.

- Remove the batteries before returning the device.
- Dispose of the batteries according to regulations or include them separately in the return consignment.

## 8.8 Return procedure

Enclose the bill of lading, return document and decontamination certificate in a clear plastic pouch and attach it firmly to the outside of the packaging.

## Required forms

- Delivery note
- Return goods delivery note (<https://www.siemens.com/processinstrumentation/returngoodsnote>)  
with the following information:
  - Product (item description)
  - Number of returned devices/replacement parts
  - Reason for returning the item(s)
- Decontamination declaration (<https://www.siemens.com/sc/declarationofdecontamination>)  
With this declaration you warrant "that the device/replacement part has been carefully cleaned and is free of residues. The device/replacement part does not pose a hazard for humans and the environment."  
If the returned device/replacement part has come into contact with poisonous, corrosive, flammable or water-contaminating substances, you must thoroughly clean and decontaminate the device/replacement part before returning it in order to ensure that all hollow areas are free from hazardous substances. Check the item after it has been cleaned. Any devices/replacement parts returned without a decontamination declaration will be cleaned at your expense before further processing.

---

### Note

#### Return of products with lithium batteries

Lithium batteries are dangerous goods according to the Regulation of Dangerous Goods, UN 3090 and UN 3091.

- Remove lithium batteries prior to shipment.
  - If the battery cannot be removed, return the product according to the Regulation of Dangerous Goods with special transport documentation.
- 

## 8.9 Disposal



Devices described in this manual should be recycled. They may not be disposed of in the municipal waste disposal services according to the Directive 2012/19/EC on waste electronic and electrical equipment (WEEE).

Devices can be returned to the supplier within the EC, or to a locally approved disposal service for eco-friendly recycling. Observe the specific regulations valid in your country.

Further information about devices containing batteries can be found at: Information about battery / product return (WEEE) (<https://support.industry.siemens.com/cs/document/109479891/>)

### 8.9.1

#### Battery disposal



In accordance with EU directive 2006/66/EC, batteries are not to be disposed of via municipal waste disposal services.

Waste industrial batteries from our products are accepted back by Siemens and by the local Siemens representatives. Please follow the return procedures (Page 85) of Siemens or talk to your local Siemens partner (Page 163).



## Diagnostics and Troubleshooting

### 9.1 Fault codes

#### Error system

MAG 8000 can detect and report 14 different faults.

The faults are divided into two types: Fatal errors and Warnings.

**Fatal errors: Faults 1, 2, 3, and 4**

**Warnings: Faults 5, 6, 7, 8, 9, L, E, C, d, and 14**

Fault codes	Name/text	Description	Cause	Remedy
1	<b>Insulation fault</b>	"Cross-talk" between coil circuit and electrodes. An insulation fault will result in a offset error on flow measurement (Advanced version only)	<ul style="list-style-type: none"> <li>Defect cables between sensor and transmitter</li> <li>Wrong connections of remote cables</li> <li>Water between coils and electrodes – could be caused by a broken liner</li> <li>Pollution/moisture on PCB caused by water in encapsulation</li> </ul>	<p>Check cable and wiring installation and disturbing elements in the surrounding.</p> <p>Re-activation of insulation test (parameter 800) will reset alarm and start a new insulation test.</p> <p>During the 4 minute insulation test, measurement is disabled.</p> <p>Alarm remains active until a new test period detects no failures.</p>
2	<b>Coil current fault</b>	Error in the coil circuit. Coil current has not settled within specified period. A short-circuit in the coil can <b>NOT</b> be detected	<ul style="list-style-type: none"> <li>Coils have been disconnected could be caused by broken cable or wires</li> </ul>	<p>Check cable and wiring installation.</p> <p>Alarm remains active until the fault condition is corrected.</p>
3	<b>Amplifier overload</b>	Input signal is outside expected range. Input amplifier circuit can not provide a stable measurement. A short circuit between the two electrodes or between a electrode and common can <b>NOT</b> be detected	<ul style="list-style-type: none"> <li>Electrodes have been disconnected, or connected to ground</li> </ul>	<p>Check cable and wiring installation.</p> <p>Alarm remains active until the fault condition is corrected.</p>

9.1 Fault codes

Fault codes	Name/text	Description	Cause	Remedy
4	<b>Database checksum</b>	Corrupted data in eeprom detected by checksum test made during power-up	<ul style="list-style-type: none"> <li>Power failure during Eeprom write</li> </ul>	<ol style="list-style-type: none"> <li>Reset checksum repair alarm via parameter 560 and check data.                             <ul style="list-style-type: none"> <li>All data is checked after operation (e.g., new flow calculation, writing to the EEPROM, etc.) with a checksum control. If the checksum result fails, data will not be considered as valid and repair data must be made.</li> </ul> </li> <li>If data is wrong or checksum error reoccurs, replace the PCB board.</li> </ol> <p>The alarm is active until the fault condition is corrected.</p>
5	<b>Low Power Alarm</b>	Battery capacity is below preset threshold (default 10%). Power up (temporary warning – will disappear after 4 hours)	<ul style="list-style-type: none"> <li>Battery capacity low</li> <li>Meter has been powered up</li> </ul>	<p>Check calculated battery capacity (parameter 510) versus battery alarm limit (parameter 206) and replace batteries if necessary</p> <p>Flow measurement and communication stop, but display remains active as long as power is available.</p> <p>The alarm remains active until the fault condition is resolved.</p>
6	<b>Flow Overload</b>	Flow rate has exceeded 125% of Q3	<ul style="list-style-type: none"> <li>Wrong sizing – flow sensor too small</li> </ul>	<p>Check meter sizing for actual installation</p> <p>Alarm remains active until fault condition is resolved.</p>
7	<b>PulseA overload</b>	Duty cycle of output A has exceeded maximum possible of 50	<ul style="list-style-type: none"> <li>Wrong settings for output A</li> </ul>	<p>Change volume per pulse to a higher value - see Technical data (Page 100) for pulse selection.</p> <p>Reminder: basic version is limited to 50 Hz maximum; advanced version to 100 Hz maximum.</p> <p>The alarm remains active until output pulse rate drops below maximum pulse rate.</p>
8	<b>PulseB overload</b>	Duty cycle of output B has exceed maximum possible of 50	<ul style="list-style-type: none"> <li>Wrong settings for output B</li> </ul>	<p>Change volume per pulse to a higher value - see Technical data (Page 100) for pulse selection.</p> <p>Reminder: basic version is limited to 50 Hz maximum; advanced version to 100 Hz maximum.</p> <p>The alarm remains active until output pulse rate drops below maximum pulse rate.</p>
9	<b>Consumption Interval</b>	Accumulated volume on totalizer 1 during data log period has exceeded the too low or too high consumption limit	<ul style="list-style-type: none"> <li>Flowrate higher or lower than expected</li> <li>Wrong parameter setup</li> </ul>	<p>Check data logger values and consumption limit.</p> <p>Alarm remains active until it is manually reset via parameter 209.</p>

Fault codes	Name/text	Description	Cause	Remedy
L	Leakage	Lowest flow rate or volume during leakage period has exceeded leakage detection settings	<ul style="list-style-type: none"> <li>Leakage in water network</li> </ul>	<p>Check setting and pipe installation.</p> <p>Alarm is active until it is manually reset by parameter 208.</p> <p>Alarm reset resets information as does leakage period reset (parameter 820).</p>
E	Empty Pipe	Measured electrode impedance has exceeded the empty-pipe detection level (parameters 540, 541 and 334)	<ul style="list-style-type: none"> <li>Pipe is not filled with water</li> </ul>	<p>Ensure sensor is filled with water.</p> <p>Alarm remains active until fault condition is resolved.</p>
C	Low Impedance	Measured electrode impedance is below low impedance threshold (parameter 542), i.e. water has a high conductivity	<ul style="list-style-type: none"> <li>Water is polluted (e.g. saltwater in fresh water)</li> </ul>	<p>-</p> <p>Alarm is active until water resistance is above low media alarm limit.</p>
d	Flow Limit	The forward flow rate is greater than the high flow alarm limit (parameter 553).	<ul style="list-style-type: none"> <li>Water network failure – pipe burst</li> </ul>	<p>-</p> <p>Alarm remains active until flow rate drops below flow alarm limit.</p>
A	Reverse Flow Limit	Reverse flow rate is below a preset threshold (default -1E9)	<ul style="list-style-type: none"> <li>Water network failure – non-return valve is broken</li> </ul>	<p>-</p> <p>Alarm remains active until reverse flow rate drops below reverse flow alarm limit.</p>

### Note

Reset of fault log (parameter 204) also resets all alarms. Once reset, only active alarms become visible again.

## 9.2 Built-in functions

### Empty pipe detection

Electrode impedance is measured with 800 Hz at 50 Hz mains frequency (960 Hz at 60 Hz mains frequency). This is done by toggling the electrode control pin every 6 respectively 5 samples – the sample frequency is 9600 Hz. The impedance value is averaged over 100 measurements. The electrode impedance A and B are measured in turns.

The unfiltered impedance value (a fast warning indication) is compared with a limit and the empty pipe warning is reported when it exceeds this limit – but only if the detection is ON and if there is no overload failure.

During empty pipe detection the coil current is held OFF and the flow value is forced zero.

Default settings for Electrode Impedance Limit is 25 000 ohm corresponding to a water conductivity of 20  $\mu\text{S}/\text{cm}$  (10 000 ohm  $\approx$  50  $\mu\text{S}/\text{cm}$ )

## Insulation test

Insulation measurement is working like the normal measurement by excitation of the magnetic coils in the sensor. Value is checked against a limit of 1.25 mm/s. A value above this limit results in a failure report.

Measurement will NOT stop if an insulation fault occurs.

The last flow value is used for totalization during insulation test.

Insulation test interval according to register "Insulation Test Interval". Minimum 1 day between tests.

The insulation test can be enabled/disabled with register "Insulation Test".

When the insulation test is enabled the test starts immediately. All following insulation tests will start at 00:00:00 (midnight).

Duration of insulation test is 2 min 42 sec (1024 samples @ 6.25 Hz)

Insulation test will always be made with an excitation frequency of 6.25 Hz.

---

### Note

For firmware versions < 3.07: The insulation test cannot be enabled in the basic versions of MAG 8000 and MAG 8000 CT.

---

## Coil-current test

When H-bridge is turned and just before making samples (4 times each measurement), the coil current is checked via a comparator. If the coil current is not settled, a failure is reported.

During coil current failure the flow value is forced zero.

## Amplifier test

Overload is possible both from the AD conversion of sensor signal and from the pre-amplifier. These checks are made at each sample and if one of the sample fails with an overload, this measurement is cancelled and a failure is reported.

During overload detection the coil current is held OFF and the flow value is forced zero.

## Checking facilities

The MAG 8000 and MAG 8000 CT are equipped with checking facilities of types P, I, and N. (2.5.5 in OIML R49). The automatic checks are performed without operator intervention.

**Type P** permanent checking facilities are automatic checks performed constantly during meter operation. They include:

- Coil current test
- Amplifier test
- Empty pipe test



- Flow overload
- Pulse overload

**Type I** intermittent checking facilities are automatic checks performed at certain time intervals or per fixed number of measurements. They include:

- Checksum calculation (10 min. interval on totalizer checksum)
- Insulation test (minimum 24 hour interval)
- Battery capacity check (4 hours interval)

**Type N** non-automatic checking facilities are checks that are **not** performed automatically including all other diagnosis functions in the MAG 8000 and the MAG 8000 CT.

## 9.3 Flow simulation

MAG 8000 and MAG 8000 CT has a built-in flow simulator (parameters 551 and 552) to verify and adjust pulse output to any connected device or system.

 <b>WARNING</b>
--

<p><b>Totalized values are changed during simulation and actual flow is NOT measured.</b></p>
---

<p>Simulation will stop automatically in 4 hours.</p>
---

<p>For MAG 8000 CT flow simulation is forbidden.</p>
--



## Technical data

### 10.1 MAG 8000 water meter

#### Note

#### Further information

For further information, see certificates.

Meter		MAG 8000 Standard (7ME6810)	MAG 8000 CT (7ME6820)
Accuracy	Standard calibration	± 0.4% of rate ± 2 mm/s	-
	Extended calibration	± 0.2% of rate ± 2 mm/s	-
	OIML R49 (DN 50 to DN 600 (2" to 24"))	-	Class 1 and 2 with turn-down ratio up to Q3/Q1 = 400 at Q2/Q1 = 1.6
	MI-001 (DN 50 to DN 600 (2" to 24"))	-	-
	NMI 10	± 2.5% (Q1 ≤ Q ≤ Q4)	-
Media conductivity		Clean water > 20 µs/cm	
Temperature	Ambient	-20 to +60 °C (-4 to +140 °F)	-25 to +55 °C (-4 to +131 °F)
	Media	0 to 70 °C (32 to +158 °F)	0.1 to 50 °C (32 to +122 °F)
	Storage	-40 to +70 °C (-22 to +158 °F)	-40 to +70 °C (-22 to +158 °F)
Enclosure		IP68/NEMA 6P rating. Cable glands mounted requires Sylgard potting kit to remain IP68/NEMA 6P, otherwise IP67/NEMA 4 rating is obtained. Factory mounted cable provides IP68/NEMA 6P rating	
Approvals	Drinking water approvals	NSF 61 (cold water) USA WRAS (BS 6920 cold water) UK ACS Listed France DVGW W270 Germany Belgaqua (B) FM Fire Service (Class Number 1044)	NSF 61 (cold water) USA WRAS (BS 6920 cold water) UK ACS Listed France DVGW W270 Germany Belgaqua (B) FM Fire Service (Class Number 1044)
		Custody transfer approval	OIML R 49 NMI10 (Australia)

Technical data

10.2 Sensor

Meter	MAG 8000 Standard (7ME6810)	MAG 8000 CT (7ME6820)
Conformity	-	CEN EN 14154 ISO 4064
	PED	2014/68/EU
	EMC	EN 61326-1

For further features, see "Features" (Page 165).

## 10.2 Sensor

### Technical specifications

Sensor	MAG 8000 (7ME6810)	MAG 8000 CT (7ME6820)
Size, flange and pressure range	EN 1092-1 (DIN 2501)	DN 25 and DN 40: PN 40 DN 50 to 150: PN 16 DN 200 to 1200: PN 10 or PN 16
	ANSI 16.5 Class 150 lb	1" to 24": 20 bar (290 psi)
	AWWA C-207	28" to 48": PN 10
	AS 4087	DN 50 to 1200: PN 14
	AS 2091-1 Table D	-
	AS 2191 Table E	-
Max. excitation frequency Basic version	Battery-powered	1/15 Hz for sensor size DN 25 to 150 (1" to 6") 1/30 Hz for sensor size DN 200 to 600 (8" to 24") 1/60 Hz for sensor size DN 700 to 1200 (28" to 48")
	Mains-powered	6.25 Hz for sensor size DN 25 to 150 (1" to 6") 3.125 Hz for sensor size DN 200 to 600 (8" to 24") 1.5625 Hz for sensor size DN 700 to 1200 (28" to 48")

Sensor		MAG 8000 (7ME6810)	MAG 8000 CT (7ME6820)
Max. excitation frequency Advanced version	Battery-powered	1/15 Hz for sensor size DN 25 ... 150 (1" ... 6") adjustable up to 6.25 Hz 1/30 Hz for sensor size DN 200 ... 600 (8" ... 24") adjustable up to 3.125 Hz 1/60 Hz for sensor size DN 700 ... 1200 (28" ... 48") adjustable up to 1.5625 Hz	1/15 Hz for sensor size DN 50 ... 150 (2" ... 6") adjustable up to 6.25 Hz 1/30 Hz for sensor size DN 200 ... 600 (8" ... 24") adjustable up to 3.125 Hz
	Mains-powered	6.25 Hz for sensor size DN 25 ... 150 (1" ... 6") 3.125 Hz for sensor size DN 200 ... 600 (8" ... 24") 1.5625 Hz for sensor size DN 700 ... 1200 (28" ... 48")	6.25 Hz for sensor size DN 25 ... 150 (1" ... 6") 3.125 Hz for sensor size DN 200 ... 600 (8" ... 24")
Liner		EPDM	EPDM
Electrode and grounding		Hastelloy C276	Hastelloy C276

## 10.3 Transmitter

Transmitter	MAG 8000Standard (7ME6810)	MAG 8000 CT (7ME6820)
Installation	Integral (compact) or remote with factory-mounted cable in 5, 10, 20 or 30 m lengths with IP68/NEMA 6P connectors. Connection is made at the transmitter bottom.	
Material	Top housing	Stainless steel (AISI 316)
	Wall mounting bracket	Stainless steel (AISI 304).
Display and key	Display	8 digits for main information. Index, menu and status symbols for dedicated information
	Key	For toggling through information and resetting of customer totalizer and call-up function
	Menus	Selectable default information and accessible menus: - Operator - Meter - Service - Data Logger - Statistic (Advanced version only) - Revenue and Tariffs (Advanced version only)
Resolution	Totalized information can be displayed with 1, 2 or 3 decimals or automatic adjustment for maximum resolution	

Technical data

10.4 Power supply

Transmitter	MAG 8000Standard (7ME6810)	MAG 8000 CT (7ME6820)
Flow unit	Europe std.	Volume: m <sup>3</sup> Flow rate: m <sup>3</sup> /h
	US std.	Volume: Gallon Flow rate: GPM
	Australia std.	Volume: ML Flow rate: ML/d
Other selectable units	Volume: m <sup>3</sup> x 100, L x 100, G x 100, G x 1000, MG, CF x 100, CF x 1000, AF, AI, kL, BBL42 Flow rate: m <sup>3</sup> /min, m <sup>3</sup> /h, m <sup>3</sup> /d, L/s, L/min, L/h, ML/ d, GPS, GPH, GPD, MGD, GPM, CFS, CFM, CFH, BBL42/s, BBL42/ min, BBL42/h, BBL42/d Other units than m <sup>3</sup> and m <sup>3</sup> /h (ordered from factory or manually configured on-site by changing scaling factors) are shown by a label stuck onto display	-
Digital output	Nos.	2 passive outputs (MOS), individually galvanically isolated
	Load	Max. ± 35 V DC, 50 mA short circuit protected
	Output A	Programmable as: Pulse volume, Forward, Reverse, Forward/net, Reverse/net
	Output B	Programmable as: Pulse volume, Forward, Reverse, Forward/net, Reverse/net, Alarm, Call-up
	Pulse rate	Basic version: Max. 50 Hz Advanced version: Max. 100 Hz
	Pulse width	5, 10, 25, 50, 100, 500 ms
Communication	IrDA	Standard integrated infrared communication interface with MODBUS RTU protocol
	Add-on modules	RS 232 serial interface with MODBUS RTU (Rx/Tx/GND), point to point with max. 15 m cable RS 485 serial interface with MODBUS RTU (+/-/GND), multidrop with up to 32 devices with max. 1000 m cable Encoder interface module (for Itron 200WP) "Sensus protocol" 3G/UMTS module with or without analog input cable

## 10.4 Power supply

Power supply		
Battery power supply <sup>1)</sup>	Internal battery pack	1 D-Cell 3.6 V / 16 Ah
	Internal battery pack	2 D-Cell 3.6 V / 33 Ah
	External battery pack	4 D-Cell 3.6 V / 66 Ah

<b>Power supply</b>		
12-24 V AC/DC power supply	Input voltage range	12/24 V AC/DC (10 ... 32 V DC)
	Power consumption	2 VA
	Isolation	Class II
	Fuse	1000 mA T - Not replaceable
	Short circuit protection	Module is protected from short circuit on the output connector. Both during mains and backup supply
	Conformity	IEC 61010-1 OIML R 49-1 EMC: EN 61326-1
115 to 230 V AC mains supply	Input voltage range	115 to 230 V AC, +15% to -20%, 50-60 Hz
	Power consumption	2 VA
	Isolation	Class II
	Fuse	250 mA T - Not replaceable
	Short circuit protection	Module is protected from short circuit on the output connector. Both during mains and backup supply
	Conformity	IEC 61010-1 OIML R49-1 EMC: EN 61326-1
Input cable for 12/24 V AC/DC and 115 to 230 V AC power supply	Factory-mounted PUR cable	2 x 1 mm <sup>2</sup> (brown, blue) Length = 3 m
	Resistance	Sunlight and water
	Outer diameter	7 mm (0.28")
	Rated voltage	300 ... 500 V AC
	Testing voltage	2000 V AC
	Temperature range	Fixed laying: -40 to +90 °C (-40 to 194 °F) Flexible application: -30 to +80 °C (-22 to 176 °F)
	Bending radius	Min. 28 mm (fixed installation)
	Pulling force	Max. 200 N
	Output	Female connector
	Backup battery	Male connector

<sup>1)</sup> Lithium batteries are subject to special transportation regulations according to United Nations "Regulation of Dangerous Goods, UN 3090 and UN 3091". Special transport documentation is required to observe these regulations. This may influence both transport time and costs.

## 10.5 Modbus RTU

<b>Siemens Flow Instruments Modbus RTU specification for add-on modules</b>	
Device type	Slave
Baud rates	1200, 2400, 4800, 9600, 19 200, 38 400 bits/sec.
Number of stations	Recommended: max. 31 per segment without repeaters

<b>Siemens Flow Instruments Modbus RTU specification for add-on modules</b>	
Device address range	1 to 247
Protocol	RTU (Other Modbus protocols like ASCII, Plus or TCP/IP are not supported)
Electrical interface	RS 485, 2-wire and RS 232, 2-wire
Connector type	Screw terminals
Supported function codes	1: read coils 3: read holding registers 5: write single coil 16: write multiple registers 17: report slave ID
Broadcast	Yes
Maximum cable length	1200 meters (@38 400 bits/sec.)
Standard	Modbus over serial line v1.0
Certified	No
Device profile	None
Add-on modules comply with	MODBUS over serial line specification & implementation guide v. 1.0 modbus.org 12/02/02 MODBUS application protocol specification v. 1.1 modbus.org 12/06/02
Isolation	500 V AC functional isolation of data signals and common


Add-on modules must be connected to equipment complying with "Low Voltage Directive" in order to be considered safe. The isolation within the MAG 8000 and MAG 8000 CT add-on MODBUS module is only functional isolation.

## 10.6 Output characteristics

This chapter describes how the MAG 8000 and MAG 8000 CT outputs work.



**Output A and B as pulse volume**

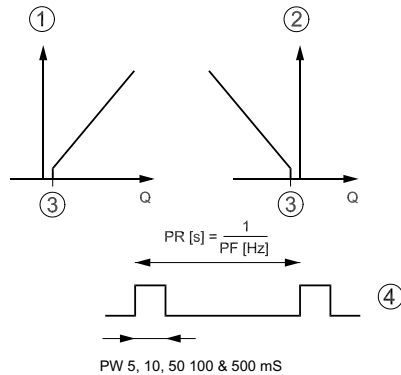

- |   |         |    |                 |
|---|---------|----|-----------------|
| ① | Forward | PR | Pulse rate      |
| ② | Reverse | PF | Pulse frequency |
| ③ | Cut-off | PW | Pulse width     |


**MAG 8000**

When output A or B is configured as volume per pulse, the output delivers a pulse when the preset volume based on either Forward/Reverse or Net Forward/Net Reverse flow has passed the sensor in the selected direction. The volume per pulse is freely scalable, from 0.000001 to 10 000 units per pulse, and should not exceed the pulse rate of the output configuration table.

**MAG 8000 CT**

The volume per pulse is defined in the MAG 8000 CT version to 0.001 or 0.01 or 0.1 or 1 m<sup>3</sup> per pulse.

**Output B as alarm output**

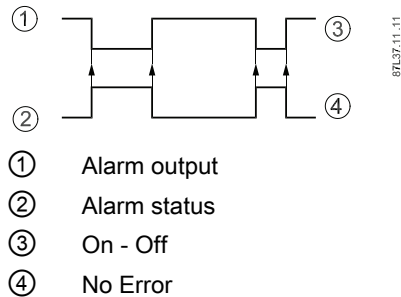


**MAG 8000**

When output B is configured as an "alarm" output, it will follow the internal alarms that were previously chosen in the Alarm Configuration List (Page 54).

**Note**

Alarm output is inverted to a pulse output providing an alarm if power disappears or cable connection is interrupted.

**Output B as call-up output**

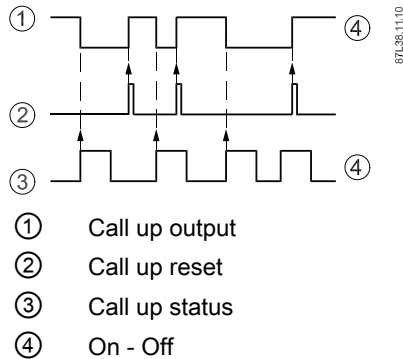

When output B is configured as "call-up", the output is activated by an alarm condition and remains on until it is reset via meter display key or communication interface.

A new alarm will not activate a "call-up" function if the "call-up" function is still active from a previous alarm.

**Note**

Like alarm output, call-up output inverts to a pulse output providing a call-up if power disappears or cable connection is interrupted.

**MAG 8000**

When output B is configured as an "call-up" output, it will follow the internal alarms that were previously chosen in the Alarm Configuration List.

**Note**

Call-up output is inverted to a pulse output providing an alarm if power disappears or cable connection is interrupted.

**Regional factory default settings**

DN mm	size (inch)	Pulse width ms	Amount per pulse m <sup>3</sup> (Europe)	Amount per pulse Gallons (USA)	Amount per pulse ML (Australia)
25, 40, 50	(1", 1½", 2")	50	0.01	1	0.001
65, 80, 100, 125, 150	(2½", 3", 4", 5", 6")	50	0.1	10	0.001
200, 250, 300, 350, 400, 450, 500	(8", 10", 12", 14", 16", 18", 20")	50	1	100	0.01
600, 700, 800, 900, 1000, 1050, 1100, 1200	(24", 28", 30", 32", 36", 40", 42", 44", 48")	50	10	100	0.01

Pulse A is set to ON - Forward flow. Pulse B is set to Alarm.

**Note**

Via the MLFB order system it is possible to select other units than the default region units. The pulse output will only be enabled if the pulse settings are selected in the MLFB no.

**Pulse output, volume selection (MAG 8000)**

DN (inches)	Max. flow rate Qn (Q3)	Guidelines for min. volume per pulse at Qn Volume [m³] = Qn [m³/s] * (2*PW [s])						
		5 ms PW m³ [100Hz]	10 ms PW m³ [50Hz]	50 ms PW m³ [10Hz]	50 ms PW gallon [10Hz]	50 ms PW ML [10Hz]	100 ms PW m³ [5Hz]	500 ms PW m³ [1Hz]
25 (1")	17.67	0.00005	0.0001	0.0005	0.130	0.000001	0.001	0.005
40 (1½")	45	0.0001	0.0003	0.001	0.330	0.000001	0.003	0.013
50 (2")	63	0.0002	0.0004	0.002	0.462	0.000002	0.004	0.018
65 (2½")	100	0.0003	0.0006	0.003	0.734	0.000003	0.006	0.028
80 (3")	160	0.0004	0.0009	0.004	1.174	0.000004	0.009	0.044
100 (4")	250	0.0007	0.0014	0.007	1.835	0.000007	0.014	0.069
125 (5")	400	0.0011	0.0022	0.011	2.935	0.000011	0.022	0.111
150 (6")	630	0.0018	0.0035	0.018	4.623	0.000018	0.035	0.175
200 (8")	1000	0.0028	0.0056	0.028	7.338	0.000028	0.056	0.278
250 (10")	1600	0.0044	0.0089	0.044	11.741	0.000044	0.089	0.444
300 (12")	2500	0.0069	0.0139	0.069	18.345	0.000069	0.139	0.694
350 (14")	3463	0.0096	0.0192	0.096	25.412	0.000096	0.192	0.962
400 (16")	4523	0.0126	0.0251	0.126	33.190	0.000126	0.251	1.256
450 (18")	5725	0.0159	0.0318	0.159	42.010	0.000159	0.318	1.590
500 (22")	7068	0.0196	0.0393	0.196	51.865	0.000196	0.393	1.963
600 (24")	10178	0.0283	0.0565	0.283	74.687	0.000283	0.565	2.827
700 (28")	13854	0.0385	0.0770	0.385	101.662	0.000385	0.770	3.848
750 (30")	15904	0.0442	0.0884	0.442	116.705	0.000442	0.884	4.418
800 (32")	18095	0.0503	0.1005	0.503	132.782	0.000503	1.005	5.026
900 (36")	22902	0.0636	0.1272	0.636	168.057	0.000636	1.272	6.362
1000 (40")	28274	0.0785	0.1571	0.785	207.477	0.000785	1.571	7.854
1050 (42")	31175	0.0866	0.1732	0.866	228.750	0.000866	1.732	8.659
1100 (44")	34211	0.0950	0.1901	0.950	251.043	0.000950	1.901	9.503
1200 (48")	40715	0.1131	0.2262	1.131	298.770	0.001131	2.262	11.310

10.6 Output characteristics

PW = pulse width

**Note**

The calculated numbers of pulses are an average of the measuring period.

 
 
 
The factory value of pulse width shall be 10ms by if Z option L70-L74 for pulse A or L90-L94 for pulse B selected.


For MAG 8000 CT please see definition of Q3 flow rates in the certificates for OIML R 49 or MI 001.

**Net flow output**

The MAG 8000 has a special net pulse output that includes bi-directional flow calculations.

The example shows that over time, the net pulse output indicates the bi-directional totalizer as calculated internally. The same principle applies for forward and reverse flow calculation. By changing the status of the pulse output, the internal pulse calculator will be reset.

Flow	Net totalizer in meter display (Bi-directional)	Pulse output forward Uni-directional mode Volume [m³]		Pulse output net forward Bi-directional mode Volume [m³]	
	Volume [m³]	Internal calculation	Delivered volume	Internal calculation	Delivered volume
	0	-	0	0	0
	10	-	10	0	10
	-2	-	0	-12	0

 Flow	Net totalizer in meter display (Bi-directional)	Pulse output forward Uni-directional mode Volume [m <sup>3</sup> ]		Pulse output net forward Bi-directional mode Volume [m <sup>3</sup> ]	
	Volume [m <sup>3</sup> ]	Internal calculation	Delivered volume	Internal calculation	Delivered volume
	18	-	20	-12+20=	8
	Total accounted volume [m <sup>3</sup> ] Forward/Reverse	18F		30F	

### Encoder output interface read out

			MSD LSD									
Digits in MAG 8000 display			1	2	3	4	5	6	7	8		
Model	Size	Unit	Display configuration								Q <sub>3</sub>	Digits after dec. point
7ME 6820 2Y	DN50 (2")	m <sup>3</sup>	0	0	0	0	0	0	0	0	63	1
7ME 6820 3F	DN65 (2½")	m <sup>3</sup>	0	0	0	0	0	0	0	0	100	1
7ME 6820 3M	DN80 (3")	m <sup>3</sup>	0	0	0	0	0	0	0	0	160	1
7ME 6820 3T	DN100 (4")	m <sup>3</sup>	0	0	0	0	0	0	0	0	250	1
7ME 6820 4B	DN125 (5")	m <sup>3</sup>	0	0	0	0	0	0	0	0	400	1
7ME 6820 4H	DN150 (6")	m <sup>3</sup>	0	0	0	0	0	0	0	0	630	1
7ME 6820 4P	DN200 (8")	m <sup>3</sup>	0	0	0	0	0	0	0	0	1000	1
7ME 6820 4V	DN250 (10")	m <sup>3</sup>	0	0	0	0	0	0	0	0	1600	1
7ME 6820 5D	DN300 (12")	m <sup>3</sup>	0	0	0	0	0	0	0	0	1600	1

Parameter 305 Decimal Point should be configured to "1 digit after decimal point" in case Encoder interface module is selected in MAG 8000 or MAG 8000 CT; otherwise proper reading from the device cannot be performed.

## 10.7 Meter uncertainty

To ensure continuous accurate measurement, water meters must be calibrated. The calibration is conducted at Siemens flow facilities with traceable instruments referring directly to the physical unit of measurement according to the International System of Units (SI).


Therefore, the calibration certificate ensures recognition of the test results worldwide, including the US (NIST traceability).

10.7 Meter uncertainty

Siemens offers accredited calibrations assured to ISO 17025 in the flow range from 0.0001 m<sup>3</sup>/h to 10 000 m<sup>3</sup>/h.

Siemens Flow Instruments accredited laboratories are recognized by ILAC MRA (International Laboratory Accreditation Corporation- Mutual Recognition Arrangement) ensuring international traceability and recognition of the test results worldwide.

The selected calibration determines the accuracy of the water meter. An extended calibration of the MAG 8000 (7ME6810) sizes DN50 (2") to DN 300 (12") results in a max. ±0.2% of rate ±2 mm/s uncertainty. A calibration certificate is included with every sensor and calibration data is stored within the meter.

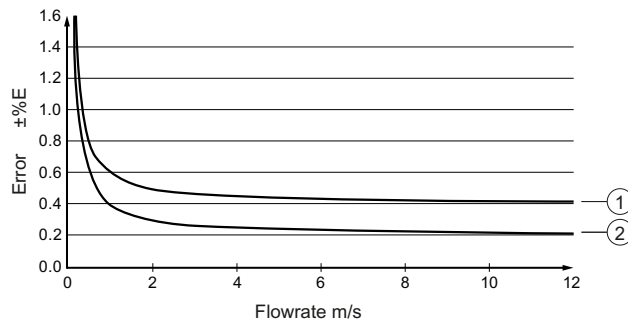

- ① MAG 8000 Standard Standard calibration ±0.4 % of rate ±2 mm/s
- ② MAG 8000 Standard Extended calibration ±0.2 % of rate ±2 mm/s

Calibration references conditions (ISO 9104 and DIN EN 29104)

Media temperature: 20°C ± 5K (68°F ± 9°F)

Ambient temperature: 20°C ± 5K (68°F ± 9°F)

Warming-up time: 30 min.

Incorporation in pipe section


Inlet section: 10 x DN

Outlet section: 5 x DN

Flow conditions: Fully developed flow profile

## 10.8 FM Fire Service applications (MAG 8000 and MAG 8000 CT)


Devices ordered with Z-option P20, P21 or P22 are FM Fire Service approved for automatic fire protection systems according to the Fire Service Meters Standard, Class Number 1044. The approval is applicable for the sizes DN 50, DN 80, DN 100, DN 150, DN 200, DN 250, and DN 300 (2", 3", 4", 6", 8", 10", and 12") with ANSI B16.5 Class 150 flanges.

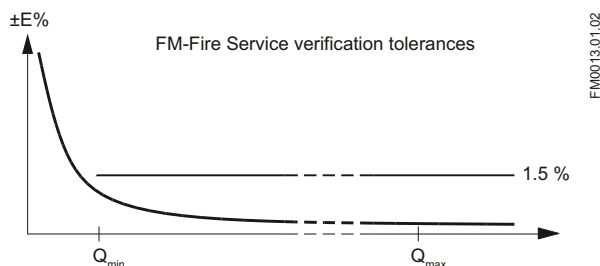

## 10.9 MAG 8000 CT (7ME6820) (Revenue program) water meter type approval

MAG 8000 CT program is type-approved according to international water meter standard OIML R49. The Custody Transfer program is approved as Class I and Class II, for the sensor program from DN 50 to DN 300, at different Q3 and Q3/Q1.

Q2/Q1 = 1.6 and follows standard OIML R49 specification.

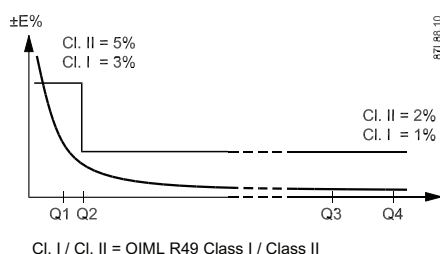

OIML R49 specification for Class I

Size	50 (2")	65 (2½")	80 (3")	100 (4")	125 (5")	150 (6")	200 (8")	250 (10")	300 (12")
"R" Q <sup>3</sup> /Q1	250	250	250	250	250	250	250	250	125
Q4 [m <sup>3</sup> /h]	78.75	125	200	312.5	500	787.5	1250	2000	2000
<b>Q3 [m<sup>3</sup>/h]</b>	<b>63</b>	<b>100</b>	<b>160</b>	<b>250</b>	<b>400</b>	<b>630</b>	<b>1000</b>	<b>1600</b>	<b>1600</b>
Q2 [m <sup>3</sup> /h]	0.4	0.64	1	1.6	2.5	4	6.4	10	20.48
Q1 [m <sup>3</sup> /h]	0.25	0.4	0.63	1	1.6	2.5	4	6.4	12.8

OIML R49 specification for Class II

Size	50 (2")	65 (2½")	80 (3")	100 (4")	125 (5")	150 (6")	200 (8")	250 (10")	300 (12")
"R" Q <sup>3</sup> /Q1	400	400	400	400	400	400	400	400	200
Q4 [m <sup>3</sup> /h]	78.75	125	200	312.5	500	787.5	1250	2000	2000
<b>Q3 [m<sup>3</sup>/h]</b>	<b>63</b>	<b>100</b>	<b>160</b>	<b>250</b>	<b>400</b>	<b>630</b>	<b>1000</b>	<b>1600</b>	<b>1600</b>

10.10 MAG 8000 CT (7ME6820) (Revenue program) MID option (MI-001)

Size	50 (2")	65 (2½")	80 (3")	100 (4")	125 (5")	150 (6")	200 (8")	250 (10")	300 (12")
Q2 [m³/h]	0.25	0.4	0.63	1	1.6	2.5	4	6.4	16
Q1 [m³/h]	0.16	0.25	0.4	0.63	1	1.6	2.5	4	10

### 10.10 MAG 8000 CT (7ME6820) (Revenue program) MID option (MI-001)


MAG 8000 CT program is type approved according to international water meter standard OIML R49. Since 1 November 2006 the MI-001 water meter directive has been in force, which means that all water meters can be sold across the EU borders if the water meters contain a MI-001 label.

The MAG 8000 CT MI-001 verified and labeled products are a Class II approval according to Directive 2014/32/EU of the European Parliament and Council of February 26, 2014 on measuring instruments (MID), Annex MI-001 in the sizes from DN 50 to DN 600.

The MID certification is obtained as a module B and module D approvals according to the above mentioned directive.

Module B : Type approval according to OIML R49

Module D : Quality insurance approval of production

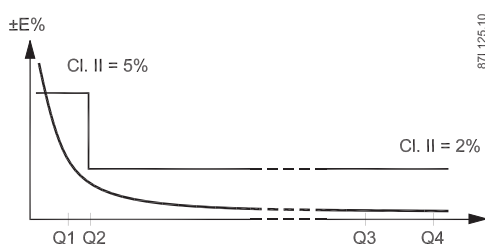

MAG 8000 CT MI-001 verified and labelled products at a given Q3 and Q4/Q3 = 1.25 and Q2/Q1 = 1.6 measuring ranges se below table:

Size	50 (2")	65 (2½")	80 (3")	100 (4")	125 (5")	150 (6")	200 (8")	250 (10")	300 (12")	350 (14")	400 (16")	450 (18")	500 (20")	600 (24")
"R" Q³/Q1	25	25	25	25	25	25	25	25	25	25	25	25	25	25
Q4 [m³/h]	20	31.25	50	78.75	125	200	312.5	500	787.5	787.5	1250	1250	2000	2000
<b>Q3 [m³/h]</b>	<b>16</b>	<b>25</b>	<b>40</b>	<b>63</b>	<b>100</b>	<b>160</b>	<b>250</b>	<b>400</b>	<b>630</b>	<b>630</b>	<b>1000</b>	<b>1000</b>	<b>1600</b>	<b>1600</b>
Q2 [m³/h]	0.96	1.6	2.6	4.03	6.4	10.24	16	25.6	40.3	40.3	64	64	102.4	102.4
Q1 [m³/h]	0.6	1	1.6	2.52	4	6.4	10	16	25.2	25.2	40	40	64	64

Size	50 (2")	65 (2½")	80 (3")	100 (4")	125 (5")	150 (6")	200 (8")	250 (10")	300 (12")	350 (14")	400 (16")	450 (18")	500 (20")	600 (24")
"R" Q³/Q1	63	63	63	63	63	63	63	63	63	63	63	63	63	63
Q4 [m³/h]	20	31.25	50	78.75	125	200	312.5	500	787.5	1250	1250	3125	3125	5000
<b>Q3 [m³/h]</b>	<b>16</b>	<b>25</b>	<b>40</b>	<b>63</b>	<b>100</b>	<b>160</b>	<b>250</b>	<b>400</b>	<b>630</b>	<b>1000</b>	<b>1000</b>	<b>2500</b>	<b>2500</b>	<b>4000</b>
Q2 [m³/h]	0.41	0.63	1.02	1.6	2.54	4.06	6.35	10.16	16	25.4	25.4	63.49	63.49	101.6
Q1 [m³/h]	0.25	0.4	0.63	1	1.59	2.54	3.97	6.35	10	15.9	15.9	39.68	39.68	63.49



10.10 MAG 8000 CT (7ME6820) (Revenue program) MID option (MI-001)

Size	50 (2")	65 (2½")	80 (3")	100 (4")	125 (5")	150 (6")	200 (8")	250 (10")	300 (12")	350 (14")	400 (16")	450 (18")	500 (20")	600 (24")
"R" Q <sup>3</sup> /Q1	80	80	80	80	80	80	80	80	80	80	80	80	80	80
Q4 [m <sup>3</sup> /h]	20	31.25	50	78.75	125	200	312.5	500	1250	2000	2000	5000	5000	7875
<b>Q3 [m<sup>3</sup>/h]</b>	<b>16</b>	<b>25</b>	<b>40</b>	<b>63</b>	<b>100</b>	<b>160</b>	<b>250</b>	<b>400</b>	<b>1000</b>	<b>1600</b>	<b>1600</b>	<b>4000</b>	<b>4000</b>	<b>6300</b>
Q2 [m <sup>3</sup> /h]	0.32	0.5	0.8	1.2	2	3.2	5	8	20	32	32	80	80	126
Q1 [m <sup>3</sup> /h]	0.2	0.31	0.5	0.75	1.25	2	3.13	5	12.5	20	20	50	50	78.75

Size	50 (2")	65 (2½")	80 (3")	100 (4")	125 (5")	150 (6")	200 (8")	250 (10")	300 (12")	350 (14")	400 (16")	450 (18")	500 (20")	600 (24")
"R" Q <sup>3</sup> /Q1	160	160	160	160	160	160	160	160	160	160	160	160	160	-
Q4 [m <sup>3</sup> /h]	50	78.75	125	200	312.5	500	787.5	1250	2000	2000	2000	7875	7875	-
<b>Q3 [m<sup>3</sup>/h]</b>	<b>40</b>	<b>63</b>	<b>100</b>	<b>160</b>	<b>250</b>	<b>400</b>	<b>630</b>	<b>1000</b>	<b>1600</b>	<b>1600</b>	<b>1600</b>	<b>6300</b>	<b>6300</b>	-
Q2 [m <sup>3</sup> /h]	0.4	0.63	1	1.6	2.5	4	6.3	10	16	16	16	63	63	-
Q1 [m <sup>3</sup> /h]	0.25	0.39	0.63	1	1.56	2.5	3.94	6.25	10	10	10	39	39	-

Size	50 (2")	65 (2½")	80 (3")	100 (4")	125 (5")	150 (6")	200 (8")	250 (10")	300 (12")	350 (14")	400 (16")	450 (18")	500 (20")	600 (24")
"R" Q <sup>3</sup> /Q1	200	200	200	200	200	200	200	200	200	-	-	-	-	-
Q4 [m <sup>3</sup> /h]	50	78.75	125	200	312.5	500	787.5	1250	2000	-	-	-	-	-
<b>Q3 [m<sup>3</sup>/h]</b>	<b>40</b>	<b>63</b>	<b>100</b>	<b>160</b>	<b>250</b>	<b>400</b>	<b>630</b>	<b>1000</b>	<b>1600</b>	-	-	-	-	-
Q2 [m <sup>3</sup> /h]	0.32	0.5	0.8	1.28	2	3.2	5.04	8	12.8	-	-	-	-	-
Q1 [m <sup>3</sup> /h]	0.2	0.32	0.5	0.8	1.25	2	3.15	5	8	-	-	-	-	-

Size	50 (2")	65 (2½")	80 (3")	100 (4")	125 (5")	150 (6")	200 (8")	250 (10")	300 (12")	350 (14")	400 (16")	450 (18")	500 (20")	600 (24")
"R" Q <sup>3</sup> /Q1	250	250	250	250	250	250	250	250	-	-	-	-	-	-
Q4 [m <sup>3</sup> /h]	50	78.75	125	200	312.5	500	787.5	1250	-	-	-	-	-	-
<b>Q3 [m<sup>3</sup>/h]</b>	<b>40</b>	<b>63</b>	<b>100</b>	<b>160</b>	<b>250</b>	<b>400</b>	<b>630</b>	<b>1000</b>	-	-	-	-	-	-
Q2 [m <sup>3</sup> /h]	0.26	0.4	0.64	1	1.6	2.56	4	6.4	-	-	-	-	-	-
Q1 [m <sup>3</sup> /h]	0.16	0.25	0.4	0.64	1	1.6	2.52	4	-	-	-	-	-	-


## 10.11 The effect of temperature MAG 8000 (7ME6810) and MAG 8000 CT (7ME6820)

Metric (Pressures in bar)					
Flange spec.	Flange rating	Temperature °C			
		0	10	50	70
<b>Sizes 25 mm, 40 mm and &gt; 300 mm</b>					
EN 1092-1	PN 10	10.0	10.0	9.7	9.4
	PN 16	16.0	16.0	15.5	15.1
	PN 40	40.0	40.0	38.7	37.7
ANSI 16.5	150 lb	19.7	19.7	19.3	18.0
<b>Sizes 50 mm to 300 mm</b>					
EN 1092-1	PN 10	10.0	10.0	10.0	8.2
	PN 16	10.0	16.0	16.0	13.2
ANSI 16.5	150 lb	10.0	19.7	19.7	16.2

Imperial (Pressures in Psi)					
Flange spec.	Flange rating	Temperature °F			
		32	50	122	158
<b>Sizes 1", 1½", and &gt; 12"</b>					
EN 1092-1	PN 10	145	145	141	136
	PN 16	232	232	225	219
	PN 40	580	580	561	547
ANSI 16.5	150 lb	286	286	280	261
<b>Sizes 2" to 12"</b>					
EN 1092-1	PN 10	145	145	145	119
	PN 16	145	232	232	191
ANSI 16.5	150 lb	145	286	286	235

## 10.12 Dimensions and drawings

### Meter dimensions

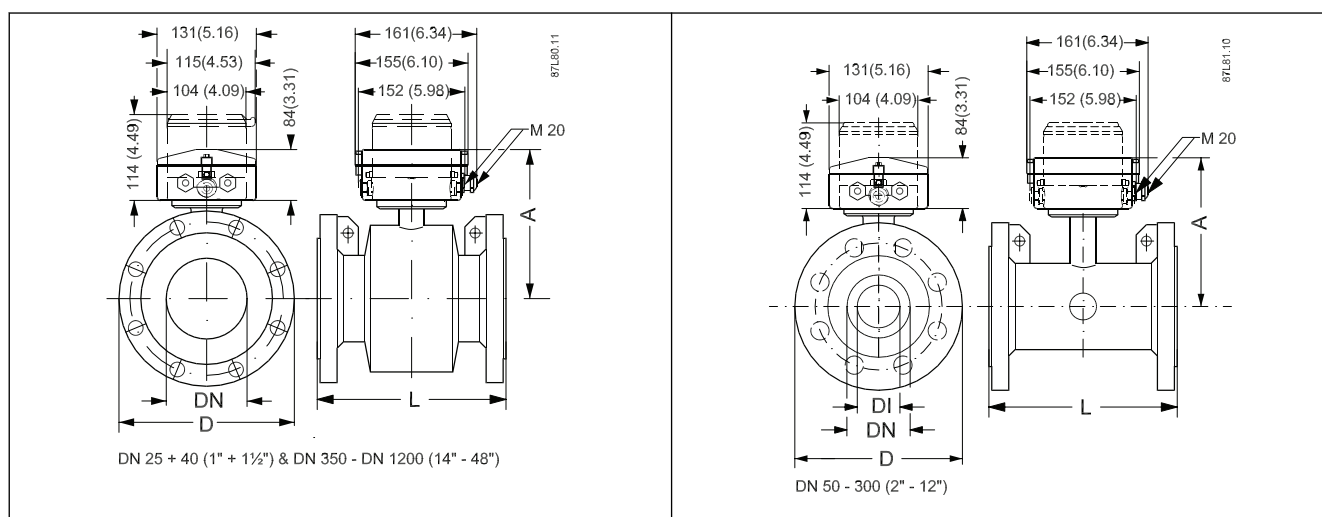

Dimensions for MAG 8000 Standard (7ME6810) and MAG 8000 CT (7ME6820).

Nominal size DN	A	L, length								D, diameter		Weight 1)		
		EN 1092-1			ANSI 16.5 Cl.150	AS 4087 PN 16	AS 2129 Table E	AWWA		DI	D	AS 4087 PN 16	kg	lbs
		PN 10	PN 16	PN 40				mm	inch					
mm (inch)	mm (inch)	mm	mm	m m	inch	mm	mm	mm	inch	mm (inch)		kg	lbs	
25 (1")	194 (7.7")	-	-	20 0	7.9"	200	200	N/A	N/A	25 (0.98")	<sup>2)</sup>	6	13	
40 (1½")	204 (8.1")	-	-	20 0	7.9"	200	200	N/A	N/A	40 (1.57")	<sup>2)</sup>	9	20	
50 (2")	195 (7.7")	-	200	-	7.9"	200	-	N/A	N/A	42 (1.65")	<sup>2)</sup>	11	25	
65 (2½")	201 (8")	-	200	-	7.9"	200	-	N/A	N/A	55 (2.17")	<sup>2)</sup>	13	29	
80 (3")	207 (8.2")	-	200	-	7.9"	200	-	N/A	N/A	67 (2.64")	<sup>2)</sup>	15	34	
100 (4")	214 (8.5")	-	250	-	9.8"	250	-	N/A	N/A	81 (3.19")	<sup>2)</sup>	17	38	
125 (5")	224 (8.9")	-	250	-	9.8"	250	250	N/A	N/A	101 (3.98")	<sup>2)</sup>	22	50	
150 (6")	239 (9.5")	-	300	-	11.8"	300	-	N/A	N/A	131 (5.16")	<sup>2)</sup>	28	63	
200 (8")	264 (10.5")	350	350	-	13.8"	350	-	N/A	N/A	169 (6.65")	<sup>2)</sup>	50	113	
250 (10")	291 (11.5")	450	450	-	17.7"	450	-	N/A	N/A	212 (8.35")	<sup>2)</sup>	71	160	
300 (12")	317 (12.6")	500	500	-	19.7"	500	-	N/A	N/A	265 (10.43")	<sup>2)</sup>	88	198	
350 (14")	369 (14.6")	550	550	-	21.7"	550	-	N/A	N/A	350 (13.78")	<sup>2)</sup>	127	279	

Nominal size DN	A	L, length								D, diameter		Weight 1)		
		EN 1092-1			ANSI 16.5 Cl.150	AS 4087 PN 16	AS 2129 Table E	AWWA		DI	D	AS 4087 PN 16	kg	lbs
		PN 10	PN 16	PN 40				mm	inch					
mm (inch)	mm (inch)	mm	mm	mm	inch	mm	mm	mm	inch	mm (inch)		kg	lbs	
400 (16")	394 (15.6")	600	600	-	23.6"	600	-	N/A	N/A	400 (15.75")	<sup>2)</sup>	145	318	
450 (18")	425 (16.8")	600	600	-	23.6"	600	-	N/A	N/A	450 (17.72")	<sup>2)</sup>	175	394	
500 (20")	450 (17.8")	600	600	-	23.6"	600	-	N/A	N/A	500 (19.68")	<sup>2)</sup>	225	494	
600 (24")	501 (19.8")	600	600	-	23.6"	600	-	N/A	N/A	600 (23.62")	<sup>2)</sup>	340	747	
700 (28")	544 (21.4")	700	875	-	N/A	700	-	700	27.6 "	700 (27.55")	<sup>2)</sup>	316	694	
750 (30")	571 (22.5")	N/A	N/A	-	N/A	N/A	-	750	29.5 "	750 (29.52")	<sup>2)</sup>	N/A	N/A	
800 (32")	606 (23.9")	800	1000	-	N/A	800	-	800	31.5 "	800 (31.49")	<sup>2)</sup>	398	1045	
900 (36")	653 (25.7")	900	1125	-	N/A	900	-	900	35.4 "	900 (35.42")	<sup>2)</sup>	476	1045	
1000 (40")	704 (27.7")	1000	1250	-	N/A	1000	-	1000	39.4 "	1000 (39.36")	<sup>2)</sup>	602	1322	
1050 (42")	704 (27.7")	N/A	N/A	-	N/A	N/A	-	1050	41.3 "	1050 (41.33")	<sup>2)</sup>	N/A	N/A	
1100 (44")	755 (29.7")	N/A	N/A	-	N/A	N/A	-	1100	43.3 "	1100 (43.30")	<sup>2)</sup>	N/A	N/A	
1200 (48")	810 (31.9")	1200	1500	-	N/A	1200	-	1200	47.2 "	1200 (47.23")	<sup>2)</sup>	887	1996	

- 1) For remote version the sensor weight is reduced with 2 kg (4.5 lb)
- 2) See flange table (Page 111)

Remote version


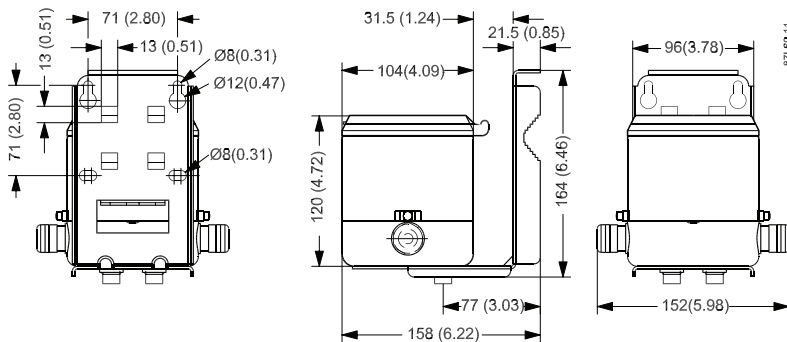


Figure 10-1 Dimensions in mm (inch), weight 3.5 kg (8 lbs)

### Flange dimensions

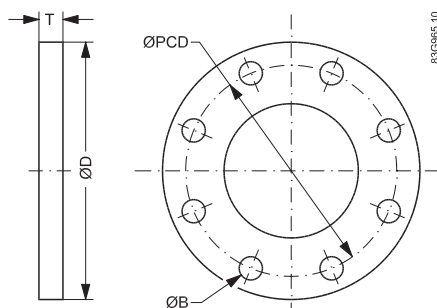

#### MAG 8000 (7ME8610) and MAG 8000 CT (7ME6820)

Dimensions mm					Bolting	
Size	D	PCD	T	B	Holes	Bolts
<b>PN 10</b>						
200	340	295	24	22	8	M20
250	395	350	26	22	12	M20
300	445	400	26	22	12	M20
350	505	460	28	22	16	M20
400	565	515	32	26	16	M24
450	615	565	36	26	20	M24
500	670	620	38	26	20	M24
600	780	725	42	30	20	M27
700	895	840	-	30	24	M27
750	-	-	-	-	-	-
800	1015	950	-	33	24	M30
900	1115	1050	-	33	28	M30
1000	1230	1160	-	36	28	M33
1050	-	-	-	-	-	-
1100	-	-	-	-	-	-
1200	1455	1380	-	-39	32	M36
<b>PN 16</b>						
50	165	125	19	18	4	M16
65	185	145	20	18	8	M16
80	200	160	20	18	8	M16
100	220	180	22	18	8	M16
125	250	210	22	18	8	M16
150	285	240	24	22	8	M20
200	340	295	26	22	12	M20
250	405	355	29	26	12	M24
300	460	410	32	26	12	M24
350	520	470	35	26	16	M24
400	580	525	38	30	16	M27


10.12 Dimensions and drawings

Dimensions mm					Bolting	
Size	D	PCD	T	B	Holes	Bolts
450	640	585	42	30	20	M27
500	715	650	46	33	20	M30
600	840	770	52	36	20	M33
750						
800	1015	950	-	33	24	M30
900	1125	1050	-	39	28	M36
1000	1255	1170	-	42	28	M39
1050	-	-	-	-	-	-
1100	-	-	-	-	-	-
1200	1485	1390	-	48	32	M45
<b>PN 40</b>						
25	115	85	16	14	4	M12
40	150	110	18	18	4	M16

**MAG 8000 (7ME8610) and MAG 8000 (7ME6820)**

Dimensions Inches					Bolting	
Size	D	PCD	T	B	Holes	Bolts
<b>ANSI Class 150</b>						
1"	4.25	3.12	0.56	0.62	4	9/16"
1 ½"	5	3.88	0.68	0.62	4	9/16"
2"	6	4.75	0.75	0.75	4	5/8"
2 ½"	7	5.5	0.88	0.75	4	5/8"
3"	7.5	6	0.94	0.75	4	5/8"
4"	9	7.5	0.94	0.75	8	5/8"
5"	10	8.5	0.94	0.88	8	3/4"
6"	11	9.5	1	0.88	8	3/4"
8"	13.5	11.75	1.12	0.88	8	3/4"
10"	16	14.25	1.19	1.00	12	7/8"
12"	19	17	1.25	1.00	12	7/8"
14"	21	18.75	1.38	1.12	12	1"
16"	23.5	21.25	1.44	1.12	16	1"
18"	25	22.75	1.56	1.25	16	1 1/8"
20"	27.5	25	1.69	1.25	20	1 1/8"
24"	32	29.5	1.88	1.38	20	1 1/4"

## External battery pack and cable

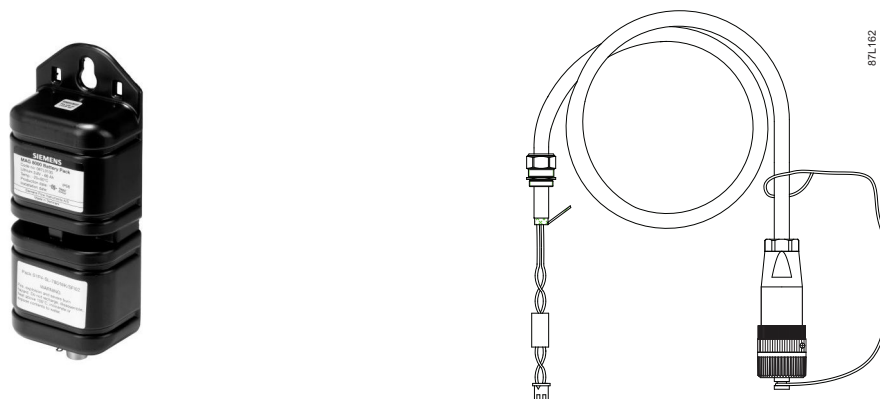

### Note

Physical orientation of battery pack may influence battery capacity.

Optimal battery capacity is achieved with battery pack in an upright position as shown.

The cable for the battery pack connection must be ordered separately.

For information about battery disposal, see Battery disposal (Page 87).

## Grounding rings

### Sizes DN 25 to 300 (7ME6810 and 7ME6820)

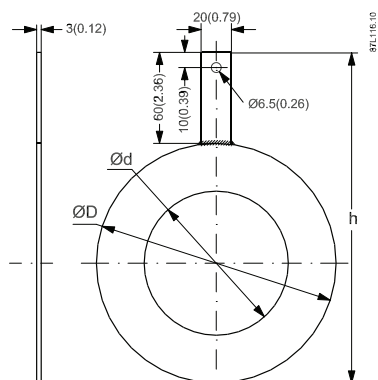


Figure 10-2 Flat ring

Sizes DN 350 to 600 (7ME6810 and 7ME6820) and DN 700 to 1200 (7ME6810)

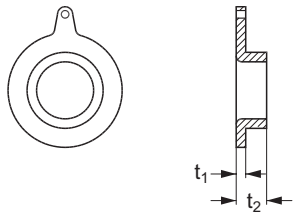


Figure 10-3 Type C grounding ring



## Spare parts/Accessories

### A.1 Ordering of spare parts

Ensure that your ordering data is not outdated. The latest ordering data is always available on the Internet: SIOS catalog (<https://support.industry.siemens.com/cs/products?dtp=Catalog&mfn=ps&pnid=17318&lc=en-US>)



## Flow Tool

### B.1 Flow Tool

#### Condition

In order to commission the water meter, it is necessary to install the Flow Tool program/software on your computer and connect the IrDA communication adaptor in the built-in IrDA communication interface on transmitter. The Flow Tool software is compatible with Windows 2000, Windows XP, and Windows 7 32/64 bit.

Read Flow Tool FAQ and Release Note installed with the Flow Tool software.

Go to Siemens Industry Online Support (<https://support.industry.siemens.com/cs/products?dtp=Download&mfn=ps&pnid=17328&lc=en-US>) to download the latest version of the Flow Tool.

#### Device driver

The Device Drivers are related to meter version and is automatically selected in "Automatic" mode. In "Manual" mode, meter version is manually selected and version check is automatically made when data is uploaded or downloaded.

#### Data backup

Meter information is stored in an internal data prom that secures data in case of power failure.

Information like totalizer 1 and 2, date and time, and the statistic data in Advanced version is stored every 10 minutes. Every 4 hours battery consumption is calculated and remaining battery capacity is updated together with "operation time since first power up" and "battery operation time".

### B.2 Initial commissioning via Flow Tool

This chapter describes how to start up commissioning via Flow Tool software.

### Connecting PC to meter

Connect IrDa communication adaptor to its interface on transmitter and connect PC to adaptor.


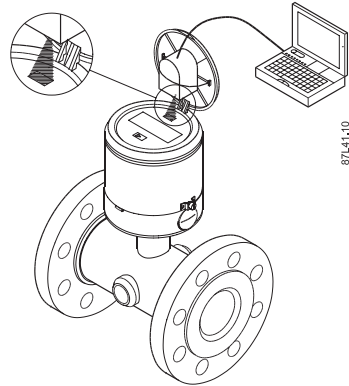


Figure B-1 MAG 8000 or MAG 8000 CT has a built-in IrDA communication interface on top of meter. IrDA adaptor can be fixed to lid by rubber band.

### Starting Flow Tool software program

Double-click on Flow Tool icon on windows desktop to start program.

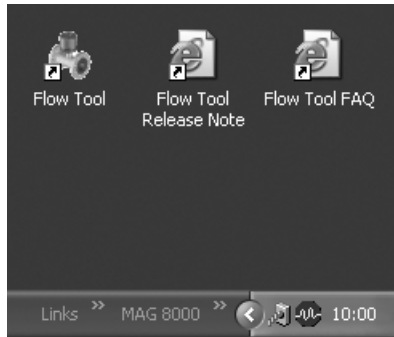

#### Note


For on-line communication make sure the IrDA symbol is visible in the toolbar status menu before starting Flow Tool.

## B.3 Configuring the device

This chapter describes how to set up meter for communication with PC. The options in both Flow Tool and SIMATIC PDM software are the same; only the views on the PC screen differ.

## Setting up meter

1. Right-click on "Project".
2. Select "New".
3. Select "Flow Meter".

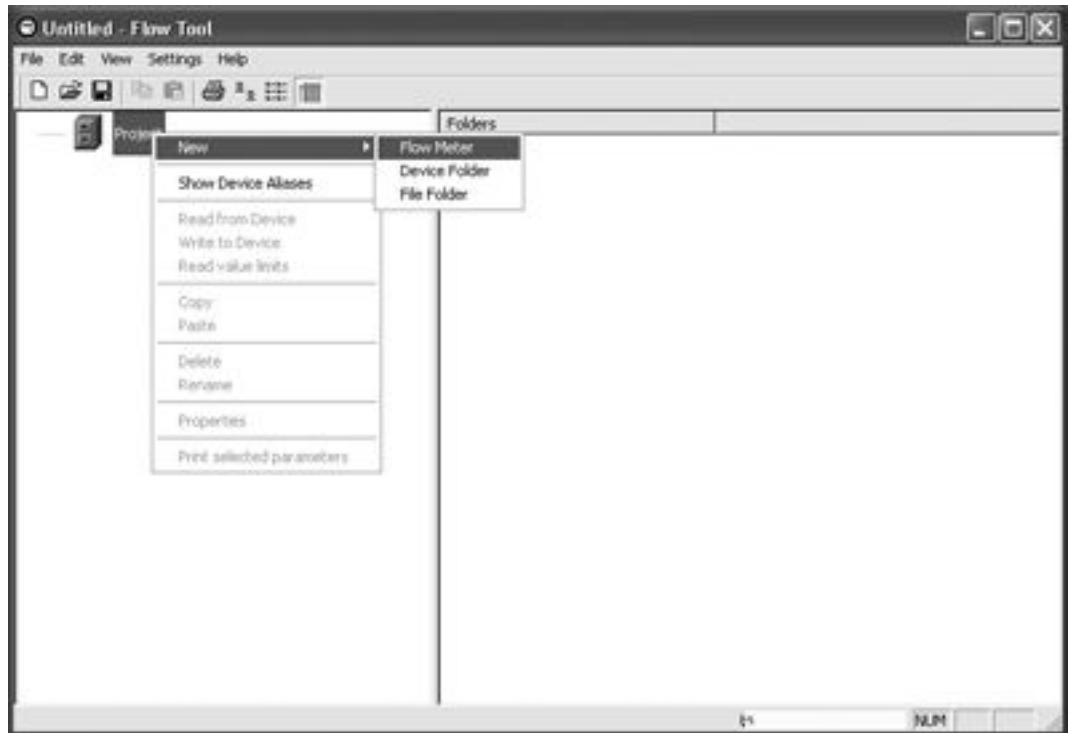


4. Name device.
5. Select configuration type ("Automatic" or "Manual").

B.4 Setting the basic parameters



"Automatic" configuration is selected if PC is connected directly to meter.

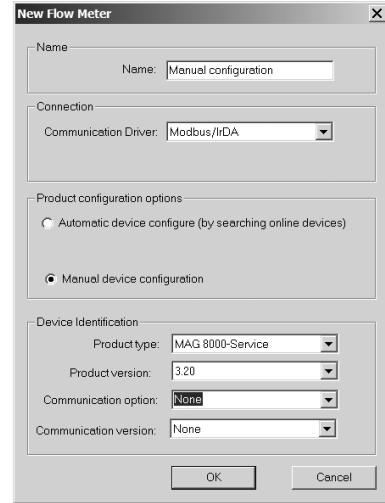

"Manual" configuration is selected if configuration is made without any connection to a meter. Configuration is downloaded to the meter afterwards.

B.4 Setting the basic parameters


**Note**

**No factory reset**

The device is delivered with factory settings that are not stored as default values. Because no default values are present in the meter, an automatic return to factory values is not possible.

## Setting parameters

The meter information is password-protected. The default factory password is "1000" and can be changed after gaining access to the meter. The password can be reset using a hardware key, see Data protection (Page 59).

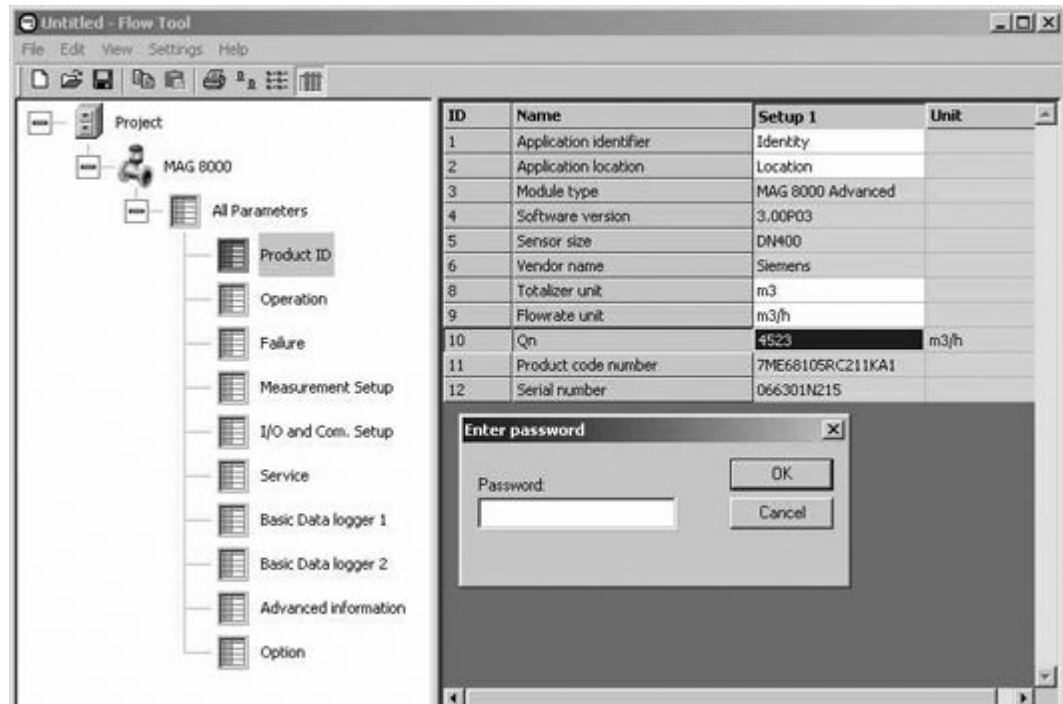

## Read, write, print or export meter data

A single parameter or a parameter group to be read, written, printed or exported to a CSV file.

Only parameters (data) shown on white background can be changed. Red texts are off-line data which are not stored in the MAG 8000 yet, whereas black texts show the actual meter data.

Each parameter has a description (prompt) advising how the parameter can be programmed and which settings are programmable.

The figure below shows alarm status with the marked alarms enabled.

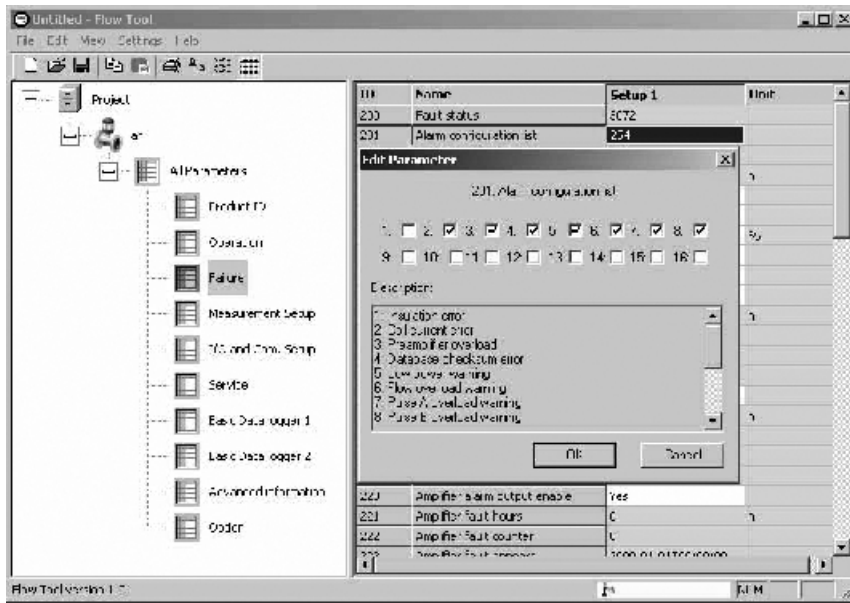


Figure B-2 Alarm status - marked alarms are enabled

### Customer-selected parameter list

The default parameter list is divided into various functional groups with maximum 99 parameters included. For a complete parameter overview, see "Parameter lists" in the appendix.

Customized parameter list can be configured by creating a new parameter folder.



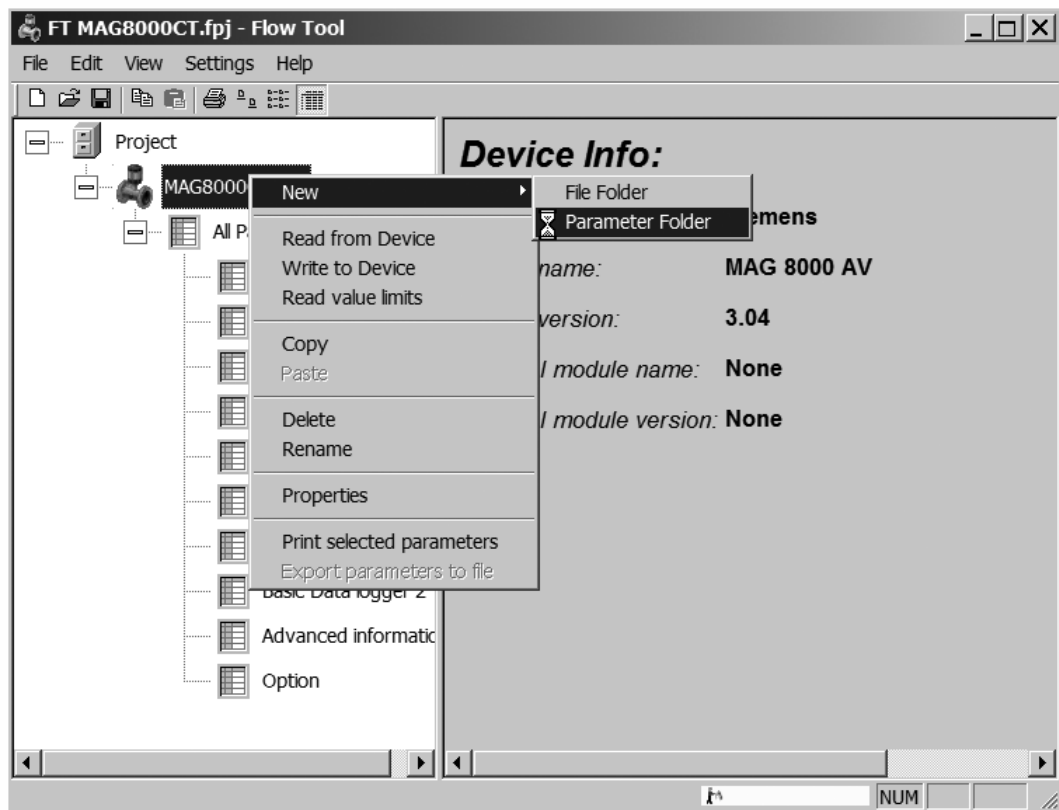


Figure B-3 Creating new parameter folder

Copy any existing parameter to the new folder. These parameters are updated and handled as the original parameters and listed in the same order as copied to the customized parameter list.

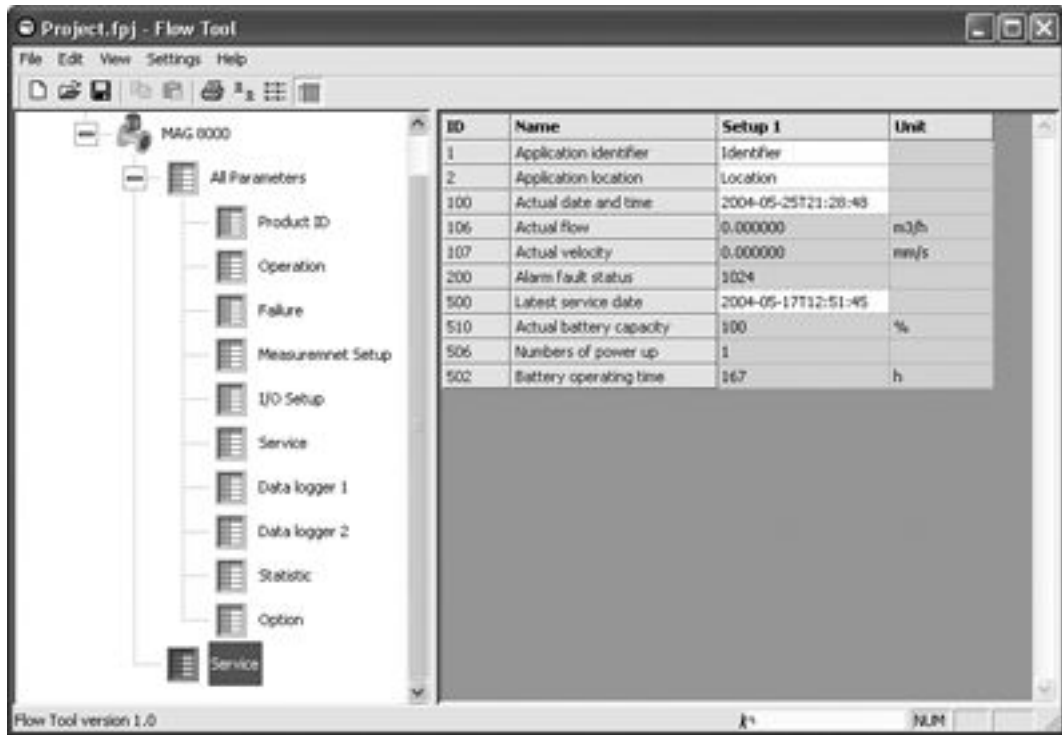


Figure B-4 Customer-specified parameter list

There is no limitation on the number of customer-specified parameter lists.

Saving the project will make the parameter list configuration available for future use.

**Note**

Saving the file with only the customized parameter list expanded will make future monitoring and changes of parameters easier.

**See also**

[www.siemens.com/flow](http://www.siemens.com/flow) ([www.siemens.com/flow](http://www.siemens.com/flow))

**B.5 Unit selection**

MAG 8000 and MAG 8000 CT are delivered with totalizer and flow rate units as ordered via the MLFB structure.

The standard MAG 8000 units for each region are:

- **Europe:** m<sup>3</sup> for totalizer and m<sup>3</sup>/h for flow rate
- **US:** Gallon for totalizer and GPM (Gallon per minute) for flow rate
- **Australia:** ML for totalizer and ML/d (Mega liter/day) for flow rate

The following MAG 8000 units and combinations are available:


**Volume:** m<sup>3</sup>, m<sup>3</sup> × 100, L × 100, Gallon, G × 100, G × 1000, MG, CF × 100, CF × 1000, AF, AI, kl, ML, BBL42

**Flow rate:** m<sup>3</sup>/min, m<sup>3</sup>/h, m<sup>3</sup>/d, L/s, L/min, L/h, ML/d, GPS, GPM, GPH, GPD, MGD, CFS, CFM, CFH, BBL42/s, BBL42/min, BBL42/h, BBL42/d

The MAG 8000 CT format for all regions is:

- m<sup>3</sup> for totalizer and m<sup>3</sup>/h for flow rate

To ensure selection of correct conversion factor, see unit conversion table in appendix.

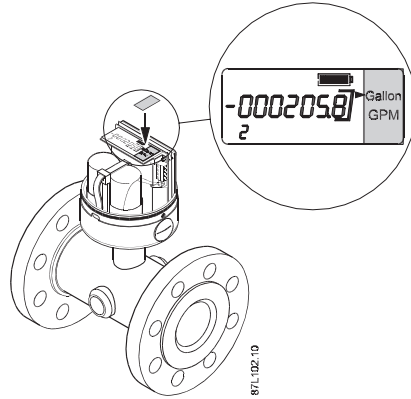

All measurement units are printed on a label affixed to the display (except the European version). Some meter sizes have a factor included to secure the 8 digit display value will not overrun after short time of operation. Manual configuration of new units is allowed. A new sticker showing the new settings must then be affixed to the display.

## Protected parameters

The following parameters are protected (see also parameter lists in appendix):

MAG 8000 Standard / MAG 8000 CT		MAG 8000 CT (additionally)	
Parameter no.	Parameter name	Parameter no.	Parameter name
-	New password	100	Actual date and time
5	Sensor tube diameter	101	Totalizer 1
7	Meter No.	102	Totalizer 2
8	Totalizer unit	201	Alarm configuration list
9	Flow unit	206	Battery alarm limit
10	Qn (Q3)	303	Operation excitation frequency
300	Totalizer unit factor	305	Decimal point place
301	Flow unit factor	310	Flow direction totalizer 1
302	Pipe size	312	Flow direction totalizer 2
321	Calibration date	327	Adjustment factor
323	Calibration factor	328	Low flow cut-off
325	Sensor offset	332	Empty pipe impedance

MAG 8000 Standard / MAG 8000 CT		MAG 8000 CT (additionally)	
Parameter no.	Parameter name	Parameter no.	Parameter name
332	Max. sensor frequency excitation	333	Empty pipe detection
		420	Device Communication Address
		511	Communication module type
		550	Coil current active
		551	Fix flow mode active
		552	Fixed flow value

**Hardware key**

To gain access to protected parameters a hardware key must be installed. The hardware key hole is located in front part of PCB behind battery, see connection diagram (Page 35).

**Note**

**Hardware key on MAG 8000 CT**

For MAG 8000 CT only authorized persons, with the acceptance and under direction of the local authorities are allowed to use the hardware key.


**Changing units**

**Note**

**Not allowed on MAG 8000 CT**

This function is not allowed on MAG 8000 CT.

1. Select service mode and meter version – upload data from meter.
2. Open transmitter.
3. Remove battery (keep connected).
4. Attach hardware key to PCB board (for correct attachment, see upper part of figure).

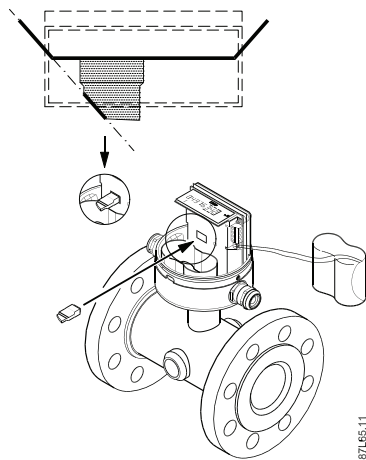

5. Change units description in parameters 8 and 9, see Unit conversion table.
6. Change units factor in parameters 300 and 301, see Unit conversion table.
7. Change maximum flow rate Qn (Q3) to new unit selection in parameter 10.
8. Select display unit in parameter 306.
9. Download each parameter to meter.
10. Remove hardware key.
11. Re-assemble meter.

### Note

#### Important


The service mode opens many parameters. If these parameters are changed, it can seriously affect meter accuracy and operation. Be careful when writing new parameter values as meter has **no default settings** to return to.

## B.6 Output configuration

Pulse output can be configured as volume pulse, alarm or call-up. Default factory setting is with output A enabled for forward flow and output B for alarm output.

### Output configuration in Flow Tool

Select "I/O and Com. Setup". The software window shows the parameters for output configuration. Each parameter has its own guideline for selecting the correct parameter setting.

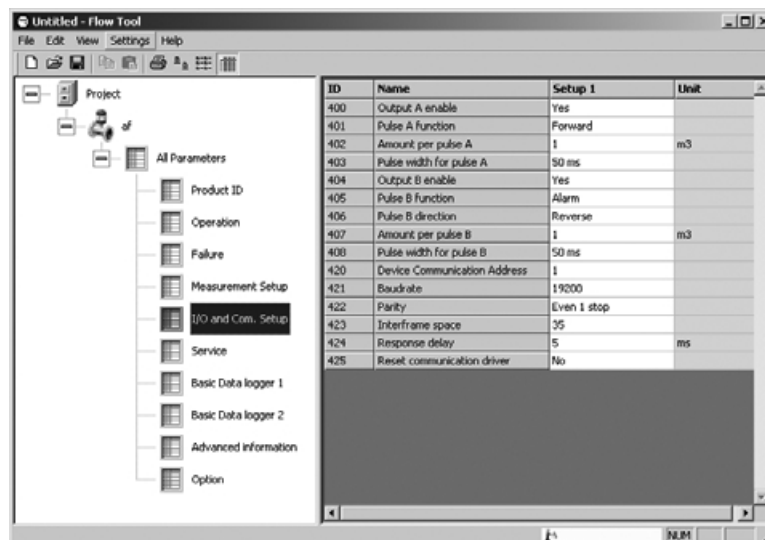

To see how the outputs work, please see "Output characteristics" (Page 100).

### B.7 Default display information and accessible display menus

Parameter 131 defines default display information with selection between

- Totalizer 1 (Index 1)
- Totalizer 2 (Index 2)
- Flow rate (Index 3, updated with selected measuring frequency)
- Fault codes (Index 4)
- Customer totalizer (Index 5 - resettable)

Default information is shown after power-up as well as after no key operation for 10 minutes.

Parameter 130 defines accessible display menus with selection of one or more of the following menus:


- Operator menu
- Meter info menu
- Service menu
- Data logger menu
- Statistic menu (advanced version only)
- Tariff menu (advanced version only)

Disabling display of menu data will not affect operation of functions.

### B.8 Internal data handling

#### Meter status

Meter status parameter (120) gives a fast indication of reliability of revenue data.

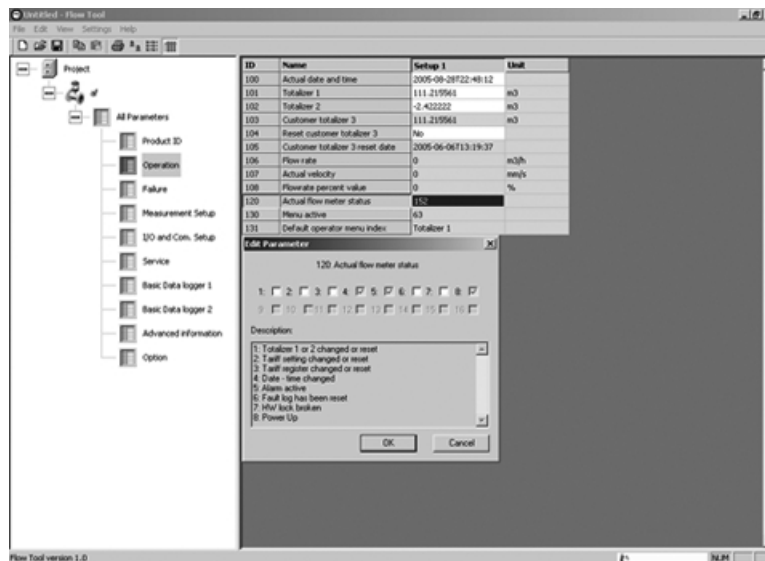

It shows whether important information has been reset or manipulated, for instance if meter has been powered down.

Status information can only be reset while hardware key is mounted.

## Data logger / Consumption alarm

ID	Name	Setup 1	Unit
600	Log interval	Daily	
601	Delay weekly log interval	0	days
602	Limit for too high consumption	1000000	m3
603	Limit for too low consumption	0	m3
610	Date of latest log period	2005-08-28T00:00:02	
611	Latest Log period totalized (1)	0	m3
612	Latest Log period totalized (2)	0	m3
613	Latest Log period fault status	3072	
614	Latest Log period status information	16	
615	Date of log period 2	2005-08-27T00:00:02	
616	Log period 2 totalized (1)	0	m3
617	Log period 2 totalized (2)	0	m3
618	Log period 2 fault status	3072	
619	Log period 2 status information	16	
620	Date of log period 3	2005-08-26T00:00:02	
621	Log period 3 totalized (1)	0	m3
622	Log period 3 totalized (2)	0	m3
623	Log period 3 fault status	3072	
624	Log period 3 status information	16	
625	Date of log period 4	2005-08-25T00:00:02	
626	Log period 4 totalized (1)	0	m3
627	Log period 4 totalized (2)	0	m3
628	Log period 4 fault status	3072	
629	Log period 4 status information	16	
630	Date of log period 5	2005-08-24T00:00:02	
631	Log period 5 totalized (1)	0	m3
632	Log period 5 totalized (2)	0	m3
633	Log period 5 fault status	3072	
634	Log period 5 status information	16	
635	Date of log period 6	2005-08-23T00:00:02	
636	Log period 6 totalized (1)	0	m3
637	Log period 6 totalized (2)	0	m3
638	Log period 6 fault status	3072	
639	Log period 6 status information	16	
640	Date of log period 7	2005-08-22T00:00:02	

The integrated data logger has 26 logging periods in which data can be stored daily, weekly or monthly. The logger stores the consumption for totalizer 1 and totalizer 2 in the selected period. Forward consumption is stored as a positive value and reverse consumption is stored as a negative value. Alarm and meter status are also stored for the same period to indicate alarms that have been active, or that revenue data has been influenced in the specific period.

ID	Name	Setup 1	Unit
600	Log interval	Daily	
601	Delay log interval	0	days
602	High log consumption alarm	1000000.000000	m3
603	Low log consumption alarm	0.000000	m3
610	Date of last logging 1	2004-05-26T00:00:34	
611	Last Log1 Totalizer 1	0.000000	m3
612	Last Log1 Totalizer 2	0.000000	m3
613	Last Log1 fault status	1024	
614	Last Log1 status information	153	

The logged information has a time and date stamp. The data logger never stops storing data - old data is overwritten following the first in/first out principle, i.e. log 1 is the last stored information which is moved to log 2 when the next logging is made and so on.

The consumption alarm indicates that the actual consumption on totalizer 1 is above or below the consumption limits.

## B.9 Battery configuration

Battery figures (generated as customer parameter list, see section Customer-selected parameter list in chapter Setting the basic parameters show power management information.

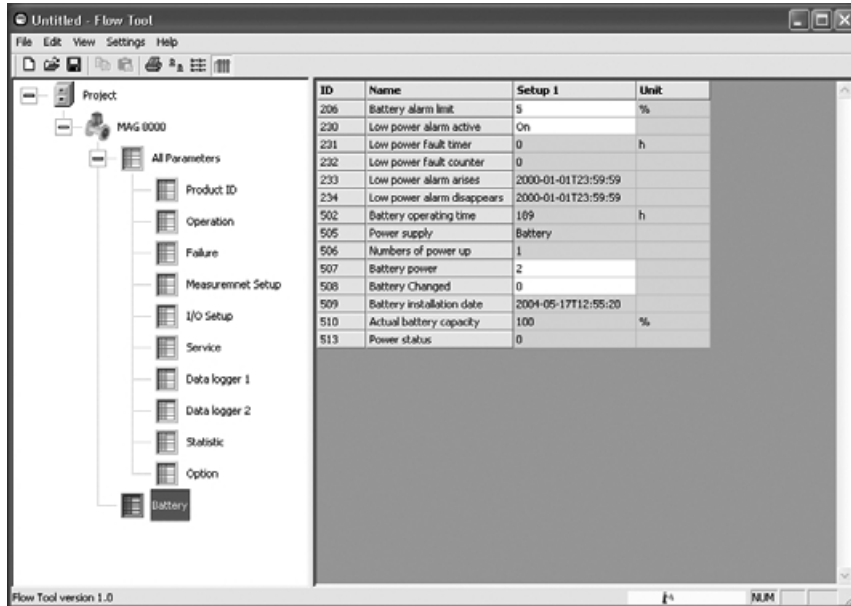


Figure B-5 Battery configuration

At each battery replacement the capacity is reset to 100% (parameters 508 to 510) which is then reduced with the real meter consumption every 4 hours.

The battery limit (parameter 206) is the level at which the low power alarm is activated generating an alarm or call-up (if configured). The power status (parameter 513) follows the battery symbol on the display.

When switching between battery power from internal and external battery packs, "Battery power" (parameter 507) must be adjusted to match the actual number of batteries connected.



## Qualification certificate

The qualification certificate is an enhancement of the PDM tool which enables printing of a MAG 8000 status report using the MAG 8000 IrDA communication port and the MODBUS RTU protocol.

---

### Note

### Scope

The MAG 8000 Qualification Certificate is a qualification report of device functionality and **NOT** a tool for measurement accuracy verification like the MAG VERIFICATOR (FDK-083F5060 or FDK-083F5061).

---

The MAG 8000 uses two main physical components for communication:

- The IrDA sensor on the MAG 8000
- An IrDA interface cable


## C.1 Commissioning

The qualification certificate is generated from PDM via the following steps:

1. Enabling insulation test
2. Uploading the device data to the PC
3. Generating the qualification certificate

Finally, the service technicians must evaluate the result.


C.2 Enabling insulation test

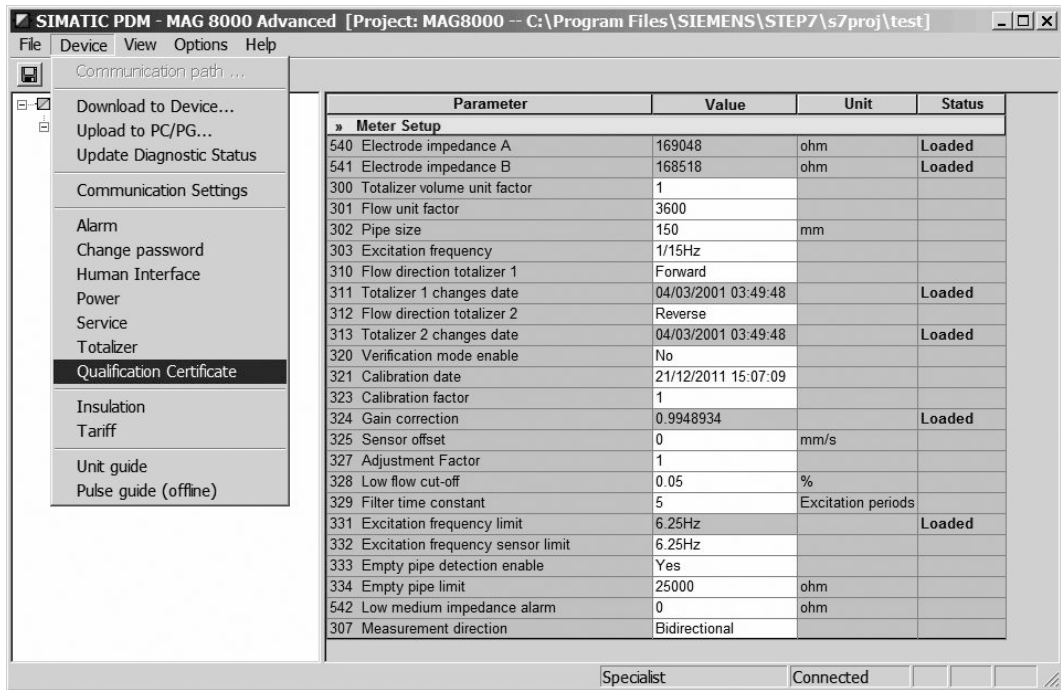

## C.2 Enabling insulation test

The insulation test must be carried out on the advance version of the MAG 8000 or MAG 8000 CT before generating the Qualification Certificate. The procedures for enabling the insulation test are shown below.

Set "Insulation test enable" to "Yes" if not already enabled.

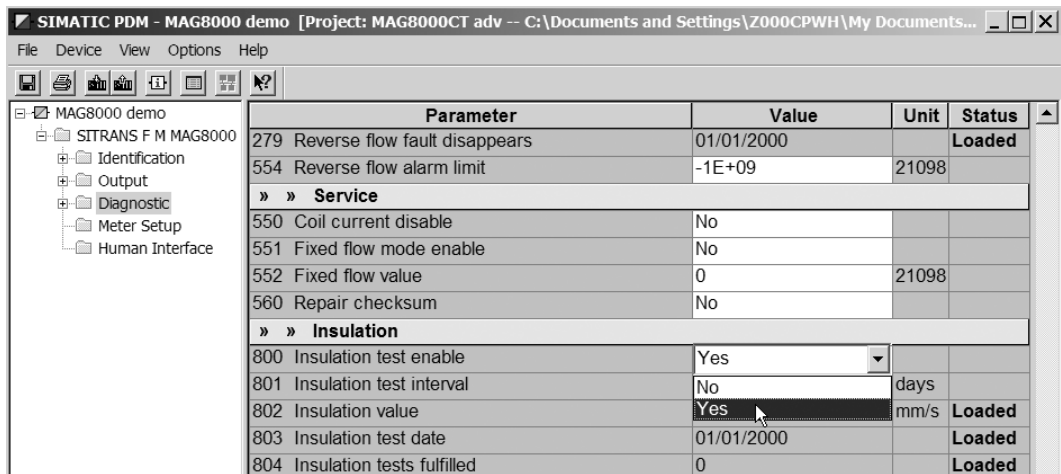


Select "Device" → "Download to Device ..." to download the change to the device.




## C.4 Generating the qualification certificate


When the device data is completely read to the pc, select "Device" → "Qualification Certificate".

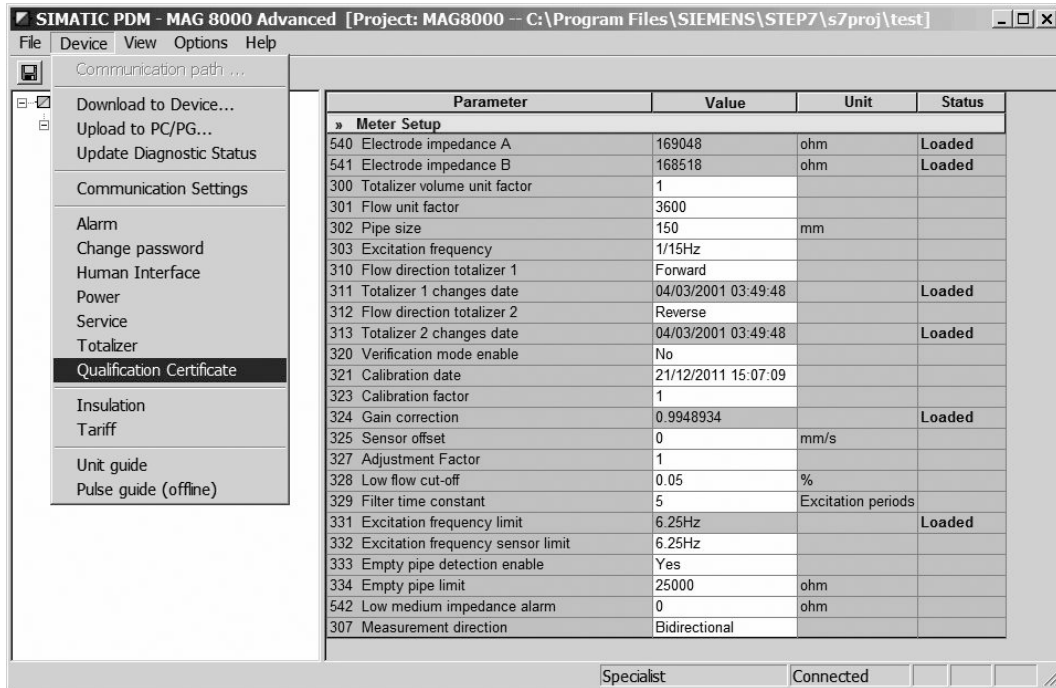

The qualification certificate tool is protected by a service password that is only available for service specialists.

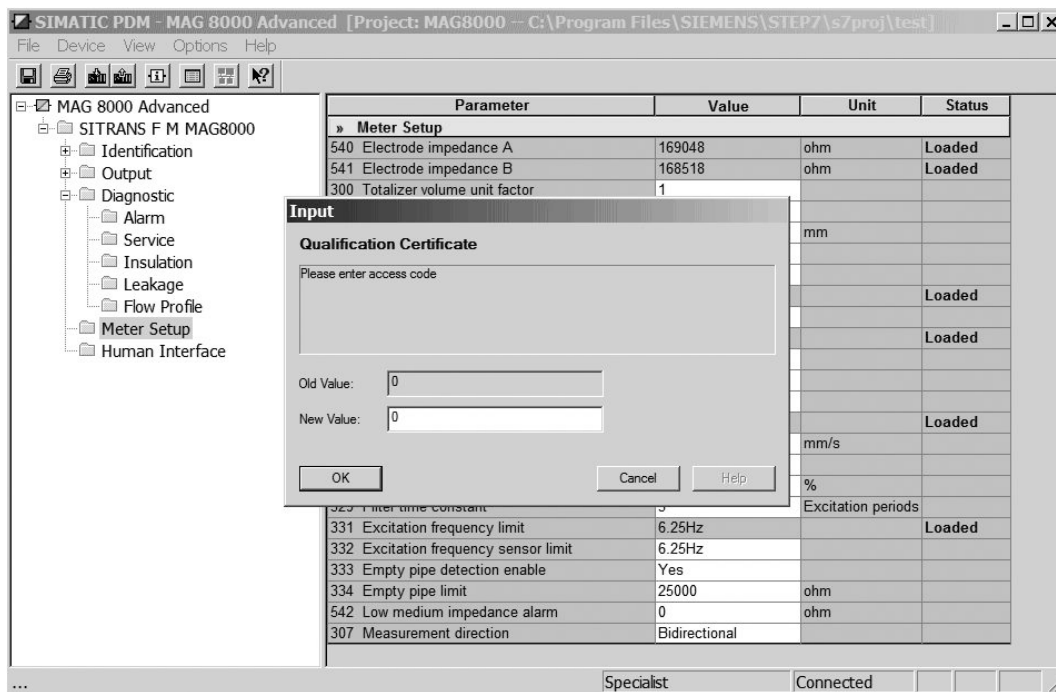

After entering the password, click "OK". Then click "Generate qualification certificate" in the next dialog box. A progress bar shows the percentage of the process.

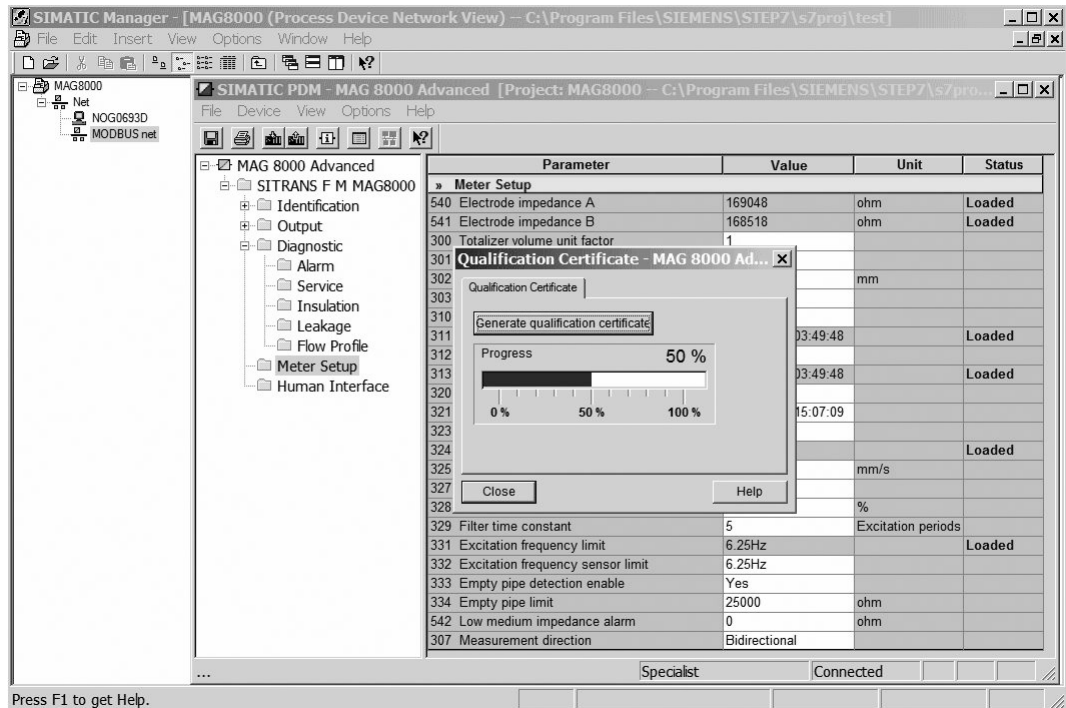

## C.5 Result evaluation

The service technicians shall inspect the device parameters on the report and cross-check with the reference values to evaluate if the device status is of proper quality or not. Reference values are available in the document Qualification Certificate Reference Guideline (<http://support.automation.siemens.com/WWW/view/en/66867834>).

**SIEMENS**

**Qualification Certificate SITRANS FM MAG 8000**

PART 1

Customer:		MAG 8000 Identification	
Name	_____	Date and Time	07/04/2012 16:32:13
Address	_____	Version	3.04
Phone	_____	Vendor Name	Siemens
Email	_____	Product Code No.	7ME68104HC111KA0
		System Serial No.	123456H123
		Device Product ID	110779

General Settings		Transmitter settings	
Fault status	1024	Totalizer 1	0 m3
Alarm configuration list	254	Totalizer 2	0 m3
Date of fault log reset	21/12/2011 15:07:19	Customer totalizer 3	0 m3
Qty	630 m3/h	Customer totalizer 3 reset date	09/10/2013 23:04:28
Low flow cut-off	0.05 %		

Sensor Details		Battery Status	
Sensor size	DN150	Battery installation date	21/12/2011 15:07:27
Calibration factor	1	Battery operating time	3527 h
Excitation frequency	1.15Hz	Battery capacity	94 %
		Battery alarm limit	10 %

Pulse A		Pulse B	
Output A enable	Yes	Output B enable	Yes
Pulse A direction	Forward	Pulse B function	Alarm
Amount per pulse A	0.1 m3	Pulse A direction	Reverse
Pulse width for Pulse A	50 ms	Amount per pulse B	0.1 m3
		Pulse width for Pulse B	50 ms

Comments

The values were verified following the procedure specified in Guideline ASE02268573

Date and signature \_\_\_\_\_

**SIEMENS**

**Qualification Certificate SITRANS FM MAG 8000**

PART 2

Customer:		MAG 8000 Identification	
Name	_____	Date and Time	07/04/2012 16:32:13
Address	_____	Version	3.04
Phone	_____	Vendor Name	Siemens
Email	_____	Product Code No.	7ME68104HC111KA0
		System Serial No.	123456H123
		Device Product ID	110779

Coil		Amplifier	
Coil current alarm output enable	Yes	Amplifier alarm output enable	Yes
Coil current fault hours	0	Amplifier fault hours	1
Coil current fault counter	7	Amplifier fault counter	1
Coil current fault appears	01/01/2000 01:06:18	Amplifier fault appears	02/01/2001 20:20:32
Coil current fault disappears	26/01/2001 18:56:48	Amplifier fault disappears	02/01/2001 20:29:32
Passed:	<input type="checkbox"/> Yes <input type="checkbox"/> No _____ (Date and signature)	Passed:	<input type="checkbox"/> Yes <input type="checkbox"/> No _____ (Date and signature)

Service		Insulation	
Coil current disable	No	Insulation value	0 mm/s
Fixed flow mode enable	No	Insulation test date	01/01/2000
Fixed flow value	0 m3/h	Insulation test fulfilled	0
Checksum fault counter	3		
Electrode impedance A	1.69014 Ohm		
Electrode impedance B	1.68523 Ohm		
Passed:	<input type="checkbox"/> Yes <input type="checkbox"/> No _____ (Date and signature)	Passed:	<input type="checkbox"/> Yes <input type="checkbox"/> No _____ (Date and signature)

Comments

The values were verified following the procedure specified in Guideline ASE02268573

Date and signature \_\_\_\_\_

## Unit conversion table

Totalizer / Volume unit (parameter 8)	Correction factor parameter 300
Default	1 m <sup>3</sup>
m <sup>3</sup> *100	0.01
Gallon (US)	264.1721
G*100 (100*Gallon)	2.641721
G*1000 (1000*Gallon)	0.2641721
MG (1000000*Gallon)	0.0002641721
AI (Acre Inches)	0.009728558
AF (Acre ft)	0.0008107132
CF*100 (100*ft <sup>3</sup> )	0.3531467
CF*1000 (1000*ft <sup>3</sup> )	0.03531467
L*100 (liter)	10
kL (1000*liter)	1
ML (Mega liter)	0.001
BBL42 (US oil barrel)	6.289810743

Flow rate unit (parameter 9)	Correction factor parameter 301
Default	1 m <sup>3</sup> /s
m <sup>3</sup> /min (m <sup>3</sup> /minute)	60
m <sup>3</sup> /h (m <sup>3</sup> /hour)	3600
m <sup>3</sup> /d (m <sup>3</sup> /day)	86400
GPS (Gallon/second)	264.1721
GPM (Gallon/minute)	15850.32
GPH (Gallon/hour)	951019.4
GPD (Gallon/day)	22824465
MGPD (1000000*Gallon/day)	22.824465
CFS (ft <sup>3</sup> /second)	35.31467
CFM (ft <sup>3</sup> /minute)	2118.882
CFH (ft <sup>3</sup> /hour)	127132.8
L/s (liter/second)	1000
L/min (liter/minute)	60000
L/h (liter/hour)	3600000
ML/d (1000000*liter/day)	86.4
BBL42/s	6.289810743
BBL42/min	377.3886446
BBL42/h	22643.31867
BBL42/d	543439.6482





# Parameter lists

## Parameter lists

MAG 8000 is delivered with factory settings that are not stored as default values. Because default values are not present in the meter, an automatic return to factory values is not possible.

The default settings are available at Siemens Industry Online Support (<https://support.industry.siemens.com/cs/products?dtp=Download&mf=ps&pnid=17328&lc=en-US>).

Visible display information is indicated in the table by menu and index number. Remember to enable displayed menus in parameter 130.

The abbreviations used in the display menu table are: Operator menu = O, Meter menu = M, Service menu = Se, Data Logger menu = L, Statistic menu = St, Revenue menu = R.

Factory settings marked in *italic* cannot be edited.

---

### Note

#### Change of units

If the unit and factor is changed, all unit-related values become invalid. It is recommended to reset all unit-related values.

---

## E.1 1-99

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
1	All	M1	Application identifier	Identity	Max. 15 characters. <b>Only numbers are visible in the display (letters are shown as "_")</b>
2	All	-	Application location	Location	Max. 16 characters
3	All	M3	Module type	MLFB dependent	MAG 8000 Basic MAG 8000 Advanced MAG 8000 CT Basic MAG 8000 CT Advanced MAG 8000 Irrigation
4	All	M4	Software version		x.xx
5	All	-	Sensor size	Sensor related	Max. 12 characters. DN 25 to 1200 (1" to 48")
6	All	-	Vendor name	Siemens	Siemens
8	All	-	Totalizer unit	MLFB dependent	Max. 12 characters

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
9	All	-	Flowrate unit	MLFB dependent	Max. 12 characters
10	All	-	Qn (Q3)	Sensor related	0 to 1x10 <sup>9</sup>
11	All	-	Product code number	7ME6810, 7ME6820 or 7ME6880	
12	All	-	Serial number	XXXXXXHXXX	Max. 12 characters

## E.2 100-199

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
100	All	M2	Actual date and time	PS3 production date and time	year-month-day T hours:minutes:seconds
101	All	O1	Totalizer 1	0	0 to ±2x10 <sup>9</sup>
102	All	O2	Totalizer 2	0	0 to ±2x10 <sup>9</sup>
103	All	O5	Customer totalizer 3	0	0 to +±2x10 <sup>9</sup>
104	All	O5	Reset customer totalizer 3	No	Yes/No This parameter is removed from PDM parameter list. The functionality is implemented via PDM menu "Device" → "Totalizer" → "Reset customer Totalizer 3".
105	All	-	Customer totalizer 3 reset date	PS3 production date and time	year-month-day T hours:minutes:seconds
106	All	-	Flow rate		0 to 1.25 Qn (Q3)
107	All	-	Actual velocity	Measured value	±15 m/s
108	All	-	Flowrate percent value		0 to 125% (Q4)

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
120	All	-	Actual flow meter status		0 to 255, binary presented with information 1 for bit 0 1: Totalizer 1 or 2 changed or reset 2: Tariff setting changed or reset, 3: Tariff register changed or reset 4: Date - time changed 5: Alarm have been active 6: Fault log has been reset 7: Hardware key has been activated 8: Meter has been powered up If none of the above is active, no flag is set
130	All	-	Menu active	63=all menus active	0 to 63, binary presented with information 1 for bit 0 1: Operator menu 2: Meter info menu 3: Service menu 4: Log menu 5: Statistic menu 6: Revenue menu If none of the above is active, the message is: None active
131	All	-	Default operator menu index	Totalizer 1	Totalizer 1, Totalizer 2, Actual Flow rate, Fault codes, Customer Totalizer

**E.3 200-299**

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
200	All	O4	Fault status	No faults	0 to 8191, binary presented with information 1 for bit 0 1: Insulation error 2: Coil current error 3: Amplifier overload 4: Database checksum error 5: Low power warning 6: Flow overflow warning 7: Pulse A overload warning 8: Pulse B overload warning 9: Consumption interval warning 10/L: Leakage warning 11/E: Empty pipe warning 12/C: Low impedance (high conductivity) warning 13/d: High flow limit warning 14/A: Reverse flow warning If no error/warning is pending, the message is "No faults"
201	All	-	Alarm configuration list	254 = Alarm 2 to 8 enabled	0 to 8191, See 200 If no alarm is enabled, the message is "None enabled"
202	All	-	Date of fault log reset	PS3 production date and time	year-month-day T hours:minutes:seconds
203	All	O4	Non optimal measure time, including the time of device running with insulation test fault, coil current fault, amplifier fault, database checksum fault, flow overload fault, or empty pipe fault.	0	
204	All	-	Reset the fault log and faults	No	Yes / No Value is reset to "No" when uploading device parameters to pc after command execution
205	All	-	Call up acknowledge	No	Yes / No Value is reset to "No" when uploading device parameters to pc after command execution
206	All	-	Battery alarm level	10%	0 to 100%

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
				<b>Fixed parameter or meter data that are not changeable</b>	
208	All	-	Reset leakage fault	No	Yes / No Value is reset to "No" when uploading device parameters to pc after command execution
209	All	-	Reset consumption log fault	No	Yes / No Value is reset to "No" when uploading device parameters to pc after command execution
210	All	-	<b>Insulation alarm output enable</b>	No	Yes / No
211	All	-	Insulation fault hours	0	
212	All	-	Insulation fault counter	0	
213	All	-	Insulation fault appears	2000-01-01 T 00:00:00	
214	All	-	Insulation fault disappears	2000-01-01 T 00:00:00	
215	All	-	<b>Coil current alarm output enable</b>	Yes	Yes / No
216	All	-	Coil current fault hours	0	
217	All	-	Coil current fault counter	0	
218	All	-	Coil current fault appears	2000-01-01 T 00:00:00	
219	All	-	Coil current fault disappears	2000-01-01 T 00:00:00	
220	All	-	<b>Amplifier alarm output enable</b>	Yes	Yes / No
221	All	-	Amplifier fault hours		
222	All	-	Amplifier fault counter		
223	All	-	Amplifier fault appears	2000-01-01 T 00:00:00	
224	All	-	Amplifier fault disappears	2000-01-01 T 00:00:00	
225	All	-	<b>Database alarm output enable</b>	Yes	Yes / No
226	All	-	Database fault hours	0	
227	All	-	Database fault counter	0	
228	All	-	Database fault appears	2000-01-01 T 00:00:00	
229	All	-	Database fault disappears	2000-01-01 T 00:00:00	
230	All	-	<b>Low power alarm output enable</b>	Yes	Yes / No
231	All	-	Low power fault hours	0	
232	All	-	Low power fault counter	0	
233	All	-	Low power fault appears	2000-01-01 T 00:00:00	
234	All	-	Low power fault disappears	2000-01-01 T 00:00:00	
235	All	-	<b>Flow overflow alarm output enable</b>	Yes	Yes / No
236	All	-	Overflow fault hours	0	
237	All	-	Overflow fault counter	0	
238	All	-	Overflow fault appears	2000-01-01 T 00:00:00	
239	All	-	Overflow fault disappears	2000-01-01 T 00:00:00	
240	All	-	<b>Pulse A overload alarm output enable</b>	Yes	Yes / No

Parameter lists

E.3 200-299

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
				<b>Fixed parameter or meter data that are not changeable</b>	
241	All	-	Pulse A overload fault hours	0	
242	All	-	Pulse A overload fault counter	0	
243	All	-	Pulse A overload fault appears	2000-01-01 T 00:00:00	
244	All	-	Pulse A overload fault disappears	2000-01-01 T 00:00:00	
245	All	-	<b>Pulse B overload alarm output enable</b>	Yes	Yes / No
246	All	-	Pulse B overload fault hours	0	
247	All	-	Pulse B overload fault counter	0	
248	All	-	Pulse B overload fault appears	2000-01-01 T 00:00:00	
249	All	-	Pulse B overload fault disappears	2000-01-01 T 00:00:00	
250	All	-	<b>Consumption alarm output enable</b>	No	Yes / No
251	All	-	Consumption fault hours	0	
252	All	-	Consumption fault counter	0	
253	All	-	Consumption fault appears	2000-01-01 T 00:00:00	
254	All	-	Consumption fault disappears	2000-01-01 T 00:00:00	
255	All	-	<b>Leakage alarm output enable</b>	No	Yes / No
256	All	-	Leakage fault hours	0	
257	All	-	Leakage fault counter	0	
258	All	-	Leakage fault appears	2000-01-01 T 00:00:00	
259	All	-	Leakage fault disappears	2000-01-01 T 00:00:00	
260	All	-	<b>Empty pipe alarm output enable</b>	No	Yes / No
261	All	-	Empty pipe fault timer	0	
262	All	-	Empty pipe fault counter	0	
263	All	-	Empty pipe fault appears	2000-01-01 T 00:00:00	
264	All	-	Empty pipe fault disappears	2000-01-01 T 00:00:00	
265	All	-	<b>Low impedance alarm output enable</b>	No	Yes / No
266	All	-	Low impedance fault hours	0	
267	All	-	Low impedance fault counter	0	
268	All	-	Low impedance fault appears	2000-01-01 T 00:00:00	
269	All	-	Low impedance fault disappears	2000-01-01 T 00:00:00	
270	All	-	<b>High flow alarm output enable</b>	No	Yes / No
271	All	-	High flow alarm fault timer	0	
272	All	-	High flow alarm fault counter	0	
273	All	-	High flow alarm fault appears	2000-01-01 T 00:00:00	

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
				<b>Fixed parameter or meter data that are not changeable</b>	
274	All	-	High flow alarm fault disappears	2000-01-01 T 00:00:00	
275	All	-	<b>Reverse high flow alarm output enable</b>	No	Yes / No
276	All	-	Reverse high flow alarm fault hours	0	
277	All	-	Reverse high flow alarm fault counter	0	
278	All	-	Reverse high flow appears	2000-01-01 T 00:00:00	
279	All	-	Reverse high flow disappears	2000-01-01 T 00:00:00	

## E.4 300-399

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
				<b>Fixed parameter or meter data that are not changeable</b>	
300	All	-	Totalizer volume unit factor	MLFB-dependent	0 to 1*x0 <sup>10</sup>
301	All	-	Flow unit factor	MLFB-dependent	0 to 1*x0 <sup>10</sup>
302	All	-	Pipe size	Sensor-related	25 to 1200
303	All	-	Meter excitation frequency (in battery power mode)	1/15 Hz	1/60 Hz, 1/30 Hz, 1/15 Hz, 1/5 Hz, 1.5625 Hz, 3.125 Hz, 6.25 Hz
304	All	-	Mains frequency	MLFB-dependent	50 or 60 Hz mains
305	All	-	Decimal point	MLFB-dependent	No point, One digit after point, Two digits after point, Three digits after point, Automatic point adjust
306	All	-	Displayed unit	Use m <sup>3</sup> unit	Displayed m <sup>3</sup> unit or an arrow indication for a unit label
307	All	-	Measurement direction	MLFB-dependent	Bidirectional, Forward only, Reverse only
310	All	-	Flow direction totalizer 1	Forward	Forward, Reverse or Bi-directional net flow
311	All	-	Totalizer 1 changes date	PS3 production date and time	
312	All	-	Flow direction totalizer 2	MLFB-dependent	Forward, Reverse or Bi-directional net flow
313	All	-	Totalizer 2 changes date	PS3 production date and time	
320	All	-	Verification mode enable	No	Yes / No Value is reset to "No" when uploading device parameters to pc after four hours
321	All	-	Calibration date	Calibration date	year-month-day T hours:minutes:seconds

Parameter lists

E.4 300-399

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
323	All	-	Calibration factor	Sensor-related	
324	All	-	Gain correction	Sensor-related	
325	All	-	Sensor offset	Sensor-related	
327	All	-	Adjustment Factor	1	-2 to 2
328	All	-	Low flow cut-off	MAG 8000 Standard (7ME6810) 0.05 % for FW 3.07 and lower. <b>For FW 3.09 see table C1</b> MAG 8000 Standard parameter 328 FW 3.09 below.  MAG 8000 CT (7ME6820) 0.25 % for FW 3.07 and lower. <b>For FW 3.09 see table C2</b> MAG 8000 CT parameter 328 FW 3.09 below.	0 to 9.9%
329	All	-	Filter time constant	5 Tau	1 to 1000
331	All	-	Excitation frequency limit	6.25 Hz for advanced version and 1/15 Hz for basic version	
332	All	-	Excitation frequency sensor limit	Sensor-related	7ME6810 and 7ME6820: 6.25 Hz (DN 25 to 200 (1" to 8")) 3.125 Hz (DN 250 to 600 (10" to 24")) 1.5625 Hz (DN 700 to 1200 (28" to 48"))  7ME6880: 3.125 Hz (DN 25 to 600 (1" to 24")) 1.5625 Hz (DN 700 to 1200 (28" to 48"))
333	All	-	Empty pipe detection enable	Yes	Yes / No
334	All	-	Empty pipe limit	25000 ohm	0 to 2.15x10 <sup>9</sup>

Table E-1 **MAG 8000 Standard (7ME6810) parameter 328 FW 3.09**

Sensor size	Parameter value
DN 25 (1")	0.16
DN 40 (1½")	0.15
DN 50 (2")	0.17
DN 65 (2½")	0.18
DN 80 (3")	0.17



Sensor size	Parameter value
DN 100 (4")	0.17
DN 125 (5")	0.17
DN 150 (6")	0.15
DN 200 (8")	0.17
DN 250 (10")	0.17
DN 300 (12")	0.15
DN 350 (14")	0.15
DN 400 (16")	0.15
DN 450 (18")	0.15
DN 500 (20")	0.15
DN 600 (24")	0.15
DN 700 (27½")	0.15
DN 750 (29½")	0.15
DN 800 (31")	0.15
DN 900 (35")	0.15
DN 1000 (39")	0.15
DN 1050 (41")	0.15
DN 1100 (43")	0.15
DN 1200 (47")	0.15

Table E-2 MAG 8000 CT (7ME6820) parameter 328 FW 3.09

R (Q3/Q1)	no verification	25	63	80	160	200	250	100 with no verification	250 with no verification	400
DN 50 (2")	0.17	0.66	0.66	0.66	0.27	0.27	0.27	0.42	0.17	0.17
DN 65 (2½")	0.18	0.72	0.72	0.72	0.28	0.28	0.28	0.45	0.18	0.18
DN 80 (3")	0.17	0.68	0.68	0.68	0.27	0.27	0.27	0.43	0.17	0.17
DN 100 (4")	0.17	0.67	0.67	0.67	0.27	0.27	0.27	0.42	0.17	0.17
DN 125 (5")	0.17	0.66	0.66	0.66	0.27	0.27	0.27	0.41	0.17	0.17
DN 150 (6")	0.15	0.60	0.60	0.60	0.24	0.24	0.24	0.38	0.15	0.15
DN 200 (5")	0.17	0.68	0.68	0.68	0.27	0.27	0.27	0.42	0.17	0.17
DN 250 (10")	0.17	0.66	0.66	0.66	0.27	0.27	0.27	0.42	0.17	NA
DN 300 (12")	0.24	0.61	0.61	0.38	0.24	0.24	0.24	0.38	0.24	NA
DN 350 (14")	0.21	0.82	0.52	0.32	0.32	0.32	0.32	0.52	0.21	NA
DN 400 (16")	0.17	0.68	0.68	0.42	0.42	0.42	0.42	0.42	0.17	NA
DN 450 (18")	0.21	0.86	0.34	0.21	0.14	0.14	0.14	0.21	0.21	NA
DN 500 (20")	0.17	0.66	0.42	0.27	0.17	0.17	0.17	0.27	0.17	NA
DN 600 (16")	0.24	0.95	0.38	0.24	0.15	0.15	0.15	0.24	0.24	NA

**E.5 400-499**

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
400*	All	-	Output A enable	MLFB-dependent	Yes / No
401*	All	Se3	Pulse A direction	Forward	Forward, Reverse, Forward net, Reverse net
402*	All	Se3	Amount per pulse A	Sensor-related	0 to 1x10 <sup>9</sup>
403*	All	-	Pulse width for pulse A	50 ms	10 ms, 25ms, 50 ms, 100 ms, 500 ms, 5 ms, 0.5 ms
404*	All	-	Output B enable	MLFB-dependent	Yes / No
405*	All	Se4	Pulse B function	Alarm	Pulse, Alarm, Call-up
406*	All		Pulse B direction	Reverse	Forward, Reverse, Forward net, Reverse net
407*	All	Se4	Amount per pulse B	Sensor-related	0 to 1x10 <sup>9</sup>
408*	All		Pulse width for pulse B	50 ms	10 ms, 50 ms, 100 ms, 500 ms
420	All	M5	Device Communication Address	1	1 to 247
421**	All	M6	Baud rate	19 200	1200, 2400, 4800, 9600, 19 200, 38 400
422**	All	M7	Parity	Even 1 stop	Even 1 stop, Odd 1 stop, None 1 stop, None 2 stop,
423**	All	-	Interframe space	35	35 to 255
424**	All	-	Response delay	5	1 to 50 ms
425	All	-	Reset communication driver	No	Yes / No  This parameter is removed from PDM parameter list. The functionality is implemented via PDM menu "Device" → "Communication Settings" → "Transfer"

\*: The parameter is accessible via PDM menu "Device" → "Pulse guide offline".

\*\* : The parameter is accessible via the PDM menu "Device" → "Communication settings".

**E.6 500-599**

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
500	All	-	Latest service date	PS3 production date and time	year-month-day T hours:minutes:seconds
501	All	-	Operating hours since power-up	0	hours
502	All	-	Battery operating time	0	hours

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
505	All	-	Power supply	Power supply level	Battery or mains power
506	All	-	Numbers of power-up	MLFB-dependent	1 to 4 batteries
507	All	-	Battery power		
508	All	-	Battery change enable	No	Yes / No
509	All	Se1	Battery installation date	PS3 production date and time	year-month-day T hours:minutes:seconds
510	All	Se2	Actual battery capacity	100%	100 to 0%
511	All	-	Communication module type	MLFB-dependent	No module, RS 485, RS 232, RS 232 always connected
512	All	-	Number of excitations since last battery reset	0	
513	All	-	Power status	0	Normal operation, 1: Battery alarm. Actual battery capacity is below battery alarm level (% of max capacity) 2: Too low power (enters stand by mode) 3: As value 1 and 2 together 4: External power gone 5: As value 1 and 4 together 6: As value 2 and 4 together 7: As value 1 and 2 and 4 together
514	All	-	Transmitter temperature	Actual degree celsius	
540	All	-	Electrode impedance A	Measured values	0 to 185 000 ohm
541	All	-	Electrode impedance B	Measured values	0 to 185 000 ohm
542	All	-	Low medium impedance alarm	0	0 to 2.15x10 <sup>9</sup>
550	All	-	Coil current disable	No	Yes / No
551	All	-	Fixed flow mode enable	No	Yes / No Value is reset to "No" in 4 hours.
552	All	-	Fixed flow value	0	-1x10x10 <sup>9</sup> to 1x10x10 <sup>9</sup>
553	All	-	High flow alarm limit	1 000 000 000	0 to 1x10 <sup>9</sup>
554	All	-	Reverse flow alarm limit	-1x10 <sup>9</sup>	-1x10 <sup>9</sup> to 1x10 <sup>9</sup>
560	All	-	Repair checksum	No	Yes / No Value is reset to "No" when uploading device parameters to pc after command execution
570	All	-	Device Product ID	vendor id = 42 product id = 27	Siemens MAG 8000 product ID: vendor id = 42 product id = 27

Parameter lists

E.7 600-799

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
590	All with FW3.07 and later	-	Raw velocity	Measured value	
592	All with FW3.07 and later	-	Electrode potential	Measured value	within $\pm 1.2V$

**E.7 600-799**

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
600	All	-	Log interval	Monthly	Daily, Weekly (7 days), Monthly
601	All	-	Delay of weekly logging from current day to first day logging at 00:00:00	0	0 to 30
602	All	-	- Limit for too high consumption	1 000 000	$-1 \times 10^9$ to $1 \times 10^9$
603	All	-	Limit for too low consumption	0	$-1 \times 10^9$ to $1 \times 10^9$
610*	All	L1	Date of latest log period	2000-01-01 T 00:00:00	year-month-day T hours:minutes:seconds
611*	All	L1	Latest Log period totalized (1)		
612*	All	-	Latest Log period totalized (2)	0	
613*	All	-	Latest Log period fault status*	No faults	Active faults in log period; 1: Insulation error 2: Coil current error 3: Amplifier overload 4: Database checksum error 5: Low power warning 6: Flow overflow warning 7: Pulse A overload warning 8: Pulse B overload warning 9: Consumption interval warning 10/L: Leakage warning 11/E: Empty pipe warning 12/C: Low impedance/ high conductivity warning 13/d: High flow limit warning 14/15/16: Not used  If none of the errors have been logged, the message is "No faults"

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
614*	All	-	Latest Log period status information*		Meter operation conditions in log period 1: Totalizer 1 or 2 changed or reset 2: Tariff setting changed or reset 3: Tariff register changed or reset 4: Date - time changed 5: Alarm active in logged period (See alarm fault log for same period) 6: Fault log has been reset 7: HW lock broken 8: Power Up If none of the information has been logged, the message is "No Faults"
615*	All	L2	Date of log period 2		
616*	All	L2	Log period 2 totalized (1)		
617*	All	-	Log period 2 totalized (2)		
618*	All	-	Log period 2 fault status		See 613
619*	All	-	Log period 2 status information		See 614
620*	All	L3	Date of log period 3		
621*	All	L3	Log period 3 totalized (1)		
622*	All	-	Log period 3 totalized (2)		
623*	All	-	Log period 3 fault status		See 613
624*	All	-	Log period 3 status information		See 614
625*	All	L4	Date of log period 4		
626*	All	L4	Log period 4 totalized (1)		
627*	All	-	Log period 4 totalized (2)		
628*	All	-	Log period 4 fault status		See 613
629*	All	-	Log period 4 status information		See 614
630*	All	L5	Date of log period 5		
631*	All	L5	Log period 5 totalized (1)		
632*	All	-	Log period 5 totalized (2)		
633*	All	-	Log period 5 fault status		See 613
634*	All	-	Log period 5 status information		See 614
635*	All	L6	Date of log period 6		
636*	All	L6	Log period 6 totalized (1)		
637*	All	-	Log period 6 totalized (2)		
638*	All	-	Log period 6 fault status		See 613

Parameter lists

E.7 600-799

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
				<b>Fixed parameter or meter data that are not changeable</b>	
639*	All	-	Log period 6 status information		See 614
640'	All	L7	Date of log period 7		
641*	All	L7	Log period 7 totalized (1)		
642*	All	-	Log period 7 totalized (2)		
643*	All	-	Log period 7 fault status		See 613
644*	All	-	Log period 7 status information		See 614
645*	All	L8	Date of log period 8		
646*	All	L8	Log period 8 totalized (1)		
647*	All	-	Log period 8 totalized (2)		
648*	All	-	Log period 8 fault status		See 613
649*	All	-	Log period 8 status information		See 614
650*	All	L9	Date of log period 9		
651*	All	L9	Log period 9 totalized (1)		
652*	All	-	Log period 9 totalized (2)		
653*	All	-	Log period 9 fault status		See 613
654*	All	-	Log period 9 status information		See 614
655*	All	L10	Date of log period 10		
656*	All	L10	Log period 10 totalized (1)		
657*	All	-	Log period 10 totalized (2)		
658*	All	-	Log period 10 fault status		See 613
659*	All	-	Log period 10 status information		See 614
660	All	L11	Date of log period 11		
661*	All	L11	Log period 11 totalized (1)		
662*	All	-	Log period 11 totalized (2)		
663*	All	-	Log period 11 fault status		See 613
664*	All	-	Log period 11 status information		See 614
665*	All	L12	Date of log period 12		
666*	All	L12	Log period 12 totalized (1)		
667*	All		Log period 12 totalized (2)		
668*	All	-	Log period 12 fault status		See 613
669*	All	-	Log period 12 status information		See 614
670*	All	L13	Date of log period 13		
671*	All	L13	Log period 13 totalized (1)		
672*	All	-	- Log period 13 totalized (2)		
673*	All	-	Log period 13 fault status		See 613

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
674*	All	-	Log period 13 status information		See 614
675*	All	L14	Date of log period 14		
676*	All	L14	Log period 14 totalized (1)		
677*	All	-	Log period 14 totalized (2)		
678*	All	-	Log period 14 fault status		See 613
679*	All	-	Log period 14 status information		See 614
680*	All	L15	Date of log period 15		
681*	All	L15	Log period 15 totalized (1)		
682*	All	-	Log period 15 totalized (2)		
683*	All	-	Log period 15 fault status		See 613
684*	All	-	Log period 15 status information		See 614
685*	All	L16	Date of log period 16		
686*	All	L16	Log period 16 totalized (1)		
687*	All	-	Log period 16 totalized (2)		
688*	All	-	Log period 16 fault status		See 613
689*	All	-	Log period 16 status information		See 614
690*	All	L17	Date of log period 17		
691*	All	L17	Log period 17 totalized (1)		
692*	All	-	Log period 17 totalized (2)		
693*	All	-	Log period 17 fault status		See 613
694*	All	-	Log period 17 status information		See 614
695	All	L18	Date of log period 18		
696*	All	L18	Log period 18 totalized (1)		
697*	All	-	Log period 18 totalized (2)		
698*	All	-	Log period 18 fault status		See 613
699*	All	-	Log period 18 status information		See 614
700*	All	L19	Date of log period 19		
701*	All	L19	Log period 19 totalized (1)		
702*	All	-	Log period 19 totalized (2)		
703*	All	-	Log period 19 fault status		See 613
704*	All	-	Log period 19 status information		See 614
705*	All	L20	Date of log period 20		
706*	All	L20	Log period 20 totalized (1)		
707*	All	-	Log period 20 totalized (2)		
708*	All	-	Log period 20 fault status		See 613

Parameter lists

E.7 600-799

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
				<b>Fixed parameter or meter data that are not changeable</b>	
709*	All	-	Log period 20 status information		See 614
710*	All	L21	Date of log period 21		
711*	All	L21	Log period 21 totalized (1)		
712*	All	-	Log period 21 totalized (2)		
713*	All	-	Log period 21 fault status		See 613
714*	All	-	Log period 21 status information		See 614
715*	All	L22	Date of log period 22		
716*	All	L22	Log period 22 totalized (1)		
717*	All	-	Log period 22 totalized (2)		
718*	All	-	Log period 22 fault status		See 613
719*	All	-	Log period 22 status information		See 614
720*	All	L23	Date of log period 23		
721*	All	L23	Log period 23 totalized (1)		
722*	All	-	Log period 23 totalized (2)		
723*	All	-	Log period 23 fault status		See 613
724*	All	-	Log period 23 status information		See 614
725*	All	L24	Date of log period 24		
726*	All	L24	Log period 24 totalized (1)		
727*	All	-	Log period 24 totalized (2)		
728*	All	-	Log period 24 fault status		See 613
729*	All	-	Log period 24 status information		See 614
730*	All	L25	Date of log period 25		
731*	All	L25	Log period 25 totalized (1)		
732*	All	-	Log period 25 totalized (2)		
733*	All	-	Log period 25 fault status		See 613
734*	All	-	Log period 25 status information		See 614
735*	All	L26	Date of log period 26		
736*	All	L26	Log period 26 totalized (1)		
737*	All	-	Log period 26 totalized (2)		
738*	All	-	Log period 26 fault status		See 613
739*	All	-	Log period 26 status information		See 614

\*: Can be accessed via PDM menu "View" → "Log".



## E.8 800-899

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
800	All	-	Insulation test enable	No	Yes / No Value is reset to "No" when the test is finished
801	All	-	Insulation test interval	30	0 to 65535
802	All	-	Insulation value		
803	All	-	Insulation test date	2000-01-01 T00:00	year-month- day T hours:minutes:seconds
804	All	-	Insulation tests fulfilled	0	
810	Advanced	-	Leakage detection mode	Off	Off / fixed limit / lowest + fixed limit
811	Advanced	-	Leakage source	Flow rate	Flow rate / volume
812	Advanced	-	Start period for leakage detection	120 min = 2:00 [24:00]	0 to 1440 detection minutes (0 to 23:50)
813	Advanced	-	Duration leakage detection	0	0 to 144 (10 to 1440 minutes)
814	Advanced	-	Leakage value unit	Flow / volume unit	The unit is updated once parameter 811 change is downloaded to the device and afterwards uploaded to the pc
815	Advanced	-	Leakage limit	1	0 to 1x10 <sup>9</sup> The unit is updated once parameter 811 change is downloaded to device and afterwards uploaded to pc
816	Advanced	-	- Leakage excitation frequency	1.5625 Hz	1/60 Hz, 1/30 Hz, 1/15 Hz, 1/5 Hz, 1.5625 Hz, 3.125 Hz, 6.25 Hz
817	Advanced	-	Leakage status	No faults	Leakage status: 1: Finished successfully 2: Leakage detection running 3: Leakage detection failed (SystemStatus have fatal error) 4: Leakage detection failed (Empty-pipe detection disabled) 5: Leakage detection failed (Coil current off) 6: Leakage detection failed (Insulation test was active during detection) 7: Leakage detection stopped because leakage parameter was changed. If none of the above-mentioned leakage status messages is pending, the message is "No faults"

Parameter lists

E.8 800-899

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
818	Advanced	-	Periods with possible leakage		
819	Advanced	-	Leakage periods before alarm	30	0 to 255
820	Advanced	-	Reset leakage period information	No	Yes / No Value is reset to "No" when uploading device parameters to pc after command execution
821	Advanced	St1	Latest leakage period flowrate	0	
822	Advanced	St1	Latest leakage period volume	0	
823	Advanced	-	Lowest measured leakage value	1 000 000 000	The unit is updated once parameter 811 change is downloaded to device and afterwards uploaded to pc
824	Advanced	-	Date of lowest leakage value	2000-01-01 T00:00	year-month-day T hours:minutes:seconds
825	Advanced	-	Highest measured leakage value	-1x10 <sup>9</sup>	The unit is updated once parameter 811 change is downloaded to device and afterwards uploaded to pc
826	Advanced	-	Date of highest leakage value	2000-01-01 T00:00	year-month-day T hours:minutes:seconds
830	Advanced	R8	Next settling date	PS3 production date and time	year-month-day T 23:59:59
831	Advanced	R9	Latest settling date	PS3 production date and time	year-month-day T 23:59:59
832	Advanced	R9	Latest totalizer 1 value	0	
833	Advanced	R10	Previous settling date	PS3 production date and time	year-month-day T hours:minutes:seconds
834	Advanced	R10	Previous totalizer 1 value	0	
840	Advanced		Tariff control mode	Off	Off / time / range / combination
841	Advanced	R7	Date of tariff reset	PS3 production date and time	year-month-day T hours:minutes:seconds
842	Advanced	-	Reset tariff values	No	Yes / No Value is reset to "No" when uploading device parameters to pc after command execution
843	Advanced	R1	Tariff1 volume 1	0	
844	Advanced	R1	Tariff1 period time end	360 min = 6:00 [24:00]	0 to 1439 minutes (23:59)
845	Advanced	R1	Tariff1 upper limit range	15%	0 to 100% Qn (Q3)
846	Advanced	R2	Tariff2 volume 2	0	
847	Advanced	R2	Tariff2 period time end	540 min = 9:00 [24:00]	0 to 1439 minutes (23:59)
848	Advanced	R2	Tariff2 upper limit range	30%	0 to 100% Qn (Q3)
849	Advanced	R3	Tariff3 volume 3	0	

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
<b>Fixed parameter or meter data that are not changeable</b>					
850	Advanced	R3	Tarif3 period time end	720 min = 12:00 [24:00]	0 to 1439 minutes (23:59)
851	Advanced	R3	Tariff3 upper limit range	45%	0 to 100% Qn (Q3)
852	Advanced	R4	Tariff4 volume 4	0	
853	Advanced	R4	Tariff4 period time end	1080min=18:00 [24:00]	0 to 1439 minutes (23:59)
854	Advanced	R4	Tariff4 upper limit range	60%	0 to 100% Qn (Q3)
855	Advanced	R5	Tariff5 volume 5	0	
856	Advanced	R5	Tariff5 period time end	1260 min = 21:00 [24:00]	0 to 1439 minutes (23:59)
857	Advanced	R5	Tariff5 upper limit range	80%	0 to 100% Qn (Q3)
858	Advanced	R6	Tariff6 volume 6	0	
860	Advanced	-	Reset date of statistic inf.	PS3 production date and time	year- month-day T hours:mi- minutes:seconds
861	Advanced	-	Reset statistic information	No	Yes / No Value is reset to "No" when up- loading device parameters to pc after command execution
862	Advanced	St2	Lowest flowrate	0	
863	Advanced	St2	Date of lowest flowrate	PS3 production date and time	year-month-day T hours:mi- minutes:seconds
864	Advanced	St3	Highest flowrate	0	
865	Advanced	St3	Date of highest flowrate	PS3 production date and time	year-month-day T hours:mi- minutes:seconds
866	Advanced	St5	Lowest day consumption	0	
867	Advanced	-	Date of lowest day consumption	PS3 production date and time	year-month-day T hours:mi- minutes:seconds
868	Advanced	St6	Highest day consumption	0	
869	Advanced	-	Date of highest day consumption	PS3 production date and time	year-month-day T hours:mi- minutes:seconds
870	Advanced	St4	Day 1 (yesterday) of last week consumption	0	
871	Advanced	-	Day 2 of last week consumption	0	
872	Advanced	-	Day 3 of last week consumption	0	
873	Advanced	-	Day 4 of last week consumption	0	
874	Advanced	-	Day 5 of last week consumption	0	
875	Advanced	-	Day 6 of last week consumption	0	
876	Advanced	-	Day 7 (7 days ago) of last week consumption	0	
877	Advanced	St7	Latest week consumption	0	
878	Advanced	St8	Actual month consumption	0	

Parameter lists

E.8 800-899

Parameter ID	Meter version	Display view	Parameter/data type	Factory settings	Data range
				<b>Fixed parameter or meter data that are not changeable</b>	
879	Advanced	St9	Latest month consumption	0	
880	Advanced	-	Reset date of consumption profile	PS3 production date and time	year-month-day T hours:minutes:seconds
881	Advanced	-	Reset consumption profile	No	Yes / No Value is reset to "No" when uploading device parameters to pc after command execution
882	Advanced	-	Total time in CP range 1	0	
883	Advanced	-	Upper limit in CP range 1	15%	0 to 100% Qn (Q3)
884	Advanced	-	Total time in CP range 2	0	
885	Advanced	-	Upper limit in CP range 2	30%	0 to 100% Qn (Q3)
886	Advanced	-	Total time in CP range 3	0	
887	Advanced	-	Upper limit in CP range 3	45%	0 to 100% Qn (Q3)
888	Advanced	-	Total time in CP range 4	0	
889	Advanced	-	Upper limit in CP range 4	60%	0 to 100% Qn (Q3)
890	Advanced	-	Total time in CP range 5	0	
891	Advanced	-	Upper limit in CP range 5	80%	0 to 100% Qn (Q3)
892	Advanced	-	Total time in CP range 6	0	

# Sizing sensor



## F.1 Sizing table DN 25 to 1200 (1" to 48")

The following table shows the relationship between flow velocity (V), flow quantity (Q) and sensor dimension (DN).

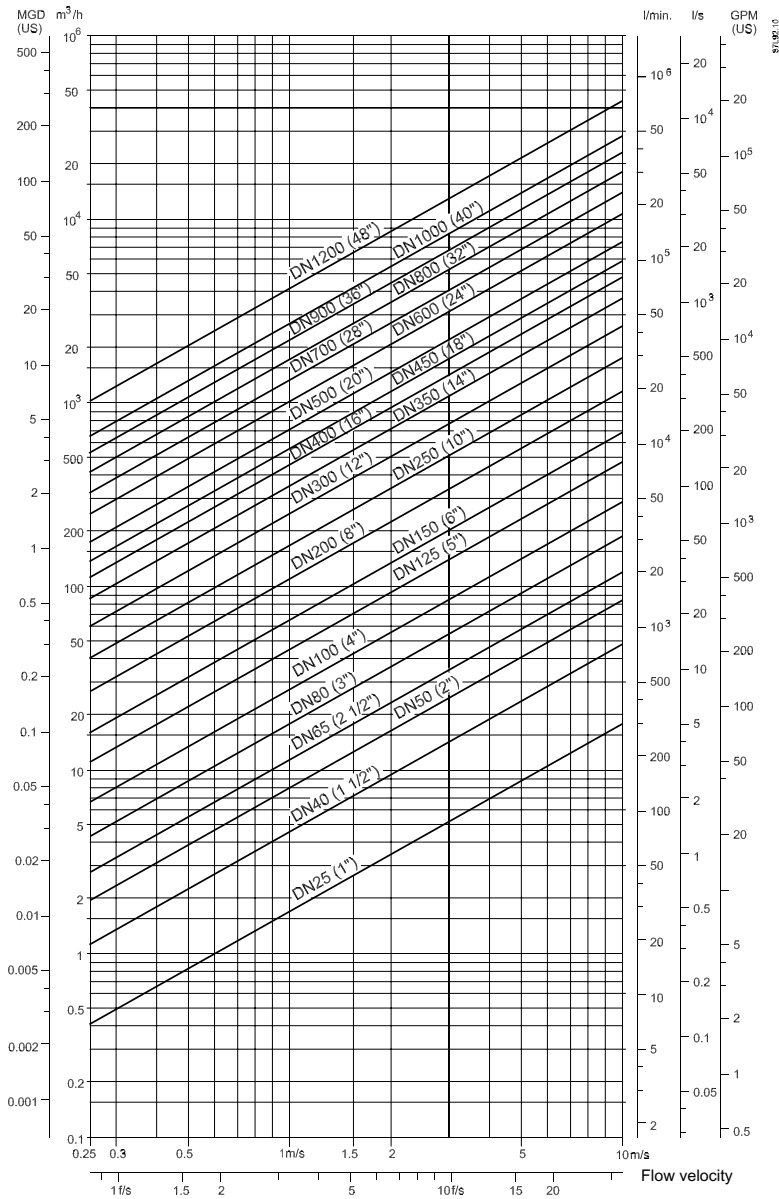


Figure F-1 Sizing table

### Guidelines for selection of sensor

Normally the sensor is selected so that V lies within the measuring range 1 to 2 m/s (3 to 7 ft/sec.).

- Min. measuring range: 0 to 0.25 m/s (0 to 0.8 ft/sec.)
- Max. measuring range: 0 to 10 m/s (0 to 33 ft/sec.)

### Flow velocity calculation formula

- Metric measures:  
 $V = 1273.24 \times Q / D_i^2$  (V: [m/s]; Q: [L/s]; D<sub>i</sub>: [mm])  
or  
 $V = 353.68 \times Q / D_i^2$  (V: [m/s]; Q: [m<sup>3</sup>/h]; D<sub>i</sub>: [mm])
- Imperial measures:  
 $V = Q \times 0.408 / (\text{Pipe I.D.})^2$  (V: [ft/s]; Q: [GPM]; Pipe I.D.: [inch])  
or  
 $V = Q \times 283.67 / (\text{Pipe I.D.})^2$  (V: [ft/s]; Q: [MGD]; Pipe I.D.: [inch])

# Certificates and support

## G.1 Technical support

### Technical support

If this documentation does not provide complete answers to any technical questions you may have, contact Technical Support at:

- Support request (<http://www.siemens.com/automation/support-request>)
- More information about our Technical Support is available at Technical Support (<http://www.siemens.com/automation/csi/service>)

### Internet Service & Support

In addition to our documentation, Siemens provides a comprehensive support solution at:

- Services & Support (<http://www.siemens.com/automation/service&support>)

### Personal contact

If you have additional questions about the device, please contact your Siemens personal contact at:

- Partner (<http://www.automation.siemens.com/partner>)

To find the personal contact for your product, go to "All Products and Branches" and select "Products & Services > Industrial Automation > Process Instrumentation".

### Documentation

You can find documentation on various products and systems at:

- Instructions and manuals (<http://www.siemens.com/processinstrumentation/documentation>)

You can find certificates on the Internet at Certificates (<http://www.siemens.com/processinstrumentation/certificates>) or on an included DVD.







## Features

Feature	MAG 8000 basic	MAG 8000 advanced
Measurement frequency (battery power)	Max. 1/15 Hz	Max. 6.25 Hz
Totalizer	3	3
Pulse output	2, max. 50 Hz	2, max. 100 Hz
Communication	Add-on	Add-on
IrDA	Yes	Yes
Time and date	Yes	Yes
Data protection	Yes	Yes
Data logger	Yes	Yes
Application identifier	Yes	Yes
Alarm handling	Yes	Yes
Meter status	Yes	Yes
Diagnostics	Yes	Yes
Battery power management	Yes	Yes
Insulation test	-	Yes
Leakage detection	-	Yes
Meter utilization	-	Yes
Statistics	-	Yes
Tariff	-	Yes
Settle date (Revenue)	-	Yes

## Features

### Application identification (parameters 1 and 2)

Tag number (visible on display if numbers are selected) and meter location, up to 15 characters per information.

### Time and date (parameter 100)

Real time clock and date (max. 15 minutes drift per year)

### Totalizer (parameters 101, 102 and 103)

- 3 totalizers: Forward, reverse, bidirectional netflow calculation and freely selectable start value.

---

### Note

#### CT version

It is not allowed to reset the totalizer for the CT version.

---

**Measurement** (parameters 300 and 334)

- Freely selectable volume and flow unit, where m<sup>3</sup> and m<sup>3</sup>/h is default in display. All other units are displayed with a display label.
- Excitation frequency in battery operation (manually selected):
  - Basic, max. selectable excitation frequency of 1/15 Hz
  - Advanced, max. selectable excitation frequency of 6.25 Hz and sensor related
  - MAG 8000 default excitation frequency with 2 D-cell battery pack is selected for typically 6 years of operation for MAG 8000 Standard (7ME6810) and MAG 8000 CT (7ME6820).

Size	Default excitation frequency
	MAG 8000 Standard (7ME6810) MAG 8000 CT (7ME6820)
DN 25 to DN 15 (1" to 6")	1/15 Hz
DN 200 to DN 600 (8" to 24")	1/30 Hz
DN 700 to DN 1200 (28" to 48")	1/60 Hz

- Excitation frequency with mains power follows maximum sensor excitation frequency
- Filter constant as numbers of excitations
- Low flow cut off, % of Qn (Q3)
- Empty pipe detection (active symbol on display when active)
- Filter selection for mains power frequency (50/60 Hz)
- Correction factor for change of flow direction or to adjust flow measurement

**Data logger** (Parameters 600 to 739)

- Logging of 26 records: selectable as daily, weekly or monthly logging
- Each logging includes:
  - Consumption on totalizer 1
  - Consumption on totalizer 2
  - Alarm in current period (13 alarms)
  - Meter status (8 values)
  - Alarm on high or low consumption for selected logging period
  - Totalizer 1 values for all 26 periods can be read on the display

**Alarm** (parameters 200 to 274)

- Active alarm is indicated on the display
- Monitoring of all alarms with statistic recording on each alarm
  - Total hours an alarm has been active
  - Numbers of time the alarm has been activated
  - First time an alarm appears
  - Last time the alarm disappears
- Fatal faults interrupt the measurement, if active
  - Signal insulation – Flow signal immunity is influenced (Advanced version only)
  - Coil current – Fault in driving magnetic sensor field
  - Amplifier – Fault in signal circuit
  - Check sum – Fault in calculation or handling of data
- Warning faults
  - Low Power – Alarm for customer-selectable battery level or power drop-out
  - Flow overflow – Flow in sensor exceeds  $Q_{max}$  (125 %  $Q_n$  ( $Q_3$ ,  $Q_4$ ))
  - Pulse overflow on output A and B – Selected pulse volume is too small compared to actual flow rate and max. output pulse rate
  - Consumption – Saved data logger consumption exceeds customer selected limit on high or low consumption
  - Leakage – Leakage detected based on customer settings (Advanced version only)
  - Empty pipe – No water in the pipe/sensor
  - Low impedance – Measured electrode impedance below customer low impedance level
  - Flow limit – Actual flow exceeds selected high flow limited

**Meter status** (parameter 120)

Monitoring of important revenue parameters and data

- Changing totalizers 1 and 2
- Changing tariff totalizer
- Changing tariff settings
- Changing date and time
- Alarm has been active (see alarm log for details)
- Fault log has been reset
- Hardware key has been broken
- Meter has been repowered

### Data protection

- All data stored in an EEPROM. Totalizers 1 and 2 are backed up every 10 min., statistic every hour and power consumption and temperature measurement every 4 hours.
- Password protection of all parameters and hardware protection of calibration and revenue parameters.

### Battery power management

- Optimal battery information on remaining capacity.
- Calculated capacity includes all consuming elements and available battery capacity is adjusted related to change in ambient temperature.

### Diagnostic

- Continuous self test including
  - Coil current to drive the magnetic field
  - Signal input circuit
  - Data calculation, handling and storing
- Features
  - Alarm statistics and logging for fault analyzing
  - Electrode impedance to check actual media contact
  - Flow simulation to check pulse and communication signal chain for correct scaling
  - Number of sensor measurements (excitations)
  - Transmitter temperature (battery capacity calculation)
  - Low impedance alarm for change in media
  - Flow alarm when defined high flow exceeds
  - Insulation test
  - Verification mode for fast measure performance check
- Advanced version includes
  - Leakage detection
  - Consumption profile
  - Flow statistic

### Insulation test

Test of signal immunity against disturbances and poor installations. Test interval is selectable and measurement is interrupted during the test period of 4 min. The last flow value is used for totalization.

### Leakage detection (Advanced version only)

Monitoring the lowest flow or volume during selected time window within 24 hours. Leakage is detected over a selectable period during which monitored values exceed the possible leakage level. Min. and max. values are stored with date registration. Last store value visible on the display.

**Consumption profile** (Advanced version only)

6 registers for monitoring total time the meter has operated in different flow intervals. Registered intervals are freely selectable as % of Qn (Q3).

**Tariff** (Advanced version only)

6 tariff registers count the volume delivered within the selected tariff windows, based on time of day, flow rates, or a combination.

Tariff can also be used for consumption profile where consumption is related to different time intervals or flow rates.

Tariff values visible on the display.

**Settling date** (Advanced version only)

At midnight (23:59:59) on a predefined date the totalizer 1 index value is stored. Old values are stored to show the latest two totalized 1 index values. Settling values are visible on the display.

**Statistic** (Advanced version only)

The statistic feature delivers water consumption information to inspect the consumption limits of the installation. The real values are first available after the period is finished. A reset function clears the values and new values are ready after next period. Until the new measured values are available, minimum values are set to maximum value and vice versa, the rest is set to zero.

- Min. flow rate with time and date registration
- Max. flow rate with time and date registration
- Min. daily consumption with date registration
- Max. daily consumption with date registration
- Latest 7 days' total and daily consumption
- Actual month's consumption
- Latest month's consumption



# Index

## A

Add-on modules  
Electrical connection: Add-on modules, 44

## B

Battery unit, 85

## C

Certificates, 163  
Commissioning  
  With Flow Tool, 45  
  With PDM, 45  
Compact Operating Instructions, 163  
Compliance, 11  
Customer Support, (Refer to Technical support)

## D

Device inspection, 7  
Disposal, 86  
Documentation, 163

## E

Electrical connection, 44  
  Safety instructions, 36

## F

Flow Tool  
  Commissioning, 45

## H

History, 8  
Hotline, (Refer to Support request)

## I

Installation  
  Compact, 17

  Indoor/outdoor, 17  
  Remote, 17  
Instructions and manuals, 163  
Items supplied, 7

## L

Laws and directives, 11  
Lithium batteries, 85  
  Return, 86  
  Safety, 12

## M

Mains supply, 36  
Maintenance, 79  
Manuals, 163  
Material compatibility, 11

## O

Operating Instructions, 163

## P

Parameter lists, 141  
PDM  
  Commissioning, 45  
Pressure specifications, 17

## R

Repair, 79  
Return procedure, 85

## S

Safety, 11  
  Instrument safety standards, 11  
Safety instructions  
  Electrical connection, 36  
Scope of delivery, 8  
Service, 79, 163  
Service & Support, 163  
  Internet, 163  
Sizing table, 161

Support, 163  
Support request, 163  
System components, 13

## **T**

Technical support, 163  
    Partner, 163  
    Personal contact, 163  
Temperature specifications, 17  
Type plate, 15

## **V**

Vibrations, 22

## **W**

Warranty, 9