

The Siemens logo is displayed in a white rectangular box at the top right of the page. The background of the entire page is a blurred industrial factory setting with a man in a light blue shirt looking at a tablet. Overlaid on the scene are various digital icons: a 'NEWS' section with a person icon, a '24/7' icon with a circular arrow, a 'Home' button, a group of people icon, and a magnifying glass icon. The overall color scheme is blue and white with digital grid patterns.

**SIEMENS**

# Support Packages for TIA Portal V18

December 2023 – 2<sup>nd</sup> Edition

<https://support.industry.siemens.com/cs/ww/en/view/72341852>

Siemens  
Industry  
Online  
Support



---

This entry is from the Siemens Industry Online Support. The general terms of use ([http://www.siemens.com/terms\\_of\\_use](http://www.siemens.com/terms_of_use)) apply.

**Security  
information**

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks. In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit <https://www.siemens.com/industrialsecurity>.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under <https://www.siemens.com/cert>.

---

# Table of content

<b>1</b>	<b>Support Packages for STEP 7 .....</b>	<b>4</b>
1.1	Support Packages for STEP 7 Basic or Professional V18 .....	4
1.1.1	HSP 0134 .....	4
1.1.2	HSP 0198 .....	4
1.1.3	HSP 0311 – V1.0 .....	4
1.1.4	HSP 0311 – V2.0 .....	4
1.1.5	HSP 0345 – V2.0 .....	4
1.1.6	HSP 0378 .....	4
<b>1.1.7</b>	<b>New: HSP 0379 .....</b>	<b>5</b>
1.1.8	HSP 0383 .....	5
1.1.9	HSP 0384 .....	5
1.1.10	HSP 0388 .....	5
1.1.11	HSP 0389 – STEP 7 V18 Update 1 is required .....	5
<b>1.1.12</b>	<b>New: HSP 0390 .....</b>	<b>5</b>
1.1.13	HSP 0391 .....	5
1.1.14	HSP 0392 .....	6
1.1.15	HSP 0396 .....	6
1.1.16	HSP 0403 .....	7
1.1.17	HSP 0404 .....	7
1.1.18	HSP 0411 .....	7
1.1.19	HSP 0412 – STEP 7 V18 Update 2 is required .....	7
1.1.20	HSP 0415 .....	7
1.2	Support Packages for STEP 7 Professional V18 .....	8
1.2.1	HSP 0185 – V2.0 .....	8
1.2.2	HSP 0327 .....	8
<b>2</b>	<b>Support Packages for WinCC .....</b>	<b>9</b>
2.1	Support Packages for WinCC V18 .....	9
2.1.1	Currently no HSP files for WinCC V18 are available .....	9
<b>3</b>	<b>Support Packages for STEP 7 Safety .....</b>	<b>10</b>
3.1	Support Packages for STEP 7 Safety Advanced V18 .....	10
3.1.1	HSP 0394 .....	10
3.1.2	HSP 0406 .....	10
3.1.3	HSP 0407 .....	10

# 1 Support Packages for STEP 7

## 1.1 Support Packages for STEP 7 Basic or Professional V18

You can use these HSP with STEP 7 Basic V18 and STEP 7 Professional V18.  
**At least** STEP 7 Basic V18 or STEP 7 Professional V18 is required.

### 1.1.1 HSP 0134

is necessary for this device:

SIMATIC ET 200PRO Frequency converter FC-2 – FW Version 4.7.14

- 6SL3514-1KE13-5AE0

### 1.1.2 HSP 0198

is necessary for these devices:

SIMATIC MICRO-DRIVE PDC(F)

- 6BK1630-1AA10-0AA0; 6BK1630-2AA10-0AA0
- 6BK1630-1AA60-0AA0; 6BK1630-2AA60-0AA0
- 6BK1630-1BA00-0AA0

### 1.1.3 HSP 0311 – V1.0

is necessary for these modules:

SIMATIC ET 200SP F-TM ServoDrive/StepDrive

- 6BK1136-6AB00-0BU0
- 6BK1136-6AB00-0CU0
- 6BK1136-6SB00-0BU0

### 1.1.4 HSP 0311 – V2.0

is necessary for these modules:

SIMATIC ET 200SP F-TM ServoDrive/StepDrive – FW Version 2.0

- 6BK1136-6AB0.-0BU0
- 6BK1136-6AB0.-0CU0
- 6BK1136-6SB0.-0BU0

### 1.1.5 HSP 0345 – V2.0

is necessary for this module:

SIMATIC ET 200PRO Frequency Converter FC-2 – FW Version 4.7.14

- 6SL3514-1KE13-5AE0

### 1.1.6 HSP 0378

is necessary for these modules:

SIMATIC ET 200eco PN, CM IO-Link – FW-Version 5.1

- 6ES7148-6JE00-0BB0
- 6ES7148-6JJ00-0BB0

### 1.1.7 **New: HSP 0379**

is necessary for this module:  
SIMATIC S7-1500, TM NPU – FW-Version 2.0

- 6ES7556-1AA00-0AB0

### 1.1.8 **HSP 0383**

is necessary for this module:  
SIMATIC S7-1500, AI 8xHART HF

- 6ES7531-7TF00-0AB0

### 1.1.9 **HSP 0384**

is necessary for these devices:  
SCALANCE WAM76x/WUM76x – FW-Version 2.0

- 6GK5763-1AL00-3AA0; 6GK5763-1AL00-3DA0; 6GK5763-1AL00-7DA0
- 6GK5766-1GE00-3DA0; 6GK5766-1GE00-3DB0; 6GK5766-1GE00-3DC0
- 6GK5766-1GE00-7DA0; 6GK5766-1GE00-7DB0; 6GK5766-1GE00-7DC0
- 6GK5766-1GE00-7TA0; 6GK5766-1GE00-7TB0; 6GK5766-1GE00-7TC0

### 1.1.10 **HSP 0388**

is necessary for this device:  
SCALANCE SC626 – FW-Version 2.3

- 6GK5626-2GS00-2AC2

### 1.1.11 **HSP 0389 – STEP 7 V18 Update 1 is required**

is necessary for these devices:  
SCALANCE XC/XR – FW-Version 2.2

- 6GK5323-4TS01-2AC2
- 6GK5324-8TS01-2AC2
- 6GK5328-4TS01-2AC2; 6GK5328-4TS01-2EC2
- 6GK5332-0GA01-2AC2
- 6GK5334-2TS01-2AR3; 6GK5334-2TS01-2ER3; 6GK5334-2TS01-3AR3;
- 6GK5334-2TS01-4AR3
- 6GK5334-3TS01-2AR3; 6GK5334-3TS01-3AR3; 6GK5334-3TS01-4AR3

### 1.1.12 **New: HSP 0390**

is necessary for this module:  
SIMATIC S7-1500 AI 8 X U/R/RTD/TC HF – FW-Version 1.2

- 6ES7531-7PF00-0AB0

### 1.1.13 **HSP 0391**

is necessary for this module:  
SIMATIC ET 200eco PN, AI 6xU/I +AIQ 2xU/I, M12-L – FW-Version 5.1

- 6ES7146-6HF00-0BB0

### 1.1.14 HSP 0392

is necessary for these devices:

SCALANCE X200/X300 – FW-Version 4.4

- 6GK5204-0GA00-1UF2;
- 6GK5204-2AA00-2GF2; 6GK5204-2AA00-2YF2
- 6GK5205-3BB00-2AB2; 6GK5205-3BB00-2TB2; 6GK5205-3BD00-2AB2
- 6GK5205-3BD00-2TB2; 6GK5205-3BF00-2AB2; 6GK5205-3BF00-2TB2
- 6GK5206-2BB00-2AB2; 6GK5206-2BB00-2AC2
- 6GK5206-2BD00-2AB2; 6GK5206-2BD00-2AC2
- 6GK5206-2BF00-2AB2
- 6GK5206-2BS00-2AC2; 6GK5206-2BS00-2FC2
- 6GK5206-2GS00-2AC2; 6GK5206-2GS00-2FC2; 6GK5206-2GS00-2TC2
- 6GK5206-2RS00-2AC2; 6GK5206-2RS00-5AC2; 6GK5206-2RS00-5FC2
- 6GK5208-0BA00-2AB2; 6GK5208-0BA00-2AC2; 6GK5208-0BA00-2FC2
- 6GK5208-0BA00-2TB2; 6GK5208-0GA00-2AC2; 6GK5208-0GA00-2FC2
- 6GK5208-0GA00-2TC2; 6GK5208-0HA00-2AS6; 6GK5208-0HA00-2ES6
- 6GK5208-0HA00-2TS6; 6GK5208-0RA00-2AC2; 6GK5208-0RA00-5AC2
- 6GK5208-0UA00-5ES6
- 6GK5213-3BB00-2AB2; 6GK5213-3BB00-2TB2; 6GK5213-3BD00-2AB2
- 6GK5213-3BD00-2TB2; 6GK5213-3BF00-2AB2; 6GK5213-3BF00-2TB2
- 6GK5216-0BA00-2AB2; 6GK5216-0BA00-2AC2; 6GK5216-0BA00-2FC2
- 6GK5216-0BA00-2TB2; 6GK5216-0HA00-2AS6; 6GK5216-0HA00-2ES6
- 6GK5216-0HA00-2TS6; 6GK5216-0UA00-5ES6; 6GK5216-3RS00-2AC2
- 6GK5216-3RS00-5AC2; 6GK5216-4BS00-2AC2; 6GK5216-4GS00-2AC2
- 6GK5216-4GS00-2FC2; 6GK5216-4GS00-2TC2
- 6GK5224-0BA00-2AC2; 6GK5224-4GS00-2AC2; 6GK5224-4GS00-2FC2
- 6GK5224-4GS00-2TC2
- 6GK5324-0BA00-2AR3; 6GK5324-0BA00-3AR3
- 6GK5326-2QS00-3AR3; 6GK5326-2QS00-3RR3
- 6GK5328-4FS00-2AR3; 6GK5328-4FS00-2RR3; 6GK5328-4FS00-3AR3
- 6GK5328-4FS00-3RR3; 6GK5328-4SS00-2AR3; 6GK5328-4SS00-3AR3

### 1.1.15 HSP 0396

is necessary for this device:

Basic Unit SIMOCODE pro – FW-Version 3.0

- 3UF7011-1A

### 1.1.16 HSP 0403

is necessary for these devices:

SCALANCE X400/X500 – FW-Version 6.6

- 6GK5408-4GP00-2AM2; 6GK5408-4GQ00-2AM2
- 6GK5408-8GR00-2AM2; 6GK5408-8GS00-2AM2
- 6GK5416-4GR00-2AM2; 6GK5416-4GS00-2AM2
- 6GK5524-8GR00-2AR2; 6GK5524-8GR00-3AR2; 6GK5524-8GR00-4AR2
- 6GK5524-8GS00-2AR2; 6GK5524-8GS00-3AR2; 6GK5524-8GS00-4AR2
- 6GK5526-8GR00-2AR2; 6GK5526-8GR00-3AR2; 6GK5526-8GR00-4AR2
- 6GK5526-8GS00-2AR2; 6GK5526-8GS00-3AR2; 6GK5526-8GS00-4AR2
- 6GK5528-0AA00-2AR2; 6GK5528-0AA00-2HR2
- 6GK5528-0AR00-2AR2; 6GK5528-0AR00-2HR2
- 6GK5552-0AA00-2AR2; 6GK5552-0AA00-2HR2
- 6GK5552-0AR00-2AR2; 6GK5552-0AR00-2HR2

### 1.1.17 HSP 0404

is necessary for these modules:

SIMATIC S7-1500 PS – FW-Version 1.1

- 6ES7505-0KA00-0AB0
- 6ES7505-0RA00-0AB0
- 6ES7505-0RB00-0AB0
- 6ES7507-0RA00-0AB0

### 1.1.18 HSP 0411

is necessary for these devices:

SIRIUS Soft Starter 3RW5

- 3RW5980-OCT00
- 3RW5980-OHF00

### 1.1.19 HSP 0412 – STEP 7 V18 Update 2 is required

is necessary for these devices:

SENTRON Circuit breaker 3VA6 – FW-Version 4.5

- 3VA67...K..
- 3VA68...K..
- 3VA69...K..

### 1.1.20 HSP 0415

is necessary for this module:

SIMATIC ET 200SP, IM 155-6 PN ST – FW-Version 6.1

- 6ES7155-6AU02-0BN0

## 1.2 Support Packages for STEP 7 Professional V18

You can use these HSP with STEP 7 Professional V18. **At least** STEP 7 Professional V18 is required.

### 1.2.1 HSP 0185 – V2.0

is necessary for these devices:

SINAMICS V90 PN – FW-Version 1.5

- 6SL3210-5FB10-1UF2; 6SL3210-5FB10-2UF2; 6SL3210-5FB10-4UF1
- 6SL3210-5FB10-8UF0
- 6SL3210-5FB11-0UF1; 6SL3210-5FB11-5UF0
- 6SL3210-5FB12-0UF0
- 6SL3210-5FE10-4UF0; 6SL3210-5FE10-8UF0
- 6SL3210-5FE11-0UF0; 6SL3210-5FE11-5UF0
- 6SL3210-5FE12-0UF0
- 6SL3210-5FE13-5UF0
- 6SL3210-5FE15-0UF0
- 6SL3210-5FE17-0UF0

### 1.2.2 HSP 0327

is necessary for this module:

SIMATIC S7-1500 TM MFP

- 6ES7558-1AA00-0AB0



## **2 Support Packages for WinCC**

### **2.1 Support Packages for WinCC V18**

#### **2.1.1 Currently no HSP files for WinCC V18 are available**

## **3 Support Packages for STEP 7 Safety**

### **3.1 Support Packages for STEP 7 Safety Advanced V18**

#### **3.1.1 HSP 0394**

is necessary for this module:

SIMATIC S7-1500 F-AI 8xI 0(4)..20mA PROFIsafe

- 6ES7536-1MF00-0AB0

#### **3.1.2 HSP 0406**

is necessary for these modules:

SIPLUS S7-1200 F

- 6AG1214-1AF40-5XB0; 6AG1214-1HF40-5XB0
- 6AG1215-1AF40-5XB0
- 6AG1226-6BA32-5XB0; 6AG1226-6DA32-5XB0; 6AG1226-6RA32-5XB0

#### **3.1.3 HSP 0407**

is necessary for these modules:

SIPLUS ET 200SP F-AI/DI

- 6AG1136-6AB00-2CA1; 6AG1136-6BA01-2CA0
- 6AG2136-6AB00-1CA1; 6AG2136-6BA01-2CA0