

Industrial Controls

Safety engineering SIRIUS 3SK1 Safety Relays and 3RQ1 Positively-Driven Coupling Relays


Equipment Manual


<u>Introduction</u>	1
<u>Safety instructions</u>	2
<u>Description</u>	3
<u>Safety systems - General information</u>	4
<u>3SK1 / 3RQ1 devices</u>	5
<u>System configuration</u>	6
<u>Mounting</u>	7
<u>Connection</u>	8
<u>Configuration / operation</u>	9
<u>Commissioning</u>	10
<u>Display and diagnostics</u>	11
<u>Technical data</u>	12
<u>Dimension drawings</u>	13
<u>Circuit diagrams</u>	14
<u>Accessories</u>	15


Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 DANGER
indicates that death or severe personal injury will result if proper precautions are not taken.

 WARNING
indicates that death or severe personal injury may result if proper precautions are not taken.

 CAUTION
indicates that minor personal injury can result if proper precautions are not taken.

NOTICE
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

 WARNING
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Table of contents

1	Introduction	9
1.1	Purpose of this manual	9
1.2	Target group	10
1.3	Required basic knowledge.....	11
1.4	Validity range	12
1.5	Siemens Industry Online Support	13
1.6	Siemens Industry Online Support app.....	15
1.7	DataMatrix code	16
1.8	Configurator for 3SK1 safety relays	17
1.9	User responsibility for system design and function.....	18
1.10	Additional documentation	19
1.11	History.....	20
1.12	Support Request	21
2	Safety instructions	23
2.1	General safety notes	23
2.2	Recycling and disposal	26
2.3	Intended use.....	27
2.4	Current information about operational safety	28
2.5	Security information	29
2.6	Electromagnetic compatibility (EMC) according to IEC 60947-5-1	30
3	Description	31
3.1	Use.....	31
3.2	Product overview	32
3.3	Components and accessories	34
3.4	Functional scope of the 3SK1 basic units	35
3.5	3SK1 system	36
3.5.1	3SK1 Standard system configuration	36
3.5.2	3SK1 Advanced system configuration	37
4	Safety systems - General information	41
4.1	What is safety?.....	41
4.2	Safety function	42
4.3	Basic terminology	43

4.3.1	Redundancy/single-channel and two-channel	43
4.3.2	Cross-circuit detection	44
4.3.3	Enabling circuit (safety-related output)	44
4.3.4	Signaling circuit	44
4.3.5	Feedback circuit	45
4.3.6	Stop category	45
4.3.7	Automatic start	46
4.3.8	Manual start	46
4.3.9	Monitored start	46
4.3.10	Two-hand operation/synchronism	47
4.3.11	Cascading	48
4.3.12	Startup testing	48
4.3.13	Connection of actuators	48
4.3.14	Series connection of sensors	51
4.3.15	Use of magnetically operated switches	52
5	3SK1 / 3RQ1 devices	53
5.1	3SK1 standard	53
5.1.1	General information	53
5.1.2	Applications	53
5.1.3	3SK1111 Standard basic unit instantaneous (with relay outputs)	54
5.1.3.1	General information	54
5.1.3.2	Function description	54
5.1.3.3	Design	55
5.1.3.4	Terminal assignment	55
5.1.3.5	Inputs	56
5.1.3.6	Outputs	57
5.1.3.7	Display of the operating state	57
5.1.3.8	Function setting	57
5.1.4	3SK1112 Standard basic unit instantaneous (with semiconductor outputs)	60
5.1.4.1	General information	60
5.1.4.2	Function description	61
5.1.4.3	Design	62
5.1.4.4	Terminal assignment	62
5.1.4.5	Inputs	63
5.1.4.6	Outputs	64
5.1.4.7	Display of the operating state	64
5.1.4.8	Function setting	64
5.2	3SK1 Advanced	67
5.2.1	General information	67
5.2.2	Applications	67
5.2.3	General device features	67
5.2.4	Function description	68
5.2.5	Functions	69
5.2.6	3SK1121 Advanced basic unit instantaneous (with relay outputs)	70
5.2.6.1	Device features	70
5.2.6.2	Function description	70
5.2.6.3	Design	71
5.2.6.4	Terminal assignment	71
5.2.7	3SK1121 Advanced basic unit time-delayed (with relay outputs)	73
5.2.7.1	Device features	73
5.2.7.2	Design	74

5.2.7.3	Terminal assignment.....	74
5.2.8	3SK1122 Advanced basic unit instantaneous (with semiconductor outputs)	76
5.2.8.1	Device features	76
5.2.8.2	Design	78
5.2.8.3	Terminal assignment.....	78
5.2.9	3SK1122 Advanced basic unit time-delayed (with semiconductor outputs)	80
5.2.9.1	Device features	80
5.2.9.2	Design	82
5.2.9.3	Terminal assignment.....	82
5.2.10	3SK1120 Advanced basic unit instantaneous (with semiconductor outputs)	84
5.2.10.1	Device features	84
5.2.10.2	Design	86
5.2.10.3	Terminal assignment.....	86
5.2.10.4	Status diagrams	87
5.3	3SK1 output expansions	89
5.3.1	Applications.....	89
5.3.2	Function description	89
5.3.3	Display of the operating state.....	90
5.3.4	Function setting.....	90
5.3.5	Output expansion 3SK1211	90
5.3.5.1	Device features	90
5.3.5.2	Design of 3SK1211-.B..0	92
5.3.5.3	Design of 3SK1211-.BB40	93
5.3.5.4	Terminal assignment.....	93
5.3.6	Output expansion 3SK1213	94
5.3.6.1	Device features	94
5.3.6.2	Design of 3SK1213-.AB40	95
5.3.6.3	Design of 3SK1213-.A.20	96
5.3.6.4	Terminal assignment.....	96
5.3.7	3RM1 Failsafe motor starters.....	97
5.4	3RQ1 output expansion	98
5.4.1	Applications.....	98
5.4.2	Function description	99
5.4.3	Display of the operating state.....	99
5.4.4	Device features	99
5.4.5	3RQ11.00-.E.00, 3RQ1000-.G.00 configuration	101
5.4.6	3RQ1000-xHB00, 3RQ1000-xLB00 configuration	102
5.4.7	Terminal assignment.....	102
5.5	3SK1 input expansions.....	104
5.5.1	Input expansion 3SK1220	104
5.5.1.1	Device features	104
5.5.1.2	Applications.....	104
5.5.1.3	Design	105
5.5.1.4	Terminal assignment.....	105
5.5.1.5	Display of the operating state.....	106
5.5.1.6	Function setting.....	106
5.5.2	Power supply 3SK1230	107
5.5.2.1	Device features	107
5.5.2.2	Applications.....	108
5.5.2.3	Design	109
5.5.2.4	Terminal assignment.....	109

5.5.2.5	Display of the operating state.....	110
6	System configuration.....	111
6.1	General information.....	111
6.1.1	General notes on the Standard system.....	111
6.1.2	General information on the Advanced system.....	111
6.1.3	Maximum system configuration	112
6.2	3ZY12 device connector.....	116
6.2.1	Device features	116
6.2.2	Applications.....	119
6.3	System configuration rules	120
7	Mounting	123
7.1	Warning notices	123
7.2	Terminal coding	124
7.3	Mounting the devices on a level surface	125
7.4	Disassembling devices from a level surface.....	127
7.5	Mounting 22.5 mm/17.5 mm devices on a standard mounting rail	129
7.6	Mounting the 90 mm devices on a standard mounting rail	130
7.7	Removing devices from a standard mounting rail.....	131
7.8	Mounting 22.5 mm/17.5 mm devices with device connectors on a standard mounting rail ...	132
7.9	Removing 22.5 mm/17.5 mm devices with device connectors from a standard mounting rail.....	135
7.10	Mounting 90 mm devices with device connectors on a standard mounting rail	138
7.11	Removing 90 mm devices with device connectors from a standard mounting rail.....	141
7.12	Mounting 22.5 mm/17.5 mm devices with device connectors on the wall.....	144
7.13	Removing 22.5 mm/17.5 mm devices with device connectors from the wall	147
7.14	Mounting 90 mm devices with device connectors on the wall.....	149
7.15	Removing 90 mm devices with device connectors from wall	152
7.16	Mounting the sealable cover	154
8	Connection.....	155
8.1	Warning notices.....	155
8.2	22.5 mm/17.5 mm devices.....	156
8.2.1	Terminal assignment.....	156
8.2.2	Connection data for 3SK1 terminals	157
8.2.3	Connection data for 3RQ1 terminals.....	158
8.2.4	Connecting the screw-type terminals	158
8.2.5	Disconnecting the screw-type terminals	159
8.2.6	Wiring rules for spring-loaded terminal (push-in system)	160
8.2.7	Connection data for 3SK1 spring-loaded terminal (push-in system).....	160
8.2.8	Connection data for 3RQ1 spring-loaded terminal (push-in system)	161
8.2.9	Connecting spring-loaded (push-in) terminals	161

8.2.10	Disconnect the spring-loaded (push-in) terminal.....	162
8.2.11	Attaching the terminals.....	163
8.2.12	Disconnecting.....	164
8.3	Devices 90 mm	167
8.3.1	Opening the terminal cover.....	167
8.3.2	Connection data for terminals	168
8.3.3	Connecting terminals.....	168
8.3.4	Mounting terminals	170
8.3.5	Disconnecting.....	171
8.4	Device replacement	173
9	Configuration / operation	175
9.1	Procedure for configuration.....	175
9.2	Explanation of the device's functions.....	176
9.3	Modes	179
9.4	Response times.....	180
10	Commissioning	183
11	Display and diagnostics	185
11.1	LED display	185
11.2	Power-up.....	187
11.3	Error statuses.....	188
11.4	Diagnostics.....	189
12	Technical data.....	191
12.1	Technical data in Siemens Industry Online Support.....	191
12.2	Electrical endurance.....	192
12.3	Overview tables	194
13	Dimension drawings.....	195
13.1	CAX data.....	195
14	Circuit diagrams.....	197
14.1	CAX data.....	197
14.2	Internal circuit diagrams.....	198
14.2.1	Internal circuit diagrams for 3SK1 Standard basic units	198
14.2.2	Internal circuit diagrams for 3SK1 Advanced basic units	200
14.2.3	Internal circuit diagrams for expansion units.....	202
14.3	Typical circuits	211
14.4	Typical circuits of 3SK1 safety relays with 3RM1 Failsafe motor starters	222
14.4.1	3SK1 safety relay with 3RM1 Failsafe motor starter via device connector	222
14.4.2	3SK1 safety relay wired with 3RM1 Failsafe motor starter.....	224
14.5	Additional applications.....	226

15	Accessories	227
	Index	229

Introduction

1.1 Purpose of this manual

This manual contains a detailed description of SIRIUS 3SK1 safety relays and components that can be used with them as well as of 3RQ1 coupling relays.

This manual provides you with the information you require to configure, install, connect and diagnose 3SK1 safety relays. A few application examples provide you with a clear and practice-oriented introduction.

1.2 Target group

The manual is intended for everyone involved in the following tasks:

- Planning and configuring systems
- Installation
- Commissioning
- Service and maintenance

1.3 Required basic knowledge

A general knowledge of the following areas is needed in order to understand this manual:

- Low-voltage switchgear
- Digital circuit logic
- Automation systems
- Safety systems

1.4 Validity range

The manual is valid for SIRIUS 3SK1 safety relays and 3RQ1 positively-driven coupling relays. It describes the components that are valid at the time of publication.

SIEMENS reserves the right of including a Product Information for each new component, and for each component of a later version.

1.5 Siemens Industry Online Support

Information and service

At Siemens Industry Online Support you can obtain up-to-date information from our global support database:

- Product support
- Application examples
- Forum
- mySupport

Link: Siemens Industry Online Support

Product support

You can find information and comprehensive know-how covering all aspects of your product here:

- **FAQs**
Answers to frequently asked questions
- **Manuals/operating instructions**
Read online or download, available as PDF or individually configurable.
- **Certificates**
Clearly sorted according to approving authority, type and country.
- **Characteristics**
For support in planning and configuring your system.
- **Product announcements**
The latest information and news concerning our products.
- **Downloads**
Here you will find updates, service packs, HSPs and much more for your product.
- **Application examples**
Function blocks, background and system descriptions, performance statements, demonstration systems, and application examples, clearly explained and represented.
- **Technical data**
Technical product data for support in planning and implementing your project

Link: Product support

mySupport

The following functions are available in your personal work area "mySupport":

- **Support Request**
Search for request number, product or subject
- **My filters**
With filters, you limit the content of the online support to different focal points.

- **My favorites**
With favorites you bookmark articles and products that you need frequently.
- **My notifications**
Your personal mailbox for exchanging information and managing your contacts. You can compile your own individual newsletter in the "Notifications" section.
- **My products**
With product lists you can virtually map your control cabinet, your system or your entire automation project.
- **My documentation**
Configure your individual documentation from different manuals.
- **CAX data**
Easy access to CAX data, e.g. 3D models, 2D dimension drawings, EPLAN macros, device circuit diagrams
- **My IBase registrations**
Register your Siemens products, systems and software.

1.6 Siemens Industry Online Support app

Siemens Industry Online Support app

The Siemens Industry Online Support app provides you access to all the device-specific information available on the Siemens Industry Online Support portal for a particular article number, such as operating instructions, manuals, data sheets, FAQs etc.

The Siemens Industry Online Support app is available for Android and iOS:



Android



iOS

1.7 DataMatrix code

A DataMatrix code is lasered onto the lower terminal cover of all 3SK1-series safety relays.

DataMatrix codes are standardized in ISO/IEC 16022. The DataMatrix codes on Siemens devices use ECC200 coding for powerful error correction.

The following device information is encoded in the DataMatrix codes as a bit stream:

- Article number (MLFB)
- Serial number
- MAC address, if applicable

This information is stored in the following format in the DataMatrix code:

1P	Article number	+	S serial number (+ 23S MAC address)
Data identifier	Net content	Separator	

Note

The information content is displayed without spaces.

This machine-readable information simplifies and accelerates handling of the respective devices. As well as fast access to the serial numbers of the respective devices for unique identification, the DataMatrix codes simplify communication with Siemens Technical Support.

1.8 Configurator for 3SK1 safety relays

Configurator

Various configurators are available on the Internet to assist you with configuration.

The configurator for safety relays with accessories is an easy-to-use selection and engineering tool. You can select the individual components and plan your system in accordance with your specific requirements. You can save your selection, export it as a text file or you can order it directly.

The configurator automatically compiles a document list of the information available in Service & Support for every component. You can use it as the basis for putting together your system documentation.

Link:

Configurator (<https://mall.industry.siemens.com/mall/en/de/Catalog/Products/10027588?tree=CatalogTree&activetab=configurator>)

1.9 User responsibility for system design and function

The products described here were developed to perform safety-related functions as part of an overall installation or machine.

A complete, safety-related system is generally equipped with sensors, evaluation units, and signaling units, and uses reliable shutdown concepts.

It is the responsibility of the manufacturer of a system or machine to ensure that the product functions properly.

Siemens AG, its regional offices, and associated companies (hereinafter referred to as "Siemens") cannot guarantee all the properties of an entire plant, system or machine that has not been designed by Siemens.

Nor can Siemens assume liability for recommendations that appear or are implied in the following description. No new guarantee, warranty, or liability claims beyond the scope of the Siemens general terms of supply are to be derived or inferred from the following description.

1.10 Additional documentation

List of references

You will find further manuals in the table that may be of interest for your project planning. They are available to download from the Internet free of charge. You can create your own individual system documentation in the Siemens Industry Online Support under "mySupport".

Title of the manual	Document number
SIRIUS 3RK3 Modular Safety System	3ZX1012-0RK31-1AB1
SIRIUS 3SK2 Safety Relays	3ZX1012-OSK21-1AB1
SIRIUS 3RM1 motor starters	3ZX1012-ORM10-2AB1
SIRIUS Safety Integrated	3ZX1012-OSK11-1AB1

Interesting links

- [Manuals in Siemens Industry Online Support](#)
- [FAQs about safety engineering](#)
- [Safety Evaluation Tool](#)
- [Systematic industrial safety engineering: Safety Integrated](#)
- [The EMC Directive 2014/30/EU in Practice](#)
- [Industrial Control Panels and Electronic Equipment of Industrial Machinery for North America](#)
- [Control Panels compliant with IEC Standards and European Directives](#)

1.11 History

Product version	New features
02/2013	Initial release
02/2014	Integration of 3RM1 Failsafe motor starters
09/2015	Revision of the manual
04/2021	Revision of the manual and incorporation of the 3RQ1 coupling relay

1.12 Support Request

Use the Support Request online form to send your question directly to Technical Support:

Support Request:	Internet
------------------	----------

See also

Support request (<https://support.industry.siemens.com/My/ww/en/requests>)

Safety instructions

2.1 General safety notes

Note

SILCL 3 in accordance with IEC 62061:2005PL e / Cat. 4 in accordance with EN ISO 13849-1: 2008

The 3SK11 / 3RQ12 safety relays are designed in such a way as to allow implementation of applications up to SILCL 3 in accordance with IEC 62061 and PL e / Cat. 4 in accordance with EN ISO 13849-1.

Note

SILCL 2 as per IEC 62061 / PL c / Cat. 2 as per EN ISO 13849-1: 2008 for 3RQ10 coupling relays

The 3RQ10 positively-driven safety-related coupling relays are designed in such a way as to allow implementation of applications up to SILCL 2 in accordance with IEC 62061, PL c / Cat. 2 in accordance with ISO 13849-1.

Note

Safe state

The basis of the safety function is the definition of the safe state. In the case of safety relays, this is the "OFF state", i.e. an open contact for sensors or shutdown of the actuators.

DANGER

Hazardous voltage. Can cause death or serious injury

To ensure touch protection and degree of protection IP20, screw in all screws which are not used for conductor clamping and close the terminal covers.

WARNING

Protection against electrically conductive contamination!

The devices must be protected against conductive contamination while taking account of the ambient conditions. You can achieve this by installing the devices in a control cabinet with the appropriate degree of protection.

You will find more detailed information in IEC 60529, for example.

 **WARNING**

Safe functional extra-low voltage

The 3SK1 safety relays with a supply voltage of 24 V DC must be operated with safe functional extra-low voltage (SELV, PELV). This means these modules must only be subjected to a voltage of U_m even in the event of a fault. The following applies for these 3SK1 safety relays: **$U_m < 60.0 \text{ V}$** .

You can find more detailed information about safe functional extra-low voltage in the data sheets of the power supplies to be used.

 **WARNING**

When performing the light test: Ensure safe state

As a result of light tests performed at the semiconductor outputs, the level changes to the ON state for up to 2.5 ms. Users are responsible for ensuring that this does not result in any actuator changing to the active state.

 **CAUTION**

Protection against electrostatic charge

When handling and installing 3SK1 safety relays, ensure that the components are protected from being electrostatically charged. Changes to the system configuration and wiring are only permissible while the supply voltage is switched off.

Connection of 3SK1 safety relays is only permissible when the power supply units (PELV and SELV) are switched off.

 **CAUTION**

Noise immunity / grounding

The following must be grounded in accordance with the regulations to ensure noise immunity of the 3SK1 safety relays:

- PELV / SELV power supply units
(please also note the documentation for the respective power supply unit in this regard).

⚠ WARNING**3SK1..1 and 3SK1..3 safety relays (devices with contacting outputs):**

In continuous operation, the key safety values apply where the function test interval (state change of the outputs) for SIL2 \leq 1 year and for SIL3 \leq 1 month.

Exception: A function test interval \leq 1 year is also permissible for SIL3 applications in the process industry (in accordance with IEC 61511), exclusively for low-demand use, due to a significantly lower failure rate/probability of the electromechanical components. This does **not** apply to safety-related applications in accordance with the Machinery Directive 2006/42/EC.

3SK1..2 and 3SK1120 safety relays (devices with semiconductor outputs up to product version E01/V1.0.0):

In continuous operation, the key safety values apply where the function test interval (state change of the outputs) \leq 1 year.

3SK1..2 and 3SK1120 safety relays (devices with semiconductor outputs from product version E02/V1.1.0):

In continuous operation, the key safety values apply where the function test interval (state change of the outputs) \leq 20 years.

Function test procedure:

- Actuate the connected sensors.
- Check their effect on the safety relay and the downstream actuators.
- Activate the safety relay via the connected sensors.
- Check their effect on the safety relay and the downstream actuators.
- Replace the defective devices.

Note

3SK1..2 and 3SK1120 safety relays (devices with semiconductor outputs) as from E02/V1.1.0 run power-on tests, so-called light tests, at regular intervals in the "OFF state".

Note**3ZY12 device connectors**

Only safety relays with a supply voltage of 24 V DC may be used on the 3ZY12 device connector.

Note

Cover the 3ZY12 device connector on the left-hand side using the cover supplied with the device termination connector.

2.2 Recycling and disposal

For environmentally friendly recycling and disposal of your old device, please contact a company certified for the disposal of old electrical and/or electronic devices and dispose of the device in accordance with the regulations in your country.

2.3 Intended use

 WARNING**Hazardous voltage****Proper use of hardware products**


This equipment is only allowed to be used for the applications described in the catalog and in the technical description, and only in conjunction with non-Siemens equipment and components recommended by Siemens.

Correct transport, storage, installation and assembly, as well as careful operation and maintenance, are required to ensure that the product operates safely and without faults.

EU note: Commissioning is absolutely prohibited until it has been ensured that the machine in which the component described here is to be installed complies with the stipulations of the Directive 2006/42/EC.

2.4 Current information about operational safety

Important note for maintaining operational safety of your system

 **WARNING**

Hazardous voltage
Please take note of our latest information

Systems with safety-related characteristics are subject to special operational safety requirements on the part of the operator. The supplier is also obliged to comply with special product monitoring measures. For this reason, we publish a special newsletter containing information on product developments and features that are (or could be) relevant to operation of safety-related systems. By subscribing to the appropriate newsletter, you will ensure that you are always up-to-date and able to make changes to your system, when necessary:

SIEMENS newsletter (<https://www.siemens.com/safety-integrated>)

Register under "Products and Solutions" for the following newsletter:

- Industrial Controls - SIRIUS News (en)
- Safety Integrated Newsletter

2.5 Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Products and solutions from Siemens constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the Internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that can be implemented, please visit: <https://www.siemens.com/industrialsecurity>

2.6 Electromagnetic compatibility (EMC) according to IEC 60947-5-1

This product is designed for Environment A. It may produce radio interference in domestic environments, in which case the user may be required to take adequate mitigation measures.

Description

3.1 Use

SIRIUS 3SK1 safety relays are used mainly in autonomous safety applications that are not connected to a safety-related bus system. Here they are used to evaluate sensors and ensure safety-related shutdown when required. They also check and monitor the sensors, actuators and safety-oriented functions of the safety relay.

Applications

Depending on the version of the device and the external connection of sensors and actuators, applications up to SILCL 3 in accordance with IEC 62061, SIL 3 in accordance with IEC 61508, and PL e (Cat. 4) in accordance with ISO 13849-1 can be implemented.

- Monitoring the switch position of the sensors
- Monitoring of the sensor lines
- Monitoring the correct function of the safety relay
- Monitoring of the actuators
- Safety-related shutdown in case of hazards

3.2 Product overview

You can achieve a safety level up to SIL 3 / PL e in accordance with IEC 62061 / EN ISO 13849 with all 3SK1 safety relays and 3RM1 motor starters.

You can use the 3RQ1 positively-driven coupling relays as an output expansion for 3SK1 units.

You can achieve a safety level up to SIL 2 / PL c or SIL 3 / PL e (3RQ1) in accordance with IEC 62061 / EN ISO 13849 with this combination.

3SK1 basic units Standard

Designation	Voltages	Article number
3SK1 basic unit Standard instantaneous (with relay outputs)	24 V AC/DC	3SK1111-xAB30
	110 ... 240 V AC/DC	3SK1111-xAW20
3SK1 basic unit Standard instantaneous (with semiconductor outputs)	24 V DC	3SK1112-xBB40

x = 1: Screw-type terminal; x = 2: Spring-loaded (push-in) terminal

3SK1 basic units Advanced

Designation	Voltages	Article number
3SK1 Advanced basic unit instantaneous (with relay outputs)	24 V DC	3SK1121-xAB40
3SK1 Advanced basic unit time-delayed (with relay outputs)	24 V DC	3SK1121-xCB4y
3SK1 Advanced basic unit instantaneous (with semiconductor outputs)	24 V DC	3SK1122-xAB40
3SK1 Advanced basic unit time-delayed (with semiconductor outputs)	24 V DC	3SK1122-xCB4y
3SK1 Advanced basic unit 17.5 mm instantaneous (with semiconductor output)	24 V DC	3SK1120-xAB40

x = 1: Screw-type terminal; x = 2: Spring-loaded (push-in) terminal

y = 1: 0.05 ... 3 s; y = 2: 0.5 ... 30 s; y = 4: 5 ... 300 s

Expansion units

Designation	Voltages	Article number
3SK1211 output expansion	24 V AC	3SK1211-xBB00
	24 V DC	3SK1211-xBB40
	110 ... 240 V AC/DC	3SK1211-xBW20
3SK1213 output expansion	24 V DC	3SK1213-xAB40
	115 V AC	3SK1213-xAJ20
	240 V AC	3SK1213-xAL20
3RQ1 output expansion	24 V DC	3RQ1y00-xzB00
	24 ... 240 V AC/DC	3RQ1y00-xzW00
3SK1220 input expansion	24 V DC	3SK1220-xAB40
3SK1230 power supply	110 ... 240 V AC/DC	3SK1230-xAW20

Designation	Voltages	Article number
3RM1 Failsafe direct-on-line starters	24 V DC	3RM11..-xAA4
3RM1 Failsafe reversing starters	24 V DC	3RM13..-xAA4

x = 1: Screw-type terminal; x = 2: Spring-loaded (push-in) terminal

x = 3: (3RM1 only) mixed connection system: Control circuit realized as spring-loaded (push-in) terminal and main circuit as screw terminal


y = 0: SIL 2 / PL c; y = 2: SIL 3 / PL e

z = E: 1NO 1NC; z = G: 2NO 1NC; z = H: 2NO 2NC; z = L: 4NO 1NC

Overview of the safety-related outputs

Type and number of safety-related outputs						
Advanced	Relays		Semiconductors		Semiconductor signaling circuits	Device connectors
	Instantaneous	Time-delayed	Instantaneous	Time-delayed		
3SK1121-.AB40	3NO 1NC	-	-	-	1	✓
3SK1121-.CB4.	2NO	2NO	-	-	-	✓
3SK1122-.AB40	-	-	3	-	1	✓
3SK1122-.CB4.	-	-	2	2	-	✓
3SK1120-.AB40	-	-	1	-	-	✓
Standard						
3SK1111-.A..0	3NO 1NC	-	-	-	1	-
3SK1112-.BB40	-	-	2	-	1	-
Output expansions						
4RO						
3SK1211	4NO 1NC		-	-	-	✓ (for 24 V DC)
3RO						
3SK1213	3NO 1NC	-	-	-	-	✓ (for 24 V DC)
3RQ1 output expansion						
3RQ1000-.E 3RQ1200-.E (SIL 3 / PL e)	1NO 1NC	-	-	-	-	✓ (for 24 V DC)
3RQ1000-.G	2NO 1NC	-	-	-	-	✓ (for 24 V DC)
3RQ1000-.H	2NO 2NC	-	-	-	-	✓ (for 24 V DC)
3RQ1000-.L	4NO 1NC	-	-	-	-	✓ (for 24 V DC)

3.3 Components and accessories

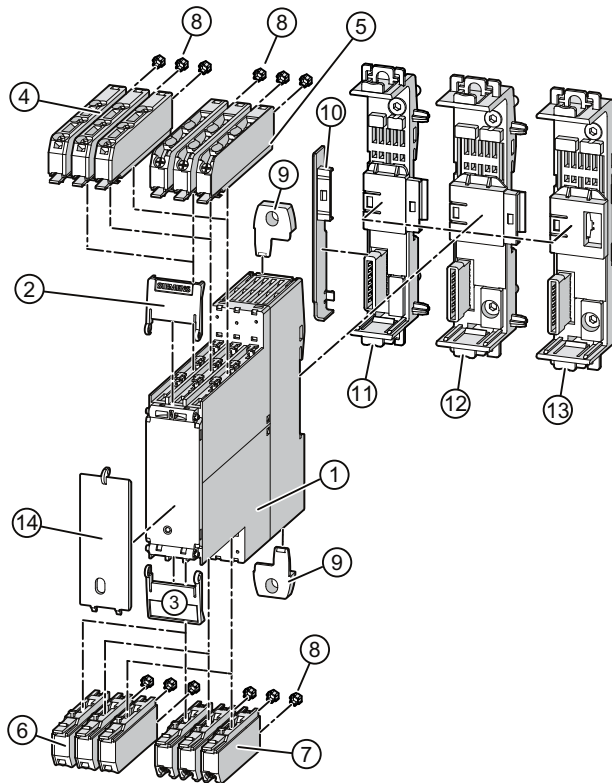

- ① 3SK1 safety relay (basic unit/expansion unit)
- ② Top cover flap
- ③ Bottom cover flap
- ④ Terminals, 3-pole, spring-loaded (push-in), 1 x 2.5 mm²
- ⑤ Terminals, 3-pole, screw-type, 1 x 2.5 mm²
- ⑥ Terminals, 2-pole, spring-loaded (push-in), 1 x 2.5 mm²
- ⑦ Terminals, 2-pole, screw-type, 1 x 2.5 mm²
- ⑧ Coding pins
- ⑨ Push-in lugs for wall mounting
- ⑩ Cover
- ⑪ Device connector for 3SK1 safety relay, 17.5 mm wide
- ⑫ Device connector for 3SK1 safety relay, 22.5 mm wide
- ⑬ Device termination connector for 3SK1 safety relay, 17.5 / 22.5 mm wide
- ⑭ Sealable cover

3.4 Functional scope of the 3SK1 basic units

Function	3SK1 Standard		3SK1 Advanced	
	Type of safety-related outputs			
	Relays	Semiconductors	Relays	Semiconductors
Sensors				
Mechanical sensors	✓	✓	✓	✓
Non-floating sensors	✓	✓	✓	✓
Antivalent sensors	Not possible	Not possible	✓	✓
Sensor number can be increased	Not possible	Cascading only	✓	✓
Parameter				
Type of start (autostart/monitored start)	✓	✓	✓	✓
Sensor connection, 2 x single-channel / 1 x two-channel	By wiring	✓	✓	✓
Cross-circuit detection OFF / ON	By wiring	✓	✓	✓
Start-up test OFF / ON	No start-up test	✓	✓	✓
Monitoring of two-hand control units	Not possible	Not possible	✓	✓
Safety-related outputs				
Instantaneous	✓	✓	✓	✓
Time-delayed	None	None	✓	✓
Expandable with relay outputs	By wiring	By wiring	✓	✓
Device connector	Cannot be used	Cannot be used	✓	✓
Rated control supply voltage				
24 V DC	✓	✓	✓	✓
110 ... 240 V AC/DC	✓	Not possible	✓ ¹⁾	✓ ¹⁾

¹⁾ Possible using 3SK1230 power supply and device connector

3.5 3SK1 system

3.5.1 3SK1 Standard system configuration


Components and wiring

A 3SK1 Standard system can comprise the following devices:

- Basic units (one basic unit per system)
 - 3SK1111 Standard basic unit instantaneous (with relay outputs) (Page 54)
 - 3SK1112 Standard basic unit instantaneous (with semiconductor outputs) (Page 60)
- Output expansions
 - Output expansion 3SK1211 (Page 90)
 - Output expansion 3SK1213 (Page 94)
 - 3RQ1 output expansion

Connect the devices by wiring them.

Typical 3SK1 Standard system configuration

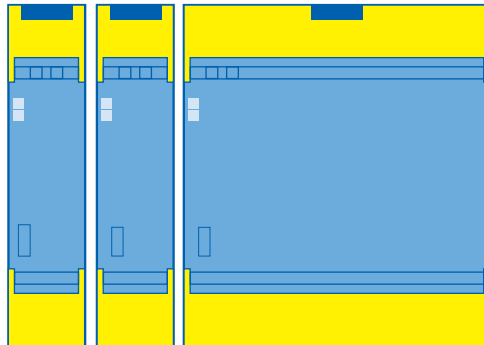

- ① 3SK1 Standard basic unit
- ② 3SK1211 output expansion
- ③ 3SK1213 output expansion

3.5.2 3SK1 Advanced system configuration

Components and wiring

A 3SK1 Advanced system can comprise the following devices:


- Basic units (one basic unit per system)
 - 3SK1121 Advanced basic unit instantaneous (with relay outputs) (Page 70)
 - 3SK1121 Advanced basic unit time-delayed (with relay outputs) (Page 73)
 - 3SK1122 Advanced basic unit instantaneous (with semiconductor outputs) (Page 76)
 - 3SK1122 Advanced basic unit time-delayed (with semiconductor outputs) (Page 80)
 - 3SK1120 Advanced basic unit instantaneous (with semiconductor outputs) (Page 84)
- Input expansions
 - Power supply 3SK1230 (Page 107)
 - Input expansion 3SK1220 (Page 104)
- Output expansions
 - Output expansion 3SK1211 (Page 90)
 - Output expansion 3SK1213 (Page 94)
 - 3RQ1 output expansion
 - Output expansion for 3RM1 Failsafe motor starter. You can find more information in the SIRIUS 3RM1 motor starters (<http://support.automation.siemens.com/WW/view/en/66295730>) manual.
- (Optional)3ZY12 device connector (Page 116)

Connect the devices with 3ZY12 device connectors or by wiring them.

If you use 3ZY12 device connectors, there is no need for wiring between the basic unit and the expansion unit(s). In this case, all necessary signals are exchanged via the device connector.


You will find the rules for configurations with device connectors in the section "System configuration rules (Page 120)".

Typical 3SK1 Advanced system configuration

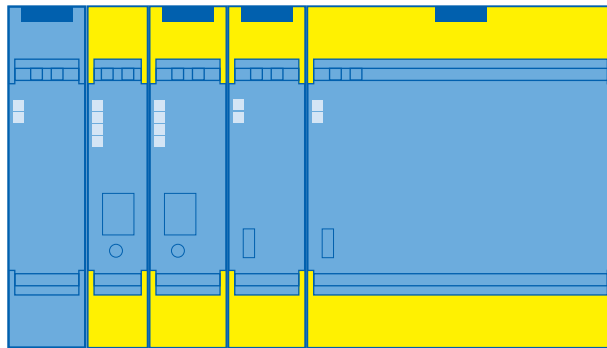


- ① 3SK1230 power supply
- ② 3SK1220 input expansion
- ③ 3SK1Advanced basic unit
- ④ 3SK1211 or 3RQ1 output expansion
- ⑤ 3SK1213 output expansion

Example 1 of a 3SK1 Advanced system configuration with 3RM1 Failsafe motor starter

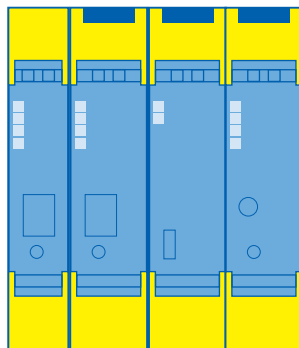

- ① 3SK1220 input expansion
- ② 3SK1Advanced basic unit
- ③ 3SK1211 or 3RQ1 output expansion
- ④ Output expansion for 3RM1Failsafe motor starter

Example 2 of a 3SK1 Advanced system configuration with 3RM1 Failsafe motor starter

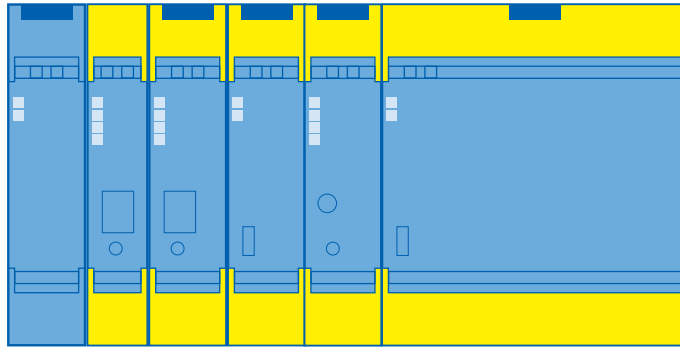

- ① 3SK1230 power supply
- ② 3SK1220 input expansion
- ③ 3SK1Advanced basic unit
- ④ 3SK1211 or 3RQ1 output expansion
- ⑤ Output expansion for 3RM1 Failsafe motor starter
- ⑥ 3SK1213 output expansion

Description

3.5 3SK1 system

Safety systems - General information

4.1 What is safety?

Safety defines a state in which the risk of damage is reduced to a tolerable level, or which can be regarded as risk-free. Following on from this definition, functional safety concerns persons, machines and the environment.

The objective of safety systems is to reduce the risk for humans and machines that is posed by a use case to an acceptable level. The first step is, therefore, to identify the risk of a use case. In order to make a reliable assessment regarding the application, each individual function of a machine or plant must be analyzed for potential hazards.

For further information, refer to the brochure "Safety of machines and plants" which is available here as a download: Functional safety (<http://www.siemens.com/safety>).

4.2 Safety function

A safety function describes the reaction of a machine/plant to the occurrence of a specific event (e.g. opening of a protective door). Execution of the safety function(s) is carried out by a safety-related control system. This usually comprises three subsystems, **detecting**, **evaluating** and reacting.

Detecting (sensors):

- Detecting a safety requirement, e. g.: EMERGENCY STOP or a sensor for monitoring a hazardous area (light array, laser scanner, etc.) is operated.


Evaluating (safety relay):

- Detecting a safety requirement and safely initiating the reaction (e.g. switching off the safety-related outputs).
- Monitoring the correct operation of sensors and actuators.
- Initiating a reaction upon detection of faults.

The 3SK1 products described in this manual are evaluation units for safety functions.

Reacting (actuators):

- Switching off the hazard by means of downstream actuators.

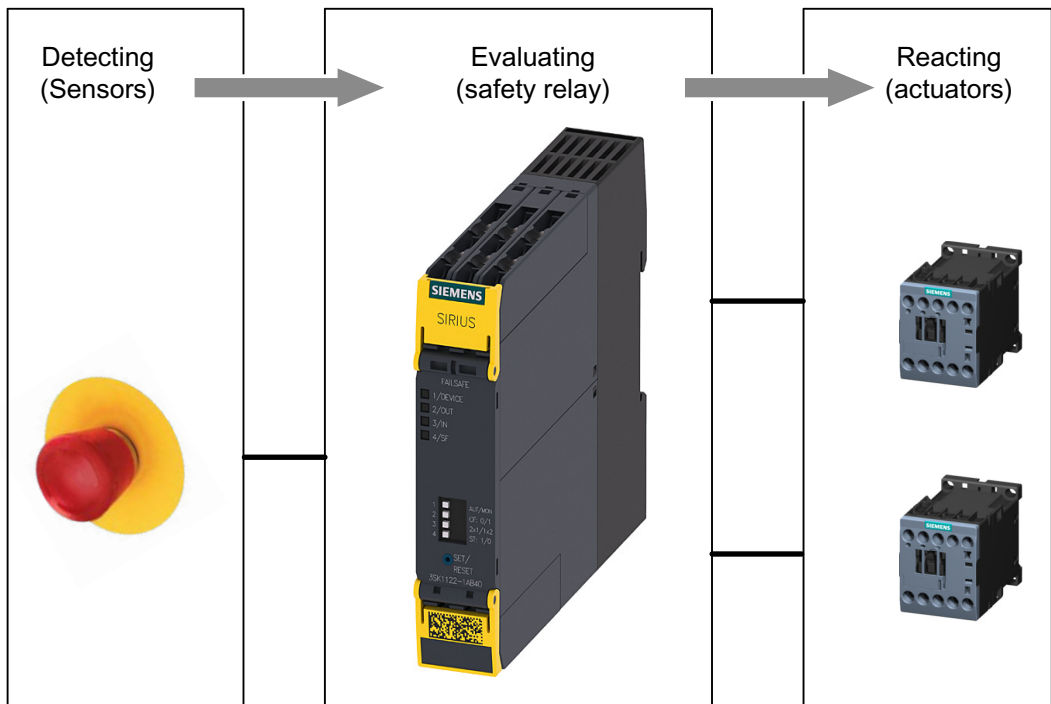

4.3 Basic terminology

4.3.1 Redundancy/single-channel and two-channel

Redundancy

With redundancy, more than one component is implemented for the same function, so a faulty function of a component is performed instead by the other component(s).

A redundant configuration reduces the probability of a function failing due to a single defective component. This requirement is essential for achieving SILCL 3 in accordance with IEC 62061, SIL 3 in accordance with IEC 61508 and PL e (Cat. 4) in accordance with ISO 13849-1 (also necessary for SIL 2 / PL d under certain circumstances).

The simplest form of redundancy is **two-channel redundancy**.

If a circuit fails, two-channel redundancy or appropriate wiring ensures that the safety function is maintained.

In a redundant system configuration, the subsystems for detecting and reacting must also be implemented with two-channel redundancy.

Note

All SIRIUS Safety devices that comply with SILCL 3 in accordance with IEC 62061, SIL 3 in accordance with IEC 61508 and PL e (Cat. 4) in accordance with DIN EN ISO 13849-1 are redundantly configured with regard to the internal logic as well as with regard to the output circuits.

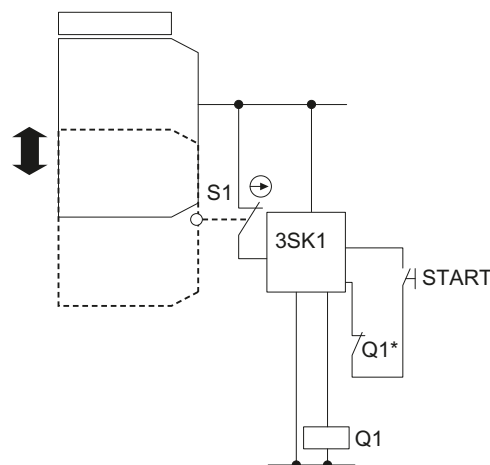


Figure 4-1 Single-channel sensor connection

4.3 Basic terminology

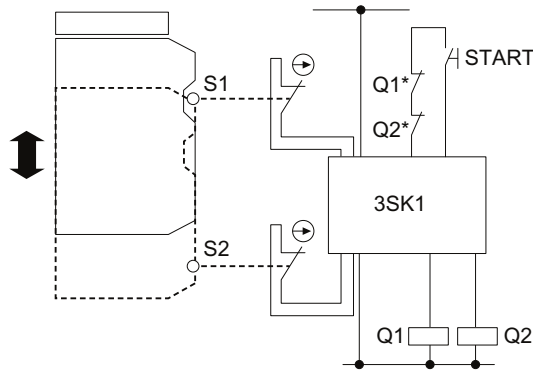


Figure 4-2 Two-channel sensor connection

* = positively-driven auxiliary contacts/mirror contacts

4.3.2 Cross-circuit detection

Cross-circuit detection is a diagnostic function of a safety relay that detects short-circuits and cross-circuits between the input channels (sensor circuits) during two-channel sensing or reading. A cross-circuit can be caused, for example, by a cable casing being squashed. In devices without cross-circuit detection, this can mean that a two-channel EMERGENCY STOP circuit does not trip even though only one NC contact is faulty (secondary error).

With 3SK1 devices, a cross-circuit is detected in the sensor circuits by means of signals with different clock pulses. If the clocked signals overlap, the device detects a cross-circuit. With 3SK1 basic units, cross-circuit detection can be deactivated to allow electronic sensors to be evaluated (that monitor themselves as well as the cable to the evaluation unit).

4.3.3 Enabling circuit (safety-related output)

An enabling circuit provides a safety-related output signal. From an external viewpoint, enabling circuits usually act as NO contacts (however, in terms of functionality, safety-oriented opening is always the most important aspect).

An individual enabling circuit that is redundantly configured internally in the safety relay can be used for SIL 3 / PL e.

Note: Enabling current paths can also be used for signaling purposes.

3SK1 safety relays are only equipped with enabling circuits with NO functionality. This means that when the safety function is triggered, or a fault is detected, the enabling circuits will always transfer to the safe state (NO contact open).

4.3.4 Signaling circuit

A current signaling path provides a safety-related output signal.

With 3SK1 relays, the signaling circuits are always implemented as NC circuits. This means that when the safety function is triggered, or a fault is detected, the signaling circuits will close.

With 3SK1 semiconductor devices, the signaling circuits are always implemented as NO circuits. This means that when the safety function is triggered, or a fault is detected, the signaling circuits will open.

4.3.5 Feedback circuit

A feedback circuit is used to monitor controlled actuators (e.g. relays or load contactors) with positively-driven contacts or mirror contacts. The safety-related outputs can only be activated if the feedback circuit is closed.

Note

When 3SK1 expansion units are used on 3ZY12 device connectors with 3SK1 Advanced basic units, it is not necessary to incorporate the expansion modules in the feedback circuit wiring. This is implemented internally via the device connector.

DANGER

Ensuring electrical safety and safety function

The normally closed contact of 3RQ12. is designed for a voltage of 24 V DC. If higher voltages occur, electrical safety cannot be ensured due to the voltage clearance distances. If the 3RQ12. is integrated in a system with a device connector, the feedback circuit is routed via the device connector; connection of external voltage is not necessary and not permitted. Connecting external voltage can bypass the safety function.

4.3.6 Stop category

Stop category 0

Non-controlled shutdown by immediately switching off the power to the machine's drive elements.

Stop category 1

Controlled stopping where the energy feed is interrupted with a time delay, or is only interrupted once standstill has been reached.

Note

Time-delayed shutdown of safety-related outputs in accordance with Stop category 1 is not ensured under all operating states.

In the case of some internal device faults, and when disconnecting the supply voltage, these safety-related outputs are switched off **instantaneously** .

4.3.7 Automatic start

For an automatic start, the device is started without manual confirmation, but only after the input image has been checked and a positive test of the safety relay has been conducted. This function is also known as dynamic operation and is not permissible for EMERGENCY STOP devices. Safety devices for prohibited danger zones (e.g. position switches, light arrays, safety shutdown mats) can use the automatic start function if this does not pose any risk.

Note

An automatic start is not permitted for EMERGENCY STOP devices.

Information about start response in the system configuration of 3SK1 Advanced units can be found in the chapter "Explanations of device function (Page 176)".

4.3.8 Manual start

For a manual start, the device is started by operating the START button, but only after the input image has been checked and a positive test of the safety relay has been conducted. On a manual start, the START button is not monitored for correct operation, a positive edge of the START button is sufficient for starting.

Note

The "manual start" function is only available with the 3SK1111 safety relays (slide switch at Autostart position).

Note

Manual start is not permitted for EMERGENCY STOP devices.

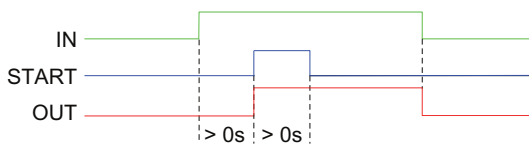


Figure 4-3 "Manual start" start function

4.3.9 Monitored start

For a monitored start, the device is started by operating the START button, but only after the input image has been checked and a positive test of the safety relay has been conducted.

Contrary to the manual start, the monitored start evaluates a **signal change** of the START button. This means that the START button cannot be bypassed (misuse). For PL e (ISO 13849-1) as well as SIL 3 (IEC 62061), the monitored start must be used in the case of EMERGENCY STOP. For other safety sensors/functions, the necessity for a monitored start command depends on the risk assessment.

If the START button is operated for more than 2 seconds, the 3SK1 basic unit detects a wiring short-circuit in the START button and switches to the fault state (Device = green; SF = flashing red; Out = flashing yellow; IN = off)

Note

In the delivery state of the 3SK1 safety relays, the start type is set to "Monitored start".

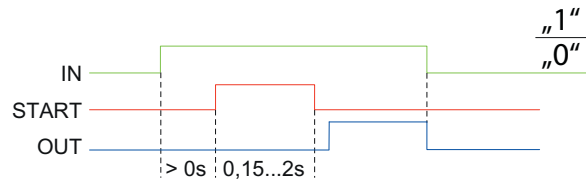


Figure 4-4 "Monitored start" start function

4.3.10 Two-hand operation/synchronism

Synchronous sensor operation is a special form of simultaneity of sensors.

In this case, it is not sufficient for sensor contacts 1 and 2 to be switched to the closed state at different times, they must be closed within 0.5 seconds.

Synchronism of sensors is required, in particular, in the case of two-hand operation of presses. This ensures that the presses only become active when the sensors are operated simultaneously with both hands. This minimizes the risk of the operator getting a hand in the press.

When 3SK1 safety relays are used, you can achieve applications up to type IIIc in compliance with EN 574 / EN 13851 (applications up to PL e/Cat. 4 in compliance with EN 13849-1 or SILCL 3 in compliance with IEC 62061).

Note

In the delivery state of 3SK1 safety relays, monitoring of time synchronism is deactivated. Monitoring of time synchronism can be activated using the following adjustable parameters for 3SK112 Advanced and 3SK122 Advanced:

- Jumper T1/PAR (NO/NC evaluation)
 - DIP switches (1) Autostart
 - DIP switches (3) 2 x single-channel
-

Note

The 3SK1 Advanced safety relays exclusively support two-hand control units with 2 NO contacts.

Note

The two-hand circuit must be marked in compliance with EN 574 EN 13851. You can find information on determining the response time in the section entitled Response times (Page 180).

4.3.11 Cascading

Cascading of safety relays is used for tripping safety relays in series.

Several safety functions can then be logically connected to a shared shutdown path. Several safety-related outputs can be created for selective shutdown of drive elements.

The connection between the individual modules must be arranged on one side only, because cascading from the last relay to the first one would create a loop which would prevent starting.

Cascading is implemented within a control cabinet in a single-channel configuration; this is even permissible with SIL 3 / PL e, because cable routing within a control cabinet is protected against short-circuits and short-circuiting to P potential (fault exclusion in accordance with ISO 13849-2).

The 3SK1 Advanced device series offers an extremely convenient solution for cascading. Input expansions can be easily connected to the evaluation unit by means of device connectors.

4.3.12 Startup testing

The sensor or protection equipment must be opened and closed again after the supply voltage is restored before the enables for the 3SK1 safety relay can be switched through.

Startup testing ensures that any errors in the sensors are detected (again), because safety relays lose their ability to store errors at zero voltage.

Unauthorized manipulation of the protection equipment can also be detected through startup testing.

The plant operator decides whether startup testing should be performed (risk assessment). No general statements apply.

Note

In the delivery state of 3SK1 safety relays, startup testing is deactivated.

4.3.13 Connection of actuators

Note

To achieve the Performance Level / Safety Integrity Level given in the following examples, the actuators shown must be monitored in the feedback circuit of the corresponding safety relay.

Note

For capacitive and inductive loads, we recommend an adequate protective circuit. In this way, electromagnetic interference can be suppressed and contact service life increased.

You can find more information in the SIRIUS Innovations - SIRIUS 3RT2 Contactors/Contactor Assemblies manual (<http://support.automation.siemens.com/WW/view/en/60306557>).

Actuator wiring up to PL c / Cat. 2 in accordance with ISO 13849-1 or SILCL 1 in accordance with IEC 62061

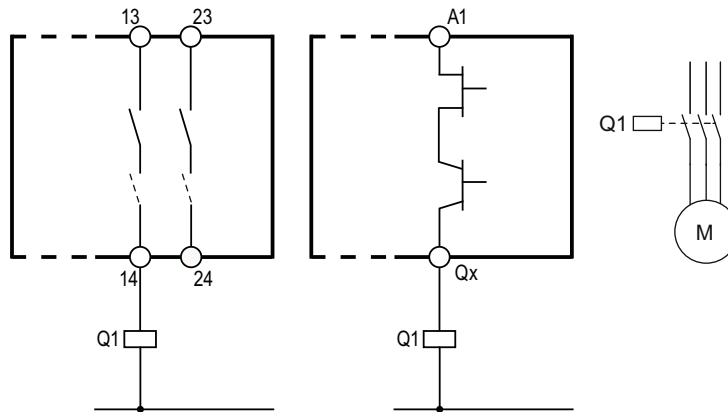


Figure 4-5 PL c / Cat. 2 in accordance with ISO 13849-1 or SILCL 1 in accordance with IEC 62061

Actuator wiring up to PL e / Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061

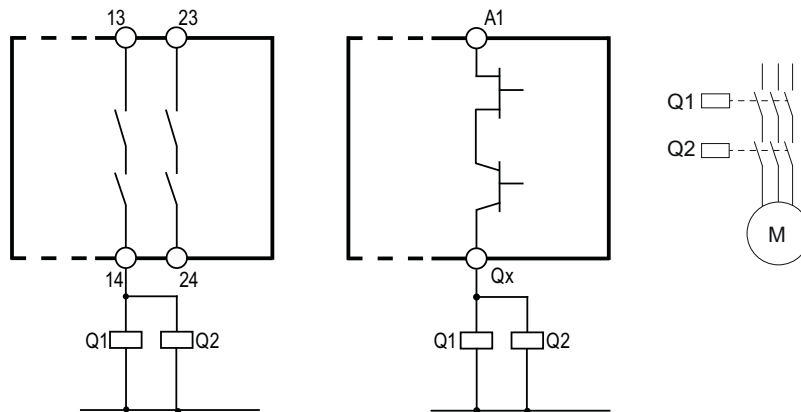


Figure 4-6 PL e/Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061 With units that have semiconductor outputs, this wiring is only possible from E02/V1.1.0

! WARNING
 PL e/Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061 can only be achieved with cross-circuit-proof/short-circuit to P-proof laying of the control cables from the relay output (e.g. 14) to the control relays/contactors (Q1 and Q2) (e.g. as a separately sheathed cable or in its own cable duct).

Note

In the case of 3SK1..2 and 3SK1120 (devices with semiconductor outputs with firmware (FW) version V1.0.0 and product version E01) it is not possible to achieve PL d/e/Cat. 3/4 in accordance with ISO 13849-1 or SILCL 2/3 in accordance with IEC 62061 with the wiring shown above.

Actuator wiring up to PL e / Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061

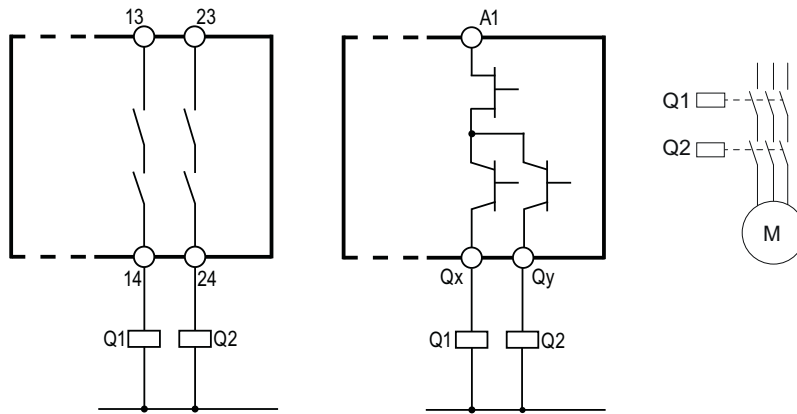


Figure 4-7 PL e / Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061

Refer to the information on the function test interval in section General safety notes (Page 23).

Actuator wiring with 3RM1 up to PL e/Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061

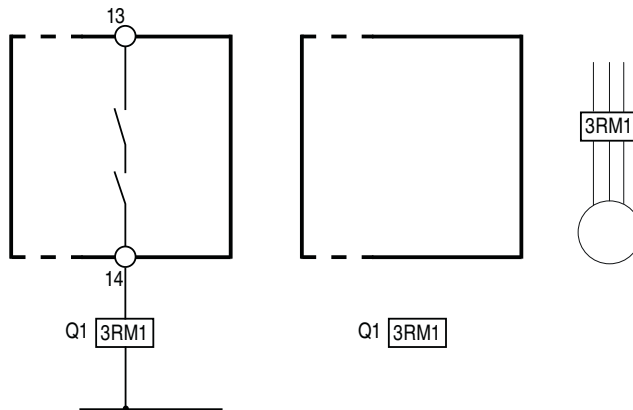


Figure 4-8 PL e / Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061

Note

PL e/Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061 can only be achieved with cross-circuit-proof/short-circuit to P-proof laying of the control cables from the relay output (e.g. 14) to the 3RM1 Failsafe motor starter (e.g. as a separately sheathed cable or in its own cable duct). Thanks to the intrinsic safety of the 3RM1 Failsafe motor starter, monitoring by the upstream 3SK1 safety relay (via feedback circuit) is not necessary here.

Note


In the case of 3SK1...2 and 3SK1120 (devices with semiconductor outputs with firmware (FW) version V1.0.0 and product version E01) it is not possible to achieve PL d/e/Cat. 3/4 in accordance with ISO 13849-1 or SILCL 2/3 in accordance with IEC 62061 with the wiring shown above.

More detailed technical information is available in the "SIRIUS 3RM1 motor starters (<http://support.automation.siemens.com/WW/view/en/66295730>)" manual on the Internet.

4.3.14 Series connection of sensors

Series connection of EMERGENCY STOP command devices


It is possible to connect EMERGENCY STOP command elements in series up to the highest safety level level (SILCL 3 in accordance with IEC 62061, SIL 3 in accordance with IEC 61508 and PL e (Cat. 4) in accordance with ISO 13849-1) because it is assumed that only one EMERGENCY STOP is operated at a time. This ensures that errors and defects can be detected.

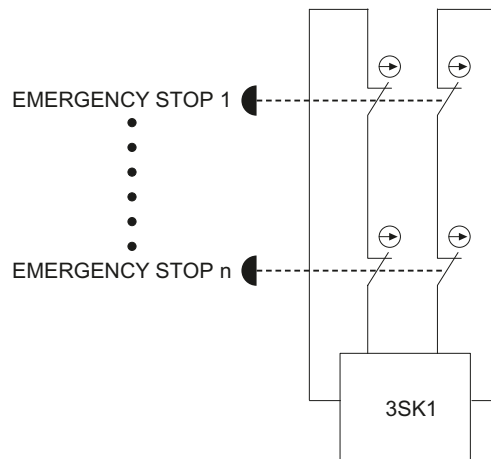

Series connection of mechanical position switches

In general, position switches may be connected in series if measures ensure that several protective doors are not regularly opened simultaneously (otherwise a fault cannot be detected).

For safety level level SILCL3 in accordance with IEC 62061, SIL3 in accordance with IEC 61508, and PL e (Cat. 4) in accordance with ISO 13849-1, however, they must **never** be connected in series because every hazardous error must be detected (independently of the operating personnel).

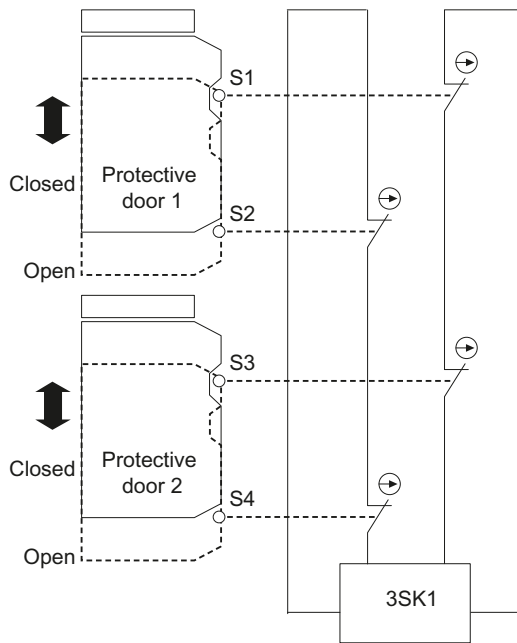

4.3.15 Use of magnetically operated switches

If magnetically operated switches are used, the magnetic contacts may weld on account of capacitive effects. The reason for this is that a high peak current may occur when switching these loads (e.g. also cable capacitances). A corresponding fuse protection with the rated current of the magnetically operated switch must be provided if the device/sensor combinations have not been explicitly enabled.

For more details, please refer to the documentation of the magnetically operated switch.

3SK1 / 3RQ1 devices

5.1 3SK1 standard

5.1.1 General information

The safety relays of the Standard series can be configured as stand-alone devices or as an expansion solution with conventional wiring technology.

The focus of the Standard series is on:

- Single devices for simple safety applications
- Output-side expansion by means of expansion units and external wiring
- No expansion on the input side

5.1.2 Applications

- EMERGENCY OFF / EMERGENCY STOP monitoring.
- Monitoring of protective doors with electromechanical position switches, solid-state position switches, or solenoid switches.
- Monitoring of contact-free protection equipment, e.g. light arrays/light barriers, or laser scanners.

3SK1 Standard safety relays can be used in EMERGENCY OFF/EMERGENCY STOP devices in accordance with ISO 13850 and in safety circuits in accordance with VDE 0113-1 and/or DIN EN 60204-1. Depending on the external circuit, it is possible to achieve SILCL 3 in accordance with IEC 62061, SIL 3 in accordance with IEC 61508 and PL e (Cat. 4) in accordance with ISO 13849-1.

The safety relays comply with DIN EN 50156-2: 2004 (Electrical equipment for furnaces and ancillary equipment).

5.1.3 3SK1111 Standard basic unit instantaneous (with relay outputs)

5.1.3.1 General information

Article number

3SK1111-xAB30	24 V AC/DC
3SK1111-xAW20	110 ... 240 V AC / DC (wide-range supply)

x = 1: Screw-type terminal; x = 2: Spring-loaded (push-in) terminal

Device features

- 2 sensor inputs (channels 1 and 2)
- 1 input for feedback circuit and START button
- 3 safety-related outputs (NO contacts),
- 1 semiconductor signaling circuit (non-safety-related circuit, NC contact)
- 2 LEDs for displaying the operating states
- Slide switch for function setting
- Single-channel or two-channel connection
- Cross-circuit detection between sensor channels 1 and 2
- Enclosure width 22.5 mm
- Removable terminals

5.1.3.2 Function description


The 3SK1111 Standard basic unit is a two-channel safety relay for EMERGENCY OFF and EMERGENCY STOP equipment in accordance with EN 60204-1.

The device is equipped with positively-driven relays and monitors itself during every ON/OFF cycle.

The device has 3 safety-related outputs as NO circuits and one semiconductor signaling circuit (non-safety-related circuit, NC contact).

On the front of the device there is a slide switch for function setting and 2 LEDs for displaying the operating states.

5.1.3.3 Design

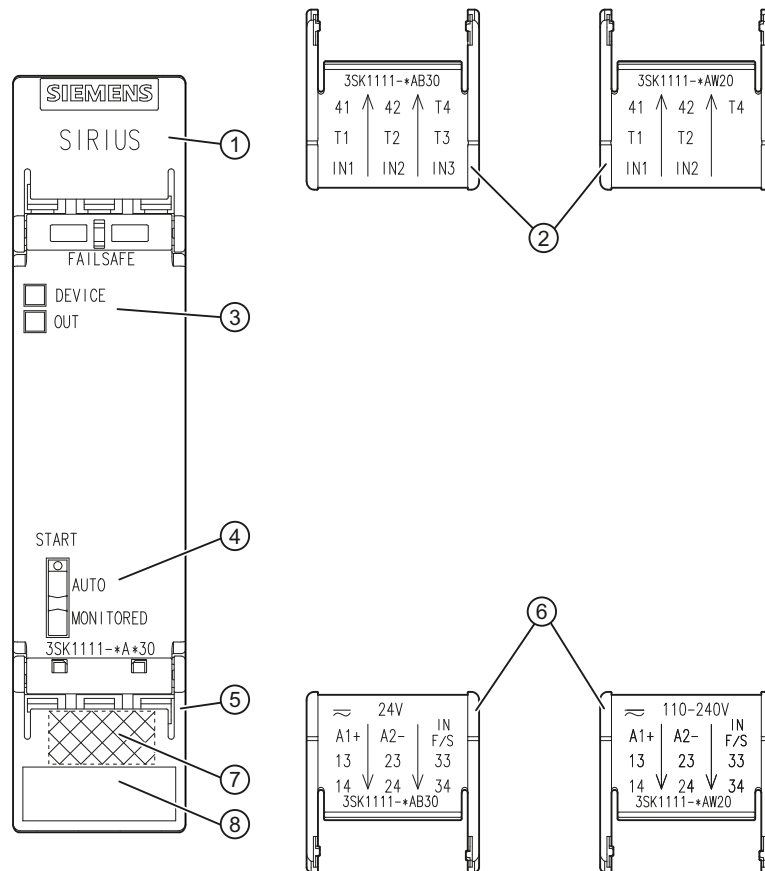

- ① Top cover flap
- ② Top cover flap; internal inscription
- ③ Display LEDs
- ④ Slide switch
- ⑤ Bottom cover flap
- ⑥ Bottom cover flap; internal inscription
- ⑦ DataMatrix code
- ⑧ Device identification label

5.1.3.4 Terminal assignment

Terminal	Explanation
A1	L+
A2	N-
IN1	Sensor channel 1
IN2	Sensor channel 2
IN3	Non-floating sensor evaluation ¹⁾

Terminal	Explanation
INF/S	Feedback circuit/START button
T1	Test output 1 (for IN1)
T2	Test output 2 (for IN2)
T3	Test output 3 (for IN3) ¹⁾
T4	Test output 4 (for INF/S)
13 - 14 23 - 24 33 - 34	Safety-related outputs (NO contact, relay contact)
41 - 42	Relay signaling circuits (NC contacts)
Floating:	Sensors T1/IN1 and T2/IN2 Jumper T3/IN3
Non-floating	Sensors IN1 and IN3 ¹⁾ Jumper T2/IN2

¹⁾ For 24 V AC/DC variant only

5.1.3.5 Inputs

The device has either 3 or 4 inputs for safe signal processing: IN1, IN2 or IN3 (only 24 V devices for connecting floating sensors) INF/S:

The inputs IN1 and IN2 can be operated in two-channel mode with cross-circuit detection. A single-channel control is also possible and is described in chapter Typical circuits (Page 211), tables 7- 1 to 7- 4.

If no feedback circuit is to be used in the application, this must be jumpered with the corresponding test output.

Voltage variant 24 V:

Connecting floating sensors:

When floating sensors are used, sensor inputs T1/IN1 and T2/IN2 must be used and T3/IN3 must additionally be jumpered for two-channel sensor connection.

Connecting non-floating sensors:

With non-floating sensors, cross-circuit detection must be deactivated.

This is implemented by the following pin assignment on the 3SK1111-.AB30:

IN1 and IN3 must be used as the input terminal for the two-channel non-floating sensor. In addition, T2/IN2 must be jumpered.

Voltage variant 110 V ... 240 V AC/DC:

Only **floating sensors** can be connected to the 3SK1111-.AW20 device version.

The 2-channel sensor is connected via T1/IN1 and T2/IN2.

Connection of magnetically operated switches

When connecting magnetically operated switches to the inputs, observe the information in chapter Use of magnetically operated switches (Page 52).

5.1.3.6 Outputs

The safety relay has the following outputs:

- Safety-related outputs (relays), NO contacts: 13/14, 23/24, 33/34
- Non-safety-related outputs (semiconductor signaling circuit; relays), NC contacts: 41/42

5.1.3.7 Display of the operating state

Two LEDs and a slide switch indicate the operating state and functioning of the device:

- DEVICE
- OUT

LED displays

LED		Operation			
DEVICE	OUT	Line supply	Sensor	START button	Safety-related output
Green	Green	ON	Not pressed	Pressed	Closed
Green	OFF		Pressed	---	Open
Green	OFF		Not pressed	---	Open
		Error			
OFF	OFF	Cross-circuit or no power supply			Open



5.1.3.8 Function setting



Setting the functions

Slide switch		
Start	AUTO	Autostart
<input type="checkbox"/> AUTO <input checked="" type="checkbox"/> MONITORED	MONITORED	Monitored start

In the delivery state, the slide switch is at the bottom (monitored start).

State diagrams 3SK1111

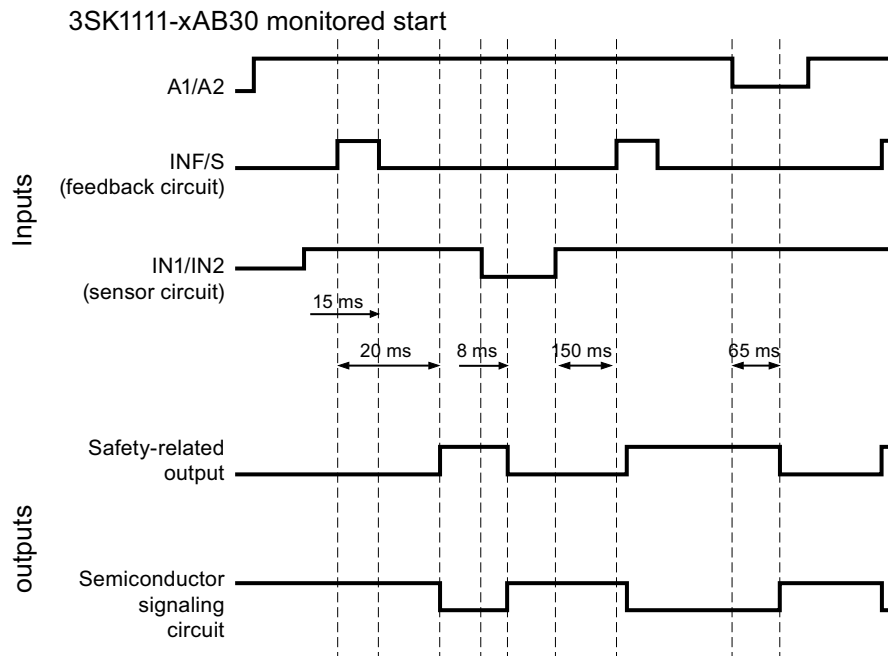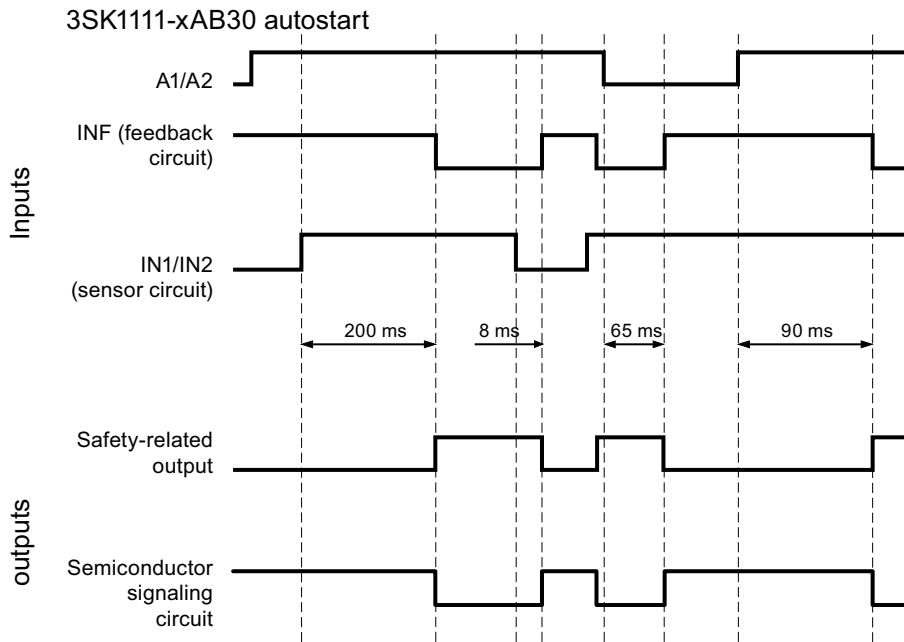

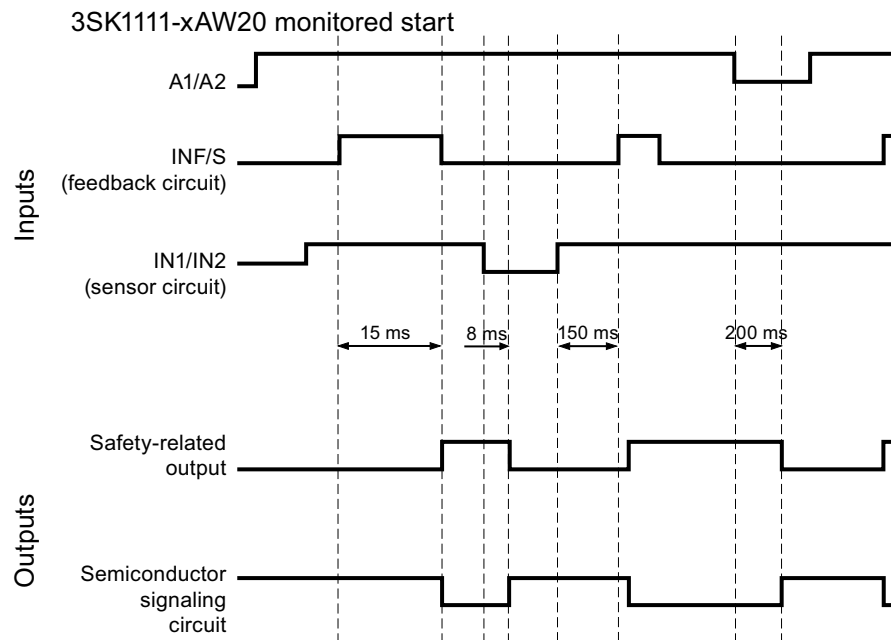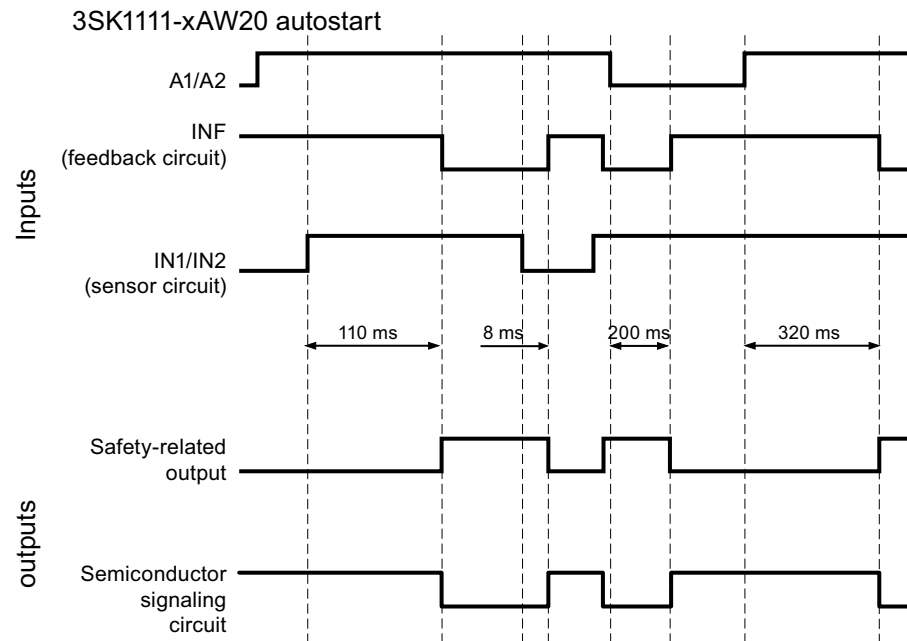

5.1.4 3SK1112 Standard basic unit instantaneous (with semiconductor outputs)

5.1.4.1 General information


Article number

3SK1112-xBB40	24 V DC
---------------	---------

x = 1: Screw-type terminal; x = 2: Spring-loaded (push-in) terminal

Device features

- 4-way DIP switch for function setting (parameterization)
- SET/RESET button
- 4 LEDs for status and function display
- 2 sensor inputs (channels 1 and 2)
- 1 input (cascading circuit)
- 1 input (START pushbutton circuit)
- 1 input (feedback circuit)
- 2 test outputs
- 2 safety-related semiconductor outputs
- 1 semiconductor signaling circuit
- Enclosure width 22.5 mm
- Removable terminals

 WARNING
Continuous operation Devices up to E01/V1.0.0: In continuous operation for PL e/Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061, the key safety values apply where the function test interval (state change of the outputs) \leq 1 year. Devices from E02/V1.1.0: In continuous operation for PL e/Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061, the key safety values apply where the function test interval (state change of the outputs) \leq 20 years.

5.1.4.2 Function description


The 3SK1112 safety relay has 2 safety-related semiconductor outputs and one non-safety-related signaling circuit.

On the front of the device there is a 4-way DIP switch for function setting and 4 LEDs for status and function display.

The SET/RESET button is used to load function settings and to restart the device (reset).

On commissioning, the device runs through a self-test. This checks that the internal electronics and firmware are functioning correctly. All internal safety-critical parts of the circuit are cyclically monitored for faults during operation. The semiconductor outputs cyclically run through a light/dark test for up to 2.5 ms (dynamically) to verify their correct functioning.

5.1.4.3 Design

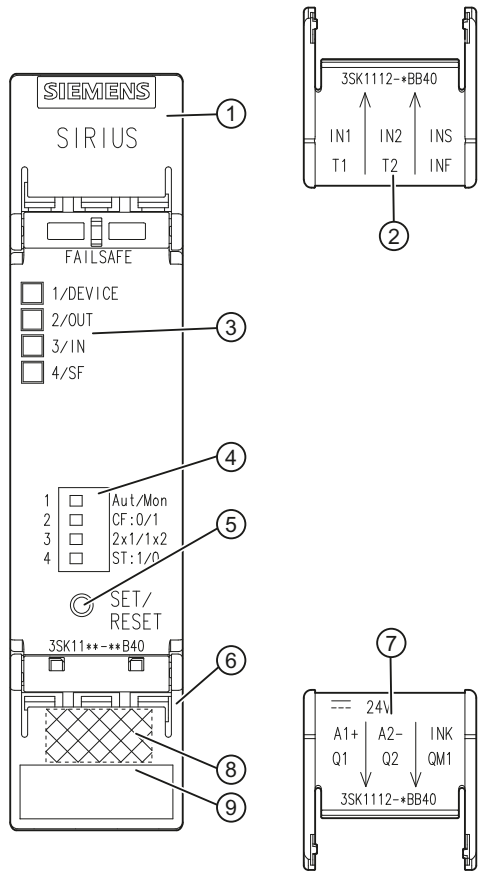

- ① Top cover flap
- ② Top cover flap; internal inscription
- ③ Display LEDs
- ④ DIP switch
- ⑤ SET/RESET button
- ⑥ Bottom cover flap
- ⑦ Bottom cover flap; internal inscription
- ⑧ DataMatrix code
- ⑨ Device identification label

5.1.4.4 Terminal assignment

Terminal	Explanation
A1	+
A2	-
IN1	Sensor channel 1

Terminal	Explanation
IN2	Sensor channel 2
INS	START pushbutton circuit
INF	Feedback circuit
INK	Cascading circuit
T1	Test output 1 (for IN1)
T2	Test output 2 (for IN2, INF)
Q1	Semiconductor output 1 (switching to P potential, 24 V DC)
Q2	Semiconductor output 2 (switching to P potential, 24 V DC)
QM1	Semiconductor signaling circuit 1 (switching to P potential, 24 V DC)

5.1.4.5 Inputs

The device has five inputs for safe signal processing: IN1, IN2, INS, INF, INK:

- IN1: sensor input channel 1
- IN2: sensor input channel 2
- INS: START pushbutton circuit (start after rising and falling edge)
- INF: feedback circuit (checked for closed state: before switching on)
- INK: cascading circuit (cascading input/normal switching duty)
- The cascading circuit is AND-connected with the IN1 and IN2 sensor inputs.
- START button circuit and cascading circuit are activated with a static +24 V DC signal.
- With cross-circuit detection activated, the following inputs are checked for cross-circuits and short-circuits to P: IN1/T1 to IN2/T2 and INF/T2. The inputs then receive their supplies from the test outputs T1 and T2.
- If "without cross-circuit detection" is set on the device, inputs IN1 and IN2 are not checked for cross-circuits. Inputs IN1 and IN2 must not be supplied via T1/T2 here, otherwise a fault will be generated via input INF. It is therefore essential that inputs IN1 and IN2 are supplied via an external + 24 V DC current source from which the device is also supplied.
- If the unit is parameterized to 2 x 1-channel with DIP switch 3, the sensor circuit that is not used (T1/IN1 or T2/IN2) must be bypassed.

Note

Observe the following special points during commissioning of the 3SK1112 safety relay:

The cascading input must be connected to terminal A1 if it is not to be used.

Monitoring of the feedback circuits is not optional.

5.1 3SK1 standard

5.1.4.6 Outputs

The safety relay has the following outputs:

- Q1, Q2: safety-related semiconductor outputs with dynamic monitoring, switching to P potential
- QM1: non-safety-related semiconductor signaling circuit, switching to P potential

The safety-related semiconductor outputs and the safety-related semiconductor signaling circuit are short-circuit-proof.

5.1.4.7 Display of the operating state

Four LEDs and one DIP switch indicate the operating state and functioning of the device:

- (1) DEVICE
- (2) OUT
- (3) IN
- (4) SF


The four LEDs show the following:

- Operating mode: Diagnostics
- Configuration mode: DIP setting

For an explanation of the operating state display, see Section Display and diagnostics (Page 185)

5.1.4.8 Function setting

 Table 5-1 DIP switch

Switch position: left	Schematic	DIP switch No.	Switch position: right
Autostart		1	Monitored start
Cross-circuit detection deactivated		2	Cross-circuit detection activated
2 x single-channel sensor connection		3	1 x two-channel sensor connection
Start-up test ON		4	Start-up test OFF

In the delivery state, all the DIP switches are in switch position: right.


Table 5-2 SET/RESET button


Function of the SET/RESET button	Status of the indicating LEDs	Function
SET	"DEVICE" LED flashing yellow	<ul style="list-style-type: none"> Press key for about 1 s The parameterization is loaded
RESET	"DEVICE" LED red	<ul style="list-style-type: none"> Press key for about 1 s => The device restarts without the supply voltage having to be switched off
	"DEVICE" LED flashing green yellow	
	"SF" LED red	

Note

The SET/RESET pushbutton only triggers a reset for the device on which the button is pressed.

State diagrams 3SK1112

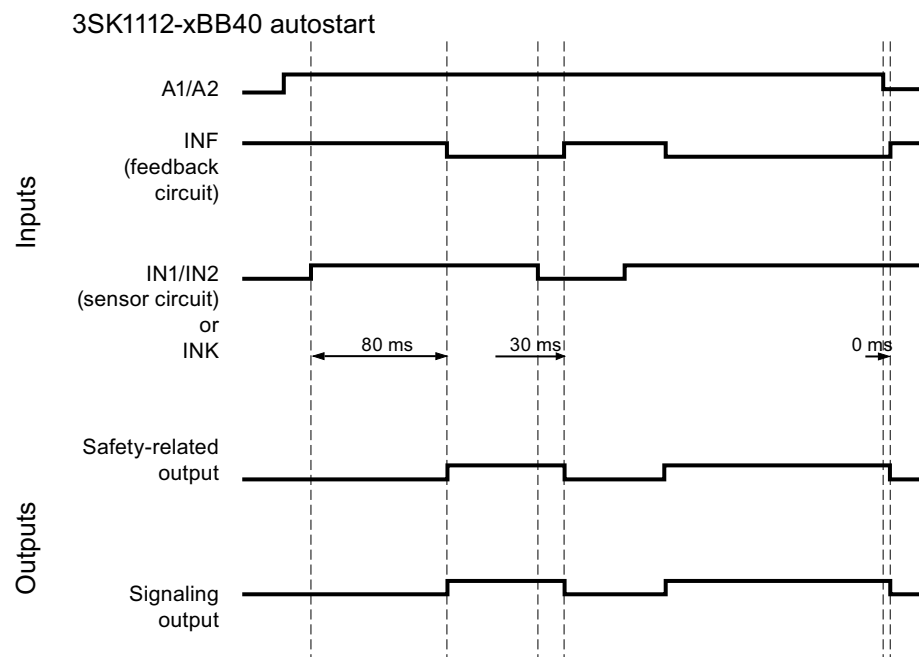

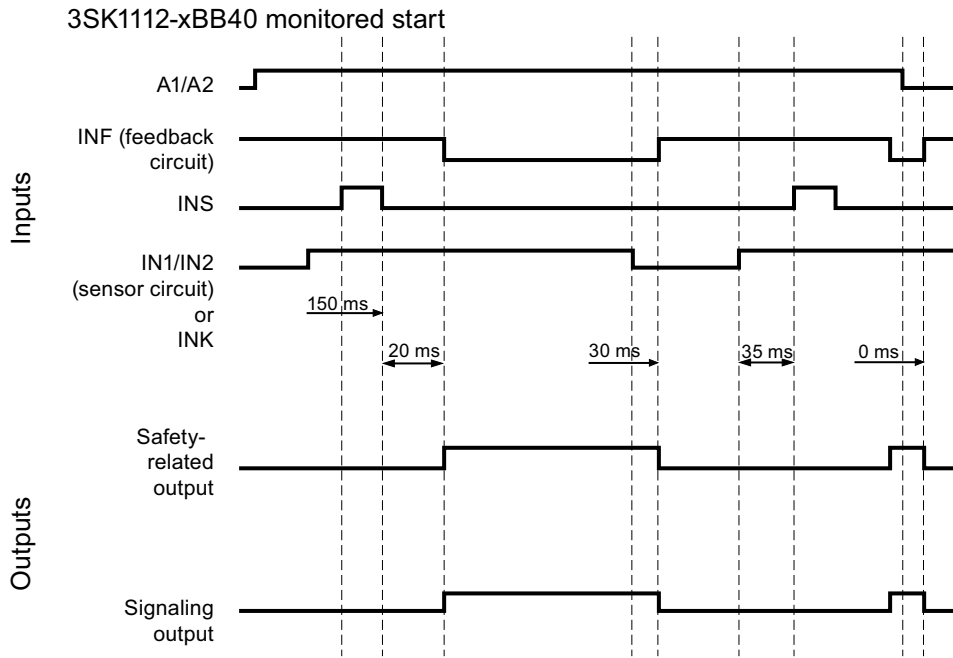

5.2 3SK1 Advanced

5.2.1 General information

The safety relays of the Advanced device series comprise basic devices and input and output expansions. The Advanced safety relays can be connected by means of a 3ZY12 device connector.

When configuring the system, it must be ensured that input expansions are always mounted on the left, and output expansions (3SK121 or 3RM1 Failsafe motor starter) on the right of the basic unit. For control supply voltages of 110 ... 240 V AC/DC, the Advanced device series can be supplied with the necessary 24 V DC voltage from the 3SK1230 power supply (which must be positioned on the extreme left in the system).

The focus of the Advanced relay series is on:

- Single devices that can be flexibly parameterized
- Expandability using 3ZY12 device connector on both input and output side
- Basic units with time-delayed safety-related outputs

5.2.2 Applications

- EMERGENCY OFF / EMERGENCY STOP monitoring.
- Monitoring of protective doors with electromechanical position switches, solid-state position switches, or solenoid switches.
- Monitoring of contact-free protection equipment, e.g. light arrays/light barriers, or laser scanners.

The 3SK1 safety relays Advanced can be used in EMERGENCY OFF and EMERGENCY STOP devices in accordance with EN 60204-1 and in safety circuits in accordance with VDE 0113-1 and/or EN 60204-1, e.g. in circuits in which controlled shutdown, STOP Category 1, is necessary.

Depending on the external circuit, it is possible to achieve SILCL 3 in accordance with IEC 62061, SIL 3 in accordance with IEC 61508 and PL e (Cat. 4) in accordance with ISO 13849-1.

The safety relays comply with DIN EN 50156-2 (Electrical equipment for furnaces and ancillary equipment).

You can use the 3SK1 Advanced safety relays to achieve two-hand switching applications up to type IIIc in compliance with EN 574 / EN 13851.

5.2.3 General device features

Device properties:

- 4-way DIP switch for function setting (parameterization)
- SET/RESET button

- 4 LEDs for status and function display
- 2 sensor inputs (channels 1 and 2)
- 1 input (cascading circuit)
- 1 input (START pushbutton circuit)
- NO contact/NC contact evaluation via external jumper (T1/PAR)
- Connecting interface for 3ZY12 device connectors
- Removable terminals

5.2.4 Function description

There is a 4-way DIP switch for function setting and 4 LEDs for status and function display on the front of the 3SK1 Advanced basic units. A SET/RESET button can be used to load function settings and to perform a device restart (reset). On commissioning, the devices runs a self-test in which the internal electronics and firmware are checked for correct functioning. All internal parts of the circuit are cyclically monitored for faults during operation. In the case of units with semiconductor outputs, they cyclically run through a light/dark test for up to 2.5 ms (dynamically) to verify their correct functioning. The safety relays can be expanded using 3ZY12 device connectors with input and output expansions.

3SK1 Advanced basic unit time-delayed only:

These basic units have 2 time-delayed and 2 instantaneous safety-related outputs (NO circuits) or outputs switching to P potential.

Four LEDs and one DIP switch indicate the operating state and functioning of the device:

- (1) DEVICE
- (2) OUT
- (3) IN
- (4) SF


The four LEDs show the following:

- Operating mode: Diagnostics
- Configuration mode: DIP setting

For an explanation of the operating state display, see Section Display and diagnostics (Page 185)

5.2.5 Functions

 Table 5-3 DIP switch

Switch position: left	Schematic	DIP switch No.	Switch position: right
Autostart		1	Monitored start
Cross-circuit detection deactivated		2	Cross-circuit detection activated
2 x single-channel sensor connection		3	1 x two-channel sensor connection
Start-up test ON		4	Start-up test OFF

In the delivery state, all the DIP switches are in switch position: right.

Terminal parameterization:

Jumper on terminals T1/PAR = NO/NC evaluation

Table 5-4 SET/RESET button

Function of the SET/RESET button	Status of the indicating LEDs	Function
SET	"DEVICE" LED flashing yellow	<ul style="list-style-type: none"> Press key for about 1 s The parameterization is loaded
RESET	"DEVICE" LED red	<ul style="list-style-type: none"> Press key for about 1 s => The device restarts without the supply voltage having to be switched off
	"DEVICE" LED flashing green yellow	
	"SF" LED red	

Note

The SET/RESET pushbutton only triggers a reset for the device on which the button is pressed.

Potentiometer for time setting

Potentiometer for infinite time setting of the time-delayed safety-related outputs on the Advanced basic units (with time-delayed safety-related outputs).

- 3SK112.-.CB41 setting range: 0.05 ... 3 s
- 3SK112.-.CB42 setting range: 0.5 ... 30 s
- 3SK112.-.CB44 setting range: 5 ... 300 s

Note

The delay time ends when the voltage is disconnected. The time-delayed contacts change switch position.

Using the cascading input

The cascading input must be controlled with a 24 V DC signal. The voltage source of the 24 V DC signal must correspond to the voltage source of the safety relay's supply voltage (A1).

Note

Observe the following during commissioning of 3SK1 Advanced safety relays:

The cascading input must be connected to terminal A1 if it is not to be used.

Monitoring of the feedback circuits is not optional.

Parameterization "2 x single-channel"

If the unit is parameterized to 2 x single-channel with DIP switch 3, the sensor circuit that is not used (T1/IN1 or T2/IN2) must be bypassed.

5.2.6 3SK1121 Advanced basic unit instantaneous (with relay outputs)

5.2.6.1 Device features

Article number


3SK1121-xAB40	24 V DC
---------------	---------

x = 1: Screw-type terminal; x = 2: Spring-loaded (push-in) terminal

5.2.6.2 Function description

The 3SK1121 Advanced basic unit has three safety-related relay outputs and one non-safety-related signaling circuit.

5.2.6.3 Design

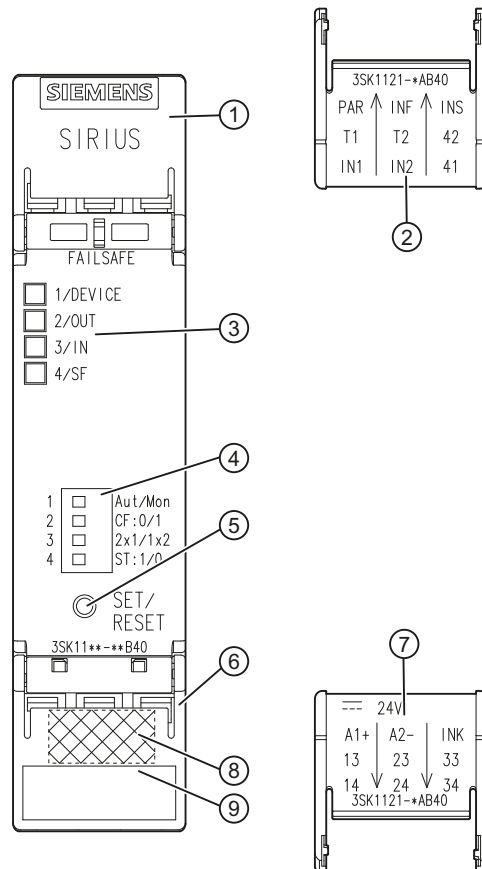


- ① Top cover flap
- ② Top cover flap; internal inscription
- ③ Display LEDs
- ④ DIP switch
- ⑤ SET/RESET button
- ⑥ Bottom cover flap
- ⑦ Bottom cover flap; internal inscription
- ⑧ DataMatrix code
- ⑨ Device identification label

5.2.6.4 Terminal assignment

Terminal	Explanation
A1	+
A2	-

Terminal	Explanation
IN1	Sensor channel 1
IN2	Sensor channel 2
PAR	NO contact/NC contact evaluation
INS	START pushbutton circuit
INF	Feedback circuit
INK	Cascading circuit
T1	Test output 1 (for IN1, PAR)
T2	Test output 2 (for IN2, INF)
13 - 14 23 - 24 33 - 34	Safety-related outputs (NO contact, relay contact)
41 - 42	Semiconductor signaling circuits (NC contact, relay contact)

State diagram 3SK1121

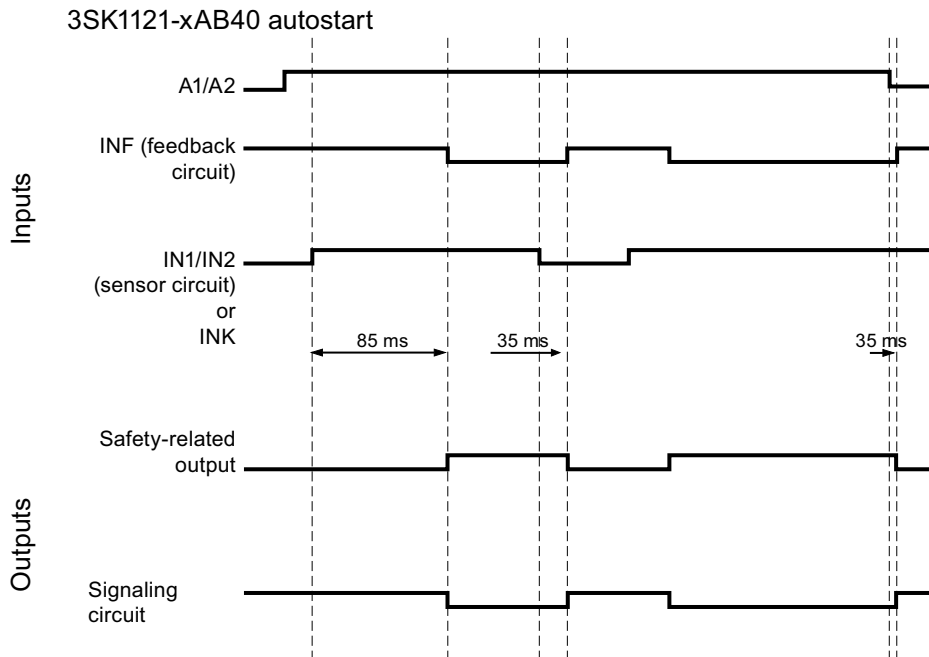

5.2.7 3SK1121 Advanced basic unit time-delayed (with relay outputs)

5.2.7.1 Device features

Article number


3SK1121-xCB4y	24 V DC
---------------	---------

x = 1: Screw-type terminal; x = 2: Spring-loaded (push-in) terminal
y = delay: 1 = 0.05 ... 3 s; 2 = 0.5 ... 30 s; 4 = 5 ... 300 s

Additional / alternative device characteristics

- 2 instantaneous safety-related outputs (NO contacts)
- 2 time-delayed safety-related outputs (NO contacts),
- Potentiometer for setting the delay time
- Time function: With OFF-delay

5.2.7.2 Design

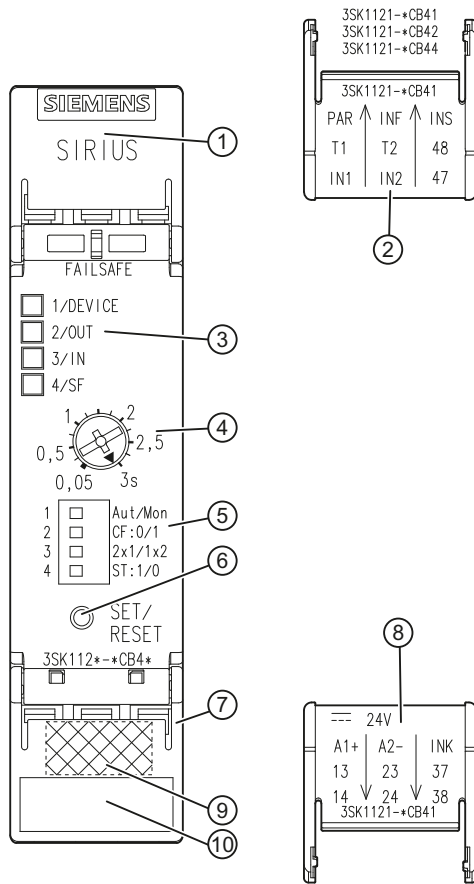


- ① Top cover flap
- ② Top cover flap; internal inscription
- ③ Display LEDs
- ④ Potentiometer for setting the delay time
- ⑤ DIP switch
- ⑥ SET/RESET button
- ⑦ Bottom cover flap
- ⑧ Bottom cover flap; internal inscription
- ⑨ DataMatrix code
- ⑩ Device identification label


5.2.7.3 Terminal assignment

Terminal	Explanation
A1	+
A2	-

Terminal	Explanation
IN1	Sensor channel 1
IN2	Sensor channel 2
PAR	NO contact/NC contact evaluation
INS	START pushbutton circuit
INF	Feedback circuit
INK	Cascading circuit
T1	Test output 1 (for IN1, PAR)
T2	Test output 2 (for IN2, INF)
13 - 14	Instantaneous safety-related output 1 (NO contact, relay contact)
23 - 24	Instantaneous safety-related output 2 (NO contact, relay contact)
37 - 38	Delayed safety-related output 1 (NO contact, relay contact)
47 - 48	Delayed safety-related output 2 (NO contact, relay contact)

State diagrams 3SK1121-xCB4y

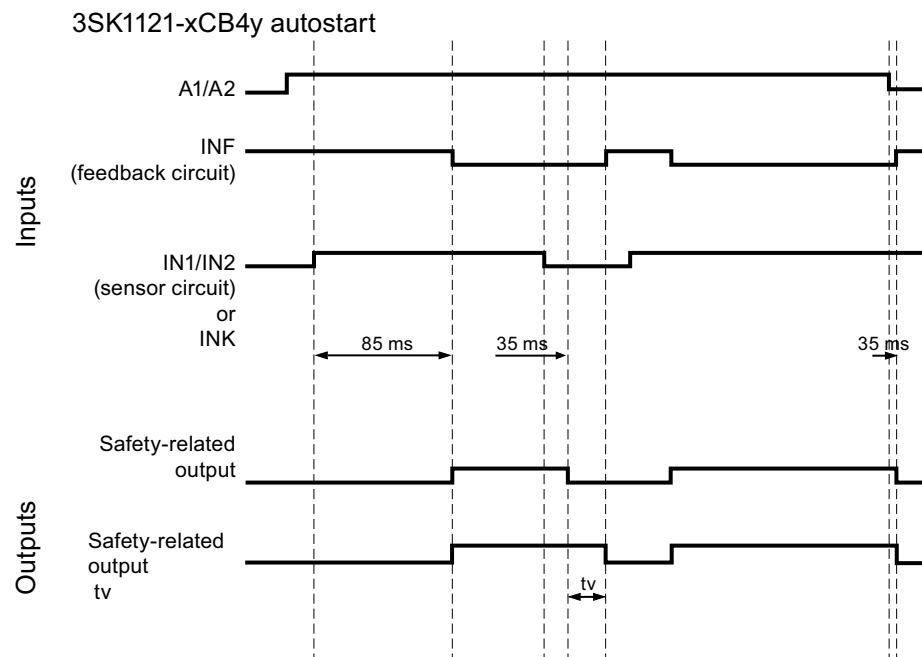

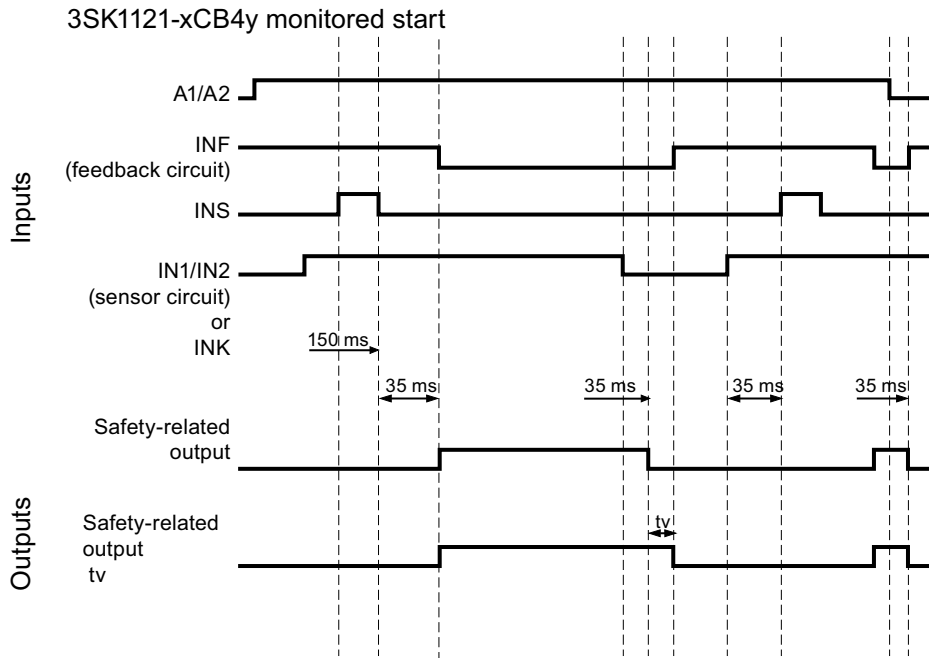

5.2.8 3SK1122 Advanced basic unit instantaneous (with semiconductor outputs)

5.2.8.1 Device features

Article number

3SK1122-xAB40	24 V DC
---------------	---------

x = 1: Screw-type terminal; x = 2: Spring-loaded (push-in) terminal

Additional or alternative device features

- 3 safety-related semiconductor outputs
- 1 semiconductor signaling circuit

**WARNING****Continuous operation**


Devices up to E01/V1.0.0:

In continuous operation for PL e/Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061, the key safety values apply where the function test interval (state change of the outputs) \leq 1 year.

Devices from E02/V1.1.0:

In continuous operation for PL e/Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061, the key safety values apply where the function test interval (state change of the outputs) \leq 20 years.

5.2.8.2 Design

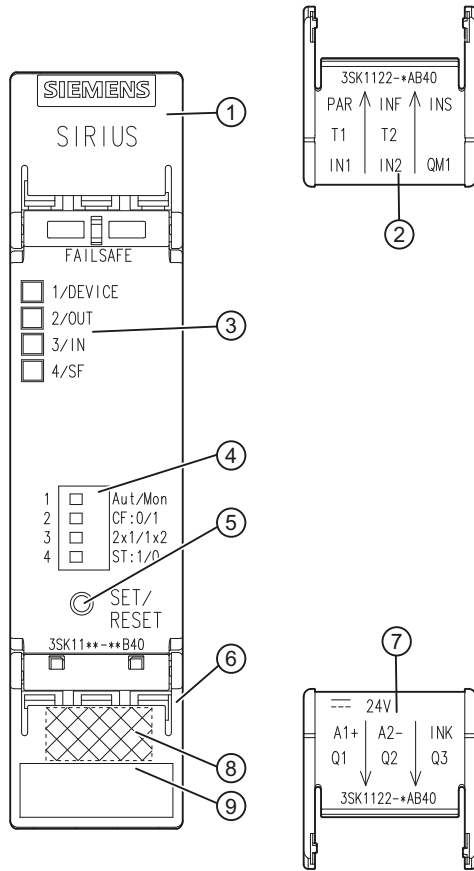


- ① Top cover flap
- ② Top cover flap; internal inscription
- ③ Display LEDs
- ④ DIP switch
- ⑤ SET/RESET button
- ⑥ Bottom cover flap
- ⑦ Bottom cover flap; internal inscription
- ⑧ DataMatrix code
- ⑨ Device identification label


5.2.8.3 Terminal assignment

Terminal	Explanation
A1	+
A2	-

Terminal	Explanation
IN1	Sensor channel 1
IN2	Sensor channel 2
PAR	NO contact/NC contact evaluation
INS	START pushbutton circuit
INF	Feedback circuit
INK	Cascading circuit
T1	Test output 1 (for IN1, PAR)
T2	Test output 2 (for IN2, INF)
Q1	Safety-related output 1 (switching to P potential, 24 V DC)
Q2	Safety-related output 2 (switching to P potential, 24 V DC)
Q3	Safety-related output 3 (switching to P potential, 24 V DC)
QM1	Semiconductor signaling circuit 1 (switching to P potential, 24 V DC)

State diagrams 3SK1122-xAB40

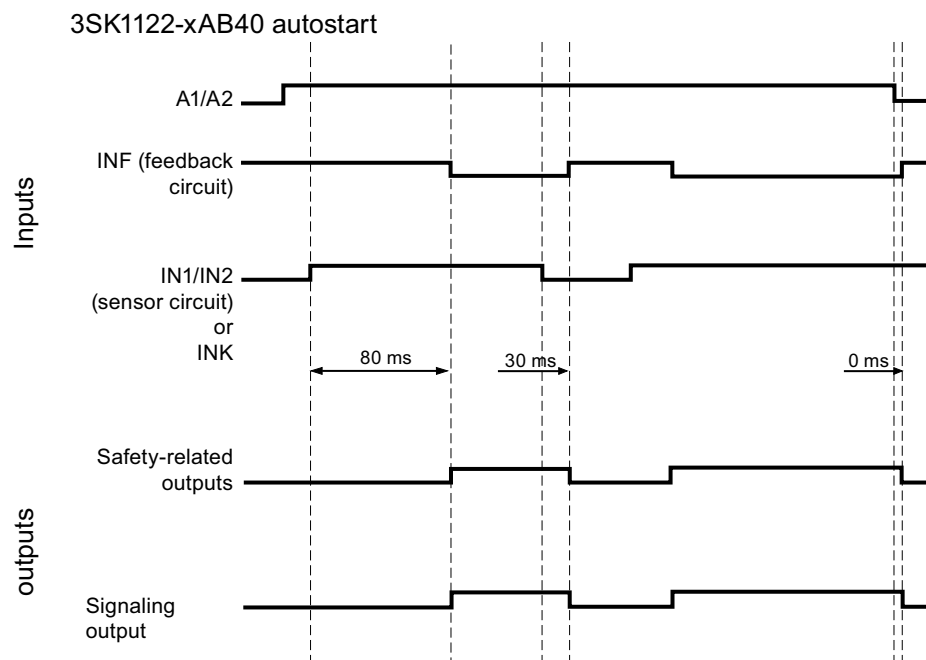

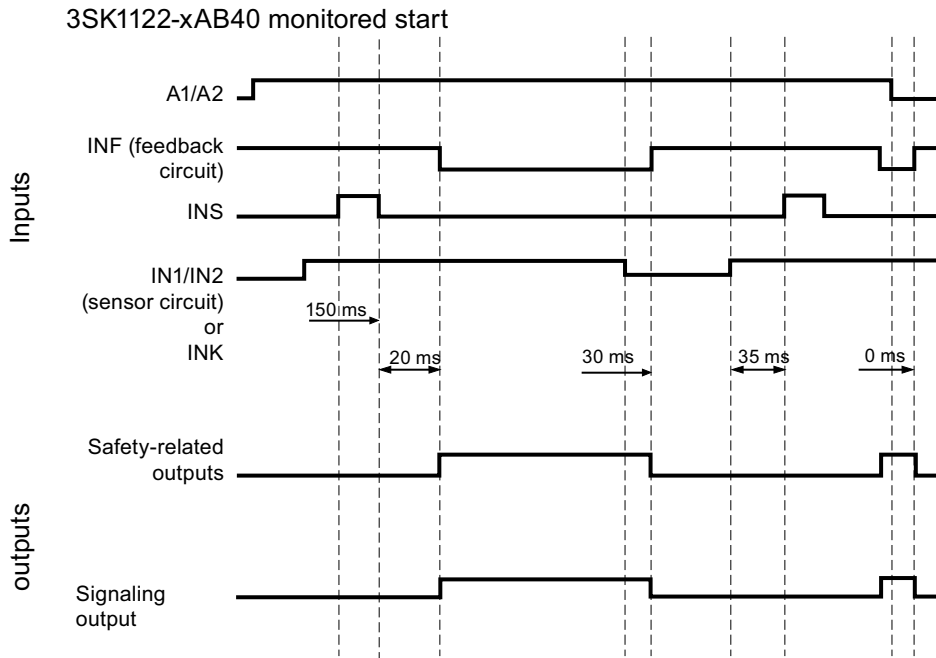

5.2.9 3SK1122 Advanced basic unit time-delayed (with semiconductor outputs)

5.2.9.1 Device features

Article number

3SK1122-xCB4y	24 V DC
---------------	---------

x = 1: Screw-type terminal; x = 2: Spring-loaded (push-in) terminal
 y = delay: 1 = 0.05 ... 3 s; 2 = 0.5 ... 30 s; 4 = 5 ... 300 s

Additional / alternative device characteristics

- 2 instantaneous semiconductor outputs
- 2 time-delayed semiconductor outputs
- Potentiometer for setting the delay time
- Time function: With OFF-delay

**WARNING****Continuous operation**


Devices up to E01/V1.0.0:

In continuous operation for PL e/Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061, the key safety values apply where the function test interval (state change of the outputs) ≤ 1 year.

Devices from E02/V1.1.0:

In continuous operation for PL e/Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061, the key safety values apply where the function test interval (state change of the outputs) ≤ 20 years.

5.2.9.2 Design

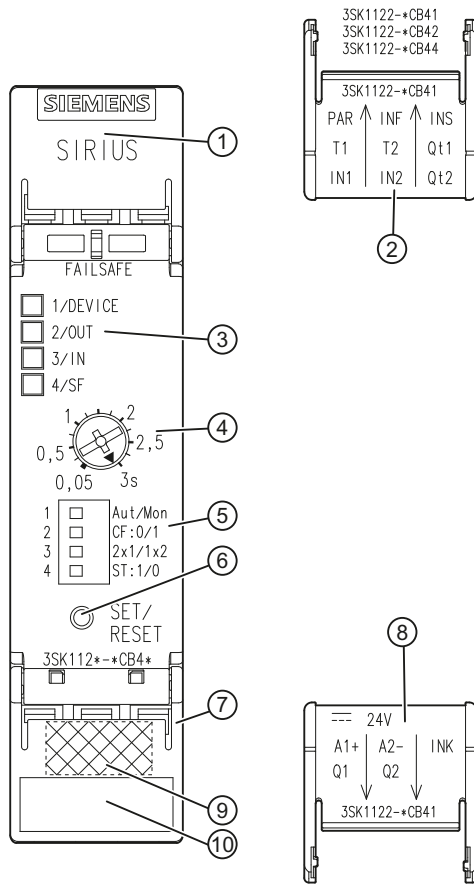


- ① Top cover flap
- ② Top cover flap; internal inscription
- ③ Display LEDs
- ④ Potentiometer for setting the delay time
- ⑤ DIP switch
- ⑥ SET/RESET button
- ⑦ Bottom cover flap
- ⑧ Bottom cover flap; internal inscription
- ⑨ DataMatrix code
- ⑩ Device identification label


5.2.9.3 Terminal assignment

Terminal	Explanation
A1	+
A2	-

Terminal	Explanation
IN1	Sensor channel 1
IN2	Sensor channel 2
PAR	NO contact/NC contact evaluation
INS	START pushbutton circuit
INF	Feedback circuit
INK	Cascading circuit / normal switching duty
T1	Test output 1 (for IN1, PAR)
T2	Test output 2 (for IN2, INF)
Q1	Instantaneous safety-related output 1 (switching to P potential, 24 V DC)
Q2	Instantaneous safety-related output 2 (switching to P potential, 24 V DC)
Qt1	Time-delayed safety-related output 1 (switching to P potential, 24 V DC)
Qt2	Time-delayed safety-related output 2 (switching to P potential, 24 V DC)

State diagrams 3SK1122-xCB4y

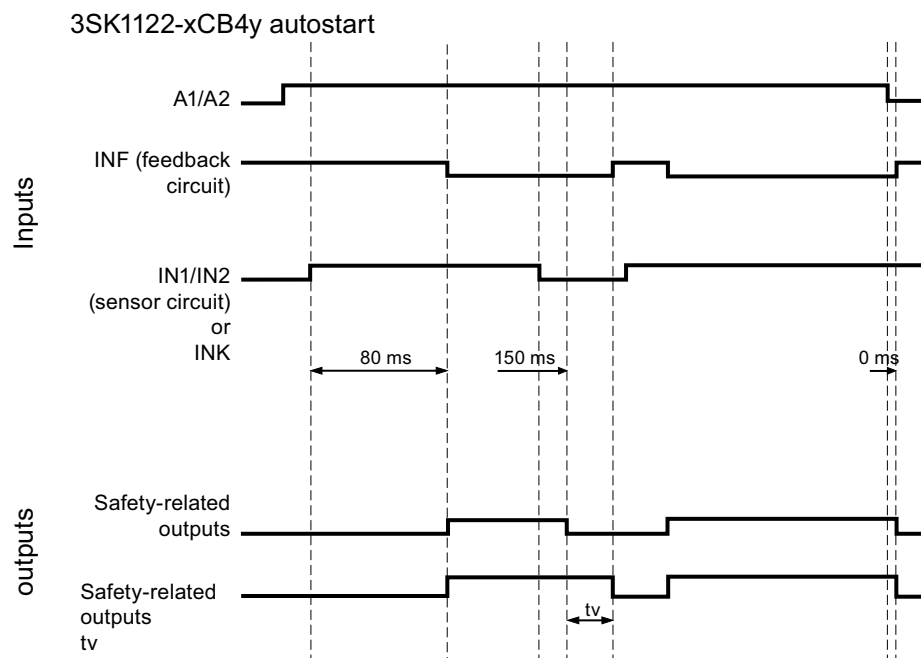

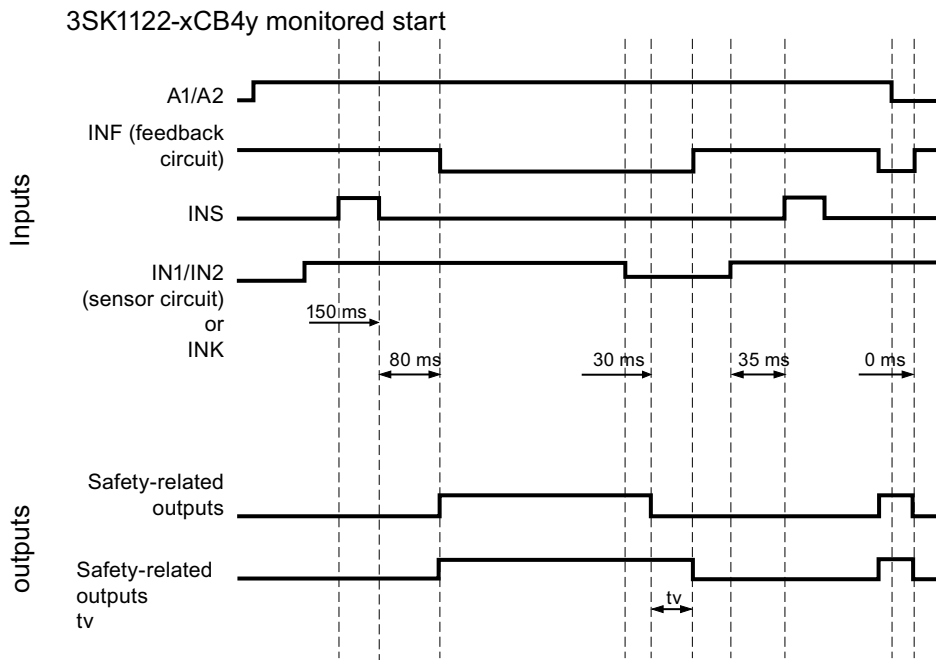

5.2.10 3SK1120 Advanced basic unit instantaneous (with semiconductor outputs)

5.2.10.1 Device features

Article number

3SK1120-xAB40	24 V DC
---------------	---------

x = 1: Screw-type terminal; x = 2: Spring-loaded (push-in) terminal

Additional or alternative device features

- 1 safety-related semiconductor output
- The following design variants are possible for the 3SK1120 Advanced basic unit:
 - In operation without using device connectors, up to PL e/Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061 can be achieved for devices from E02/V 1.1.0.



WARNING

Operation without using device connectors for E01/V1.0.0 devices

In operation without using device connectors, up to PL c / Cat. 2 in accordance with ISO 13849-1 or SILCL 2 in accordance with IEC 62061 can be achieved.

- Operation using device connectors
In operation using device connectors and using at least one output expansion (3SK1211, 3SK1213) or one 3RM1 Failsafe motor starter, up to PL e/Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061 can be achieved.



WARNING

Continuous operation


Devices up to E01/V1.0.0:

In continuous operation for PL e/Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061, the key safety values apply where the function test interval (state change of the outputs) \leq 1 year.

Devices from E02/V1.1.0:

In continuous operation for PL e/Cat. 4 in accordance with ISO 13849-1 or SILCL 3 in accordance with IEC 62061, the key safety values apply where the function test interval (state change of the outputs) \leq 20 years.

5.2.10.2 Design

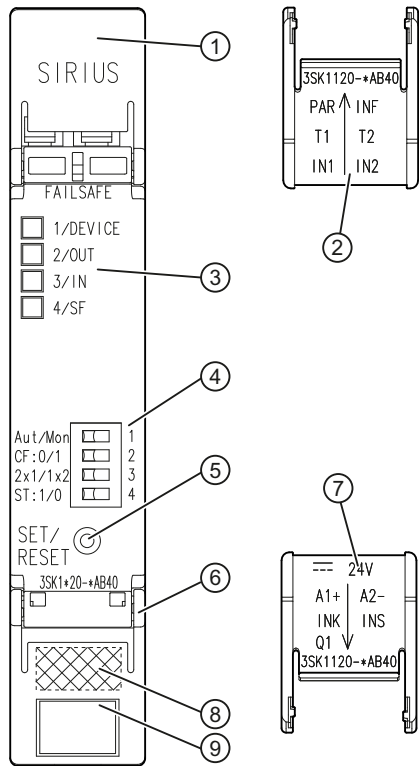

- ① Top cover flap
- ② Top cover flap; internal inscription
- ③ Display LEDs
- ④ DIP switch
- ⑤ SET/RESET button
- ⑥ Bottom cover flap
- ⑦ Bottom cover flap; internal inscription
- ⑧ DataMatrix code
- ⑨ Device identification label


5.2.10.3 Terminal assignment


Terminal	Explanation
A1	+
A2	-
IN1	Sensor channel 1
IN2	Sensor channel 2
PAR	NO contact/NC contact evaluation
INS	START pushbutton circuit

Terminal	Explanation
INF	Feedback circuit
INK	Cascading circuit
T1	Test output 1 (for IN1, PAR)
T2	Test output 2 (for IN2, INF)
Q1	Safety-related output 1 (switching to P potential, 24 V DC)

5.2.10.4 Status diagrams

State diagrams 3SK1120-xAB40

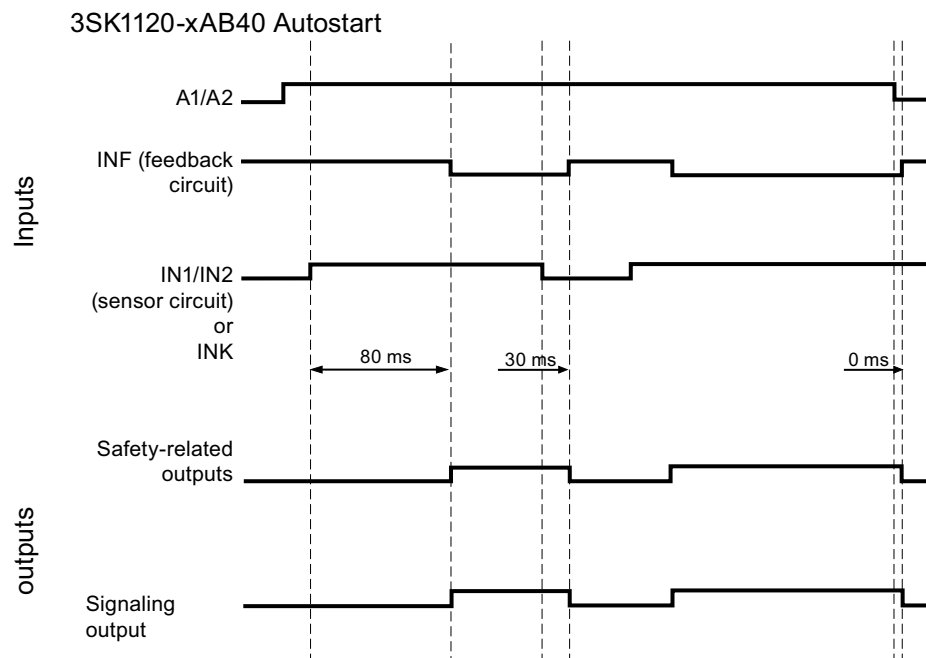

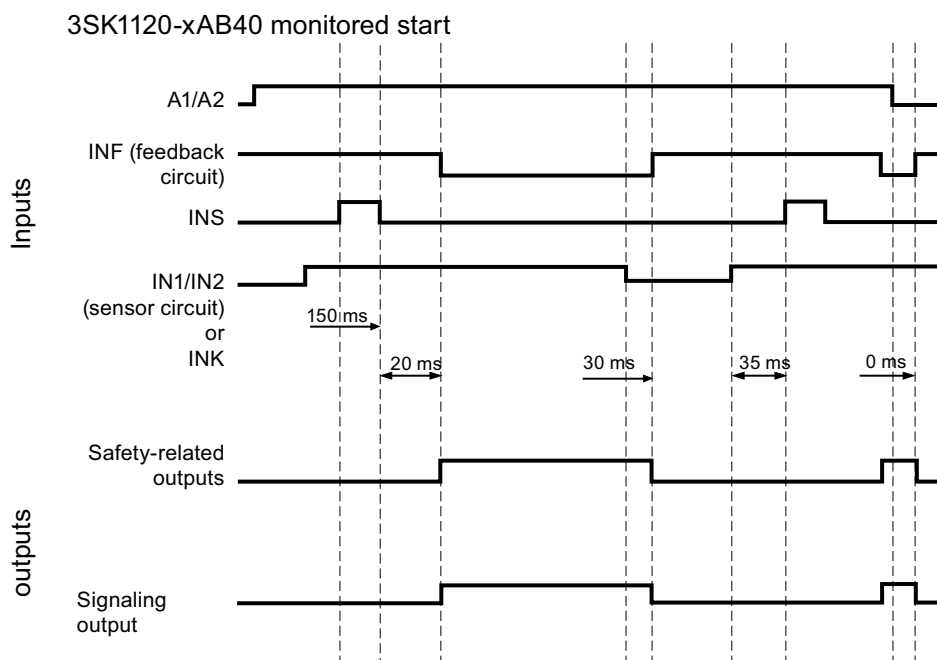

5.3 3SK1 output expansions

5.3.1 Applications

The 3SK1 output expansions are used to expand the safety-related outputs. The maximum achievable Performance Level PL/Cat. in accordance with ISO 13849-1, SILCL in accordance with IEC 62061, SIL in accordance with IEC 61508 corresponds to the Performance Level PL and SIL of the basic unit when the external wiring (connection between basic unit and output expansion) is configured as fail-safe (e.g. basic unit and output expansion are connected using 3ZY12 device connector).

The output expansions can be controlled via the supply voltage (A1/A2) or using 3ZY12 device connectors¹⁾.

¹⁾ For 24 V DC variant only

Note

If expansion units are controlled via the 3ZY12 device connector, additional feeding of the control supply voltage (A1/A2) at one of the output expansions leads to a fault in the system configuration.

Note**Use of the output expansions on 3ZY12 device connectors**

You can switch between instantaneous or delayed control of the basic unit using the slide switch of the output expansion (see also the chapter "System configuration rules (Page 120)").

Note**Using the output expansions with conventional wiring**

The slide switch has **no** function here.

If you require Stop category 1 outputs for the output expansion, terminals A1/A2 of the output expansion must be connected to outputs 38 or 48 on 3SK1 basic units with relay outputs or to Q1t/Q2t (in the case of 3SK1 with semiconductor outputs).

5.3.2 Function description

The operating state of the 3SK1 output expansions is displayed on the DEVICE LED.

The 3SK1211 output expansions (4RO) have four safety-related outputs as NO circuits, and the 3SK1213 output expansions (3RO) have three. They each have one positively-driven NC circuit. The output expansions can be activated via any output of the basic unit via (A1). The NC circuit 51/52 of 3SK1211 (4RO) or 41/42 of 3SK1213 (3RO) is used for monitoring the output expansions.

In the 24 V DC variants, the expansion units can be activated and evaluated via the 3ZY12 device connectors.

5.3.3 Display of the operating state

Display of the operating state

The operating state and functioning of the device are indicated by an LED:

- (1) DEVICE

Operating states

LED	State	Meaning
DEVICE	Control supply voltage	Safety-related outputs
OFF	OFF	Open
Green	ON	Closed

5.3.4 Function setting

Setting the activation (slide switch only for 24 V variants)

The interface input for activating the output expansion can be selected using a slide switch on the front of the device.

Slide switch	Interface input
Top	Outputs switch with time delay (as in basic unit)
Bottom	Outputs switch instantaneously

When using an instantaneous basic unit, the slide switch must be in the instantaneous position (bottom).

5.3.5 Output expansion 3SK1211

5.3.5.1 Device features

Article number

3SK1211-xBB00	24 V AC
3SK1211-xBB40	24 V DC
3SK1211-xBW20	110 ... 240 V AC / DC (wide-range supply)

x = 1: Screw-type terminal; x = 2: Spring-loaded (push-in) terminal

Supply:

24 V AC:

- Control via 24 V transformer is possible

24 V DC:

- An SELV / PELV power supply must be used for the infeed


110 ... 240 V AC/DC:

- Direct line supply connection L/N

Device properties:


- For 24 V DC variant only: Slide switch for selecting the control type (time-delayed / instantaneous)
- 1 LED for status display
- 4 safety-related outputs (NO contacts),
- 1 NC circuit as feedback contact for the 3SK1211 output expansion to the upstream basic unit
- 3ZY12 device connectors.
- Enclosure width 22.5 mm
- Removable terminals

5.3.5.2 Design of 3SK1211-B..0

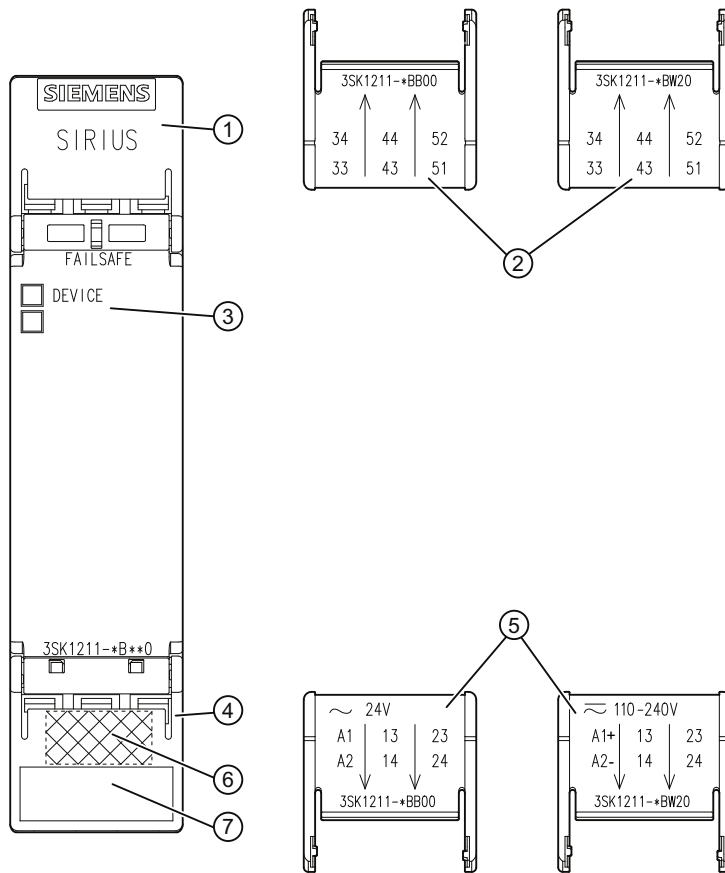

- ① Top cover flap
- ② Top cover flap; internal inscription
- ③ Display LEDs
- ④ Bottom cover flap
- ⑤ Bottom cover flap; internal inscription
- ⑥ DataMatrix code
- ⑦ Device identification label

5.3.5.3 Design of 3SK1211-.BB40

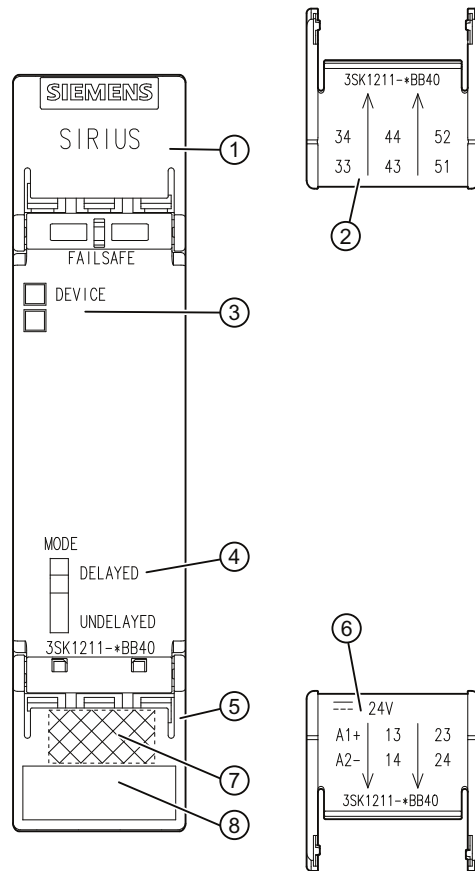

- ① Top cover flap
- ② Top cover flap; internal inscription
- ③ Display LEDs
- ④ Slide switch
- ⑤ Bottom cover flap
- ⑥ Bottom cover flap; internal inscription
- ⑦ DataMatrix code
- ⑧ Device identification label

5.3.5.4 Terminal assignment

Terminal	Explanation
A1	+ (L+ for 3SK1211-.BW20)
A2	- (N- for 3SK1211-.BW20)
13 - 14	Safety-related output 1 (NO contact, relay contact)

Terminal	Explanation
23 - 24	Safety-related output 2 (NO contact, relay contact)
33 - 34	Safety-related output 3 (NO contact, relay contact)
43 - 44	Safety-related output 4 (NO contact, relay contact)
51 - 52	NC circuit as feedback contact (NC, relay contact)

5.3.6 Output expansion 3SK1213

5.3.6.1 Device features

Article number

3SK1213-xAB40	24 V DC
3SK1213-xAJ20	115 V AC
3SK1213-xAL20	230 V AC

x = 1: Screw-type terminal; x = 2: Spring-loaded (push-in) terminal

Supply:

24 V DC:

- An SELV / PELV power supply must be used for the infeed

115 V AC and 230 V AC

- Direct line supply connection L/N


Device properties:

- For 24 V DC variant only: Slide switch for selecting the control type (time-delayed / instantaneous)
- 1 LED for status display
- 3 safety-related outputs (NO contacts),
- 1 NC circuit as feedback contact for the 3SK1213 output expansion for the upstream basic unit
- 3ZY12 device connectors.
- Enclosure width 90 mm
- Removable terminals

Using 3ZY12 device connectors


The 3SK1213 output expansion must always be terminated with a device termination connector set for the 3SK1 safety relay, size > 45 mm (3ZY1212-0FA01). Expansion on the right-hand side is then no longer possible.

5.3.6.2 Design of 3SK1213-.AB40

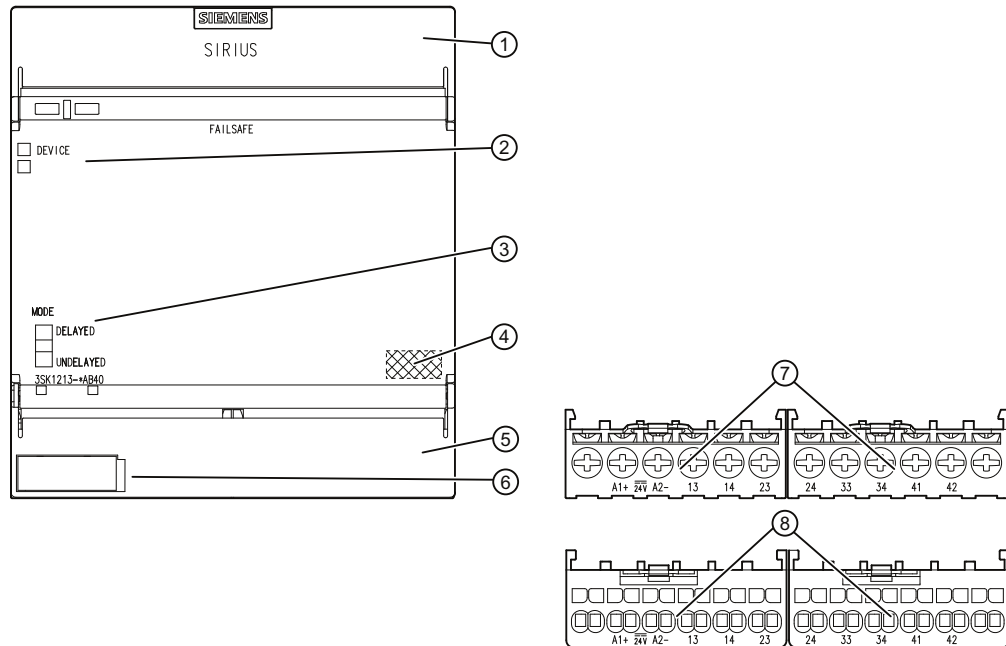

- ① Top cover flap
- ② Display LEDs
- ③ Slide switch
- ④ DataMatrix code
- ⑤ Bottom cover flap
- ⑥ Device identification label
- ⑦ Screw-type terminals
- ⑧ Spring-loaded terminal

5.3.6.3 Design of 3SK1213-.A.20

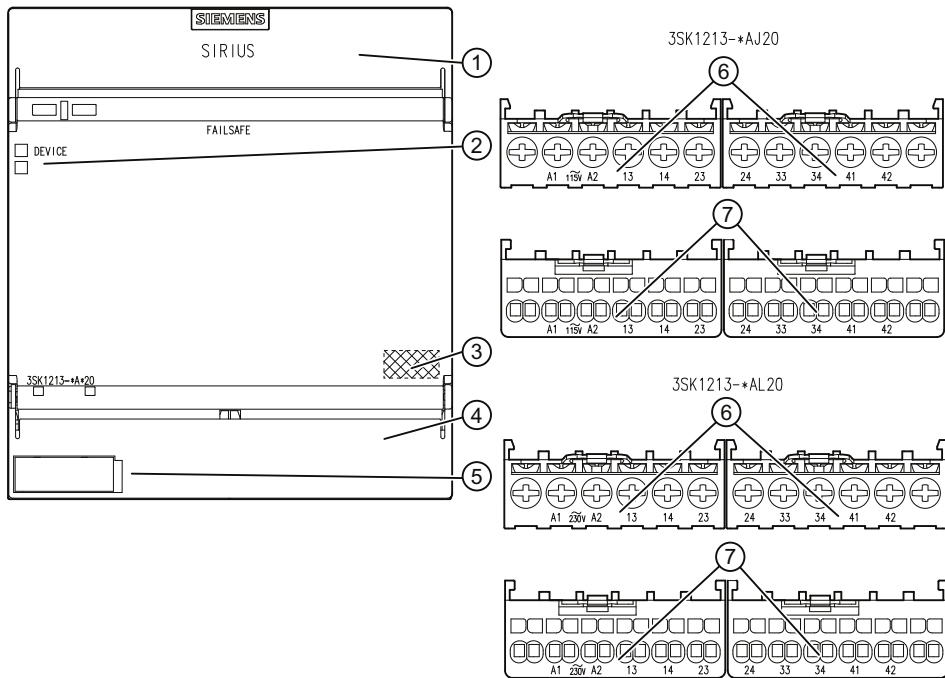

- ① Top cover flap
- ② Display LEDs
- ③ DataMatrix code
- ④ Bottom cover flap
- ⑤ Device identification label
- ⑥ Screw-type terminals
- ⑦ Spring-loaded terminal

5.3.6.4 Terminal assignment

Terminal	Description
A1	+
A2	-
13 - 14	Safety-related output 1 (NO contact, relay contact)
23 - 24	Safety-related output 2 (NO contact, relay contact)
33 - 34	Safety-related output 3 (NO contact, relay contact)
41 - 42	NC circuit as feedback contact (NC, relay contact)

5.3.7 3RM1 Failsafe motor starters

3RM1 Failsafe motor starters can be used wherever combinations of contactors and overload relays were previously used.

3RM1 Failsafe motor starters are used in the following areas, for example:

- Conveyor technology
- Logistics systems
- Production machines
- Machine tools
- Small elevators

Thanks to the additional functionality of safety-related shutdown, the 3RM11 Failsafe and 3RM13 Failsafe motor starter variants are ideally suited to safety-related applications in the 3SK1 system up to SILCL 3 in accordance with IEC 62061 and PL e/Cat. 4 in accordance with ISO 13849-1.

The maximum achievable Performance Level PL/Cat. in accordance with ISO 13849-1, SILCL in accordance with IEC 62061, SIL in accordance with IEC 61508 corresponds to the Performance Level PL and SIL of the 3SK1 basic unit when the external wiring (connection between basic unit and output expansion) is configured as fail-safe (e.g. basic unit and 3RM1 Failsafe motor starter are connected using 3ZY12 device connector).

3RM1 Failsafe motor starters can be controlled via the supply voltage (A1/A2) or via 3ZY12 device connectors (24 V DC variant only).

Note

If expansion units are controlled via the 3ZY12 device connector, additional feeding of the control supply voltage (A1/A2) at one of the output expansions leads to a fault in the system configuration.

Note

In the configuration with a 3SK1 Advanced basic unit on a 3ZY12 device connector, 3RM1 Failsafe motor starters can only be controlled by the instantaneous enable signal of the 3SK1 unit. If control of the 3RM1 Failsafe motor starters by means of the time-delayed output is desired, this can only be done by wiring the time-delayed safety-related output of the 3SK1 basic unit.

More detailed technical information is available in the SIRIUS 3RM1 motor starters (<http://support.automation.siemens.com/WW/view/en/66295730>) manual on the Internet.

5.4 3RQ1 output expansion

5.4.1 Applications

Expansion of safety-related outputs

The 3RQ1 output expansions are used to expand the safety-related outputs. The maximum achievable Performance Level PL/Cat. in accordance with ISO 13849-1, SILCL in accordance with IEC 62061, SIL in accordance with IEC 61508 is SIL 2 / PL; for 3RQ12. is SIL 3 / PL e. To achieve this, you must realize the external wiring, i.e. the connection between the basic unit and 3RQ1 output expansion, in a fail-safe manner, e.g. with the 3ZY12 device connector. With the 3RQ10., SIL 2 in accordance with IEC 62061 can only be achieved by means of additional feedback circuit wiring of the 3RQ1 normally closed contact in the safety circuit of the 3SK1 basic unit.

The 3RQ12. output expansions are certified up to SIL 3 / PL e in accordance with IEC 62061 / ISO 13849. With these variants, the feedback circuit is situated on the device connector, that is to say, additional wiring of the feedback circuit is not necessary.

Note

If expansion units are controlled via the 3ZY12 device connector, additional feeding of the control supply voltage (A1/A2) at one of the output expansions leads to a fault in the system configuration.

Note

Using the output expansions with conventional wiring

If you require Stop category 1 outputs for the output expansion, terminals A1/A2 of the output expansion must be connected to outputs 38 or 48 on 3SK1 basic units with relay outputs or to Q1t/Q2t (in the case of 3SK1 with semiconductor outputs).

WARNING

Ensuring electrical safety and safety function

The normally closed contact of 3RQ12. is designed for a voltage of 24 V DC. If higher voltages occur, electrical safety cannot be ensured due to the voltage clearance distances. If the 3RQ12. is integrated in a system with a device connector, the feedback circuit is routed via the device connector; connection of external voltage is not necessary and not permitted. Connecting external voltage can bypass the safety function.

Control

You can control the output expansions via the supply voltage (A1/A2).

Alternatively, with the 24 V AC/DC variant, you can control the output expansion via the 3ZY12 device connector.

If the expansion units are controlled via the 3ZY12 device connector, additional feeding of the control supply voltage (A1/A2) at one of the output expansions leads to a fault in the system configuration.

5.4.2 Function description

The operating state of the 3RQ1 output expansions is displayed on the DEVICE LED.

Depending on the variant used, the 3RQ1 output expansions have 1NO/1NC, 2NO/1NC, 2NO/2NC or 4NO/1NC. The output expansions can be controlled via any output of the basic unit via (A1). The NC circuits of the 3RQ1 are used to monitor the output expansion or for additional switching.

In the 24 V DC variants, the expansion units can be controlled and evaluated via the 3ZY12 device connectors.

5.4.3 Display of the operating state

Display of the operating state

The operating state and functioning of the device are indicated by an LED:

- (1) DEVICE

Operating states

LED	State	Meaning
DEVICE	Control supply voltage	Control state of the relay
Off	Off	Inactive position
Green	ON	Active position

5.4.4 Device features

Article number

Article number	Number of NO / NC contacts	Voltage supply	Width
3RQ1000-xEB00	1NO / 1NC	24 V DC	17.5 mm
3RQ1000-xEB00	1NO / 1NC	24 ... 240 V AC/DC	17.5 mm
3RQ1000-xGB00	2NO / 1NC	24 V DC	17.5 mm
3RQ1000-xGB00	2NO / 1NC	24 ... 240 V AC/DC	17.5 mm
3RQ1000-xHB00	2NO / 2NC	24 V DC	22.5 mm
3RQ1000-xHB00	2NO / 2NC	24 ... 240 V AC/DC	22.5 mm

Article number	Number of NO / NC contacts	Voltage supply	Width
3RQ1000-xLB00	4NO / 1NC	24 V DC	22.5 mm
3RQ1000-xLB00	4NO / 1NC	24 ... 240 V AC/DC	22.5 mm
3RQ1200-xEB00	1NO / 1NC	24 V DC	17.5 mm
3RQ1200-xEW00	1NO / 1NC	24 ... 240 V AC/DC	17.5 mm

x = 1: Screw-type terminal; x = 2: Spring-loaded (push-in) terminal

Power supply

24 V DC:

- An SELV / PELV power supply must be used for the infeed

24 ... 240 V AC/DC:


- Wide-range power supply for connecting a SELV / PELV power supply unit or a direct line supply connection L/N.

Device properties

- 1 LED for status display
- Up to 4 safety-related outputs (NO contacts)
- 1 NC circuit as feedback contact for output expansion to the up-circuit basic unit
- 3ZY12 device connectors.
- Enclosure widths 17.5 mm / 22.5 mm
- Removable terminals

5.4.5 3RQ11.00-.E.00, 3RQ1000-.G.00 configuration


Diagram showing a typical arrangement:

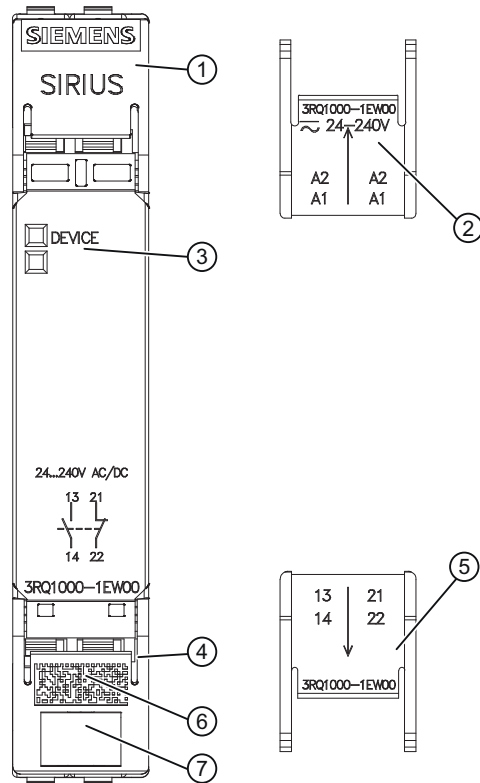

- ① Top cover flap
- ② Top cover flap; internal inscription
- ③ Display LEDs
- ④ Bottom cover flap
- ⑤ Bottom cover flap; internal inscription
- ⑥ DataMatrix code
- ⑦ Device identification label

5.4.6 3RQ1000-xHB00, 3RQ1000-xLB00 configuration

Diagram showing a typical arrangement:

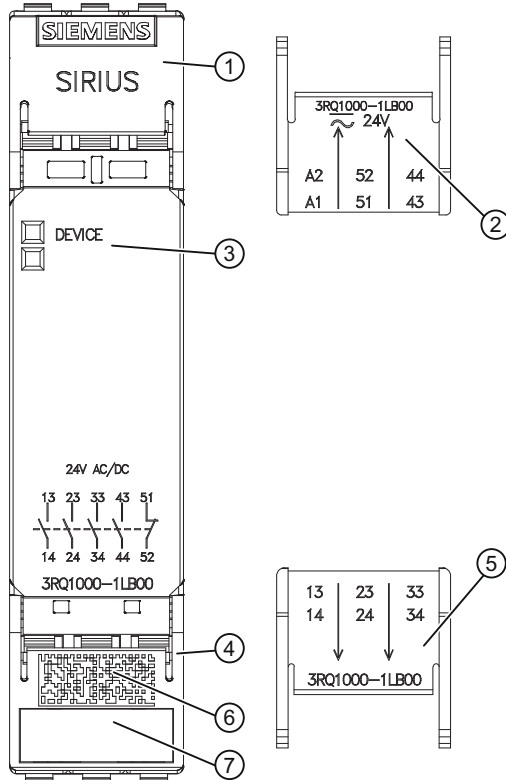

- ① Top cover flap
- ② Top cover flap; internal inscription
- ③ Display LEDs
- ④ Bottom cover flap
- ⑤ Bottom cover flap; internal inscription
- ⑥ DataMatrix code
- ⑦ Device identification label

5.4.7 Terminal assignment

3RQ100-.E.00 / 3RQ1200-.E.00

Terminal	Explanation
A1	+
A2	-
13 - 14	Safety-related output 1 (NO contact, relay contact)
21 - 22	NC circuit as feedback contact (NC, relay contact)

3RQ1000-.GB00

Terminal	Explanation
A1	+
A2	-
13 - 14	Safety-related output 1 (NO contact, relay contact)
23 - 24	Safety-related output 2 (NO contact, relay contact)
31 - 32	NC circuit as feedback contact (NC, relay contact)

3RQ1000-.HB00

Terminal	Explanation
A1	+
A2	-
13 - 14	Safety-related output 1 (NO contact, relay contact)
23 - 24	Safety-related output 2 (NO contact, relay contact)
31 - 32	NC circuit as feedback contact (NC, relay contact)
41 - 42	NC circuit as feedback contact (NC, relay contact)

3RQ1000-.LB00

Terminal	Explanation
A1	+
A2	-
13 - 14	Safety-related output 1 (NO contact, relay contact)
23 - 24	Safety-related output 2 (NO contact, relay contact)
33 - 34	Safety-related output 3 (NO contact, relay contact)
43 - 44	Safety-related output 4 (NO contact, relay contact)
51 - 52	NC circuit as feedback contact (NC, relay contact)

5.5 3SK1 input expansions

5.5.1 Input expansion 3SK1220

5.5.1.1 Device features

Article number

3SK1220-xAB40	24 V DC
---------------	---------

x = 1: Screw-type terminal; x = 2: Spring-loaded (push-in) terminal

Device properties:

- 4-way DIP switch for function setting (parameterization)
- NO contact/NC contact evaluation via external jumper
- SET/RESET button
- 4 LEDs for status and function display
- 1 input (ON button circuit)
- 2 test outputs
- Enclosure width 17.5 mm
- Removable terminals
- Mounting exclusively on 3ZY12 device connectors

5.5.1.2 Applications


The number of sensor inputs for a basic unit can be expanded using input expansions. Input expansions must always be mounted to the left of a basic unit.

The input expansion 3SK1220 is certified to SIL 3/PL e.

The SILCL/PL achieved by the overall system depends on the external connection of sensors and actuators.

The input expansion 3SK1220 is supplied via the 3ZY12 device connectors.

5.5.1.3 Design

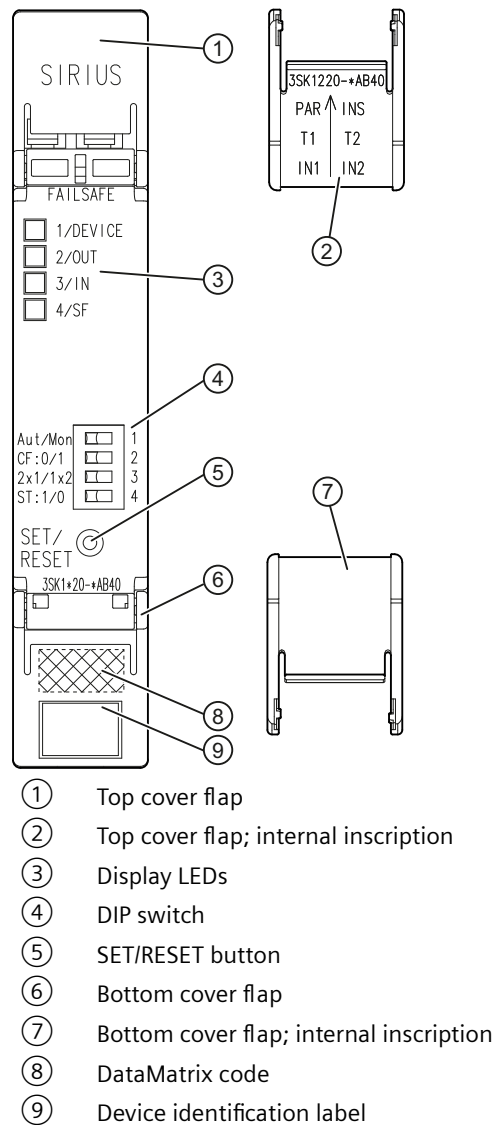

5.5.1.4 Terminal assignment

Terminal	Explanation
IN1	Sensor channel 1
IN2	Sensor channel 2
PAR	NO contact/NC contact evaluation
INS	ON button circuit
T1	Test output 1 (for IN1, PAR)
T2	Test output 2 (for IN2, INF)

5.5.1.5 Display of the operating state

You can find additional information on this under "Advanced" in the Chapter Function description (Page 68).


5.5.1.6 Function setting

DIP switch settings


You can find additional information on this under "Advanced" in the Chapter Functions (Page 69).

State diagrams 3SK1220

3SK1220 Autostart

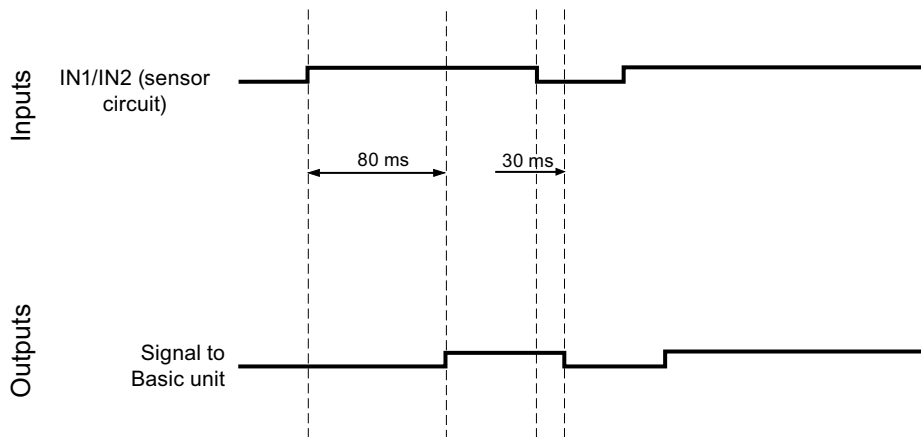

3SK1220 Monitored start

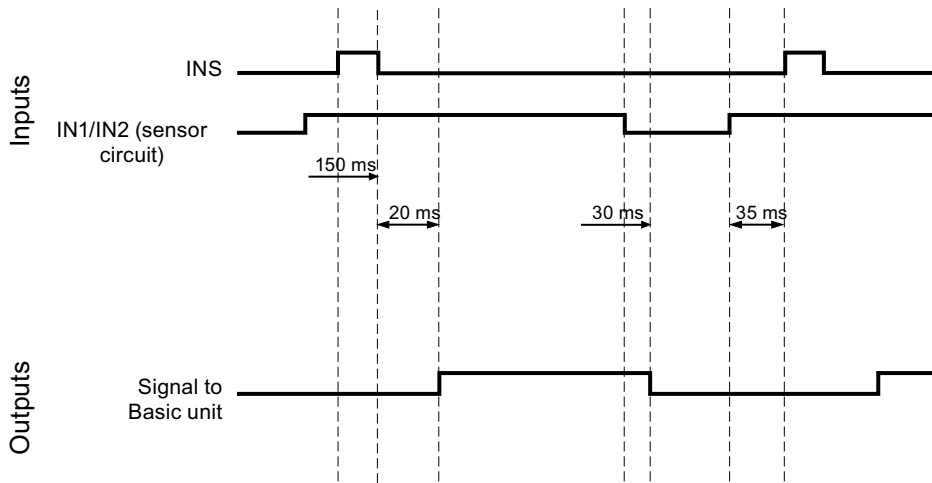

5.5.2 Power supply 3SK1230

5.5.2.1 Device features

Article number

3SK1230-xAW20	110 ... 240 V AC/DC
---------------	---------------------

x = 1: Screw-type terminal; x = 2: Spring-loaded (push-in) terminal

Device properties:

- Wide-range input: 110 ... 240 V AC/DC
- Rated output voltage: 24 V DC
- Rated output current: 0.6 A
- 1 LED for status display
- Connection interface
- Enclosure width 22.5 mm
- Removable terminals

Note

Due to the output current of the 3SK1230 power supply (= 0.6 A), the use of 3SK1 basic units with **semiconductor outputs** is only possible to a limited extent. The output current of all semiconductor outputs can be **up to 0.4 A** here (depending on the system configuration).

5.5.2.2 Applications


The 3SK1230 power supply generates a stabilized output voltage of 24 V DC from 110 ... 240 V AC/DC. The 3SK1230 power supply can supply the 3SK1 Advanced device series with 24 V DC via 3ZY12 device connectors or via the +/- output terminals.

The "INS" START pushbutton input of the 3SK1 device series must be supplied from the 3SK1230 power supply.

NOTICE

Two power supplies in parallel are not permissible! Only one 3SK1230 power supply is permitted in each system configuration.
--

5.5.2.3 Design

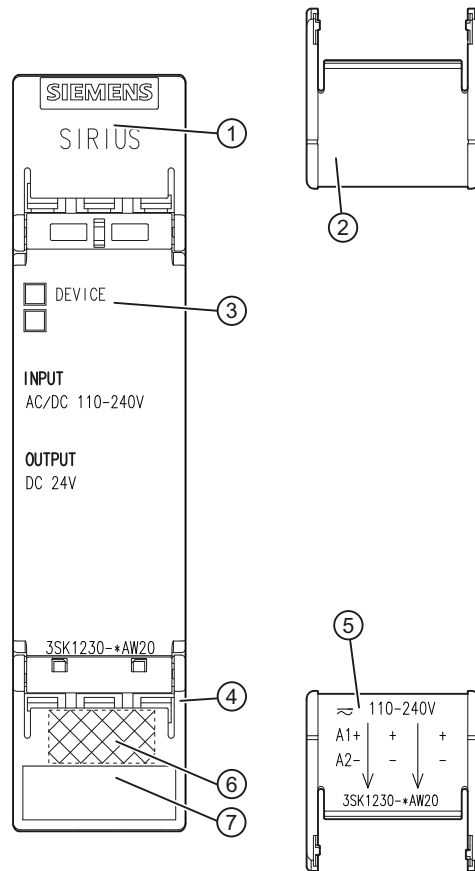

- ① Top cover flap
- ② Top cover flap; internal inscription
- ③ Display LEDs
- ④ Bottom cover flap
- ⑤ Bottom cover flap; internal inscription
- ⑥ DataMatrix code
- ⑦ Device identification label

5.5.2.4 Terminal assignment

Terminal	Explanation
A1	L+
A2	N-
+	+24 V DC
+	+24 V DC

Terminal	Explanation
-	- Mass
-	- Mass

5.5.2.5 Display of the operating state

Display of the operating state

The operating state and functioning of the device are indicated by an LED:

- (1) DEVICE

Operating states

LED	State	Meaning
DEVICE	Green	Output voltage OK
	Flashing	Overload
	OFF	No voltage

System configuration

6.1 General information

6.1.1 General notes on the Standard system

- Safety-related outputs are expanded using external wiring.
- Output expansions must be controlled via a safety-related output of the basic unit.
- The NC circuit of the 3SK1 / 3 RQ1 output extension must be looped into the feedback circuit (T4-INF/S) of the basic unit.

6.1.2 General information on the Advanced system

- Expansion of the safety-related outputs of 3SK1 Advanced basic units by means of external wiring is always possible.
- Expandable using 3ZY12 device connectors on both the input and output sides.
- The output expansions are controlled via the connection interface. With the 3SK1 / 3RQ12 output expansions, the feedback circuit is also evaluated via the connection interface. External wiring of the output expansion is therefore only necessary for 3RQ10 if SIL 2 / PL c is to be achieved. With 3RQ10, SIL 1 / PL c can also be achieved without feedback circuit wiring.
- When using the Advanced device series with output expansion on the device connector described, all enabling and signaling circuits of the basic unit and output expansion can be used as required.
- The input expansions, as well as the output expansions mounted on the 3ZY12 device connector, are supplied with voltage via the 3ZY12 device connector. The supply voltage is only connected once on the basic unit (24 V DC) or the 3SK1230 power supply (110 ... 240 V AC/DC).
- Motor feeders up to 3 kW (400 V) can be implemented quickly and easily using 3RM1 Failsafe motor starters. The motor starters can be easily connected as output expansions in the 3SK1 system.

Note

In the configuration with a 3SK1 Advanced basic unit on a 3ZY12 device connector, 3RM1 Failsafe motor starters can only be controlled by the instantaneous enable signal of the 3SK1 unit. If control of the 3RM1 Failsafe motor starter by means of the time-delayed output is desired, this can only be done by wiring the time-delayed safety-related outputs of the 3SK1 basic unit.


Information about start response in the system configuration of 3SK1 Advanced units can be found in the chapter "Explanations of device function (Page 176)".

6.1.3 Maximum system configuration


Changes to the system configuration

Changes to the system configuration in safety mode always result in a device error. Restarting, by disconnecting and reconnecting the operating voltage (Power OFF/ON), is a mandatory requirement.


Maximum system configuration when supplying with 24 V DC on the basic unit

 WARNING
Only one 3SK1 basic unit is permitted per system
The safety function is not guaranteed when more than one basic unit is used.

Connection of 24 V DC to the basic unit:
A maximum of 5 expansions are permitted on the left of the basic unit and 5 expansions on the right.

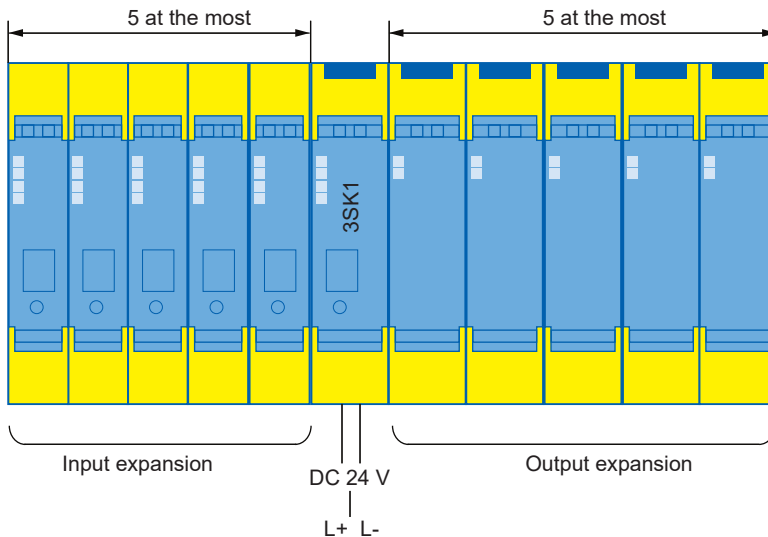

Example of a configuration with connection of 24 V DC on the basic unit and 3RM1 Failsafe motor starter

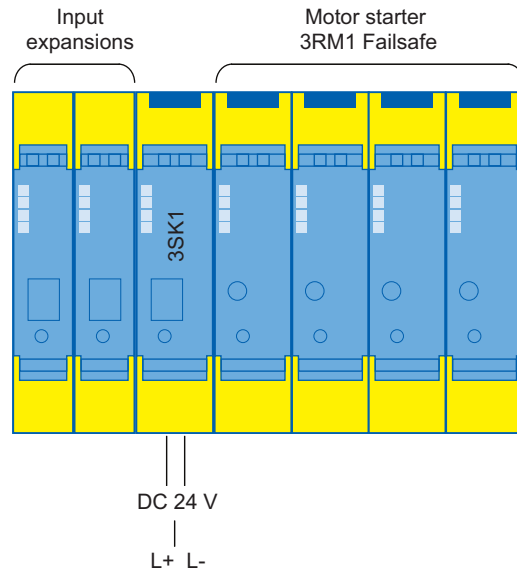

Maximum system configuration when supplying with 24 V DC with 3SK1230 power supply

When using the 3SK1230 power supply, the maximum system configuration can be calculated as follows:

Up to 10 "system units" can be connected to a 3SK1230 power supply.

Individual devices occupy a different number of system units.

Note

With this configuration too, up to 5 expansions are permitted to the left of the basic unit and 5 expansions are permitted on the right.


Device	System unit
3SK1220 input expansion	1
3SK1230 power supply	0
3SK112 basic units	0
3SK1211 output expansion	2
3SK1213 output expansion	2
3RQ1 output expansion	2
3RM1 Failsafe motor starters	4

Example 1)


1 x 3SK1230 power supply ; 5 x 3SK1220 input expansion; 1 x 3SK112 basic unit;

2 x 3SK1211 output expansion


6.1 General information

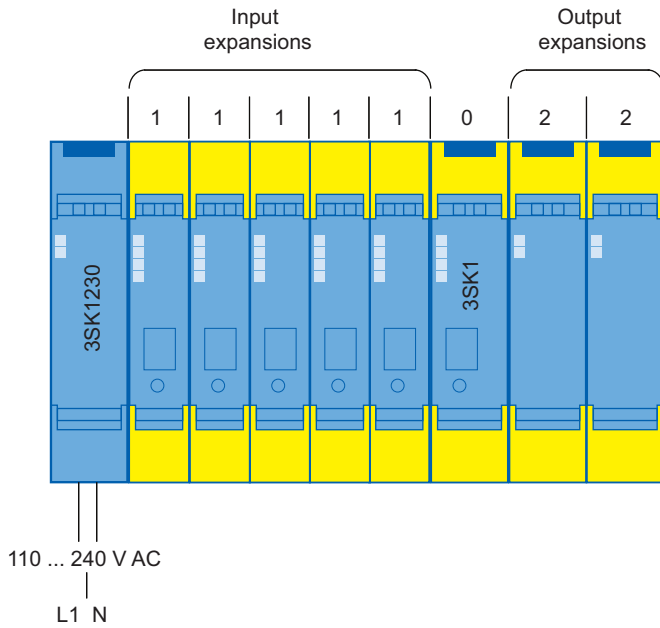

Example 2)
 1 x 3SK1230 power supply; 5 x 3SK1220 input expansion; 1 x 3SK112 basic unit;
 1 x 3RM1 Failsafe motor starter

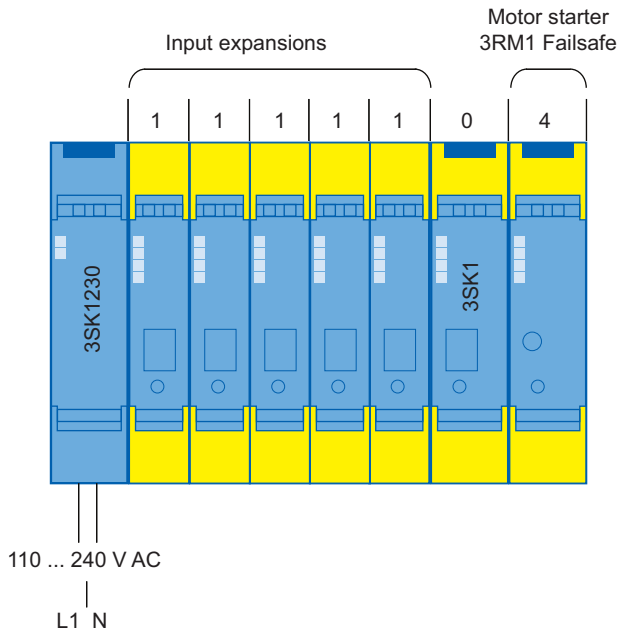


Example 3)
 1 x 3SK1230 power supply; 2 x 3SK1220 input expansion; 1 x 3SK112 basic unit;
 2 x 3RM1 Failsafe motor starter

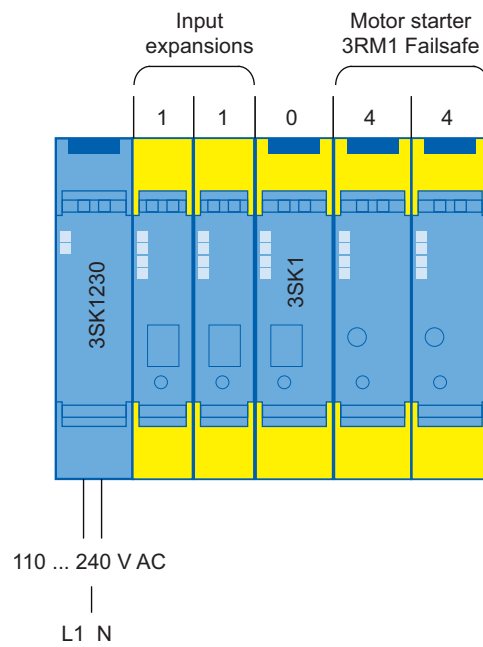

6.2 3ZY12 device connector

6.2.1 Device features

Article number:

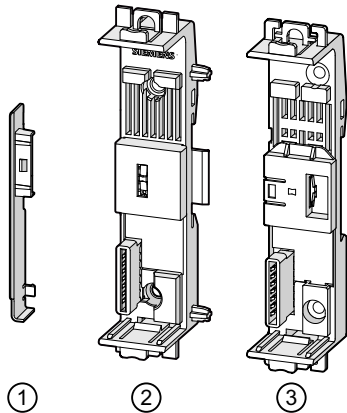

- ① Cover (included in the scope of supply of each device termination connector.)
- ② 3ZY12 device connectors
- ③ 3ZY12 device termination connectors

Article number	Device connector for
3ZY1212-1BA00	3SK1 safety relay 3SK1 / 3RQ1 output expansion Width 17.5 mm
3ZY1212-2BA00	3SK1 safety relay 3SK1 / 3RQ1 output expansion Width 22.5 mm
3ZY1212-2EA00	3RM1 motor starter Width 22.5 mm
3ZY1212-2AB00	Device connector for looping through signals Width 22.5 mm
3ZY1210-2AA00	Device connector without function Width 22.5 mm

Article number	Device termination connector for
3ZY1212-2FA00	3RM1 motor starter Width 22.5 mm
3ZY1212-2DA00	3SK1 safety relay 3SK1 / 3RQ1 output expansion Width 22.5 mm

Article number	Device termination connector for
3ZY1212-1DA00	3RQ1 output expansion Width 17.5 mm
3ZY1212-0FA01	Set for 3SK1 safety relay, > 45 mm wide Set consists of 3ZY1212-2FA00 device connector and 3ZY1210-2AA00 device connector

Use of device connectors

- A device connector is always necessary when other devices have to be plugged in.
- A device termination connector is always required in the system for the last module on the right.

Note


Use of the device connectors to expand the Advanced basic units is optional.
The device connectors cannot be used with the Standard series.

Note

Only safety relays with a supply voltage of **24 V DC** may be used on the 3ZY12 device connectors.

Note

If expansion units are controlled via the 3ZY12 device connector, additional feeding of the control supply voltage (A1/A2) at one of the output expansions leads to a fault in the system configuration.

 DANGER

Ensuring electrical safety and safety function

The normally closed contact of 3RQ12. is designed for a voltage of 24 V DC. If higher voltages occur, electrical safety cannot be ensured due to the voltage clearance distances. If the 3RQ12. is integrated in a system with a device connector, the feedback circuit is routed via the device connector; connection of external voltage is not necessary and not permitted. Connecting external voltage can bypass the safety function.

The following device connectors are required for the various enclosure widths of the Advanced device series:

Devices	Device connector for 3SK1 safety relay 17.5 mm 3ZY1212-1BA00	Device connector for 3SK1 safety relay 22.5 mm 3ZY1212-2BA00	Device termination connector for 3SK1 safety relay 22.5 mm 3ZY1212-2DA00	Device termination connector for 3RQ1 17.5 mm 3ZY1212-1DA00
3SK1 Advanced basic units				
3SK1121	-	x	x	-
3SK1122	-	x	x	-
3SK1120	x	-	-	-

6.2 3ZY12 device connector

Devices	Device connector for 3SK1 safety relay 17.5 mm 3ZY1212-1BA00	Device connector for 3SK1 safety relay 22.5 mm 3ZY1212-2BA00	Device termination connector for 3SK1 safety relay 22.5 mm 3ZY1212-2DA00	Device termination connector for 3RQ1 17.5 mm 3ZY1212-1DA00
Output expansions 3SK1				
3SK1211 (4RO)	-	X	X	-
3SK1213 (3RO)	-	-	-	-
3RQ1 output expansions				
3RQ1*E/G* (17.5 mm)	X	-	-	X
3RQ1*H/L* (22.5 mm)	-	X	X	-
Input expansions 3SK1				
3SK1220	X	-	-	-
3SK1230 power supply	-	X	-	-
3RM1 Failsafe motor starters				
3RM1	-	-	-	-

Devices	Device connector for 3RM1 motor starter 22.5 mm 3ZY1212-2EA00	Device termination connector for 3RM1 motor starter 22.5 mm 3ZY1212-2FA00	Device termination connector set for enclosures > 45 mm ¹⁾ 3ZY1212-0FA01	Device connector for looping through signals 22.5 mm 3ZY1212-2AB00
3SK1 Advanced basic units				
3SK1121	-	-	-	-
3SK1122	-	-	-	-
3SK1120	-	-	-	-
Output expansions 3SK1				
3SK1211 (4RO)	-	-	-	-
3SK1213 (3RO)	-	-	X	-
3RQ1 output expansions				
3RQ1*E/G* (17.5 mm)	-	-	-	-
3RQ1*H/L* (22.5 mm)	-	-	-	-
Input expansions 3SK1				
3SK1220	-	-	-	-
3SK1230 power supply	-	-	-	-
3RM1 Failsafe motor starters				
3RM1	X	X	-	X

¹⁾ Set consists of 3ZY1212-2FA00 device connector and 3ZY1210-2AA00 device connector

Note

If a basic unit is expanded on the right, the last output expansion must be terminated with a device termination connector of the corresponding device.

If a basic unit is only expanded on the left, a device termination connector for 3SK1 safety relays must be mounted below the basic unit.

6.2.2 Applications

The 3SK1 Advanced basic unit can be expanded on the input and output sides using 3ZY12 device connectors (connecting plugs) without any additional wiring outlay. When configuring the system, it is important to ensure that input expansions are connected on the left and output expansions/3RM1 Failsafe motor starters on the right of a basic unit.

6.3 System configuration rules

General information

- All basic units can be operated as a stand-alone device without a device connector.
- 3SK1220 input expansions and the 3SK1230 power supply must always be connected on the left of the basic unit and output expansions (3SK121 and 3RM1 Failsafe motor starters) on the right.


Expansion on the input side

- If an (additional) input expansion is detected on the left when the basic device or an input expansion powers up, it will be loaded into the device configuration.
- An input expansion evaluates the sensor states and generates an enable signal for the basic unit depending on the start condition. The enable signal is then acquired by an input expansion on the right-hand side, or acquired by the basic unit and ANDed with its sensor statuses.
You can find information on the start characteristics in the system configuration of the 3SK1 Advanced in the chapter "Explanation of the device's function (Page 176)".
- The 3ZY12 device connector used below the final device must be fitted with a cover on the left side (included with the device termination connectors).
- A 3SK1230 power supply can also be used in the 3SK system. This 3SK1230 power supply must always be plugged into the system on the extreme left.
- No more than one 3SK1230 power supply is admissible for each system.
- If a 3SK1230 power supply is used, **no** additional, external 24 V DC voltage is permitted to be connected to a basic unit.

Output expansion

- If an output expansion is detected on the right when the device powers up, this will be loaded into the device configuration. The internal feedback circuit of the contact extension is evaluated and checked.
- If both the 3SK1211 / 3RQ1 output expansion and 3RM1 Failsafe motor starters are used in a system, the 3RM1 Failsafe motor starters must be positioned on the right of the 3SK1211 / 3RQ1 output expansions.
- If a 3SK1213 output expansion is used in the system, this must always be the final station in the system (on the right) and must be fitted with a 3ZY1212-0FA01 device termination connector. Only one 3SK1213 output expansion can be used in the system with a device connector; further 3SK1213 output expansions can be optionally interfaced by wiring.
- On the 3SK121 output expansions, a slide switch on the device front must be used to set whether the (UNDELAYED) or (DELAYED) output signal of the basic unit is to trigger a response. If a purely instantaneous 3SK112 basic unit is used, the slide switch **MUST** be set to the (UNDELAYED) position.
The 3RQ1 output expansions do not have a slide switch and always react to the (UNDELAYED) output signal.

- In the case of a change to the device configuration during operation, error mode is activated immediately. Restarting must be triggered via Power OFF/ON.
- If output expansions are used, a device termination connector for the 3SK1 safety relay must ALWAYS be used under the final device on the right (for 3SK1211) with the switch setting: "1" (switch in top position), device termination connector set for 3SK1 safety relay, > 45 mm wide (for 3SK1213) or device termination connectors for 3RM1 motor starters must be used
- 22.5 mm device termination connector for 3SK1 / 3RQ1:
 - Below basic unit: The switch of the device termination connector must be open, i.e. in position 2 at the bottom.
 - Below 3SK1211 output expansion: The switch of the device termination connector must be closed, i.e. in position 1 at top

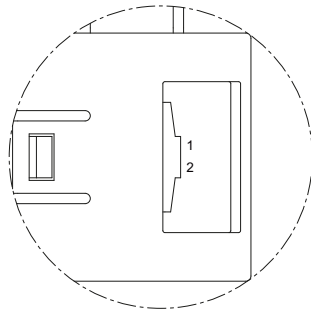

- No switch needs to be set on the device termination connector for 3RM1 motor starters
- As from certain load limits/temperature ranges, clearances must be observed for 3RM1 Failsafe motor starters. To this end, there are appropriate device connectors for looping through signals (3ZY1212-2AB00).
- In the configuration with a 3SK1 Advanced basic unit on a 3ZY12 device connector, 3RM1 Failsafe motor starters can only be controlled by the instantaneous enable signal of the 3SK1 unit. If control of the 3RM1 Failsafe motor starters by means of the time-delayed output is desired, this can only be done by wiring the time-delayed safety-related output of the 3SK1 basic unit.

You will find further information on the configuration guidelines for 3RM1 Failsafe motor starters in the SIRIUS 3RM1 motor starters (<http://support.automation.siemens.com/WW/view/en/66295730>) manual, in the chapter "Load feeders - protection against short circuit".

Configuration notes for using device connectors

3ZY12 device connectors can only be used with devices of the Advanced device series.

Further configuration notes:

NOTICE

Only one 3SK1 Advanced basic unit is permitted in each system

The safety function is not guaranteed when more than one basic unit is used.

 **WARNING**

Ensuring electrical safety and safety function

The normally closed contact of 3RQ12. is designed for a voltage of 24 V DC. If higher voltages occur, electrical safety cannot be ensured due to the voltage clearance distances. If the 3RQ12. is integrated in a system with a device connector, the feedback circuit is routed via the device connector; connection of external voltage is not necessary and not permitted. Connecting external voltage can bypass the safety function.

 **WARNING**

Supply voltage must only be fed in on the basic unit

The supply voltage of 24 V DC must only be fed in on the basic unit, otherwise the safety function is bypassed.

Note

If expansion units are controlled via the 3ZY12 device connector, additional feeding of the control supply voltage (A1/A2) at one of the output expansions leads to a fault in the system configuration.

Power supply by means of the 3SK1230 power supply


- When device connectors are used, only one 3SK1230 power supply is permitted in each system.
- The 3SK1230 power supply must always be located on the extreme left.
- If a 3SK1230 power supply is used, an additional (external) 24 V DC connection is not permitted (this also applies to the cascading input, as well as to non-floating sensors).


24 V DC supply voltage from an external power supply unit

- It is only permitted to connect a voltage of 24 V DC to the terminals on the basic unit.
- It is not permitted to supply 24 V DC to an expansion component or 3RM1 Failsafe motor starter.

Mounting

7.1 Warning notices

 WARNING
Hazardous Voltage Can Cause Death, Serious Injury, or Property Damage. Hazardous electrical voltages can cause electric shock, burns and damage. <ul style="list-style-type: none">• Turn off and lock out all power supplying the system and device before working on the device.• To ensure protection against the hazard of electric shock when the terminal cover is open, screw in all terminal screws that are not needed to clamp conductors.• Close the terminal covers and always keep them closed during operation.

 DANGER
Hazardous voltage. Can cause death or serious injury To ensure touch protection and degree of protection IP20, screw in all screws which are not used for conductor clamping and close the terminal covers.

7.2 Terminal coding

You can provide the terminals with coding pins (3ZY1440-1AA00). This helps you to avoid errors when replacing the terminals.

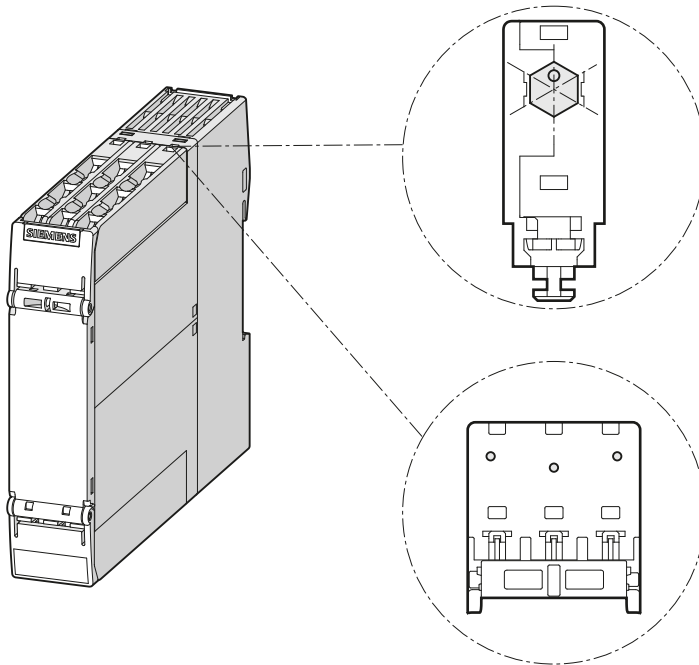


Figure 7-1 Module with coding pins

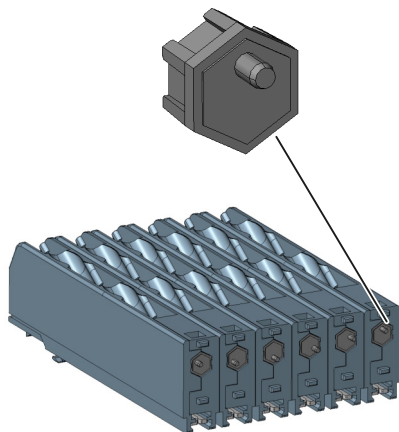


Figure 7-2 Stud position rotated by 60° in each case

7.3 Mounting the devices on a level surface

Requirements

Please note the following requirements for mounting on a level surface:

- Mounting position: Any (except 3SK1213). With 3SK1213: +/- 22.5° lateral inclination.
- Clearances: The distance to be maintained at the side with side-by-side mounting is 0 mm. The distance to be maintained at the side from grounded parts is 5 mm.
- Properly executed drill holes with thread or plug on the level surface. For details of the distances between the drilled holes, refer to the relevant dimension drawings (Page 195).
- Two headed screws for 17.5 mm or 22.5 mm devices / four headed screws for 90 mm devices to fit the holes M4 x 12 in accordance with DIN 784.
- Plastic push-in lugs: Refer to the accessories list for the relevant article number in the chapter "Accessories (Page 227)".

Procedure

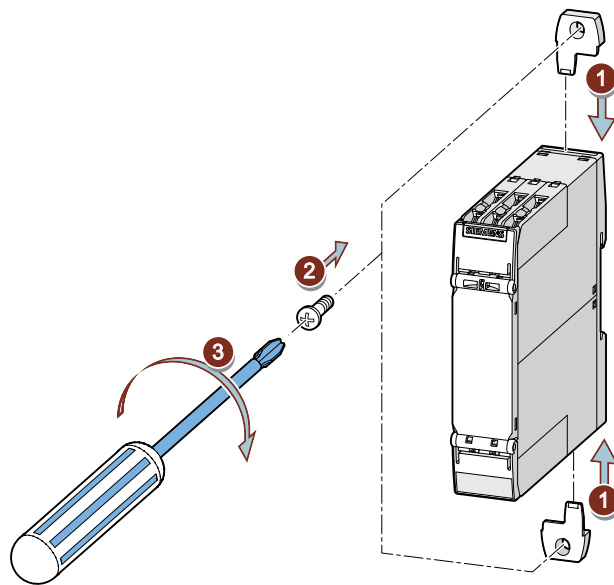


Figure 7-3 17.5 mm and 22.5 mm devices

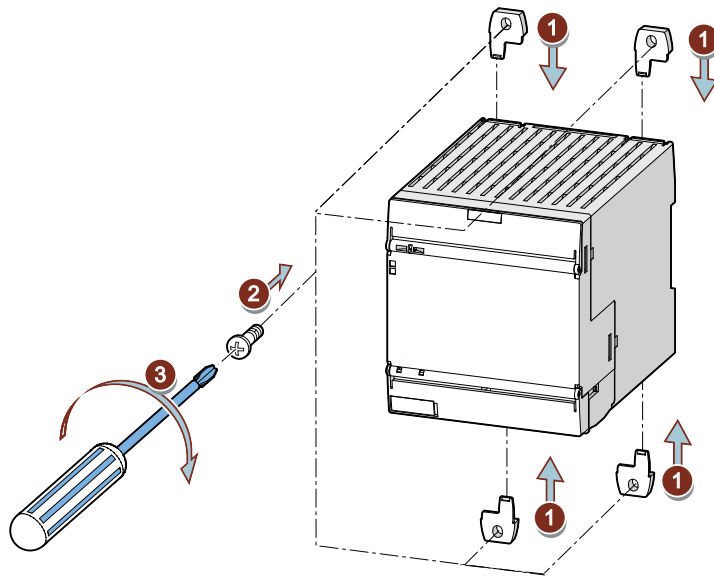


Figure 7-4 90 mm device

1. Insert the push-in lugs into the openings provided on the device until they engage.
2. Hold the device up to the surface prepared for screw fastening.
3. Insert the screws through the elongated holes into the push-in lugs.
4. Screw the device onto the level surface so that it is secure.

Tightening torque: 1 Nm

7.4 Disassembling devices from a level surface

⚠ WARNING**Hazardous voltage****Can Cause Death, Serious Injury, or Property Damage.**

Before starting work, therefore, disconnect the system and devices from the power supply.

Requirements

- The terminals have been removed or disconnected.

Procedure

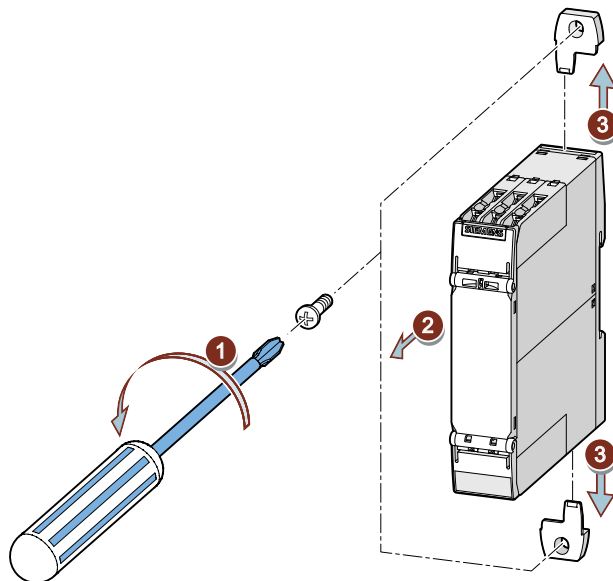


Figure 7-5 Disassembling 17.5 mm and 22.5 mm devices

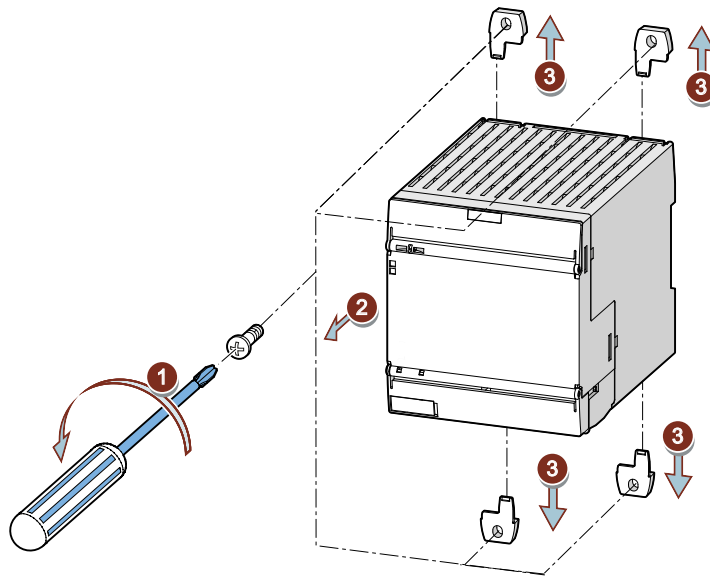


Figure 7-6 Disassembling 90 mm devices

1. Hold the device firmly.
2. Unscrew the cap screws.
3. Lift the device from the level surface.
4. Remove the push-in lugs from the device.



7.5 Mounting 22.5 mm/17.5 mm devices on a standard mounting rail

Requirements

- A horizontal 35 mm wide mounting rail in accordance with DIN EN 60715 has been properly secured at the installation location.
- Clearances: The distance to be maintained at the side with side-by-side mounting is 0 mm. The distance to be maintained at the side from grounded parts is 5 mm.
- Please observe the information about the mounting position in the technical data (Page 191).

Procedure

The figures show 22.5 mm devices. The 17.5 mm devices are mounted correspondingly.

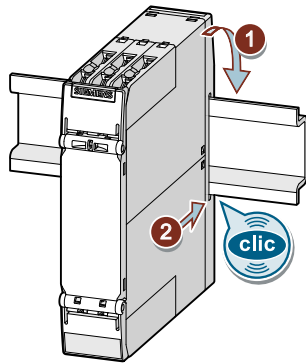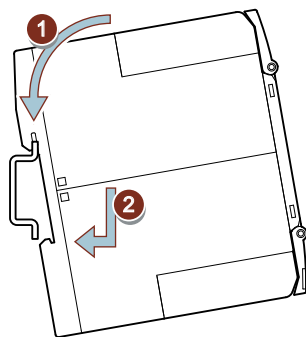



1. Place the back of the device onto the upper edge of the standard mounting rail.
2. Press the lower half of the device against the DIN rail until the device engages.

7.6 Mounting the 90 mm devices on a standard mounting rail

Requirements

- A horizontal 35 mm wide mounting rail in accordance with DIN EN 60715 has been properly secured at the installation location.
- Clearances: The distance to be maintained at the side with side-by-side mounting is 0 mm. The distance to be maintained at the side from grounded parts is 5 mm.
- Please observe the information about the mounting position in the technical data (Page 191).

Procedure

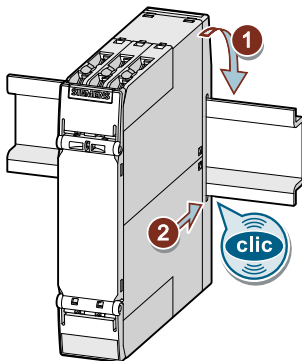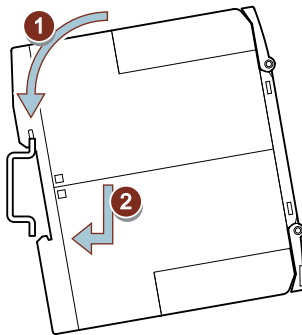

1. Place the back of the device onto the upper edge of the standard mounting rail.
2. Press the lower half of the device against the DIN rail until the device engages.

7.7 Removing devices from a standard mounting rail

⚠ WARNING


**Hazardous Voltage
Can Cause Death, Serious Injury, or Property Damage.**

Before starting work, therefore, disconnect the system and devices from the power supply.

Requirements

- The terminals have been removed or disconnected.

Procedure

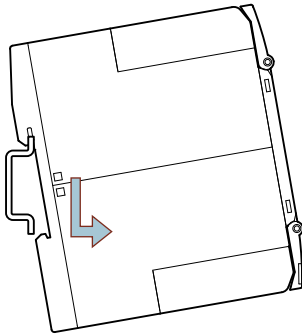

1. Press the device downwards.
2. Pull the lower half of the device away from the standard mounting rail.
3. Lift the device from the upper edge of the standard mounting rail.


7.8 Mounting 22.5 mm/17.5 mm devices with device connectors on a standard mounting rail

Requirements


- A horizontal 35 mm wide mounting rail in accordance with DIN EN 60715 has been properly secured at the installation location.
- Clearances: The distance to be maintained at the side with side-by-side mounting is 0 mm. The distance to be maintained at the side from grounded parts is 5 mm.
- Please observe the information about the mounting position in the technical data (Page 191).
- Device connectors: Refer to the accessories list for the relevant article number in the chapter "Accessories (Page 227)".

Procedure

The figures show 22.5 mm devices. The 17.5 mm devices are mounted correspondingly.


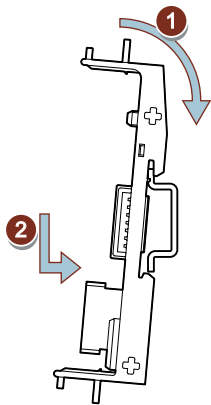


1. Place the back of the device connector on the upper edge of the standard mounting rail.
2. Press the lower half of the device connector against the standard mounting rail until the connector engages. Repeat the procedure with all the required device connectors.

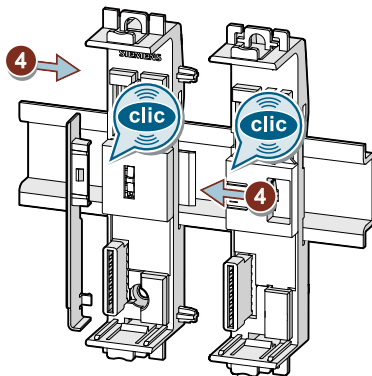


7.8 Mounting 22.5 mm/17.5 mm devices with device connectors on a standard mounting rail

4. Push the device connectors together until they engage.
5. Mount the cover on the left of the first device connector. The cover is included in the scope of supply of the device terminator.

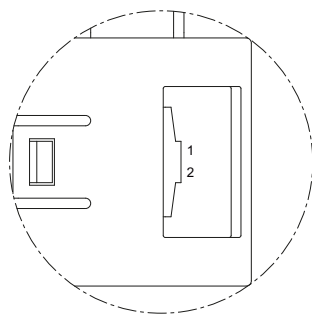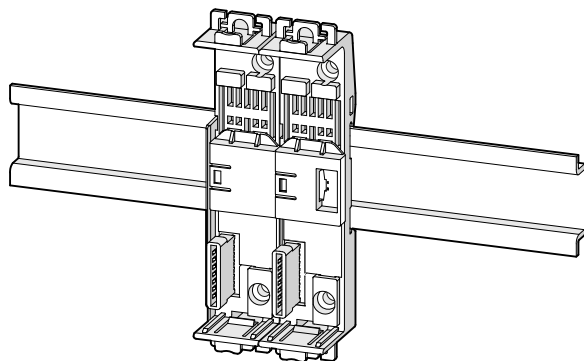

6. Set the slide switch in the device termination connector for the 3SK1 safety relay to the following positions:
 - below 3SK1 basic device
position 2 (bottom; i.e. open)
 - below 3SK1211 output expansion
position 1 (top; i.e. closed)

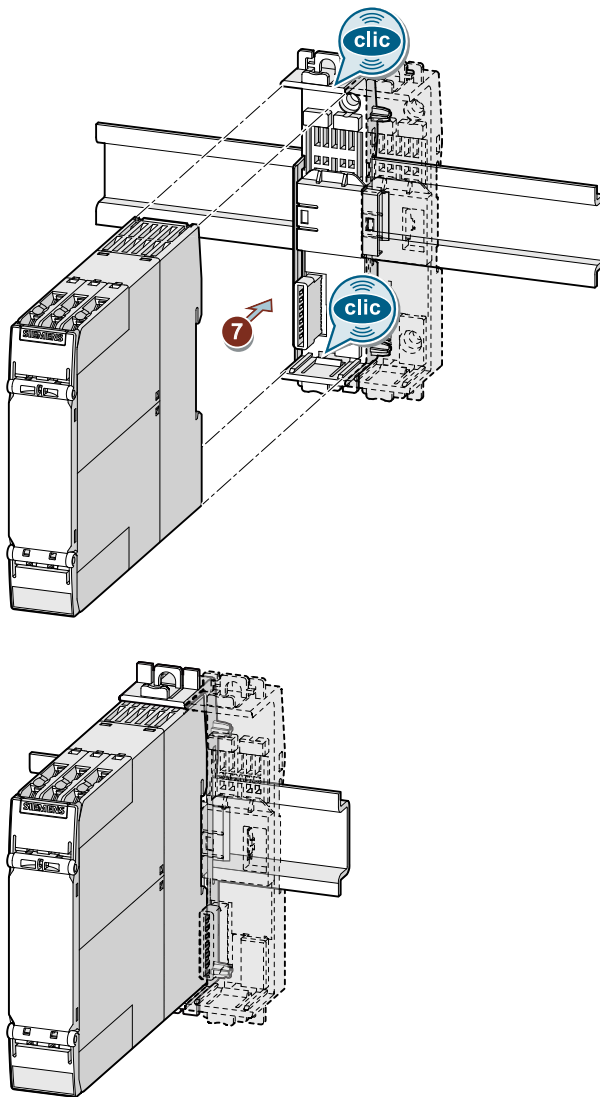

7. Mount the device on the device connector.
8. Mount all the devices required for the system configuration in accordance with the respective installation guidelines on the device connectors.

7.9 Removing 22.5 mm/17.5 mm devices with device connectors from a standard mounting rail

⚠ WARNING**Hazardous Voltage**

Can Cause Death, Serious Injury, or Property Damage.


Before starting work, therefore, disconnect the system and devices from the power supply.

Requirements


- The terminals have been removed or disconnected.

Procedure


The figures show 22.5 mm devices. The 17.5 mm devices are removed correspondingly.

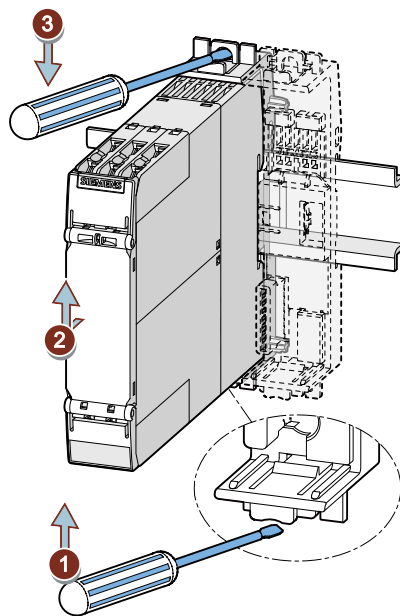


1. Unlock the device using a screwdriver.
2. Pull the lower half of the device away from the device connector.
3. Unlock the device using a screwdriver.

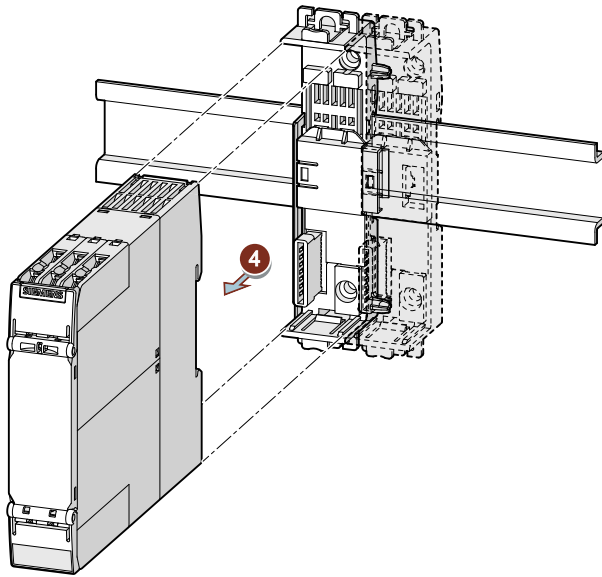

4. Pull the device away from the device connector.

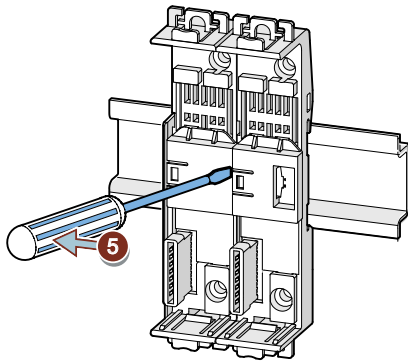


5. Separate the device connectors using a screwdriver.

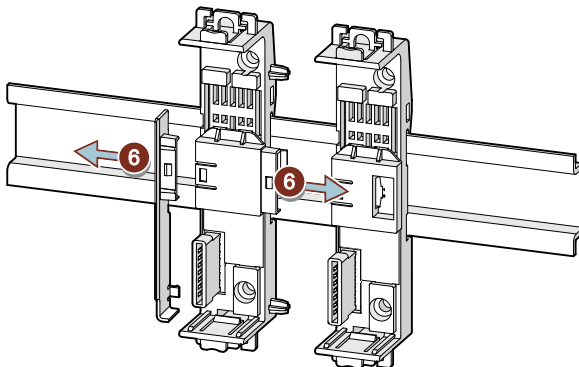

6. Remove the cover.

7.9 Removing 22.5 mm/17.5 mm devices with device connectors from a standard mounting rail

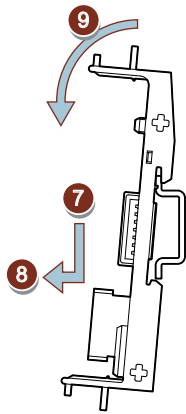


7. Press the device connector down.
8. Pull the lower half of the device connector away from the standard mounting rail.
9. Lift the device connector from the upper edge of the standard mounting rail.

7.10 Mounting 90 mm devices with device connectors on a standard mounting rail

Requirements


- A horizontal 35 mm wide mounting rail in accordance with DIN EN 60715 has been properly secured at the installation location.
- Clearances: The distance to be maintained at the side with side-by-side mounting is 0 mm. The distance to be maintained at the side from grounded parts is 5 mm.
- Please observe the information about the mounting position in the technical data (Page 191).
- Use the device termination connector set for 3SK1 safety relays, > 45 mm wide. Refer to the accessories list for the relevant article number in the chapter "Accessories (Page 227)".
- Please observe the obligatory mounting rules in the chapter: "System configuration rules (Page 120)".

Procedure

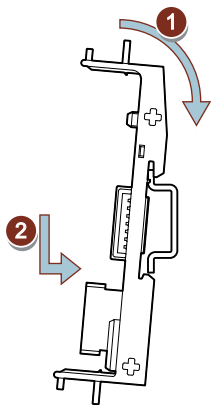


1. Hang the back of the device connector onto the upper edge of the standard mounting rail.
2. Press the lower half of the device connector against the standard mounting rail until the connector engages.
3. Repeat the procedure with all the required device connectors.


7.10 Mounting 90 mm devices with device connectors on a standard mounting rail

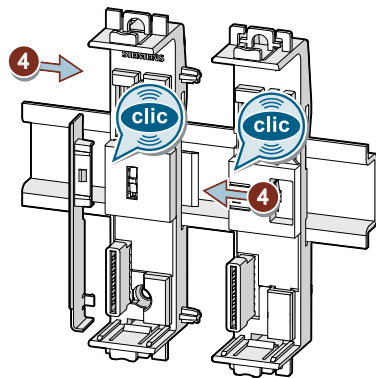


4. Push the device connectors together until they engage.

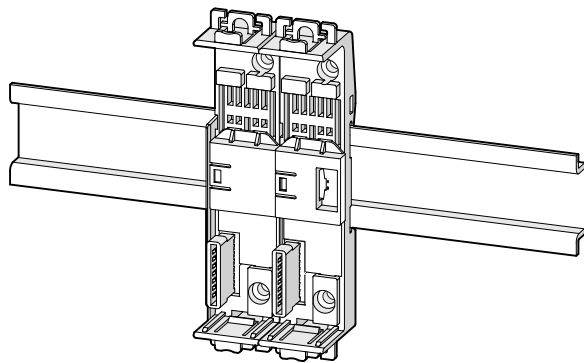


5. Mount the cover on the left of the first device connector piece and the device connectors supplied in the set for enclosures of 45 mm upwards (right-hand side).

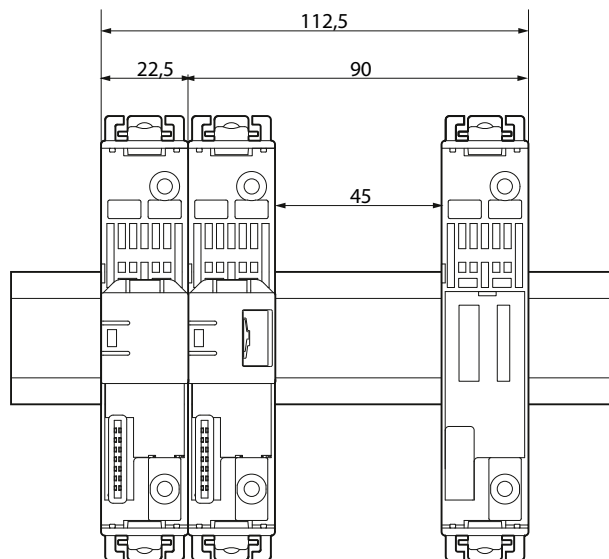

6. Note the clearances required for the 90 mm devices.

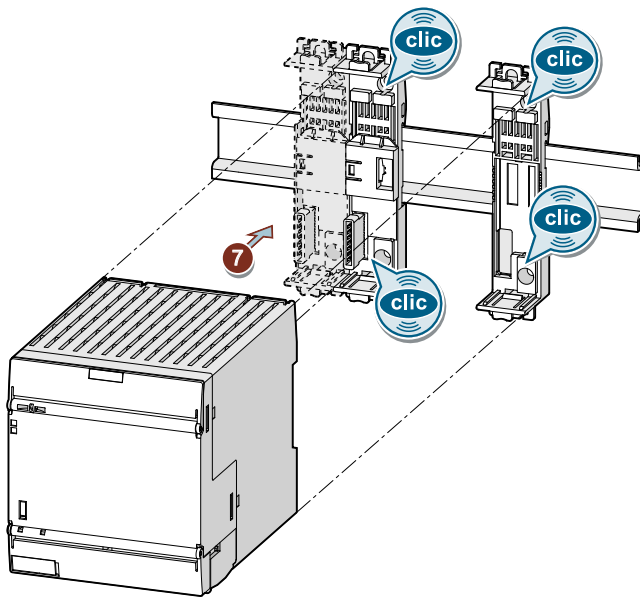

7. Mount the 3SK1213 output expansion on the device connectors.

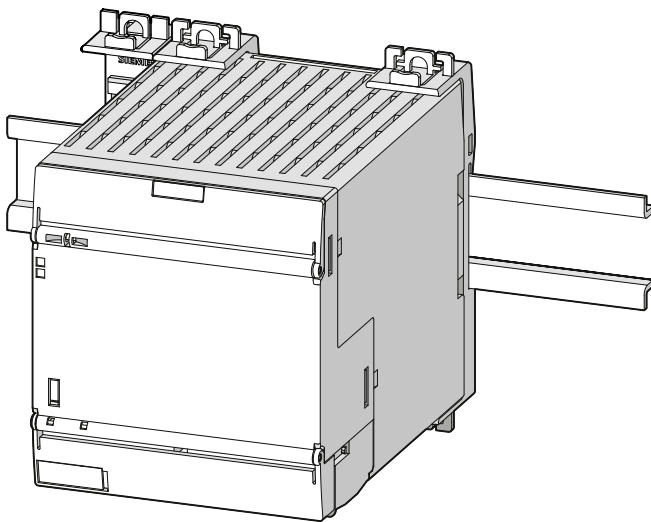

8. Mount all the devices required for the system configuration on the device connectors in accordance with the respective installation guidelines.

7.11 Removing 90 mm devices with device connectors from a standard mounting rail

WARNING

Hazardous Voltage


Can Cause Death, Serious Injury, or Property Damage.

Before starting work, therefore, disconnect the system and devices from the power supply.

Requirements


- The terminals have been removed or disconnected.

Procedure

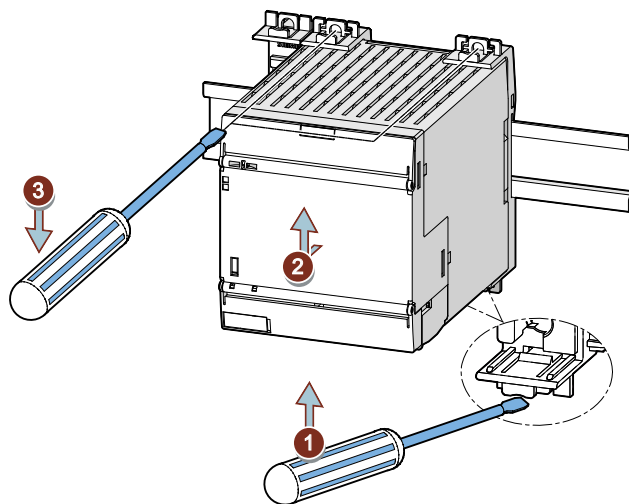


1. Unlock the device using a screwdriver.
2. Pull the lower half of the device away from the device connector.
3. Unlock the device using a screwdriver.


7.11 Removing 90 mm devices with device connectors from a standard mounting rail

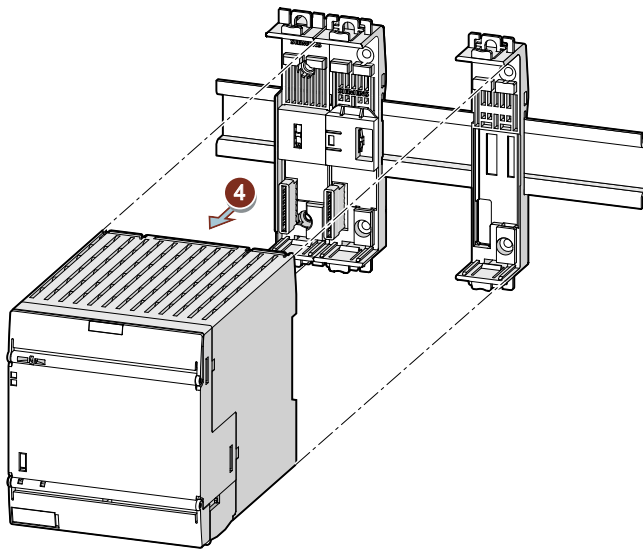

4. Pull the device away from the device connector.

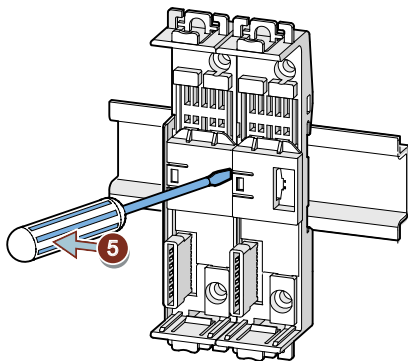


5. Separate the device connectors using a screwdriver.

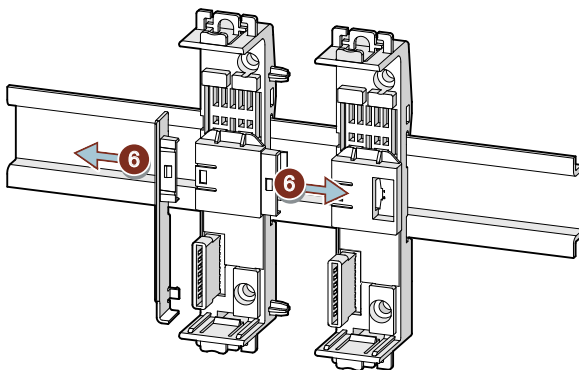

6. Disassemble the terminating section.

7.11 Removing 90 mm devices with device connectors from a standard mounting rail

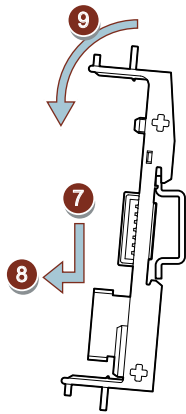

7. Press the device connector down.
8. Pull the lower half of the device connector away from the standard mounting rail.
9. Lift the device connector from the upper edge of the standard mounting rail.

7.12 Mounting 22.5 mm/17.5 mm devices with device connectors on the wall


Requirements

Please note the following requirements for mounting on a level surface:

- Please observe the information about the mounting position in the technical data (Page 191).
- Clearances: The distance to be maintained at the side with side-by-side mounting is 0 mm. The distance to be maintained at the side from grounded parts is 5 mm.
- Two properly executed drill holes (per device connector) with thread or plug on the level surface.
- Two screws (per device connector) to fit the holes M4 x12 in accordance with DIN 784.
- Device connector
Refer to the accessories list for the relevant article number in the chapter "Accessories (Page 227)".

Procedure for mounting on a level surface

The figures show 22.5 mm devices. The 17.5 mm devices are mounted correspondingly.

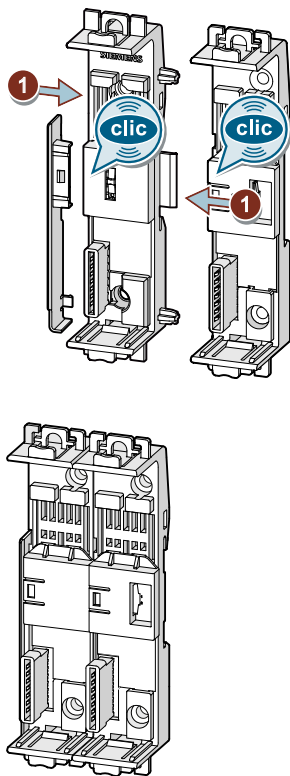


7.12 Mounting 22.5 mm/17.5 mm devices with device connectors on the wall


Push the device connectors together until they engage.

1. Mount the cover on the left of the first device connector. The cover is included in the scope of supply of the device terminator.
2. Set the slide switch in the device termination connector for the 3SK1 safety relays to the following positions:
 - below 3SK1 basic device
position 2 (bottom; i.e. open)
 - below 3SK1211 output expansion
position 1 (top; i.e. closed)

(not applicable when mounting 3RM1 Failsafe motor starters)

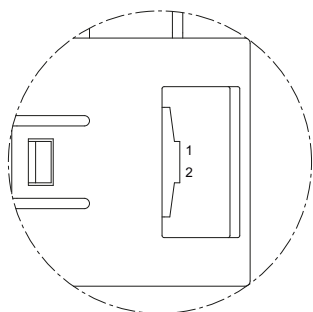


3. Hold the device connector against the level surface prepared for screw fastening.

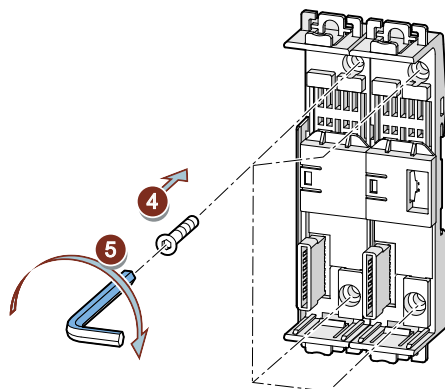


4. Insert the screws through the holes in the device connectors.

5. Screw the device connector securely onto the level surface.
Tightening torques:
 - Top: < 0.1 Nm
 - Bottom: 1 Nm

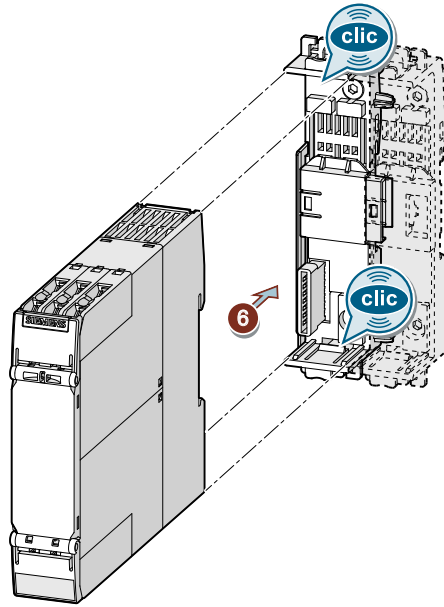

6. Mount the device on the device connector.

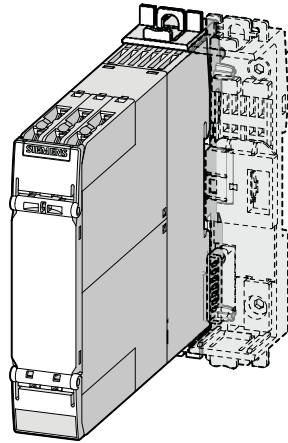

7. Mount all the devices required for the system configuration in accordance with the respective installation guidelines on the device connectors.

7.13 Removing 22.5 mm/17.5 mm devices with device connectors from the wall

⚠ WARNING**Hazardous Voltage**

Can Cause Death, Serious Injury, or Property Damage.


Before starting work, therefore, disconnect the system and devices from the power supply.

Requirements

- The terminals have been removed or disconnected.

Procedure


The figures show 22.5 mm devices. The 17.5 mm devices are removed correspondingly.

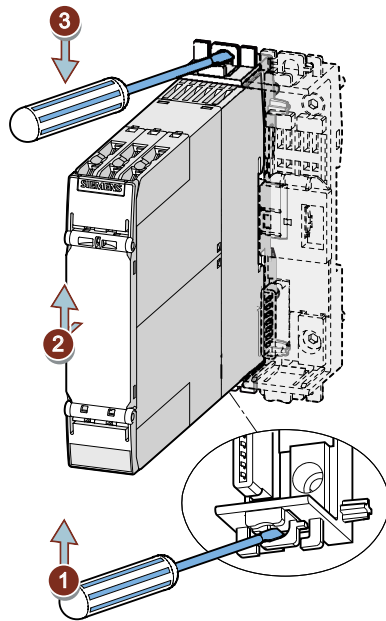


1. Unlock the device (below) using a screwdriver.
2. Pull the lower half of the device away from the device connector.

7.13 Removing 22.5 mm/17.5 mm devices with device connectors from the wall


3. Unlock the device (above) using a screwdriver.

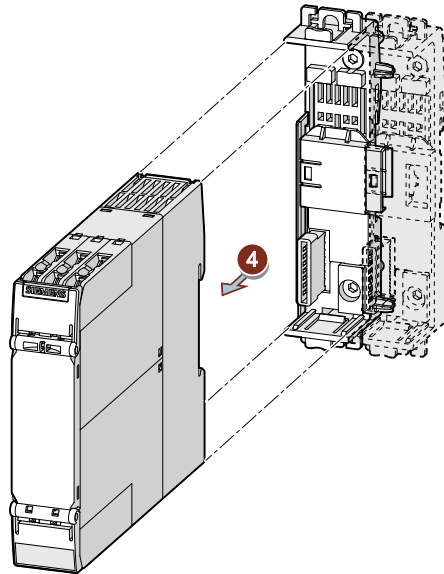

4. Pull the device away from the device connector.

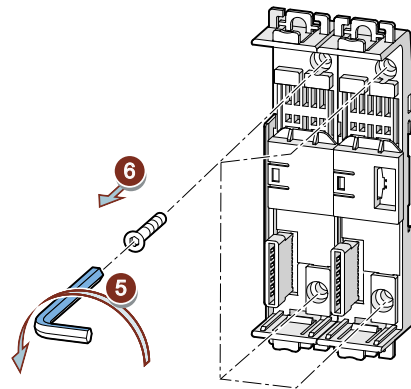

5. Release the screws.
6. Separate the device connectors.

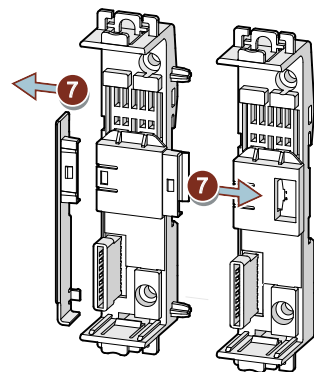

7. Remove the cover.


7.14 Mounting 90 mm devices with device connectors on the wall

Requirements

Please note the following requirements for mounting on a level surface:


- Please observe the information about the mounting position in the technical data (Page 191).
- Clearances: The distance to be maintained at the side with side-by-side mounting is 0 mm. The distance to be maintained at the side from grounded parts is 5 mm.
- Two properly executed drill holes with thread or plug on the level surface (per device connector).
- Two M4 x 12 screws in accordance with DIN 784 (per device connector) to fit the holes.
- Use the device termination connector set for 3SK1 safety relays, > 45 mm wide. Refer to the accessories list for the relevant article number in the chapter "Accessories (Page 227)".

Procedure

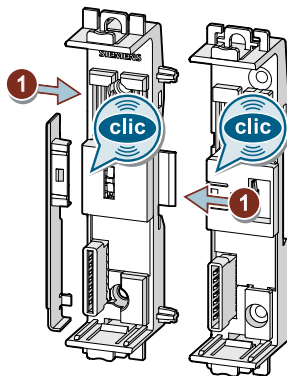


7.14 Mounting 90 mm devices with device connectors on the wall

1. Push the device connectors together until they engage.

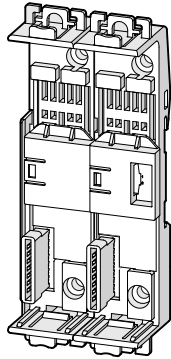

2. Mount the cover on the left of the first device connector.

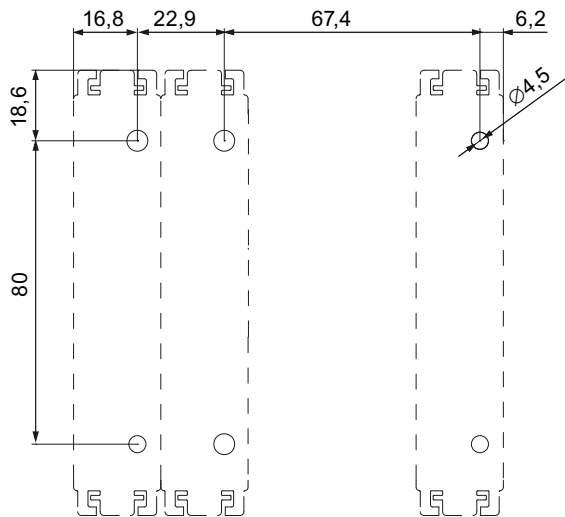


3. Note the clearances required for the 90 mm devices.
Mount the device connector supplied in the set for enclosures of 45 mm upwards (right-hand side).


Tightening torques:

- Top: < 0.1 Nm
- Bottom: 1 Nm


4. Hold the device connector against the level surface prepared for screw fastening.

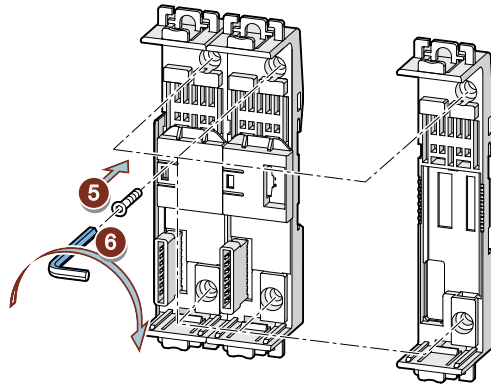

5. Insert the screws through the holes in the device connectors.
6. Screw the device connector securely onto the level surface.

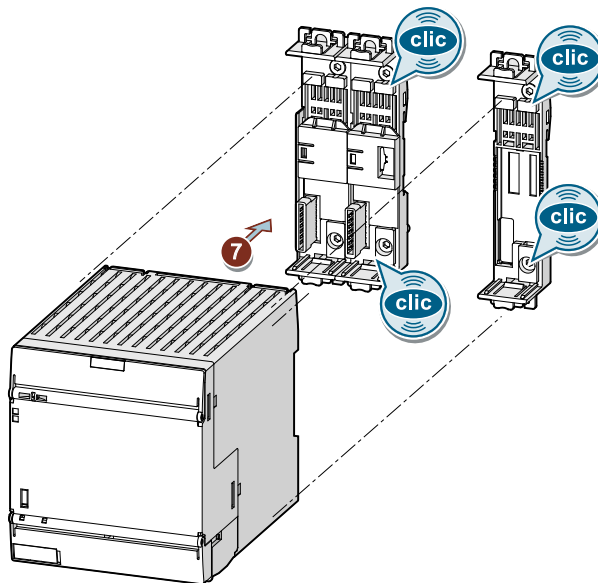

7. Mount the 3SK1213 output expansion on the device connectors.

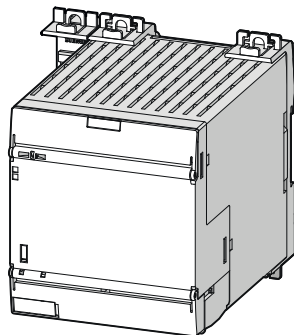

8. Mount all the devices required for the system configuration in accordance with the respective installation guidelines on the device connectors.

7.15 Removing 90 mm devices with device connectors from wall

⚠ WARNING

Hazardous Voltage


Can Cause Death, Serious Injury, or Property Damage.

Before starting work, therefore, disconnect the system and devices from the power supply.

Requirements

- The terminals have been removed or disconnected.


Procedure

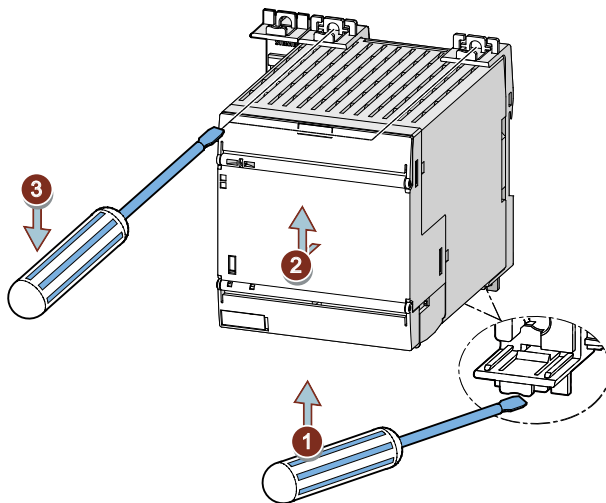


1. Unlock the device (bottom) using a screwdriver.
2. Pull the lower half of the device away from the device connector.

7.15 Removing 90 mm devices with device connectors from wall

3. Unlock the device (top) using a screwdriver.

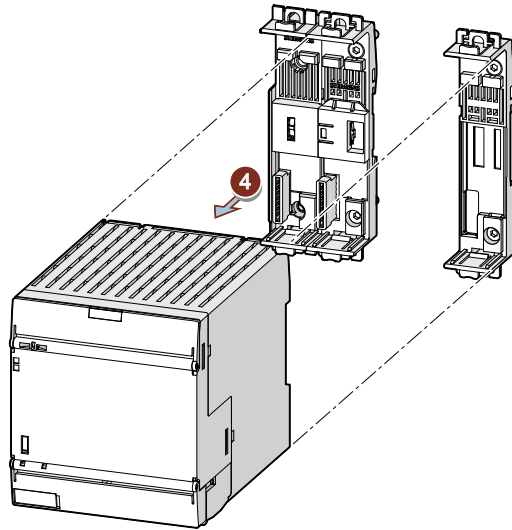


4. Pull the device away from the device connector.

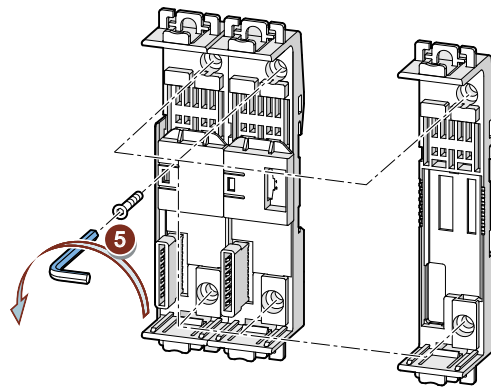

5. Release the screws.

6. Separate the device connectors.

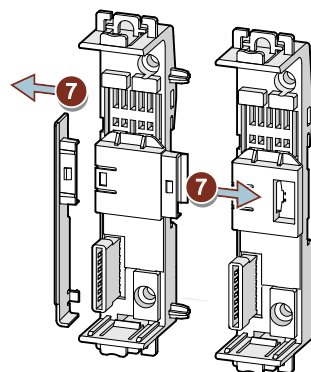


7. Remove the cover.

7.16 Mounting the sealable cover

The sealable cover (3ZY1321-1AA00 for 17.5 mm devices, 3ZY1321-2AA00 for 22.5 mm devices) can be used to secure the DIP switches (and, if present, the potentiometers for setting the delay time) of the safety relays against unauthorized or unintended readjustment.


As an alternative, Siemens also offers a sealable membrane (3TK2820-0AA00) for securing the safety relays. The sealable membrane is fixed to the front of the safety relay and secures the DIP switches and the buttons (and potentiometers) against unintentional readjustment.


Mounting the sealable cover

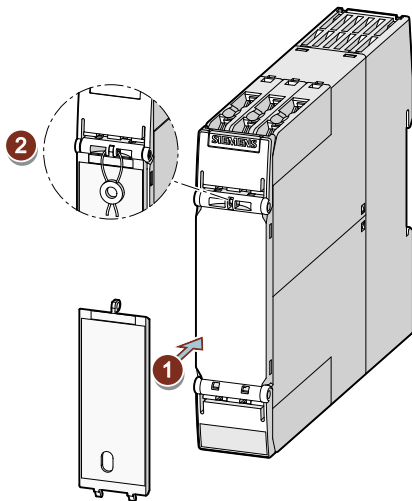

1. Attach the hooks on the cover to the openings on the device and fold the cover up.
2. Seal the cover to secure it against unauthorized removal.
Sealing wire diameter, max.: 2 mm

8.1 Warning notices

 WARNING
Hazardous Voltage Can Cause Death, Serious Injury, or Property Damage. Hazardous electrical voltages can cause electric shock, burns and damage. <ul style="list-style-type: none">• Turn off and lock out all power supplying the system and device before working on the device.• To ensure protection against the hazard of electric shock when the terminal cover is open, screw in all terminal screws that are not needed to clamp conductors.• Close the terminal covers and always keep them closed during operation.



 DANGER
Hazardous voltage. Can cause death or serious injury To ensure touch protection and degree of protection IP20, screw in all screws which are not used for conductor clamping and close the terminal covers.

8.2 22.5 mm/17.5 mm devices





8.2.1 Terminal assignment

Location of the connections






The inside faces of the terminal covers are labeled with the designations of the relevant terminals. The position of the label corresponds to the position of the respective terminal.

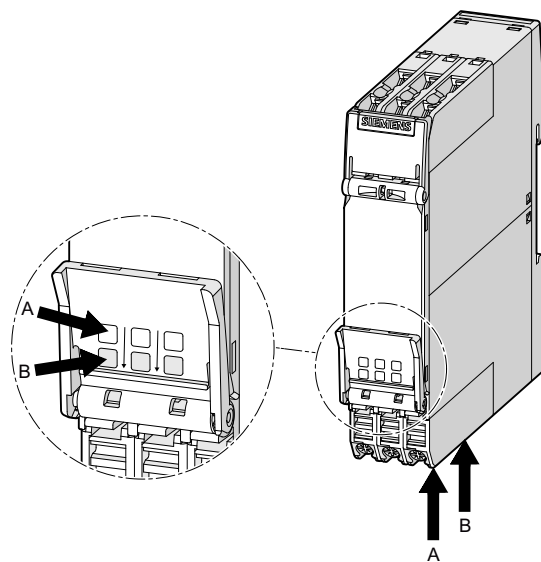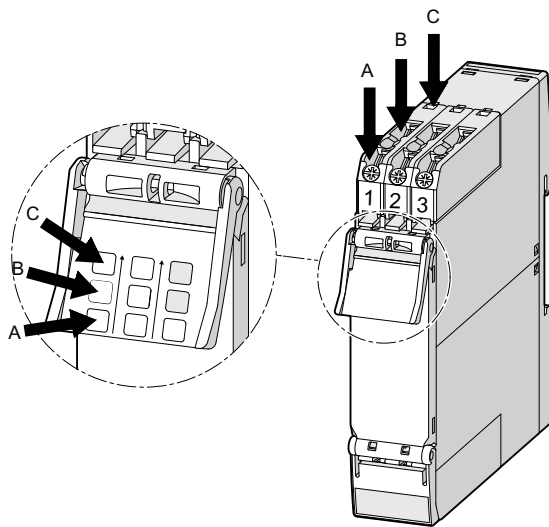

    8.2.2 Connection data for 3SK1 terminals

	Specification and value in the case of removable terminals with screw-type terminals
Screwdriver 	Cross-tip screwdriver Size: PZ 1x80 (\varnothing 4.5 mm) Torque: 0.6 to 0.8 Nm
Rigid cable 	A = 10 mm 1 x 0.5 ... 2.5 mm ² 2 x 1.0 ... 1.5 mm ²
Flexible conductor with end sleeve 	A = 10 mm 1 x 0.5 ... 2.5 mm ² 2 x 0.5 ... 1.0 mm ²
Flexible cable 	Not permissible
AWG	1 x 20 to 14 2 x 18 to 16

     8.2.3 Connection data for 3RQ1 terminals

	Specification and value in the case of removable terminals with screw-type terminals
Screwdriver 	Cross-tip screwdriver Size: PZ 1x80 (ø 4.5 mm) Torque: 0.6 to 0.8 Nm
Rigid cable 	A = 10 mm 1 x 0.5 ... 4.0 mm ² 2 x 0.5 ... 2.5 mm ²
Flexible conductor with end sleeve 	A = 10 mm 1 x 0.5 ... 4.0 mm ² 2 x 0.5 ... 1.5 mm ²
Flexible cable 	Not permissible
AWG 	1 x 20 to 12 2 x 20 to 14

8.2.4 Connecting the screw-type terminals


<p>⚠ WARNING</p> <p>Hazardous Voltage Can Cause Death, Serious Injury, or Property Damage.</p> <p>Before starting work, therefore, disconnect the system and devices from the power supply.</p>

Tools and materials

- Cross-tip screwdriver size PZ 1 x 80.
- For suitable connection cross-sections of the cables, see the chapter "Connection data for 3SK1 terminals (Page 157)".

Procedure

1. Insert the relevant cable into square on the screw-type terminal until it engages.
2. Hold the cable in the screw-type terminal.

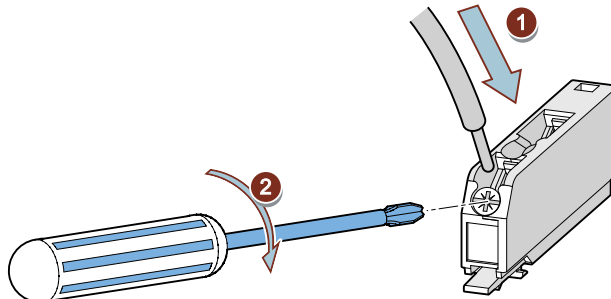

3. Tighten the screw with a torque of 0.6 ... 0.8 Nm.
4. Pull on the cable to ensure it is screwed tight.

8.2.5 Disconnecting the screw-type terminals

WARNING

**Hazardous Voltage
Can Cause Death, Serious Injury, or Property Damage.**


Before starting work, therefore, disconnect the system and devices from the power supply.

Tools

- Cross-tip screwdriver size PZ 1 x 80

Procedure

1. Unscrew the screw of the screw-type terminal.
2. Remove the cable from the unscrewed screw terminal.

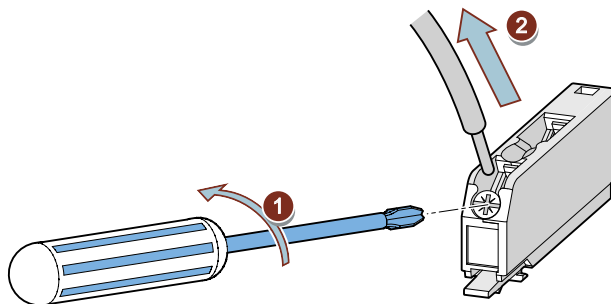

8.2.6 Wiring rules for spring-loaded terminal (push-in system)

Notes on handling spring-loaded terminals (push-in system)


The terminal area of the spring-loaded (push-in) terminals is rectangular, and the maximum overall dimensions of the conductor to be wired must not exceed 1.5 x 2.4 mm (control current terminals).

Attention must be paid to the orientation of the terminal area, which may call for vertical fitting of rectangularly crimped cables.

To make optimum use of available terminal area, you are advised to choose a form of crimping that creates a corresponding rectangular contour. Trapezoidal crimping is generally very highly suitable in this case.

When use is made of a cable that utilizes the full overall height, the terminal's spring is deflected to the maximum. Therefore, removal of this cable may become a problem because it requires further deflection of the spring.

Control current terminals

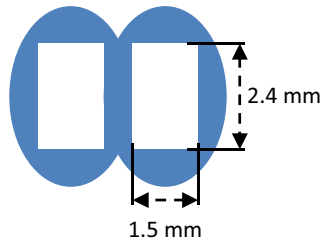

Terminal area of control current terminals

8.2.7 Connection data for 3SK1 spring-loaded terminal (push-in system)

Connection data for ...		Control current terminals
Connectable conductor cross-sections for solid cables		2 x 0.5 ... 2 x 1.5 mm ² (AWG ¹⁾ : 20 ... 16)
Connectable conductor cross-sections for flexible cables	Without end sleeve	2 x 0.5 ... 2 x 1.5 mm ² (AWG ¹⁾ : 20 ... 16)
	With end sleeve (with and without plastic sleeve)	2 x 0.5 ... 2 x 1.0 mm ^{2 2)} (AWG ¹⁾ : 20 ... 18)
	With TWIN end sleeve	--- ---
Cable stripping length		10 ... 11 mm
End sleeves according to DIN 46228-4 with plastic sleeve		10 mm

¹⁾ AWG: American Wire Gauge (AWG does not define use of end sleeves)


²⁾ When 2 x 1.0 mm² end sleeves with a plastic sleeve are used, space problems may arise with the sleeves; as an alternative, you are advised to use end sleeves without plastic sleeves

8.2.8 Connection data for 3RQ1 spring-loaded terminal (push-in system)

Connection data for ...		Control current terminals
Connectable conductor cross-sections for solid cables		1 x (0.5 .. 4.0) mm ² (AWG ¹⁾ : 1 x 20 to 12)
Connectable conductor cross-sections for flexible cables	Without end sleeve	1 x (0.5 ... 4.0) mm ² (AWG ¹⁾ : 1 x 20 to 12)
	With end sleeve (with and without plastic sleeve)	1 x (0.5 ... 2.5) mm ² (AWG ¹⁾ : 1 x 20 to 12)
Cable stripping length		10 mm
End sleeves according to DIN 46228-4 with plastic sleeve		10 mm

¹⁾ AWG: American Wire Gauge (AWG does not define use of end sleeves)

8.2.9 Connecting spring-loaded (push-in) terminals

<p> WARNING</p> <p>Hazardous Voltage Can Cause Death, Serious Injury, or Property Damage.</p> <p>Before starting work, therefore, disconnect the system and devices from the power supply.</p>
--

The spring-loaded (push-in) system allows wiring without tools for rigid conductors or conductors equipped with end sleeves.


A screwdriver is required for wiring finely-stranded or stranded conductors without end sleeves on spring-loaded (push-in) terminals.

Tools and materials

- 0.5 x 3 mm screwdriver DIN 5264 (for finely-stranded conductors only).
- For suitable connection cross-sections of the cables, see the chapter "Connection data for 3SK1 terminals (Page 157)".


Procedure

Rigid cables or cables equipped with end sleeves

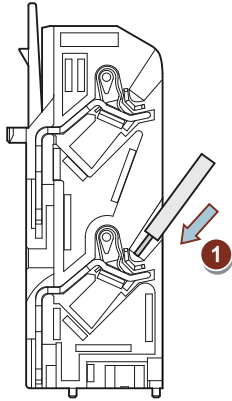

1. Insert the cable into the oval opening as far as it will go.
2. Pull on the cable to ensure it is tight.

Finely-stranded cables

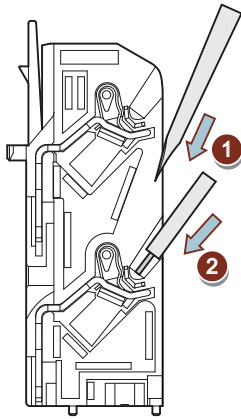

1. Insert the screwdriver in the rectangular opening to open the terminal (oval opening).
2. Insert the cable as far as it will go into the oval opening and remove the screwdriver.
3. Pull on the cable to ensure it is tight.

8.2.10 Disconnect the spring-loaded (push-in) terminal

! WARNING


**Hazardous Voltage
Can Cause Death, Serious Injury, or Property Damage.**

Before starting work, therefore, disconnect the system and devices from the power supply.

Tools


- Screwdriver DIN 5264 of the size 0.5 x 3 mm

Procedure

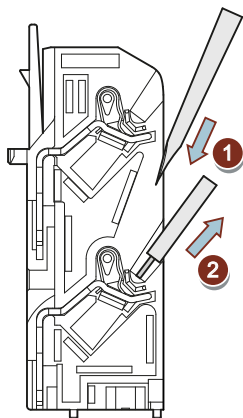

1. Insert the screwdriver into the rectangular opening of the spring-loaded (push-in) terminal until it engages.
2. Remove the cable from the oval opening.
3. Remove the screwdriver.


8.2.11 Attaching the terminals

 WARNING
Hazardous voltage
Can Cause Death, Serious Injury, or Property Damage.
Before starting work, therefore, disconnect the system and devices from the power supply.

Requirements

You must have removed the terminals, for the purpose of replacing a device, for example.

Procedure when plugging in the terminals

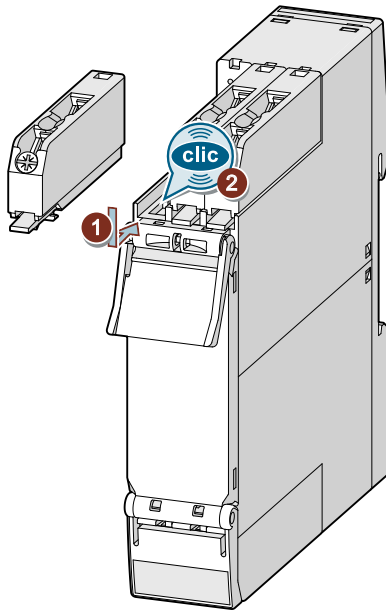

1. Insert the detachable terminals into the guide rail of the device.
2. Slide the detachable terminals back until they audibly engage.

8.2.12 Disconnecting


⚠ WARNING

Hazardous voltage

Can Cause Death, Serious Injury, or Property Damage.


Before starting work, therefore, disconnect the system and devices from the power supply.

Removing terminals from the device

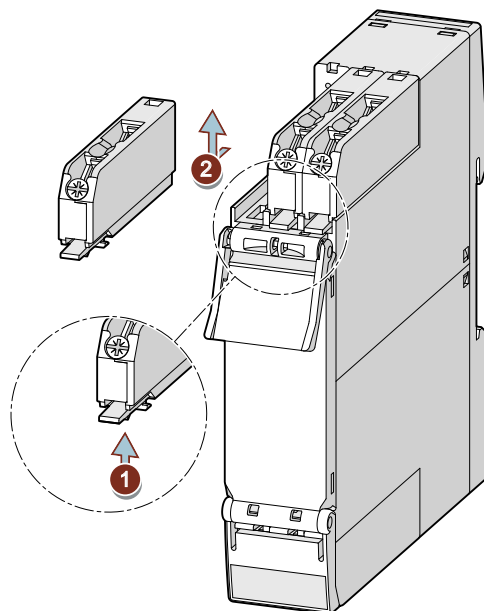


1. Press the clip of the terminals upwards.
2. Pull the terminals out to the front.
3. Lift the terminals out of the guide rail of the device.

Screw terminals: Disconnecting the conductor

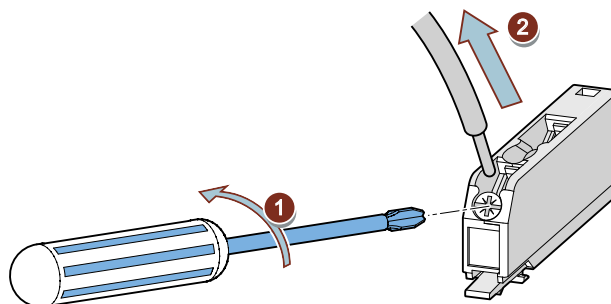

1. Unscrew the screw of the screw-type terminal.
2. Remove the cable from the unscrewed screw-type terminal.


Push-in terminals Disconnecting the conductor

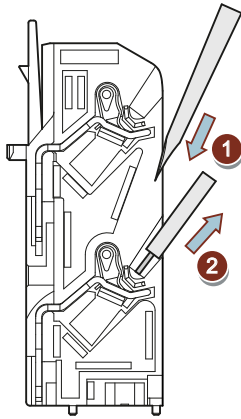


1. Insert the screwdriver into the rectangular opening of the push-in terminal until it engages. Please observe a 10° horizontal angular deviation of the screwdriver to the oval opening.
2. Remove the cable from the oval opening.
3. Remove the screwdriver.

8.3 Devices 90 mm

8.3.1 Opening the terminal cover

 WARNING
Hazardous voltage
Can Cause Death, Serious Injury, or Property Damage.
Before starting work, therefore, disconnect the system and devices from the power supply.





Positions of the terminals and opening the terminal cover

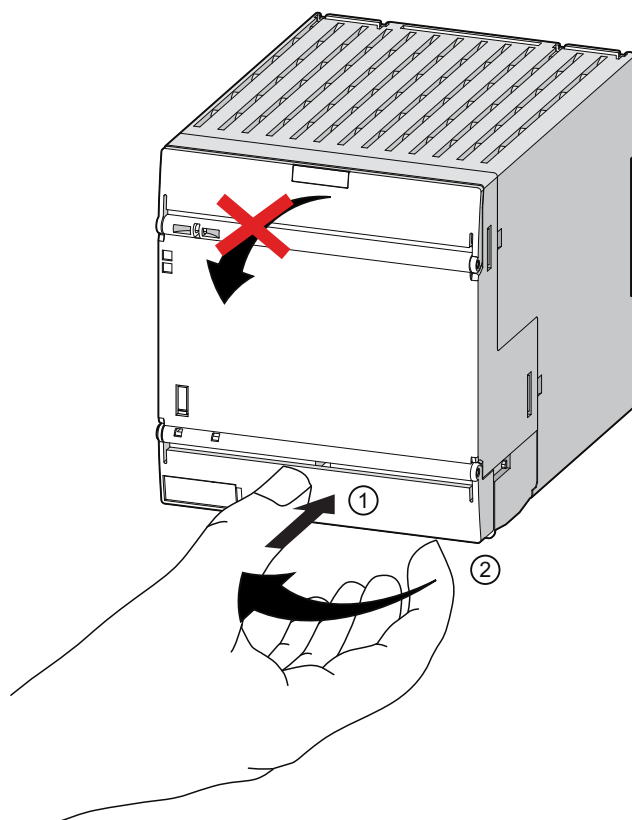

The removable terminals are located under the **lower** terminal cover.

To open the terminal cover, press on it in the middle ① and lift it up ②.

    
8.3.2 Connection data for terminals

	Screwdriver for removable terminals with screw- type terminals	Screwdriver for removable terminals with spring- loaded connection
Screwdriver 	Cross-tip screwdriver Size: PZ 1 (∅ 4 mm) Torque: 0.8 to 1.2 Nm	Screwdriver Size: 0 or 1 (width to 3 mm) for raising the terminal springs DIN 5264-A; 0.5 x 3
Rigid cable 	A = 10 mm 1 x 0.5 ... 4.0 mm ² 2 x 0.5 ... 2.5 mm ²	A = 10 mm 1 x 0.5 ... 1.5 mm ² 2 x 0.5 ... 1.5 mm ²
Flexible cable with end sleeve/cable lug 	A = 10 mm 1 x 0.5 ... 2.5 mm ² 2 x 0.5 ... 1.5 mm ²	A = 10 mm 1 x 0.5 ... 1.5 mm ² 2 x 0.5 ... 1.5 mm ²
Flexible cable 	Not permissible	A = 10 mm 1 x 0.5 ... 1.5 mm ² 2 x 0.5 ... 1.5 mm ²
AWG	1 x 20 to 12 2 x 18 to 14	1 x 20 to 16 2 x 20 to 16

8.3.3 Connecting terminals


<p>⚠ WARNING</p> <p>Hazardous voltage</p> <p>Can Cause Death, Serious Injury, or Property Damage.</p> <p>Before starting work, therefore, disconnect the system and devices from the power supply.</p>

Procedure for screw-type terminal blocks

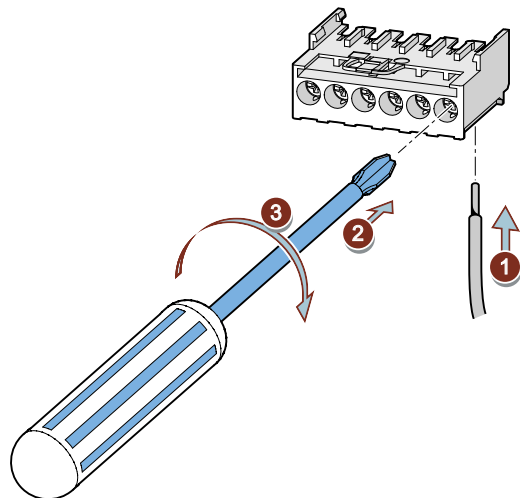

1. Insert the relevant cable into square on the screw-type terminal until it engages.
2. Hold the cable in the screw-type terminal.
3. Tighten the screw of the terminal in which the cable is inserted.
4. Pull on the cable to ensure it is screwed tight.

Procedure for spring-loaded terminals

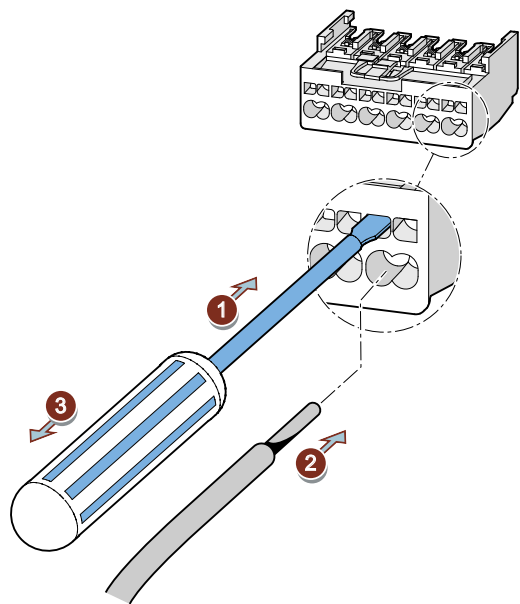

1. To release the clamping springs, insert the screwdriver as far as it will go into the rectangular opening of the spring-loaded terminal. Please observe a 10° horizontal angular deviation of the screwdriver to the oval opening.
2. Insert the cable into the oval opening as far as it will go.

3. Hold the cable in the spring-loaded terminal.
4. Remove the screwdriver.
5. Pull on the cable to ensure it is tight.


8.3.4 Mounting terminals

⚠ WARNING
Hazardous voltage
Can Cause Death, Serious Injury, or Property Damage.
Before starting work, therefore, disconnect the system and devices from the power supply.

Requirements

You must have removed the terminals, for the purpose of replacing a device, for example.

Procedure for mounting terminals

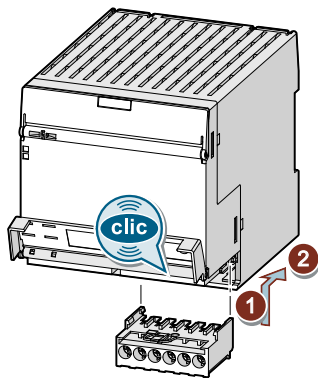


1. Insert the detachable terminals into the guide rail of the device.
2. Slide the detachable terminals back until they audibly engage.
3. Check that the clip of the removable terminals closes flush with the front panel.

8.3.5 Disconnecting


⚠ WARNING
Hazardous Voltage Can Cause Death, Serious Injury, or Property Damage.
Before starting work, therefore, disconnect the system and devices from the power supply.

Removing terminals from the device

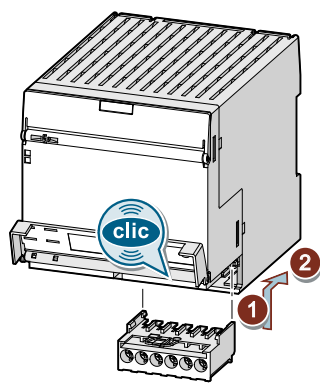


1. Insert a flat-head screwdriver between the clip of the terminals and the front panel.
2. Pull the terminals out to the front.
3. Lift the terminals out of the guide rail of the device.

Disconnecting screw-type terminals

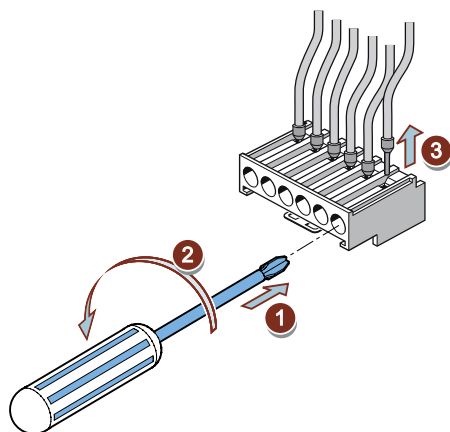


1. Insert the screwdriver into the screw-type terminal.
2. Unscrew the screw of the screw-type terminal.
3. Remove the cable from the unscrewed screw-type terminal.

Disconnecting spring-loaded terminals

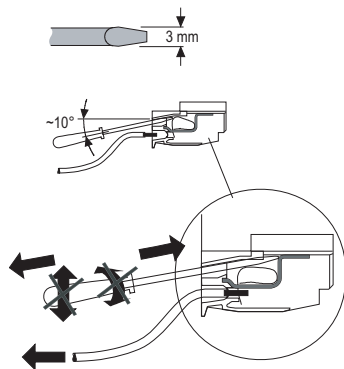

1. Insert the flat-head screwdriver into the rectangular opening of the spring-loaded terminal until it engages. Please observe a 10° horizontal angular deviation of the screwdriver to the oval opening.
2. Remove the cable from the oval opening.
3. Remove the screwdriver.


8.4 Device replacement

 WARNING
Hazardous Voltage Can Cause Death, Serious Injury, or Property Damage.
Before starting work, therefore, disconnect the system and devices from the power supply.

When replacing a device, you do not need to re-wire it. The terminals can be disconnected from the defective device and then connected to the new device.

You can provide the terminals with coding pins. These are to help you avoid errors when replacing the terminals (see the chapter "Terminal coding (Page 124)" for more details).

Replacing the module

 WARNING
Hazardous Voltage Can Cause Death, Serious Injury, or Property Damage. Carry out function test of the plant
To ensure the safety of the system, a full functional test must be conducted and a successful result obtained after a device has been replaced.

Note

Only replace a defective device with a device of an identical article number.

1. Disconnect the defective device at the terminals.
 - Chapter for 22.5 mm / 17.5 mm devices "Disconnecting (Page 164)"
 - Chapter for 90 mm devices "Disconnecting (Page 171)"
2. Deinstall the defective device.
 - Chapter "Removing devices from a standard mounting rail (Page 131)"
 - Chapter "Removing 22.5 mm/17.5 mm devices with device connectors from a standard mounting rail (Page 135)"
 - Chapter "Removing 90 mm devices with device connectors from a standard mounting rail (Page 141)"

3. Mount the new device
 - Chapter "Mounting the devices on a level surface (Page 125)"
 - Chapter "Mounting 22.5 mm/17.5 mm devices on a standard mounting rail (Page 129)"
 - Chapter "Mounting the 90 mm devices on a standard mounting rail (Page 130)"
 - Chapter "Mounting 22.5 mm/17.5 mm devices with device connectors on the wall (Page 144)"
 - Chapter "Mounting 90 mm devices with device connectors on the wall (Page 149)"
4. Connect the defective device at the terminals
 - Chapter for 22.5 mm / 17.5 mm devices "Connecting the screw-type terminals (Page 158)", "Connecting spring-loaded (push-in) terminals (Page 161)" and "Attaching the terminals (Page 163)"
 - Chapter for 90 mm devices "Connecting terminals (Page 168)" and "Mounting terminals (Page 170)"
5. Set the DIP switches/slide switches and, if applicable, the times according to the defective device.

After applying the supply voltage, the new 3SK1 basic unit checks whether the hardware configuration matches the device configuration.

If there are no deviations, the system re-enters safety mode.

Configuration / operation

9.1 Procedure for configuration

General information:

- It is only possible to change the configuration (DIP switch, NC/NO evaluation, potentiometer, input and output expansion) in configuration mode. Modifications during operation are not accepted.
- A configuration change (DIP switch, NC/NO evaluation, potentiometer) is indicated in safety mode by the "DEVICE" LED flashing green/yellow, but does not change the device function.
- In safety mode, if a change in the system configuration (input and output expansion) is detected, the device switches to error mode ("DEVICE" LED and "SF" LED red). A restart is only possible using Power OFF/ON.

Procedure for configuring a basic unit

1. Set the configuration (DIP, PAR, potentiometer, input expansion, output expansion) in accordance with the desired function.
2. Connect the power supply.
3. If the device detects a modified configuration, it remains in configuration mode (LEDs flash) during power up.
4. Confirm the new configuration by operating the SET/RESET pushbutton for more than 1s.
5. The configuration has been accepted and the device changes to safety mode.

Note

Configuration and setting the delay time

A change to the configuration must only ever be carried out when the system is disconnected from the power.

In safety mode, an adjustment to the potentiometer does not result in a change to the parameterized delay time.

A change to the potentiometer setting made during operation is not accepted and is indicated in safety mode by a yellow/green flashing "DEVICE" LED. The device can be restarted by performing a RESET (pressing the SET/RESET button) or by disconnecting and reconnecting the supply voltage. Following a restart, the device remains in safety configuration mode during power up (all safety-related outputs are shut down) until the new delay time is accepted by pressing the SET/RESET button.

9.2 Explanation of the device's functions

Explanation of the device functions (DIP switches)

DIP switch	Parameter	Function
1	Start type	<ul style="list-style-type: none"> • Autostart: The safety-related outputs are switched to the active position as soon as the switch-on condition is satisfied at the sensor inputs IN1, IN2, INF and INK. The START button connecting terminal INS is not queried. • Monitored start: The safety-related outputs are switched to the active position as soon as the switch-on condition is met at the IN1, IN2, INF and INK sensor inputs and the START button at the INS terminal is actuated (start with the falling edge).
2	Cross-circuit detection	<p>Cross-circuit detection is only possible with floating sensors. The sensors must be connected between T1 - IN1 and T2 – IN2. At the terminals IN1 and PAR (if used), the test signal of terminal T1 is expected; at the terminals IN2 and INF, the test signal of T2 is expected. The device detects a sensor fault if the signal at the terminals IN1, PAR or IN2, INF does not match the test signals T1, T2.</p> <p>Cross-circuit detection must be deactivated if electronic sensors such as light arrays or laser scanners are connected. The 3SK1 now no longer monitors the sensor inputs for cross-circuit detection. Usually, the outputs of safety sensors (OSSD) are already monitored for cross-circuits in the sensor.</p> <p>Devices with PAR terminals expect the test signal T2 at the parameterization input. A 24 V signal at the PAR or INF terminals results in a fault (cross-circuit at the input).</p>
3	Type of connection	<ul style="list-style-type: none"> • 1 sensor with 2 contacts 1 x two-channel; NC/NC. It is expected here that both contacts be open simultaneously. With the additional connection of T1 to PAR, this DIP parameterization applies to ONE two-channel sensor with NC/NO contacts. • 2 sensors with one contact each 2 x single-channel; NC / NC. In this case, both sensors are AND-connected. Simultaneity is not monitored.
4	Startup testing	After a power failure, startup testing requires that the sensors at IN1 and IN2 are actuated once by the system operator.

Function of the cascading input (INK terminal)

- **Safe combination of safety relays**

In this application, a higher-level safety relay switches off the 3SK1 safety relay via the cascading input via a safe output.

Example:

an EMERGENCY STOP circuit is to deactivate the entire installation as a higher-level circuit. Several function groups (e.g., protective doors) that disconnect locally can be operated as subordinate units.

 WARNING
Application / safety relay safety level
The safety level PL/SIL of the application corresponds to the lowest safety level of a subsystem of the application when errors are excluded (protected wiring of the control cable).

- **Additional safety sensor circuit**

The INK cascading input is ANDed with sensor inputs IN1, IN2 .

PL c in accordance with ISO 13849-1, or SIL1 in accordance with IEC 62061 can be achieved if the cascading input is wired with single-channel (positive opening) safety sensors (supply via A1 / +24 V (identical potential to A1) and if the connecting cable is laid in a protected fashion. The start function for the cascading input INK corresponds to the start response of sensor inputs IN1 and IN2 (autostart or monitored start).

The cascading input INK can be controlled with floating or solid-state contact blocks (switching to P potential). Floating contact blocks must be connected between A1 / +24 V (identical potential to A1) and the cascading input.

- **Normal switching duty**

The INK cascading input can also be used for normal switching duty (not safe). The INK cascading input can be controlled in this case with floating contact blocks or with solid-state contact blocks (switching to P potential).

Floating contact blocks must be connected between A1 / +24 V and INK .

It is important to note that the start function of cascading input INK corresponds to the start function of sensor inputs IN1, IN2 .

When using a 3SK1 safety relay with instantaneous and time-delayed contacts, the two following safety notes must always be observed:

NOTICE
In the event of external faults such as: <ul style="list-style-type: none">• Cross-circuit fault• Short circuit to ground• Current-source short circuit and to access the configuration mode for copying a delay time after a reset, the following device behavior must always be taken into account: The outputs of stop category 0 switch instantaneously, while the outputs of stop category 1 have a time delay. The sequence cannot be interrupted. Exception: Switching off the power supply.

NOTICE
Saving the starting command: <ol style="list-style-type: none">1. If the safe state is restored during the time delay, (e.g. the protective door is closed) and the START button is actuated, the safety-related outputs switch to the active position immediately after the delay time has elapsed. The actuation of the START button is saved. The OFF-delayed enabling contacts or outputs of the 3SK112-CB4 safety relays (relay and semiconductor outputs) cannot be retriggered. This means that if an OFF command in the sensor circuit is canceled before the delay time has elapsed, the delay time still elapses in full length. If a start command has been issued during this time or if autostart has been set, after this time has elapsed the OFF-delayed enabling contacts switch off briefly and switch on again immediately with the instantaneous enabling contacts (start command is saved).2. If a sensor is actuated at an input expansion within the system configuration, the entire system is disconnected. If the START button on the basic unit is then pressed while the sensor on the input expansion is actuated (for instance, if the protective door is open), the command will be saved by the basic unit. This results in an automatic start of the system once the sensor at the input expansion is reset (for example, a protective door is closed again). This system response is identical in the system configuration for all 3SK1 basic units. For additional notes/explanations on this topic, see the following FAQ (https://support.industry.siemens.com/cs/ww/en/view/103655974)

NOTICE
Observe the following in the case of protective doors with tumblers: If the voltage U_s is disconnected on devices with time-delayed outputs between switching the instantaneous outputs and the time-delayed outputs, the delay time expires when the voltage U_s is restored, and the time-delayed contacts change their switch positions.

9.3 Modes

The 3SK1 safety relays have 4 main operating modes:

- Power-up
- Configuration mode
- Safety mode
- Error mode

Power-up

On powering up (up to 7 seconds), the 3SK1 safety relay runs through a complete function test.

Configuration mode

A saved configuration can only be modified in configuration mode.

The configuration must only ever be modified after disconnecting the power supply.

If the device detects a configuration change during the restart (DIP, PAR, potentiometer, input expansion, output expansion), it does not change automatically to safety mode after power up, but instead remains in configuration mode.

In configuration mode, those LEDs flash yellow whose ON DIP switch position is on the right; all other parameter settings are not explicitly indicated.

The configuration is accepted by pressing the SET/RESET button for approximately 1 s.

In configuration mode, the device is in the safe state. No monitoring functions are active.

Note

A configuration change made during operation is not accepted, and in safety mode, this is indicated by a yellow/green flashing "DEVICE" LED. The device can be restarted by performing a RESET (pressing the SET/RESET button) or by disconnecting and reconnecting the supply voltage.

Safety mode (DEVICE LED: green)

In safety mode, all monitoring functions are active in accordance with the set configuration.

Note

Parameterized startup testing is indicated by a green flashing "DEVICE" LED. Only when this has been successfully executed does the "DEVICE" LED show a green light.

Error mode

Error mode is indicated by a red "DEVICE" LED or by a red "SF" LED. In error mode, the device **ALWAYS** changes to the safe state.

9.4 Response times

Verification of response times in the case of safety circuits

When safety equipment is commissioned, steps must be taken to verify that a safety-related output will switch off within a maximum permissible response time if the input signal changes at the relevant input.

To provide this verification, you must determine the total response time of the application you have configured.

Note

Note that the calculation of the response time affects the level of safety and governs the overall design of the system.

You can find the response data of the safety relays in the technical specifications of the respective devices in the chapter "Technical data (Page 191)".

You can find the response data of the 3RM1 Failsafe motor starters in the technical specifications in the "SIRIUS 3RM1 motor starters (<http://support.automation.siemens.com/WW/view/EN/66295730>)" manual.

Calculation of the response times


To calculate the response times of the overall system configuration, you must add up the individual response times of all input expansions affected by deactivation and also the response time of the basic unit.

If output expansions are used, the response times of the relevant output module are also added to the total time from the sensor to the actuator.

Examples

Example 1


3SK1121-.AB40 + 3SK1211.BB40

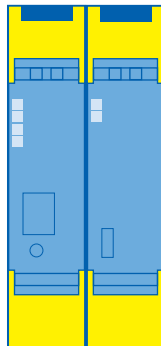

Response time: 40 ms 50 ms

Example 2

3 x 3SK1220 + 3SK1122-.AB40 + 3SK1211-.BB40 + 3RM1 Failsafe motor starter

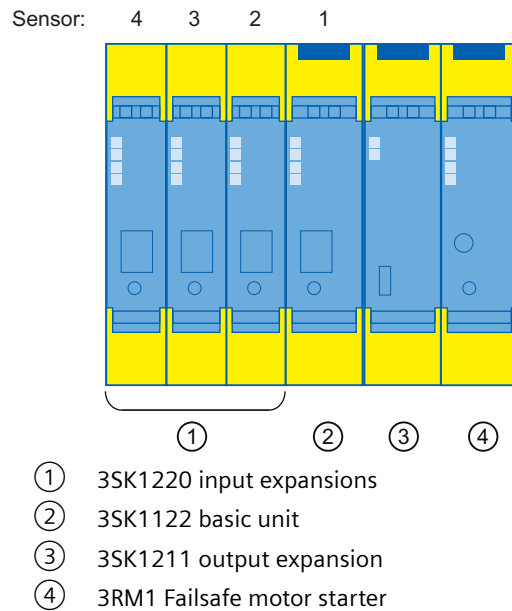

Abbreviations in the following formulas:

GG = basic unit; EE = input expansion; AE = output expansion

In the event of shutdown by sensor 1, the total response time is calculated as follows:

- Basic unit = 40 ms
- 3SK1211 output expansion = GG + AE = 40 ms + 10 ms = 50 ms
- 3RM1 Failsafe = GG + 3RM1 Failsafe = 40 ms + 3RM1 Failsafe motor starter response time

In the event of shutdown by sensor 3, the total response time is calculated as follows:

- Basic unit = GG + EE 1 + EE 2 = 3 x 40 ms = 120 ms
- 3SK1211 output expansion = GG + EE 1 + EE 2 + AE 3SK1211 = 120 ms + 10 ms = 130 ms
- 3RM1 Failsafe = 120 ms + 3RM1 Failsafe motor starter response time


In the event of shutdown by sensor 4, the total response time is calculated as follows:

- Basic unit = 3 x EE response time + GG response time = 160 ms
- 3SK1211 output expansion = total response time EE with GG + AE = 170 ms
- 3RM1 Failsafe = 160 ms + 3RM1 Failsafe motor starter response time

Commissioning

Note

Since commissioning of the 3SK1 safety relays is an important, safety-related step, it must be carried out by qualified personnel.

 WARNING**Hazardous voltage**

**Can cause death, serious injury, or property damage.
Carry out function test of the plant.**

To guarantee the safety of the system, a full functional test must be carried out and successfully concluded following commissioning.

Commissioning 3SK1 safety relays

3SK1 safety relays are commissioned by applying the operating voltage.

After the supply voltage has been applied, all LEDs show a green light for about 1 s (lamp test). The LEDs then go out for approx. 0.5 s. The device configuration is then displayed on the configuration LEDs for approx. 3 s.

If no configuration change (DIP, PAR, potentiometer, input expansion, output expansion) has been detected, the device changes automatically to safety mode and is ready for operation. However, if the device detects a deviation of the set parameters from the saved configuration, it remains in safe configuration mode until the new configuration is accepted by pressing the SET/RESET button.

Note**Observe the following during commissioning:**

The cascading input must be bypassed (24 V DC) if it is not to be used.

Monitoring of the feedback circuits is not optional.

Display and diagnostics

11.1 LED display

The LED indications of the Advanced safety relays are shown in the tables below. You can find the LED indications of the Standard safety relays in the chapter "Display of the operating state (Page 57)".

LED	Display	Explanation
(1) DEVICE	OFF*	No voltage, group error Configuration mode DIP (1) position: left
	Green	Device is ready for operation Power-up: hardware test
	Green flashing	No startup testing Short-circuit on the SET/RESET button
	Yellow	Power-up DIP (1) position: right
	Yellow flashing	Configuration mode DIP (1) position: right
	Green/yellow flashing	Configuration changed
	Red	Device error
(2) OUT	OFF*	Output inactive Configuration mode DIP (2) position: left
	Green	Output active Power-up: hardware test
	Green flashing	Feedback circuit error Short-circuit on the SET/RESET button
	Yellow	Power-up DIP (2) position: right
	Yellow flashing	Configuration mode DIP (2) position: right START button pressed too long
	Green/yellow flashing	Instantaneous outputs inactive, delayed outputs active

11.1 LED display

LED	Display	Explanation
(3) IN	OFF*	Start conditions not fulfilled Configuration mode DIP (3) position: left
	Green	Start conditions fulfilled Power-up: hardware test
	Green flashing	<ul style="list-style-type: none"> If 1 x two-channel: Simultaneity of sensors not fulfilled Two-hand operation: time monitoring violated If monitored start: START button not yet pressed Short-circuit on the SET/RESET button
	Yellow	Power-up DIP (3) position: right
	Yellow flashing	Short-circuit of T1/T2 to ground or 24 V With input expansion: missing enabling signal of input expansion Group error: Cross-circuit at input Configuration mode DIP (3) position: right
	Flickering yellow	Configuration mode: Special two-hand operation configuration
	Flickering red	Configuration mode: impermissible configuration
(4) SF	OFF*	No group error, Configuration mode DIP (4) position: left
	Green	Power-up: hardware test
	Green flashing	Short-circuit on the SET/RESET button
	Yellow	Power-up DIP (4) position: right
	Yellow flashing	Configuration mode DIP (4) position: right
	Red	Group error, e.g. cross-circuit at input, short-circuit to P, device configuration changed.
	Red flashing	Error message (e.g. short-circuit T1/T2, violation of simultaneity, violation of two-hand operation timeout, feedback circuit error, START-button pressed too long, connection of control supply voltage (A1/A2) to an expansion unit that is connected via a device connector)

* LED flashes briefly in configuration mode due to lamp test

11.2 Power-up

Display mode during power-up / parameterization in configuration mode

LED	Display	Explanation
(1) DEVICE	Yellow or yellow flashing	Monitored start
	Off	Autostart
(2) OUT	Yellow or yellow flashing	Cross-circuit detection ON
	Off	Cross-circuit detection off
(3) IN	Yellow or yellow flashing	1 x two-channel
	Flickering yellow	Configuration mode: Special two-hand operation configuration
	Flickering red	Configuration mode: impermissible configuration
	Off	2 x single-channel
(4) SF	Yellow or yellow flashing	Startup testing off
	Off	Startup testing ON

11.3 Error statuses

LED	Display	Explanation
(1) DEVICE	Red	Device error
(4) SF	Red	Group error
	Red flashing	Fault message

11.4 Diagnostics

Power-up

Explanation	DEVICE	OUT	IN	SF
Hardware test Note: Input expansions remain in this state until acknowledged by the device on the right-hand side.	Green	Green	Green	Green
The SET/RESET button is stuck, or has been pressed too long. The device remains in this state until the button is released again.	Green flashing	Green flashing	Green flashing	Green flashing
Display of DIP switch configuration.	If the DIP switch position is at ON (right), the relevant LED shows a yellow light.			

Configuration

Explanation	DEVICE	OUT	IN	SF
Indication of a modified configuration.	If the DIP switch position is at ON (right), the relevant LED flashes yellow			
Special configuration, two-hand operation NC/NO, autostart, 2 x single-channel.	Off	If the DIP switch position is at ON (right), the relevant LED flashes yellow	Flickering yellow	If the DIP switch position is at ON (right), the relevant LED flashes yellow
Impermissible configuration NC/NO, monitored start, 2 x single-channel	Yellow flashing	If the DIP switch position is at ON (right), the relevant LED flashes yellow	Flickering red	If the DIP switch position is at ON (right), the relevant LED flashes yellow
All DIP switches are in OFF position (left)	All LEDs light up briefly (yellow) at intervals			

Safety mode

Explanation	DEVICE	OUT	IN	SF
No startup testing.	Green flashing	Off	Off	Off
Device ready for operation, all outputs OFF.	Green	Off	Off	Off
Device ready for operation, all outputs ON.	Green	Green	Green	Off
Device ready for operation, instantaneous outputs OFF, time-delayed outputs ON.	Green	Green/yellow flashing	Off	Off
If "monitored start": START button not yet pressed.	Green	Off	Green flashing	Off
With input expansion: Missing enabling signal of input expansion.	Green	Off	Yellow flashing	Off
Configuration has been changed (PAR, DIP switch, potentiometer)	Green/yellow flashing	— ¹⁾	— ¹⁾	— ¹⁾

11.4 Diagnostics

Explanation	DEVICE	OUT	IN	SF
If 1 x two-channel: Simultaneity violated If two-hand operation: Time monitoring violated.	Green	Off	Green flashing	Red flashing
Short-circuit test clock output T1 or T2	Green ²⁾	Off	Yellow flashing	Red flashing
If "monitored start": START button was pressed too long or has a short-circuit.	Green	Yellow flashing	Off	Red flashing
Feedback circuit error	Green	Green flashing	Green	Red flashing

¹⁾ Dependent on device status

²⁾ Green flashing DEVICE LED: No startup testing

Error mode

Explanation	DEVICE	OUT	IN	SF
Device error Restart possible by pressing the SET/RESET button.	Red	Off ³⁾	Off ³⁾	Off ³⁾
Group error Restart possible by pressing the SET/RESET button	Off ³⁾	Off ³⁾	Off ³⁾	Red
Group error, cross-circuit at input Restart possible by pressing the SET/RESET button.	Off ³⁾	Off ³⁾	Yellow flashing ³⁾	Red
System stop Restart only possible by disconnecting and re-connecting the operating voltage.	Red	Off ³⁾	Off ³⁾	Red

³⁾ On time-delayed devices, the LED flashes green/yellow provided the time-delayed outputs are still switched on

Technical data

12.1 Technical data in Siemens Industry Online Support

Technical data sheet

You can also find the technical data of the product at Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/ps/>).

1. Enter the full article number of the desired device in the "Product" field, and confirm with the Enter key.
2. Click the "Technical data" link.

The screenshot shows the Siemens Industry Online Support search interface. At the top, there is a search bar with the text "Enter keyword...". Below the search bar, there are three main sections: "Product", "Entry type", and "Date". The "Product" field contains the article number "3RV2031-4BA10" and is highlighted with a red box. The "Entry type" dropdown menu is set to "Technical data (1)" and is also highlighted with a red box. The "Date" field has "From" and "To" sub-fields. Below these fields, there is a "Search product" button. The search results are displayed in a table with one entry for "3RV2031-4BA10". The entry includes a product image placeholder, the product name, and a detailed description: "CIRCUIT BREAKER, SCREW TYPE, 20 A, CIRCUIT BREAKER SIZE S2, FOR MOTOR PROTECTION, CLASS 10, A-RELEASE 14... 20A, N-RELEASE 20DA, SCREW TERMINAL, STANDARD BREAKING CAPACITY". Below the description, there are three navigation links: "> Product details", "> Technical data" (highlighted with a red box), and "> CAx data".

12.2 Electrical endurance

Electrical endurance of 3SK1 safety relays and 3RQ1 coupling relays

Note

When using the devices to equip furnaces to DIN EN 50156-1, the load (utilization category) listed below must not be exceeded.

The electrical endurance is $\geq 250,000$ operating cycles under the following conditions:

Utilization category	3SK111; 3SK1121; 3SK1211; 3RQ1000-.HB00; 3RQ1000-.LB00; 3RQ1000-.HW00; 3RQ1000-.LW00	3SK1213
AC-1, 240 V	1.5 A	10.0 A
AC-15, 240 V	0.2 A	10.0 A
DC-13, 24 V	2.0 A	3.0 A

Electrical endurance of 3SK1 safety relays and 3RQ1 coupling relays for the following device versions

3SK1121-.AB40	3RQ1000-.HB00
3SK1111-.AB30	3RQ1000-.LB00
3SK1111-.AW20	3RQ1000-.HW00
3SK1211-.BB40	3RQ1000-.LW00
3SK1211-.BB00	
3SK1211-.BW20	

Utilization category	Ue (V)	Ie (A)	B10 _a value (operating cycles)	Electrical endurance of safety-related outputs (typical)
AC-1	240	5	500,000	85,000
		4	860,000	140,000
		2	1,300,000	210,000
AC-15	240	4	300,000	50,000
		3	850,000	85,000
		1	1,100,000	120,000
DC-13	24	5	300,000	50,000
		2	2,000,000	230,000
		1	7,000,000	1,100,000
DC-1	24	5		500,000

Electrical endurance of 3SK1 safety relays for the version 3SK1121-.CB4.

Utilization category	Ue (V)	Ie (A)	B10 _d value (operating cycles)	Electrical endurance of safety-related outputs (typical)
AC-1	240	5	500,000	100,000
		4	600,000	100,000
		2	1,000,000	170,000
AC-15	240	3	400,000	70,000
		0.1	10,000,000	1,500,000
DC-13	24	3	450,000	110,000
		1	2,000,000	480,000
DC-1	24	5		500,000

Electrical endurance of 3SK1 safety relays for the following device versions

3SK1213-.AB40

3SK1213-.AJ20

3SK1213-.AL20

Utilization category	Ue (V)	Ie (A)	B10 _d value (operating cycles)	Electrical endurance of safety-related outputs (typical)
AC-1	240	10	1,370,000	1,000,000
AC-15	240	10	1,370,000	1,000,000
DC-13	24	6	1,370,000	1,000,000

Electrical endurance of 3RQ1 coupling relays for the following device versions

3RQ1.00-.E.00

3RQ1000-.G.00

Utilization category	Ue (V)	Ie (A)	B10 _d value (operating cycles)	Electrical endurance of safety-related outputs (typical)
AC-1	230	5	340,000	170,000
AC-15	230	2	85,000	85,000
		1	220,000	220,000
DC-13	24	2	120,000	13,000
DC-1	24	5	1,560,000	780,000

12.3 Overview tables

Overview tables technical data

You will find overview tables with technical data in the "Product information" tab in our online ordering system.

Dimension drawings

13.1 CAx data

You can find the CAx data in the Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/ps/>).

1. Enter the full article number of the desired device in the "Product" field, and confirm with the Enter key.
2. Click the "CAx data link.

The screenshot shows the Siemens Industry Online Support search interface. At the top, there is a search bar with the text "Enter keyword..." and a magnifying glass icon. Below the search bar, there are three tabs: "Product", "Entry type", and "Date". The "Product" tab is selected, and the search results are displayed below it. The search results show the product number "3RV2031-4BA10" in a red box, followed by a magnifying glass icon and a close button. Below the product number, there is a description: "CIRCUIT BREAKER, SCREW TYPE, 20 A, CIRCUIT BREAKER SIZE S2, FOR MOTOR PROTECTION, CLASS 10, A-RELEASE 14... 20A, N-RELEASE 20DA, SCREW TERMINAL, STANDARD BREAKING CAPACITY". At the bottom of the search results, there are three links: "Product details", "Technical data", and "CAx data". The "CAx data" link is highlighted with a red box.

Circuit diagrams

14.1 CAx data

You can find the CAx data in the Siemens Industry Online Support.


1. Enter the full article number of the desired device in the "Product" field, and confirm with the Enter key.
2. Click the "CAx data link.

The screenshot shows the Siemens Industry Online Support search interface. At the top, there is a search bar with the text "Enter keyword..." and a magnifying glass icon. Below the search bar, there are three filters: "Product" with a dropdown menu showing "3RV2031-4BA10", "Entry type" with a dropdown menu showing "Technical data (1)", and "Date" with "From" and "To" input fields. A red box highlights the "3RV2031-4BA10" product code in the Product filter. Below the filters, there is a search button labeled "> Search product". The search results section shows a product card for "3RV2031-4BA10" with a description: "CIRCUIT BREAKER, SCREW TYPE, 20 A, CIRCUIT BREAKER SIZE S2, FOR MOTOR PROTECTION, CLASS 10, A-RELEASE 14...30A, N-RELEASE 20DA, SCREW TERMINAL, STANDARD BREAKING CAPACITY". A red box highlights the "CAx data" link in the breadcrumb navigation below the product card.


14.2 Internal circuit diagrams

14.2.1 Internal circuit diagrams for 3SK1 Standard basic units


Basic unit 3SK1111-.AB30 Standard relay instantaneous (24 V)

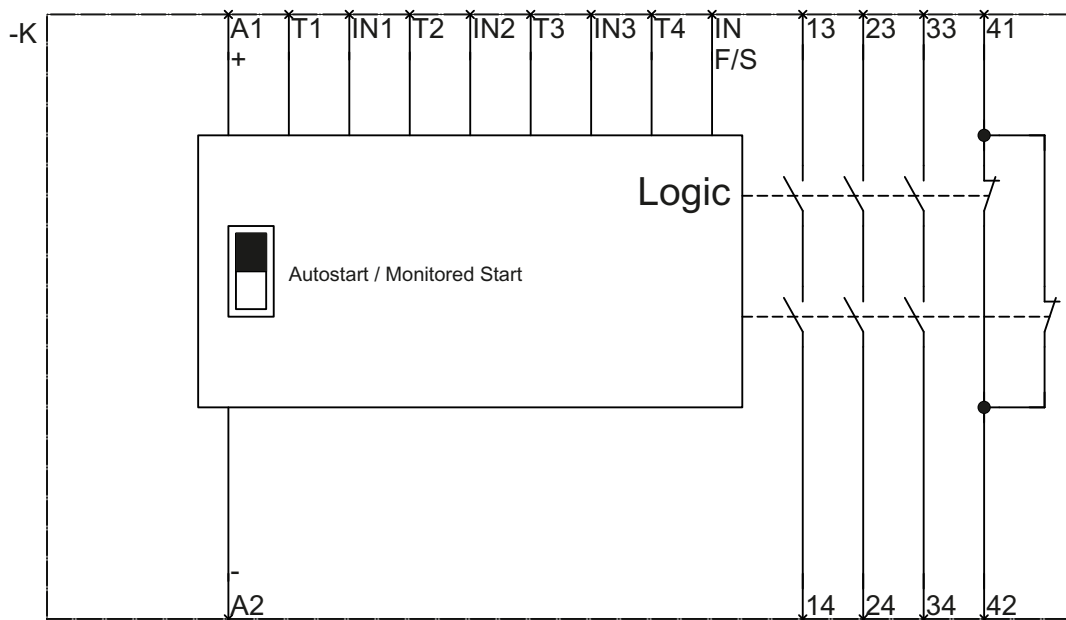

Basic unit 3SK1111-.AW20 Standard relay instantaneous (110 - 240 V)

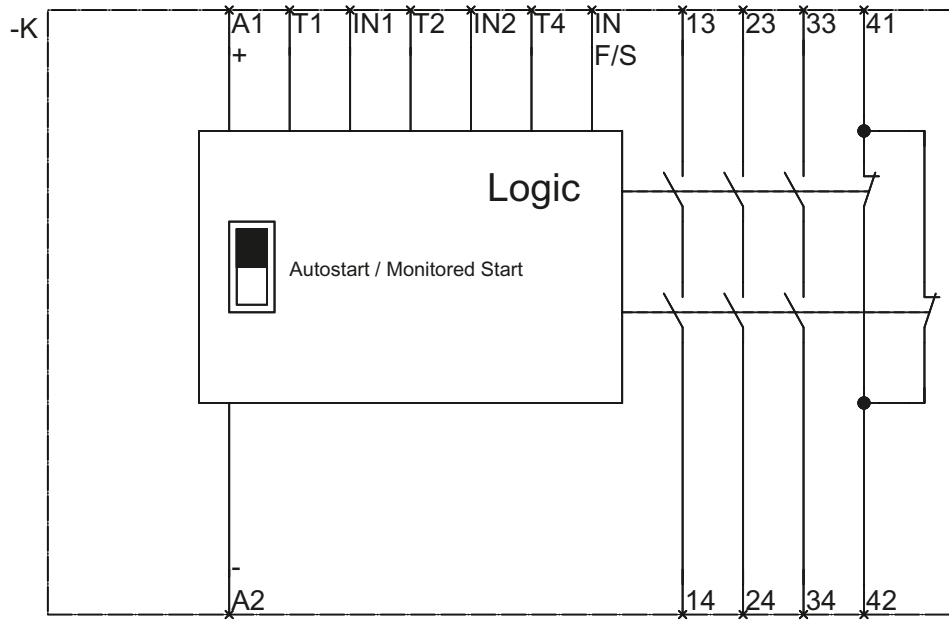


Basic unit 3SK1112-.BB40 Standard instantaneous

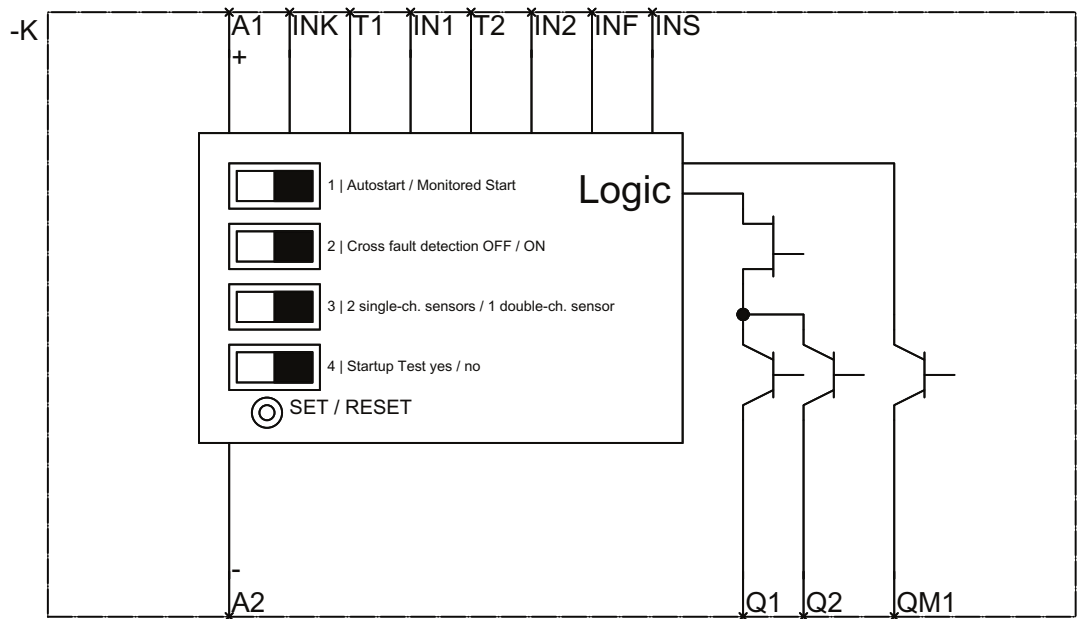


14.2.2 Internal circuit diagrams for 3SK1 Advanced basic units


Basic unit 3SK1121-.AB40 Advanced relay instantaneous

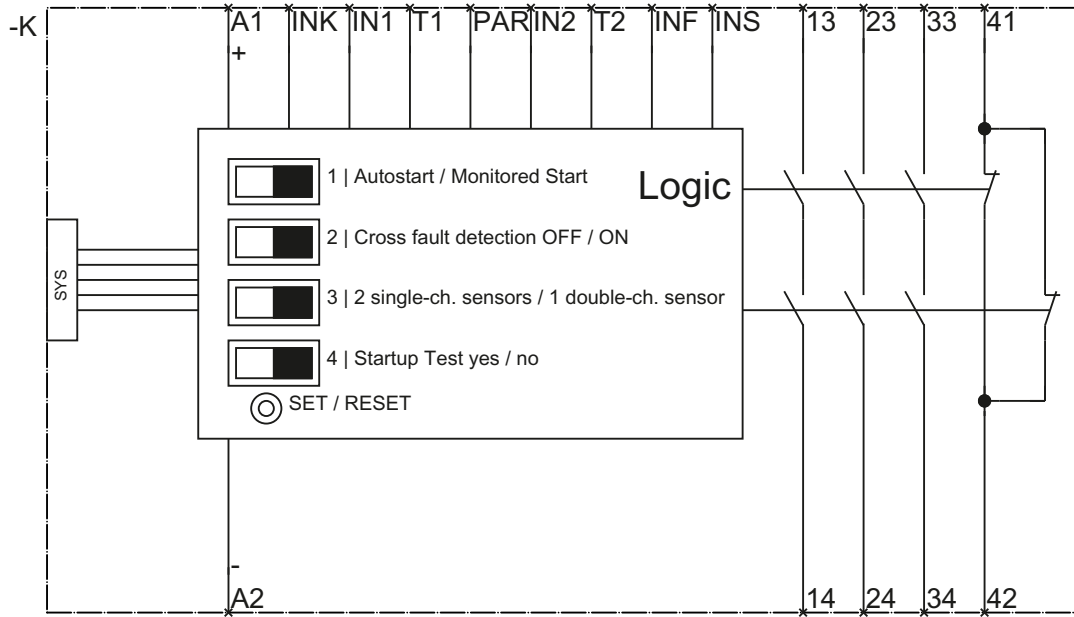


Basic unit 3SK1121-.CB4. Advanced relay time-delayed

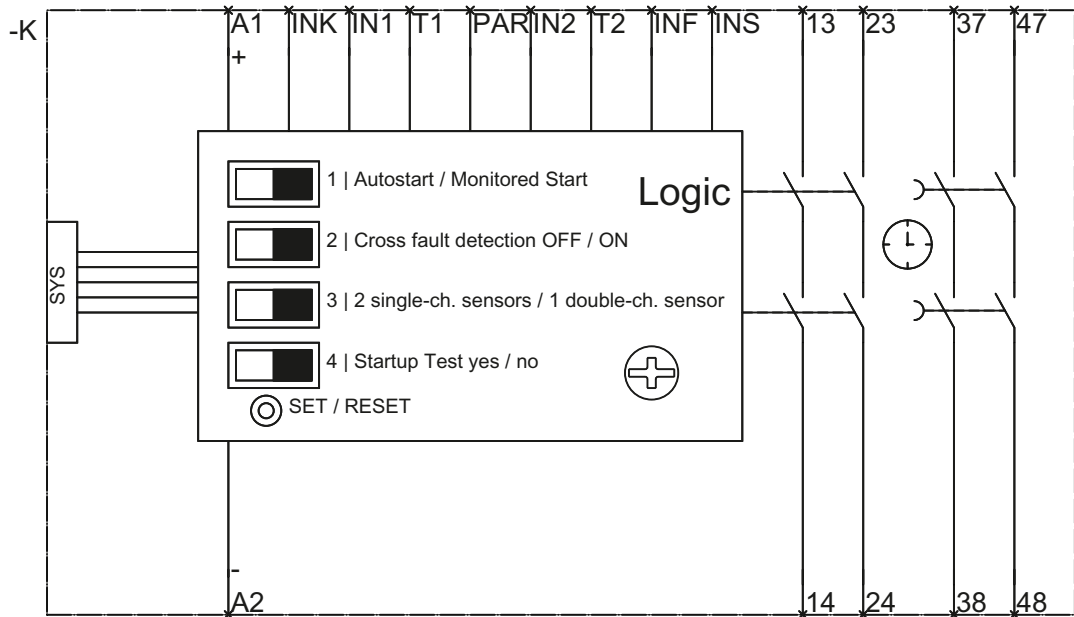


Basic unit 3SK1122-.AB40 Advanced solid-state instantaneous

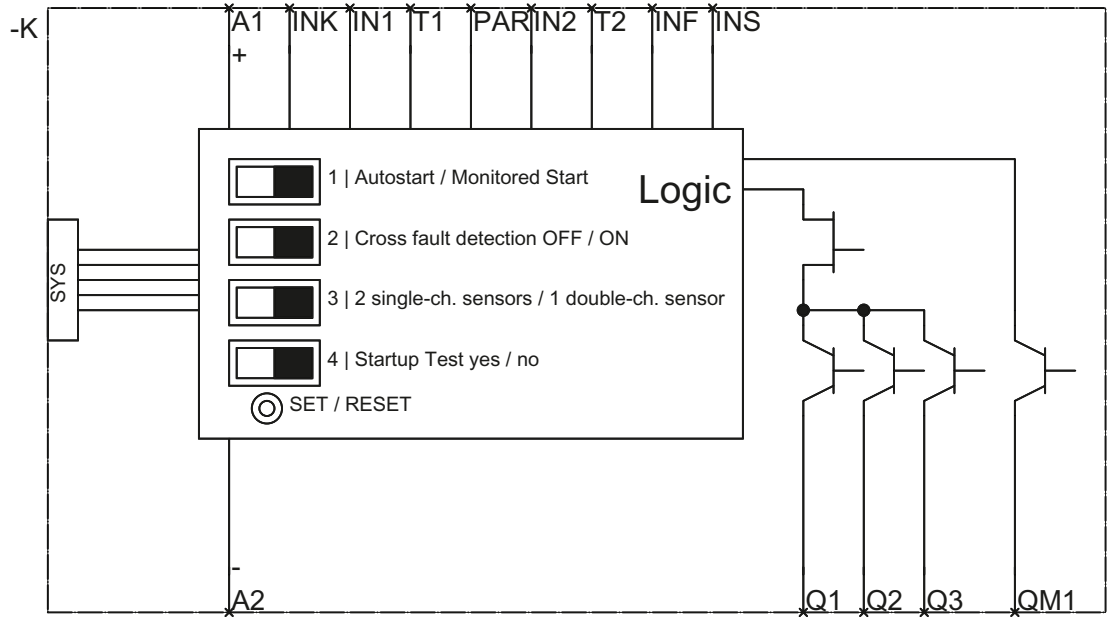

Basic unit 3SK1122-.CB4. Advanced solid-state time-delayed

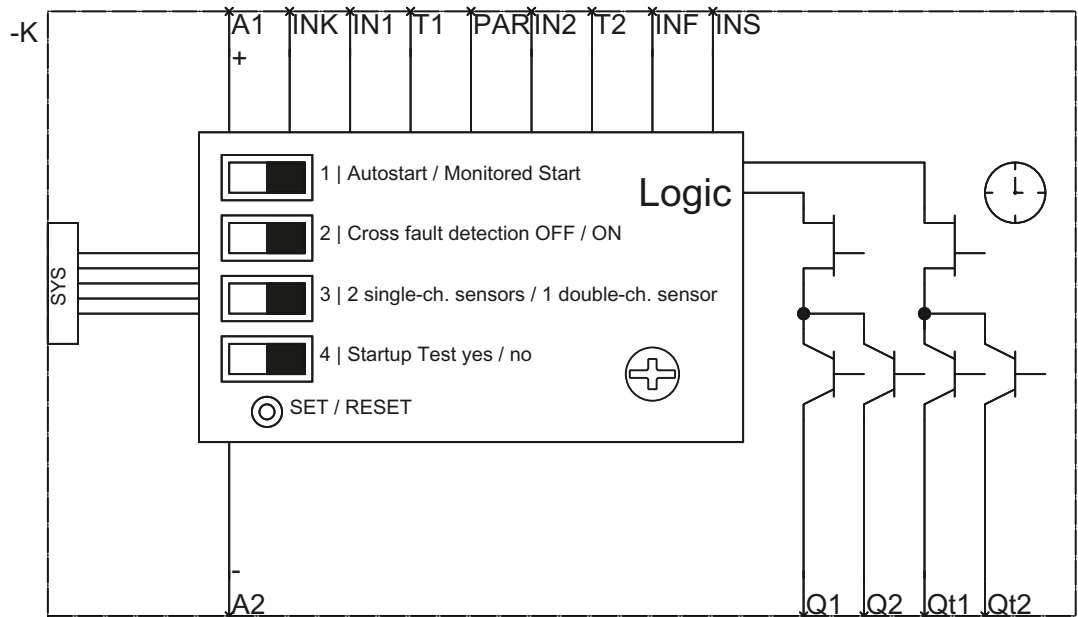


Basic unit 3SK1120-.AB40 Advanced 17.5 mm solid-state instantaneous

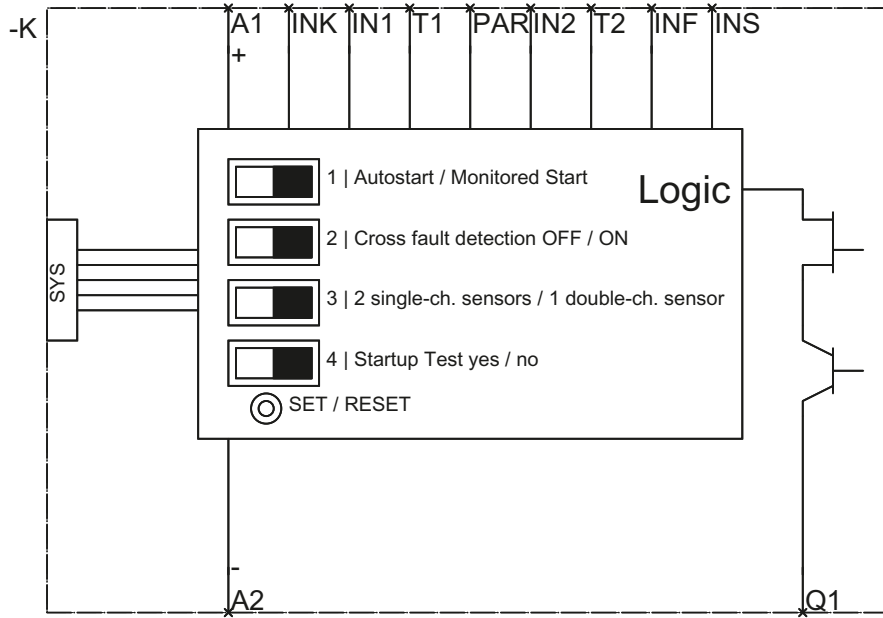


14.2.3 Internal circuit diagrams for expansion units


3SK1211 output expansion (110 - 240 V)

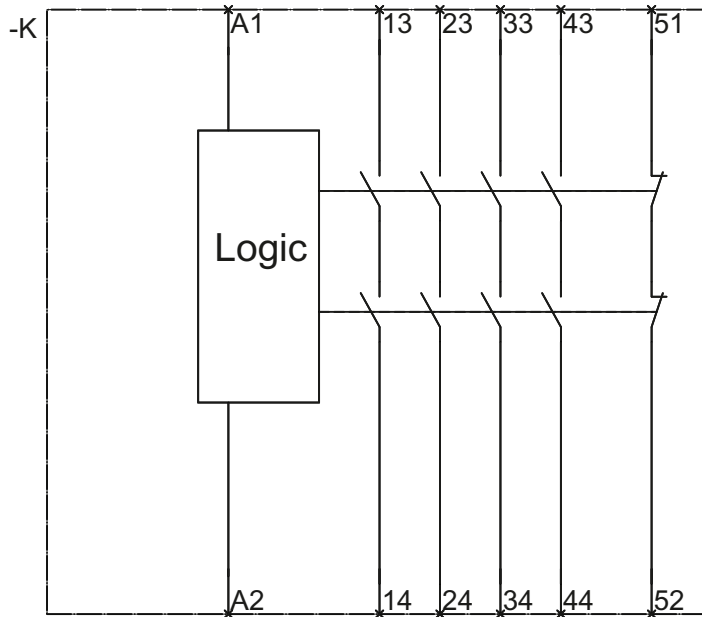


3SK1211 output expansion (24 V DC)

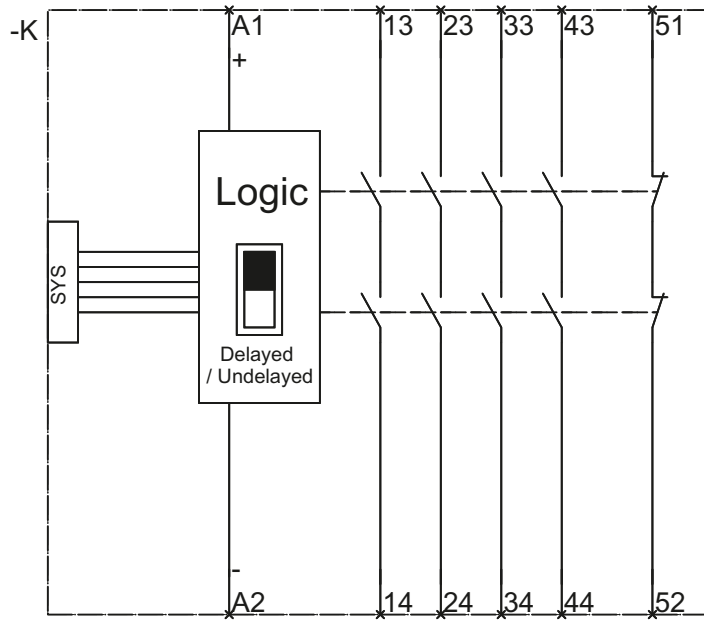


3SK1213-.A.20 output expansion (110 - 240 V)

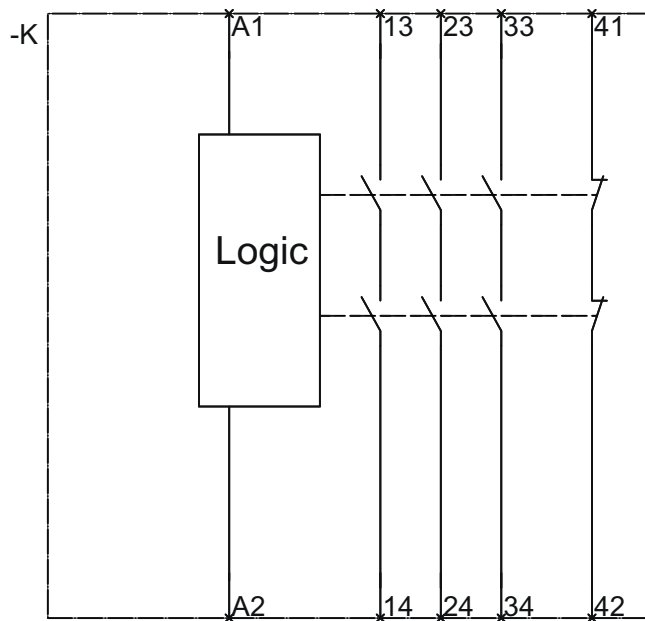


3SK1213-.AB40 output expansion (24 V DC)

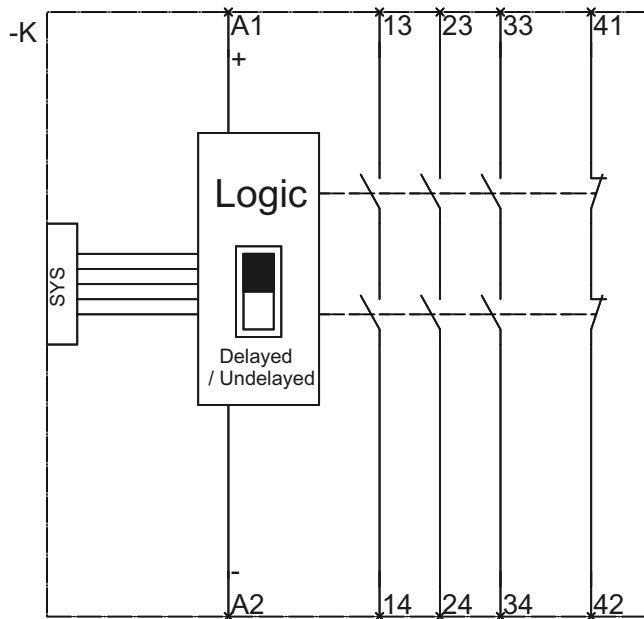


Output expansion 3RQ1000-.EB00 (24 V DC)

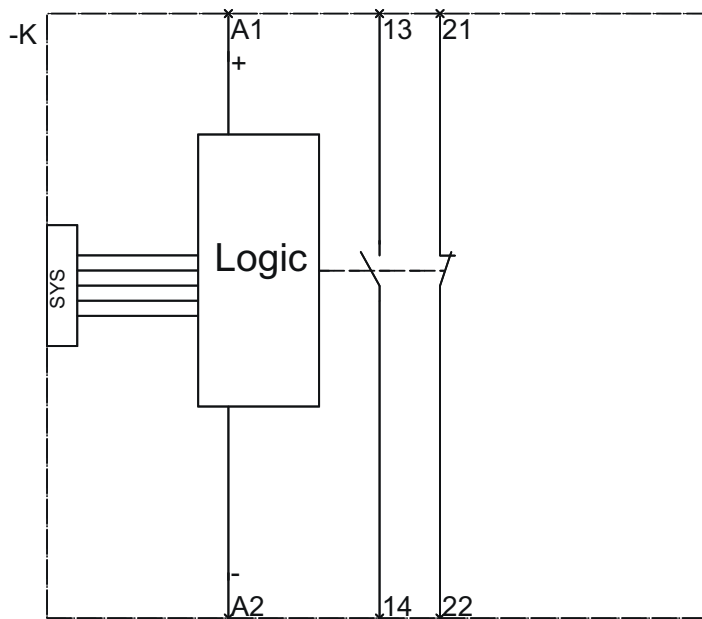


Output expansion 3RQ1000-.EW00 (24 - 240 V AC/DC)

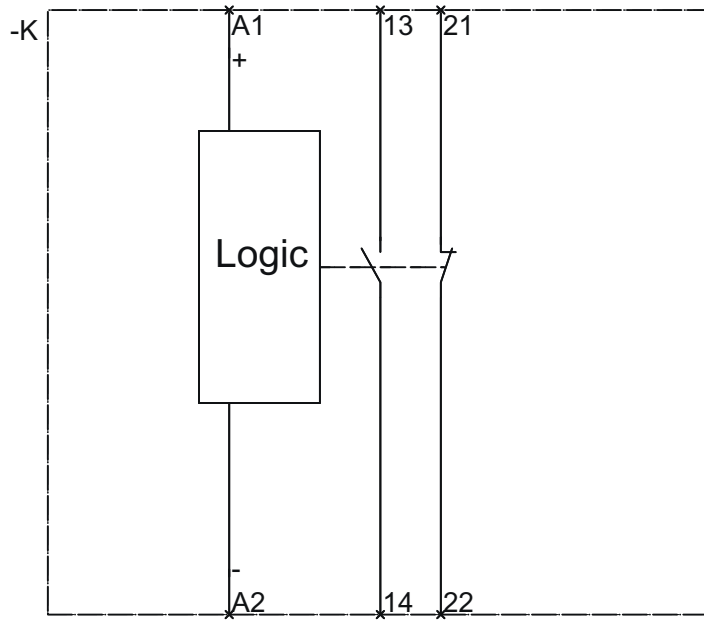


Output expansion 3RQ1000-.GB00 (24 V DC)

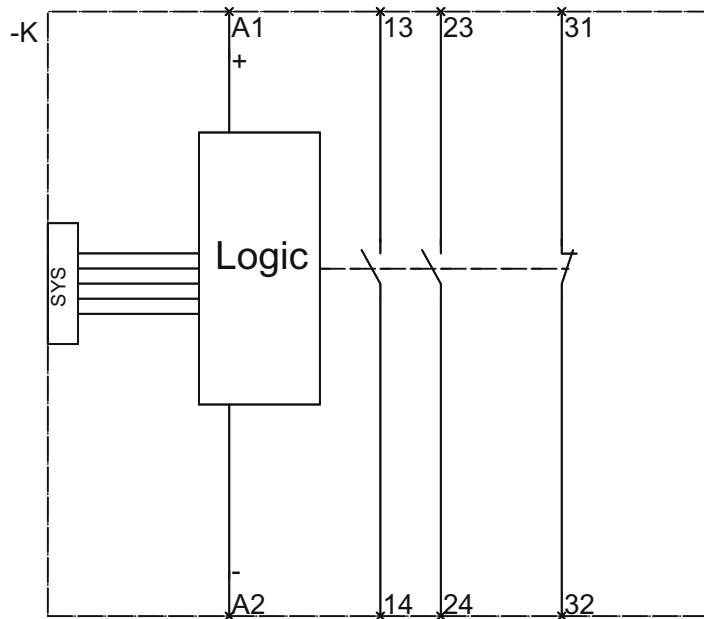


Output expansion 3RQ1000-.GW00 (24 - 240 V AC/DC)

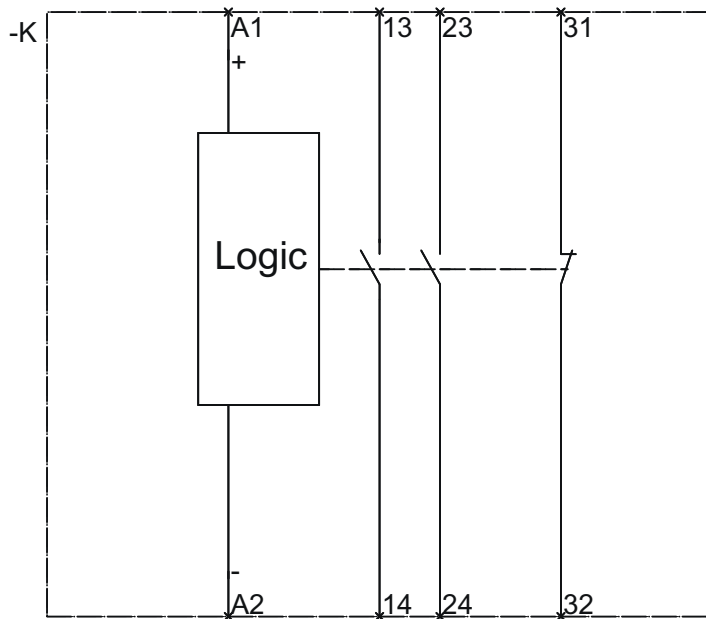


Output expansion 3RQ1000-.HB00 (24 V DC)

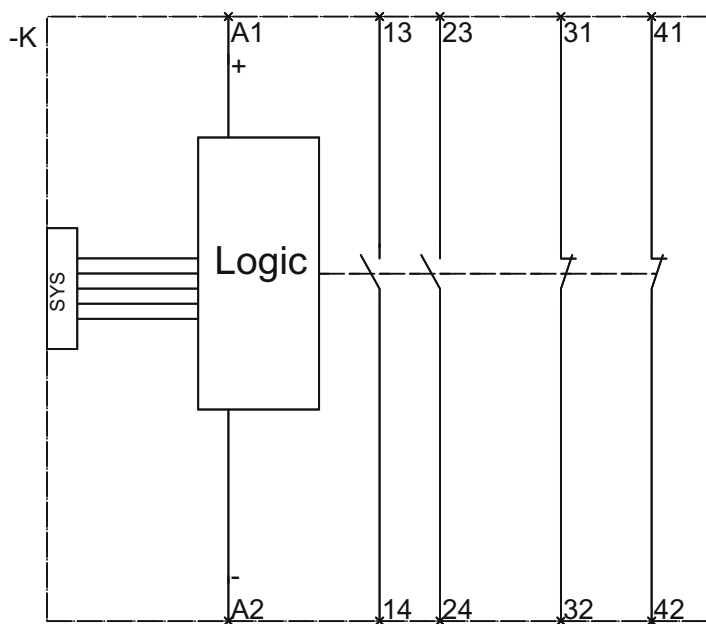


Output expansion 3RQ1000-.HW00 (24 - 240 V AC/DC)

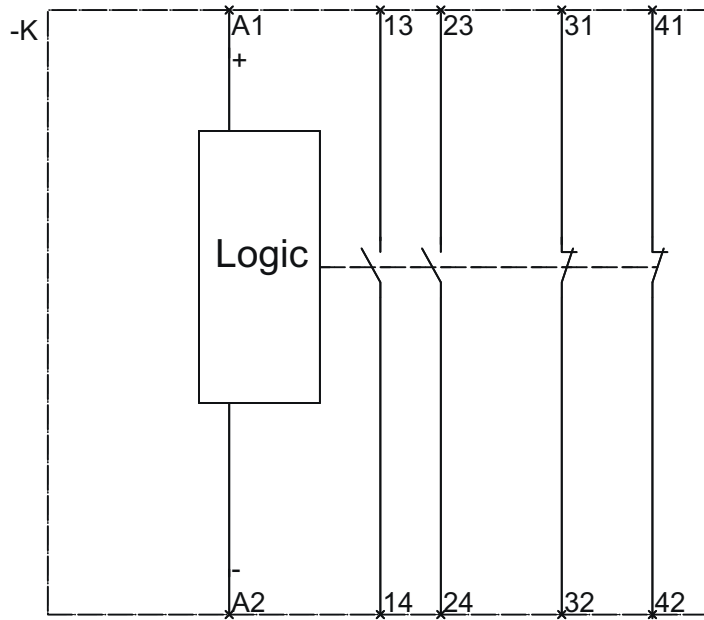


Output expansion 3RQ1000-.LB00 (24 V DC)

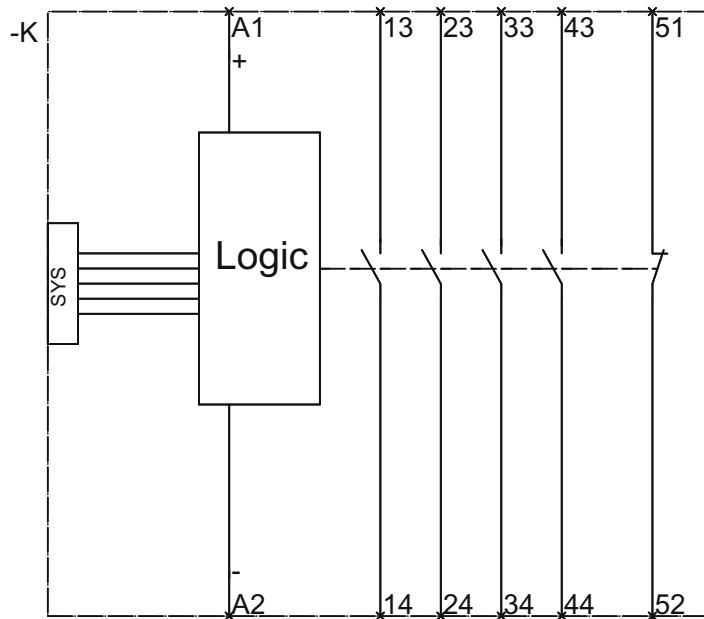


Output expansion 3RQ1000-.LW00 (24 - 240 V AC/DC)

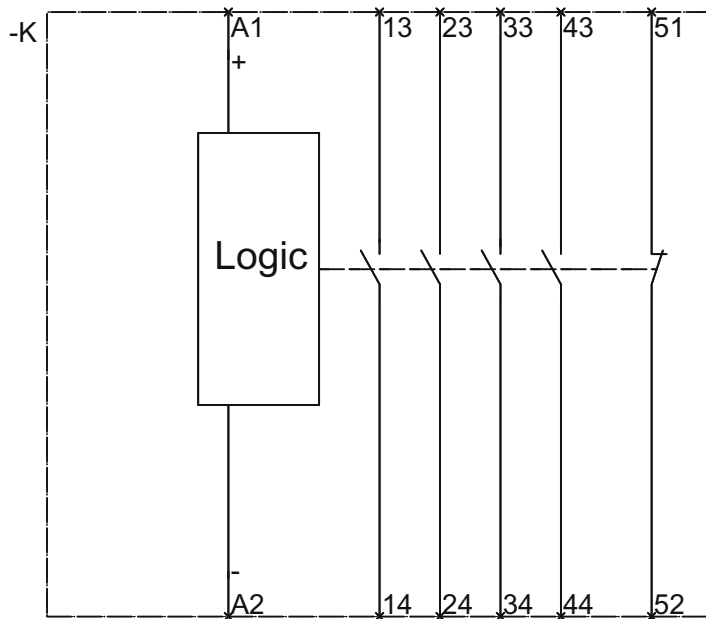


Output expansion 3RQ1200-.EB00 (24 V DC)

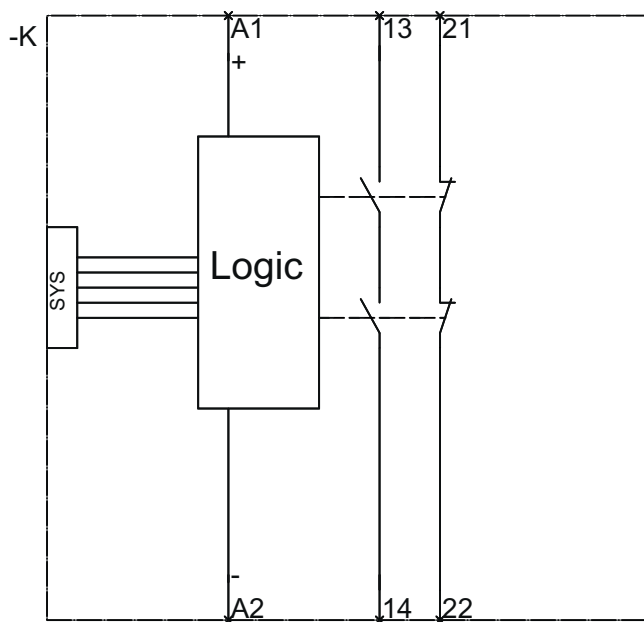


Output expansion 3RQ1200-.EW00 (24 - 240 V AC/DC)

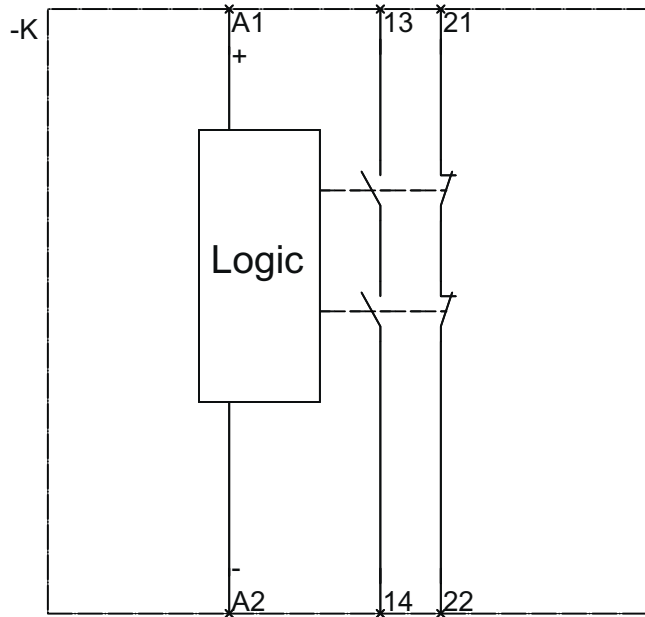

3SK1220 input expansion

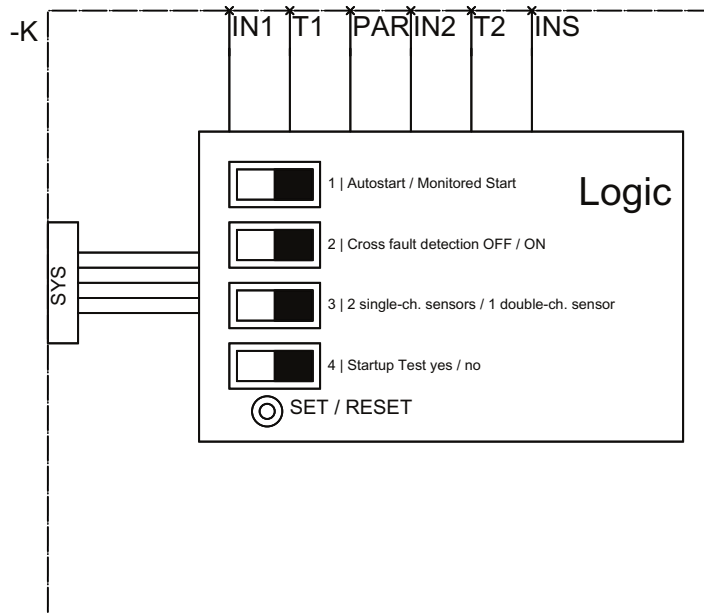


3SK1230 power supply

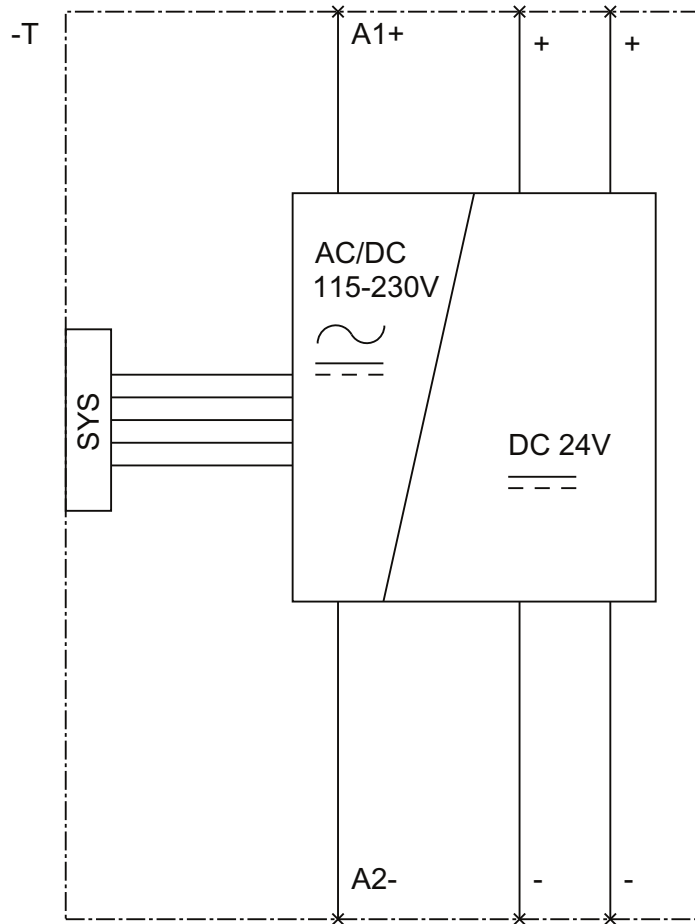

14.3 Typical circuits

 The black fields show the positions of the switches. Here, "Autostart" in each case.



If use of the feedback circuit is not desired for the application, this has to be jumpered with the corresponding test output.

Typical circuit for 3SK1111 Standard relay basic unit

Table 14-1 Typical circuit 1:
Single-channel, with monitored start

	<ul style="list-style-type: none"> • Monitored start • 3SK1111 Standard relay • Sensor: 1 NC contact 				
	Slide switch				
	<table border="1"> <thead> <tr> <th>Auto</th> <th>Monitored</th> </tr> </thead> <tbody> <tr> <td>—</td> <td>ON Bottom</td> </tr> </tbody> </table>	Auto	Monitored	—	ON Bottom
	Auto	Monitored			
	—	ON Bottom			
Up to PL in accordance with ISO 13849-1	c				
Up to Safety Integrity Level (SILCL) to IEC 62061	1				

* For 3SK1111-.AB30 basic unit only

14.3 Typical circuits

Table 14-2 Typical circuit 2:
Single-channel, with monitored start

	<ul style="list-style-type: none"> • Monitored start • 3SK1111-.AB30 Standard relay • Sensor: 1 NC contact 	
	Slide switch	
	Auto	Monitored
	—	ON Bottom
	Up to PL in accordance with ISO 13849-1	c
Up to Safety Integrity Level (SILCL) to IEC 62061	1	

Table 14-3 Typical circuit 3:
single-channel, with autostart

	<ul style="list-style-type: none"> • Autostart • 3SK1111 Standard relay • Sensor: 1 NC contact 	
	Slide switch	
	Auto	Monitored
	ON Top	—
	Up to PL in accordance with ISO 13849-1	c
Up to Safety Integrity Level (SILCL) to IEC 62061	1	

* For 3SK1111-.AB30 basic unit only

Table 14-4 Typical circuit 4:
single-channel, with autostart

	<ul style="list-style-type: none"> Autostart 3SK1111-.AB30 Standard relay Sensor: 1 NC contact 	
	Slide switch	
	Auto	Monitored
	ON Top	—
	Up to PL in accordance with ISO 13849-1	c
Up to Safety Integrity Level (SILCL) to IEC 62061	1	

Table 14-5 Typical circuit 5:
2-channel EMERGENCY STOP, with cross-circuit detection, with monitored start

	<ul style="list-style-type: none"> Monitored start With cross-circuit detection Sensor: 2 NC contacts 3SK1111 Standard relay 	
	Slide switch	
	Auto	Monitored
	—	ON Bottom
	Up to PL in accordance with ISO 13849-1	e
Up to Safety Integrity Level (SILCL) to IEC 62061	3	

* For 3SK1111-.AB30 basic unit only

14.3 Typical circuits

When connecting magnetically operated switches as sensors, observe the information in chapter Use of magnetically operated switches (Page 52).

Table 14-6 Typical circuit 6:
Two-channel, with cross-circuit detection, with autostart

<ul style="list-style-type: none"> • Autostart • With cross-circuit detection • Sensor: 2 NC contacts • 3SK1111 Standard relay 	
Slide switch	
Auto	Monitored
ON Top	—
Up to PL in accordance with ISO 13849-1	e
Up to Safety Integrity Level (SILCL) to IEC 62061	3

* For 3SK1111-.AB30 basic unit only

Table 14-7 Typical circuit 7:
Sensors with solid-state outputs, without cross-circuit detection, with autostart

	<ul style="list-style-type: none"> • Autostart • Without cross-circuit detection • Sensor: 2-channel non-floating • 3SK1111-.AB30 Standard relay 							
	Slide switch							
	<table border="1"> <thead> <tr> <th>Auto</th> <th>Monitored</th> </tr> </thead> <tbody> <tr> <td>ON</td> <td>—</td> </tr> <tr> <td>Top</td> <td>—</td> </tr> </tbody> </table>	Auto	Monitored	ON	—	Top	—	
	Auto	Monitored						
ON	—							
Top	—							
Up to PL in accordance with ISO 13849-1	e							
Up to Safety Integrity Level (SILCL) to IEC 62061	3							

Typical circuits for 3SK1 Standard solid-state basic units or 3SK1 Advanced basic units

Table 14-8 Typical circuit 8: EMERGENCY STOP two-channel, with cross-circuit detection, with monitored start

DIP switch			
1	2	3	4
ON Right	ON Right	ON Right	—
Up to PL in accordance with ISO 13849-1			e
Up to Safety Integrity Level (SILCL) to IEC 62061			3

Table 14-9 Typical circuit 9: Two-channel, with cross-circuit detection, with autostart

DIP switch			
1	2	3	4
OFF Left	ON Right	ON Right	—
Up to PL in accordance with ISO 13849-1			e
Up to Safety Integrity Level (SILCL) to IEC 62061			3

Table 14-10 Typical circuit 10:
Electronic sensor, 2-channel, without cross-circuit detection, with monitored start

	<ul style="list-style-type: none"> • Monitored start • Without cross-circuit detection • 1 x two-channel • Sensor: 2-channel non-floating • 3SK1112 Standard solid-state and 3SK112 / 3SK122 Advanced 			
	DIP switch			
	1	2	3	4
	ON Right	OFF Left	ON Right	—
Up to PL in accordance with ISO 13849-1				e
Up to Safety Integrity Level (SILCL) to IEC 62061				3

Table 14-11 Typical circuit 11:
Electronic sensor, two-channel, without cross-circuit detection, with autostart

	<ul style="list-style-type: none"> • Autostart • Without cross-circuit detection • 1 x two-channel • Sensor: 2-channel non-floating • 3SK1112 Standard solid-state and 3SK112 / 3SK122 Advanced 			
	DIP switch			
	1	2	3	4
	OFF Left	OFF Left	ON Right	—
Up to PL in accordance with ISO 13849-1				e
Up to Safety Integrity Level (SILCL) to IEC 62061				3

Note

Single-channel connection

If only one single-channel sensor is used, the other sensor circuit must be jumpered.

Table 14-12 Typical circuit 12: 2 x single-channel, without cross-circuit detection, with monitored start

DIP switch			
1	2	3	4
ON Right	OFF Left	OFF Left	—
Up to PL in accordance with ISO 13849-1			c
Up to Safety Integrity Level (SILCL) to IEC 62061			1

Table 14-13 Typical circuit 13: 2 x single-channel, without cross-circuit detection, with autostart

	<ul style="list-style-type: none"> • Autostart • Without cross-circuit detection • 2 x single-channel • Sensor: 2 x single-channel NC • 3SK1112 Standard solid-state and 3SK112 / 3SK122 Advanced 												
	<p>DIP switch</p>												
	<table border="1"> <thead> <tr> <th>1</th> <th>2</th> <th>3</th> <th>4</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>—</td> </tr> <tr> <td>Left</td> <td>Left</td> <td>Left</td> <td></td> </tr> </tbody> </table>	1	2	3	4	OFF	OFF	OFF	—	Left	Left	Left	
	1	2	3	4									
OFF	OFF	OFF	—										
Left	Left	Left											
<table border="1"> <tbody> <tr> <td>Up to PL in accordance with ISO 13849-1</td> <td>c</td> </tr> <tr> <td>Up to Safety Integrity Level (SILCL) to IEC 62061</td> <td>1</td> </tr> </tbody> </table>	Up to PL in accordance with ISO 13849-1	c	Up to Safety Integrity Level (SILCL) to IEC 62061	1									
Up to PL in accordance with ISO 13849-1	c												
Up to Safety Integrity Level (SILCL) to IEC 62061	1												

Also possible: 2 x single-channel with T1-IN1, T2-IN2 and DIP switch 2 cross-circuit detection to ON.

Typical circuits for 3SK1 Advanced basic units only


Table 14-14 Typical circuit 14:
1NC/1NO sensor, with cross-circuit detection, with monitored start

<ul style="list-style-type: none"> • Monitored start • With cross-circuit detection • 1 x two-channel • Jumper T1/PAR for NC/NO evaluation • Sensor: NC/NO sensor • 3SK112 / 3SK122 Advanced 			
DIP switch			
1	2	3	4
ON Right	ON Right	ON Right	—
Up to PL in accordance with ISO 13849-1			e
Up to Safety Integrity Level (SILCL) to IEC 61508			3

Table 14-15 Typical circuit 15:
1NC/1NO sensor, with cross-circuit detection, with autostart

<ul style="list-style-type: none"> • Autostart • With cross-circuit detection • 1 x two-channel • Jumper T1/PAR for NC/NO evaluation • Sensor: NC/NO sensor • 3SK112 / 3SK122 Advanced 			
DIP switch			
1	2	3	4
OFF Left	ON Right	ON Right	—
PL in accordance with ISO 13849-1			e
Safety Integrity Level (SILCL) to IEC 61508			3

Table 14-16 Typical circuit 16:
Two-hand operation with cross-circuit detection, with autostart

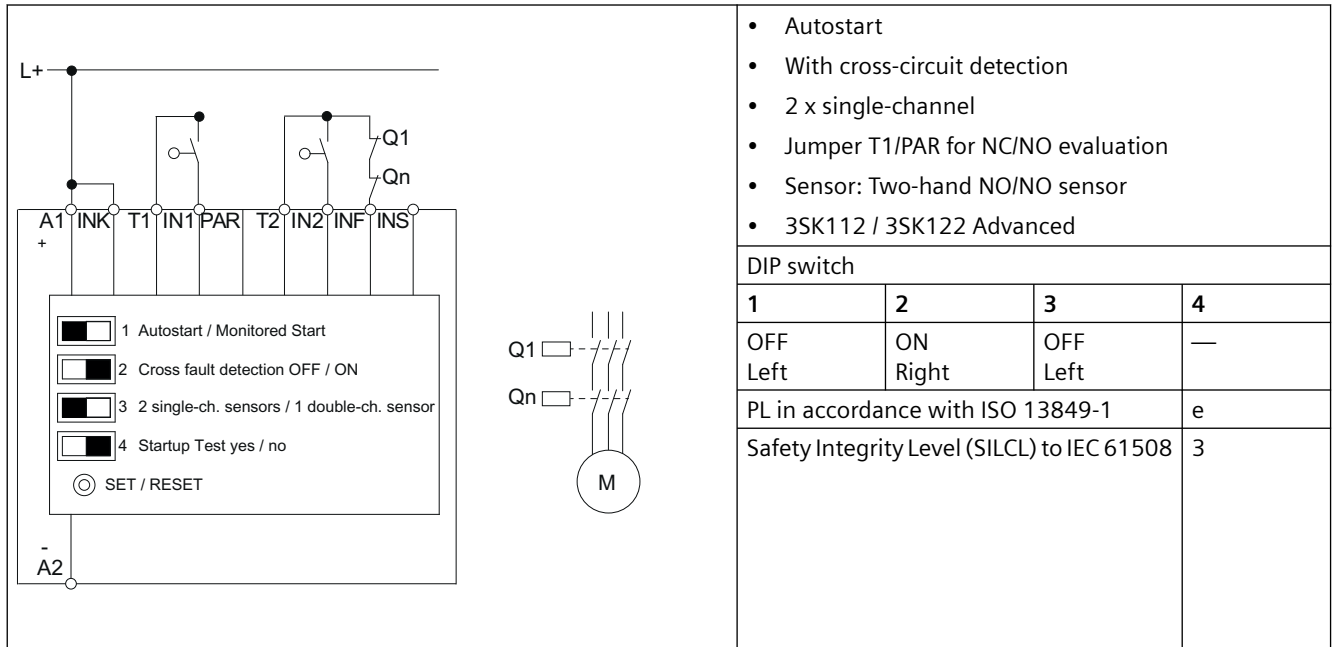

You can find further information on two-hand operation in chapter Two-hand operation/ synchronism (Page 47).

Further information:

- SIRIUS Safety Integrated application manual (<https://support.industry.siemens.com/cs/ww/en/view/81366718>)
- FAQs on 3SK1 (<https://support.industry.siemens.com/cs/ww/en/ps/16382/faq>)

14.4 Typical circuits of 3SK1 safety relays with 3RM1 Failsafe motor starters

14.4.1 3SK1 safety relay with 3RM1 Failsafe motor starter via device connector

The 3RM13 Failsafe motor starter (24 V DC variant) is connected to a 3SK112 safety relay via a 3ZY12 device connector.

The two directions of rotation are switched on and off operationally via IN1 and IN2, e.g. with a PLC.

The control supply voltage (L+ and L-) to the motor starters is deactivated by the 3SK1 12 safety relay and the system is in a safe state.

Note

SILCL 3 in accordance with EN 62061/PL e in accordance with EN ISO 13849-1

A safety-related application up to SILCL 3 to EN 62061, PL e/Cat. 4 to EN ISO 13849-1 can be realized in this way.

To achieve SILCL 3/PL e/Cat. 4 for the safety-related application, all components of the safety functions (detecting/evaluating/reacting) must be designed accordingly.


 WARNING

Bypassing the safety function when using device connectors

When operating with a 3SK112 safety relay and a device connector, the supply voltage for 3RM1 Failsafe motor starters is established via the device connectors.

In this case, do not connect anything to terminals A1 and A2 of the 3RM1 Failsafe motor starters in order to prevent bypassing of the safety function.
--

14.4 Typical circuits of 3SK1 safety relays with 3RM1 Failsafe motor starters

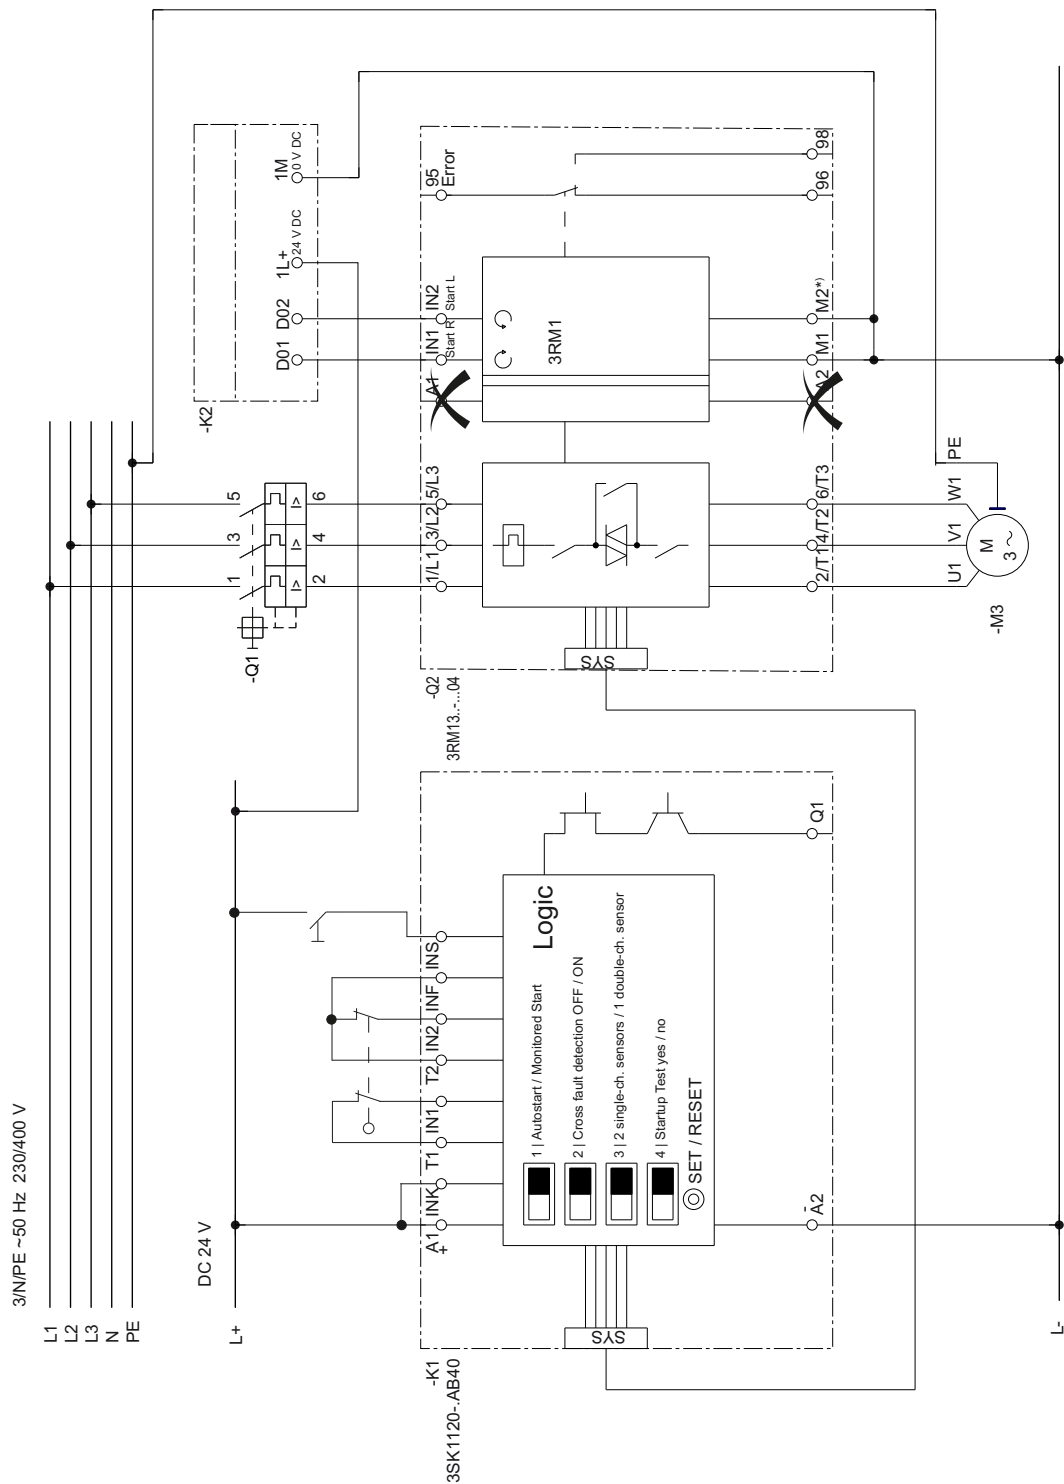

- * If there is a common reference potential for the two inputs, it suffices to establish a ground connection.
- If there are separate potentials or controls, both connections must be assigned.

14.4.2 3SK1 safety relay wired with 3RM1 Failsafe motor starter

The 3RM13 Failsafe motor starter (230 V supply voltage) is connected to a 3SK1 safety relay.

The two directions of rotation are switched on and off operationally via IN1 and IN2, e.g. with separate switches.



WARNING

Bypassing the safety function in the event of a fault with 3RM11/3RM13 Failsafe motor starters with 110 to 230 V AC/110 V DC control supply voltage

The control signal for the control inputs in the case of 3RM11/3RM13 Failsafe motor starters with 110 to 230 V AC control supply voltage must come from A1. Otherwise, the safety function is bypassed in the event of a fault. Thus, only relay outputs are admissible when using a PLC.

Do not use a separate control voltage. Only use the relay outputs when using a PLC.

The control supply voltage (L1 and N) to the motor starters is deactivated by the 3SK1 safety relay and the system is in a safe state.

Note

SILCL 3 in accordance with EN 62061, PL e/Cat. 4 in accordance with EN ISO 13849-1

A safety-related application up to SILCL 3 to EN 62061, PL e/Cat. 4 to EN ISO 13849-1 can be realized in this way.

To achieve SILCL 3/PL e/Cat. 4 for the safety-related application, all components of the safety functions (detecting/evaluating/reacting) must be designed accordingly.

Note

A fuse must be fitted as short-circuit protection (4 A gL/gG) in the supply line to the supply voltage of 3RM1 (L1).

14.4 Typical circuits of 3SK1 safety relays with 3RM1 Failsafe motor starters

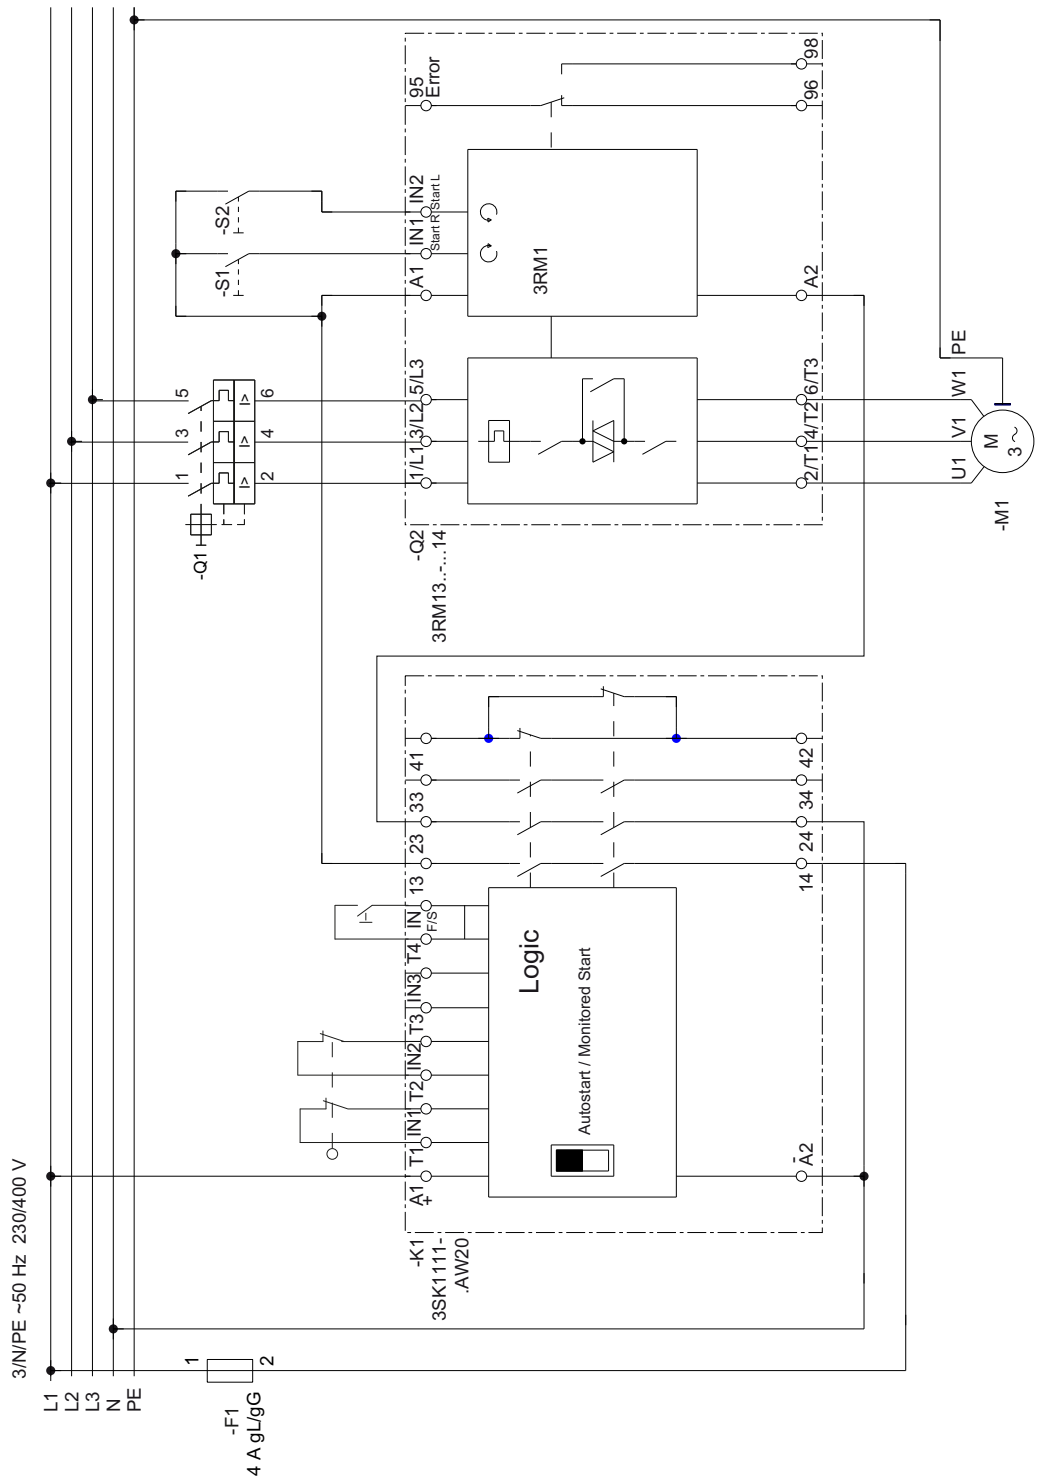


Figure 14-1 3SK1 safety relay with 3RM13 reversing starter

14.5 Additional applications

You can find additional applications in the SIRIUS Safety Integrated application manual on the internet (<https://support.industry.siemens.com/cs/document/83150405?lc=en-WW>).

Accessories

The following accessories are available for the 3SK1 safety relay system.

Designation	Article number
SIRIUS terminal, 2-pole, screw-type, 1 x 2.5 mm ²	3ZY1121-1BA00
SIRIUS terminal, 3-pole, screw-type, 1 x 2.5 mm ²	3ZY1131-1BA00
SIRIUS spring-loaded terminal (push-in), 2-pole 1 x 2.5 mm ²	3ZY1121-2BA00
SIRIUS spring-loaded terminal (push-in), 3-pole 1 x 2.5 mm ²	3ZY1131-2BA00
SIRIUS device connector for 3SK1 / 3RQ1 safety relay, 17.5 mm wide	3ZY1212-1BA00
SIRIUS device connector for 3RQ1 safety relay, 17.5 mm wide	3ZY1212-1DA00
SIRIUS device connector for 3SK1 / 3RQ1 safety relay, 22.5 mm wide	3ZY1212-2BA00
SIRIUS device termination connector for 3SK1 / 3RQ1 safety relay, 22.5 mm wide	3ZY1212-2DA00
SIRIUS device connector for 3RM1 motor starters, 22.5 mm wide	3ZY1212-2EA00
SIRIUS device termination connector for 3RM1 motor starters, 22.5 mm wide	3ZY1212-2FA00
SIRIUS device termination connector set for 3SK1 safety relay, ≥ 45 mm wide	3ZY1212-0FA01
SIRIUS device connector for looping through signals, 22.5 mm wide (for 3RM1 motor starters)	3ZY1212-2AB00
SIRIUS device connector without a function, 22.5 mm wide	3ZY1210-2AA00
SIRIUS push-in lugs for wall mounting (Contents: 12 units)	3ZY1311-0AA00
SIRIUS sealable cover, 17.5 mm	3ZY1321-1AA00
SIRIUS sealable cover, 22.5 mm	3ZY1321-2AA00
Coding pins for SIRIUS terminals	3ZY1440-1AA00
Sealable membrane 22.5 mm 1 pack = 12 membranes	3TK2820-0AA00
SIRIUS device identification label 17 sheets of 48 labels; size 10 x 7 mm	3RT2900-1SB10
SIRIUS device identification label 17 sheets of 20 labels; size 20 x 7 mm	3RT2900-1SB20
SIRIUS device identification label 10 sheets of 306 adhesive labels; size 19 x 6 mm	3RT2900-1SB60

Use of removable terminals for 3SK1

The following removable terminals are available for safety relays for the prewiring of terminals in the control cabinet or for terminal replacement:

3SK1 safety relays	Screw terminals		
	2-pin	3-pin	2-pin
	3ZY1121-1BA00	3ZY1131-1BA00	3ZY1122-1BA00
3SK1 Advanced basic units			
3SK1111	---	✓	---
3SK1112	✓	---	---
3SK1120	---	✓	---
3SK1121	---	✓	---
3SK1122	✓ bottom	✓ top	---
Output expansions			
3SK1211	✓	---	---
3SK1213	---	---	---
3RQ1	---	---	✓
Input expansions			
3SK1220	---	✓ top	---
3SK1230	✓ bottom	---	---

3SK1 safety relays	Spring-type terminals (push-in)		
	2-pin	3-pin	2-pin
	3ZY1121-2BA00	3ZY1131-2BA00	3ZY1122-2BA00
3SK1 Advanced basic units			
3SK1111	---	✓	---
3SK1112	✓	---	---
3SK1120	---	✓	---
3SK1121	---	✓	---
3SK1122	✓ bottom	✓ top	---
Output expansions			
3SK1211	✓	---	---
3SK1213	---	---	---
3RQ1	---	---	✓
Input expansions			
3SK1220	---	✓ top	---
3SK1230	✓ bottom	---	---

Index

F

FAQs, 19

R

References, 19

