

Process Control System PCS 7 Maintenance Station

Function Manual

Security information

1

Preface

2

Using the Maintenance
Station

3

Additional documentation

4

Configuring the maintenance
stations

5

Operator control and
monitoring

6

Integration of options

7

Valid for PCS 7 V8.2 or higher (MS Basic/MS Standard)
Valid for SIMATIC PDM MS V2.0 or higher

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

DANGER

indicates that death or severe personal injury **will** result if proper precautions are not taken.

WARNING

indicates that death or severe personal injury **may** result if proper precautions are not taken.

CAUTION

indicates that minor personal injury can result if proper precautions are not taken.

NOTICE

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

WARNING

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Table of contents

1	Security information.....	7
2	Preface.....	9
3	Using the Maintenance Station.....	13
3.1	Application, version and configuration.....	13
3.2	Components with diagnostics capability.....	16
3.3	MS single station system.....	21
3.4	MS multiple station system.....	22
3.5	SIMATIC PDM MS.....	25
4	Additional documentation.....	29
5	Configuring the maintenance stations.....	31
5.1	MS single station system overview.....	31
5.2	MS multiple station system overview.....	32
5.2.1	MS Server overview.....	32
5.2.2	Redundant MS server overview.....	32
5.2.3	MS client or OS/MS client overview.....	33
5.3	Overview of SIMATIC PDM MS.....	33
5.4	General settings in the multiproject/project.....	34
5.5	Configuring the PC station for MS single station system.....	35
5.6	Configuring of PC stations for MS multiple station system.....	36
5.6.1	How to configure a PC station for an engineering station.....	36
5.6.2	How to configure a PC station for an MS server.....	37
5.6.3	How to configure a PC station for the redundant partner.....	38
5.6.4	How to configure a PC station for an MS or OS/MS Client.....	39
5.7	Configuring the PC station for SIMATIC PDM MS.....	40
5.8	Configuring an IE/PB Link PN IO.....	42
5.9	Configuring the monitoring of industrial PCs and network objects.....	44
5.9.1	Requirements.....	44
5.9.2	Device profiles and community.....	45
5.9.3	How to assign components with SNMP functionality to the OPC server.....	46
5.9.4	How to insert the OPC server into the redundant partner.....	48
5.9.5	How to transfer the OPC configuration to the WinCC project.....	49
5.10	Creation of the diagnostics structure.....	49
5.10.1	Information on diagnostics structure and plant hierarchy.....	49
5.10.2	How to make the settings in the plant hierarchy.....	50
5.10.3	Relationship between the diagnostic structure and version.....	52
5.11	Advanced diagnostics settings.....	54

5.11.1	"Maintenance functions" tab.....	54
5.11.1.1	Configuring maintenance links.....	54
5.11.1.2	Configuring maintenance targets for individual export.....	56
5.11.1.3	Configuring maintenance actions.....	58
5.11.1.4	Configuring maintenance information.....	61
5.11.1.5	Configuring multilingual texts.....	63
5.11.2	"Other settings" tab.....	64
5.11.2.1	Automatic positioning of block icons in the areas.....	64
5.11.2.2	Storage location for the files of the (filtered) total export.....	66
5.11.2.3	Navigation information in the screen.....	67
5.12	Configuring the display of maintenance information.....	68
5.13	Configuring the user diagnostics.....	69
5.13.1	Overview.....	69
5.13.2	How to create the user diagnostic structure.....	71
5.13.3	How to create a CFC chart and insert an AssetM block.....	72
5.13.4	Assigning parameters for the AssetM block.....	73
5.13.5	How to update the user diagnostic structure.....	74
5.13.6	How to Create User Diagnostic Screens.....	74
5.13.7	How to create the group display hierarchy for the user diagnostics.....	75
5.14	Setting up SIMATIC PDM.....	76
5.15	Overview of complete export.....	76
5.16	Overview of individual export.....	77
5.17	Engineering for maintenance.....	78
5.17.1	Engineering for release request.....	78
5.17.2	Engineering for maintenance release.....	79
5.18	Creating/updating the diagnostic screens.....	80
5.19	Compiling and downloading.....	82
5.19.1	Compilation and downloading of the Maintenance Station.....	82
5.19.2	Compiling and downloading SIMATIC PDM MS.....	82
5.20	Server data and downloading of a client.....	83
5.21	Changes in the project.....	84
5.22	Deleting the diagnostics area.....	86
6	Operator control and monitoring.....	89
6.1	Starting the process control.....	89
6.2	Layout of the user interface.....	90
6.2.1	Overview area.....	91
6.2.2	Button area.....	94
6.2.3	Working area.....	94
6.3	Overview screen.....	95
6.4	Functions in the overview screen.....	97
6.4.1	Overview.....	97
6.4.2	Calling web pages via maintenance links.....	97
6.4.3	Complete export.....	98
6.4.4	Filtering the data of the complete export.....	99

6.4.5	How to filter and export the data of the complete export.....	100
6.4.6	Message correction for components with SNMP functionality.....	101
6.4.7	Parameter data export of EDD-based devices.....	102
6.4.8	Parameter data export via operator input in the faceplate.....	103
6.4.8.1	Opening the faceplate.....	103
6.4.8.2	Faceplate.....	104
6.4.8.3	How to start the offline/online parameter data export.....	108
6.4.8.4	How to cancel the offline/online parameter data export.....	108
6.4.8.5	How to start the automatic synchronization.....	109
6.4.8.6	How to end the automatic synchronization.....	109
6.4.9	Parameter data export via OPC access.....	110
6.4.9.1	Tags for OPC access.....	110
6.4.9.2	How to start the offline/online parameter data export (OPC).....	115
6.4.9.3	How to cancel the offline/online parameter data export (OPC).....	115
6.4.9.4	How to start the automatic synchronization (OPC).....	116
6.4.9.5	How to end the automatic synchronization (OPC).....	116
6.4.9.6	How to start the parameter data export for a selected device (OPC).....	116
6.5	Area overview screens.....	117
6.6	Representation of the components.....	118
6.7	Block icon.....	119
6.8	Block icon for redundant components.....	122
6.9	Maintenance status and maintenance group display.....	123
6.10	Maintenance status of redundant components.....	126
6.11	Faceplate.....	131
6.11.1	Faceplate display.....	131
6.11.2	Screen window title and header.....	132
6.11.2.1	Displays and operator controls.....	132
6.11.2.2	How to lock and unlock messages.....	137
6.11.2.3	How to depassivate modules or channels.....	138
6.11.2.4	How to open websites via maintenance links.....	139
6.11.2.5	How to open the online view of HW Config.....	139
6.11.2.6	How to open the configuration interface of SIMATIC PDM.....	140
6.11.2.7	How to call up the Web interface of a network component.....	141
6.11.2.8	How to call the Diagnostics Monitor diagnostic tool.....	142
6.11.3	Views.....	143
6.11.3.1	"Ident" view.....	143
6.11.3.2	"Messages" view.....	145
6.11.3.3	"Maintenance" view.....	146
6.11.3.4	"Note" view.....	150
6.11.3.5	"Diagnostics" view for PC objects.....	152
6.11.3.6	"Connection display" view for client components.....	154
6.11.3.7	"Connection display" view for server components.....	156
6.11.3.8	"Diagnostics" view for AS objects.....	158
6.11.3.9	"Performance" view for AS objects.....	161
6.11.3.10	"OBx..." view for AS objects.....	163
6.11.3.11	"Parameters" view for AS objects.....	165
6.11.3.12	"Connection load display" for CPU connections.....	167
6.11.3.13	"Diagnostic buffer" view for CPU and CP.....	170
6.11.3.14	"LED display" view for CPU.....	171

6.11.3.15	"Diagnostics" view for field devices.....	172
6.11.3.16	"Parameters" view for field devices.....	174
6.11.3.17	"External diagnostics" view.....	175
6.11.3.18	"Diagnostics" view for user objects.....	176
6.11.3.19	"Monitoring" view for user objects.....	178
6.11.3.20	Error texts for field devices/user objects.....	180
6.11.4	Display of faceplate for redundant components.....	182
6.12	Origin of the identification data.....	183
6.12.1	Identification data for IPCs.....	183
6.12.2	Identification data for PCs.....	184
6.12.3	Identification data for network objects.....	184
6.12.4	Identification data for AS objects.....	185
6.12.5	Identification data for devices that are integrated using a device description (EDD).....	186
6.12.6	Identification data for objects in the user area.....	189
6.13	Overview of maintenance.....	189
6.13.1	Introduction and status diagram.....	189
6.13.2	Sequence for maintenance.....	191
6.14	Passivating PC objects.....	194
7	Integration of options.....	195
7.1	Integration by the Alarm Control Center.....	195
7.1.1	Application of the "Alarm Control Center".....	195
	Index.....	197

Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, solutions, machines, equipment and/or networks. They are important components in a holistic industrial security concept. With this in mind, Siemens' products and solutions undergo continuous development. Siemens recommends strongly that you regularly check for product updates.

For the secure operation of Siemens products and solutions, it is necessary to take suitable preventive action (e.g. cell protection concept) and integrate each component into a holistic, state-of-the-art industrial security concept. Third-party products that may be in use should also be considered. For more information about industrial security, visit <http://www.siemens.com/industrialsecurity>

To stay informed about product updates as they occur, sign up for a product-specific newsletter. For more information, visit <http://support.automation.siemens.com>.

Preface

2

Purpose of this documentation

This documentation informs you about the software components, areas of application, configuration options and commissioning of Maintenance Station for SIMATIC PCS 7.

It answers the following key questions:

- What is the Maintenance Station?
- What software components belong to the Maintenance Station?
- What hardware and software requirements apply and which licenses are required for installation?
- What are the intended areas of application for the Maintenance Station?
- How is diagnostics performed with the Maintenance Station?

Options for accessing PCS 7 documentation

The documentation required for PCS 7 includes the following types:

- **PCS 7 Readme**

The readme file is available in two versions:

- **PCS 7 Readme (offline)**

This version is installed by PCS 7 Setup. The file only contains general information and links to documents on the Internet.

- **PCS 7 Readme (online)**

This is the version which contains all information on the installation and use of PCS 7 in the format you are already familiar with. The file is only available on the Internet so that we can keep it up to date.

Note

The information provided in the *PCS 7 Readme* (online) on the Internet takes precedence over **all** other PCS 7 documentation.

Please read this *PCS 7 Readme* carefully; it contains important information and amendments on PCS 7.

- **PCS 7 System Documentation**

System documentation includes documents that cover several products, such as configuration manuals and Getting Started manuals. This documentation serves as a guideline for the overall system and explains the interaction between the individual hardware and software components.

Read the information on "PCS 7 Documentation Portal Setup" in the product overview *Process Control System PCS 7; PCS 7 Documentation*, section "Options for accessing the documentation".

- **PCS 7 Product Documentation**

Product documentation contains information about specific hardware and software components. The individual documents provide detailed information on the specific component.

Full versions of the documentation are available from the "Technical Documentation SIMATIC PCS 7" website:

[www.siemens.de/pcs7-dokumentation \(<http://www.siemens.com/pcs7-documentation>\)](http://www.siemens.com/pcs7-documentation)

You can find additional information in the product overview *Process Control System PCS 7; PCS 7 Documentation*, section "Options for accessing the documentation".

Required basic knowledge

This documentation is aimed at anyone who is involved in configuring, commissioning and operating automated systems based on SIMATIC PCS 7.

A certain amount of basic knowledge is assumed and readers are expected to know how to use a PC/PG and the Windows operating system in general. You should be familiar with the SIMATIC PCS 7 functions and configurations.

This manual assumes that users are familiar with the following knowledge from the specified manuals:

- *Process Control System PCS 7; Engineering System*
- *Process Control System PCS 7; Operator Station*
- *Process Control System PCS 7; OS Process Control*

Conventions

In this documentation, the names of elements in the software interface are specified in the language of this documentation. If you have installed a multi-language package for the operating system, some of the designations will be displayed in the base language of the operating system after a language switch and will, therefore, differ from the designations used in the documentation.

Using the Maintenance Station

3.1 Application, version and configuration

Application

Maintenance station focuses on "Plant Asset Management" and enables preventive and predictive diagnostics and maintenance of the plant.

In parallel with process control, the maintenance station makes available consistent maintenance information and functions for the system components (assets).

While the plant operator receives all process-relevant information and can intervene selectively in the process via the operator system (OS), the maintenance engineer inspects the automation system hardware and processes the associated diagnostic messages and maintenance demands via the maintenance station.

The basis for a maintenance station is always an OS that provides this maintenance functionality.

The OS that has maintenance functionality and the mode in which the maintenance station that is operated is determined in the plant hierarchy of the SIMATIC Manager.

You can find basic information on engineering, configuration and process control in the following documentation:

- *Process Control System PCS 7; Engineering System*
- *Process Control System PCS 7; Operator Station*
- *Online help for WinCC*

Versions

The maintenance station can be used in the following versions:

- Maintenance Station Basic (integrated in the PCS 7 project)
 - Is referred to as MS Basic in the document
- Maintenance Station Standard (integrated in the PCS 7 project)
 - Is referred to as MS Standard in the document
- SIMATIC PDM Maintenance Station (stand-alone project)
 - Referred to as SIMATIC PDM MS in the document

Note

If you are running a maintenance station in the plant, the sign-of-life monitoring with "Lifebeat Monitoring" must be disabled.

Differences between the versions

The following table shows differences.

	MS Basic	MS Standard	SIMATIC PDM MS
Information displayed	<ul style="list-style-type: none"> ● Overview screen ● Area overview screen <ul style="list-style-type: none"> – AS/system – Network objects – PC stations ● Status information of the individual components 	<ul style="list-style-type: none"> ● Overview screen ● Area overview screen <ul style="list-style-type: none"> – AS/system – Field devices – Network objects (optional) – PC stations (optional) ● Status information of the individual components ● Detailed information on individual components ● Hierarchical picture structure ● Global functions ● Component-specific functions 	<ul style="list-style-type: none"> ● Overview screen ● Area overview screen <ul style="list-style-type: none"> – Field devices – Network objects (optional) – PC stations (optional) ● Status information of the individual components ● Detailed information on individual components ● Hierarchical picture structure ● Global functions ● Component-specific functions
Generation of the diagnostics structure	Automatic generation from the SIMATIC PCS 7 hardware project	Automatic generation from the SIMATIC PDM stand-alone project (network view)	
Setup of the diagnostics structure	<ul style="list-style-type: none"> ● Area overview screen <ul style="list-style-type: none"> – AS/system – Network objects – PC stations ● Symbolic representation of the components with diagnostic status ● No hierarchical picture structure ● No calling of faceplates 	<ul style="list-style-type: none"> ● Area overview screen <ul style="list-style-type: none"> – User objects – AS/system – Field devices – Network objects – PC stations ● Symbolic representation of the components with diagnostic status ● Hierarchical screen structure for AS/system components ● Hierarchical screen structure for field components ● Hierarchical picture structure for user components ● Calling of faceplates 	<ul style="list-style-type: none"> ● Area overview screen <ul style="list-style-type: none"> – Field devices – Network objects (optional) – PC stations (optional) ● Symbolic representation of the components with diagnostic status ● Hierarchical picture structure for field bus components with connected field components ● Calling of faceplates
Message assignment	Area by area	Component by component	
Diagnostics update	<ul style="list-style-type: none"> ● Cyclically by the system ● Event-driven 	<ul style="list-style-type: none"> ● Cyclically by the system ● Event-driven ● Manual ● Cyclic polling 	<ul style="list-style-type: none"> ● Manual ● Cyclic polling

	MS Basic	MS Standard	SIMATIC PDM MS				
Detailed information (1)	Not available	<ul style="list-style-type: none"> • Electronic rating plate (identification data) • Component-related messages • Detailed information in accordance with SNMP profile • Component status in accordance with EDD information (3) • Detailed information in accordance with EDD information • User notes • Redundancy status • CPU utilization/ cycle utilization • Calling device-specific condition monitoring functions (e.g. Diagnostics Monitor) 	<ul style="list-style-type: none"> • Electronic rating plate (identification data) • Component-related messages • Detailed information in accordance with SNMP profile (optional) • Component status in accordance with EDD information • Detailed information in accordance with EDD information • User notes • Calling device-specific condition monitoring functions e.g. Diagnostics Monitor (optional) 				
Components with diagnostics capability	You can find additional information about this in the section "Components with diagnostics capability (Page 16)".						
Global functions	Not available	<ul style="list-style-type: none"> • Complete export of electronic rating plate including maintenance status of all components • Filter functions in relation to the component state • Filter functions in relation to contents of the electronic rating plate • Exporting data of individual components • Manual change of the maintenance status of a component • Use of standard functions of the PCS 7 Operator Station, e.g. report generation in process control 					
Component-specific functions (2)	Not available	<table border="1"> <tr> <td>Calling HW Config online</td> <td>Not available</td> </tr> <tr> <td>Call</td> <td> <ul style="list-style-type: none"> • Component-specific Web portals • Web portals configured in Engineering • SIMATIC PDM for EDD-based components • Diagnostics Monitor for IPC objects </td> </tr> </table>	Calling HW Config online	Not available	Call	<ul style="list-style-type: none"> • Component-specific Web portals • Web portals configured in Engineering • SIMATIC PDM for EDD-based components • Diagnostics Monitor for IPC objects 	
Calling HW Config online	Not available						
Call	<ul style="list-style-type: none"> • Component-specific Web portals • Web portals configured in Engineering • SIMATIC PDM for EDD-based components • Diagnostics Monitor for IPC objects 						
Licenses	Not required	Quantity and function-dependent					

(1) Dependent on component used

(2) Dependent on component type used and use of an MS Client in the multiple-station system.

(3) Electronic Device Description

In the rest of the documentation, any differences are pointed out.

Configuration

The MS Basic and MS Standard versions of the maintenance station can be configured as MS single-station system or as MS multiple-station system.

You can find more information on this in the sections "MS single station system (Page 21)" and "MS multiple station system (Page 22)".

SIMATIC PDM MS can only be configured as an MS single-station system.

You can find additional information about this in the section "SIMATIC PDM MS (Page 25)".

Operating and monitoring on a PCS 7 Web client

You can use a PCS 7 Web client to operate and monitor an MS single-station system and MS multiple-station system. Any existing limitations are described in the respective sections of the manual.

Note

This function is not available for SIMATIC PDM MS.

3.2 Components with diagnostics capability

Which components can be monitored?

The components with diagnostics capability are displayed in the process control in the areas subordinate to the diagnostics area.

The table shows an example of which components can be monitored and in which areas the components are displayed.

Diagnostics for ...	Area	MS Basic	MS Standard	SIMATIC PDM MS
<ul style="list-style-type: none">• Siemens industrial PC, for example<ul style="list-style-type: none">– Operator stations– BATCH stations– Route Control stations– Process Historian– SIMATIC PCS 7 BOX• Premium Server for SIMATIC PCS 7/PCs from third party	PC stations		X	-
<ul style="list-style-type: none">• Switches, e.g. SCALANCE• OSM• ESM• Other components that support SNMP services<ul style="list-style-type: none">– e.g. printers, bridges, routers	Network objects			

Diagnostics for ...	Area	MS Basic	MS Standard	SIMATIC PDM MS
<ul style="list-style-type: none"> • CPU • CP • SIMATIC PCS 7 BOX • Interface module (IM) of the ET 200 families (ET 200M, ET 200S, ET 200SP, ET 200iSP, ET 200pro) • Link modules (DP/PA-Link, Y-Link, FF Link, Compact FF Link) 	AS/system		X	-
<ul style="list-style-type: none"> • Interface module (IM) of the ET 200 families • Input and output modules of the ET 200 families • Failsafe modules • Link modules • PROFIBUS devices • PROFINET devices • Field devices (HART, PROFIBUS PA, ...) • Non-transparent couplers with diagnostics capability • Diagnostic repeaters 	Field devices	-	X	-
<ul style="list-style-type: none"> • EDD objects can be detected by SIMATIC PDM • Field devices (HART, PROFIBUS PA, ...) • Interface modules (IM) of the ET 200 families • Input and output modules of the ET 200 families • Link modules • Non-transparent couplers with diagnostics capability • Station objects (gateways) 	Field devices		-	X
• User objects for which a diagnostics can be generated by an application	User objects	-	X	-

What is monitored in the PC stations area?

Monitored components	Constraints and displayed information
Siemens Industrial PC (IPC) with Diagnostics Monitor diagnostics program configured for the IPC (ES, server, client, other computers) and available via SNMP	<ul style="list-style-type: none">Monitoring for failureFan speed with limit valuesHard disk utilization with CCPerfmon limit valuesRedundant power supplyTemperature, CPU, Board, etc.Failure of a hard disk using RAID1Failure of a connectionOS deactivatedTerminal adapter failureWatchdogRevision alarm
Third-party PC via SNMP Premium Server for SIMATIC PCS 7 via SNMP	<ul style="list-style-type: none">Identification data according to the SNMP profile MIB-IIMonitoring for failure
Third-party PC without SNMP	<ul style="list-style-type: none">Identification data via WMI monitoring for failure

What is monitored in the network objects area?

Monitored components	Constraints and displayed information
SCALANCE X200, X300, X400, X500, W700; OSM/ESM	<ul style="list-style-type: none">Group fault for monitoring the power supply error (red. infeed)Port errorRing redundancy error <p>The monitoring functions must be enabled in the components.</p>
Third-party switch	<ul style="list-style-type: none">Monitoring for failure, with support of the SNMP profile MIB-II
Printer	<ul style="list-style-type: none">Monitoring for failure, with support of the SNMP profile MIB-II

What is monitored in the AS/system area?

Monitored components	Constraints and displayed information
SIMATIC S7-4xx series CPU	<ul style="list-style-type: none"> • Diagnostics information on CPU utilization • Utilization OB3x, OB8x and OB1 • Reduction ratio of the OB3x in cases of overload • Display of the electronic rating plate based on the PNO specification If data cannot be read from the components, the data (if existing) from the project is displayed. • Detailed error messages • Detailed maintenance status <p>The information is dependent on the firmware version of the CPU.</p>
SIMATIC PCS 7 CPUs, Interface modules (IM) of the ET 200 families and link modules	<ul style="list-style-type: none"> • Display of the electronic rating plate based on the PNO specification If data cannot be read from the components, the data (if existing) from the project is displayed. • Detailed error messages • Detailed maintenance status

What is monitored in the field objects area?

Monitored components	Constraints and displayed information
SIMATIC PCS 7 standard I/O	<ul style="list-style-type: none"> • Display of the electronic rating plate based on the PNO specification If data cannot be read from the components, the data (if existing) from the project is displayed. • Detailed error messages • Detailed maintenance status
PROFIBUS DP/PA field devices (integrated via EDD)	<ul style="list-style-type: none"> • Detailed device-specific/EDD-based diagnostics • Display of the electronic rating plate based on the PNO specification If data cannot be read from the components, the data (if existing) from the project is displayed. • Detailed error messages • Detailed maintenance status
FF field devices (integrated via EDD)	<ul style="list-style-type: none"> • Process access via APL channel blocks • Detailed device-specific/EDD-based diagnostics • Display of the electronic rating plate (I&M data) • Detailed error messages • Detailed maintenance status

3.2 Components with diagnostics capability

Monitored components	Constraints and displayed information
PROFIBUS DP/PA standard slaves (field devices integrated via GSD)	<ul style="list-style-type: none"> Failure monitoring Display of the electronic rating plate based on the PNO specification If data cannot be read from the components, the data (if existing) from the project is displayed. Maintenance status "Good" and "Maintenance alarm"
PROFINET standard slaves (field devices integrated using GSDML)	<ul style="list-style-type: none"> Failure monitoring Display of the electronic rating plate based on the PNO specification If data cannot be read from the components, the data (if existing) from the project is displayed. Maintenance status "Good" and "Maintenance alarm"
HART field devices (integrated via EDD into SIMATIC PCS 7 standard I/Os)	<ul style="list-style-type: none"> Detailed device-specific/EDD-based diagnostics Display of electronic rating plate (based on specification of HART Communication Fundation - HCF) Detailed error messages Detailed maintenance status
SIMATIC TIA objects	<ul style="list-style-type: none"> Failure monitoring Display of the electronic rating plate based on the PNO specification If data cannot be read from the components, the data (if existing) from the project is displayed. Maintenance status "Good" and "Maintenance alarm"
SIMATIC PCS 7 add-on objects (field devices integrated via EDD)	<ul style="list-style-type: none"> Detailed device-specific/EDD-based diagnostics Display of the electronic rating plate based on the PNO specification If data cannot be read from the components, the data (if existing) from the project is displayed. Detailed error messages Detailed maintenance status

What is monitored in the field devices area for SIMATIC PDM MS?

Monitored components	Constraints and displayed information
Field devices	<ul style="list-style-type: none"> PROFIBUS DP/PA field devices (integrated via EDD) PROFIBUS DP/PA Remote I/Os (integrated via EDD) Ethernet field devices (integrated via EDD) HART field devices (integrated via EDD) Wireless HART field devices (integrated via EDD) Modbus field devices (integrated via EDD)

What is monitored in the user objects area for MS Standard?

Monitored components	Constraints and displayed information
User objects	<ul style="list-style-type: none"> Not communicative accessible components Indirect diagnosed objects Results of state monitoring functions Components from the process device network view that are not configured in HW Config, e.g., wireless HART field devices

Where is the information displayed?

You can find information on the states of individual PCS 7 components with diagnostic capability on the maintenance station diagnostics screens.

The diagnostics screens only display data made available by the component or the project.

You can find information on the diagnostics screens in the section "Operator control and monitoring (Page 89)".

3.3 MS single station system

MS single-station system in the OS single-station system

The maintenance station is operated on the engineering station.

Plant configuration

The MS single-station system has the following functionalities:

- Operator station (OS)
- Engineering station (ES)
- Maintenance Station (MS)
- SIMATIC PDM


The complete operator control and monitoring functionality for a PCS 7 project (plant/unit) is located in one station. The OS areas and the "Diagnostics" area of the MS are displayed in the overview area of the process control.

The "Diagnostics" area visualizes the diagnostics state via diagnostics screens, providing the required operator control and monitoring functions.

The MS single-station system on the plant bus can be used in parallel with additional single-station or multiple-station systems.

Plant configuration

The figure below shows an example plant configuration.

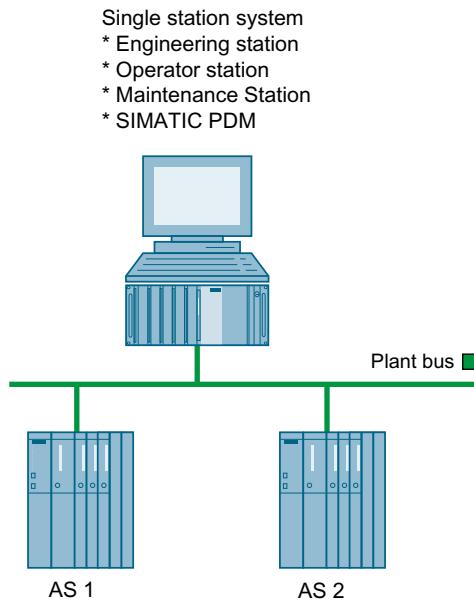

Rule

The maintenance station is disabled during configuration.

Software and licensing

If monitoring of intelligent field devices is required, install the SIMATIC Process Device Manager (SIMATIC PDM Server) add-on package on the engineering station.

You can find more information on software in the manual *Process Control System PCS 7; PCS 7 PC Configuration*.

For information on the current graduated licenses available for the various components of the process control system and the correspondingly plant sizes that can be realized, refer to the installation manual *Process Control System PCS 7; Licenses and Quantity Structures*.

3.4 MS multiple station system

MS multiple-station system in the OS multiple-station system

In distributed systems, the maintenance station is integrated into a client/server architecture.

Plant configuration

The MS server


- Either configured on a separate PC station or on a PC station together with the OS server
- Can be configured redundantly
- Processes the process control messages which are visualized on the OS/MS client and/or MS client
- Can monitor network components via the OPC server at the plant bus if there is a connection to the plant bus

The MS client can be configured as follows:

- MS client on a PC station
The MS client visualizes the diagnostic status in the diagnostic area using diagnostic screens and provides the required operator control and monitoring functions.
- MS client and OS client on a PC station (OS/MS client)
The OS/MS client has the same functionality as an MS client on a PC station and the same functionality as an OS client.
In addition to the diagnostic area, the overview visualizes the technological areas for process control.
- MS client on the engineering station
The MS client on the engineering station has the same functionality as an MS client on a PC station.
In addition, the online view of the hardware configuration editor can be opened.
The MS client that is operated on the engineering station is disabled during configuration.

Plant configuration

The figure below shows an example plant configuration.

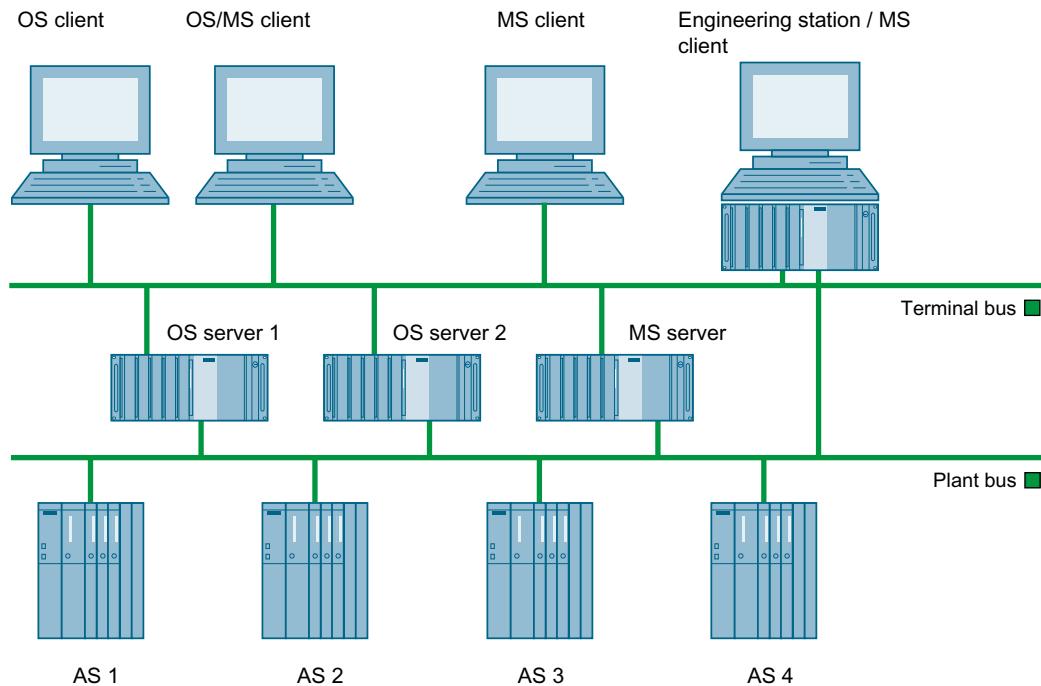

Required server data

- On the MS or OS/MS client
You can find information on this in the section "Server data and downloading of a client (Page 83)".
- On the MS server
The server data of all OS servers in the multiproject/project are automatically downloaded to the MS server when the diagnostics structure is generated.

Software and licensing

If intelligent field devices have to be monitored, install the SIMATIC Process Device Manager (SIMATIC PDM) on the engineering station.

You can find more information on the software in the manual *Process Control System PCS 7; PCS 7 PC Configuration*.

For information on the current graduated licenses available for the various components of the process control system and the correspondingly plant sizes that can be realized, refer to the installation manual *Process Control System PCS 7; Licenses and Quantity Structures*.

3.5 SIMATIC PDM MS

Plant configuration

SIMATIC PDM MS is a single-station system pre-configured as an IPC Microbox 427D. It is designed for stand-alone use and is independent of the automation solution used. It is based on a PCS 7 Maintenance Station. All operating and monitoring functions are executed on this PC station.

SIMATIC PDM MS processes diagnostic information that is determined via SIMATIC PDM.


SIMATIC PDM MS uses diagnostic screens to visualize the diagnostic status in the diagnostic area and provide the required operator control and monitoring functions.

The automation system is mapped in the software with **one** integrated AS RTX (WinLC RTX).

The diagnostic messages are produced in the integrated AS RTX and visualized on SIMATIC PDM MS.

Plant configuration

The figure below shows an example plant configuration.

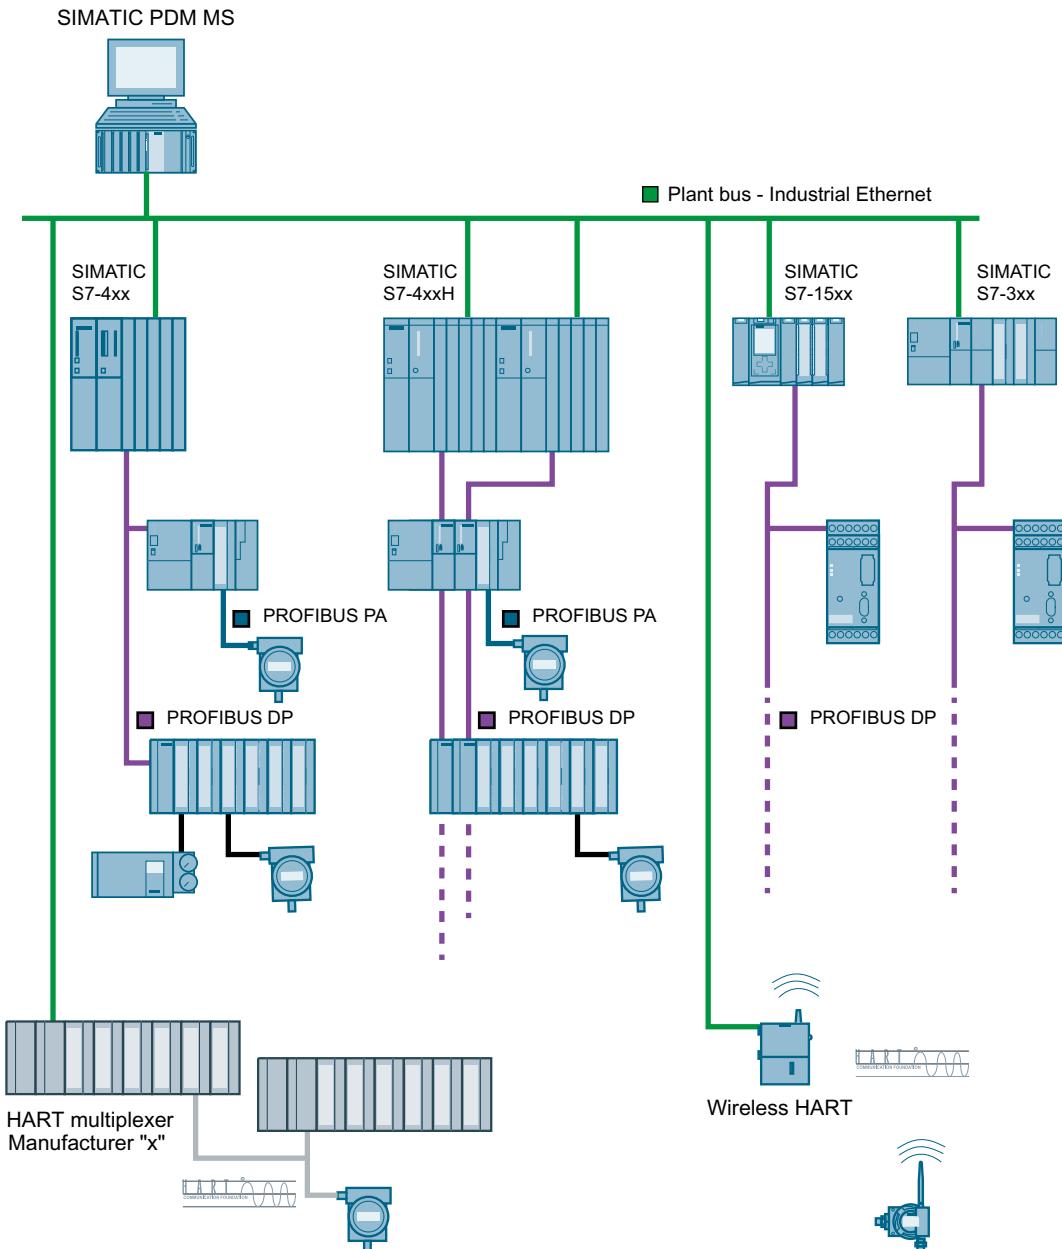

Rule

SIMATIC PDM MS is disabled during configuration.

Software and licensing

- Enclosed Restore software
- Current devices DVD of SIMATIC PDM

You have the option of expanding the quantity structure and functions of SIMATIC PDM MS.

The following licenses can be used for expansion:

- The various levels of PDM TAG
- Asset Tag for the PCS 7 Maintenance Station

Information on the individual products is available in the documents accompanying the product release on the Internet under Technical Support <http://www.siemens.com/automation/service> (<http://www.siemens.com/automation/service>).

For information on the current graduated licenses available for the various components of the process control system and the correspondingly plant sizes that can be realized, refer to the installation manual *Process Control System PCS 7; Licenses and Quantity Structures*.

Additional documentation

Additional documentation

The following table lists documentation in which you can find additional information. All content of the electronic manuals (PDF) can also be found in the online help (CHM).

Documentation	Purpose
Online help: Help on PCS 7, Configuration - Engineering System Manual: Process Control System PCS 7 Engineering System	The documentation supports you during configuration with the SIMATIC Process Control System PCS 7 on an engineering station.
Online help: Help on PCS 7, Configuration - Operator Station Manual: Process Control System PCS 7 Operator Station	The documentation supports you during configuration with the SIMATIC PCS 7 Process Control System on an operator station.
Manual: SIMATIC Logon, SIMATIC Electronic Signature	This documentation supports you when setting up central access authorization administration with SIMATIC Logon.
Online help and manual: Process Control System PCS 7 PCS 7 Basic Library	This documentation describes the functions and block I/Os of diagnostic blocks.
Online help and manual: Process Control System PCS 7 PCS 7 Advanced Process Library	This documentation describes the functions, block I/Os, and input/output fields of the associated faceplates.
Online help: WinCC Information System	The documentation supports you in configuring the operator stations and in operating the operator stations in the process control.
Manual: Process Control System PCS 7 SIMATIC PDM	This documentation offers support during installation, commissioning of the software, configuration of networks and field devices, commissioning and using runtime functions.
Manual: SIMATIC NET S7 CPs for Industrial Ethernet (part BL1)	This documentation describes the configuration, installation and commissioning of an IE/PB Link PN IO.
Manual Process Control System PCS 7 Licenses and Quantity Structures	The document offers information on the latest grading of licenses for the different components of the process control system and the plant size you can achieve with them. Section "Calculating the asset tags (hardware components) for the maintenance station" of the document offers information on which diagnostics-capable components within a PCS 7 project are counted as asset tags.

Documentation	Purpose
Manual Process Control System PCS 7 PC Configuration	The document provides information about hardware and software requirements and about the configuration options of a PC station.
Manual Process Control System PCS 7 Software update with utilization of new functions	The "Maintenance Station" section of the documents provides information on migrating a Maintenance Station.
Manual Process Control System PCS 7 Software update without utilization of new functions	

Configuring the maintenance stations

5.1 MS single station system overview

The following table lists the topics that include information and configuration instructions. The sequence in the table corresponds to the recommended configuration sequence.

What?	MS Basic	MS Standard
General settings in the multiproject/project (Page 34)	X	X
Configuring the PC station for MS single station system (Page 35)		
Configuring the monitoring of industrial PCs and network objects (Page 44)		
Creation of the diagnostics structure (Page 49)		
Advanced diagnostics settings (Page 54)	-	
Configuring the user diagnostics (Page 69)		
Setting up SIMATIC PDM (Page 76)	X	
Overview of complete export (Page 76)		
Overview of individual export (Page 77)		
Engineering for maintenance (Page 78)	-	
Creating/updating the diagnostic screens (Page 80)		X
Compilation and downloading of the Maintenance Station (Page 82)		
Changes in the project (Page 84)		
Integration by the Alarm Control Center (Page 195)	-	

5.2 MS multiple station system overview

5.2.1 MS Server overview

The following table lists the topics that include information and configuration instructions. The sequence in the table corresponds to the recommended configuration sequence.

What?	MS Basic	MS Standard
General settings in the multiproject/project (Page 34)	X	X
How to configure a PC station for an engineering station (Page 36)		
How to configure a PC station for an MS server (Page 37)		
Configuring the monitoring of industrial PCs and network objects (Page 44)		
Creation of the diagnostics structure (Page 49)		
Advanced diagnostics settings (Page 54)	-	
Configuring the user diagnostics (Page 69)		
Setting up SIMATIC PDM (Page 76)	X	
Overview of complete export (Page 76)		
Overview of individual export (Page 77)		
Engineering for maintenance (Page 78)	-	
Creating/updating the diagnostic screens (Page 80)	X	
Compilation and downloading of the Maintenance Station (Page 82)		
Changes in the project (Page 84)		
Integration by the Alarm Control Center (Page 195)	-	

5.2.2 Redundant MS server overview

The following table lists the topics that include information and configuration instructions. The sequence in the table corresponds to the recommended configuration sequence.

What?	MS Basic	MS Standard
General settings in the multiproject/project (Page 34)	X	
How to configure a PC station for an engineering station (Page 36)		
How to configure a PC station for an MS server (Page 37)		
How to configure a PC station for the redundant partner (Page 38)		
Configuring the monitoring of industrial PCs and network objects (Page 44)		
Creation of the diagnostics structure (Page 49)		
Advanced diagnostics settings (Page 54)	-	
Configuring the user diagnostics (Page 69)		
Setting up SIMATIC PDM (Page 76)	X	
Overview of complete export (Page 76)		
Overview of individual export (Page 77)		X
Engineering for maintenance (Page 78)	-	
Creating/updating the diagnostic screens (Page 80)	X	
Compilation and downloading of the Maintenance Station (Page 82)		
Changes in the project (Page 84)		
Integration by the Alarm Control Center (Page 195)	-	

5.2.3 MS client or OS/MS client overview

The following table lists the topics that include information and configuration instructions. The order in the table corresponds to the recommended configuration sequence.

What?	MS Basic	MS Standard
How to configure a PC station for an MS or OS/MS Client (Page 39)	X	X
Server data and downloading of a client (Page 83)		
Changes in the project (Page 84)		

5.3 Overview of SIMATIC PDM MS

The following table lists the topics that include information and configuration instructions. The order in the table corresponds to the recommended configuration sequence.

What?	Configuration SIMATIC PDM MS
General settings in the multiproject/project (Page 34)	X
Configuring the PC station for SIMATIC PDM MS (Page 40)	
Configuring an IE/PB Link PN IO (Page 42)	Optional
Creation of the diagnostics structure (Page 49)	X

What?	Configuration SIMATIC PDM MS
Setting up SIMATIC PDM (Page 76)	X
Overview of complete export (Page 76)	
Overview of individual export (Page 77)	
Creating/updating the diagnostic screens (Page 80)	
Compiling and downloading SIMATIC PDM MS (Page 82)	
Changes in the project (Page 84)	
Integration by the Alarm Control Center (Page 195)	Optional

5.4 General settings in the multiproject/project

MS single-station/multiple-station system overview

To monitor components with the maintenance station, check the settings specified in the following table and adapt if necessary.

Setting	Location	Comment
Regional language and language for display devices	SIMATIC Manager	Set a language in which the WinCC project is to be operated in process control.
AS station name (1)	SIMATIC Manager	<ul style="list-style-type: none"> • <=14 characters • No spaces
Designation of components (1)	HW Config	
S7 program (1)	SIMATIC Manager	<ul style="list-style-type: none"> • Message number range must be the same for all S7 programs in the multiproject/project • The name of an S7 program may not be assigned twice
Diagnostic blocks (1)		The diagnostic blocks must be at least version V6.1. Use a corresponding library, if necessary.
OS compilation mode		Area-oriented
Plant hierarchy setting (1)		The settings of the plant hierarchy must be the same in all projects of the multiproject/project.
WinCC project type single-station project (2)	WinCC Explorer	The single-station project type must be selected in project properties.
Group display hierarchy (1)		When user diagnostics is used, the group display hierarchy must be automatically created.

(1) Only applies to MS Basic and MS Standard

(2) Only applies to SIMATIC PDM MS

Note

There is only one MS server within a multiproject/project.

Additional information

For more information about this, refer to the *Process Control System PCS 7 Engineering System* manual and the *Process Control System PCS 7; Operator Station* manual.

5.5 Configuring the PC station for MS single station system

Introduction

If you are already using an existing ES/OS single station system in the multiproject/project you do not need to execute the following steps.

Requirement

The multiproject/project has been created.

Procedure

1. In the component view of the SIMATIC Manager, select the project into which you want to insert the MS single station system.
2. Select the menu command **Insert > Station > SIMATIC PC station**.
A new SIMATIC PC station is inserted in the selected project.
3. Select the SIMATIC PC station, and then select **Edit > Object Properties**.
4. In the "Name:" input field, enter the name for the PC station.
5. Enter the Windows computer name in the "Computer name" input box.
6. Click "OK".
7. Select the SIMATIC PC station in the component view of the SIMATIC Manager.
8. In the detailed view, open HW Config by double-clicking the "Configuration" object.
The hardware configuration of the SIMATIC PC station opens.
9. If the hardware catalog is not visible, select the menu command **View > Catalog**.
The hardware catalog opens.
- 10.Under "SIMATIC PC Station > HMI" in the hardware catalog, select the WinCC application and drag it into the configuration table.
- 11.If you want to monitor PC stations and/or network objects, under "SIMATIC PC Station > User application > OPC server" in the hardware catalog select the OPC server and drag it into the configuration table.
- 12.If you want to use SIMATIC PDM, under "SIMATIC PC Station > PDM" in the hardware catalog, select the PDM application and drag it into the configuration table.
- 13.Insert any additional components, for example, network cards.
For Ethernet connections, it is recommended to use the IE General interface.

5.6 Configuring of PC stations for MS multiple station system

14. If you want to monitor the CP 1623 / CP 1613 communications processor as a network object, use the "Properties..." button to activate "IP protocol is used" in the object properties of the CP in the "Interface" area of the "General" tab.
15. Select the menu command **Save and Compile Station** and close HW Config.
16. In the component view of the SIMATIC Manager, select the "[OS(*)]" object below the SIMATIC PC station in the "WinCC Appl." hierarchy folder.
* is a number assigned by the system.
17. Select the menu command **Edit > Object Properties**.
The "Properties – OS: [Name of the OS]" dialog box opens.
18. In the "Name:" input field, enter a name for the WinCC project of the MS single station system.
19. Select the "Target OS and Standby OS" tab.
 - Enter the path to the target OS computer in the "Path to target OS computer" input box.
 - Enter a symbolic computer name in the "Symbolic computer name" input box.
 - Select ">none>" from the drop-down list box in the "Standby OS" area.
20. Click "OK".

5.6 Configuring of PC stations for MS multiple station system

5.6.1 How to configure a PC station for an engineering station

Introduction

If you have already configured an Engineering Station (ES) in the multiproject/project and are using SIMATIC PDM, you only have to execute the steps as of step 12.

Requirement

The multiproject/project has been created.

Procedure

1. In the component view of the SIMATIC Manager, select the multiproject/project into which you want to insert the ES.
2. Select the menu command **Insert > Station > SIMATIC PC station**.
A new SIMATIC PC station is inserted in the selected multiproject/project.
3. Select the SIMATIC PC station, and then select **Edit > Object Properties**.
4. In the "Name:" input field, enter the name for the PC station.
5. Enter the Windows name of the ES in the "Computer Name" input box.

6. Click "OK".
7. Select the SIMATIC PC station in the component view of the SIMATIC Manager.
8. In the detailed view, open HW Config by double-clicking the "Configuration" object.
The hardware configuration of the SIMATIC PC station opens.
9. If the hardware catalog is not visible, select the menu command **View > Catalog**.
The hardware catalog opens.
- 10.Under "SIMATIC PC Station > HMI" in the hardware catalog, select the WinCC application and drag it into the configuration table.
- 11.Insert any additional components, for example, network cards.
For Ethernet connections, it is recommended to use the IE General interface.
- 12.If you want to monitor the CP 1623 / CP 1613 communications processor as a network object, use the "Properties..." button to activate "IP protocol is used" in the object properties of the CP in the "Interface" area of the "General" tab.
- 13.If you are using SIMATIC PDM, under "SIMATIC PC Station > PDM" in the hardware catalog, select the PDM application and drag it into the configuration table.
- 14.Select the menu command **Save and Compile Station** and close HW Config.
- 15.Download the component configurator.

5.6.2 How to configure a PC station for an MS server

Introduction

If you are already using an existing OS server as MS server in the multiproject/project, you do not need to execute the following steps.

Requirement

The multiproject/project has been created.

Procedure

1. In the component view of the SIMATIC Manager, select the multiproject/project into which you want to insert the MS server.
2. Select the menu command **Insert > Station > SIMATIC PC station**.
A new SIMATIC PC station is inserted in the selected multiproject/project.
3. Select the SIMATIC PC station, and then select **Edit > Object Properties**.
4. In the "Name:" input field, enter the name for the PC station.
5. Enter the Windows name of the computer in the "Computer Name" input box.
6. Click "OK".
7. Select the SIMATIC PC station in the component view of the SIMATIC Manager.

5.6 Configuring of PC stations for MS multiple station system

8. In the detailed view, open HW Config by double-clicking the "Configuration" object.
The hardware configuration of the SIMATIC PC station opens.
9. If the hardware catalog is not visible, select the menu command **View > Catalog**.
The hardware catalog opens.
- 10.Under "SIMATIC PC Station > HMI" in the hardware catalog, select the WinCC application and drag it into the configuration table.
- 11.If you want to monitor PC stations and/or network objects, under "SIMATIC PC Station > User application > OPC server" in the hardware catalog select the OPC server and drag it into the configuration table.
- 12.Insert any additional components, for example, network cards.
For Ethernet connections, it is recommended to use the IE General interface.
- 13.If you want to monitor the CP 1623 / CP 1613 communications processor as a network object, use the "Properties..." button to activate "IP protocol is used" in the object properties of the CP in the "Interface" area of the "General" tab.
- 14.Select the menu command **Save and Compile Station** and close HW Config.
- 15.In the component view of the SIMATIC Manager, select the "[OS(*)]" object below the SIMATIC PC station in the "WinCC Appl." hierarchy folder of the MS server.
* is a number assigned by the system.
- 16.Select the menu command **Edit > Object Properties**.
The "Properties – OS [name of OS]" dialog box opens.
- 17.In the "Name:" input field, enter a name for the WinCC project of the MS server.
- 18.Select the "Target OS and Standby OS" tab.
 - Enter the path to the target OS computer in the "Path to target OS computer" input box.
 - Enter a symbolic computer name in the "Symbolic computer name" input box.
 - Select the following from the drop-down list box in the "Standby OS" area:
If you not configure the MS server redundantly, select ">none>".
If you configure the MS server redundantly, select the redundant partner. You can only select the partner if it has been configured.
- 19.Click "OK".

5.6.3 How to configure a PC station for the redundant partner

Introduction

If you are already using the redundant partner of an OS server in the multiproject/project, you do not need to execute the following steps.

Requirement

The multiproject/project has been created.

Procedure

1. In the component view of the SIMATIC Manager, select the multiproject/project into which you want to insert the redundant partner.
2. Select the menu command **Insert > Station > SIMATIC PC station**.
A new SIMATIC PC station is inserted in the selected multiproject/project.
3. Select the SIMATIC PC station, and then select **Edit > Object Properties**.
4. In the "Name:" input field, enter the name for the PC station.
5. Enter the Windows name of the computer in the "Computer Name" input box.
6. Click "OK".
7. Select the SIMATIC PC station in the component view of the SIMATIC Manager.
8. In the detailed view, open HW Config by double-clicking the "Configuration" object.
The hardware configuration of the SIMATIC PC station opens.
9. If the hardware catalog is not visible, select the menu command **View > Catalog**.
The hardware catalog opens.
- 10.Under "SIMATIC PC Station > HMI" in the hardware catalog, select the WinCC application (stby) and drag it into the configuration table:
- 11.Insert any additional components, for example, network cards.
For Ethernet connections, it is recommended to use the IE General interface.
- 12.If you want to monitor the CP 1623 / CP 1613 communications processor as a network object, use the "Properties..." button to activate "IP protocol is used" in the object properties of the CP in the "Interface" area of the "General" tab.
- 13.Select the menu command **Save and Compile Station** and close HW Config.
- 14.In the component view of the SIMATIC Manager, select the "[OS(*)_StBy]" object below the SIMATIC PC station in the "WinCC Appl." hierarchy folder (Stby.).
* is a number assigned by the system.
- 15.Select the menu command **Edit > Object Properties**.
The "Properties – Standby OS: [Name of the OS]" dialog box opens.
- 16.Select the "Target OS and Master OS" tab and enter the path to the target OS computer.
- 17.Click "OK".

5.6.4 How to configure a PC station for an MS or OS/MS Client

Introduction

You can operate the MS Client or OS/MS Client on the Engineering Station or a separate PC.

Requirement

The multiproject/project has been created.

Procedure

1. In the component view of the SIMATIC Manager, select the multiproject/project into which you want to insert the MS client.
2. Select the menu command **Insert > Station > SIMATIC PC station**.
A new SIMATIC PC station is inserted in the selected multiproject/project.
3. Select the SIMATIC PC station, and then select **Edit > Object Properties**.
4. In the "Name:" input field, enter the name for the PC station.
5. Enter the name in the "Computer name" input field.
 - If you are running the MS client on a separate PC station, enter the Windows computer name of the target computer.
 - If you are operating the MS client as MS client on the engineering station, enter the Windows computer name of the engineering station.
6. Click "OK".
7. Select the SIMATIC PC station in the component view of the SIMATIC Manager.
8. In the detailed view, open HW Config by double-clicking the "Configuration" object.
The hardware configuration of the SIMATIC PC station opens.
9. If the hardware catalog is not visible, select the menu command **View > Catalog**.
The hardware catalog opens.
- 10.Under "SIMATIC PC Station > HMI" in the hardware catalog, select the WinCC application client and drag it into the configuration table.
- 11.Insert other components.
- 12.Select the menu command **Save and Compile Station** and close HW Config.
- 13.In the component view of the SIMATIC Manager, select the "[OSC]" object underneath the MS client's SIMATIC PC station.
- 14.Select the menu command **Edit > Object Properties**.
The "Properties – Client OS: [Name of the OS]" dialog box opens.
- 15.In the "Name:" input field, enter a name for the WinCC project of the MS client.
- 16.Click "OK".

5.7 Configuring the PC station for SIMATIC PDM MS

Requirement

The project has been created.

Procedure

1. In the component view of the SIMATIC Manager, select the project into which you want to add SIMATIC PDM MS.
2. Select the menu command **Insert > Station > SIMATIC PC station**.
A new SIMATIC PC station is inserted in the selected multiproject/project.
3. Select the SIMATIC PC station, and then select **Edit > Object Properties**.
4. In the "Name:" input field, enter the name for the PC station.
5. Enter the Windows name of the computer in the "Computer Name" input box.
6. Click "OK".
7. Select the SIMATIC PC station in the component view of the SIMATIC Manager.
8. In the detailed view, open HW Config by double-clicking the "Configuration" object.
The hardware configuration of the SIMATIC PC station opens.
9. If the hardware catalog is not visible, select the menu command **View > Catalog**.
The hardware catalog opens.
- 10.Under "SIMATIC PC Station > Controller > WinLC RTX" in the hardware catalog, select the required "WinLC-RTX" application and drag it into the configuration table.

Note

Note that only **one** WinLC RTX can be added.

- 11.Under "SIMATIC PC Station > HMI" in the hardware catalog, select the WinCC application and drag it into the configuration table.
- 12.Select the PDM application under "SIMATIC PC Station > PDM" in the hardware catalog and drag it to the configuration table.
- 13.Insert any additional components, for example, network cards.
For Ethernet connections, it is recommended to use the IE General interface.
- 14.Select the menu command **Save and Compile Station** and close HW Config.
- 15.In the component view of the SIMATIC Manager, select the "[OS(*)]" object below the SIMATIC PC station in the "WinCC Appl." hierarchy folder.
* is a number assigned by the system.
- 16.Select the menu command **Edit > Object Properties**.
The "Properties – OS: [Name of the OS]" dialog box opens.
- 17.In the "Name:" input field, enter a name for the WinCC project of SIMATIC PDM MS.
- 18.Select the "Target OS and Standby OS" tab.
 - Enter the path to the target OS computer in the "Path to target OS computer" input box.
 - Enter a symbolic computer name in the "Symbolic computer name" input box.
 - Select ">none>" from the drop-down list box in the "Standby OS" area.
- 19.Click "OK".

5.8 Configuring an IE/PB Link PN IO

Introduction

The IE/PB Link PN IO link module is used as a gateway to ensure that SIMATIC PDM MS has access to all PROFIBUS DP slaves connected to the lower-level PROFIBUS.

The IE/PB Link PN IO link module connects the two network types, Industrial Ethernet and PROFIBUS.

Requirement

The project has been created.

Step 1 - Create a SIMATIC 300 station

1. Select the project into which you want to insert the SIMATIC 300 station in the component view of the SIMATIC Manager.
2. Select the menu command **Insert > Station > SIMATIC 300 station**.
A new SIMATIC 300 station is inserted into the selected project.
3. Select the SIMATIC PC station, and then select **Edit > Object Properties**.
4. In the "Name:" input field, enter the name for the SIMATIC 300 station.
5. Click "OK".

Step 2 - Configure IE/PB Link PN IO link module in the SIMATIC 300 station

1. Select the SIMATIC 300 station in the component view of the SIMATIC Manager.
2. In the detailed view, open HW Config by double-clicking the "Hardware" object.
The hardware configuration of the SIMATIC 300 station opens.
3. If the hardware catalog is not visible, select the menu command **View > Catalog**.
4. Select the device type **Gateway – IE/PB Link PN IO** in the hardware catalog under "SIMATIC 300".

Note

Note that the IE/PB Link PN IO link module is a special configuration component.

No other components, such as profile rails or modules, can be placed in the S7-300 station apart from this component.

5. Create an Ethernet network.
6. Assign parameters for the Ethernet network using the following data:
 - IP address
 - S7 subnet ID
7. Create a PROFIBUS network.

8. Assign parameters for the PROFIBUS network using the following data:
 - Address
 - "No DP" mode
9. Select the "Activate data record gateway" check box for the IE/PB Link PN IO link module.
10. Transfer the parameters to the IE/PB Link PN IO link module.
11. Note down the following information:
 - The S7 subnet ID and the IP address of the Ethernet network
 - The DP master address for the PROFIBUS network
12. Repeat the procedure for any other IE/PB Link PN IO link modules.

Note

Use the same S7 subnet ID for the Ethernet network for any further IE/PB Link PN IO link modules.

Step 3 - Configure IE/PB Link PN IO link module in the process device network view

1. Configure an Ethernet network in the process device network view.
2. Assign parameters for the Ethernet network with the S7 subnet ID.
3. Configure the IE/PB Link PN IO link module in this Ethernet network.
4. Assign parameters for the IE/PB Link PN IO link module using the following data:
 - With the S7 subnet ID
 - With the corresponding IP address
 - With the corresponding DP master address
5. Repeat the procedure for any other IE/PB Link PN IO link modules.

Additional information

For additional information on this topic, refer to the *SIMATIC NET; S7-CPs for Industrial Ethernet* and *PCS 7 Process Control System; SIMATIC PDM* manuals.

5.9 Configuring the monitoring of industrial PCs and network objects

5.9.1 Requirements

Introduction

Note

You can monitor the industrial PCs and network objects for the following maintenance station versions:

- MS Basic
- MS Standard

The programs or services listed in the following table must be available and configured to monitor industrial PCs and network objects.

Application/service	MS single-station system	MS multiple station system	SIMATIC PDM MS
OPC Server			
NDIS adapter	MS single-station system	<ul style="list-style-type: none">• MS server• Redundant partner of the MS server	Not supported
SNMP service		On each industrial PC to be monitored	
Diagnostics Monitor			

Programs and services

- **OPC Server**
 - OPC (OLE for Process Control) is an interface for data exchange in automation engineering.
 - It is set up in HW Config.
You can find information about this in the following sections.
- **NDIS adapter**
 - For monitoring of components on the plant bus, if access to the plant bus is provided via a communication processor (CP 1623 / CP 1613).
 - The NDIS adapter must be configured.
You can find more information about this in the manual *Process Control System PCS 7; PCS 7 PC Configuration*.

- **SNMP service**

- SNMP is the Simple Network Management Protocol that is used to manage networks.
- The SNMP service must be configured.
You can find more information about this in the manual *Process Control System PCS 7; PCS 7 PC Configuration*.

A network connection must be available to the components with SNMP functionality to be included in the diagnostics.

- **Diagnostics Monitor**

- Diagnostics Monitor is a diagnostics tool that provides the diagnostic data required from SIEMENS industrial PCs.
- Diagnostics Monitor is called in the header of the faceplate in process control.
- Diagnostics Monitor must be installed and configured.
You can find more information about this in the manual *Process Control System PCS 7; PCS 7 PC Configuration*.

- Additional settings

Start the Web server

Start the Management Explorer.

Select Options > Web server.

Authorize Diagnostics Monitor Web server in the Windows firewall

Open the firewall.

Create a new exception/rule for the "MiniWebService.exe" program.

This file is accessed via the Windows Start menu, submenu ...\\Siemens\\Automation\\DiagnosticManagement\\WebServer_DM\\Bin.

5.9.2 Device profiles and community

Introduction

If an SNMP-compatible component is configured in the OPC server, a device profile and a community must be assigned to this SNMP-compatible component.

Overview

The following table shows the assignment of the community to the device profile.

Components	Device profile	Community
SCALANCE series X200	Profile_SCALANCE_X200_Vxy.txt	public
SCALANCE series X200 RNA	Profile_SCALANCE_X200RNA_Vxy.txt	
SCALANCE series X300	Profil_SCALANCE_X300X400_Vxy.txt	
SCALANCE series X400		
SCALANCE series XM400	Profil_SCALANCE_XM400_Vxy.txt	

Components	Device profile	Community
SCALANCE series X500	Profil_SCALANCE_X500_Vxy.txt	public
SCALANCE series W700	Profil_SCALANCE_W700_Vxy.txt	
ESM/OSM	Profil_OSM_Vxy.txt	
Siemens IPC (Industrial PC)	Profil_IPC_Vxy.txt	SOL
Other devices, for example third-party PCs, premium servers for SIMATIC PCS 7, network adapters, switches	MIB-II_V10.txt	Determine the community configured in the device.
All devices that were integrated by means of import, but are not to be dis- played	No SNMP	-

Note

"No SNMP" as device profile has the following effects on the diagnostic screens:

- No asset object is created for the network component.
- The asset object of a PC station is created for an industrial PC.

5.9.3 How to assign components with SNMP functionality to the OPC server

Naming rules

Aspects to be taken into account when naming components with SNMP functionality:

- Do not use spaces or special characters in module names.
- For IPCs, assign module names that correspond to the computer name of the IPC in the SIMATIC Manager.
- For all other modules, assign module names that are different from the existing computer names of PC stations in the project.
- If you use two separate Ethernet networks in your configuration, make sure that both the names and the IP addresses of the modules are unique across the network.

Requirements

- The HW configuration for the PC objects and network objects is completed.
- The OPC server has been inserted.

You will find more information on this subject in the following sections:

- Configuring the PC station for MS single station system (Page 35)
- How to configure a PC station for an MS server (Page 37)
- Configuring the PC station for SIMATIC PDM MS (Page 40)

Procedure

1. Select the OPC server in HW Config, and then select the menu command **Edit > Object Properties....**
The "Properties – OPC server" dialog box opens.
2. Open the "SNMP" tab.
3. Enter at least 1000 ms in the "Cycle time" input box.
You can obtain additional information with the "Help" button.
4. Click "Edit plant configuration".
The "Edit plant configuration" dialog box opens.
5. Click "Import".
All objects configured in your project with an IP address are imported.

Note

When you import a CP 1623 / CP 1613, the IP address of the HW Config is imported. If necessary, replace this TCP/IP address with an NDIS IP address.

6. Double-click the node.
The "Edit node" dialog box opens.
7. Enter the following data for the imported devices.
 - Name:
Enter a name.
 - IP address:
If necessary, change the IP address.
 - Device profile and community:
You can find additional information about this in the section "Device profiles and community (Page 45)".

Note

Note that these community name entries are case sensitive.

The community name in the "Edit Node" and "Add Node" dialog boxes must match the community name stored in the respective device.

- Timeout:
Enter a value of 9000 ms or higher, depending on the number of components to be monitored.
You can obtain additional information with the "Help" button.
- SNMP optimization
Activate the check box.
- Comment:
You can enter a comment in this field. This comment is visualized in the faceplate of the process control system.

8. Click "OK".
The "Edit nodes" dialog box closes and you return to the "Edit plant configuration" dialog box.

9. Click the "Add" button if you want to insert IPCs or other components with SNMP functionality.
The "Add node" dialog box opens.
10. Enter all required data.
Proceed as described in item 7.
11. Click "OK".
The "Add node" dialog box closes and you return to the "Edit plant configuration" dialog box.
12. Insert additional nodes as required.
13. Click "OK".
The configuration is complete.
14. Compile and download the hardware configuration.
Additional information on this is available in the *Process Control System PCS 7; Engineering System* manual.

5.9.4 How to insert the OPC server into the redundant partner

Requirement

The OPC server is configured in the MS server.

You can find additional information on this topic in the section "How to assign components with SNMP functionality to the OPC server (Page 46)".

Procedure

1. In SIMATIC Manager, open the component view.
2. Select the SIMATIC PC station of the MS server.
3. In the detailed view, open HW Config by double-clicking the "Configuration" object.
The hardware configuration of the SIMATIC PC station opens.
4. Select the OPC server.
5. Select **Edit > Copy** from the menu.
6. Select the SIMATIC PC station of the redundant partner.
7. In the detailed view, open HW Config by double-clicking the "Configuration" object.
The hardware configuration of the SIMATIC PC station opens.
8. Select the position for the OPC server.
9. Select the **Edit > Paste** command.
10. Select the **Station > Save and Compile** command.

5.9.5 How to transfer the OPC configuration to the WinCC project

Introduction

Data tags, alarm tags and alarm texts for all components with SNMP functionality are generated in the WinCC project with tag export.

Requirements

- The diagnostic structure has been created.
- The maintenance station has been compiled.

Procedure

1. Select the OPC server in HW Config, and then select **Edit > Object Properties...**.
The "Properties – OPC server" dialog box opens.
2. Open the "SNMP" tab.
3. In the "Tag export" group, select the check box
 - "Export complete plant configuration" upon initial tag export
 - "Export changes only" upon all subsequent tag exports
4. Click "Export Tags for WinCC".
5. Click "OK".
The dialog box closes.

5.10 Creation of the diagnostics structure

5.10.1 Information on diagnostics structure and plant hierarchy

Diagnostics structure in the plant hierarchy

The diagnostics structure is a folder structure in the plant hierarchy and is automatically created by the system. The number of hierarchy levels is limited to 8.

The diagnostics hierarchy folder is the top hierarchy folder; it maps the area-forming level for the OS (area selection button in overview of process control). Depending on the set level OS area in the plant hierarchy, a maximum of three folders is created with the name "Diagnostics".

The hierarchy folders with the names AS objects, field devices, network objects, and PC stations are created on the same hierarchy level below the diagnostics hierarchy folder that maps the OS area. The version of the maintenance station and the existing objects determine which hierarchy folders are created.

The names of the automatically generated hierarchy folders cannot be changed.

Settings in the plant hierarchy

The following settings are made for the maintenance station in the "Plant hierarchy - Settings" dialog box:

- Number of hierarchy levels (1)
- Area-forming level for the OS (1)
- Creation of the diagnostics structure
- Version of the Maintenance Station
- Setting for deriving names in the PH
- Selection of the maintenance station

(1) Note: Applies to all multiprojects/projects

Information on configuration of settings in the plant hierarchy is available in the following section.

Additional information

You can find additional information on this topic in the section "Relationship between the diagnostic structure and version (Page 52)".

5.10.2 How to make the settings in the plant hierarchy

Requirements for MS single-station system and MS multiple-station system

- The multiproject/project has been created.
- The hardware configuration is completed.
- The network configuration is completed.
- The basic parameter assignment for all components is available offline.

Requirements for SIMATIC PDM MS

- The project was not created as multiproject.
- The hardware configuration is completed
- The plant configuration is completed.
- The configuration of PC stations and network components (optional) is completed.
- The naming of components regarding LID and TAG is completed.
- All components in the process device network view are configured.
- The used IE/PB Links PN IO are configured.

Procedure

1. Open the plant view in the SIMATIC Manager.
2. Select the object in the tree view:
 - If you are using a multiproject, select the object "[name of the project] MP".
 - If you are using a single project, select the object "[name of the project]".
3. Select the menu command **Options > Plant Hierarchy > Settings... .**
4. If you have selected a multiproject, the "Plant Hierarchy - Settings" dialog box opens. Select the project whose settings you wish to use as a template for the plant hierarchy.
 - Click "OK".
The "Customize Plant Hierarchy" dialog box opens.
 - Proceed to step 6.
5. If you have selected an individual project or a project within a multiproject, the "Plant Hierarchy - Settings" dialog box opens.
6. Define the settings for the relevant levels.
Remember that the settings of the plant hierarchy within the multiproject/project are to be uniform.
7. Activate the "Derive picture hierarchy from the plant hierarchy" check box.
If you do not wish to derive the diagnostic screens from the plant hierarchy for your plant areas, deactivate the "Picture Tree" check box in the dialog for compiling the OS.
Configure the plant hierarchy for the diagnostic screens in the WinCC project in the Picture Tree editor.
8. Enable the "Derive diagnostic screens from the plant hierarchy" check box.
9. Specify the version.
Enable the appropriate option button:
 - "Maintenance Station Standard (license required)" option button
 - "Maintenance Station Basic (overview screens only)" option button
 - "Maintenance Station PDM (no AS diagnostics)" option button
10. When creating/updating the diagnostic screens, specify whether the names of the created hierarchy folders should be derived from the name or the commentary for the hardware components. Enable the appropriate option button:
 - "Derive PH names from the names of the hardware components" option button
 - "Derive PH names from the comments of the hardware components" option button
Since there are no restrictions on the characters that can be used for the comment texts, you can use any type of name.
11. Click "OK".
The "Define Maintenance Station" dialog box opens and all OSs available in the multiproject/project are shown.
12. Select the OS you want to define as Maintenance Station.
13. Click "OK".

Result

In a multiproject, the "Diagnostics" hierarchy folder is inserted in all the projects within the multiproject.

- The standard diagnostic structure with the hierarchy folders "AS Objects", "Field Devices", "Network Objects", and "PC Stations" is automatically created in the project with the MS server. The structure for the user diagnostics must be created manually.
- In the other projects of the multiproject, only the "AS Objects" and "Field Devices" hierarchy folders are created automatically within the diagnostics structure.

Note that the diagnostics structure depends on the selected type.

If the second or third level is activated for the OS area, a structure of two or three "Diagnostics" folders is created in the plant hierarchy.

5.10.3 Relationship between the diagnostic structure and version

Introduction

The diagnostic structure is created differently depending on the version of the maintenance station.

Diagnostic structure MS Basic version

The table shows an example of the diagnostic structure.

Areas and levels								
1	2	3	4	5	6	7	8	
Diagnos-tics	AS/system							-
	Network objects							
	PC sta-tions							

Diagnostic structure – MS Standard version

The table shows an example of the diagnostic structure.

Areas and levels							
1	2	3	4	5	6	7	8
Diagnostics	AS/system	AS objects	AS detail view			-	
			DP master system	DP nodes		-	
			PROFINET IO system	PN nodes		-	
	Field devices	AS objects without their own group display	DP master system	DP nodes	Modules	HART field devices	-
					PA field devices		-
			PROFINET IO system	PN nodes	Modules	HART field devices	-
					PA field devices		-
					DP nodes		
	Network objects						
	PC stations						
	User objects	Depending on the configuration in the plant hierarchy					

Diagnostic structure – SIMATIC MS PDM version

The table shows an example of the diagnostic structure.

Areas and levels							
1	2	3	4	5	6	7	8
Diagnos-tics	Field devi-ces	Depending on the configuration in SIMATIC PDM					
	Network ob-jects						
	PC stations						

5.11 Advanced diagnostics settings

5.11.1 "Maintenance functions" tab

5.11.1.1 Configuring maintenance links

Introduction

In process control, links to freely configurable web pages can be called in the overview screen and the header area of the faceplates; these web pages are used to support the diagnostic measures.

10 link objects are automatically created by the system.

Automatically created link objects are:

Maintenance link1 to Maintenance link10.

The properties are managed in one language.

A link object has the properties "Name:" and "URL:".

The name of the target address is entered in the "Name:" entry field.

The target address is entered in the "URL:" entry field.

You can change the properties of link objects.

You can restore the diagnostic settings for all lists in the tab using the "Set Default Settings" button.

Note

This function is available if you configured the Maintenance Station in the MS Standard version.

Rule

- Maintenance links are always valid for the entire multiproject/project.
- The number of link objects is limited to 10.
Display of the link objects, if this is configured:
 - In the overview screen, link object 1 to 10
 - In the header of the faceplate link, object 1 to 3
- The automatically generated link objects can be renamed.
- The name of the link object contains a maximum of 24 characters.

- The web address consists of up to 256 characters.
- The name and the web address to the web page are configured in the object properties of the link object.

Note

Ensure that the target address is accessible during process control.

Requirement

The Maintenance Station has been created.

Procedure

1. Open the plant view in the SIMATIC Manager.
2. Select the object in the tree view:
 - If you are using a multiproject, select the object "[name of the project] MP".
 - If you are using a single project, select the object "[name of the project]".
3. Select the menu command **Options > Plant Hierarchy > Advanced Diagnostics Settings...**. The "Advanced Diagnostics Settings" dialog box opens.
4. Select the "Functions for maintenance" tab
5. In the "Maintenance links" area, select the maintenance link whose existing properties you want to change.
6. Click "Properties...".
The "Properties maintenance link" dialog box opens.
7. Enter the desired name for the link object in the "Name:" entry field.
8. Enter the target address in the "URL:" entry field.
9. Click "OK".
The "Properties maintenance link" dialog box closes.
10. Click "OK".
The "Advanced Diagnostics Settings" dialog box closes.

Result

After OS compilation and subsequent download, the modified text is displayed in the process control.

Additional information

You can find additional information on the overview screen in the section "Calling web pages via maintenance links (Page 97).

You can find additional information on the faceplate in the section "Screen window title and header (Page 132).

5.11.1.2 Configuring maintenance targets for individual export

Introduction

Maintenance targets can be selected for storage of individual export files in the process control. The selection is made in the "Maintenance" view of the faceplate.

A target object is created automatically by the system.

Automatically created target object:

The name is Default target. The path is project directory ...\\wincproj\\<os-name>.

A target object has the properties "Name:" and "Path:".

The name of the target path is entered in the "Name:" entry field.

The target path for the individual export file is entered in the "Path:" entry field.

You can add, change and/or delete target objects.

You can restore the diagnostic settings for all lists in the tab using the "Set Default Settings" button.

Note

This function is available if you configured the Maintenance Station in the MS Standard version.

Target directory

The target directory can be configured as a local or network directory.

Target directory	Example of a target directory	Storage location
Local target directory	D:\\folder	On the MS server which is the master at the time export is initiated, in the configured path
Network target directory	\\\\computer name\\shared drive\\folder	On the specified computer in the configured path

Note

We recommend that you configure the target directory as a network target directory for a plant configuration with an MS server and a standby MS server. This will ensure that the export file is always stored in the same "location", regardless of which MS server is the master at the time the export is initiated.

Rules

- Maintenance targets are always valid for the entire multiproject/project.
- The name of the target object has a length of not more than 24 characters.
- The name of the target object is managed in one language.
- The maximum length of the target directory is 256 characters.

Requirement

The Maintenance Station has been created.

Procedure

The following section describes how to configure, change and delete a target object.

To open the "Advanced Diagnostics Settings" dialog, follow the steps below.

1. Open the plant view in the SIMATIC Manager.
2. Select the object in the tree view:
 - If you are using a multiproject, select the object "[name of the project] MP".
 - If you are using a single project, select the object "[name of the project]".
3. Select the menu command **Options > Plant Hierarchy > Advanced Diagnostics Settings...**.
The "Advanced Diagnostics Settings" dialog box opens.
4. Select the "Functions for maintenance" tab

Configuring the maintenance target

1. Click "Add..." in the "Maintenance targets" area.
The "Add maintenance target" dialog box opens.
2. Enter the name for the target object in the "Name" entry field.
3. Click "Browse".
4. Select the required target directory.
The target directory is entered in the "Path:" entry field.
5. Click "OK".
The "Add maintenance targets" dialog box closes.
6. Click "OK".
The "Advanced Diagnostics Settings" dialog box closes.

Changing maintenance target properties

1. In the "Maintenance targets" area, select the target object whose properties you want to change.
2. Click "Properties...".
The "Properties maintenance target" dialog box opens.
3. Make the desired changes.
4. Click "OK".
The "Properties maintenance target" dialog box closes.
5. Click "OK".
The "Advanced Diagnostics Settings" dialog box closes.

5.11 Advanced diagnostics settings

Deleting maintenance targets

1. In the "Maintenance targets" area, select the maintenance target you want to delete.
2. Click "Delete".
The target object is deleted.
3. Click "OK".
The "Advanced Diagnostics Settings" dialog box closes.

Result

After OS compilation and subsequent download, the modified text is displayed in the process control.

Additional information

You can find additional information on selecting maintenance targets in the section ""Maintenance" view (Page 146)".

5.11.1.3 Configuring maintenance actions

Introduction

An action to be performed can be assigned to a requested maintenance action in the process control. The assignment is made in the "Maintenance" view of the faceplate.

Seven action objects are created automatically by the system.

Automatically created action objects are:

- Disassembly
- Device swap
- Calibration
- Zero adjustment
- Cleaning
- Service
- Other

Texts for the automatically created maintenance actions are available in multiple languages. You can find information on this in the *Process Control System PCS 7; Operator Station* configuration manual, section "Setting languages".

An action object has the properties "Name:" and "Name for user:".

The name of the maintenance action is entered in the "Name:" entry field.

The name that a maintenance engineer can select from the drop-down list is entered in the "Name for user:" entry field.

You can add, change and/or delete action objects.

The number of action objects is not limited.

You can restore the diagnostic settings for all lists in the tab using the "Set Default Settings" button.

Note

This function is available if you configured the Maintenance Station in the MS Standard version.

Rules

- Maintenance actions are always valid for the entire multiproject/project.
- The name of an action object contains a maximum of 24 characters.
- The name of the action object is managed in one language.
- The text in the "Name for user:" field is managed in multiple languages.
You can find information on this in the section "Configuring multilingual texts (Page 63)".

Requirements

The Maintenance Station has been created.

Procedure

The following section describes how to configure, change and delete an action object.

To open the "Advanced Diagnostics Settings" dialog, follow the steps below.

1. Open the plant view in the SIMATIC Manager.
2. Select the object in the tree view:
 - If you are using a multiproject, select the object "[name of the project] MP".
 - If you are using a single project, select the object "[name of the project]".
3. Select the menu command **Options > Plant Hierarchy > Advanced Diagnostics Settings...**.
The "Advanced Diagnostics Settings" dialog box opens.
4. Select the "Functions for maintenance" tab

Add maintenance action

1. Click "Add..." in the "Maintenance actions" group.
The "Add maintenance action" dialog box opens.
2. Enter the name for the action object in the "Name:" entry field.
3. Click inside the "Name for user:" entry field.
The text is applied in the "Name for user:" entry field.
4. If you want to change the text in the "Name for user:" entry field, enter the desired text.
5. Click "OK".
The "Add maintenance actions" dialog box closes.
6. Click "OK".
The "Advanced Diagnostics Settings" dialog box closes.

Changing maintenance action properties

1. In the "Maintenance actions" group, select the action object whose properties you want to change.
2. Click "Properties...".
The "Properties maintenance action" dialog box opens.
The previous entries are displayed in the input dialog.
3. If you want to change the text in the "Name:" entry field, enter the desired text.
Proceed to step 5.
4. If you want to change the text in the "Name for user:" entry field, enter the desired text.
Click "OK".
The "Advanced Diagnostics Settings" dialog box opens.
 - If the change does not affect the other languages, click "No".
 - If the change affects the other languages, click "Yes".The "Advanced Diagnostics Settings" dialog box closes.
5. Click "OK".
The "Maintenance action properties" dialog box closes.
6. Click "OK".
The "Advanced Diagnostics Settings" dialog box closes.

Deleting a maintenance action

1. In the "Maintenance actions" group, select the action object you want to delete.
2. Click "Delete".
The action object is deleted.
3. Click "OK".
The "Advanced Diagnostics Settings" dialog box closes.

Result

After OS compilation and subsequent download, the modified text is displayed in the process control.

Additional information

You can find additional information on multilingual configuration of maintenance actions in the section "Configuring multilingual texts (Page 63)".

You can find additional information on languages in the *Process Control System PCS 7; Operator Station* configuration manual, section "Setting languages".

You can find additional information on assigning a maintenance action in the section ""Maintenance" view (Page 146)".

5.11.1.4 Configuring maintenance information

Introduction

In PCS 7 V8.2 and higher, user-specific maintenance information texts can be configured in the process control for displaying detailed diagnostic information in the faceplate.

Sixteen information objects are created automatically by the system.

Automatically created information objects are:

- External service request, no additional information
- Service interval reached
- Different operating state
- Different performance parameters
- Auxiliary energy problem
- Auxiliary material problem
- Mechanical problem
- Electrical problem
- Pneumatic problem
- Calibration request
- Measuring circuit check
- Process-related event
- Cleaning request
- Emptying request
- Wear reserve undershot
- Degree of pollution high

Texts for the automatically created maintenance information are available in multiple languages.

You can find information on this in the *Process Control System PCS 7; Operator Station* configuration manual, section "Setting languages".

An information object has the properties "Name:" and "Name for user:".

The name of the maintenance information is entered in the "Name:" entry field.

The name that is displayed in the faceplate is entered in the "Name for user:" entry field.

You can change the properties of information objects.

You can restore the diagnostic settings for all lists in the tab using the "Set Default Settings" button.

Note

This function is available if you configured the Maintenance Station in the MS Standard version.

Rule

- Maintenance information is always valid for the entire multiproject/project.
- The number of maintenance information objects is limited to 16.
- The name of the information object is managed in one language and cannot be changed.
- Maintenance information created by the system can be adapted on a user-specific basis.
- The text in the "Name for user:" field is managed in multiple languages.
You can find information on this in the section "Configuring multilingual texts (Page 63)".
- The following applies to a project created in PCS 7 versions before V8.2.
The maintenance information in the faceplate pre-assigned by the system is only displayed if the "Advanced Diagnostics Settings" dialog has been opened and confirmed with "OK".

Requirements

The Maintenance Station has been created.

Procedure

1. Open the plant view in the SIMATIC Manager.
2. Select the object in the tree view:
 - If you are using a multiproject, select the object "[name of the project] MP".
 - If you are using a single project, select the object "[name of the project]".
3. Select the menu command **Options > Plant Hierarchy > Advanced Diagnostics Settings...**.
The "Advanced Diagnostics Settings" dialog box opens.
4. Select the "Functions for maintenance" tab
5. In the "Maintenance information" group, select the information object whose properties you want to change.
6. Click "Properties...".
The "Properties maintenance information" dialog box opens.
The previous entries are displayed in the input dialog.
7. Enter the desired text.
8. Click "OK".
The "Advanced Diagnostics Settings" dialog box opens.
 - If the change does not affect the other languages, click "No".
 - If the change affects the other languages, click "Yes".The "Advanced Diagnostics Settings" dialog box closes.
9. Click "OK".
The "Properties maintenance information" dialog box closes.
10. Click "OK".
The "Advanced Diagnostics Settings" dialog box closes.

Result

After OS compilation and subsequent download, the modified text is displayed in the process control.

Additional information

You can find additional information on multilingual configuration of maintenance information in the section "Configuring multilingual texts (Page 63)".

You can find additional information on languages in the *Process Control System PCS 7; Operator Station* configuration manual, section "Setting languages".

You can find additional information on configuring in the section "Configuring the display of maintenance information (Page 68)".

You can find additional information on displaying maintenance information in the section ""External diagnostics" view (Page 175)".

5.11.1.5 Configuring multilingual texts

Introduction

Default texts for maintenance actions and maintenance information are available for the languages installed in the project.

Languages that might typically be installed in the project are:

- German (Germany)
- English (United States)
- French (France)
- Italian (Italy)
- Spanish (Spain, International Sort)
- Chinese (Simplified, PRC)
- Japanese (Japan)

You can display the languages installed in the project.

Select the menu command **Options > Language for Display Devices...** in SIMATIC Manager.

Requirement

The Maintenance Station has been created.

The desired languages have been installed in each project.

Procedure

1. Select the menu command **Options > Language for display devices**.
2. Select the desired language as the default language.

5.11 Advanced diagnostics settings

3. Click "OK".
4. Select the menu command **Options > Plant Hierarchy > Advanced Diagnostics Settings....**
5. Select the appropriate text.
6. Click "Properties".
7. Enter the desired text in the "Name for user:" field.
8. Click "OK".
9. To change the text in the selected language only, click "No".
10. Click "OK".
11. Repeat steps 5 to 10 for all texts you want to change in the selected language.
12. Click "OK".
13. Repeat steps 1 to 12 for all texts and languages you want to change.

Result

After OS compilation and subsequent download, the modified text is displayed in the process control.

Additional information

You can find additional information on languages in the *Process Control System PCS 7; Operator Station* configuration manual, section "Setting languages".

5.11.2 "Other settings" tab

5.11.2.1 Automatic positioning of block icons in the areas

Introduction

You specify the scope for creating/updating diagnostics screens in the "Automatic positioning of the block icons in the areas" area of the "Other settings" dialog.

Automatic positioning can be selected for one of the following diagnostic areas.

- AS/system
- Field devices
- User objects
- Network objects
- PC stations

The selection applies to the selected diagnostic area including all subordinate levels.

The system offers the following options:

- Check box cleared
This is the default setting.
When you create/update a screen, all PCS 7 block icons are arranged automatically, starting in the top left corner.
Screens in which a rack structure (for example, ET 200 central rack) is displayed are exceptions to this. In this case, the block icons for objects are arranged in the order of their slots.
After you update/create the diagnostics screens, move the block icons to meet your requirements. Block icons that have been moved remain in their position after the screen is updated. New block icons are added in the top left corner of the screen.
Note that adding new block icons may cause icons to overlap.
Block icons to be deleted are removed from the screen. Their position in the screen remains unoccupied.
- Check box selected
The block icons for the selected diagnostic area are repositioned automatically.
All block icons are repositioned.

Note

This function is available if you configured the Maintenance Station in the MS Standard version.

Requirement

The Maintenance Station has been created.

Procedure

1. Open the plant view in the SIMATIC Manager.
2. Select the object in the tree view:
 - If you are using a multiproject, select the object "[name of the project] MP".
 - If you are using a single project, select the object "[name of the project]".
3. Select the menu command **Options > Plant Hierarchy > Advanced Diagnostics Settings....**
The "Advanced Diagnostics Settings" dialog box opens.
4. Select the "Other settings" tab.
5. Select the desired diagnostic area.
6. Click "OK".
These settings are saved retentively.

Result

When the "Create/update diagnostic screens" function is executed, the block icons for the selected diagnostic area are repositioned automatically.

After OS compilation and subsequent download, the changes are applied in the process control.

Additional information

You can find additional information in the section "Creating/updating the diagnostic screens (Page 80)"

5.11.2.2 Storage location for the files of the (filtered) total export

Introduction

In the "Storage location for the files of the (filtered) total export" area of the "Other settings" dialog, you specify the user-specific storage location for the files of the (filtered) total export.

The user-specific target directory can be configured as an absolute or relative path.

Path	Example of a storage path	Storage location
Absolute path	D:\folder	On the MS server(s) in the configured path
Relative path	\computer name\shared drive \folder	On the specified computer in the configured path

In a redundant system, the total export file is saved on the MS server and on the redundant partner when using an absolute path.

Requirement

The Maintenance Station has been created.

Procedure

1. Open the plant view in the SIMATIC Manager.
2. Select the object in the tree view:
 - If you are using a multiproject, select the object "[name of the project] MP".
 - If you are using a single project, select the object "[name of the project]".
3. Select the menu command **Options > Plant Hierarchy > Advanced Diagnostics Settings....**
The "Advanced Diagnostics Settings" dialog box opens.
4. Select the "Other settings" tab.
5. Specify the storage location for the files of the (filtered) total export.
6. Click "OK".
These settings are saved retentively.

Result

After OS compilation and subsequent download, the setting is applied in the process control and saved in the "@ExportPath" tag.

Files of the (filtered) total export are additionally stored at the specified storage location.

5.11.2.3 Navigation information in the screen

Introduction

In the "Navigation information in the screen" area of the "Other settings" dialog, you specify whether and at which location the path will be displayed within the plant hierarchy in the diagnostic screen in the process control.

The path can be displayed at the following positions in the diagnostic screen:

- Top left
- Top center
- Top right
- Bottom left
- Bottom center
- Bottom right

The overview screen of the diagnostic screens is not affected by these settings.

Note

This function is available if you configured the Maintenance Station in the MS Standard version.

Requirement

The Maintenance Station has been created.

Procedure

1. Open the plant view in the SIMATIC Manager.
2. Select the object in the tree view:
 - If you are using a multiproject, select the object "[name of the project] MP".
 - If you are using a single project, select the object "[name of the project]".
3. Select the menu command **Options > Plant Hierarchy > Advanced Diagnostics Settings...**. The "Advanced Diagnostics Settings" dialog box opens.
4. Select the "Other settings" tab.
5. Select the "Display" check box.
6. Select the position for the display of the path in the diagnostics screen.

5.12 Configuring the display of maintenance information

7. If you want to have the block icons repositioned, select the "Re-position block icons" check box.
8. Click "OK".
These settings are saved retentively.

Result

When the "Create/update diagnostic screens" function is run, the associated path will be displayed in the diagnostic screens at the selected position.

After OS compilation and subsequent download, the changes are applied in the process control.

Note

If block icons and path information overlap in the diagnostic screens, use the "Re-position block icons" option.

5.12 Configuring the display of maintenance information

Introduction

This section describes the configuration steps for displaying the maintenance information in the process control.

Requirement

- The maintenance information has been created.
You can find information on this in the section "Configuring maintenance information (Page 61)".
- Channel blocks of the Advanced Process Library are applied (in PCS 7 V8.2 or higher).

Procedure

1. Activate "Feature.Bit10" on the channel block.
2. Interconnect the "MS_Ext" input on the channel block with the signals of the external maintenance state of the user program.
You can use the "MSTOu" converter block for this.
3. Interconnect the "Text_Ref" input on the channel block with the signals you use for displaying the external diagnostic information.
You can use the "BO_W" converter block for this.
The individual bits of the "Text_Ref" input activate the state display in the faceplate in the "External diagnostics" view in process mode.

Note**Maintenance demanded and maintenance required**

Note that only the external maintenance statuses "Maintenance demanded" (corresponds to significance 6) and "Maintenance required" (corresponds to significance 5) are taken into account in the diagnostics block.

These maintenance statuses trigger the messages "Maintenance demanded (external)" and "Maintenance required (external)" in the process control.

Note**Multiple channel blocks for HART modules**

When HART modules and secondary variables are used, you use multiple channel blocks for the same channel of the module.

The above-mentioned procedure must be performed for each channel block.

Result

After AS and OS compilation and subsequent download, the maintenance information is displayed in the process control.

Additional information

You can find additional information on displaying maintenance information in the section ""External diagnostics" view (Page 175)".

5.13 Configuring the user diagnostics

5.13.1 Overview

Introduction

Passive or indirect components without self-diagnostics (for example, pumps, motors, control loops) can be monitored with the help of the user diagnostics. A "user" area is created within the diagnostic structure for this purpose.

You can perform the following tasks in the "user" area:

- Creating individual diagnostic structures
- Creating project-specific diagnostics rules
- Configuring condition monitoring functions

Note

You can use the user diagnostics in the MS Standard version only.

User diagnostic structure

In the plant hierarchy, you can create **one** other hierarchy folder under the "Diagnostics" hierarchy folder and additional hierarchy subfolders under this hierarchy folder to build a user diagnostic structure based on technological aspects.

In the user diagnostic structure, you can insert **one** self-created diagnostic screen and CFC charts for each hierarchy folder.

You can incorporate buttons into the diagnostic screens for switching between the user-created and automatically created diagnostic screens.

The diagnostics functions are performed with different blocks, for example AssetM, which are integrated in the CFC charts.

Diagnostic function with the AssetM block

The "AssetM" block has the function of a substitute object and is used for monitoring components without self-diagnostics.

You can use the "AssetM" block to monitor three analog values.

Each analog value can be monitored for limits.

The maintenance status is defined on the basis this limit, demanded or alarm defined (implementation of traffic light function in accordance with NE 107 of NAMUR).

The following functions are also available to you here:

- 7 inputs for reporting a corresponding maintenance status
- 16 inputs for displaying detailed diagnostics information
- 1 input for the maintenance status
- 1 input for the signal status

Cascading the signal status of process values

By using the "MuxST" multiplex block, you can interconnect the signal status of different process values weighted to the "AssetM" block. The signal status with the highest priority is shown in the faceplate in process mode.

The signal status must correspond to the PA profile 3.x.

Cascading the maintenance status

By using the "MuxMST" multiplex block, you can interconnect the maintenance status of different "AssetM" blocks to a higher level "AssetM" block. The maintenance status with the highest priority is shown in the faceplate in process mode.

5.13.2 How to create the user diagnostic structure

Introduction

You create the user diagnostic structure in the project with the AS and the project with the maintenance station. If the AS and the maintenance station are in different projects of a multiproject, configure the CFC charts in the project with the AS for the user diagnostic area and, in the project with the maintenance station, configure the OS pictures for the user diagnostic area. The user diagnostic area must be created in both projects.

Requirement

The diagnostic structure has been created.

Procedure

1. Open the plant view in the SIMATIC Manager.
2. In the plant hierarchy, select a project for which you wish to create a user diagnostic structure.
3. In the tree view, select the diagnostic hierarchy folder directly below which the "AS objects" hierarchy folder is located.
4. Select the menu command **Insert > Technological Objects > Hierarchy Folder**.

Note

There may only be one hierarchy folder created for the user diagnostic structure under the "Diagnostics" hierarchy folder.

5. Mark the hierarchy folder in the detail view and select the menu command **Edit > Rename**.
6. Enter a unique name that is as short as possible and confirm with the Enter key.
The name is applied.
You can create additional hierarchy subfolders below this hierarchy folder.

Note

Note that a maximum of 128 characters are allowed for the length of tag names.

You can find additional information about this in the manual *Process Control System PCS 7; Operator Station*.

7. If you have not created the user diagnostic structure in the project of the MS server, you must update the plant hierarchy.
You can find additional information about this in the section "How to update the user diagnostic structure (Page 74)".

5.13.3 How to create a CFC chart and insert an AssetM block

Introduction

The "AssetM" block is used to monitor user-specific sections of the plant. This block is integrated into a CFC chart. Multiple blocks can be integrated into a CFC chart.

Requirement

The user diagnostic structure has been created.

Procedure

1. In the tree view, select the hierarchy folder in which you are creating a CFC chart.
2. Select the menu command **Insert > Technological Objects > CFC**.
A new CFC chart is created.
3. Select the CFC chart in the detail view.
4. Select the menu command **Edit > Rename**.
Enter a unique name that is as short as possible and confirm with the Enter key. The name is applied.

Note

Note that a maximum of 128 characters are available for tag names.

For more information on this, refer to the *Process Control System PCS 7; Operator Station* manual.

5. Mark the CFC in the detail view and select the menu command **Edit > Open Object**.
6. Select the "AssetM" block from the PCS 7 Advanced Process Library and drag it into the CFC.
7. Interconnect the signals, which are to be displayed via the PCS 7 maintenance station, using the "AssetM" block.
You will find additional information on the "AssetM" block in the Online Help for the block.
8. Execute steps 1 to 7 if you want to create additional CFCs.

Additional information

Additional information on this is available in the *Process Control System PCS 7; Engineering System* manual.

5.13.4 Assigning parameters for the AssetM block

Overview

After the AssetM block has been placed in the CFC, interconnect the parameters that are to be used.

In order to display information in the faceplate from SIMATIC PDM for the monitored component during process control, a SIMATIC PDM object must be created for each AssetM block in the process device plant view.

This SIMATIC PDM object saves the rating plate (identification data) and the diagnostic texts. The "AssetMon" device is assigned to the SIMATIC PDM object.

The PLT ID is a connection parameter between a SIMATIC PDM object (parameter data EDD) and the faceplates in the Maintenance Station.

The PLT-ID is linked to the SIMATIC PDM object.

Procedure

The PDM object is created in SIMATIC Manager as follows:

1. Select **View > Process Device Plant View** in SIMATIC Manager.
2. Select a project in SIMATIC PDM in which you want to insert the SIMATIC PDM object.
3. Select **File > New object**.
4. Select the inserted object with the right mouse button.
5. Select **Device selection (Reassign)...** in the shortcut menu.
6. In the tree structure, select **Devices > DATA_OBJECTS > CFC > Siemens AG > AssetMon**.
7. Click **OK**.
8. Select the object with the right mouse button.
9. Select **Open object** in the shortcut menu.
10. Enter all required data in the parameter assignment mask.
11. Select **File > Save** and close the parameter assignment mask.
12. Enter the generated PLT ID for the associated "PLT ID" block parameter.

Note

The PLT ID cannot be changed or deleted.

Additional information

You can find additional information on the AssetM block in the manual *Process Control System PCS 7; Advanced Process Library*.

5.13.5 How to update the user diagnostic structure

Introduction

The following steps are only required if you have created a user diagnostic structure in a location other than the MS server project.

You have to update the plant hierarchy in the multiproject.

Procedure

1. In the "plant hierarchy", select the project for which you have created a user diagnostic structure.
2. In the shortcut menu, select the menu command **Plant Hierarchy > Update in Multiproject**. The "Plant Hierarchy - Update in Multiproject" dialog box opens.
3. Click "OK".
The "Plant Hierarchy - Update in Multiproject (target projects)" dialog box opens.
4. Enable the check box for the MS server's current project.
5. Click "OK".
6. Perform steps 1 to 6 for all the projects in a multiproject for which you have created a user diagnostic structure.

Result

The user diagnostic hierarchy of the other projects is added to the plant hierarchy in the project of the MS server.

5.13.6 How to Create User Diagnostic Screens

Introduction

You create the user diagnostic screens in the hierarchy folders of the user-specific diagnostic structure in the project. In an MS single station system, this is the MS project. In an MS multiple station system, it is the MS server project.

You can create one user diagnostic screen per hierarchy folder.

Requirements

- The user diagnostic structure has been created.
- The CFCs for the user diagnostic structure have been created.
- A multiproject update is performed for multiprojects.

Procedure

1. Open the plant view in the SIMATIC Manager.
2. In the tree view, select the hierarchy folder for which you want to create the user diagnostic screen.
3. Select the menu command **Insert > Technological Objects > Picture**.
4. Enter a unique name that is as short as possible and confirm with the Enter key.
The name is applied.
5. Click "OK".
6. Select the picture in the detail view and select the menu command **Edit > Object properties....**
7. Select the "Block icons" tab.
8. Select the "Derive icons from the plant hierarchy" check box.
9. Repeat steps 2 through 9 for all hierarchy folders into which you wish to insert user diagnostic screens.

5.13.7 How to create the group display hierarchy for the user diagnostics

Introduction

You will need to refer to the information in this section if you have added a user-specific diagnostic structure to the diagnostic structure.

Requirement

The WinCC project is opened:

- In an MS single station system, this is the WinCC project of the MS.
- In an MS multiple station system, it is the WinCC project of the MS server.

Procedure

1. In the WinCC Explorer tree view select the "Project Editor".
2. Open the shortcut menu and select the menu command **Open**.
The "OS Project Editor" dialog box opens.
3. Select the "Message Representation" tab.
4. Enable the "Create/Update Group Displays" check box in the "Group display hierarchy" group.
5. Click "OK".
The group displays for the hierarchy calculation are automatically inserted into the screens when the hierarchy is saved, the OS is compiled or the OS is downloaded.

5.14 Setting up SIMATIC PDM

Overview

If you have configured devices with SIMATIC PDM, the following requirements must be met on the engineering station for visualization in the process control.

- Installation
The SIMATIC Process Device Manager (SIMATIC PDM) add-on package (requires a license) is installed.
- In the Windows Control Panel
 - The Microsoft Internet Information Server (IIS) with ASP.NET support is installed.
 - The rule in the firewall is enabled.
 - The SIMATIC PDM users are added to the Logon_Administrator Windows group.
- In the Windows Start menu
 - The SIMATIC PDM Web server is configured.
- In SIMATIC Manager:
 - A PDM application is inserted in the PC station of the engineering station.
 - In the SIMATIC PDM "Settings..."
The path to the maintenance project is entered on the "Maintenance Station" tab.
For multi-user engineering with several engineering stations, the path must be entered for each engineering station.
 - In the SIMATIC PDM "Role management..."
All Windows users who use SIMATIC PDM Web are assigned the "Service user" role.

Additional information

You can find information about this in the following documents:

- Online Help for *SIMATIC PDM*
- Manual *Process Control System PCS 7; Help for SIMATIC PDM*

5.15 Overview of complete export

Overview

Note

You use this function in process control if you are using the MS Standard or SIMATIC PDM MS version of the maintenance station.

Identification data from all diagnostics-capable components (such as field devices, PCs, AS components, network components) can be exported.

With complete export, the data from all the components with diagnostics functionality is exported to the export file "@XML_Export.sml".

The complete export file is stored in the default target directory on the MS in the "AssetExport" folder of the OS project directory.

The complete export file is stored on both partners in a redundant system.

The complete export file can also be stored in a configured target directory (e.g., for reuse of the data in external systems).

You can find information on this in the section "Storage location for the files of the (filtered) total export (Page 66)".

In the process control, the system allows you to display the data of the last complete export in filtered form and to export this data.

Additional information

You can find additional information about displaying and exporting the data in process control in the section "Functions in the overview screen (Page 97)".

5.16 Overview of individual export

Overview

Note

You use this function if you are using the MS Standard or SIMATIC PDM MS version of the maintenance station.

Data of a diagnostics-capable component (such as field devices, PCs, AS components, network components) can be exported.

During an individual export, the data of a diagnostics-capable component is written to an export file.

The file name is automatically generated by the system.

The individual export file is stored in the default target directory on the MS in the "AssetExport \Out" folder in the OS project directory.

The individual export file is stored in the standard target directory on the connected OS server (current preferred server) in a redundant system.

The individual export file can also be stored in a configured target directory (e.g. for reuse of the data in external systems).

You can find information on this in the section "Configuring maintenance targets for individual export (Page 56)".

Structure of the file name

The name of the export file is structured as follows:

"<Tagname>_<AssetID>_YYYY_MM_DD_HH_MM_SS_SSS.XML"

Structure of the file name	Description
<Tagname>	Configured name of the component (see rating plate)
<AssetID>	Unique, system-assigned identification number of the component
YYYY_MM_DD_HH_MM_SS_SSS	Date and time of the export
xml	File type

Additional information

You can find additional information about displaying and exporting the data in the process control in the section ""Maintenance" view (Page 146)".

5.17 Engineering for maintenance

5.17.1 Engineering for release request

Introduction

You must make interconnections on the blocks in the CFC chart for the release request.

We recommend that the configuration steps be taken into consideration when the typicals are created.

Requirement

- The CFC typicals have been created.
- The PCS 7 Advanced Process Library V8.2 or higher is used.

Procedure

1. Open the CFC typical.
2. Interconnect the output parameter MS_Req of the channel block with a free input parameter ExtMsg of the technological block.
3. Change the message class of the utilized external message on the technological block to the message class not requiring acknowledgment "Request for operator input - General".
4. Adapt the event text as desired.

You can connect the release request signals of multiple channel blocks to the technological block with an OR operation.

Result

The release request "Sequence for maintenance (Page 191)" can be used.

After AS and OS compilation and subsequent download, the changes are applied in the process control.

Compile and download the OS in which the technological block will be displayed.

Additional information

You can find additional information on maintenance in the section "Overview of maintenance (Page 189)" and in the manual *Process Control System PCS 7; Advanced Process Library*.

5.17.2 Engineering for maintenance release

Introduction

You must make interconnections on the blocks in the CFC chart for the maintenance release.

We recommend that the configuration steps be taken into consideration when the typicals are created.

Requirement

- The CFC typicals have been created.
- The PCS 7 Advanced Process Library is used.

Procedure

1. Open the CFC typical.
2. Interconnect the output parameter MS_Release of the technological block with the input parameter MS_Release of the channel block.
You can interconnect the maintenance release of a technological block to multiple channel blocks.
3. Interconnect the output parameter OosAct of the channel block with the input parameter OosLi of the technological block.
You can connect the "In Service" information (OosAct) of multiple channel blocks to the technological block with an OR operation.
4. Use the feature bit "Reaction to the out of service mode" to define the desired behavior of the technological block.

Result

The maintenance release "Sequence for maintenance (Page 191)" can be used.

After AS and OS compilation and subsequent download, the changes are applied in the process control.

Compile and download the OS in which the technological block will be displayed.

Additional information

You can find additional information on maintenance in the section "Overview of maintenance (Page 189)" and in the manual *Process Control System PCS 7; Advanced Process Library*.

5.18 Creating/updating the diagnostic screens

Introduction

The diagnostic screens in the diagnostics area with their block icons are created or updated with this function.

The "@@maintenancetypicals.pdl" file contains all the templates for block icons which are used to display the diagnostic information.

If you execute the "Create/update diagnostic screens", PCS 7 automatically uses block icons from this file. This file is installed as standard during the installation of PCS 7.

You can customize block icons to your specific requirements.

Note

If you want to customize the standard block icons included in the @@maintenancetypicals.pdl file, do not change this file. All changes in this file are overwritten by an update.

Always create a new file. The name of the file starts with the fixed name component "@maintenancetypicals". You can specify the rest of the file name yourself. Insert the required block icons there and customize them.

The process is exactly the same as for adapting the standard block icons.

You can find additional information about this in the section "Example: Creating object templates" in the *WinCC Information System* online help.

You can find additional information on positioning block icons in the section "Automatic positioning of block icons in the areas (Page 64)".

Requirements

The configuration must have the following status:

- The settings relating to the diagnostic structure have been made.
You can find information on this in the section "How to make the settings in the plant hierarchy (Page 50)".
- The "Language for display devices" is set as the default language in the SIMATIC Manager. Texts displayed during process control are generated in this language.
- When you use SIMATIC PDM, the maintenance project is configured in the settings for the SIMATIC PDM project.

Procedure

1. Open the SIMATIC Manager and activate the plant view.
2. Select the required hierarchy folder in the tree view.
 - If you want to create diagnostics screens for the multiproject/project, select the multiproject/project.
 - If you wish to create diagnostic screens for certain hierarchy folders, select the required hierarchy folder in the maintenance station.
3. Select the **Options > Plant Hierarchy > Create/Update Diagnostics Screens** menu command.
4. If you have already compiled the AS charts, no other dialog box is opened, and the diagnostic screens are created/updated directly.
Proceed to step 6.
5. If you haven't compiled the AS charts yet, the "Create module drivers" dialog box is opened one after another for every CPU for which this function has not been executed yet.
Click "OK" in all dialog boxes to create the required diagnostic blocks.

Note

If you click "Cancel" in this dialog box, no module drivers are created for this CPU, and the diagnostic screens are not updated!

6. The "Create/update diagnostic screens" dialog box opens after the completion of the generation process.
Click "Yes".
The function log is displayed in the "WordPad" editor. If error messages appear, rectify the errors and run the function again.
7. Close the "WordPad" editor.

Result

The diagnostic screens are created or updated.

After OS compilation and subsequent download, the diagnostic screens are displayed in the process control.

Displaying a log of the diagnostic screens

In the SIMATIC Manager select **Options > Plant Hierarchy > Diagnostics Screen Log**.

The diagnostic screen log contains information about the creation of the diagnostic screens.

5.19 Compiling and downloading

5.19.1 Compilation and downloading of the Maintenance Station

Compiling and downloading an MS single station system or multiple station system

- **Compile**
The diagnostic screens you generated or updated must be compiled and downloaded to the maintenance station.
Before you compile the maintenance station, the diagnostic screens have to be created at least once or updated after configuration changes.
"Area-oriented" must be set as OS compilation mode.
In an MS single station system, compile the MS.
In an MS multiple station system, compile the MS server.

Note

Clear the "Picture Tree" check box in the dialog for OS compilation if you do not want to derive the hierarchy from the plant areas.

The hierarchy for the diagnostic area is created even if the check box is cleared.

- **Downloading**
Perform the download after the compilation.
If you are using an MS multiple station system, load the MS server.
If you are using a redundant MS multiple station system, download the MS server and the redundant partner.
You must not download an MS single station system.

5.19.2 Compiling and downloading SIMATIC PDM MS

Requirements

- Configuration in the process device network view has been completed.
- The parameter view for all field devices has been opened once.
- The "Create/update diagnostics screens" function has been executed.
- The project is open in SIMATIC Manager.

Procedure

Compiling and downloading charts

1. Select the "Charts" hierarchy folder in the component view of SIMATIC Manager.
2. Select the **Edit > Compile** menu command.
3. Select the following check boxes:
 - Entire program
 - Generate module drivers

Download WinLC RTX

1. Select the PC station in the component view of the SIMATIC Manager.
2. Select the menu command **PLC > Download**.

Compiling OS

1. Select the OS hierarchy folder in the component view of SIMATIC Manager.
2. Select the **Edit > Compile** menu command.
3. Select the following check boxes:
 - Entire OS
 - With memory reset

Download OS

The OS for SIMATIC PDM MS does not have to be downloaded.

5.20 Server data and downloading of a client

Server data

Before an MS or OS/MS client is downloaded, it must be assigned the relevant OS server. This loads the server data to the MS or MS/OS client project.

Client	Server data (server package)		
	MS server	OS servers whose automation systems are being monitored	OS server whose OS area is dis- played
MS client on an engineering station	X	X	-
MS client on a separate PC station			
OS/MS client	X	X	X

Downloading

The MS client or OS/MS client is downloaded in exactly the same way as an OS client. The MS client in the engineering station does not have to be downloaded.

Additional information

Additional information is available in the manual *Process Control System PCS 7; Operator Station* in the sections "Downloading the server data" and "How to compile and download several operator stations".

5.21 Changes in the project

Change in the version

You change the version in the SIMATIC Manager in the plant hierarchy settings. You can find additional information about this in the section "How to make the settings in the plant hierarchy (Page 50)"

If you change the version of the maintenance station, you must observe the following:

- MS Standard to MS Basic
 - The diagnostic structure below the AS objects, the diagnostic structure of the field devices and the user diagnostic structure including the contained pictures are deleted.
- MS Basic to MS Standard
 - The diagnostic structure of the AS objects is regenerated.
 - The diagnostic structure of the field devices is created.
- MS Standard to SIMATIC PDM MS
 - The diagnostic structure of the AS objects including the contained pictures is deleted.
 - The diagnostic structure of the field devices is regenerated.
- SIMATIC PDM MS to MS Standard
 - The diagnostic structure of the field devices including the contained screens is regenerated.
 - The diagnostic structure of the AS objects is generated.
- MS Basic to SIMATIC PDM MS
 - The diagnostic structure of the AS objects including the contained pictures is deleted.
 - The diagnostic structure of the field devices is created.
- SIMATIC PDM MS to MS Basic
 - The diagnostic structure of the field devices and the user diagnostic structure including the accompanying screens are deleted.
 - The diagnostic structure of the AS objects is generated.

After changes, you may have to perform the following tasks:

- Creating/updating the diagnostic screens (Page 80)
- Compilation and downloading of the Maintenance Station (Page 82)
- Server data and downloading of a client (Page 83)

Changes in HW Config

Changes in the hardware configuration of the engineering system affect the displays in the diagnostic screens.

After changes, perform the following tasks:

- Creating/updating the diagnostic screens (Page 80)
- Compilation and downloading of the Maintenance Station (Page 82)

Add OS server

Perform the following tasks if an OS server is added after creation of the diagnostic structure in the multiproject/project:

- Assign OS server server data to the MS server
You can find more information on this topic in the *Process Control System PCS 7; Operator Station* manual in the section "How to load server data".
- Load MS server
You can find additional information about this in the section "Compilation and downloading of the Maintenance Station (Page 82)".

Subsequently defining OS server as MS server

If an OS server is defined at a later point in time as MS server in a plant in operation, you need to perform not only the configuration tasks described for the MS server but also a download for the OS client, which assumes the role of the OS/MS client.

For additional information on downloading, refer to the section "Server data and downloading of a client (Page 83)".

Changes in the software

- Change the standard message server for the "Alarms" component
If the assigned standard message server for the "Alarms" component is changed in a plant configuration in a multiple-station system with an OS client, the MS server then has to be compiled and downloaded.
You can find additional information about this in the manual *Process Control System PCS 7; Operator Station* in the section "How to assign the standard server".
- Change the screen resolution
If the screen resolution is changed in the "Available Layouts:" group on the "Layout" tab of the OS project editor, the next time "Create/Update Diagnostic Screens" is called, the available overview screen is renamed and a new overview screen that corresponds to the new screen resolution is created. A respective message is included in the log of the function "Create/Update Diagnostics Screens". This also provides the new name of the former overview screen.
If you have manually changed the overview screen, you can manually carry out the changes in the current overview picture by copying from the former overview screen.
All other existing diagnostic screens retain their screen resolution. If the images are created in a new screen resolution, you must manually delete the screens. User-specific changes will be lost.

Changing the storage location of a subproject

If you change the storage location of a subproject with the "Save As" function, you must stop the SIMATIC PDM Asset Service before performing the "Save As" operation.

When the "Save As" operation is finished, you must restart SIMATIC PDM Asset Service.

5.22 Deleting the diagnostics area

Introduction

During deletion of the diagnostic structure, the following is deleted:

- Diagnostics hierarchy folder with all subfolders
- Target objects
- Action objects
- Link objects

Requirement

- The diagnostic structure and/or user diagnostic structure has been created.

Note

If you have manually changed diagnostic screens, make sure that you make a backup copy before deleting, because all changes will be lost after deleting and recreating the diagnostic structure.

Procedure

1. Open the plant view in the SIMATIC Manager.
2. Select the object in the tree view:
 - If you are using a multiproject, select the object "[name of the project] MP".
 - If you are using a single project, select the object "[name of the project]".
3. Select the menu command **Options > Plant Hierarchy > Settings...**.
The "Plant Hierarchy - Settings" dialog box opens.
4. Proceed as follows if you have selected a multiproject:
 - Click "OK".
The "Plant Hierarchy - Settings" dialog box opens.
 - Proceed to step 6.
5. If you have selected an individual project or a project within a multiproject, the "Plant Hierarchy - Settings" dialog box opens.
6. Disable the "Derive diagnostic screens from the plant hierarchy" check box.
7. Click "OK".

Note

The complete diagnostic structure and all the diagnostic screens are deleted, including the user diagnostic structure.

The charts with the diagnostic blocks and the charts of the user diagnostics are not deleted during this process; they remain in the chart folders for the S7 programs.

8. Compile the OS.
9. In an OS multiple station system, download the OS server.

Operator control and monitoring

6.1 Starting the process control

MS Standard and MS Basic

The start of the process control of a maintenance station is the same as the start of the process control of an Operator Station.

When an MS multiple station system and SIMATIC PDM are used, the engineering station must be switched on and the SIMATIC PDM Asset Service started for the SIMATIC PDM device data to be provided.

SIMATIC PDM MS

Before activating process control, check the setting for the WinCC project type in WinCC Explorer. A single station project must be set as the project type.

Activate process control in WinCC Explorer using the "Activate" icon.

OS simulation

You can **only** use the OS simulation function in the MS Standard or MS Basic version.

OS simulation for a PCS7 maintenance station in MS Standard and MS Basic is possible only to a limited extent (for example, no identification or diagnostics data).

6.2 Layout of the user interface

User interface in the process control

The user interface is structured in the same way as the Operator System interface. It is divided into 3 areas:

- Overview area (Page 91)

The overview area is displayed permanently. Its group displays for the various plant areas and the message line provide an overview of the entire plant.

Display and operator control in the overview area is the same as display and operator control in an OS.

If deviations exist, the document points this out.

- Working area (Page 94)

In the working area, the overview screen, the area overview screens and the diagnostic screens of the individual components are displayed for the diagnostics area.


- Button area (Page 94)

The button area is displayed permanently. It comprises several button sets between which the maintenance engineer (operator of the "Diagnostics" area) can switch.

The keys in the button sets are operated in the same way as the keys in an OS.

If deviations exist, the document points this out.

The following figure shows an example of the user interface:

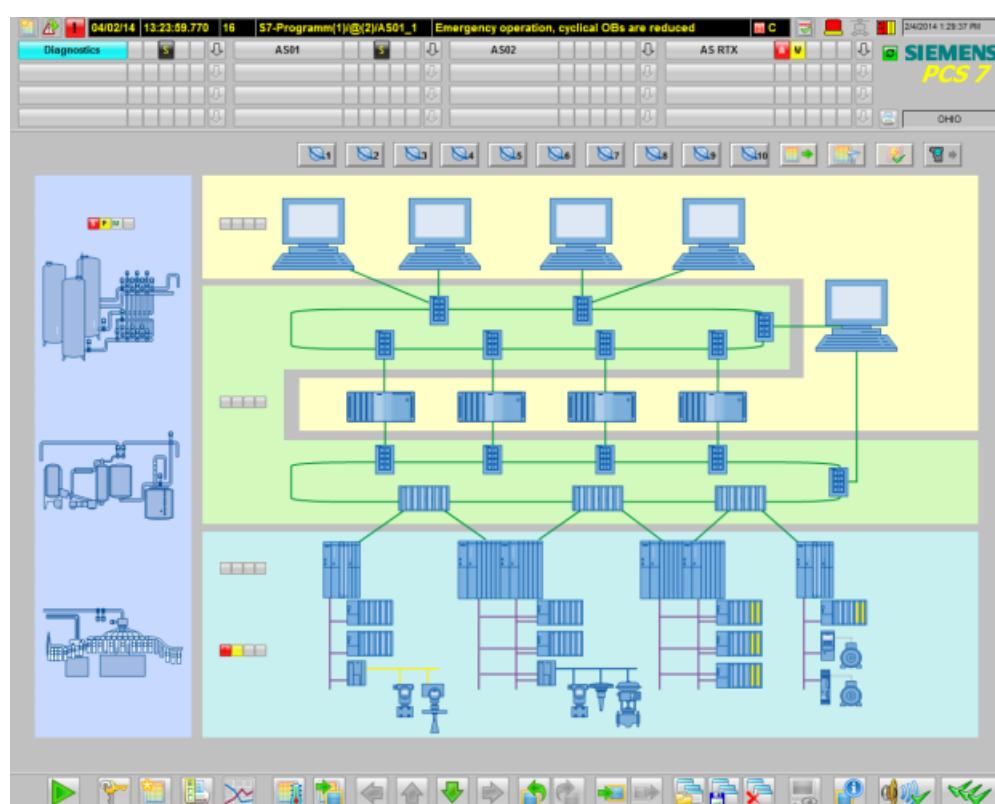

Additional information

You can find additional information on this in the manual *Process Control System PCS 7, OS Process Control*.

6.2.1 Overview area

Display in the overview area

The following figure shows an example of the overview area:



This section describes only the icons that are specific to the maintenance station.

"Highest priority messages" icon list

If at least one message with Priority 16 is active (incoming or incoming acknowledged state), the icon is displayed. This priority is predefined by the system for emergency operation of an AS.

To display the "Highest priority messages" list, click the icon.

Icon	Function	Permission
!	"Highest priority messages" list is called	Enable for the diagnostics area

In addition to the display of the icon, an AS process control message without area information is generated. The message comes in as soon as at least one highest priority message in the "Diagnostics" area has come in.

As soon as all highest priority messages in the "Diagnostics" area have gone out, the message without area information is assigned the status "outgoing".

For more information on configuration of the message priority see the manual *Process Control System PCS 7; Operator Station*.

Sum status of the plant

The plant operator obtains an overview of the statuses of the individual areas from the "Diagnostics" area.

The icons are displayed on each operator station regardless of whether the "Diagnostic" area is assigned to this operator station.

The following cases are exceptions to this:

- OS single-station projects
- All operator stations of a project if the maintenance station is an OS single-station project.

The following table shows an example of the assignment of the icons to their area and describes the possible statuses that each icon can have.

Display	Area	State
	PC stations	<ul style="list-style-type: none"> • Gray: There is no problem in the area.
	Network objects	<ul style="list-style-type: none"> • Yellow: There is at least one maintenance demand in the area.
	AS/system	<ul style="list-style-type: none"> • Red: There is at least one maintenance alarm in the area. • Yellow/red: There is at least one maintenance demand and one maintenance alarm in the area. • Blue: There is no connection to the MS server.

Note

If no maintenance group display is created for an area in the overview screen of the "Diagnostics" area, the corresponding icon is also not created.

Messages without area information regarding maintenance state

The system generates AS process control messages without area information regarding the maintenance state of components.

These messages are displayed on every OS station:

- In the single message line of the overview area
- In the message lists

It does not matter whether the "Diagnostics" area is shown on the operator station or not.

If at least one component has the state "maintenance alarm/demand" in one of the diagnostics areas (PC stations, network objects, AS/system), a message without area information of the same message type is also generated for this area.

When no more components have the state "maintenance alarm/demand", the message without area information is assigned the status "outgoing".

The following table shows the messages without area information:

Message type	Priority	Message text
Fault	0	<ul style="list-style-type: none"> • Maintenance alarm in the PC stations area of MS • Maintenance alarm in the network components area of MS • Maintenance alarm in the AS system area of MS
Error	0	<ul style="list-style-type: none"> • Maintenance demanded in the PC stations area of MS • Maintenance demanded in the network components area of MS • Maintenance demanded in the AS system area of MS

Area key for the diagnostics area

The following figure shows an example of the area key for the diagnostics area:



The area key is used to open the overview screen for the diagnostics area.

Navigation through the picture hierarchy is similar to navigation through the picture hierarchy of the OS areas.

Group display for the diagnostics area

In addition to the area key, the current message state is displayed on the third button of the group display of the entire diagnostics area.

The lower-level area overview screen is called via the group display.

The following table shows default system settings for the possible states:

Display	Message type/state	Priority	Message state
	Message is locked (1)	1	-
	AS process control fault	2	<ul style="list-style-type: none"> • "S" display • Flashing • Incoming message • Static • Message acknowledged
	AS process control error	3	<ul style="list-style-type: none"> "F" display • Flashing • Incoming message • Static • Message acknowledged

Display	Message type/state	Priority	Message state
	Maintenance demanded	4	"M" display <ul style="list-style-type: none"> • Flashing Incoming message • Static Message acknowledged
	No message is pending	5	-

The number in the priority column indicates the priority of the display. The lowest number has the highest priority.

Note that unacknowledged messages have a higher priority than acknowledged messages.

(1) At least one message is locked. Messages can only be locked for components from the AS/system, user objects, and field devices areas.

6.2.2 Button area

Representation of the button area

The figure below shows an example of a button set from the button area.



This section describes only the icons that are specific to the maintenance station.

Locking/unlocking messages

If a screen is open within an AS in the **AS/System and Field devices area**, messages can be locked or unlocked for the components shown in this screen and their subordinate components.

If a screen is open below the overview screen in the **User objects area**, messages can be locked or unlocked for the components shown in this screen and their subordinate components.

This function is not available in the **PC stations** and **Network objects** areas.

You can find additional information about locking/unlocking messages in the section: "How to lock and unlock messages (Page 137)".

6.2.3 Working area

Display in the working area

The diagnostic screens are displayed hierarchically in the working area.

You usually get from the overview to the detail via the hierarchy.

You can also change the screen via the hierarchy buttons in the button set.

The overview screen is the highest hierarchy level. You get to the respective area overview screen via the maintenance group displays of an area.

The components are displayed as block icons in the area overview screen.

The working area also displays faceplates, operator control windows, message lists and dialog windows.

Navigation information can be displayed in the diagnostic screens. You can find information on configuring in the section "Navigation information in the screen (Page 67)".

Additional information

You can find additional information in the following sections:

- Overview screen (Page 95)
- Area overview screens (Page 117)
- Block icon (Page 119)
- Faceplate (Page 131)

6.3 Overview screen


Introduction

The maintenance engineer gets an overview of the plant status of the entire plant in the overview screen.

A maintenance group display is displayed in each area if there is at least one screen for this area. The areas are shown in color as shown below:

- PC stations (on a yellow background)
- Network objects (on a green background)
- AS/system (cyan background)
- Field devices (cyan background)
- User objects (on a light blue background)

The following figure shows an example of the overview screen for the diagnostics area:

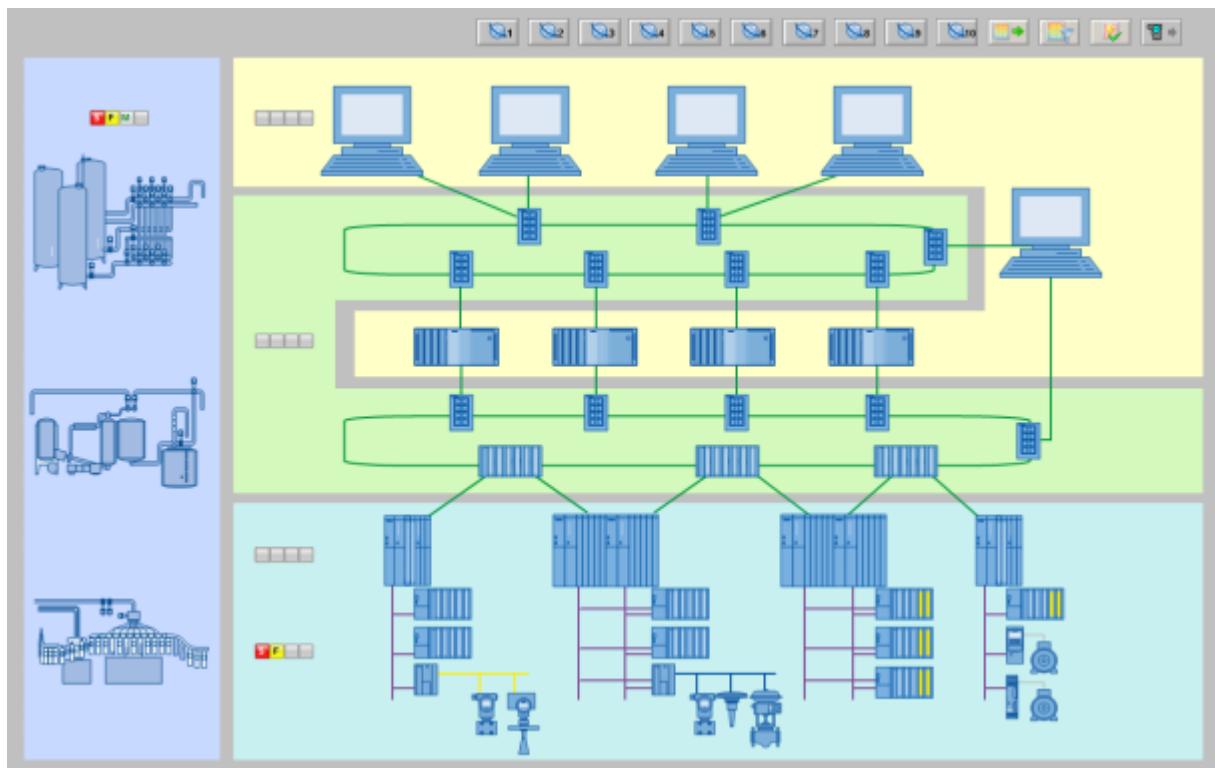

Calling the overview screen

You call the overview screen as follows:

- Area button
- Group display in the overview
- Picture Tree Navigator
- Navigation buttons in the button set

Maintenance group display in the overview screen

The maintenance group display gives maintenance engineers an overview of the plant status of the individual area.

You can change to the area screen from the maintenance group display.

The following table shows the possible states:

Display	Message class/status	Message status
	Message is locked (1)	-
	AS process control fault/ maintenance alarm	<p>"S" display</p> <ul style="list-style-type: none"> • Flashing • Incoming message • Static Message acknowledged

Display	Message class/status	Message status
	AS process control error/ maintenance demanded	"F" display • Flashing Incoming message • Static Message acknowledged
	Preventive maintenance/ maintenance required	"M" display • Flashing Incoming message • Static Message acknowledged
	No message is pending	-

(1) At least one message is locked. Messages can only be locked for components of the areas AS/system, user objects and field devices.

6.4 Functions in the overview screen

6.4.1 Overview

Functions in the overview screen

The following functions can be executed in the overview screen:

- Calling web pages via maintenance links
- Complete export
- Filter function
- Message correction for components with SNMP functionality
- Parameter data export of EDD-based devices

You can find additional information about this in the following sections.

6.4.2 Calling web pages via maintenance links

Introduction

Up to 10 Web pages that are used to provide support for diagnostics measures can be called. The icons are displayed when the calls are configured.

The first 3 icons are also displayed in the header of the faceplate.

Requirements

- The maintenance station is available in the MS Standard version.
- The maintenance target (web address) has been configured.
- The maintenance target can be accessed via the network.

Icon in the user interface

Icon	Function	Permissions
	Display of the Web page Tooltip text: Name of the maintenance link	"Higher process controlling" for diagnostics area

Procedure

1. Click on the icon.

Result

The web page is displayed in a screen window.

Additional information

You can find information on configuring in the section "Configuring maintenance links (Page 54)".

6.4.3 Complete export

Introduction

The complete export is used to export data of all the objects with diagnostics functionality (for example, field devices, PCs, and network components).

This file forms the basis for the filtered complete export.

Icon in the user interface

Icon	Function	Authorizations
	Trigger complete export	"Process controlling" for the diagnostics area

Procedure

1. Click on the icon.

Result

The complete export is executed.

The information is saved to the file "@XML_Export.sml".

Additional information

You can find information on configuring in the section "Overview of complete export (Page 76)".

6.4.4 Filtering the data of the complete export

Introduction

The system allows you to display the data of the last complete export filtered and to export this data.

The filter function is available if your plant is not operated via a PCS 7 Web client.

A complete export is performed automatically when this function is used.

Various filter criteria are available for filtering data.

Icon in the user interface

Icon	Function	Permissions
	Filter device status <ul style="list-style-type: none"> • Call filter view • Filtering data 	"Process controlling" for the diagnostics area


Procedure

1. Click on the icon.

Result

The filter view is called.

The following figure shows an example of a filter view:

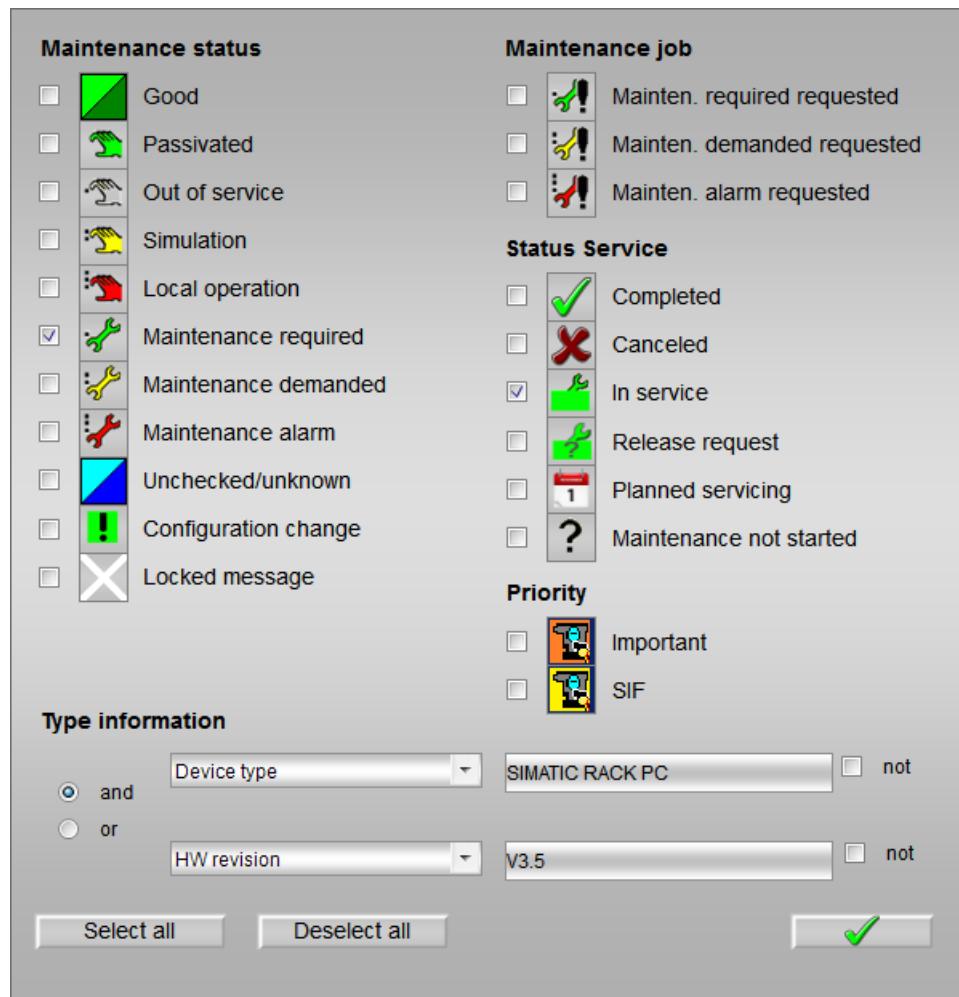

Additional information

For more information on filtering, refer to the section "How to filter and export the data of the complete export".

6.4.5 How to filter and export the data of the complete export

Requirements

The overview screen is open.

Procedure

1. Define the desired filter criteria.
 - Select the desired filter criteria check boxes in the "Maintenance status", "Maintenance job", "Service status" and "Priority" groups.
You can select all check boxes with the "Select all" button.
Click "Deselect all" to clear all check boxes.
 - In the "Type information" group, you can select an area from the drop-down lists and enter the text you are looking for in the input boxes.
The characters "*" and "?" can be used as wildcards.
Link the fields.
2. Click the "Display data" button.
The "Result" view is displayed.
3. Click "Save" if you want to save the exported data.
You can adjust the filter criteria with the back button.
4. You can adjust filter criteria by clicking "Back".

Additional information

You can find additional information on the name and storage location in the section "Overview of complete export (Page 76)".

6.4.6 Message correction for components with SNMP functionality

Introduction

The "Message correction" function deletes messages of SNMP-compatible components in the configuration data of the maintenance station (server data) for which the relationship with the project has been deleted, for example, if you have removed PC hardware from the system.

The "Message correction" function is available if your plant is not operated via a PCS 7 Web client.

Icon in the user interface

Icon	Function	Authorizations
	Execute message correction	"Area authorization" and "Higher-order process controls" for the diagnostics area

Procedure

1. Click on the icon.

Result

Relevant messages are deleted.

An operator message is triggered.

6.4.7 Parameter data export of EDD-based devices

Export of parameter data

Parameter data of devices that are integrated in SIMATIC PDM via EDDs can be exported:

- Export of the "offline parameter data (project)"
The parameter data stored in the project are exported to the specified destination.
The selected filter criteria are taken into consideration for the device selection.
- Export of the "Online parameter data (field device)"
The complete parameter data are first read from the devices and saved in the project. These parameter data are then exported to the specified destination.
The selected filter criteria are taken into consideration for the device selection.
- Automatic update and "Automatic synchronization (field device --> project)" export
If a difference in the parameter data between the device and project is detected or if a device signals a configuration change independently, the complete parameter data are first read from the device and saved in the project automatically.
The parameter data saved in the project are then exported to the specified destination.
The selected filter criteria are not taken into consideration for the device selection.

The export of parameter data can be controlled by operator input in the faceplate or remotely via the OPC interface of the MS.

Note

When exporting online parameter data, ensure that the device parameter assignment is not open elsewhere. Otherwise, only an export of offline parameter data is performed.

This is relevant for the following export types:

- Export of the "Online parameter data (field device)"
- Automatic update and "Automatic synchronization (field device --> project)" export
- Online parameter data export for a selected device

Refer to the export file to find out whether online or offline parameter data were exported.

Export file

The parameter data are stored in an individual export file for each created device.

The export format and the content of these export files conform to the export format of SIMATIC PDM.

To specify the storage location, select the menu command **Options > SIMATIC PDM > Settings...** in SIMATIC Manager and then go to the "General" tab, "Path for 'Assetexport' files".

Log file

For each export job, a log file is created in which the successful or unsuccessful export of the parameter data of the devices is documented.

The storage location of the log file is specified using the WinCC variable @AssetControl.ExportPath. The log file is also saved in the project of the MS server.

Additional information

For additional information, refer to the following sections:

6.4.8 Parameter data export via operator input in the faceplate

6.4.8.1 Opening the faceplate

Introduction

You open the faceplate for parameter data export using the icon in the overview screen.

Note

This function is available only for the maintenance station in the MS Standard and SIMATIC PDM MS versions.

Requirement

SIMATIC PCS 7 MS Standard with use of SIMATIC PDM V8.2

Icons in the overview screen

Icon	Function	Permissions
	No offline/online export job is running, or an offline/online export job is complete	"Higher process controlling" for diagnostics area
	Offline/online export job is running	"Higher process controlling" for diagnostics area

Note

An active automatic synchronization is not displayed in the icon.

Procedure

1. Click on the icon.

Result

The faceplate for parameter data export is opened.

Additional information

For additional information, refer to the following sections:

6.4.8.2 Faceplate

Introduction

The faceplate includes various filter criteria and export settings for exporting parameter data.

The export can be started, or an active export operation can be canceled.

When you open the faceplate, you will see an overview of the last executed or active export job.

If an export job is active, you cannot change any filter settings. You can only cancel the export job.

Automatic synchronization can always be enabled or disabled.

The following figure shows an example of the faceplate for the parameter data export.

Filter settings for parameter data export

Maintenance status	Maintenance job
<input type="checkbox"/>  Good	<input type="checkbox"/>  Mainten. required requested
<input type="checkbox"/>  Passivated	<input checked="" type="checkbox"/>  Mainten. demanded requested
<input type="checkbox"/>  Out of service	<input type="checkbox"/>  Mainten. alarm requested
<input type="checkbox"/>  Simulation	
<input type="checkbox"/>  Local operation	
<input type="checkbox"/>  Maintenance required	
<input type="checkbox"/>  Maintenance demanded	
<input checked="" type="checkbox"/>  Maintenance alarm	
<input type="checkbox"/>  Unchecked/unknown	
<input type="checkbox"/>  Configuration change	
Status Service	
<input type="checkbox"/>  Completed	
<input type="checkbox"/>  Canceled	
<input checked="" type="checkbox"/>  In service	
<input type="checkbox"/>  Release request	
<input type="checkbox"/>  Planned servicing	
<input type="checkbox"/>  Maintenance not started	
Priority	
<input checked="" type="checkbox"/>  Important	
<input type="checkbox"/>  SIF	
Export settings	
<input checked="" type="checkbox"/> Offline - Parameter data (project)	
<input type="checkbox"/> Online - Parameter data (field device)	
<hr/>	
<input checked="" type="checkbox"/> Automatic sync. field device --> project	
Export jobs to SIMATIC PDM	
Total	0,
Open	0,
Successful	0,
Not successful	0,
 	

Display

- In the Maintenance status, Maintenance job, Service status and Priority areas
Selected filter criteria
- In the Export settings area
Last export setting enabled
- In the "Export jobs for SIMATIC PDM" area
Result of the last executed export job or current data of the active export job:
 - Total
Number of parameter data records to be exported
 - Open
Number of parameter data records still to be exported
 - Successful
Number of parameter data records already exported
 - Not successful
Number of parameter data records that were not exported

Operator controls

Icon	Explanation	Operator permission
<input type="checkbox"/>	<p>The option is selected by clicking on the check box.</p> <ul style="list-style-type: none"> • Maintenance status, Maintenance job, Status Service area The filter criteria are selected. • Export settings area <ul style="list-style-type: none"> – Offline - Parameter data (project) The parameter data are read from the project during the export. – Online - Parameter data (field device) The parameter data in the project are updated and then exported. – Automatic synchronization between the parameter data in the field device and in the project The parameter data in the project are automatically updated and then exported. The activated filter criteria are ignored during the update. The automatic synchronization is executed for field devices for which a change in the configuration was detected. 	None
	<p>Applies to the following export settings:</p> <ul style="list-style-type: none"> • Offline - Parameter data (project) • Online - Parameter data (field device) <p>By clicking the button, the operator panel for starting the update is shown.</p> <p>Observe the following when exporting online and offline parameter data: An active export job must be completed before you can start a new export job.</p>	None
	<p>Applies to the following export settings:</p> <ul style="list-style-type: none"> • Offline - Parameter data (project) • Online - Parameter data (field device) <p>By clicking the button, the operator panel for canceling the active export job is shown.</p>	None

Operator panel for updating/canceling

The following figure shows an example of the operator panel:



The export job is started with the activated export and filter settings.

6.4.8.3 How to start the offline/online parameter data export

Requirement

The faceplate for the parameter data export is open.

Procedure

1. Select which parameter data will be exported.
 - If you want to export parameter data stored in the project, select the "Offline parameter data (project)" check box.
 - If you want to export parameter data stored in the field device, select the "Online parameter data (field device)" check box.
2. Select the filter criteria you require.
3. Click the "Refresh" button.
The view is expanded to include the operator panel.
4. Click "OK".

Result

An export file is created for each individual device.

The values displayed in the "Export jobs for SIMATIC PDM" area are updated.

The icon in the overview screen is updated.

A log file is created for the export job.

6.4.8.4 How to cancel the offline/online parameter data export

Requirement

The "Parameter data export" faceplate is open.

Procedure

1. Click the "Cancel" button.
The view is expanded to include the operator panel.
2. Click "OK".

Result

The parameter data export is canceled.

The values displayed in the "Export jobs for SIMATIC PDM" area are updated.

The icon in the overview screen is updated.

6.4.8.5 How to start the automatic synchronization

Requirement

The faceplate for the parameter data export is open.

Procedure

1. Select the "Automatic synchronization field device --> project" check box.

Result

If a difference in the parameter data between the device and project is detected or if a device signals a configuration change independently, the complete parameter data are first read from the device and saved in the project automatically.

The parameter data saved in the project are then exported to the specified destination.

The selected filter criteria are not taken into consideration for the device selection.

The values displayed in the "Export jobs for SIMATIC PDM" are not updated.

An active export job is not indicated in the icon.

A log file is not created on the maintenance station.

6.4.8.6 How to end the automatic synchronization

Requirement

The "Parameter data export" faceplate is open.

Procedure

1. Deselect the "Automatic synchronization field device --> project" check box.

Result

Automatic synchronization in the case of a configuration change has been ended.

6.4.9 Parameter data export via OPC access

6.4.9.1 Tags for OPC access

Introduction

The information for the parameter data export is stored in a structure tag.

This tag structure can be directly accessed by another computer via the OPC DA interface.

You can find information on establishing an OPC connection in the *WinCC Information System* online help.

Tags for OPC access

The required information is stored in the following tags:

Name of the tag	Width In bits	Synchroni- zation	Ini- tial value	Explanation	Access Via OPC
@AssetControl.ActionType	8	X	0	Required action	Read/write
@AssetControl.MSFilter	32	X	0	Filter for the SIMATIC PDM devices	Read/write
@AssetControl.Start	8	-	0	"Start" command	Read/write
@AssetControl.AdditionalTrigger	8	-	0	Other trigger conditions	Read/write
@AssetControl.AdditionalTriggerRun	8	X	0	Other trigger conditions for synchronization	Read/write
@AssetControl.State	32	X	0	Status or group error entry	Read
@AssetControl.Cancel	8	X	0	"Cancel" command	Read/write
@AssetControl.DeviceCount	32	X	0	Total number of export jobs according to the filter criteria	Read
@AssetControl.DeviceCountOK	32	X	0	Number of successful export jobs	Read
@AssetControl.DeviceCountFailed	32	X	0	Number of unsuccessful export jobs	Read
@AssetControl.TagExportStart	8	-	0	Start for export via tag name (one device)	Read/write
@AssetControl.TagExportState	32	X	0	State of tag export	Read
@AssetControl.TagExportName	256	X	""	Tag name of the device to be exported	Read/write
@AssetControl.ExportPath	256	X	""	Path to the export destination in SIMATIC PDM	Read/write

Values for @AssetControl.ActionType

The table shows the permitted values.

Value	Explanation
0x01	Export of the offline parameter data (project)
0x02	Export of the online parameter data (field device)

Values for @AssetControl.MSFilter

The table shows the permitted values.

If multiple bits are set, the statuses are ORed

Bit	31	...	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
Maintenance status																								
Good	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	
Passivated	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-
Out of service	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-
Simulation	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-
Local operator control	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-	-
Maintenance required	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-	-
Maintenance demanded	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-	-
Maintenance alarm	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-	-
Device status unknown	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-	-
Configuration change	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-	-
Maintenance job																								
Mainten. required requested	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-	-
Mainten. demanded requested	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-	-
Mainten. alarm requested	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-	-
Status Service																								
Completed	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-	-	-	-	-	-	-
Canceled	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-
In service	-	-	-	-	-	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Maintenance not started	-	-	-	-	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

6.4 Functions in the overview screen

Bit	31	...	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Planned servicing	-	-	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Release request	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Priority																							
Important object	-	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Safety-related object	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Values for @AssetControl.Start

The table shows the permitted values.

Value	Explanation
0	Initial value
1	"Start" command The command is reset after completion of the offline/online export job (ActionType).

Value for @AssetControl.AdditionalTrigger

The table shows the permitted values.

Value	Explanation
0	"Automatic synchronization field device --> project" not enabled
1	"Automatic synchronization field device --> project" enabled Command for enabling the automatic synchronization field device -> project

Value for @AssetControl.AdditionalTriggerRun

The table shows the permitted values.

Value	Explanation
0	"Automatic synchronization field device --> project" not enabled Command for disabling the automatic synchronization field device -> project
1	"Automatic synchronization field device --> project" enabled

Values for @AssetControl.State

The table shows the permitted values.

Value	Explanation
0x0	Initial value
0xFFFF	Offline/online export job is running

Value	Explanation
0x01	Export completed All offline/online export jobs have been completed.
0x02	Export completed The offline/online export job was canceled by the operator.
0x03	Export completed Not all offline/online export jobs have been completed.
0x04	Processing completed No device status corresponded to the filter criteria.

Refer to the log file for your export job to find out which export jobs were completed successfully and which were not completed successfully.

Values for @AssetControl.Cancel

The following table shows the permitted values.

Value	Explanation
0	Initial value
1	"Cancel" command

Values for @AssetControl.DeviceCount

The following table shows the permitted values.

Value	Explanation
0	Initial value
...	Total number of offline/online export jobs according to filter criteria

Values for @AssetControl.DeviceCountOK

The following table shows the permitted values.

Value	Explanation
0	Initial value
...	Number of successful offline/online export jobs

Values for @AssetControl.DeviceCountFailed

The following table shows the permitted values.

Value	Explanation
0	Initial value
...	Number of unsuccessful offline/online export jobs

Values for @AssetControl.TagExportStart

The following table shows the permitted values.

Value	Explanation
0x0	Initial value
0x01	"Start online export job" command (field device) The command is reset after executing the export job (TagExportName).
0x02	"Start offline export job" command (project) The command is reset after executing the export job (TagExportName).

Values for @AssetControl.TagExportState

The following table shows the permitted values.

Value	Explanation
0x0	Initial value
0xFFFF	Export job is running
0x01	Export has ended. Export job has been completed.
0x03	Export has ended. Export job has not been completed.
0x04	Processing has ended. No match found for TagExportName.

Values for @AssetControl.TagExportName

The tag is "empty" in the initial state.

Specify the tag name of the device to be exported. You can find this name in the Component List Editor.

Values for @AssetControl.ExportPath

The tag is "empty" in the initial state. The log file for your export job is only stored in the "AssetExport" directory in the OS project of the MS server.

Specify the path for AssetExport files that you have specified in the settings for SIMATIC PDM. The log file for your export job is stored in the specified path and in the "AssetExport" directory in the OS project of the MS server.

6.4.9.2 How to start the offline/online parameter data export (OPC)

Procedure

1. Select which parameter data will be exported.
 - If you are exporting offline parameter data, write the `@AssetControl.ActionType` tag with the value 0x01.
 - If you are exporting online parameter data, write the `@AssetControl.ActionType` tag with the value 0x02.
2. Write the `@AssetControl.MSFilter` tag according to the desired filter criteria.
3. Write the `@AssetControl.ExportPath` tag.
4. Set the start tag `@AssetControl.Start`.

Result

An export file is created for each individual device.

The values of the `@AssetControl.DeviceCount`, `@AssetControl.DeviceCountOK`, and `@AssetControl.DeviceCountFailed` tags contain the current execution status.

The values displayed in the "Export jobs for SIMATIC PDM" area are updated.

The icon in the overview screen is updated.

A log file is created for each export job.

6.4.9.3 How to cancel the offline/online parameter data export (OPC)

Procedure

1. Set the `@AssetControl.AdditionalTrigger` tag.

Result

The parameter data export is canceled.

The `@AssetControl.Start` tag is automatically set to "0".

The values of the `@AssetControl.DeviceCount`, `@AssetControl.DeviceCountOK`, and `@AssetControl.DeviceCountFailed` tags are updated.

The icon in the overview screen is updated.

Note

It is not necessary to end the offline/online parameter data export.

The `@AssetControl.Start` tag is automatically set to "0" after completion of the export job.

6.4.9.4 How to start the automatic synchronization (OPC)

Procedure

1. Set the @AssetControl.AdditionalTrigger tag to "1".

Result

When a device configuration change is detected, an automatic synchronization is performed and an export file is created.

The selected filter criteria are ignored during automatic synchronization.

The automatic synchronization has no effects on the tags @AssetControl.DeviceCount, @AssetControl.DeviceCountOK and @AssetControl.DeviceCountFailed.

The icon in the overview screen is not updated.

A log file is not created.

6.4.9.5 How to end the automatic synchronization (OPC)

Procedure

1. Set the @AssetControl.AdditionalTriggerRun tag to "0".

Result

Automatic synchronization in the case of a configuration change has been ended.

The @AssetControl.AdditionalTrigger tag is automatically set to "0".

6.4.9.6 How to start the parameter data export for a selected device (OPC)

Procedure

1. Write the @AssetControl.TagExportName tag with the tag name of the device to be exported.
2. Write the @AssetControl.ExportPath tag.
3. Select which parameter data are exported.
 - If you are exporting online parameter data, write the @AssetControl.ActionType tag with the value 0x01.
 - If you are exporting offline parameter data, write the @AssetControl.ActionType tag with the value 0x02.

Result

An export file is created for the device to be exported.

If the online parameter data export cannot be executed, the offline parameter data are automatically exported.

The selected filter criteria are ignored during automatic synchronization.

The export via tag name has no effects on the @AssetControl.DeviceCount, @AssetControl.DeviceCountOK and @AssetControl.DeviceCountFailed tags.

The values of the @AssetControl.DeviceCount, @AssetControl.DeviceCountOK, and @AssetControl.DeviceCountFailed tags contain the current execution status.

The icon in the overview screen is not updated.

A log file is not created.

The @AssetControl.Start tag is automatically set to "0x0" after completion of the export job.

Note

It is not possible to end or cancel the offline/online parameter data export.

6.5 Area overview screens

Possible area overview screens

The following area overview screens can be subordinate to the overview screen of the diagnostics area:

- PC stations
 - IPC stations created as PC stations in the SIMATIC Manager and to which the profile IPC_V** or MIB-II_V1.0 is assigned in the SNMP configuration of the OPC server are shown here
 - PC stations created as PC stations in the SIMATIC Manager
 - No subordinate structures
- Network objects
 - All network objects created in the OPC/SNMP server configuration
 - All PCs that are configured in the SNMP configuration of the OPC server but have not been created as PC stations in the SIMATIC Manager
 - No subordinate structures
- AS/system
 - Hierarchically structured display of all configured objects of the automation system level, including the interface modules (IMs) of the ET 200 families (ET 200M, ET 200S, ET 200 SP, ET 200iSP, ET 200pro) and the link modules (DP/PA-Link, DP/FF-Link, Y-Link)

6.6 Representation of the components

- Field devices
 - Hierarchically structured display of all configured field devices and remote I/O stations
- User objects
 - User-created hierarchically structured representation of user objects

The selected area overview screen is displayed in the working area. The individual components are displayed as block icons in the area overview screen.

Calling an area overview screen

You call the area screen as follows:

- Maintenance group display
- Hierarchy buttons in the button set

Function in area overview screen

The diagnostic screens of individual components from the area are called via the block icons in the area overview screen.

6.6 Representation of the components

Introduction

The components to be monitored are displayed in the diagnostics screens as block icons in the process control.

To get more information about a component, you can call the corresponding faceplate with a mouse click.

Block icon

The block icons supported by the system which can be displayed in the diagnostic screens are contained in the file "@@maintenancetypicals.pdl".

The file is located in the project directory under "... \wincproj\<os-name>\GraCS".

You can find a description of block icons in the section "Block icon (Page 119)" and in the section "Block icon for redundant components (Page 122)".

Faceplate

Faceplates display all information on a component with diagnostics capability in process mode. This includes information that can be obtained by the component itself or from the project data. When information is unavailable, the corresponding field is empty.

The faceplate is made up of the title of the screen window, the header and the different views. You can change the view.

The number of views in the faceplates depends on the type of component. The three views "Ident", "Messages" and "Maintenance" are always available for selection in the faceplates. Intelligent components, e.g., components described by an EDD (Electronic Device Description) and integrated in SIMATIC PDM, have additional views depending on the component.

Note

The faceplate is displayed if the maintenance station MS Standard or SIMATIC PDM MS version is being used.

You can find additional information about this in the section "Faceplate display (Page 131)" and in the section "Display of faceplate for redundant components (Page 182)".

6.7 Block icon

Block icon display

The following figure shows an example of a block icon for a compact device:



Elements and functions in the block icon

The following elements are displayed in the block icon:

- **Label of the block icon**

- The following figure shows an example of a label:



The label matches the local ID (LID) from the identification data of the device. You can find information about the LID in the section "Origin of the identification data (Page 183)".

- The following figure shows an example of the label of a device classified as important:



The setting is made in the SIMATIC PDM object properties of the device.

- The following figure shows an example of the label of a device in a safety-related application:



The setting is made in the SIMATIC PDM object properties of the device.

- **Bitmap**

The figure below shows an ET200:



A bit map displaying the device icon is entered automatically in the "DeviceIcon" property, provided the bit map is available in HW Config.

- **Maintenance group display of the custom component**

The following figure shows the maintenance group display as AS process control fault.



You open the associated faceplate with the maintenance group display.

The following states are displayed depending on the maintenance state of the component. You can find information on the display in the section "Maintenance status and maintenance group display (Page 123)".

- **Maintenance state of the custom component**

The following figure shows the diagnostic icon with the maintenance state "Maintenance alarm".



You can use the diagnostic icon to open the associated faceplate.

You can find information about the display in the section "Maintenance status and maintenance group display (Page 123)".

The redundancy state is displayed for redundant components.

You can find information on this in the section "Maintenance status of redundant components (Page 126)".

- **Active memo**

The following figure shows the display if a note is active.



You can find information on this in the section ""Note" view (Page 150)".

- **Maintenance group display of the lower-level hierarchy**

The following figure shows the display of the maintenance group display as AS process control fault.




Various statuses are displayed in the maintenance group display, depending on the maintenance group displays of the components of the lower-level hierarchy.

You can find information on this in the section "Maintenance status and maintenance group display (Page 123)".

If you click on the maintenance group display in the process control, the lower-level process picture in the hierarchy is displayed.

Display of input/output modules

The following figure shows a section from a block icon for an I/O module:

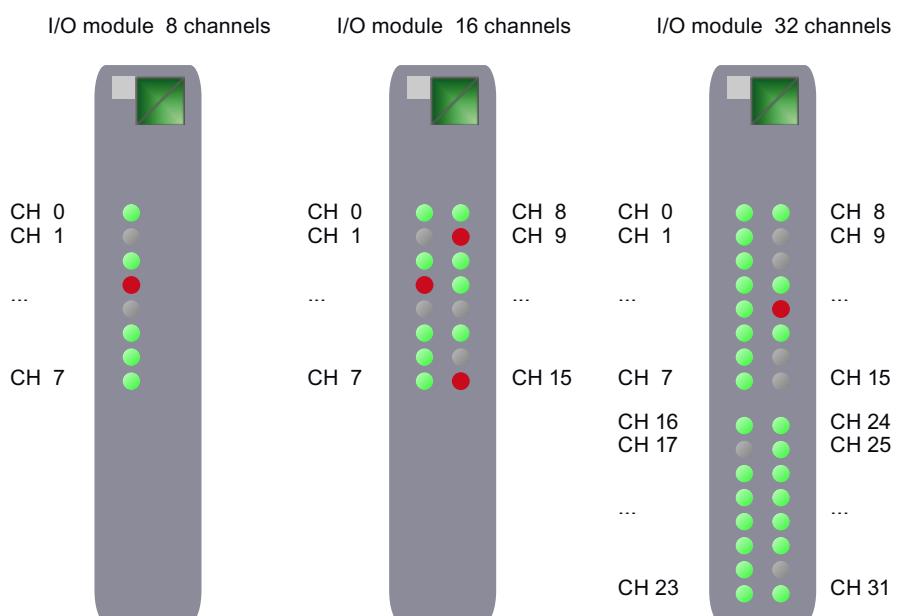

The signal state of the individual channels is shown as follows:

Display	Explanation
No display	Channel not interconnected/deactivated
Grey circle	No diagnostics can be acquired for the channel
Green circle	"Good" channel state
Red circle	"Bad" channel state

6.8 Block icon for redundant components

Introduction

Information for a redundant component is displayed in different ways:

- In one block icon
- In several block icons

You can use the block icon to open the associated faceplate.

Block icons

The following table shows the possible types of display:

Redundant component	Display	Explanation
IM 153-2		The redundancy state is displayed for the component and its partner in a diagnostic icon.
I/O module		The maintenance state of each component is indicated in the assigned diagnostic icon (top diagnostic icon). A redundancy object is also displayed for the component with the lower address. The redundancy state is displayed in the diagnostic icon of the redundancy object.
PC objects		The role of master is indicated by an orange square.
		The maintenance state of its partner is indicated in the diagnostic icon.
		The redundancy state is indicated in the diagnostic icon in the redundancy object.

Additional information

You can find additional information in the sections "Block icon (Page 119)" and "Maintenance status of redundant components (Page 126)".

6.9 Maintenance status and maintenance group display

Introduction

The diagnostic icon represents the maintenance state of the component.

The maintenance group display represents the message state of the component and the lower-level components.

Note


If the maintenance state is "Unchecked/unknown" in the faceplate, all other dynamic displays are irrelevant.

Correlation maintenance state and maintenance group display

The following table provides an overview:

Maintenance state				Maintenance group display		
Display	Remark	Value	Priority	Display	Message class/state	Message state
	Unknown/untested	8	1	 	No message is pending	-
	Maintenance alarm	7	2	 	AS process control fault	<p>"S" display</p> <ul style="list-style-type: none"> • Flashing Message not acknowledged • Not flashing Message acknowledged
	Maintenance demanded	6	3	 	AS process control error	<p>"F" display</p> <ul style="list-style-type: none"> • Flashing Message not acknowledged • Not flashing Message acknowledged
	Maintenance required	5	4	 	Preventive maintenance	<p>"M" display</p> <ul style="list-style-type: none"> • Flashing Message not acknowledged • Not flashing Message acknowledged

6.9 Maintenance status and maintenance group display

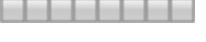Maintenance state				Maintenance group display		
Display	Remark	Value	Priority	Display	Message class/state	Message state
	Local operator control	4	5	 	Status AS	<ul style="list-style-type: none"> • No display in the group display • Message does not require acknowledgement and does not have the state "outgoing" • Message is only entered in the history list
	At least one process value is being simulated	3	6	 		
	Out of service	2	7	 	AS process control fault	<p>"S" display</p> <ul style="list-style-type: none"> • Flashing Incoming message • Static Message acknowledged
	Device passivated	1	8	 	Status AS	<ul style="list-style-type: none"> • No display in the group display • Message does not require acknowledgement and does not have the state "outgoing" • Message is only entered in the history list
	Configuration change detected	9	9	 		
	Good	0	10	 	No message	-
Applies to all displays				 	Message is locked	<p>"X" display</p> <p>At least one message is locked; applies only to objects from the areas AS, user and field devices</p>

The number in the priority column indicates the priority of the display. The lowest number has the highest priority.

Note that unacknowledged messages have a higher priority than acknowledged messages.

Correlation maintenance state and maintenance job

The following table provides an overview:

Meaning	Maintenance job	State maintenance job
Maintenance required has been requested, maintenance engineer has not yet created a maintenance job		
Maintenance demanded has been requested, maintenance engineer has not yet created a maintenance job		
Maintenance alarm has been requested, maintenance engineer has not yet created a maintenance job		
Maintenance required requested, the maintenance job was changed to the "Planned servicing" state		
Maintenance demanded requested, the maintenance job was changed to the "Planned servicing" state		
Maintenance alarm requested, the maintenance job was changed to the "Planned servicing" state		
Maintenance required requested, maintenance job was changed to the "Release request" state		
Maintenance demanded requested, maintenance job was changed to the "Release request" state		
Maintenance alarm requested, maintenance job was changed to the "Release request" state		
Maintenance required requested, maintenance job was set to the state "In service"		
Maintenance demand requested, maintenance job was set to the state "In service"		
Maintenance alarm requested, the maintenance job was changed to the "In service" state		
Maintenance job canceled Maintenance engineer has canceled the maintenance job	Maintenance state see table above	
Maintenance job completed	Maintenance state see table above	

Structure of the variable for the maintenance state

The value of the variable *.MS or *.MaintenanceState represents the maintenance state.

The variable is a DWORD type.

6.10 Maintenance status of redundant components

The table shows the basic structure of the variable.

Bit	Explanation
0 to 7	Display of the maintenance state
8 to 15	Display of the maintenance state of the redundant partner
16	"1"= Redundant partner available
17	"0" = Primary partner is master "1" = Redundant partner is master
18	SIMATIC PDM maintenance state worse than device status
19 to 21	Reserve
22	SIMATIC PDM has detected a state change
23	Block takes part in the cyclical updating of SIMATIC PDM
24 to 27	OS operation
28 to 31	SIMATIC PDM maintenance state

6.10 Maintenance status of redundant components

Introduction

In the faceplate header and in the block icon, the maintenance status of both components is displayed in **one** diagnostic icon for the redundant pair.

The maintenance status for this diagnostic icon is formed from the maintenance states of both components.

Forming the maintenance status with redundant components

The table below lists the maintenance states that are formed because of this rule.

Maintenance status			
Redundant component	Component A	Component B	
	Good	Good	Good
	Good	Unknown/untested	Good
	Good	Component passivated	Good
	Maintenance demanded	Out of service	Good
	Good	At least one process value is being simulated	Good
	Local operation	Local operation	Good
	Maintenance required	Maintenance required	Good

Maintenance status			
Redundant component	Component A	Component B	
	Maintenance demanded	Maintenance demanded	Good
	Maintenance demanded	Maintenance alarm	Good
	Configuration change	Configuration change	Good
	Good	Good	Component passivated
	Component passivated	Unknown/untested	Component passivated
	Component passivated	Component passivated	Component passivated
	Out of service	Out of service	Component passivated
	At least one process value is being simulated	At least one process value is being simulated	Component passivated
	Local operation	Local operation	Component passivated
	Maintenance required	Maintenance required	Component passivated
	Maintenance demanded	Maintenance demanded	Component passivated
	Maintenance alarm	Maintenance alarm	Component passivated
	Component passivated	Configuration change	Component passivated
	Maintenance demanded	Good	Out of service
	Out of service	Unknown/untested	Out of service
	Out of service	Component passivated	Out of service
	Out of service	Out of service	Out of service
	At least one process value is being simulated	At least one process value is being simulated	Out of service
	Local operation	Local operation	Out of service
	Maintenance required	Maintenance required	Out of service
	Maintenance demanded	Maintenance demanded	Out of service
	Maintenance alarm	Maintenance alarm	Out of service
	Out of service	Configuration change	Out of service

6.10 Maintenance status of redundant components

Maintenance status			
Redundant component	Component A	Component B	
	Good	Good	At least one process value is being simulated.
	At least one process value is being simulated	Unknown/untested	At least one process value is being simulated.
	At least one process value is being simulated	Component passivated	At least one process value is being simulated.
	At least one process value is being simulated	Out of service	At least one process value is being simulated.
	At least one process value is being simulated	At least one process value is being simulated	At least one process value is being simulated.
	Local operation	Local operation	At least one process value is being simulated.
	Maintenance required	Maintenance required	At least one process value is being simulated.
	Maintenance demanded	Maintenance demanded	At least one process value is being simulated.
	Maintenance alarm	Maintenance alarm	At least one process value is being simulated.
	At least one process value is being simulated.	Configuration change	At least one process value is being simulated.
	Local operation	Good	Local operation
	Local operation	Unknown/untested	Local operation
	Local operation	Component passivated	Local operation
	Local operation	Out of service	Local operation
	Local operation	At least one process value is being simulated	Local operation
	Local operation	Local operation	Local operation
	Maintenance required	Maintenance required	Local operation
	Maintenance demanded	Maintenance demanded	Local operation
	Maintenance alarm	Maintenance alarm	Local operation
	Local operation	Configuration change	Local operation
	Maintenance required	Good	Maintenance required
	Maintenance required	Unknown/untested	Maintenance required
	Maintenance required	Component passivated	Maintenance required

Maintenance status			
Redundant component	Component A	Component B	
	Maintenance required	Out of service	Maintenance required
	Maintenance required	At least one process value is being simulated	Maintenance required
	Maintenance required	Local operation	Maintenance required
	Maintenance required	Maintenance required	Maintenance required
	Maintenance demanded	Maintenance demanded	Maintenance required
	Maintenance alarm	Maintenance alarm	Maintenance required
	Maintenance required	Configuration change	Maintenance required
	Maintenance demanded	Good	Maintenance demanded
	Maintenance demanded	Unknown/untested	Maintenance demanded
	Maintenance demanded	Component passivated	Maintenance demanded
	Maintenance demanded	Out of service	Maintenance demanded
	Maintenance demanded	At least one process value is being simulated	Maintenance demanded
	Maintenance demanded	Local operation	Maintenance demanded
	Maintenance demanded	Maintenance required	Maintenance demanded
	Maintenance demanded	Maintenance demanded	Maintenance demanded
	Maintenance alarm	Maintenance alarm	Maintenance demanded
	Maintenance demanded	Configuration change	Maintenance demanded
	Maintenance demanded	Good	Maintenance alarm
	Maintenance alarm	Unknown/untested	Maintenance alarm
	Maintenance alarm	Component passivated	Maintenance alarm
	Maintenance alarm	Out of service	Maintenance alarm
	Maintenance alarm	At least one process value is being simulated	Maintenance alarm
	Maintenance alarm	Local operation	Maintenance alarm

6.10 Maintenance status of redundant components

Maintenance status			
Redundant component	Component A	Component B	
	Maintenance alarm	Maintenance required	Maintenance alarm
	Maintenance alarm	Maintenance demanded	Maintenance alarm
	Maintenance alarm	Maintenance alarm	Maintenance alarm
	Maintenance alarm	Configuration change	Maintenance alarm
	Good	Good	Unknown/untested
	Unknown/untested	Unknown/untested	Unknown/untested
	Component passivated	Component passivated	Unknown/untested
	Out of service	Out of service	Unknown/untested
	At least one process value is being simulated	At least one process value is being simulated	Unknown/untested
	Local operation	Local operation	Unknown/untested
	Maintenance required	Maintenance required	Unknown/untested
	Maintenance demanded	Maintenance demanded	Unknown/untested
	Maintenance alarm	Maintenance alarm	Unknown/untested
	Unknown/untested	Configuration change	Unknown/untested
	Configuration change	Good	Configuration change
	Unknown/untested	Unknown/untested	Configuration change
	Component passivated	Component passivated	Configuration change
	Out of service	Out of service	Configuration change
	At least one process value is being simulated	At least one process value is being simulated	Configuration change
	Local operation	Local operation	Configuration change
	Maintenance required	Maintenance required	Configuration change
	Maintenance demanded	Maintenance demanded	Configuration change

Maintenance status			
Redundant component	Component A	Component B	
	Maintenance alarm	Maintenance alarm	Configuration change
	Configuration change	Configuration change	Configuration change

6.11 Faceplate


6.11.1 Faceplate display

Introduction

Starting from a block icon in a diagnostics screen, the maintenance engineer can open the corresponding faceplate while the process is in operation; this faceplate provides him with access to more detailed information and facilitates operator control of the block.

Displaying the faceplate view "Ident"

The figure below shows an example of a faceplate:

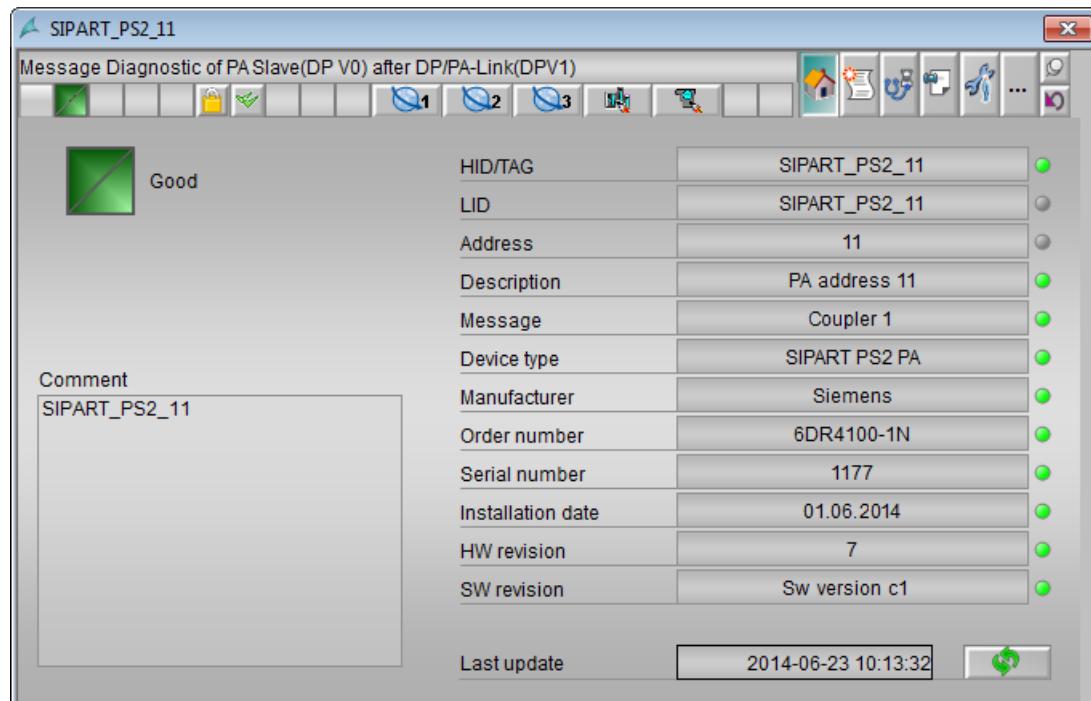

You can find information about this in the following sections.

6.11.2 Screen window title and header

6.11.2.1 Displays and operator controls

Introduction

The control bar always has the same structure. The appropriate icons are displayed depending on the component type and on the configuration.

The following figure shows an example of the display:



Display

The following table provides an overview:

Icon	Name	Display for components from the area	Function/remark
	Screen window title	<ul style="list-style-type: none"> PC stations Network objects AS/system Field devices User objects 	Display of the local ID You can find additional information about the local ID in the section "Origin of the identification data (Page 183)".
	Block comment	<ul style="list-style-type: none"> AS/system Field devices User objects 	Display of the block comment The local ID is displayed in the tooltip.
	Pin faceplate	<ul style="list-style-type: none"> PC stations Network objects AS/system Field devices User objects 	Pins the faceplate on the user interface This allows you to change to another picture or area without closing the faceplate.
	Return	<ul style="list-style-type: none"> PC stations Network objects AS/system Field devices User objects 	Calls the process picture After a picture change you see the process picture in which the faceplate was called and pinned.

Icon	Name	Display for components from the area	Function/remark
	Maintenance group display (custom component)	<ul style="list-style-type: none"> • PC stations • Network objects • AS/system • Field devices • User objects 	<p>Is displayed if a message relating to the component is pending</p> <p>You can find additional information about the maintenance group display in the section "Maintenance status and maintenance group display (Page 123)".</p>
	Maintenance state/ maintenance job (custom component)	<ul style="list-style-type: none"> • PC stations • Network objects • AS/system • Field devices • User objects 	<p>Current maintenance state/ maintenance job is displayed</p> <p>You can find more information on this in the sections "Maintenance status and maintenance group display (Page 123)" and "Maintenance status of redundant components (Page 126)".</p>
	Maintenance job state	<ul style="list-style-type: none"> • PC stations • Network objects • AS/system • Field devices • User objects 	<p>Current state of the maintenance job</p> <p>For additional information about the state of the maintenance job, see the section "Maintenance status and maintenance group display (Page 123)".</p>
	Archive synchronization incomplete	<ul style="list-style-type: none"> • PC stations, applies to redundant OS servers 	Is displayed until the archive synchronization is complete
	Flutter suppression	<ul style="list-style-type: none"> • AS/system, applies to input/output modules • Field devices 	Is displayed when flutter suppression is activated
	Lock messages, unlock messages	<ul style="list-style-type: none"> • AS/system • Field devices • User objects 	<p>Locks or unlocks all messages for the block</p> <p>You can find additional information about this in the section "How to lock and unlock messages (Page 137)".</p>
	Acknowledge messages	<ul style="list-style-type: none"> • PC stations • Network objects • AS/system • Field devices • User objects 	Acknowledges a message for the block
	Depassivation	<ul style="list-style-type: none"> • Field devices, applies to redundant input/output modules 	<p>Is displayed if a module or a channel is passivated</p> <p>You can find additional information about this in the section "How to de-passivate modules or channels (Page 138)".</p>

6.11 Faceplate

Icon	Name	Display for components from the area	Function/remark
	Link object 1 to link object 3	<ul style="list-style-type: none"> • PC stations • Network objects • AS/system • Field devices • User objects 	Calls a Web page Is displayed if the call for a Web page is configured You can find more information on this in the sections "Configuring maintenance links (Page 54)" and "How to open websites via maintenance links (Page 139)".
	Call hardware project	<ul style="list-style-type: none"> • AS/system • Field devices 	Calls HW Config You can find additional information about this in the section "How to open the online view of HW Config (Page 139)".
	Call SIMATIC PDM	<ul style="list-style-type: none"> • Field devices • User objects 	Calls the configuration interface for the configured component You can find additional information about this in the section "How to open the configuration interface of SIMATIC PDM (Page 140)".
	Call configuration data	<ul style="list-style-type: none"> • Network objects 	Calls the SCALANCE Web server You can find additional information about this in the section "How to call up the Web interface of a network component (Page 141)".
	Diagnostics Monitor	<ul style="list-style-type: none"> • PC stations, applies to SIEMENS IPCs 	Calls the Diagnostics Monitor diagnostics tool You can find additional information about this in the section "How to call the Diagnostics Monitor diagnostic tool (Page 142)".
	Active memo	<ul style="list-style-type: none"> • PC stations • Network objects • AS/system • Field devices • User objects 	Is displayed when a message is activated You can find additional information about this in the section ""Note" view (Page 150)".
	"Ident" view	<ul style="list-style-type: none"> • PC stations • Network objects • AS/system • Field devices • User objects 	Calls the corresponding view <ul style="list-style-type: none"> • When you left-click, the view appears in the same window • When you right-click, the view opens in a new window.
	"Message" view	<ul style="list-style-type: none"> • PC stations • Network objects • AS/system • Field devices • User objects 	Calls the corresponding view <ul style="list-style-type: none"> • When you left-click, the view appears in the same window • When you right-click, the view opens in a new window.

Icon	Name	Display for components from the area	Function/remark
	"Performance" view	<ul style="list-style-type: none"> AS/system, applies to CPU 	Calls the corresponding view <ul style="list-style-type: none"> When you left-click, the view appears in the same window When you right-click, the view opens in a new window.
	"Notes" view	<ul style="list-style-type: none"> PC stations Network objects AS/system Field devices User objects 	Calls the corresponding view <ul style="list-style-type: none"> When you left-click, the view appears in the same window When you right-click, the view opens in a new window.
	"Diagnostics" view	<ul style="list-style-type: none"> Field devices, applies to SIMATIC PDM devices, switch and drive PC stations, applies to SIEMENS IPC AS/system, applies to devices with a SIMATIC PDM configuration 	Calls the corresponding view <ul style="list-style-type: none"> When you left-click, the view appears in the same window When you right-click, the view opens in a new window.
	"External diagnostics" view	<ul style="list-style-type: none"> Field devices 	Calls the corresponding view <ul style="list-style-type: none"> When you left-click, the view appears in the same window When you right-click, the view opens in a new window.
	"Maintenance" view	<ul style="list-style-type: none"> PC stations Network objects AS/system Field devices User objects 	Calls the corresponding view <ul style="list-style-type: none"> When you left-click, the view appears in the same window When you right-click, the view opens in a new window.
	"LED display" view	<ul style="list-style-type: none"> AS/system, applies to CPU 	Calls the corresponding view <ul style="list-style-type: none"> When you left-click, the view appears in the same window When you right-click, the view opens in a new window.
	"Diagnostic buffer" view	<ul style="list-style-type: none"> AS/system, applies to CPU or CP in the central rack and expansion rack 	Calls the corresponding view <ul style="list-style-type: none"> When you left-click, the view appears in the same window When you right-click, the view opens in a new window.

6.11 Faceplate

Icon	Name	Display for components from the area	Function/remark
	"Connections" view	<ul style="list-style-type: none"> PC stations, applies to MS client, OS/MS client and OS client 	Calls the corresponding view <ul style="list-style-type: none"> When you left-click, the view appears in the same window When you right-click, the view opens in a new window.
	"Client connections" view	<ul style="list-style-type: none"> PC stations, Applies to MS server, OS server 	Calls the corresponding view <ul style="list-style-type: none"> When you left-click, the view appears in the same window When you right-click, the view opens in a new window.
	"Connection load display" view for CPU connections	<ul style="list-style-type: none"> AS system, applies to CPU 	Calls the corresponding view <ul style="list-style-type: none"> When you left-click, the view appears in the same window When you right-click, the view opens in a new window.
	"Monitoring" view	<ul style="list-style-type: none"> User objects 	Calls the corresponding view <ul style="list-style-type: none"> When you left-click, the view appears in the same window When you right-click, the view opens in a new window.
	"Parameter" view	<ul style="list-style-type: none"> AS/system, applies to CPU Field devices, applies to SIMATIC PDM devices 	Calls the corresponding view <ul style="list-style-type: none"> When you left-click, the view appears in the same window When you right-click, the view opens in a new window.
	"OB3x" view	<ul style="list-style-type: none"> AS/system, applies to CPU 	Calls the corresponding view <ul style="list-style-type: none"> When you left-click, the view appears in the same window When you right-click, the view opens in a new window.
	"OB8xOB1" view	<ul style="list-style-type: none"> AS/system, applies to CPU 	Calls the corresponding view <ul style="list-style-type: none"> When you left-click, the view appears in the same window When you right-click, the view opens in a new window.
	Calling additional views	<ul style="list-style-type: none"> PC stations Network objects AS/system Field devices User objects 	Calls additional view selection keys Can only be operated if additional views can be called

6.11.2.2 How to lock and unlock messages

Introduction

Messages are locked or unlocked for components from the areas AS/system, field devices and user objects.

Messages can be locked or unlocked in the button set or in the faceplate.

Locked messages are indicated by an X:

- In the group display in the overview area
You can find additional information about this in the section "Overview area (Page 91)".
- In the maintenance group displays in the overview screen, area overview screen, block icon, and faceplate
You can find additional information about this in the section "Maintenance status and maintenance group display (Page 123)".

Icon in the user interface

Icon	Function	Explanation	Permission
	Lock messages	<ul style="list-style-type: none"> • Faceplate Messages for component are locked • Button set Messages of all displayed components are locked 	Process controlling (1)
	Unlock messages	<ul style="list-style-type: none"> • Faceplate Messages for component are unlocked • Button set Messages of all displayed components are unlocked 	

(1) The operator authorization level can be adjusted.

The operator authorization level is saved in the internal tag @LockMessageAuthLevel in WinCC tag management. This tag is created by the OS project editor.

The operator authorization level depends on the number saved as the initial value in the tag properties. The initial value is pre-assigned the value 5 by the system.

The number for the required authorization is provided in the User Administrator.

Note

Note that any change in the operator authorization level must be implemented in the project of each operator station in an MS multiple-station system.

Procedure for locking messages

1. Click the required icon.
2. Enter a text in the input box as a comment.
3. Click OK/Lock messages.

Procedure for releasing messages

1. Click the required icon.

Additional information

For more information on this, refer to the *Process Control System PCS 7; Operator Station* manual.

6.11.2.3 How to depassivate modules or channels

Introduction

The passivation symbol is displayed in the faceplate in order to ensure that the discrepancy of a redundant module or its failed channels can be detected by the maintenance engineer.

As long as the discrepancy time is active, maintenance required and a message are displayed in the message system in the faceplate of the module.

If, moreover, a long-term discrepancy is detected, the module/channel is passivated. This results in a loss of redundancy. The module or the channel is indicated as "Faulty" in the block icon. The maintenance demanded, the symbol for depassivation and a message are displayed in the message system in the faceplate.

If the cause of the discrepancy has been remedied, the depassivation can be carried out with the icon in the faceplate.

Icon in the user interface

Icon	Function	Explanation	Authorization
	Depassivation	The module or channels are passivated.	"Higher process controlling" for diagnostics area

Procedure

1. Click the "Depassivation" icon.
2. Click the "Execute" button.

Result

The depassivation is executed. The icon is hidden.

6.11.2.4 How to open websites via maintenance links

Introduction

Up to 3 Web pages which are used to provide support for diagnostics measures can be called. The icons are displayed when the calls are configured.

Requirements

- The Maintenance Station is available in the MS Standard version.
- The maintenance target (web address) has been configured.
- The maintenance target can be accessed via the network.

Icon in the user interface

Icon	Function	Explanation	Permission
	Open maintenance link 1	Open of the configured web address	"Higher process controlling" for diagnostics area
	Open maintenance link 2		
	Open maintenance link 3		

Procedure

1. Click on the icon.

Result

The web page is displayed in a screen window.

6.11.2.5 How to open the online view of HW Config

Introduction

The "Call hardware project" icon is used to call the online view of the hardware configuration (HW Config).

Note

This function is available for the maintenance station in the MS Standard version.

The hardware project can be called if the MS client is operated on the ES.

Icon in the user interface

Icon	Function	Explanation	Permission
	Call hardware project	Calls the online view of the hardware configuration (HW Config)	"Higher process controlling" for diagnostics area

Displaying the "Call hardware project" icon

The icon is displayed in the faceplate header for field devices (EDD) and AS objects.

Requirement

The component is part of the hardware configuration.

Procedure

1. Click the "Call hardware project" icon.

Note

Do not proceed until the online view of the hardware configuration (HW Config) is completely open, because HW Config online may otherwise be put in the background and can no longer be reached if key combinations are locked. In this case, press the button once again.

Result

The online view of the hardware configuration (HW Config) opens.

6.11.2.6 How to open the configuration interface of SIMATIC PDM

Introduction

You use the "Call SIMATIC PDM" icon to call the configuration interface for the device shown in the faceplate.

Icon in the user interface

Icon	Function	Explanation	Permission
	Call SIMATIC PDM	Calls the parameter assignment interface for the device	"Higher process controlling" for diagnostics area

Displaying the "Call SIMATIC PDM" icon

The icon is displayed in all views in the faceplate for field devices and user objects that are integrated using a device description (EDD).

Requirements

- SIMATIC PDM >= V8.2 is installed.
- The SIMATIC PDM Server is installed and set up.
- The component can be programmed with SIMATIC PDM.

Procedure

1. Click the "Call SIMATIC PDM" icon.
2. Enter your logon data in the input boxes of the logon dialog box.

Result

The configuration interface for the component displayed in the faceplate is opened.

Additional information

You can find information about the opened display in the manual *Process Control System PCS 7; Help on SIMATIC PDM*.

6.11.2.7 How to call up the Web interface of a network component

Introduction

You use the "Call configuration data" icon to open the Web Interface for the component.

First, an attempt is made to establish a secure connection (HTTPS) to the device. If the secure connection is successfully established, the "Call configuration data" icon is displayed for operator selection.

If the secure connection cannot be established, an attempt is made to establish a non-secure connection (HTTP). If the non-secure connection is successfully established, the "Call configuration data" icon is displayed for operator selection.

If no connection can be established, the "Call configuration data" icon is not available for selection.

Note

This function is not available for SIMATIC PDM MS.

Requirements

- The network objects must be accessible via the network.
- The "Trusted sites" security setting is in effect.
For additional information on this topic, refer to the *SiMATIC NET; "Industrial Ethernet OSM/ESM Network Management" Manual*.
- The network component device profile corresponds to the OSM or SCALANCE device profile.

Icon in the user interface

Icon	Function	Explanation	Permission
	Call configuration data	Call of the Web Interface of the component	"Higher process controlling" for diagnostics area

Displaying the "Call configuration data" icon

The icon is displayed in the faceplate in all views for network components.

The icon is also displayed when the network component is not accessible.

Procedure

1. Click the "Call configuration data" icon.

Result

The Web Interface of the component opens.

6.11.2.8 How to call the Diagnostics Monitor diagnostic tool

Introduction

You can open the "Diagnostics Monitor" diagnostic tool of the component with the "Diagnostics Monitor" icon.

First, an attempt is made to establish a secure connection (HTTPS) to the device. If the secure connection is successfully established, the "Diagnostics Monitor" icon is displayed for operator selection.

If the secure connection cannot be established, an attempt is made to establish a non-secure connection (HTTP). If the non-secure connection is successfully established, the "Diagnostics Monitor" icon is displayed for operator selection.

If no connection can be established, the "Diagnostics Monitor" icon is not available for selection.

Requirements

- The Diagnostics Monitor diagnostic tool is installed and configured.
- The web server is started and enabled in the Windows firewall.
- The PC stations can be accessed via the network.

Icon in the user interface

Icon	Function	Explanation	Permission
	Call Diagnostics Monitor	Calling the Diagnostics Monitor diagnostic tool	"Higher process controlling" for diagnostics area

Displaying the "Call configuration data" icon

The icon is displayed in the faceplate for IPCs.

Procedure

1. Click the "Diagnostics Monitor" icon.

Result

The diagnostic tool is called.

6.11.3 Views

6.11.3.1 "Ident" view

Available

This view is displayed for all components.

This view is not available in the faceplate for the redundant server pair.

Note

This view is available for the maintenance station in the MS Standard and SIMATIC PDM MS versions.


Overview

This view displays the configuration data or device data in the information box. The composition of the identification data depends on the component selected.

6.11 Faceplate

The structure of the view is identical for all faceplates; only the origin of the identification data is different.

The following figure shows an example of the view:

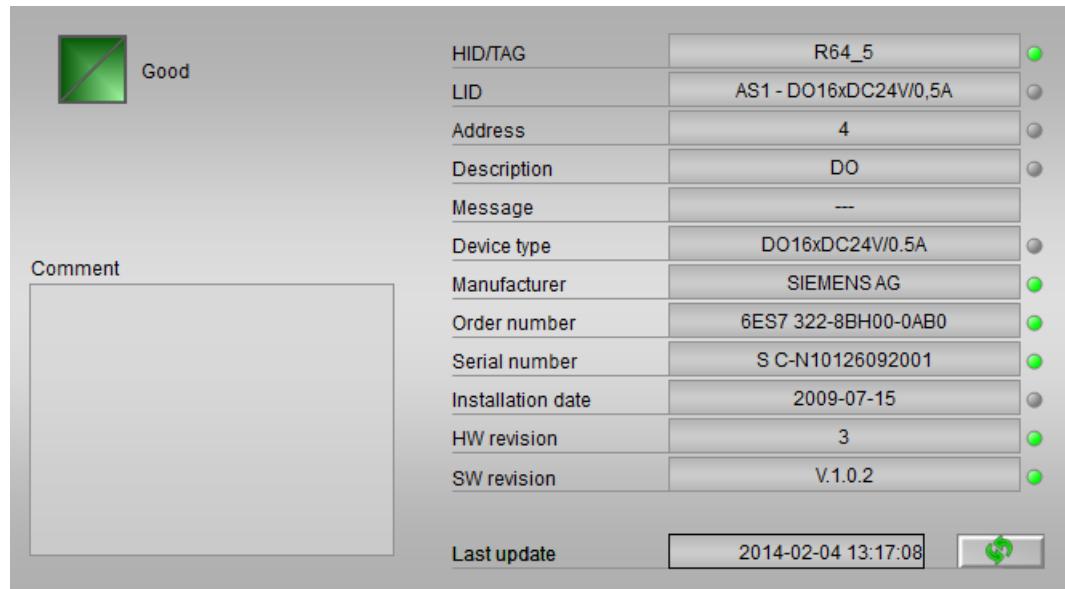

Display

- Maintenance status

You can find more information on the maintenance status in the sections "Maintenance status and maintenance group display (Page 123)" and "Maintenance status of redundant components (Page 126)".

- Identification data

The identification data represents the electronic rating plate of a device. The identification data is refreshed manually in the faceplate using the operator control.

There is an automatic update following the change in status from "Maintenance alarm" to another maintenance status. The exception to this is the status "unknown/unchecked".

You can find information about the sources of the identification data in the section "Origin of the identification data (Page 183)".

Note

Not every asset provides all identification data.

If certain identification fields in the "Ident" view are empty even though the time stamp in the "Last update" field has been updated, these data are not provided by the component. The causes may be as follows:

- There is no data stored in the component.
- The component does not recognize the data.

If, however, no time stamp is displayed in the "Last update" field, then either the identification data have not been updated or there are no online data available for these components.

- Comment
The comment is read from HW Config.
- Last update
The timestamp of the last update of the identification data is displayed.
- Status
The following table shows the symbolic identification of the origin of the data:

Icon identification	Meaning
No icon	No information on the data source
	Device data The data source is the device.
	Project data The data source is the project. No data were read from the device.

Operator control

Icon	Explanation	Permission
	You update the display of identification data by clicking the icon.	"Process controlling" for the diagnostics area

Additional information

You can find information on displaying redundant components in the faceplate in the section "Display of faceplate for redundant components (Page 182)".

6.11.3.2 "Messages" view

Available

This view is displayed for all components.

Note

This view is available for the maintenance station in the MS Standard and SIMATIC PDM MS versions.

Overview

This view contains all messages that are present for a component.

The following messages are displayed:

- Diagnostic/error messages
- Operating messages after selection of the long-term archive list in the toolbar

6.11 Faceplate

The following figure shows an example of the view:

	Date	Time	Class	Status	Event	Source
1	16/11/11	08:17:07	PLC process control messages		C Bad, maintenance alarm Additional status available	Userdiag/AssetM
2	16/11/11	08:17:07	PLC process control messages		C Uncertain, maintenance demanded Additional status available	Userdiag/AssetM
3	16/11/11	08:17:07	Preventive maintenance		C Good, maintenance required Additional status available	Userdiag/AssetM
4						
5						

Display

Messages

- Currently pending messages, independent of acknowledgment status
- Unacknowledged messages went out
- In addition to the filter for the "Origin", only messages that belong to the "Diagnostics" area are displayed.

Operator controls

Operation takes place the same way as operation on an operator station.

You can find additional information on this in the manual *Process Control System PCS 7, OS Process Control*.

The following icon is also displayed for switching between the "Chronology" view and the "Operator message" view if the short-term archive list is selected.

Icon	Explanation	Permission
	By clicking the icon, the short-term archive list is called and the following icon for switching between the "Chronology" view and the "Operator message" view is displayed.	No access protection
	You change the view by clicking the icon.	

6.11.3.3 "Maintenance" view

Available

This view is displayed for all components.

This view is not available in the faceplate for the redundant server pair.

Note


This view is available for the maintenance station in the MS Standard and SIMATIC PDM MS versions.

Overview


This view allows the maintenance engineer to demand and manage a maintenance job for the specific component. The maintenance state of the demanded maintenance measure is displayed in the diagnostic screens in the maintenance group display. The maintenance state, the maintenance job and the state of the maintenance job are displayed in the header of the faceplate.

In this view you can execute a single export, consisting of identification data, the maintenance state and the maintenance information of the respective component.

The following figure shows an example of the view for an input and output module:

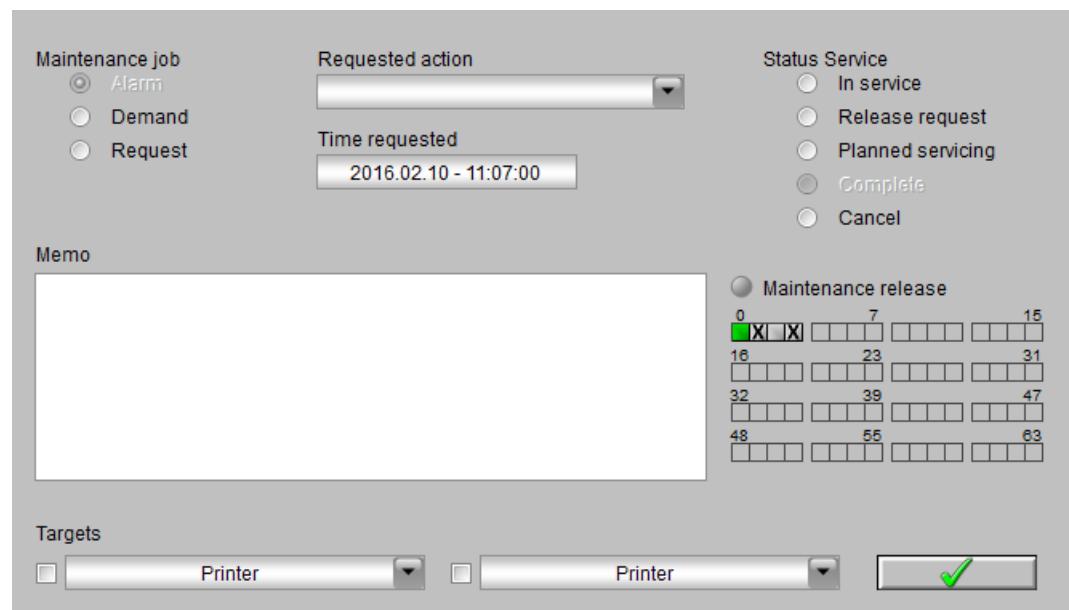

The following figure shows an example of the view for a PC object:

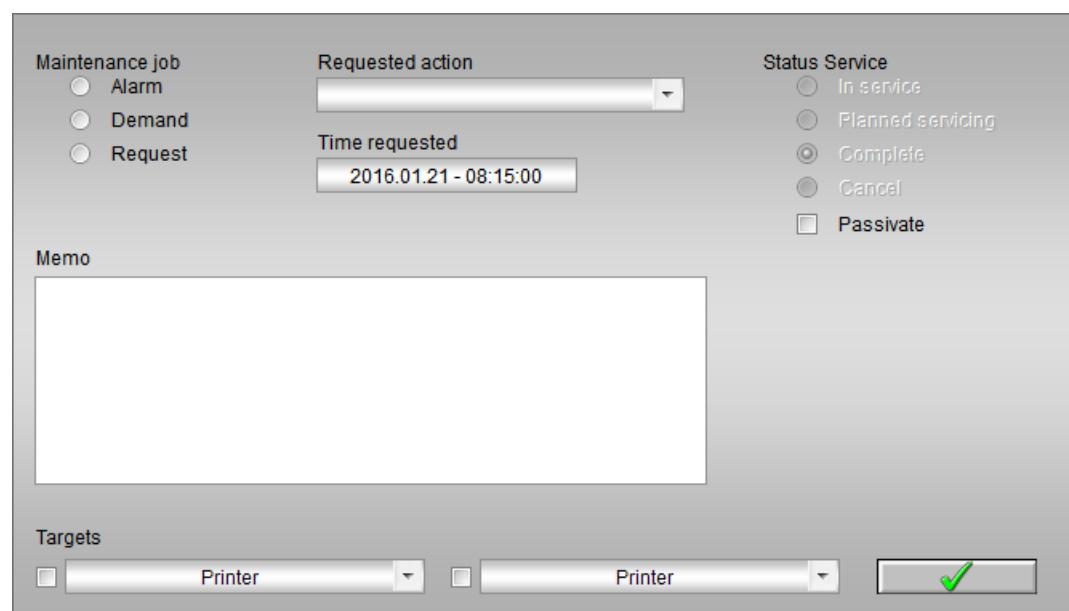

Display

- Sum status of the release for maintenance
The display is formed from the state of the maintenance release of the lower-level components and their own components.

Display	Meaning
	Release granted for all components/channels involved
	Release not granted for at least one component/channel involved

Note

The Advanced Process Library must be used in order to display the maintenance release.

- Maintenance release for lower-level components/channels

Display	Meaning
	Not interconnected/used
	Interconnected/used and release by the operator in the plant area not granted
	Interconnected/used and release by the operator in the plant area granted

Note

The Advanced Process Library must be used in order to display the maintenance release.

Operator control

Icon/ Name	Explanation	Operator permis- sion
"Maintenance job" area <ul style="list-style-type: none">● Alarm● Prompt● Request	A maintenance job is requested by clicking an option button.	"Process control- ling" for the diag- nostics area
"Requested action" area	You select an action from the drop-down box. An action, for example, can be "Disassembly". You can find information on configuring an action in the section "Configuring maintenance actions (Page 58)".	
"Time requested" area	The time of the request of the maintenance job is specified in the input box. The time is entered in the following format: YYYY.MM.DD - hh:mm.	
"Status Service" area <ul style="list-style-type: none">● In service● Release request● Planned servicing● Completed● Cancel	By selecting an option button, the maintenance job is given a processing state.	
"Passivate" check box	Available for PC and IPC objects The PC object is passivated by clicking on the check box. You can find information on passivation in the section "Pas- sivating PC objects (Page 194)".	
"Memo" area	The maintenance engineer can enter a note for the service job in the memo field or change a saved note. The text is applied to the individual export file. In order for the note text to be saved as a comment for the operator message and permanently displayed in the memo field, one of the following operator actions is required in addition to entering the note text: <ul style="list-style-type: none">● Change the type of maintenance job in the maintenance job area● Switch between the service types 'In Service' and 'Planned servicing' (bilateral) in the Status Service area The note text is deleted when you complete or cancel the maintenance job.	
"Targets" area	<ul style="list-style-type: none">● Check boxes By selecting this check box, the single export file is stored in the selected target.● Drop-down box	

6.11 Faceplate

Icon/ Name	Explanation	Operator permis- sion
	<p>Select the storage path for the single export file from the drop-down box. A maximum of two targets can be selected at the same time.</p> <p>You can find information on configuration of a target in the section "Configuring maintenance targets for individual export (Page 56)".</p>	
	<p>When the icon is clicked, a maintenance job is created as a single export file or displayed as a print job.</p> <p>The Print function is available if your plant is not operated via a PCS 7 Web client.</p>	

Additional information

You can find information on single export in the section "Overview of individual export (Page 77)".

6.11.3.4 "Note" view

Available

This view is displayed for all components.

This view is not available in the faceplate for the redundant server pair.

Note

This view is available for the maintenance station in the MS Standard and SIMATIC PDM MS versions.

Overview

You can leave temporary messages for other maintenance engineers in this view.

The following figure shows an example of the "Notes" view.



Operator control

Icon	Explanation	Permission
Free area	Text box for the note	"Process controlling" for the diagnostics area
<input type="checkbox"/>	<p>The note is enabled or disabled by selecting the check box.</p> <ul style="list-style-type: none"> • Enabling The note is enabled when the check box is selected. The next time the faceplate is opened or there is a process picture change, you can see in the status bar of the block icon and the faceplate that there is a new message for you. • Disabling The display in the status bar of the faceplate and in the block icon is hidden. The message is not deleted automatically. 	

Note

Keep in mind that a complete compilation of the MS (that is the MS for single-station systems and the MS server for multiple-station systems) and subsequent downloading of the MS server deletes the contents of the note view.

6.11.3.5 "Diagnostics" view for PC objects

Available

The view is displayed for the IPC component from the PC objects area.

Note

This view is available for the maintenance station in the MS Standard and SIMATIC PDM MS versions.


Overview

Up to 18 binary states of an IPC are displayed in this view.

- The following figure shows an example of the view for a component IPC with the profile V1.3:



- The following figure shows an example of the view for a component IPC with the profile V1.4 or higher:

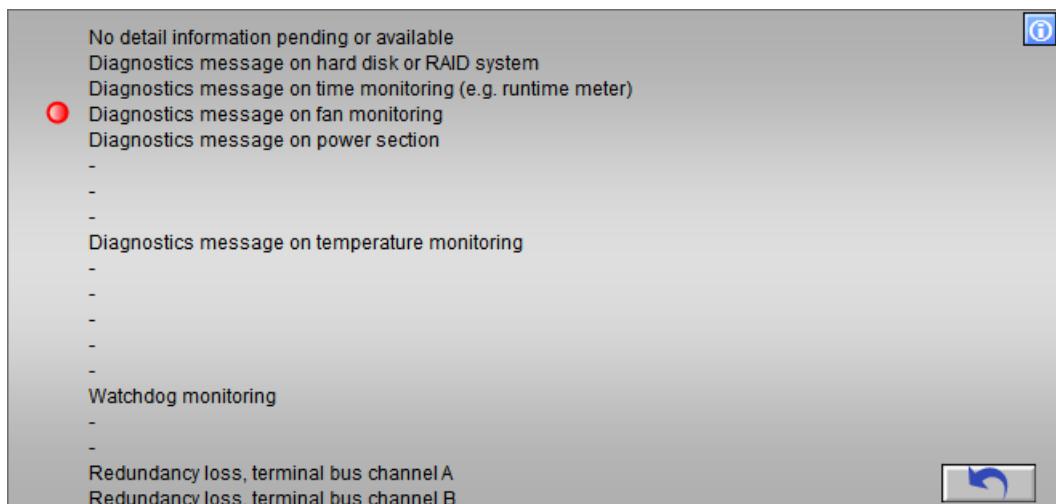

The redundancy loss of channel A/B is only indicated in the case of a redundant connection to the terminal bus with Softnet IE/RNA in combination with the IPC Profile 1.5.

As soon as one of the two terminal bus cables is removed, this is visualized with a "red" state display.

These displays are not controlled with Intel Teaming.

Display

- Status of the component

The following table shows the icon representation of the statuses:

Icon identification	Meaning
No icon	No state
	No detail information pending or available
	Pending fault
	There was a fault for a time

Operator control

Icon	Explanation	Permission
	You open the legend by clicking the icon. The legend shows the icons designating the possible statuses and their meaning.	No access protection
	With Profile V1.4 and higher, the stored statuses are reset when you click the icon.	"Process controlling" for the diagnostics area

6.11.3.6 "Connection display" view for client components

Available

The view is displayed for all OS clients, MS clients and OS/MS clients from the area of the PC objects.

Note


This view is available for the maintenance station in the MS Standard version.

Overview

This view shows all servers, the server data of which are downloaded to the client.

Servers are OS servers, MS servers and OS/MS servers.

The following figure shows an example of the view:

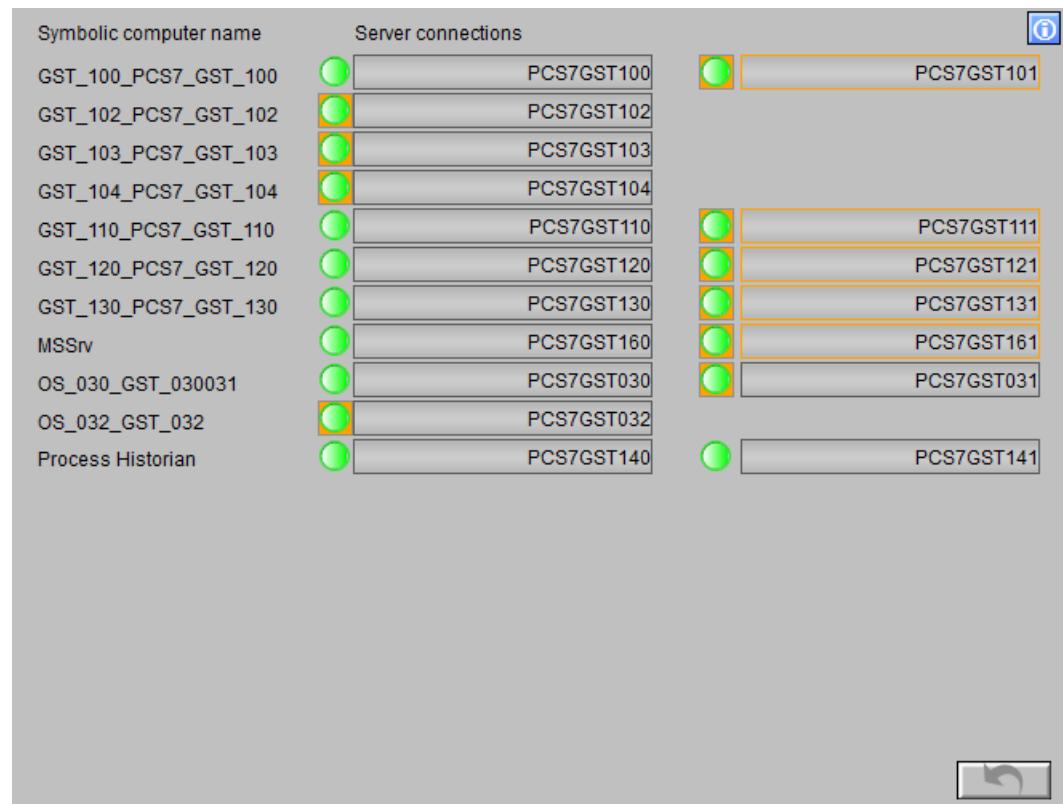

Display

- The symbolic computer name of all servers
- The computer name of all servers
- The computer name of the redundant partner
- Configured and currently connected preferred servers

6.11 Faceplate

- Current connection
- Status

The following table shows the icon representation of the statuses:

Display	Meaning
	Configured preferred servers
	Currently connected server is preferred server and connection is available
	Connection available
	Connection not available
	Connection has failed in the meantime
	Currently connected server is preferred server and connection has failed in the meantime
	The server does not assume the "Error" state and waits until its partner can take over again. Only then does the server assume the "Fault" state.
	The currently connected server is the preferred server. The server does not assume the "Error" state and waits until its partner can take over again. Only then does the server assume the "Fault" state.

Operator control

Icon	Explanation	Permission
	You open the legend by clicking the icon. The legend shows the icons designating the possible statuses and their meaning.	No access protection
	When you click on the icon, the marking for server connections that have failed in the meantime is reset.	"Process controlling" for the diagnostics area

6.11.3.7 "Connection display" view for server components

Available

The view is displayed for all OS servers, MS servers and OS/MS servers from the area of the PC objects.

Note

This view is available for the maintenance station in the MS Standard version.

Overview


This view displays all clients connected to the server.

Clients are OS clients, MS clients and OS/MS clients.

The server data of the server must be assigned to the clients.

The partner is displayed for a redundant server.

The following figure shows an example of the view:

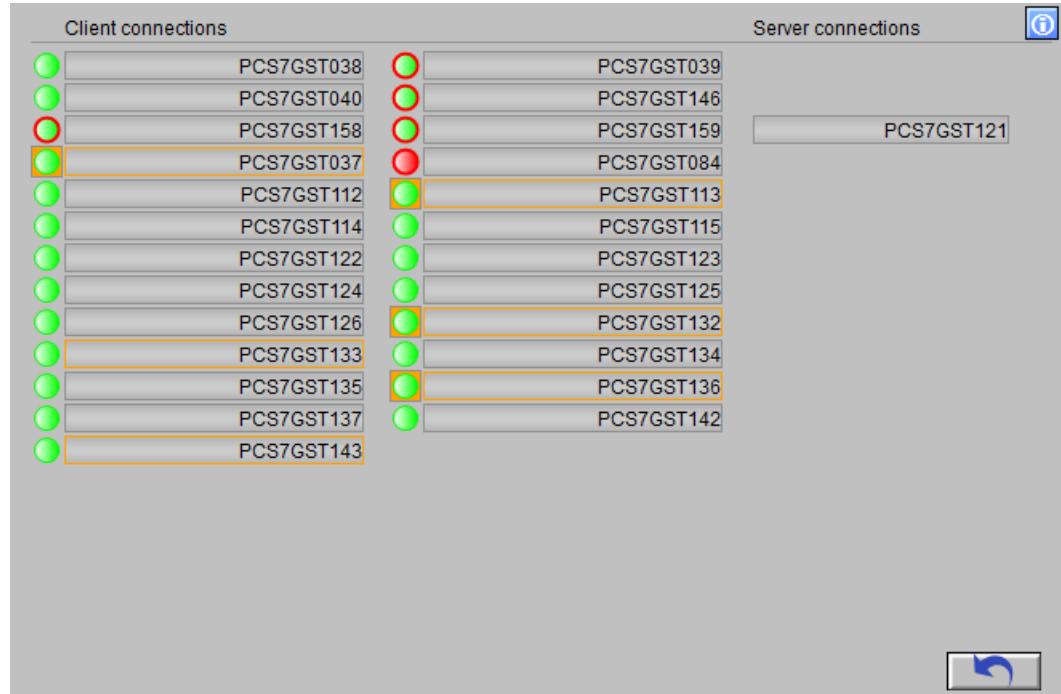

Display

- The computer name of all clients assigned to the server
- The computer name of the redundant partner
- Configured and currently connected preferred servers
- Current connection
- Status

The following table shows the icon representation of the statuses:

Display	Meaning
PCS7GST113	Configured preferred servers
■	Currently connected server is preferred server and connection is available
●	Connection available
●	Connection not available
●	Connection has failed in the meantime
■	Currently connected server is preferred server and connection has failed in the meantime

Operator control

Icon	Explanation	Permission
	You open the legend by clicking the icon. The legend shows the icons designating the possible statuses and their meaning.	No access protection
	By clicking on the icon, the marking for client connections that have failed in the meantime is reset.	"Process controlling" for the diagnostics area

6.11.3.8 "Diagnostics" view for AS objects

Available

The following views are shown for devices of the type Switch, Drive and EnergyMeter from the field devices area.


Note

This view is available for the maintenance station in the MS Standard version.


Overview

Information on Switch, Drive and EnergyMeter type devices is displayed in these views.

- The following figure shows an example of the view for Switch:

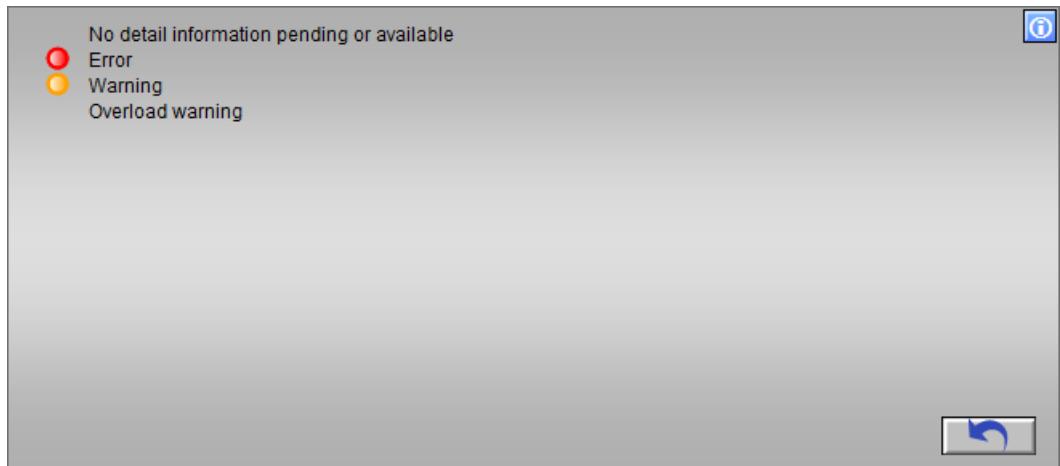


- The following figure shows an example of the view for Drive:

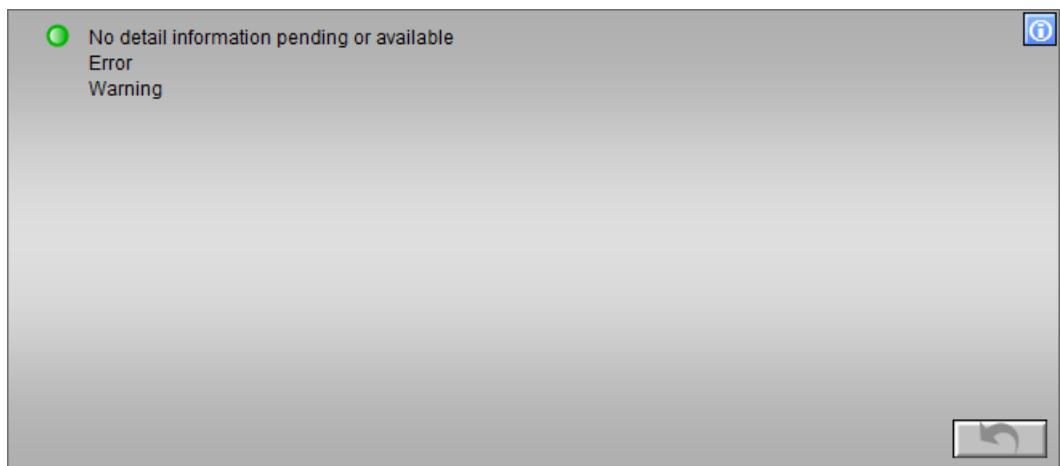


6.11 Faceplate

- The following figure shows an example of the view for Drive in accordance with the NAMUR standard:

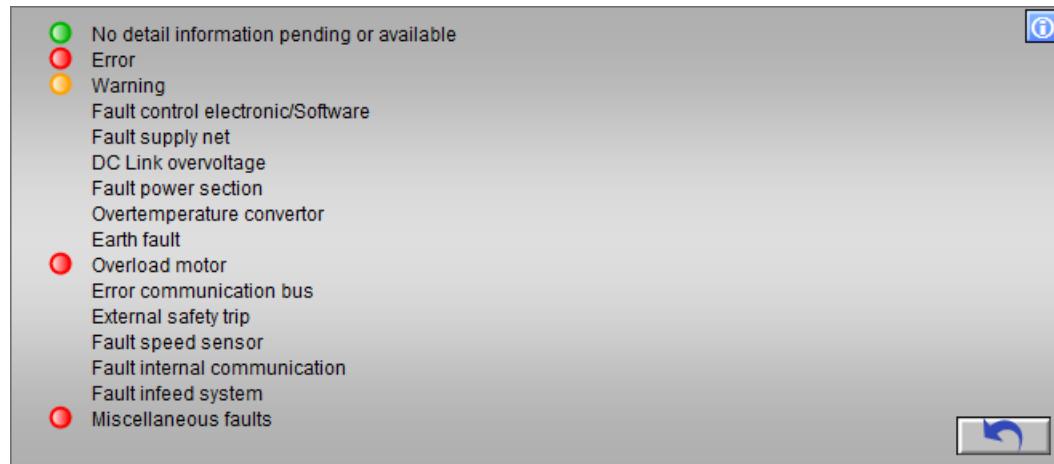

- The following figure shows an example of the view for EnergyMeter:

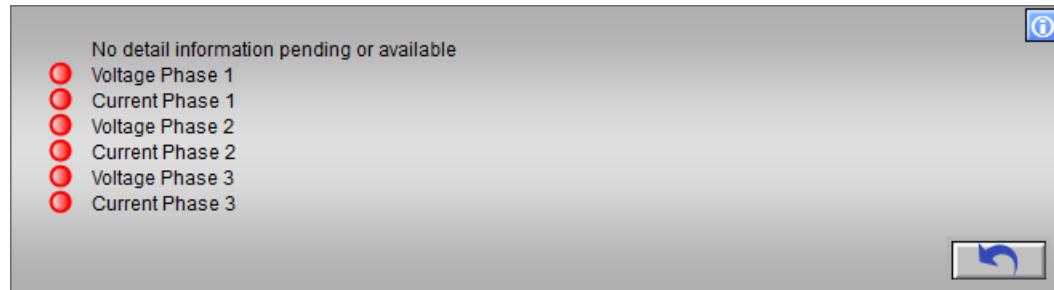

Display

- Statuses for the device

The following table shows the icon representation of the statuses:

Icon identification	Meaning
No icon	No status
● (green)	No detail information pending or available
● (red)	Problem exists
● (red)	There was a fault for a time
● (yellow)	There is a warning
● (yellow)	There was a warning for a time

Operator control

Icon	Explanation	Permission
	You open the legend by clicking the icon. The legend shows the icons designating the possible statuses and their meaning.	No access protection
	By clicking the icon, the stored statuses are reset.	"Process controlling" for the diagnostics area

6.11.3.9 "Performance" view for AS objects

Available

This view is displayed for the AS station in the AS/system area for CPU types that support the SFC78 and have the following firmware versions:

- Standard CPU 41x >= firmware version V5.0
- H-CPU 4xx >= firmware version V4.5

Note


This view is available for the maintenance station in the MS Standard version.

Overview

This view graphically displays the overall situation of the CPU utilization. All values in the bar chart are given as percentages. The reference value is the assigned maximum cycle monitoring time of the CPU.

All of the displays of the overall situation are mean values. because displaying actual values of the most recent cycle in each instance would result in a widely fluctuating reduction ratio display in the screen refreshing cycle.

The following figure shows an example of the view:

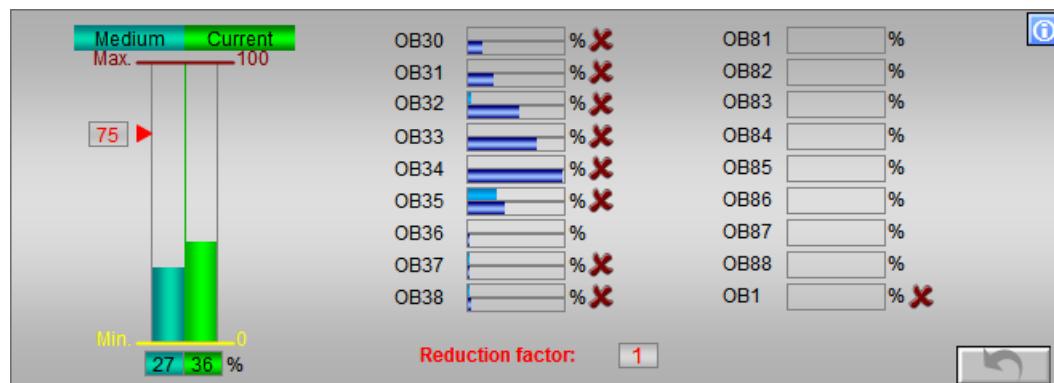

Display

- Total runtime

The values in the bar diagram are specified in %, relative to the set maximum cycle monitoring time.
Its numeric magnitude is displayed under the bar.

 - Mean value
Mean value of the actual value in % (TOTALPER block parameter)
 - Actual value
Mean value of all net run times in % OB3x/OB8x + OB1 (TOTALCUR block parameter)
 - Max. value
Formed from the net run times in % of all the OB3x/OB8x + OB1 net run times from the most recent cycle (TOTALMAX block parameter)
 - Min. value
Formed from the net run times in % of all the OB3x/OB8x + OB1 net run times from the most recent cycle (TOTALMIN block parameter)
- Horizontal bar diagrams for OB3x

The values refer to the respective OB cycle time.
The graphic display of the OB3x times is expanded by an indicator that signals buffered and lost start events.

 - Net value
 - Gross value
 - Start event lost
- Horizontal bar diagrams for OB8x and OB1

The values refer to the configured maximum cycle monitoring time.

 - Net value
- Scan rate:
Display of the scan rate for all cyclical OBs of the user program

Operator control

Icon	Explanation	Permission
	You open the legend by clicking the icon. The legend shows the icons designating the possible statuses and their meaning.	No access protection
	You reset the values by clicking the icon.	"Process controlling" for the diagnostics area

Avoiding a CPU stop

Functions have been integrated into the CPU to ensure that the user programs can continue running even when the CPU becomes overloaded and to prevent the CPU from switching to "STOP" mode. The "Emergency mode" parameters are assigned in the "CPU function block" faceplate, "Parameters view".

NOTICE

Utilization limit

When the CPU gets close to full capacity, the user programs will become sluggish. If this starts to affect process mode, the user program will need to be reconfigured.

You can find additional information about this in the section ""Parameters" view for AS objects (Page 165)".

6.11.3.10 "OBx..." view for AS objects

Available

This view is displayed for the AS station in the AS/system area for CPU types that support the SFC78 and have the following firmware versions:

- Standard CPU 41x >= firmware version V5.0
- H-CPU 4xx >= firmware version V4.5

Note

This view is available for the maintenance station in the MS Standard version.

Overview

This view displays the utilization of the OBs in a CPU with diagnostics functionality.

The following figure shows an example of the "OB3x" view .

6.11 Faceplate

		OB30 (5000 ms)	OB31 (2000 ms)	OB32 (1000 ms)	OB33 (500 ms)	OB34 (200 ms)	OB35 (100 ms)	OB36 (50 ms)	OB37 (20 ms)	OB38 (10 ms)
Gross (ms)		Act.	2604	605	204	2	2	1	1	1
		Avg.	2408	604	204	2	2	1	1	1
		Max.	2605	605	205	2	2	2	1	1
		Min.	2005	5	5	2	1	1	1	1
Net (ms)		Act.	1052	352	179	0	0	0	0	1
		Avg.	1051	352	179	0	0	0	0	1
		Max.	1754	353	179	0	0	0	0	1
		Min.	1050	0	3	0	0	0	0	0

The figure shows an example of the "OB8x/OB1" view.

		OB81	OB82	OB83	OB84	OB85	OB86	OB87	OB88	OB1
Net (ms)		Act.	0	0	0	0	0	0	0	1
		Avg.	0	0	0	0	0	0	0	1
		Max.	0	3	7	0	9	0	0	1
		Min.								0

Display

- The utilization of the OB3x organization blocks is shown in the "OB3x" view:
 - The absolute gross and net value, and the average value over a number of cycles of the OB 3x, related to the configured maximum cycle monitoring time of the OB in each case.
 - The minimum and maximum values reached since the last reset of the OBs
- The utilization level of the OB8x organization blocks is shown in the "OB8x/OB1" view:
 - The absolute net value and the average value over a number of cycles of the OB8x and OB1, related to the configured maximum cycle monitoring time of the OB in each case.
 - The minimum and maximum values reached since the last reset of the OBs.

Operator control

Icon	Explanation	Operator permission
	You reset the counter values by clicking the icon.	"Process controlling" for the diagnostics area

6.11.3.11 "Parameters" view for AS objects

Available

This view is displayed for the AS station in the AS/system area for CPU types that have the following firmware versions:

- Standard CPU 41x >= firmware version V5.0
- H-CPU 4xx >= firmware version V4.5

Note

This view is available for the maintenance station in the MS Standard version.

Overview

In this view, parameters can be assigned for the overload behavior.

The default cycle monitoring time for the CPU is 6 s.

Failure to process all the OBs within this time will result in a cycle overload.

6.11 Faceplate

To prevent the CPU from switching to "Stop" mode, you can parameterize "Emergency mode".

- The following figure shows an example of the "Parameter" view of the CPU with SFC78.

<input checked="" type="checkbox"/> OB30 reduction with overload	Max. number suppr. STOP demanded	82
<input checked="" type="checkbox"/> OB31 reduction with overload	Alarm limit capacity	85 %
<input checked="" type="checkbox"/> OB32 reduction with overload	Cancel reduction ratio for	95 %
<input checked="" type="checkbox"/> OB33 reduction with overload	Hysteresis alarm limit	5 %
<input checked="" type="checkbox"/> OB34 reduction with overload	Calculating the CPU load (Display)	25 Cycles
<input type="checkbox"/> OB35 reduction with overload	Calculating the CPU load (internally)	5 Cycles
<input checked="" type="checkbox"/> OB36 reduction with overload	Message as of request error	10
<input checked="" type="checkbox"/> OB37 reduction with overload	Increase CPU load to	0 Cycles
<input checked="" type="checkbox"/> OB38 reduction with overload		

- The following figure shows an example of the "Parameter" view of the CPU without SFC78.

<input checked="" type="checkbox"/> OB30 reduction with overload	Max. number suppr. STOP demanded	50
<input checked="" type="checkbox"/> OB31 reduction with overload		
<input checked="" type="checkbox"/> OB32 reduction with overload		
<input checked="" type="checkbox"/> OB33 reduction with overload		
<input checked="" type="checkbox"/> OB34 reduction with overload		
<input checked="" type="checkbox"/> OB35 reduction with overload		
<input checked="" type="checkbox"/> OB36 reduction with overload		
<input checked="" type="checkbox"/> OB37 reduction with overload	Message as of request error	4
<input checked="" type="checkbox"/> OB38 reduction with overload	Increase CPU load to	5 Cycles

Emergency mode

"Emergency mode" automatically reduces the speed of the configured cyclic tasks. The user programs then run more slowly.

"Emergency mode" should not be used on a continuous basis. The "Emergency mode" is signaled as a maintenance alarm with maximum priority setting.

Display/Operation

Identifier	Explanation	Operator permission
OB3x reduction with overload	<p>In the event of an overload the OB is processed more slowly.</p> <p>Reduction is enabled or disabled by selecting the check box.</p> <p>In this display, reduction is enabled.</p>	"Higher process controlling" for diagnostics area
Max. number suppr. STOP demanded	<p>X (X is a number between 1 and 9999)</p> <p>The number 50 is preset at the block for X by the system.</p> <p>After the cycle monitoring time is exceeded for X+2 times, the CPU switches to "STOP"</p>	
Alarm limit capacity	If the total utilization, which equates to the sum of the mean values for all the net run times (in % for OB3x, OB8x + OB1), exceeds the alarm limit capacity, then the message "Net time consumption of all OBs exceeds max. limit" is output and the maintenance status is set to "Maintenance demanded".	
Cancel reduction for	Emergency mode is terminated automatically when the maximum total utilization of the controller as configured in the "Cancel reduction for x%" or "MAX_VAL (CPU_RT)" parameter is reduced accordingly and there is no longer any long-term violation of the cycle time.	
Hysteresis alarm limit	Hysteresis prevents the message "Net time required by all OBs exceeds max. limit" from "wavering".	
Calculating the CPU load (Display)	The CPU load for the display is calculated for the specified number of cycles.	
Calculating the CPU load (internally)	The (internal) CPU load is calculated for the specified number of cycles.	
Message as of request errors	If the value is exceeded, an "OB3x request error" message is output.	
CPU load increase to	Once the slowest running OB has resumed "normal" running speed for 5 consecutive cycles, the reduction is canceled.	

6.11.3.12 "Connection load display" for CPU connections

Available

This view is displayed for the AS station in the AS/system area for the following CPU types:

- H-CPU 4xx >= firmware V6

Note


This view is available for the maintenance station in the MS Standard version.

Overview

This view shows the 5 most heavily loaded connections of the CPU.

The connection types are displayed according to the maximum value of the load from the top down.

The following figure shows an example of the view:

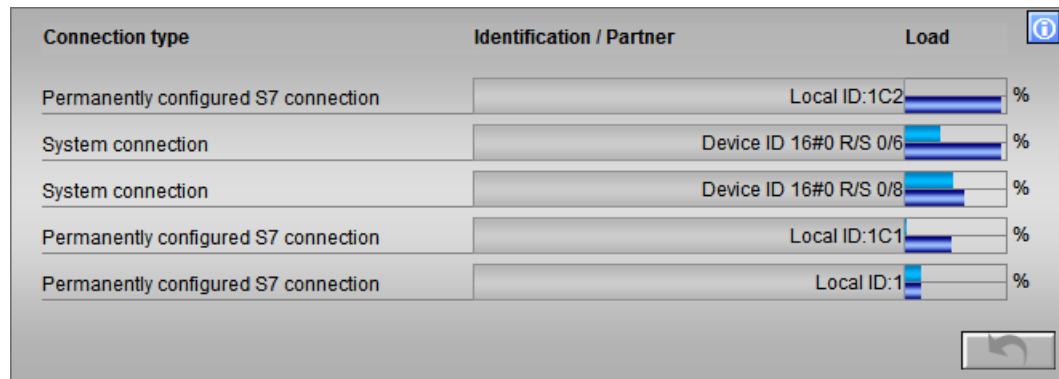

Note

The displayed actual values correspond to the values that are displayed on the "Connection statistics" tab in the "Module status" dialog of the CPU.

Display

- Connection type:
The connection type corresponds to the configuration in NetPro.
 - Invalid connection type
 - S7 connection
 - S7 connection (fault-tolerant)
 - T connection (TCP native)
 - T connection (UDP)
 - T connection (ISO-on-TCP)
 - Routed connection
 - PG connection
 - OP connection
 - OMS connection
 - Free connection
 - Free connection (TCP)
 - System connection
 - RPC7 connection
 - Connection for basic communication
- Partner / identification
Shows the partner ID from NetPro
- Load
Shows the utilization of the connection as a percentage
- Actual value
- Maximum value

Operator control

Icon	Explanation	Permission
	You open the legend by clicking the icon. The legend shows the icons designating the possible statuses and their meaning.	No access protection
	You reset the displayed values by clicking the icon.	"Process controlling" for the diagnostics area

6.11 Faceplate

6.11.3.13 "Diagnostic buffer" view for CPU and CP

Available

The view is displayed for all CPUs and CPs in the central rack and expansion rack.

Note

This view is available for the maintenance station in the MS Standard version.

"Diagnostic buffer of the CPU/CP" overview

This view shows the last 20 events that occurred in the diagnostic buffer of a CPU or CP.

The following figure shows an example of the information from the diagnostic buffer of a CPU:

Diagnostics buffer			
#	Time	Short text	Error code
01	17.01.2016 18:17:41.314	Mode transition from STARTUP to RUN	0x4302
02	17.01.2016 18:17:41.305	BATTF: at least one backup battery failed on central rack	0x3921
03	17.01.2016 18:17:40.257	Request for manual warm restart	0x1381
04	17.01.2016 18:17:40.239	Mode transition from STOP to STARTUP	0x4301
05	17.01.2016 18:17:40.239	New startup information in STOP mode	0x530D
06	17.01.2016 18:16:53.635	New startup information in STOP mode	0x530D
07	17.01.2016 18:16:53.632	STOP caused by PG stop operation or by SFB 20 "STOP"	0x4304
08	17.01.2016 17:27:08.406	Mode transition from STARTUP to RUN	0x4302
09	17.01.2016 17:27:08.398	BATTF: at least one backup battery failed on central rack	0x3921
10	17.01.2016 17:27:07.349	Request for manual warm restart	0x1381
11	17.01.2016 17:27:07.331	Mode transition from STOP to STARTUP	0x4301
12	17.01.2016 17:27:07.331	New startup information in STOP mode	0x530D
13	17.01.2016 17:27:05.015	New startup information in STOP mode	0x530D
14	17.01.2016 17:27:05.008	New startup information in STOP mode	0x530D
15	17.01.2016 17:27:04.182	New startup information in STOP mode	0x530D
16	17.01.2016 17:27:04.118	New startup information in STOP mode	0x530D
17	17.01.2016 17:27:04.072	New startup information in STOP mode	0x530D
18	17.01.2016 17:27:04.069	STOP caused by PG stop operation or by SFB 20 "STOP"	0x4304
19	05.01.2016 09:34:23.488	Mode transition from STARTUP to RUN	0x4302
20	05.01.2016 09:34:23.479	BATTF: at least one backup battery failed on central rack	0x3921

Detailed description:

Mode transition from STOP to STARTUP
STOP due to: STOP caused by PG stop operation or by SFB 20 "STOP"
Startup information:
- Time for time stamp at the last backed up power on
- Single processor operation

Last update 2016-01-21 09:14:00

Display

- Sequential number
- Time
Time when the event occurred
- Short text
Brief information about the event

- Error code
Error code for the event
- Detailed description
Detailed information on the event
- Last update
Time stamp of the last update of the data

Operator control

Icon	Explanation	Permission
No icon	Additional information about the event is displayed in the "Detailed description:" area when you click on a line.	No permission
	When you click the icon, the events are read out from the diagnostic buffer again and the table is updated.	"Process controlling" for the diagnostics area

6.11.3.14 "LED display" view for CPU

Available

The view is displayed for all CPUs.


Note

This view is available for the maintenance station in the MS Standard version.

Overview

This view displays the LEDs of the CPU.

The following figure shows an example of the display for a redundant CPU:

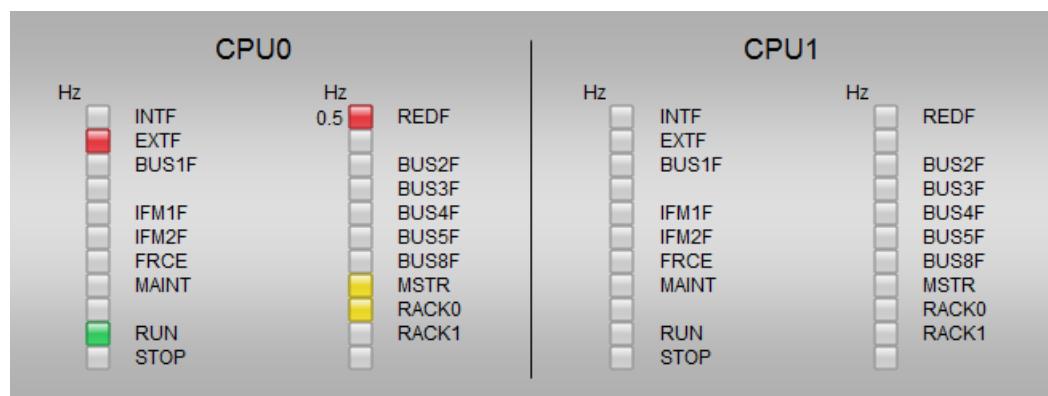

Display

- Frequency

The following table shows an example of the frequency at which the state flashes:

Icon	Meaning
0.5	The LED flashes at a frequency of 0.5 Hz.

- State

The following table shows the icon representation of the statuses:

Icon	Meaning
	"Active" state
	"Active" state
	"Fault is present" state
	No state pending / not relevant for this hardware configuration

6.11.3.15 "Diagnostics" view for field devices

Available

This view is displayed for all components from the field devices area.

Note


This view is available for the maintenance station in the MS Standard and SIMATIC PDM MS versions.

Overview

This view displays data of field devices that are integrated using a device description (EDD).

The data are read in SIMATIC PDM and transferred to the maintenance station.

The following figure shows an example of the view:

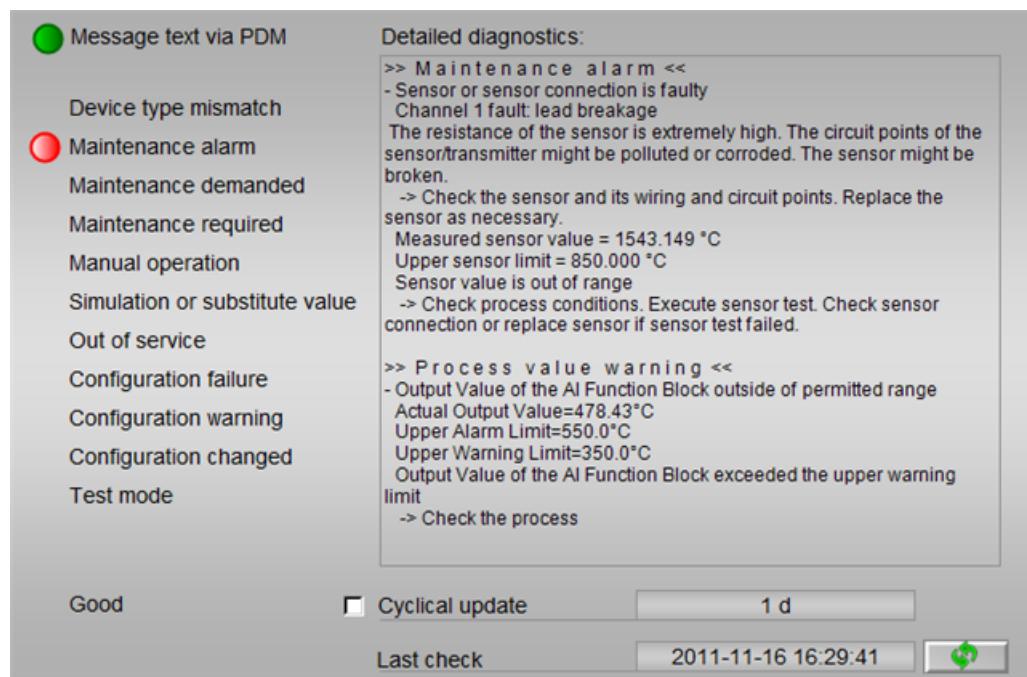

Display

- Communication via SIMATIC PDM
 Displays the state of the communication connection between SIMATIC PDM and the device the last time communication was established

Icon	Meaning
Green circle	Communication with SIMATIC PDM established
Red circle	Communication with SIMATIC PDM not established

- Device state
 Indicates the possible state of the relevant device (standard diagnostics based on the PA Profile of the "PROFIBUS & PROFINET International" organization)

Icon	Meaning
Green circle	The state "Good" is indicated by a green symbol before the corresponding text.
Red circle	The individual error states are indicated by a red symbol before the corresponding text.
No icon	No state pending

- Detailed diagnostics:
 The information and texts are read directly from the device and are interpreted and displayed via the EDD supplied by the device manufacturer.
 The texts are manufacturer-specific and are only displayed in one language. Switching languages is not possible.

6.11 Faceplate

- Cyclical update

Icon	Meaning
	<p>The update interval is displayed. The value "1 day" is pre-assigned by default. If you wish to change the update interval, you will have to adjust the value of the internal variable "@PDMDiagCycleTime" in the WinCC project of the OS server of which the measuring point is part.</p>

- Last check

Time stamp of the last update of the data

Note

Texts and languages are manufacturer- and device-specific. The language displayed corresponds to the language that has been set for SIMATIC PDM or the manufacturer's default language. The information displayed in this area indicates messages for the relevant field device.

Operator control

Icon	Explanation	Permission
<input type="checkbox"/>	Cyclical update is enabled or disabled by selecting the check box. Update is disabled in this display.	"Process controlling" for the diagnostics area
	Click the icon to update the displayed information.	

Additional information

You can find information on error texts in the section "Error texts for field devices/user objects (Page 180)".

6.11.3.16 "Parameters" view for field devices

Available

This view is displayed for all components from the field devices area.

Note

This view is available for the maintenance station in the MS Standard and SIMATIC PDM MS versions.

Overview

This view displays the device parameters saved in the project for field devices that are integrated using a device description (EDD).

The following figure shows an example of the view:

Device parameters		
Parameters	Value	Unit
TAG	SIPART_PS2_11	
Descriptor	PA-Adresse 11	
Message	hinter Koppler 1	
Static Revision No.	11	
Manufacturer	Siemens	
Product designation	SIPART PS2 PA	
Ordernumber	6DR4100-1N	
Device Serial Num	1177	
Software Revision	Sw-Version c1	
Hardware Revision	7	
Installation Date	01.10.1998	
Profile Revision	3.0	
HW Write Protection	Off	
PROFIBUS Ident Number	Manufacturer specific	

Additional information

You can find information on error texts in the section "Error texts for field devices/user objects (Page 180)".

6.11.3.17 "External diagnostics" view

Available

This view is displayed for components from the field devices area.

The view is only displayed for the diagnostic block that is interconnected directly with the channel block.

If you are operating a module redundantly, the signals are transmitted to the upstream diagnostic block via the "OR block".

Note

This view is available for the Maintenance Station in the MS Standard version.

Overview

External diagnostic information for the component is displayed in this view.

The following figure shows an example of the view:

6.11 Faceplate

- No detail information pending or available
- External service request, no additional information
- Service interval reached
- Different operating state
- Different performance parameters
- Auxiliary energy problem
- Auxiliary material problem
- Mechanical problem
- Electrical problem
- Pneumatic problem
- Calibration request
- Measuring circuit check
- Process-related event
- Cleaning request
- Emptying request
- Wear reserve undershot
- High degree of pollution

Display

- State

The following table shows the icon representation of the statuses:

Icon identification	Meaning
	No external detail information pending or available
	No external detail information pending or available
No icon	No state pending

- Display text

You configure the texts in the "Advanced Diagnostic Settings".

Additional information

You can find information on configuring the texts in the section "Configuring maintenance information (Page 61)".

You can find information on configuring maintenance information in the section "Configuring the display of maintenance information (Page 68)".

6.11.3.18 "Diagnostics" view for user objects

Available

The following views are displayed for components from the user objects area.


Note

This view is available for the maintenance station in the MS Standard version.

Overview

In this view, information on the user object are displayed.

The following figure shows an example of the view:

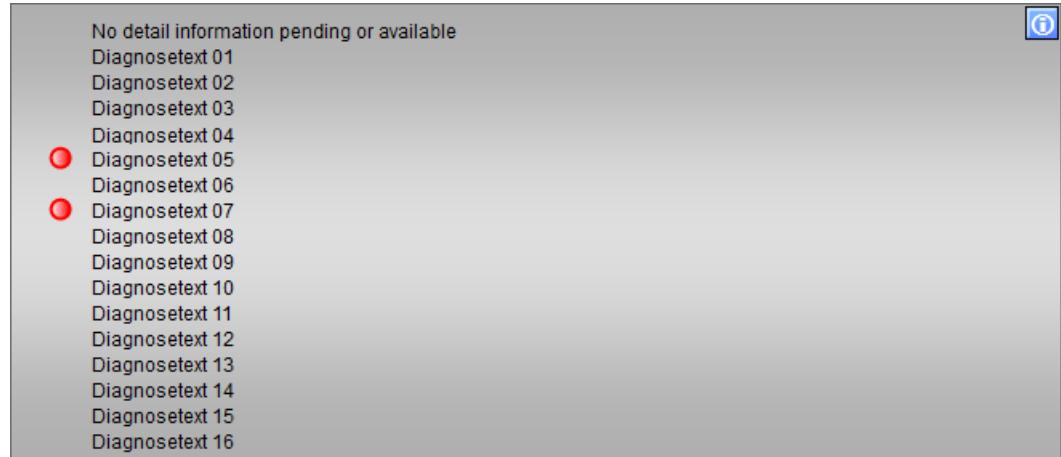

Display

- State

The following table shows the icon representation of the statuses:

Icon identification	Meaning
● (green)	No external detail information pending or available
● (red)	Detail information pending
● (orange)	Detail information existed for a time
No icon	No state pending

- Display text

The texts are configured by the user in the SIMATIC PDM object of the AssetM block in the EDD.

Operator control

Icon	Explanation	Permission
	You open the legend by clicking the icon. The legend shows the icons designating the possible statuses and their meaning.	No access protection
	By clicking the icon, the stored statuses are reset.	"Process controlling" for the diagnostics area

Additional information

You can find information on error texts in the section "Error texts for field devices/user objects (Page 180)".

6.11.3.19 "Monitoring" view for user objects

Available

This view is displayed for all components from the user objects area.

Note

This view is available for the maintenance station in the MS Standard version.

If a designation for at least one process value is entered in the EDD, the view can be selected.

Overview


PCS 7 offers the option of setting up, in a user diagnostics structure, monitoring functions for objects that are not automatically integrated in the diagnostic screens of the maintenance station. These objects include, for example:

- Values defined by rules or calculations
- Objects that do not support diagnostics (e.g., field devices not recognized in PCS 7)
- Technical areas
- Groups of components

You can show the following monitoring functions in a diagnostics screen:

- Operating hours meter
- Service interval
- Calibration interval

The following figure shows an example of the view:

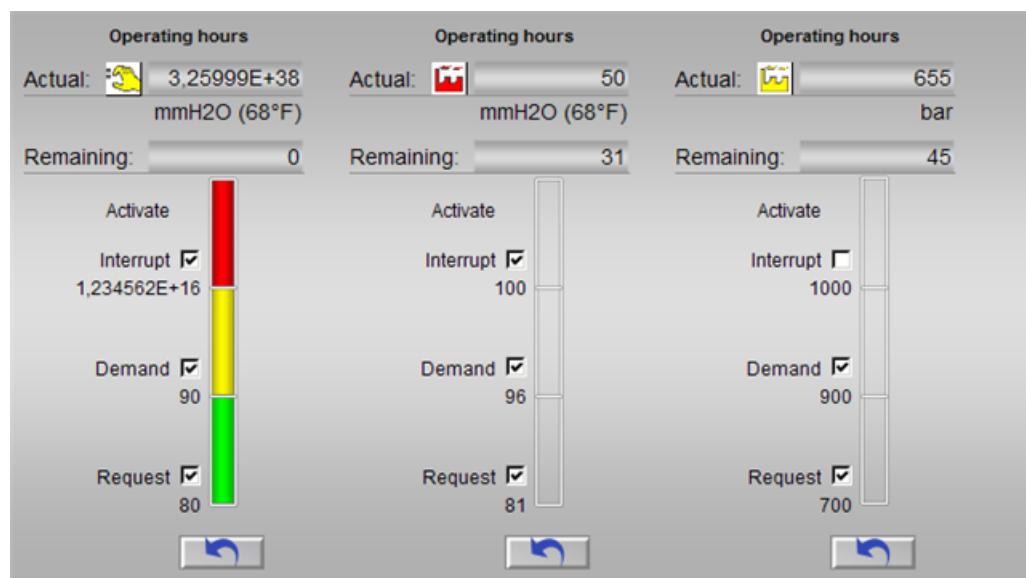

Display

If a designation for the process value is entered in the EDD, the corresponding area is displayed in the view.

- Label for the process value e.g. PV1
The text is configured by the user in the SIMATIC PDM object of the AssetM block in the EDD.
- Signal status
The number in the priority column indicates the priority of the display. The lowest number has the highest priority.

Display	Priority	Remark
	1	Bad, device-related
	2	Bad, process-related
	3	Local functional check, simulation
	4	Uncertain, device-related
	5	Uncertain, process-related
	6	Maintenance demanded
None	7	Good
None	-	Input not connected

- Actual value
The value is read from the AssetM block.
- Remaining value
The difference between the actual value and the next limit value is formed in the AssetM block.
- Units of measure
The unit of measurement is configured in the AssetM block.
- Alarm limits
The alarm limits are configured in the AssetM block.

Operator controls

Icon	Explanation	Permission
<input type="checkbox"/>	The alarm limits are enabled or disabled by selecting the check box. In this display, the alarm limits are disabled.	"Process controlling" for the diagnostics area
	A pulse is output at the block by clicking this icon. This pulse can be processed further, for example, to reset the counter value at the following technological block (counter).	

Additional information

You can find information on error texts in the section "Error texts for field devices/user objects (Page 180)".

6.11.3.20 Error texts for field devices/user objects

The following table shows possible error texts in the views:

- "Diagnostics" view for field devices (Page 172)
- "Parameters" view for field devices (Page 174)
- "Diagnostics" view for user objects (Page 176)
- "Monitoring" view for user objects (Page 178)

Error code	Output in the faceplate	Possible measures
A0040110 80010108	Connection to SIMATIC PDM could not be established. Possible causes: - Archiving is active on the ES - Communication error - Access to the project is blocked	Check: <ul style="list-style-type: none"> • Whether the ES is accessible via the terminal bus • Whether an archiving job is running on the ES Wait until the end of the archiving job. • Whether the SIMATIC PDM Asset Service is stopped and the "automatic start/stop" is not activated Allow the "automatic start/stop". Start the SIMATIC PDM Asset Service.
A0040001	General error has occurred.	A general SIMATIC PDM error is indicated. Contact Technical Support.
A0040006	Internal error - Incorrect call parameter	The transferred XML string is incorrectly structured. Contact Technical Support.
A0040101	Command cannot be run because PDM Asset Service is being stopped.	Check whether the SIMATIC PDM Asset Service is currently being stopped and "automatic start/stop" is not activated.
A0040102	Command cannot be run because PDM Asset Service is stopped.	Allow the "automatic start/stop" and start the SIMATIC PDM Asset Service.
A0040103	Internal error - Error when parsing the XML transfer parameters	The transferred XML string is incorrectly structured. Contact Technical Support.
A0040002	Not enough memory.	Check whether the error is still indicated after a restart of the ES.
A0040104	Maintenance path not found or empty.	<ul style="list-style-type: none"> • Check whether the maintenance project is entered correctly in the settings for SIMATIC PDM. • Stop and start the SIMATIC PDM Asset Service.
A0040105	Timeout for current command.	Error in the SIMATIC PDM Asset Service when executing the jobs.
A0040106	Internal error - Command could not be executed	Check whether the error is still indicated after a restart of the ES.
A0040107	Internal error - Timeout for current command	The SIMATIC PDM Asset Service should be stopped, but this is not possible because jobs are still queued or are still being processed. <ul style="list-style-type: none"> • Wait a little longer. • Then reboot the computer.
A0040108	PCS 7 project cannot be opened.	<ul style="list-style-type: none"> • Close SIMATIC Manager on the ES and open the project again. • Stop and start the SIMATIC PDM Asset Service.

Error code	Output in the faceplate	Possible measures
A0040109	Internal error - Command could not be executed	<ul style="list-style-type: none"> Stop and start the SIMATIC PDM Asset Service. Restart the ES if necessary.
A004010A	PCS 7 project could not be opened.	<ul style="list-style-type: none"> Close SIMATIC Manager on the ES and open the project again.
A004010B	PCS 7 project could not be opened.	<ul style="list-style-type: none"> Stop and start the SIMATIC PDM Asset Service.
A004010C	Incorrect project PLT ID	<ul style="list-style-type: none"> Re-enter the maintenance project in the settings for SIMATIC PDM.
A004010D	Object (PLT ID) not found	<ul style="list-style-type: none"> Stop and start the SIMATIC PDM Asset Service.
A004010E	ASSET export path incorrect	<ul style="list-style-type: none"> Check whether the export path entered in the SIMATIC PDM settings can be accessed via the terminal bus. Re-enter the export path in the SIMATIC PDM settings.
A004010F	ASSET export could not be written - Access error	<p>Check:</p> <ul style="list-style-type: none"> Whether the export path entered in the SIMATIC PDM settings can be accessed via the terminal bus. The necessary access authorizations
A004000B	License error	Check the required SIMATIC PDM licensing on the ES.
A004000A	Access denied.	Check the access authorizations.
A004000D	Object locked.	Check whether the device is already open on another computer or by another application.
A0040008	Object not found.	A general SIMATIC PDM error is indicated.
80000003 A0040201 80004001 80070057 80600009 8000FFFF 80004003	Functional error, SIMATIC PDM Server not accessible	Contact Technical Support.
A0040111	Command cannot be run because PDM Asset Service is stopped and not in automatic mode	<p>Check:</p> <ul style="list-style-type: none"> Whether SIMATIC PDM Asset Service is already stopped That the "Allow automatic start/stop" option is set
A0040112	Internal error - Object not found	Check the SIMATIC PDM Web configuration.

Note

If the suggested measures are not successful or an error code is output that is not further specified in the table, contact Technical Support.

6.11.4 Display of faceplate for redundant components

Introduction

Various displays are available for redundant components:

- The information is displayed in one faceplate.
- The information is displayed in several faceplates.

Display

The possible displays are explained in the following table:

Redundant components	Explanation
Displayed in one block icon	<p>The associated faceplate is opened by the block icon.</p> <p>The redundancy state is displayed in the header in one diagnostic icon.</p> <p>"Ident" view:</p> <ul style="list-style-type: none"> • In this view, if the component is redundant, one diagnostics icon is displayed for the active component and one for the passive component. The respective diagnostic icon displays the custom maintenance state. • An orange square is displayed between a diagnostic icons. The square identifies the active component. The active component is the component with the master role. • When the faceplate is opened, the information box always shows the data of the active component. • By clicking on a diagnostics icon, the diagnostics icon is given a colored border and the corresponding data is displayed in the information box. • Refreshing data with the "Refresh" button only affects the active component. This may have the result that only project data is displayed for the passive component. • If the passive component was active and the data was refreshed with the "Refresh" button, device data is also displayed for the passive component. • If the passive component is selected in the faceplate, when the "Refresh" button is clicked, the diagnostics icon of the active component is given a colored border and the data of the active component is displayed in the information box.
Displayed in several block icons	<p>The associated faceplate is opened by each block icon.</p> <p>In all views:</p> <p>The custom maintenance state is displayed in the faceplate for the component and for the partner in the respective diagnostic icon.</p> <p>The redundancy state is displayed in the faceplate for the redundancy object.</p>

Additional information

You can find information on the redundancy state in the section "Maintenance status of redundant components (Page 126)".

6.12 Origin of the identification data

6.12.1 Identification data for IPCs

Where does the identification data for IPCs come from?

In the case of the faceplate for IPC objects, the identification data is read from the device via an SNMP connection.

The device must be configured in the SNMP OPC Server of the maintenance station for this.

These data are prepared for display on the maintenance station with the "Export tags for WinCC" function.

The following table shows the assignment of the identification data displayed on the MS to the origin.

Identification data	Origin	
	SNMP Profile V1.5 for IPC	PC with support of the SNMP Profile MIB-II
TAG / HID	SNMP tag ".sysName"	Not available
LID	Object properties of the PC station "Name"	
Address	HW Config/OPC server "IP address" / SNMP tag "&ipAddress()"	IP address terminal bus CCAgent
Description	Not available	
Message		
Device type	SNMP tag ".ProductName"	Not available
Manufacturer	SNMP tag ".Manufacturer"	Not available
Article number ¹⁾	SNMP tag ".StationMLFB"	Not available
Serial number	SNMP tag ".StationSerialNumber"	Not available
Installation date	Not available	
HW revision	SNMP tag ".HwVersion"	Not available
SW revision	SNMP tag ".SwVersion"	Not available
Last update	Time stamp of the updating of the identification data	
Comment	Object properties of the PC station "Comment"	

¹⁾ Article number = also order number or MLFB

6.12.2 Identification data for PCs

Where does the identification data for PCs come from?

In the case of the faceplate for PC objects, the identification data is determined directly in the PC if the PC does not support an SNMP connection.

The following table shows the assignment of the identification data displayed on the MS to the origin.

Identification data	Origin
TAG / HID	Object properties of the PC station objects "Computer name"
LID	Object properties of the PC station "Name"
Address	IP address terminal bus CCAgent
Description	Not available
Message	
Device type	IWbemService (Win32_ComputerSystem_Model)
Manufacturer	IWbemService (Win32_ComputerSystem_Manufacturer)
Article number ¹⁾	IWbemService (Win32_ComputerSystemproduct_IdentifyingNumber)
Serial number	IWbemService (Win32_BaseBoard_SerialNumber)
Installation date	IWbemService (Win32_OperatingSystem_InstallDate)
HW revision	IWbemService (Win32_BaseBoard_Version)
SW revision	IWbemService (Win32_BIOS_SMBIOSVersion)
Last update	Time stamp of the updating of the identification data
Comment	Object properties of the PC station "Comment"

¹⁾ Article number = also order number or MLFB

6.12.3 Identification data for network objects

Where does the identification data for a network object come from?

In the case of the faceplate for network objects, the identification data is read from the device via an SNMP connection.

The device must be configured in the SNMP OPC Server of the maintenance station for this.

This data is prepared for display on the maintenance station with the "Export variables for WinCC" function.

The following table shows the assignment of the identification data displayed on the MS to the origin.

Identification data	Origin	
	For example, Profil_OSM_V10.txt	Profile MIB-II
TAG / HID	WBM ¹⁾ "automationFunctionTag"	Not available
LID	HW Config/OPC server "Name"	

Identification data	Origin	
	For example, Profil_OSM_V10.txt	Profile MIB-II
Address	HW Config/OPC server "IP address" / SNMP variable ".&ipAddress()"	
Description	Not available	
Message		
Device type ²⁾	WBM ¹⁾ "Device Type" / SNMP variable ".sysDescr"	
Manufacturer	WBM ¹⁾ "automationManufacturerId"	Not available
Article number ³⁾	SNMP variable ".snInfoOrderNr"	
Serial number	SNMP variable ".snInfoSerialNr"	
Installation date	Not available	
HW revision	SNMP variable ".snHWVersion"	Not available
SW revision	SNMP variable ".snSWVersion"	Not available
Last update	Time stamp of the updating of the identification data	
Comment	HW Config/OPC server "Comment"	

¹⁾ WBM = Web based management (Web interface of the network object)

²⁾ If the SNMP variable ".sysDescr" contains identification information in addition to the device type, this will be displayed in the corresponding field. The "Device type" field only displays information about the device type.

³⁾ Article number = Also order number or MLFB

6.12.4 Identification data for AS objects

Where does the identification data for an AS object come from?

In the case of the faceplate for AS objects, the identification data is read from the properties of the module or dynamically from the CPU.

The following table shows the assignment of the identification data displayed on the MS to the origin.

Identification data	Origin
HID / TAG	
static	HW Config "Higher level designation" (HID)
dynamic	I&M data (SZL), (I&M1 Tag_Function)
LID	
static	HW Config "Designation" or "Name"
Address	
	HW Config "Slot/address information"
Description	
static	HW Config "additional information"
dynamic	I&M data (SZL), (I&M3 Descriptor)
Message	Not available

6.12 Origin of the identification data

Identification data	Origin	
Device type	HW Config "type" or "short description"	
Manufacturer	static	HW Config - Not accessible ¹⁾
	dynamic	I&M data (SZL), (I&M0 Manufacturer_ID)
Article number ²⁾	static	HW Config "Article number" ²⁾
	dynamic	I&M data (SZL), (I&M0 Order_ID)
Serial number	static	Not available
	dynamic	I&M data (SZL) (I&M0 Serial_number)
Installation date	static	HW Config "installation date"
	dynamic	I&M data (SZL), (I&M2 Installation_date)
HW revision	static	Not available
	dynamic	I&M data (SZL) (I&M0 Hardware_revision)
SW revision	static	HW Config - Not accessible*
	dynamic	I&M data (SZL) (I&M0 Software_revision)
Last update	Time stamp of the updating of the identification data	
Comment	HW Config "Comment"	

¹⁾ Not accessible means that the user cannot make an entry or modification here.

²⁾ Article number = also order number or MLFB

6.12.5 Identification data for devices that are integrated using a device description (EDD)

Where does the identification data for devices that are integrated using a device description (EDD) come from?

In the case of the faceplate for devices that are integrated using a device description (EDD), the identification data is provided via SIMATIC PDM.

The data are provided if the device description is created in conformance with the specifications of the PROFIBUS & PROFINET International organization, the Hart Communication Foundation, or the Fieldbus Foundation.

The information is largely based on the tag names used in the EDDs. These tag names can be optionally displayed in the configuration interface of PDM. The display is activated in the settings of SIMATIC PDM.

PA profile according to PNO

The data are displayed if they can be determined explicitly using the EDD of the device.

The following table shows the assignment of the identification data displayed on the MS to the origin.

Identification data	Origin
TAG / HID	Profile tag "TAG_DESC"
LID	HW Config "Designation"
Address	HW Config "Slot/address information"
Description	Profile tag "DESCRIPTOR"
Message	Profile tag "DEVICE_MESSAGE"
Device type	Profile tag "DEVICE_ID"
Manufacturer	Profile tag "DEVICE_MAN_ID"
Article number ¹⁾	Not available
Serial number	Profile tag "DEVICE_SER_Num"
Installation date	Profile tag "DEVICE_INSTAL_DATE"
HW revision	Profile tag "HARDWARE_REVISION"
SW revision	Profile tag "SOFTWARE_REVISION"
Last update	Time stamp of the updating of the PDM database
Comment	HW Config/Object properties "Comment"

¹⁾ Article number = also order number or MLFB

I&M profile according to PNO

The data are displayed if they can be read from the device.

The following table shows the assignment of the identification data displayed on the MS to the origin.

Identification data	Origin
TAG / HID	Profile tag "TAG_FUNCTION"
LID	HW Config "Designation"
Address	HW Config "Slot/address information"
Description	Profile tag "DESCRIPTOR"
Message	Not available
Device type	Profile tag "PROFILE_ID"
Manufacturer	HW Config Type or Short description
Article number ¹⁾	Profile tag "ORDER_ID"
Serial number	Profile tag "SERIAL_NUMBER"
Installation date	Profile tag "INSTALLATION_DATE"
HW revision	Profile tag "HARDWARE_REVISION"
SW revision	Profile tag "SOFTWARE_REVISION"
Last update	Time stamp of the updating of the PDM database
Comment	HW Config/Object properties "Comment"

¹⁾ Article number = also order number or MLFB

HART information according to HCF

The following table shows the assignment of the identification data displayed on the MS to the origin.

Identification data	Origin
TAG / HID	Profile tag "TAG"
LID	HW Config "Designation"
Address	HW Config "Slot/address information"
Description	Profile tag "Description"
Message	Profile tag "Notification"
Device type	Profile tag "Device Type"
Manufacturer	Profile tag "Manufacturer ID"
Article number ¹⁾	Not available
Serial number	Not available
Installation date	Not available
HW revision	Profile tag "HW Revision"
SW revision	Profile tag "SW Revision"
Last update	Time stamp of the updating of the PDM database
Comment	HW Config/Object properties "Comment"

¹⁾ Article number = also order number or MLFB

FF profile according to Fieldbus Foundation

The following table shows the assignment of the identification data displayed on the MS to the origin.

Identification data	Origin
TAG / HID	Tag "TAG_DESC"
LID	HW Config "Designation"
Address	HW Config "Slot/address information"
Description	Not available
Message	Not available
Device type	Tag "DEV_TYPE"
Manufacturer	Tag "MANUFAC_ID"
Article number ¹⁾	Not available
Serial number	Not available
Installation date	Not available
HW revision	Not available
SW revision	Not available
Last update	Time stamp of the updating of the PDM database
Comment	HW Config/Object properties "Comment"

¹⁾ Article number = also order number or MLFB

6.12.6 Identification data for objects in the user area

Where does the identification data for objects in the user area come from?

In the case of the faceplate for objects in the user area that are integrated using a device description (EDD), the identification data is provided via SIMATIC PDM.

The following table shows the assignment of the identification data displayed on the MS to the origin.

Identification data	Origin
TAG / HID	Parameter "TAG"
LID	Parameter "Installation location"
Address	Not available
Description	Parameter "Description"
Message	Parameter "Message"
Device type	Parameter "Product name"
Manufacturer	Parameter "Manufacturer"
Article number 1)	"Article number" parameter ¹⁾
Serial number	Parameter "Device serial number"
Installation date	Parameter "Installation date"
HW revision	Parameter "Hardware revision"
SW revision	Parameter "Software revision"
Last update	Time stamp of the updating of the PDM database
Comment	CFC "Block comment"

¹⁾ Article number = also order number or MLFB

6.13 Overview of maintenance

6.13.1 Introduction and status diagram

Introduction

The operators of the Maintenance Station and the Operator Station can be different individuals and can work in physically separate locations.

As a result, the information flow between the Maintenance Station and Operator Station is not guaranteed.

Maintenance takes place in agreement with the plant operator.

Communication is supported by means of icons and messages.


This enables a coordinated maintenance sequence.

The maintenance sequence is documented and can be tracked.

Maintenance is initiated and edited in the faceplate in the "Maintenance" view

Status diagram

The possible status transitions are explained in the diagram below.

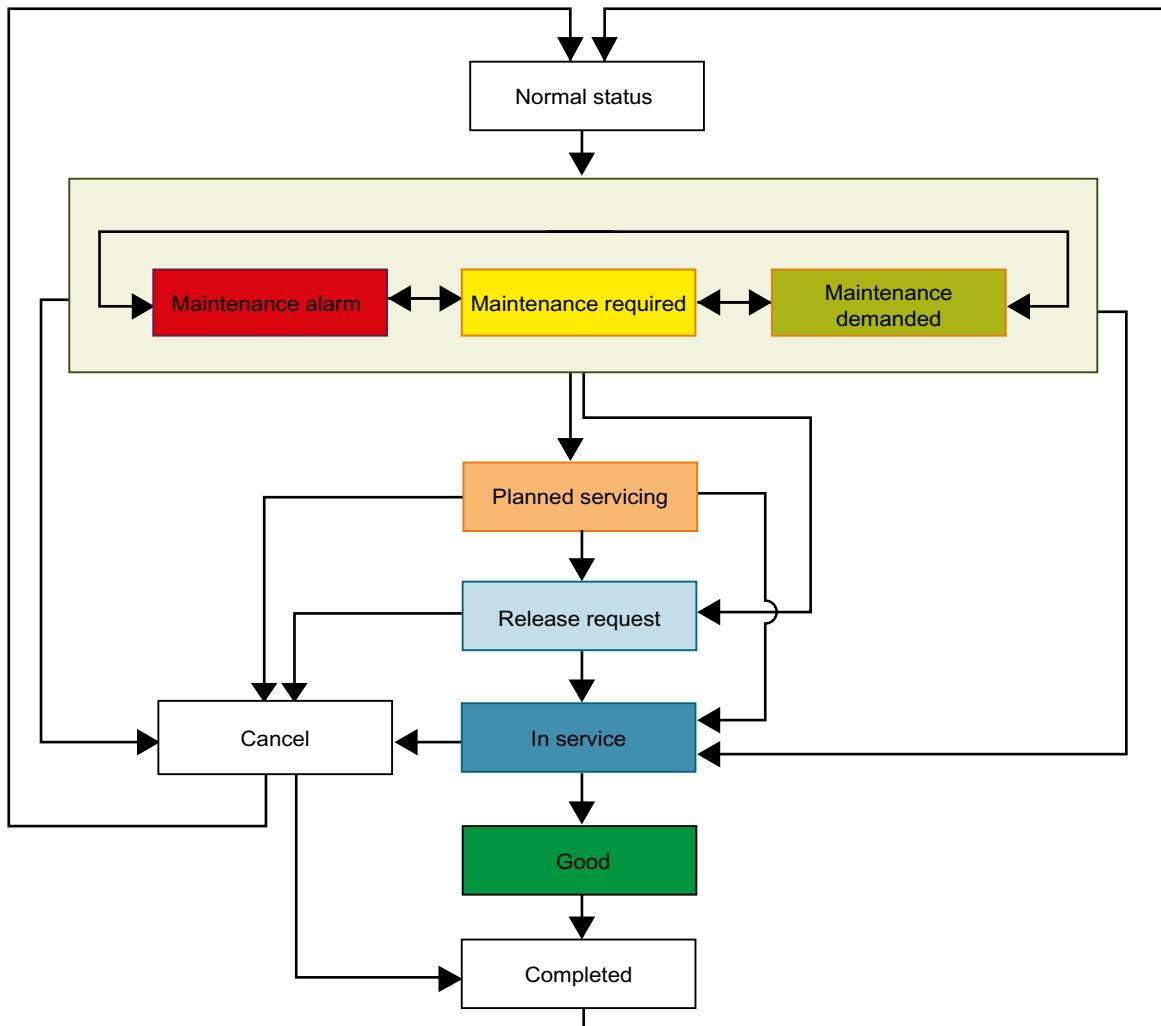

Actions of the maintenance engineer cause status changes.

The next section provides detailed instructions for activating and deactivating a maintenance job.

Additional information

You can find additional information on the release for maintenance and on configuring the technological blocks in the online help *Process Control System PCS 7; Advanced Process Library*.

6.13.2 Sequence for maintenance

Introduction

This section provides an overview of the sequence for maintenance.

Maintenance can be initiated from the maintenance status "Good" of the component or after a message regarding the component.

Requirement

- The technological block has been interconnected in the CFC. You can find information on interconnecting in the section "Engineering for maintenance (Page 78)".
- "Manual" or "On" mode is active for the technological block.
- The operator has the operator authorization "system operation".

Procedure for activating

Step 1 <i>Maintenance engineer requests maintenance job</i>	Result Maintenance job requested
<ol style="list-style-type: none"> 1. Open the diagnostic faceplate. 2. Select the "Maintenance" view. 3. Enter a text in the "Memo" area if required. 4. In the "Maintenance job" area, select, for example, the "Alarm" option button. 5. Click "On" in the operator panel for activating the maintenance job. 	<p>In the header of the faceplate and in the block icon, the status "Maintenance alarm requested" is displayed in the icon of the maintenance group display.</p>  <p>In addition, the maintenance job status "Maintenance engineer has not yet created a maintenance job" is displayed in the faceplate header.</p>  <p>An operator message is generated. The text entered in the "Memo" area is displayed:</p> <ul style="list-style-type: none"> • In the Memo area of the "Maintenance" view of the faceplate • As a comment for the message in the operator input list of the faceplate and message system

Step 2 Maintenance engineer schedules maintenance job	Result Maintenance job scheduled
<ol style="list-style-type: none"> 1. Open the diagnostic faceplate. 2. Select the "Maintenance" view. 3. Enter a text in the "Memo" area if required. 4. Select the "Planned servicing" option button in the "Status Service" area. 5. Click "On" in the operator panel. 	<p>In the block header, the display for the status of the maintenance job changes from "Maintenance engineer has not yet created a maintenance job" to the status "Planned servicing".</p>  <p>An operator message is generated. The text entered in the "Memo" area is displayed:</p> <ul style="list-style-type: none"> • In the Memo area of the "Maintenance" view of the faceplate • As a comment for the message in the operator input list of the faceplate and message system

Step 3 Maintenance engineer requests maintenance release	Result Maintenance release requested
<ol style="list-style-type: none"> 1. Open the diagnostic faceplate. 2. Select the "Maintenance" view. 3. Enter a text in the "Memo" area if required. 4. Select the "Release request" option button in the "Status Service" area. 5. Click "On" in the operator panel. 	<p>In the block header, the display for the status of the maintenance job changes from "Planned servicing" to the status "Release request".</p>  <p>An operator message is generated. The text entered in the "Memo" area is displayed:</p> <ul style="list-style-type: none"> • In the Memo area of the "Maintenance" view of the faceplate • As a comment for the message in the operator input list of the faceplate and message system <p>The following is displayed on the technological faceplate:</p> <ul style="list-style-type: none"> • Icon for release request (request for operator input) • Message of "Request for operator input - General" class

Step 4 - Plant operator Plant operator issues the release for maintenance	Result Release for maintenance is issued
<ol style="list-style-type: none"> 1. Open the technological faceplate. 2. Select the "Parameter" view. 3. Activate "Release for maintenance". 4. Click "Yes" in the operator panel. 	<p>An operator message is generated. The release for maintenance is displayed in the diagnostic faceplate in the "Maintenance" view.</p>

Step 5 <i>Maintenance engineer puts the component into "In service" status</i>	Result Maintenance of the component can be performed
<ol style="list-style-type: none"> 1. Open the diagnostic faceplate. 2. Select the "Maintenance" view. 3. Enter a text in the "Memo" area if required. 4. Select the "In service" option button in the "Status Service" area. 5. Click "On" in the operator panel. 	<p>In the block header, the display for the status of the maintenance job changes from "Release request" to the status "In service".</p>  <p>An operator message is generated. The text entered in the "Memo" area is displayed:</p> <ul style="list-style-type: none"> • In the Memo area of the "Maintenance" view of the faceplate • As a comment for the message in the operator input list of the faceplate and message system <p>Depending on the configuration of the technological block, the following is displayed on the technological faceplate:</p> <ul style="list-style-type: none"> • "Maintenance demanded and Maintenance release" icon • "Out of service" mode and the "Maintenance demanded and Maintenance release" icon <p>Maintenance can be performed.</p>

Procedure for deactivating

Step 1 <i>Maintenance engineer completes maintenance</i>	Result Maintenance complete
<ol style="list-style-type: none"> 1. Open the diagnostic faceplate. 2. Select the "Maintenance" view. 3. Enter a text in the "Memo" area if required. 4. Select the "Completed" option button in the "Status Service" area. 5. Click "On" in the operator panel. 	<p>In the block header, the display for the status of the maintenance job changes from "In service" to the status "Good". The text in the Memo area is deleted in the "Maintenance" view of the faceplate.</p> <p>An operator message is generated. The entered text in the "Memo" area is displayed as a comment for the message in the operator input list of the faceplate and message system.</p> <p>The "Maintenance demanded and Maintenance release" icon is hidden in the technological faceplate.</p>

Step 2 <i>Plant operator ends the release for maintenance</i>	Result Release for maintenance is ended by the plant operator
<ol style="list-style-type: none"> 1. Open the technological faceplate. 2. Select the "Parameter" view. 3. Deactivate the "Release for maintenance". 4. Click "No" in the operator panel. 	<p>An operator message is generated. The technological block is set to "Manual" mode.</p>

6.14 Passivating PC objects

Introduction

With the "Passivate" function, a PC object is temporarily excluded from the monitoring during process control.

Overview

A PC object is passivated by the following operator actions:

- Operator actions in the faceplate in the "Maintenance" view
The operator actions are stored retentively and are retained even if there is a complete download to the OS station.
You can find additional information on this in the section ""Maintenance" view (Page 146)".
- Disabling/enabling process control
If the process control of a monitored OS station is deactivated, its PC object is automatically set to passivated.
As soon as this OS station is restarted, the passivation is canceled again.

Available

This function is available on all IPC/PC stations.

Display

If a PC object is passivated, "Passivated" is displayed as the maintenance state in the block icon and faceplate.

No group alarm is displayed in the maintenance group display of the PC object.

Messages

If a PC object is passivated by an operator input in the faceplate, an operator message is generated.

All messages pending for this PC object are acknowledged automatically when the PC object is passivated.

As long as the PC object is passivated, no new messages are generated for this PC object.

Any pending events are signaled when the PC object is depassivated.

Integration of options

7.1 Integration by the Alarm Control Center

7.1.1 Application of the "Alarm Control Center"

Alarm Control Center

The Alarm Control Center (ACC) is a SIMATIC PCS 7 add-on. With the available options, it can be customized for everything from stand-alone solutions to company-wide communication solutions.

Messages of the monitored components of the maintenance station can be forwarded to the Alarm Control Center for further processing.

The Alarm Control Center offers the following functions:

- Forwarding of messages to specific recipients
- Integrated shift and personnel management for time-dependent delivery of messages to different persons
- Extensive escalation system for reliable delivery of messages even when individual recipients cannot be reached
- Network-wide operator control and configuration through web capability

Note

You can use the Alarm Control Center only in the MS Standard and SIMATIC PDM MS versions.

Forwarding of messages to specific recipients

The following messages from an individual component can be forwarded:

- Diagnostic messages
- Messages about operations
- Messages about maintenance demanded

Recipients of messages that can be sent automatically via the ACC include, for example:

- SMS to mobile telephone
- Pager
- Voice output to a telephone
- E-mail
- LAN message to PC

7.1 Integration by the Alarm Control Center

Integrating data into the Alarm Control Center

You can find information about the integration of the ACC in the MS as follows:

- In the documentation of the ACC
- Using the contact information in the catalog "Add-ons for the SIMATIC Process Control System PCS 7"
- From SIMATIC PCS 7 support

Exporting data for the Alarm Control Center

The export of component data to the Alarm Control Center takes place in the "Maintenance" view of the component in process control.

Select the relevant target in the "Target" area.

Index

@

@@maintenancetypicals
Block icons, 118
@maintenancetypicals.pdl
Block icons, 80

A

Alarm Control Center
Functions, 195
Area key
Overview area, 93
Area overview screens, 117
AssetM
Configuring, 73
Automatic synchronization using the faceplate
Ending, 109
Starting, 109
Automatic synchronization via OPC access
Ending, 116
Starting, 116

B

Basic knowledge, 9
Block icon
Display, 119
Block icons, 118
@@maintenancetypicals, 118
@maintenancetypicals.pdl, 80
Button area, 94

C

Calling
Documentation, 9
CFC chart
Creating, 72
Changing
MS, 84
Channels
Depassivating, 138
Community, 45
Compile
Maintenance station, 82

Compiling
SIMATIC PDM MS, 83
Complete export
Export file, 76
Filter diagnostic data, 99, 100
Overview, 76
Target directory, 76
Trigger, 98
Components
Display, 118
Components with diagnostics capability, 16
Configuring
Engineering station, 36
MS Client, 39
MS server, 37
MS single station system, 35
Redundant partner, 38
SIMATIC PDM MS, 40
Create/update diagnostic screens
Procedure, 80
Settings, 64

D

Depassivation, 138
Device profiles, 45
Diagnostic screens
generating, 80
updating, 80
Diagnostic structure, 49, 52
deleting, 86
generating, 50
updating, 50
Diagnostics
MS multiple-station system plant configuration, 23
MS single-station system plant configuration, 21
SIMATIC PDM, 76
SIMATIC PDM MS, 25
Diagnostics data
Exporting, 98
Filter, 99, 100
Diagnostics Monitor, 44
Call, 142
Display and operator controls
Faceplate, 132
Documentation, 29
Access options, 10

Call, 9
for planning and configuration, 10
Downloading
Maintenance station, 82
SIMATIC PDM MS, 83

E
Engineering station
configuring, 36
Export
Individual export, 77
SNMP variable, 49
Exporting
Complete export, 76

F
Faceplate, 118
"Connection display" view for client
components, 154
"Connection display" view for server
components, 156
"Connection load display" view for CPU
connections, 167
"Diagnostics" view for AS objects, 158
"Diagnostics" view for field devices, 172
"Diagnostics" view for PC objects, 153
"Diagnostics" view for user objects, 176
"Ident" view, 143
"Maintenance" view, 147
"Messages" view, 145
"Monitoring" view for user objects, 178
"Notes" view, 150
"OBx..." view for AS objects, 163
"Parameters" view for AS objects, 165
"Parameters" view for field devices, 174
"Performance" view for AS objects, 161
"Status" for CPU, 170
Display, 131
Display and operator controls, 132
Header, 132
LED display for CPUs, 171

G
Group display
Overview area, 93

H
Hardware project
Calling, 139
HART modules, 76
Highest priority messages
Overview area, 91
HW Config
Changing, 85

I
Identification data
AS objects, 185
Devices with device description (EDD), 186
IPCs, 183
Network objects, 184
Objects in the user area, 189
PCs, 184
Individual export
Executing, 147
Export file, 77
Overview, 77
Target directory, 56, 77

L
Lifebeat monitoring
Sign-of-life monitoring, 13
Locking
Messages, 94
Log of the diagnostic screens
Display, 81

M
Maintenance
Plant-specific, 68
Sequence, 191
Status diagram, 190
User-specific, 61
Maintenance actions
Configuring, 58
Maintenance demanded, 190
Maintenance group display
Display, 123
Maintenance information
Configuring, 61, 68

- Maintenance job, 190
 - Display, 123
- Maintenance links
 - Configuring, 54
- Maintenance required, 190
- Maintenance state
 - Display of components, 123
 - Messages, 92
 - Structure of the variable for the maintenance state, 125
- Maintenance station
 - Compile, 82
 - Downloading, 82
- Maintenance Station
 - Application, 13
 - Configuration, 16
 - PCS 7 Web client, 16
 - Version, 13
- Maintenance Station Basic
 - Application, 13
- Maintenance Station Standard
 - Application, 13
- Maintenance status
 - Display for redundant components, 126
- Maintenance targets
 - Configuring, 56
- Message correction, 101
- Messages
 - Deleting, 101
 - Locking/unlocking, 94, 137
 - Maintenance state, 92
 - Without area information, 92
- Module
 - Depassivation, 138
- MS
 - Changing, 84
- MS Basic
 - (See maintenance station Basic), 13
- MS Client
 - configuring, 39
 - Installation on the ES, 23
- MS multiple station system
 - Configure MS server, 32
 - Configure redundant MS server, 32
 - Maintenance Station, 23
- MS multiple-station system
 - Configure MS client, 33
 - Configure OS/MS client, 33
- MS server
 - Configure redundant partner, 38
 - configuring, 37
- MS single station system
 - configuring, 35
- MS single-station system
 - Configuring, 31
 - Maintenance Station, 21
- MS Standard
 - (See maintenance station Standard), 13
- Multiproject
 - Setting, 34

N

- NDIS adapter, 44

O

- OPC Server, 44
 - Assign components, 46
 - Inserting in redundant partner, 48
- OS server
 - Adding, 85
 - becomes MS server, 85
- OS simulation
 - Starting, 89
- Overview area
 - Area key, 93
 - Group display, 93
 - Highest priority messages, 91
 - State of the areas, 91
 - User interface, 91
- Overview screen, 95
 - Functions, 97

P

- Parameter data export
 - Overview, 102
- Parameter data export using the faceplate
 - Canceling, 108
 - Ending, 108
 - Faceplate, 104
 - Opening a faceplate, 103
 - Starting, 108
- Parameter data export via OPC access
 - Canceling, 115
 - Ending, 115
 - Starting, 115
 - Starting for a selected device, 116
 - Tags, 110
- Passivating
 - PC objects, 194

P

- PC
 - Monitoring, 44
- PC objects
 - Passivating, 194
- PCS 7 Web client
 - "Maintenance"/print view, 150
 - Data filtering, 99
 - Maintenance Station, 16
 - Message correction, 101
- PDM Maintenance Station
 - Application, 13
- Plant configuration
 - MS multiple station system, 23
 - MS single-station system, 21
 - SIMATIC PDM MS, 25
- Plant hierarchy, 49, 52
 - Settings, 50
- Preface, 9
- Process control
 - Starting, 89

R

- Redundant components, 182

S

- Save as
 - SIMATIC PDM Asset Service, 86
 - Subproject, 86
- Scope of the manual, 9
- Server data, 24
- Setting
 - Multiproject, 34
- Sign-of-life monitoring
 - Lifebeat monitoring, 13
- SIMATIC PDM, 76
 - Calling, 140
- SIMATIC PDM Asset Service
 - Save as, 86
- SIMATIC PDM MS, 25
 - (See PDM Maintenance Station), 13
 - Compiling, 83
 - Configuring, 33, 40
 - Downloading, 83
 - WinLC RTX, 40
- SNMP service, 44
- SNMP variable
 - exporting, 49
- Software configuration
 - Changing, 86

S State of the areas

- Overview area, 91
- Status diagram
 - Maintenance, 190
- Storage location
 - Subproject, 86
- Structure of the variable
 - For the maintenance state, 125
- Subproject
 - Save as, 86

U

- Unlocking
 - Messages, 94
- User diagnostic screens
 - Configure group display hierarchy, 75
 - Creating, 74
- User diagnostic structure
 - Configuring AssetM, 73
 - Creating, 71
 - Creating a CFC chart, 72
 - Overview, 69
 - Updating in the multiproject, 74
- User interface
 - Button area, 94
 - Layout, 90
 - Overview area, 91
 - Working area, 94

V

- Version, 49, 52
 - Changing, 84
- Maintenance Station Basic, 13
- Maintenance Station Standard, 13
- SIMATIC PDM Maintenance Station, 13
 - Specifying, 50
- View
 - Connection display for client components, 154
 - Connection display for server components, 156
 - Connection load display for CPU connections, 167
 - Diagnostics for AS objects, 158
 - Diagnostics for field devices, 172
 - Diagnostics for PC objects, 153
 - Diagnostics for user objects, 176
 - Ident, 143
 - LED display for CPUs, 171
 - Maintenance, 147
 - Messages, 145

Monitoring for user objects, 178
Note, 150
OBx for AS objects, 163
Parameters for AS objects, 165
Parameters for field devices, 174
Performance for AS objects, 161
Status of the CPU, 170

W

Web page
Calling, 54, 141
Web pages
"Overview" button, 97
Faceplate, 139
Working area, 94

