

**SIEMENS**

Application Example • 02/2016

# Guide for Commissioning a Position-Controlled Drive

SIMATIC S7-1500, SINAMICS G120



<https://support.industry.siemens.com/cs/ww/en/view/109479977>

## Warranty and Liability

### Note

The Application Examples are not binding and do not claim to be complete regarding the circuits shown, equipping and any eventuality. The Application Examples do not represent customer-specific solutions. They are only intended to provide support for typical applications. You are responsible for ensuring that the described products are used correctly. These Application Examples do not relieve you of the responsibility to use safe practices in application, installation, operation and maintenance. When using these Application Examples, you recognize that we cannot be made liable for any damage/claims beyond the liability clause described. We reserve the right to make changes to these Application Examples at any time without prior notice. If there are any deviations between the recommendations provided in these Application Examples and other Siemens publications – e.g. Catalogs – the contents of the other documents have priority.

We do not accept any liability for the information contained in this document. Any claims against us – based on whatever legal reason – resulting from the use of the examples, information, programs, engineering and performance data etc., described in this Application Example shall be excluded. Such an exclusion shall not apply in the case of mandatory liability, e.g. under the German Product Liability Act (“Produkthaftungsgesetz”), in case of intent, gross negligence, or injury of life, body or health, guarantee for the quality of a product, fraudulent concealment of a deficiency or breach of a condition which goes to the root of the contract (“wesentliche Vertragspflichten”). The damages for a breach of a substantial contractual obligation are, however, limited to the foreseeable damage, typical for the type of contract, except in the event of intent or gross negligence or injury to life, body or health. The above provisions do not imply a change of the burden of proof to your detriment. Any form of duplication or distribution of these Application Examples or excerpts hereof is prohibited without the expressed consent of the Siemens AG.

### Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks. In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens’ products and solutions only form one element of such a concept. Customer is responsible to prevent unauthorized access to its plants, systems, machines and networks. Systems, machines and components should only be connected to the enterprise network or the internet if and to the extent necessary and with appropriate security measures (e.g. use of firewalls and network segmentation) in place. Additionally, Siemens’ guidance on appropriate security measures should be taken into account. For more information about industrial security, please visit <http://www.siemens.com/industrialsecurity>.

Siemens’ products and solutions undergo continuous development to make them more secure. Siemens strongly recommends to apply product updates as soon as available and to always use the latest product versions. Use of product versions that are no longer supported, and failure to apply latest updates may increase customer’s exposure to cyber threats. To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under <http://www.siemens.com/industrialsecurity>.

# Table of Contents

	<b>Warranty and Liability .....</b>	<b>2</b>
<b>1</b>	<b>Task.....</b>	<b>4</b>
	1.1 Overview.....	4
<b>2</b>	<b>Solution.....</b>	<b>5</b>
	2.1 Overview.....	5
	2.2 Hardware and software components .....	6
	2.2.1 Validity .....	6
	2.2.2 Components used .....	6
<b>3</b>	<b>Mode of Operation .....</b>	<b>7</b>
	3.1 Sequence of commissioning .....	7
	3.2 Commissioning the drive .....	9
	3.2.1 Checking speed, rotation direction and control direction .....	9
	3.2.2 Optimizing the speed control.....	10
	3.2.3 detecting maximum dynamic.....	13
	3.3 Commissioning the technology object.....	16
	3.3.1 Checking the position encoder setting .....	16
	3.3.2 Checking of the speed normalization and traversing direction .....	17
	3.3.3 Optimizing the position controller .....	19
	3.3.4 Optimizing the feed forward control .....	23
	3.4 Summary of commissioning .....	25
	3.5 Information for the processing of faster motion sequences .....	26
<b>4</b>	<b>Links &amp; Literature .....</b>	<b>27</b>
<b>5</b>	<b>History.....</b>	<b>27</b>

# 1 Task

## 1.1 Overview

### Introduction


SIMATIC S7-1500 controllers support the connection of PROFIdrive-capable drives via PROFINET or PROFIBUS as positioning axis.

The present document will show with what measures the precision and performance of a position-controlled drive can be improved.

### Overview of the automation task

The figure below provides an overview of the automation task.

Figure 1-1: Automation task

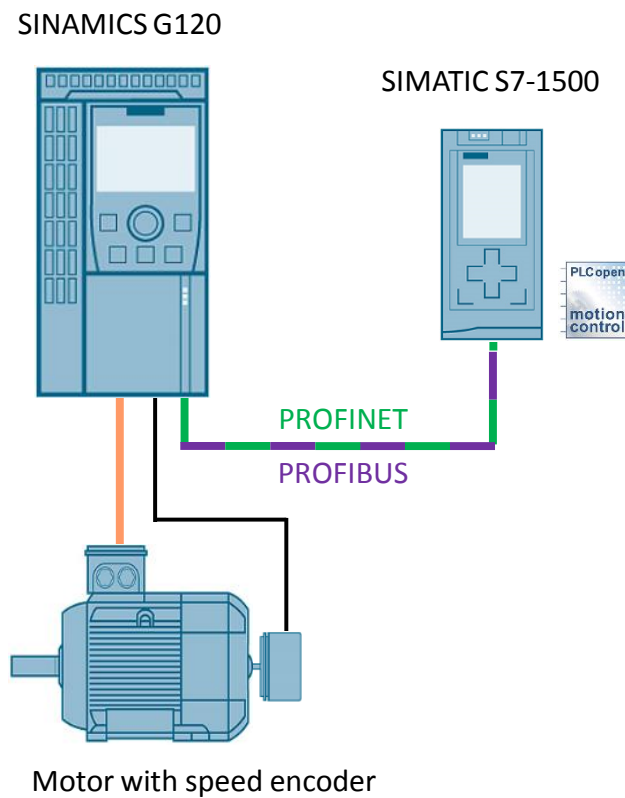


## 2 Solution

### 2.1 Overview

This present document explains in easy steps, how a position-controlled drive can be commissioned.

Figure 2-1: Configuring the drive

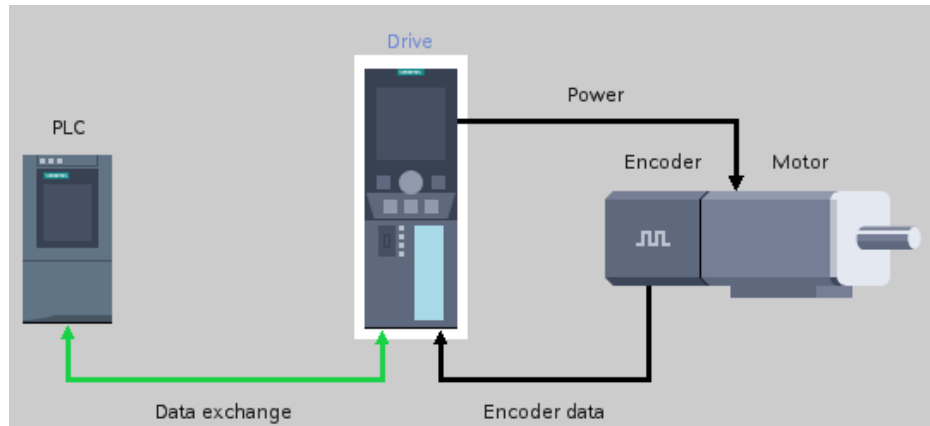

The approach is explained in the following subitems:

1. Commissioning the drive and optimizing the speed control
2. Commissioning the “Positioning axis” technology object and optimizing the position control

Commissioning the drive and technology object is only carried out with the TIA Portal (STEP 7 and Startdrive).

#### Advantages

The solution presented here, offers you the following advantages

- Time saving during commissioning
- High precision of the drive

#### Topics not covered in this application

This application does not contain a description of:

- Basic configuration and functioning of a drive
- Basic functions of the TIA Portal
- Description of the functionality of motion blocks

#### Assumed knowledge

Basic knowledge of drive technology as well as the TIA Portal is assumed.

## 2.2 Hardware and software components

### 2.2.1 Validity

This application is valid for

- TIA Portal (STEP 7 and Startdrive) V13 SP1 or higher
- SIMATIC S7-1500 controller
- SINAMICS G120 frequency converter

### 2.2.2 Components used

The recordings included in this document were created with the following components.

#### Hardware components

Table 2-1: Hardware components

Component	Qty	Article number	Note
CPU 1516-3 PN/DP	1	6ES7 516-3AN00-0AB0	As an alternative, a different motion-capable CPU can also be used.
SINAMICS G120 CU250S-2 PN	1	6SL3246-0BA22-1FA0	
SINAMICS PM240-2 IP20	1	6SL3210-1PB13-0ULx	
Asynchronous motor	1	1LA7060-4AB10-Z	Alternatively, another asynchronous motor can also be used.
HTL incremental encoder	1	6FX2001-4SB00	Alternatively, another incremental encoder with HTL signal can also be used.

#### Software components

Table 2-2: Software components

Component	Qty	Article number	Note
STEP 7 (TIA Portal) V13 SP1	1	6ES7882-1..03-..	
SINAMICS Startdrive V13 SP1	1	6SL3072-4DA02-0XG0	

#### Example files and projects

The following list includes all files and projects that are used in this example.

Table 2-3: Example files and projects

Component	Note
109479977_Commissioning_a_Drive_v10_en.pdf	This document.

## 3 Mode of Operation


### 3.1 Sequence of commissioning

#### Commissioning the SINAMICS drive

The position-controlled drive is commissioned in two steps. First of all the drive has to be configured. In the process, the motor and encoder data is transferred to the drive. Afterwards there is the option to optimize the speed control located in the drive.

The job of a speed control in a drive is to track an actual speed value according to a setpoint speed as precisely as possible.

Figure 3-1: Controller in the drive

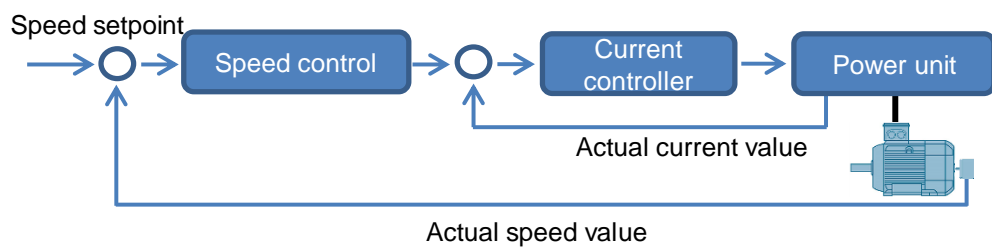

For the commissioning of the drive the following points are shown:

1. Checking speed and rotation direction
2. Optimizing speed control
3. detecting maximum acceleration

#### Commissioning the “positioning axis” technology object


After successful commissioning and optimization of the drive, it is then checked whether the required data can be correctly transferred from the drive to the controller. In the process, the configuration of the technology object is checked. Subsequently, the position controller is optimized.

A position controller is usually a P controller (less frequently a PI controller), which cyclically compares the internal position setpoint to the actual position of the encoder. The result of the setpoint/actual comparison is a signed differential value. The proportional gain of the position controller is known as the position loop gain or Kv factor. The output signal of the position controller is the setpoint speed value for the speed controller.

### 3 Mode of Operation

#### 3.1 Sequence of commissioning

Figure 3-2: Controller in the technology object

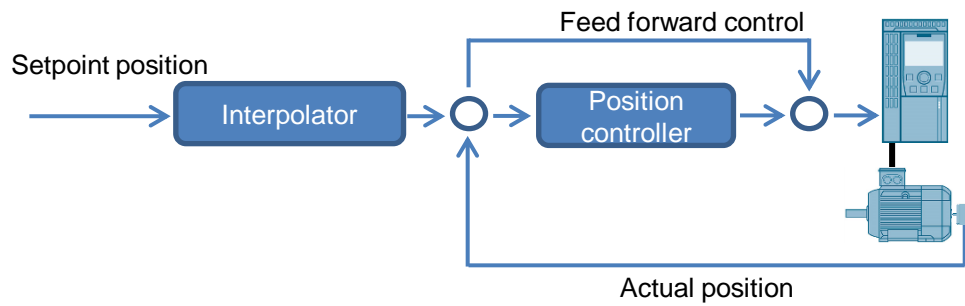

For the commissioning of the technology object the following points are shown:


1. Checking settings of the position encoder
2. Checking speed normalization, counting direction and dynamic
3. Optimizing position controller
4. Optimizing feed forward control



## 3.2 Commissioning the drive

This chapter describes the commissioning of the SINAMICS drive.

Figure 3-3: Configuring the drive

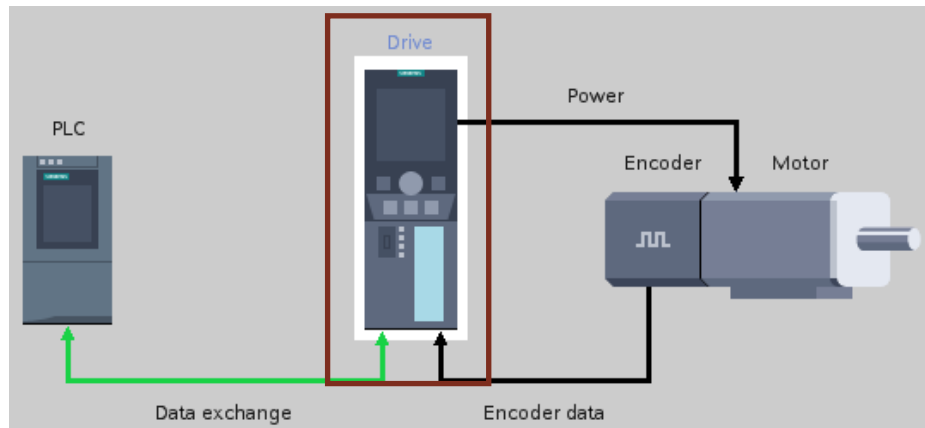

It is recommended to execute the commissioning wizard at the beginning of commissioning. Amongst others, the data of the motor and of the encoder is transferred to the drive. Furthermore, the ramp configuration of the drive (parameters p1120 and p1121) is specified.

### Note

In the drive the ramps (p1120 and p1121) always have to be zero. Only for the optimization of the speed control, may it be necessary to configure an acceleration or deceleration ramp in the drive, in order to avoid mechanical damages on system components.

At the end of the commissioning wizard, the motor data identification (stationary measurement) has to be carried out.



### WARNING

**Make sure that no persons or system components are endangered by the moving drive.**

Take appropriate measures to prevent the drive from exceeding technical or mechanical limits, if required.

### 3.2.1 Checking speed, rotation direction and control direction


Once the commissioning wizard has run, speed, rotation direction and control direction have to be checked. To achieve this, the drive should first of all be moved at a low velocity setpoint. The control board of the drive can be used to operate it. The control board can be found in the TIA Portal in the "Commissioning" folder of the drive.

## 3 Mode of Operation

### 3.2 Commissioning the drive

**Note** When the drive is first switched on, this can lead to uncontrolled movements. This can occur if, for example, the counting direction of the encoder and the rotation of the drive do not match.

Figure 3-4: Control board of the drive

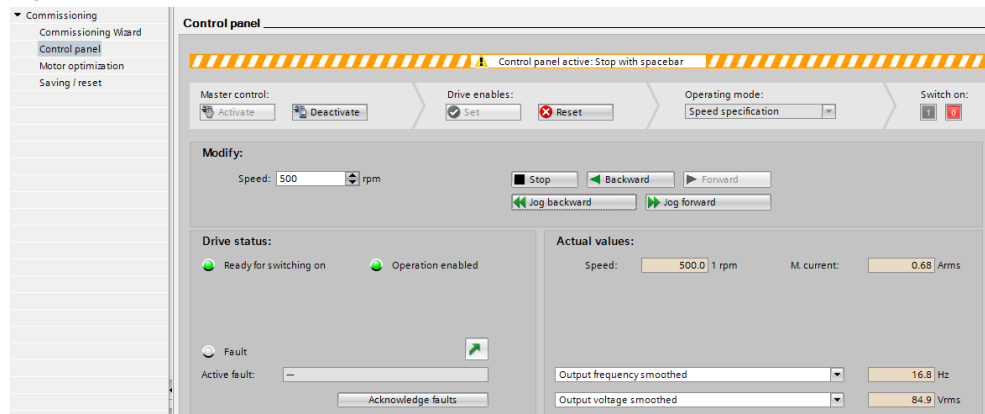

The current speed and rotation direction are displayed on the control board. These values have to match the behavior of the drive and have to be checked with an external measuring device.

Afterwards the drive should be moved with the maximum required system speed. To do this, the speed has to be entered as setpoint specification in the control board.



**The maximum possible speed of a drive depends on its configuration and its use. This is why when determining the maximum speed, it needs be made sure that no damage can occur on the drive or system components when it is moved.**

#### 3.2.2 Optimizing the speed control

##### automatic speed control optimization

At the beginning of the optimization of the speed control, the automatic speed control optimization (rotating measurement) has to be carried out. This can be triggered in "Commissioning" >> "Motor optimization".

**Note** Before the automatic optimization of the speed control (rotating measurement) the motor data identification (stationary measurement) has to have been run without errors.

The result of the automatic optimization usually already delivers a sufficient control behavior of the drive. This can be easily checked by recording (trace) the actual speed value and the speed setpoint.

## 3 Mode of Operation

### 3.2 Commissioning the drive

Figure 3-5: well set speed control with step response



A well set speed control is characterized by:

- short attack time
- dynamic behavior
- low overshoot


#### manual optimization of the speed control

However, if the automatic speed control optimization does not lead to the desired result or if the automatic optimization is cancelled with an error, the speed control can also be optimized manually. In the process, both parameters that are responsible for the control behavior are set manually:

- Speed control P gain  $K_P$
- Speed control reset time  $T_N$

These parameters are set for manual optimization with SINAMICS Startdrive via the “Control type” function view.

Figure 3-6: “Control mode” function view

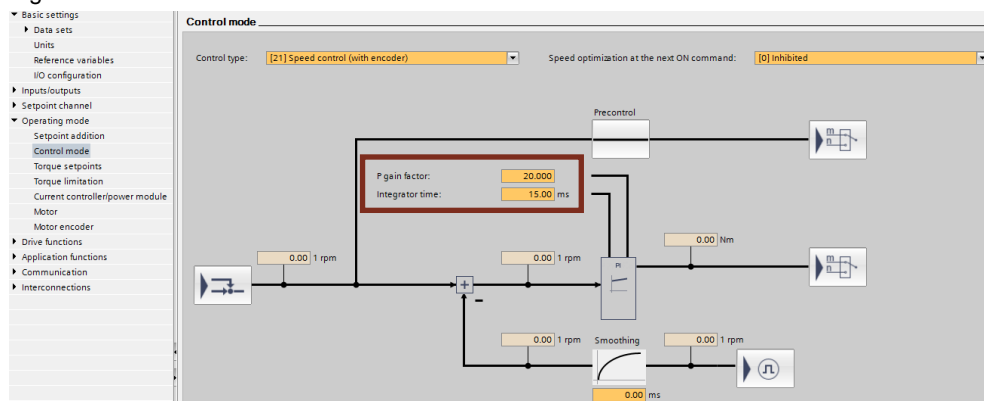


The approach for manual optimization of the speed control is as follows:

1. Establish an online connection to the drive.
2. Set the acceleration and deceleration times in the parameter view to zero, if this has not already happened when commissioning the drive (parameters p1120 and p1121).
3. Now set the feed forward control of the speed control to zero (parameter p1496)
4. Now specify a setpoint step of the speed via the control board and observe the course of the actual speed value with the help of a trace.
5. Optimize the speed control, by changing the parameter for the P gain  $K_P$  (p1460) and for the reset time  $T_N$  (p1462).
6. If the drive shows the desired behavior, optimization is finished. Leave the feed forward control (p1496) on 0%.

If the P gain  $K_P$  is too small and the reset time  $T_N$  is too large, the drive will display the following behavior:

Figure 3-7: Speed control with reset time being too big

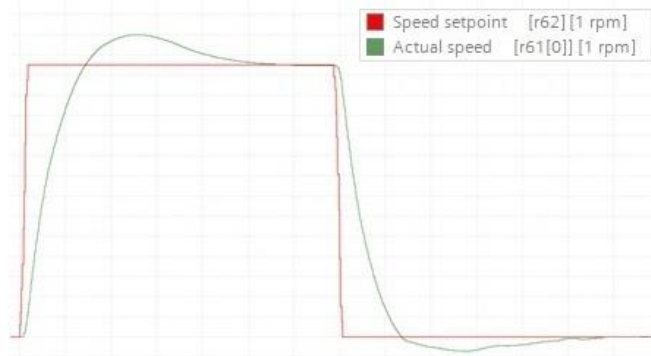


This control behavior has the following disadvantages:

- long attack time
- inert behavior
- long overshoot

If the P gain  $K_P$  is too large, the drive will display the following behavior:

Figure 3-8: Speed control with too large a proportional share

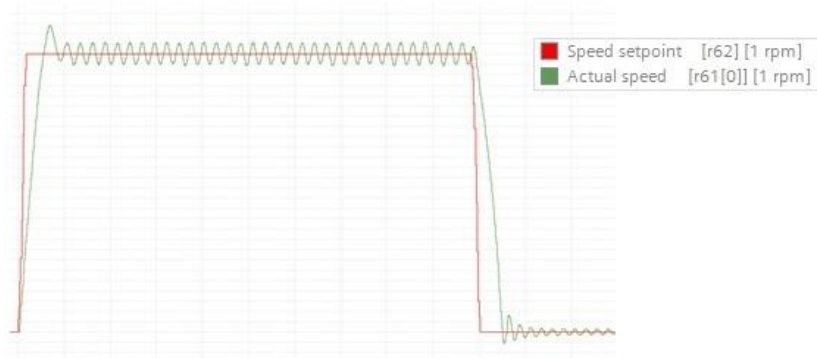

This control behavior has an undesired continuous speed oscillation.

### 3 Mode of Operation

#### 3.2 Commissioning the drive

For the manual optimization of the speed control, the following parameters of a SINAMICS drive have to be influenced:

Table 3-1: required parameters of the drive

Meaning of the parameters	Parameter number
$K_P$ for speed control with encoder	p1460
$T_N$ for speed control with encoder	p1462
Ramp generator ramp-up time	p1120
Ramp generator ramp-down time	p1121
Feed forward control of the speed control	p1496

#### Note

The approach for manual optimization of the speed control is described in the operating instructions of the drive used. [\5\](#)

#### 3.2.3 detecting maximum dynamic

After the optimization of the speed control, the maximum acceleration and the maximum deceleration of the drive have to be specified. To do this, the drive has to be moved via the [Control board of the drive](#) with maximum speed.



CAUTION

**The maximum possible speed of a drive depends on its configuration and its use. This is why when determining the maximum speed, it needs be made sure that no damage can occur on the drive or system components when it is moved.**

During the movement a trace has to be created. In it, the actual speed value and the setpoint speed are to be recorded.

Figure 3-9: Trace to determine the maximum dynamic



The maximum acceleration and the maximum deceleration are calculated according to the following formula:

$$\text{Acceleration} = \frac{\text{Velocity change}}{\text{Period}} = \frac{\Delta v}{\Delta t}$$

#### Calculation of the maximum acceleration

For the calculation of the maximum acceleration, the value of the velocity change has to be detected first. In the present example it is accelerated from standstill (speed equals zero) to the maximum speed. For this reason, the maximum speed of the velocity value corresponds to the calculation of the maximum acceleration.

As a second step the time has to be determined now in which the drive accelerates to the maximum speed. This period starts at the point where the acceleration starts on the drive (1) and ends when the drive reaches the setpoint of the maximum speed at a steady state (2).

#### Calculating the maximum deceleration

For the calculation of the maximum deceleration, the velocity change also has to be detected. This is where the drive decelerates from its maximum speed to standstill (speed equals zero).

The period the drive requires for this, starts at the starting point of the deceleration (3) and ends when the drive has reached standstill (4).

#### Note

When calculating the acceleration or deceleration there may have to be a

conversion of  $\frac{\text{Revolutions}}{\text{Seconds}^2}$  to  $\frac{\text{Millimeters}}{\text{Seconds}^2}$ .

#### Example for calculating the maximum acceleration

The maximum speed of the drive is 1420 revolutions per minute. The drive reaches this speed in 0.52 seconds.

$$n_{\max} = 1420 \frac{1}{\text{min}} = 23.67 \frac{1}{\text{sec}}$$

Thus, the maximum acceleration is calculated like this:

$$a_{\max} = \frac{\Delta v}{\Delta t} = \frac{23.67 \text{ 1/sec}}{0.52 \text{ sec}} = 45.52 \frac{1}{\text{sec}^2}$$

The load movement per motor revolution is 10 mm:


$$45.52 \frac{1}{\text{sec}^2} * 10 \text{ mm per revolution results in } a_{\max} = 455.2 \frac{\text{mm}}{\text{sec}^2}$$

### 3 Mode of Operation

#### 3.2 Commissioning the drive

The calculated values for the maximum acceleration and the maximum deceleration are to be entered in the dynamic limits of the technology object.

Figure 3-10: Dynamic limits of the technology object

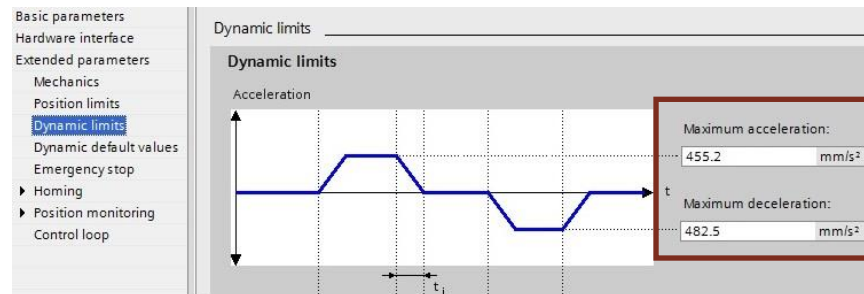


#### Saving the settings

After commissioning the drive, the settings have to be saved. The following steps must be taken:

1. Save the settings of the drive in the EEPROM memory. This makes the settings available even after restarting the drive.

Figure 3-11: Save the settings

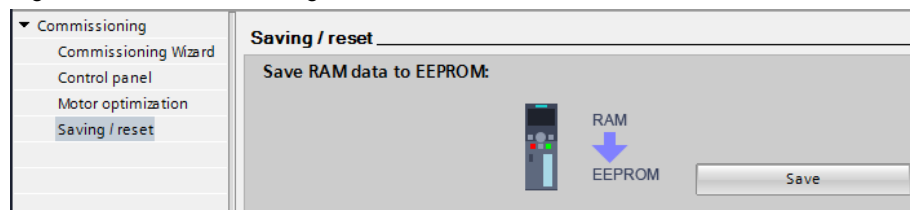

2. Disconnect online connection to the drive
3. Upload the drive settings into the TIA project

Figure 3-12: Load the drive settings into the project




4. Save the TIA project

### 3.3 Commissioning the technology object

This chapter describes the points that are required to commission a position-controlled drive in the SIMATIC S7-1500 controller (PLC).

Figure 3-13: Configuring the drive

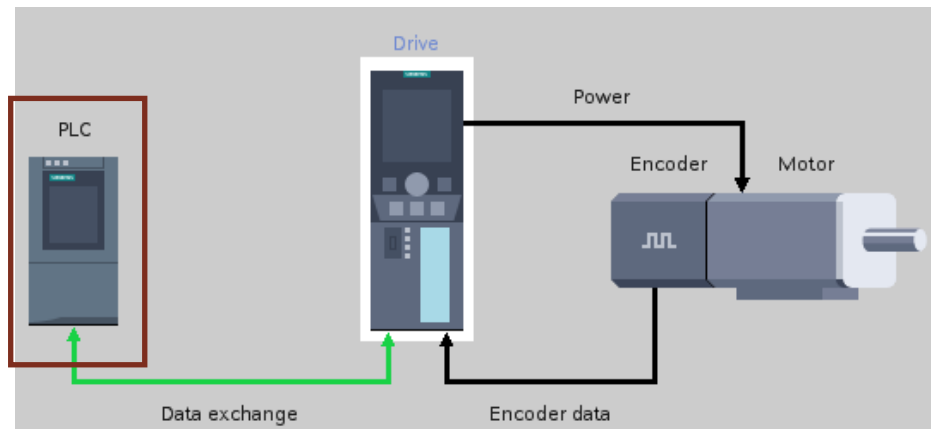

Here, the focus is on the following points:

- Checking position encoder setting
- Checking speed normalization, counting directions and dynamic
- Optimizing the position controller
- Optimizing the feed forward control

At this place it is assumed that a “Positioning Axis” technology object has been created and the basic configuration (selection encoder, drive etc.) has taken place.

#### Note

Application example [17](#) shows how a position-controlled axis is created and the use of the required blocks.

#### 3.3.1 Checking the position encoder setting

The data of the encoder has to be stored in the configuration of the technology object. This is where, among other information, the encoder type and “steps per revolution” is to be entered. If the encoder is directly connected to the SINAMICS drive, the values in the technology object have to match the ones of the drive parameter “PROFIdrive encoder format” (r979[2] to r979[5]).

In order to check whether the entered data matches that of the encoder used, the axis has to be moved mechanically by a certain distance. The shift then has to be determined by measuring it (e.g. with a caliper gauge). This shift of the axis has to match the change of the actual position.


The actual position can be read online in the control board of the technology object (axis control board).



## 3 Mode of Operation

### 3.3 Commissioning the technology object

Figure 3-14: Axis control board

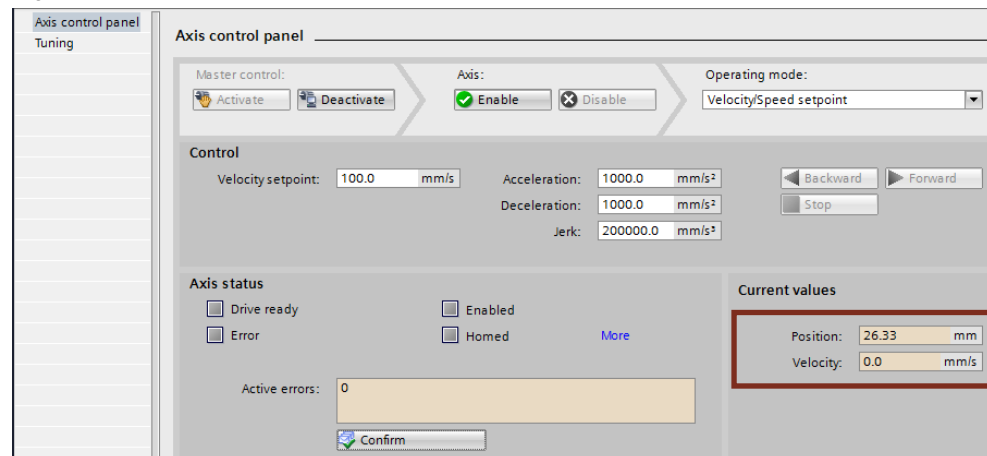

If it is not possible to move the drive mechanically, the drive has to be moved with the help of the axis control board. To do this, a very low velocity has to be selected because during the movement, the number of revolutions of the axis has to be determined.

When controlling the drive with the axis control board, the direction of rotation of the encoder can also be checked. Here, it has to be observed that when moving the axis in positive direction, the actual position is also increased.

If the position encoder delivers incorrect or no data, the following may have caused the error:

- Encoder not correctly connected to the drive
- Encoder or encoder cable defective
- Actual encoder value inverted
- Fine resolution of the encoder not correct

#### 3.3.2 Checking of the speed normalization and traversing direction

In this step, speed normalization, counting direction and dynamic of the drive have to be checked. To do this, the following settings have to be made:

- Disabling the following error monitoring in the technology object
- Disabling the position monitoring (tolerance time to max.)
- Gain factor  $K_v = 0$
- Feed forward control  $K_{pc} = 100\%$
- Moving the axis with maximum required speed



**CAUTION**

**The value for the maximum velocity has to be selected in a way to avoid damage on the drive or system components.**


## 3 Mode of Operation

### 3.3 Commissioning the technology object

The position controller has to be disabled at this point ( $K_v=0$ ), so that the drive can only be moved “controlled”. The specification of a speed setpoint takes place without position control action.

The controlled movement via the axis control board is not directly possible up to TIA version V13 SP1. This is why the settings of the gain factor and the feed forward control have to take place via the “control loop” operator screen of the technology object.

Figure 3-15: Control loop position controller

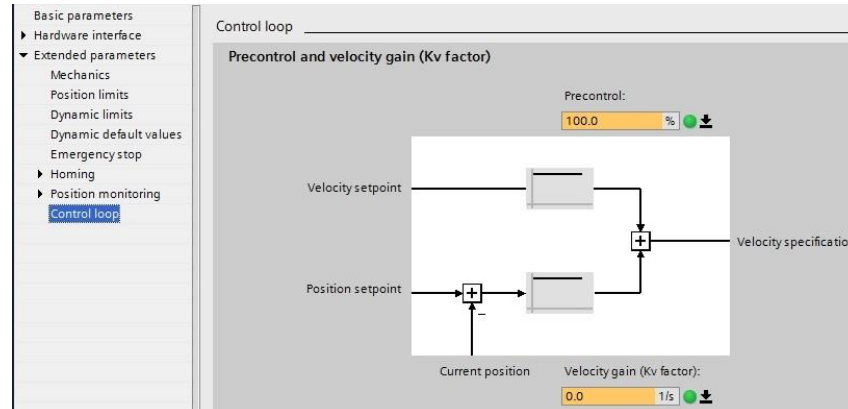


Moving the drive while checking the speed normalization and the counting direction can take place via the “[Axis control board](#)”.

Before moving the drive it has to be checked whether the following parameters have the same values:

- The reference speed of the technology object has to match the reference speed of the drive (drive parameter p2000).
- The maximum speed of the technology object has to match the maximum speed of the drive (drive parameter p1082).

A trace has to be created in order to check the normalization, the counting direction and the dynamic of the drive. In it, the current velocity (ActualVelocity) and setpoint velocity profile (Velocity) has to be recorded. This is where the current velocity is to follow the course of the setpoint velocity profile as precisely as possible.

Figure 3-16: Checking the direction and value of the current velocity

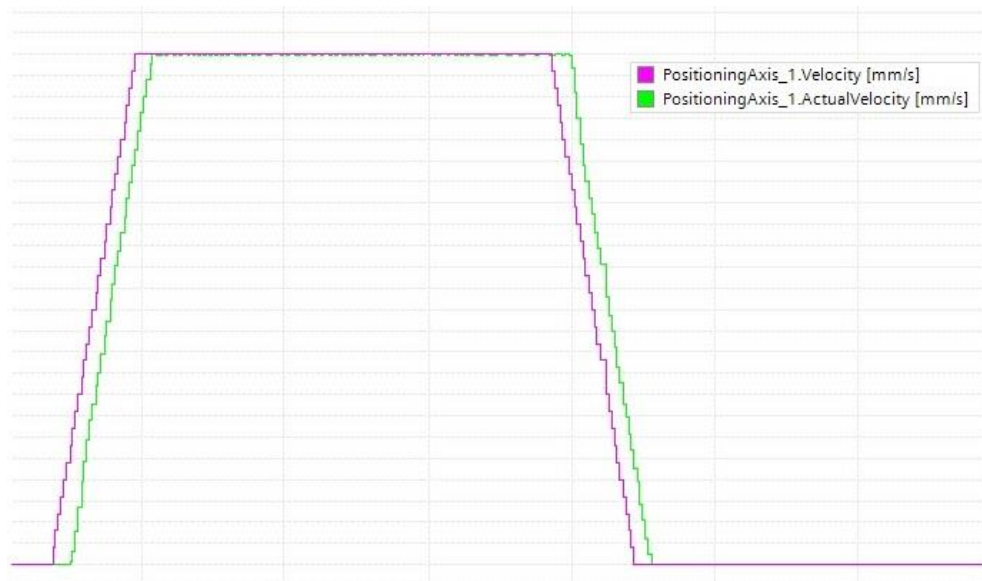

If the current velocity cannot follow the course of the setpoint velocity profile, this may have the following causes:

- Drive is moving to its current limits
- The limits in the technology object have been reached and have therefore been set too low

When the speed normalization and the counting direction is checked by evaluating the trace, and the desired (maximum) dynamic of the drive has been set, the position controller can then be optimized. To do this, set the gain factor  $K_v$  to ten and disable the feed forward control ( $K_{pc}=0\%$ ). Re-enable the following error monitoring and position monitoring.

#### 3.3.3 Optimizing the position controller

For a precise behavior of a position-controlled drive, the position controller has to be optimized.


##### manual optimization of the position controller

The quality of the position controller is checked comparing the setpoint velocity profile (Velocity) with the current velocity (ActualVelocity) of the technology object. This is where the current speed should follow the course of the setpoint speed profile as precisely as possible. An overshoot of the current speed is to be avoided when reaching the setpoint.

### 3 Mode of Operation

#### 3.3 Commissioning the technology object

Figure 3-17: well set position controller

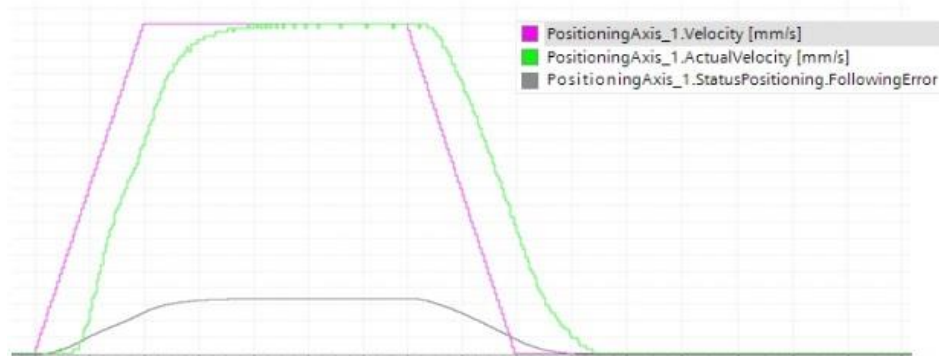

This control behavior is characterized by:

- short attack time
- dynamic behavior
- no overshoot

When optimizing the position controller, the ideal gain factor (Kv factor) has to be determined. This can be set in the “Control loop” screen.

During the optimization, as high a gain as possible is to be reached. A smaller gain results in a larger following error as well as more sluggish control behavior. The maximum attainable gain depends on the following factors:

- Mechanical stiffness
- Response time of the controlled system
- Size of the control cycle
- Type of drive connection (clock synchronous or non-clock synchronous)

The table below gives an idea of the size of the gain factor at very different operating conditions.

Table 3-2: Size of the gain factor

Gain factor	Mechanics	Type of drive	Control cycle
low (<15 1/s)	low stiffness	U/f, asynchronous motor, G120, hydraulic	low (>12 ms)
intermediate (>15 1/s)	intermediate stiffness	Vector with encoder	intermediate (<12 ms)
high (>30 1/s)	high stiffness	Servo, S120	high (<6 ms)

The optimization should be made with the following settings:

- Move with maximum required acceleration
- Move with 90% of the maximum required velocity (Velocity)
- Disabling the feed forward control (Kpc=0%)
- Start of the optimization with Kv=10



CAUTION

The maximum acceleration and the maximum velocity have to be selected in a way so that no damage is caused on the drive or system components.


Moving the drive while checking the optimization of the position control can take place via the “[Axis control board](#)”. This is where values for the position controller can only be accepted online, if the control authority in the control board has been passed on.

#### Note

If a function-capable motion program exists for controlling the position-controlled drive, the motion commands are to be started via this program.

If the gain factor has been set too low, the current velocity approaches the setpoint only slowly.

Figure 3-18: Position controller with a gain factor that is too small

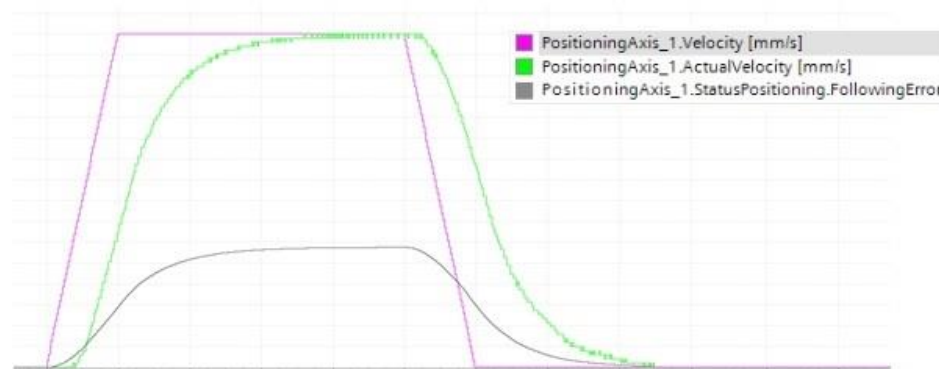


This control behavior has the following disadvantages:

- long attack time
- inert behavior
- large following error

If the gain factor has been set too high, there will be an overshoot of the current velocity.


Figure 3-19: Position controller with a gain factor that is too high

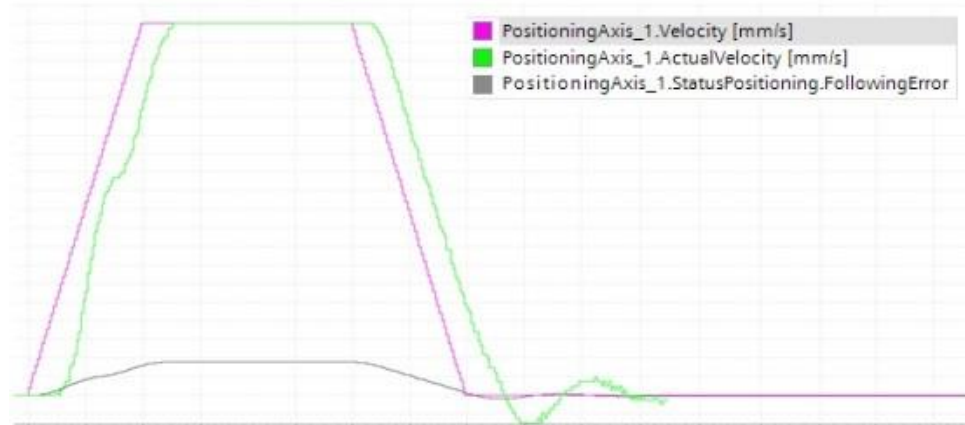

### Optimizing the position controller with the optimizing window in the TIA portal

With a pre-configured user interface the TIA Portal offers another option for optimizing the position controller. It can be found in the commissioning functions of the positioning axis.

Figure 3-20: User interface to optimize the position controller

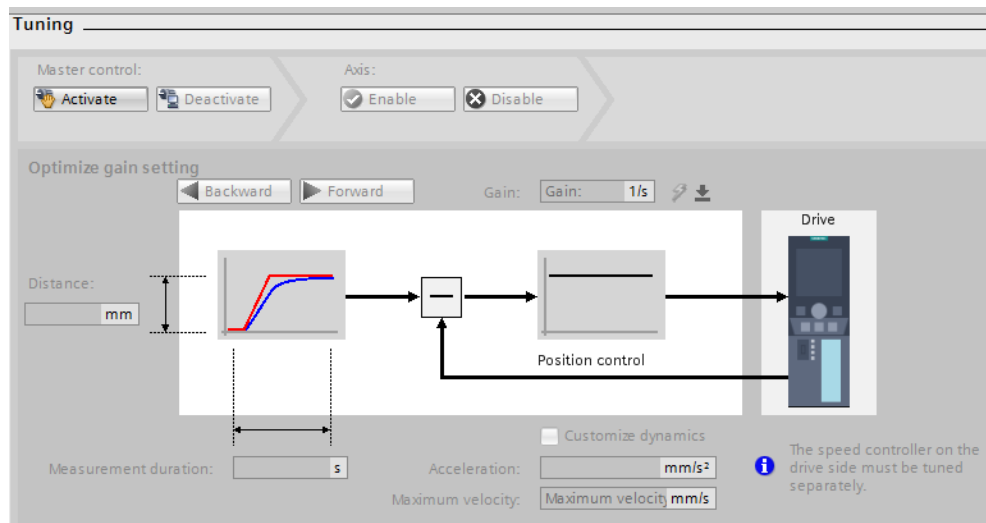

In this user interface, positioning movements can be executed with different Kv factors. The behavior of the drive can then be assessed with a trace.

Optimizing the position controller with the optimization window has the following advantages and disadvantages:

## 3 Mode of Operation

### 3.3 Commissioning the technology object

Table 3-3: Advantages and disadvantages of the optimization window

Advantages	Disadvantages
Kv value can be set without having to give up control authority	Kv value has to be applied
The trace is started automatically	Setting options for the deceleration and the feed forward control are missing


**Note** After the optimization the set values have to be saved offline.

#### 3.3.4 Optimizing the feed forward control

An optimally set feed forward control increases the control dynamic and reduces the following error. The application advantage here is mainly all the dynamic positioning processes.

Analogous to the position control, the quality of the feed forward control can be checked by comparing the setpoint velocity profile (Velocity) and the current velocity (ActualVelocity) of the technology object. The following error is also to be recorded.

Figure 3-21: Feed forward control optimal

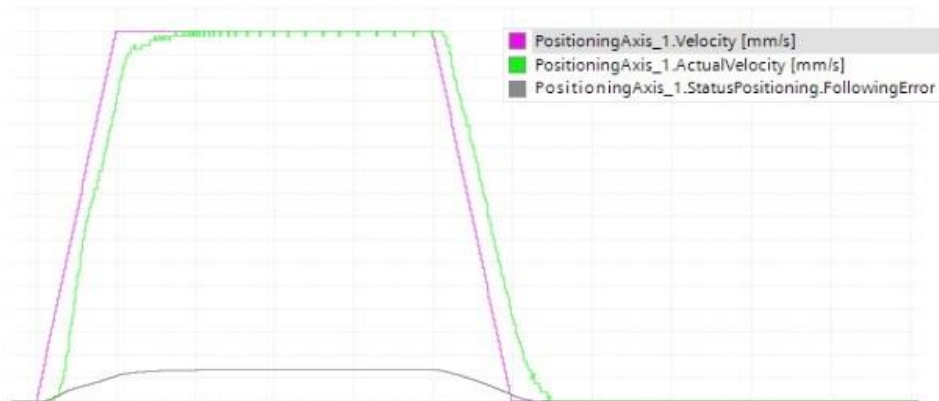

A well set feed forward control is characterized by:

- very short attack time
- dynamic behavior
- no overshoot

The aim of the optimization of the feed forward control is the determination of the ideal Kpc value. This can be set in the “[Control loop](#)” screen.

The optimization should be made with the following settings:

- Move with maximum required acceleration
- Move with 90% of the maximum required velocity (Velocity)
- Optimizing feed forward control Kpc




CAUTION

The maximum acceleration and the maximum velocity have to be selected in a way so that no damage is caused on the drive or system components.


When using frequency converters of the SINAMICS G120 family, as well as for an analog or non-clock synchronous connection of the drives, the feed forward control should be reduced or switched off ( $K_{pc}=0\%$ ). Otherwise there could be overshoots

Figure 3-22: Feed forward control  $K_{pc}$  too high

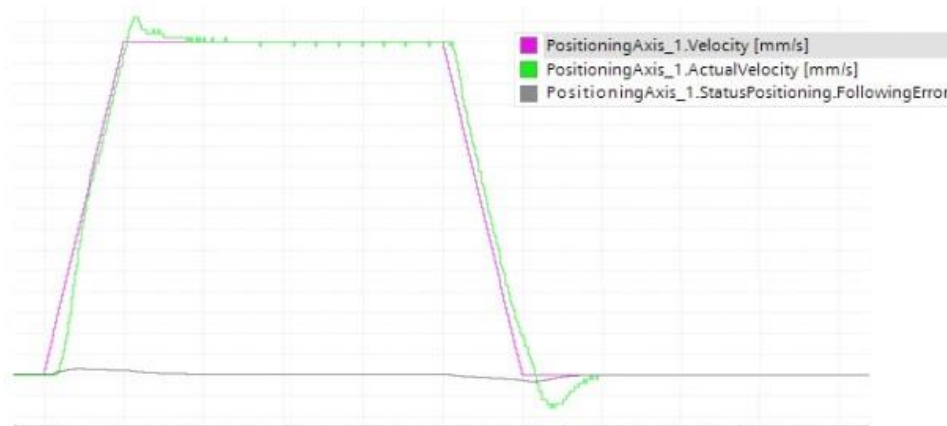

If a feed forward control is too low, the drive will display the following behavior.

Figure 3-23: Feed forward control  $K_{pc}$  too low

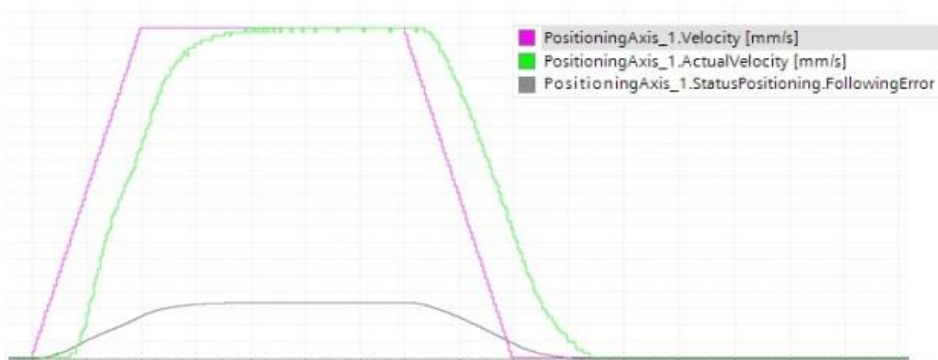

This control behavior has the following disadvantages:

- larger following error
- longer attack time

Moving the drive while checking the optimization of the feed forward control can take place via the “[Axis control board](#)”.



### 3.4 Summary of commissioning

Commissioning of a position-controlled drive is summarized as follows.

#### Commissioning the drive

Table 3-4: Steps for commissioning the drive

Step	Task
1.	Run the commissioning wizard with final automatic motor data calculation
2.	Check speed and rotation direction
3.	Optimize speed control
4.	detect maximum dynamic of the drive

#### Commissioning the technology object

Table 3-5: Steps for commissioning the technology object


Step	Task
1.	Check position encoder setting
2.	Check speed normalization, counting direction and dynamic
3.	Optimize position controller
4.	Optimize feed forward control

### 3.5 Information for the processing of faster motion sequences

For some applications, a high dynamic behavior of the drive is desired. This means that a drive, once it has reached its setpoint position, should start with the next positioning job as fast as possible.

If the drive is to respond as quickly as possible to a new positioning command, the “minimum dwell time in the positioning window” has to be set to zero seconds.

Figure 3-24: Setting the dwell time

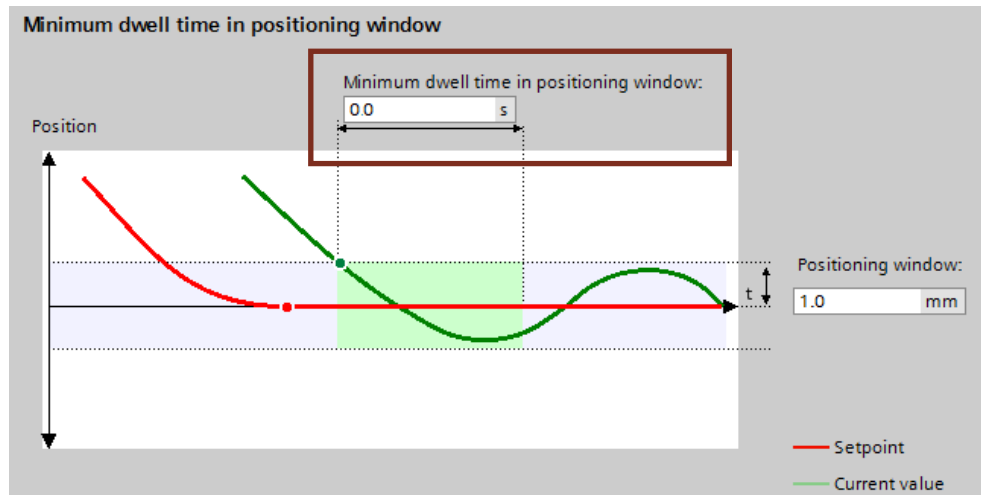

## 4 Links & Literature

Table 4-1

	Topic	Title
\1\	Siemens Industry Online Support	<a href="https://support.industry.siemens.com">https://support.industry.siemens.com</a>
\2\	Download page of the entry	<a href="https://support.industry.siemens.com/cs/ww/en/view/109479977">https://support.industry.siemens.com/cs/ww/en/view/109479977</a>
\3\	STEP 7 V13	Updates for TIAP V13 <a href="http://support.industry.siemens.com/cs/document/90466591">http://support.industry.siemens.com/cs/document/90466591</a>
\4\	Startdrive V13 Download page	<a href="http://support.industry.siemens.com/cs/document/68034568">http://support.industry.siemens.com/cs/document/68034568</a>
\5\	SINAMICS G120 with CU240 B/E-2 manuals	Operating Instructions: <a href="http://support.industry.siemens.com/cs/document/94020562">http://support.industry.siemens.com/cs/document/94020562</a> List manual (parameters and error list): <a href="http://support.industry.siemens.com/cs/document/99683523">http://support.industry.siemens.com/cs/document/99683523</a>
	SINAMICS G120 with CU250S-2 manuals	Operating Instructions: <a href="http://support.industry.siemens.com/cs/document/94020554">http://support.industry.siemens.com/cs/document/94020554</a> List manual (parameters and error list): <a href="http://support.industry.siemens.com/cs/document/99683818">http://support.industry.siemens.com/cs/document/99683818</a>
	SINAMICS G120C Manuals	Operating Instructions: <a href="http://support.industry.siemens.com/cs/document/99710404">http://support.industry.siemens.com/cs/document/99710404</a> List manual (parameters and error list): <a href="http://support.industry.siemens.com/cs/document/99683780">http://support.industry.siemens.com/cs/document/99683780</a>
	SINAMICS G120D with CU240D-2 manuals	Operating Instructions: <a href="http://support.industry.siemens.com/cs/document/99711357">http://support.industry.siemens.com/cs/document/99711357</a> List manual (parameters and error list): <a href="http://support.industry.siemens.com/cs/document/99684194">http://support.industry.siemens.com/cs/document/99684194</a>
	SINAMICS G120D with CU 250D-2 manuals	Operating Instructions: <a href="http://support.industry.siemens.com/cs/document/99721485">http://support.industry.siemens.com/cs/document/99721485</a> List manual (parameters and error list): <a href="http://support.industry.siemens.com/cs/document/99684194">http://support.industry.siemens.com/cs/document/99684194</a>
	SINAMICS S120 Manuals	Manual: <a href="http://support.industry.siemens.com/cs/document/109478725">http://support.industry.siemens.com/cs/document/109478725</a> List manual (parameters and error list): <a href="http://support.industry.siemens.com/cs/document/33974002">http://support.industry.siemens.com/cs/document/33974002</a>
\6\	SIMATIC S7-1500	SIMATIC S7-1500 Automation System: <a href="http://support.industry.siemens.com/cs/document/59191792">http://support.industry.siemens.com/cs/document/59191792</a> Function Manual SIMATIC S7-1500 Motion Control: <a href="http://support.industry.siemens.com/cs/document/99005173">http://support.industry.siemens.com/cs/document/99005173</a>
\7\	Positioning a G120 with S7-1500	Application Example: <a href="http://support.industry.siemens.com/cs/ww/en/view/81666970">http://support.industry.siemens.com/cs/ww/en/view/81666970</a>

## 5 History

Table 5-1

Version	Date	Modifications
V1.0	02/2016	First version