

SIEMENS



PRONETA Basic V3.2 User Manual

PROFINET Network Analyzer – Configuration and
Diagnostic Tool

<https://support.industry.siemens.com/cs/ww/en/view/67460624>

Siemens
Industry
Online
Support



Legal information

Use of application examples

Application examples illustrate the solution of automation tasks through an interaction of several components in the form of text, graphics and/or software modules. The application examples are a free service by Siemens AG and/or a subsidiary of Siemens AG ("Siemens"). They are non-binding and make no claim to completeness or functionality regarding configuration and equipment. The application examples merely offer help with typical tasks; they do not constitute customer-specific solutions. You yourself are responsible for the proper and safe operation of the products in accordance with applicable regulations and must also check the function of the respective application example and customize it for your system.

Siemens grants you the non-exclusive, non-sublicensable and non-transferable right to have the application examples used by technically trained personnel. Any change to the application examples is your responsibility. Sharing the application examples with third parties or copying the application examples or excerpts thereof is permitted only in combination with your own products. The application examples are not required to undergo the customary tests and quality inspections of a chargeable product; they may have functional and performance defects as well as errors. It is your responsibility to use them in such a manner that any malfunctions that may occur do not result in property damage or injury to persons.

Disclaimer of liability

Siemens shall not assume any liability, for any legal reason whatsoever, including, without limitation, liability for the usability, availability, completeness and freedom from defects of the application examples as well as for related information, configuration and performance data and any damage caused thereby. This shall not apply in cases of mandatory liability, for example under the German Product Liability Act, or in cases of intent, gross negligence, or culpable loss of life, bodily injury or damage to health, non-compliance with a guarantee, fraudulent non-disclosure of a defect, or culpable breach of material contractual obligations. Claims for damages arising from a breach of material contractual obligations shall however be limited to the foreseeable damage typical of the type of agreement, unless liability arises from intent or gross negligence or is based on loss of life, bodily injury or damage to health. The foregoing provisions do not imply any change in the burden of proof to your detriment. You shall indemnify Siemens against existing or future claims of third parties in this connection except where Siemens is mandatorily liable.

By using the application examples you acknowledge that Siemens cannot be held liable for any damage beyond the liability provisions described.

Other information

Siemens reserves the right to make changes to the application examples at any time without notice. In case of discrepancies between the suggestions in the application examples and other Siemens publications such as catalogs, the content of the other documentation shall have precedence.

The Siemens terms of use (<https://support.industry.siemens.com>) shall also apply.

Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the Internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit <https://www.siemens.com/industrialsecurity>.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed at: <https://www.siemens.com/industrialsecurity>.

**WinPcap-
NOTE**

"This product includes software developed by Yen Yen Lim and North Dakota State University."

"This product includes software developed by the netgroup of Politecnico di Torino, and its contributors."

"This product includes software developed by the Computer Systems Engineering Group at Lawrence Berkeley Laboratory."

"This product includes software developed by Texas A&M University and its contributors."

"This product includes software developed by the Kungliga Tekniska Högskolan Stockholm and its contributors."

Table of contents

Legal information	2
1 Introduction	5
2 General.....	7
2.1 PRONETA Basic and PRONETA Professional.....	7
2.2 Features.....	7
2.3 Supported Devices and Modules.....	8
2.4 Setup and Running PRONETA Basic.....	8
3 PRONETA Basic User Guide.....	10
3.1 Fundamentals of PRONETA Basic.....	10
3.1.1 Overview	10
3.1.2 Help View	13
3.2 Network Analysis Task.....	14
3.2.1 Online Mode	14
3.2.2 Offline Mode	29
3.2.3 Comparison Mode	32
3.2.4 Configuration Mode	36
3.3 IO Test Task.....	39
3.3.1 Device Selection Mode	39
3.3.2 IO Test Mode.....	41
3.4 Settings	50
3.4.1 General Settings.....	50
3.4.2 Network Adapter.....	52
3.4.3 GSDML Manager.....	52
4 Working with PRONETA Basic	54
4.1 Selection of the PRONETA Basic Network Adapter.....	54
4.2 Displaying the Devices and Topology of a PROFINET Network.....	55
4.3 Comparing and Configuring Different Topologies	59
4.4 Configuration of the PROFINET Devices.....	62
4.4.1 Automatic PROFINET Device Configuration.....	62
4.4.2 Manual Configuration of a Single Device.....	64
4.4.3 Transfer of the Device Name for a Single Device	65
4.4.4 Transfer of Device Names for a Whole Network.....	66
4.5 Creating an Inventory of the Network	68
4.6 Testing the Correct Wiring of the Distributed IO.....	70
4.6.1 Checking the Station Configuration	70
4.6.2 Checking the Signal Wiring: "IO Test"	71
5 Related Literature.....	78
6 History	78


1 Introduction

The PROFINET network analyzer PRONETA Basic is a simple tool intended for the rapid analysis and configuration of PROFINET networks and the simple testing of ET 200 distributed IO systems and other components. It is well suited for solving two tasks fundamental to the commissioning of PROFINET installations:

- The "Network Analysis" task gives a quick overview of the devices connected to PROFINET. It features simple configuration options, like setting network parameters or assigning a network name to the devices which are part of the subnet the PRONETA PC is connected. The application also provides powerful mechanisms to compare several network topologies with each other, for example to compare an "ideal" topology intended for a project with the actual installation.
- The "IO Test" task is a simple and intuitive method to test the IO wiring of an installation with numerous distributed IO devices. It allows for checks of the wiring and will automatically set up a protocol of the test procedure which can be exported for documentation purposes.

Both tasks can be performed before a CPU is integrated in the network. Since there are no other engineering tools required, PRONETA Basic allows fast and convenient checks of the system configuration from early on.

Figure 1-1

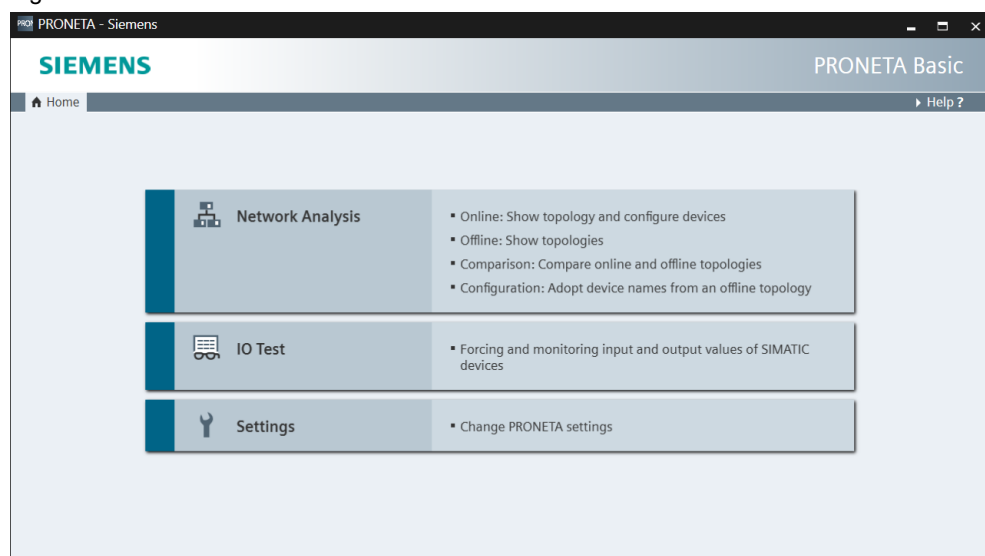

PRONETA Basic has the following features:

- Free download from the SIEMENS support websites
- Runs on any contemporary PC, PG or laptop, running Windows
- Allows configuration of networks in early project phases, even before any CPU is installed in the network
- No additional hardware or software required
- No dedicated installation needed: Simply extract the zip download
- Support for PROFINET devices from all vendors

- IO Test supported for numerous SIMATIC ET 200 distributed IO modules
- Support for STEP 7 V5.4, 5.5 and 5.6 project files

For more information see also [13](#).

How to use this manual

This manual consists of the following sections:

- Chapter [2](#), “[General](#)” gives you an overview of PRONETA Basic’s features and provides you with the necessary information to install and run the program.
- Chapter [3](#), “[PRONETA Basic User Guide](#)” is a reference chapter, duplicating the online help, which acquaints you with concepts and the user interface of PRONETA Basic.
- Chapter [4](#), “[Working with PRONETA Basic](#)” will guide you through the most relevant use cases of PRONETA Basic in a step-by-step manner.

2 General

2.1 PRONETA Basic and PRONETA Professional

PRONETA Professional is a commercial, licensed software product distributed by SIEMENS. It contains the functionality of PRONETA Basic and furthermore provides additional functions (see also [41](#)).

2.2 Features

Obtaining PRONETA Basic

PRONETA Basic is available as a free download from the SIEMENS support portal:

- <https://support.industry.siemens.com/cs/ww/en/view/67460624> (see [21](#))

This manual refers to version 3.2.

System Requirements

PRONETA Basic runs on any contemporary PC, PG or laptop hardware with Windows 7, Windows Embedded Compact 7, Windows 8 or Windows 10, each either in the 32 or 64 bit version.

Connection with PROFINET is established via an Industrial Ethernet cable.

The following additional software components need to be present as well:

- [.NET Framework v4.6.2](#)
If .NET is missing on your PC, the installer will guide you to a download location.
- An API ("Application Programming Interface") for capturing network traffic, either [WinPcap 4.1.3](#) or higher, or Npcap.
WinPcap is part of the PRONETA Basic distribution and will be installed at the first start of PRONETA, if neither WinPcap nor Npcap are present on the target PC.

NOTE

- Depending on the distribution, the .NET Framework and WinPcap drivers may not be included in the standard installation for Windows Embedded, and may require manual installation.
- The 32 bit version of Microsoft Visual C++ must be used even with 64 bit versions of Windows.

Supported SIMATIC Software

PRONETA Basic allows the loading of reference projects created with STEP 7, Versions 5.4, 5.5, or 5.6. It is also possible to import AML ("Automation Markup Language") files created with TIA Portal.

Port information for firewall for scanning

PRONETA uses port 161 for SNMP and port 34964 for DCE/RPC.

Limitations

- The maximum size of a network for which network scans will be reliably performed is 500 devices. For larger networks, devices may go undetected, or PRONETA Basic may crash. (See also [Online Mode](#))
- In the IO Test, signal changes of less than 256 ms duration may not be reliably observed. (See also [IO Test Task](#))

2.3 Supported Devices and Modules

PRONETA Basic supports all PROFINET-conform devices irrespective of their manufacturer. The supported range of functions depends on the individual device.

The IO Test supports the following devices and modules:

- Most current SIMATIC ET 200 modules, including ET 200SP, ET 200M, ET200MP, ET200pro and ET200ecoPN.
- SIMATIC IO-Link modules (Master/Device)
- SIMATIC Compact Field Units (CFU)
- SIRIUS Motor Starters with Firmware Versions 1.1 or greater
- SIPLUS Heating Control Systems HCS4200/4300
- Most SIMATIC S7-1500 CPUs, including S7-1500 Advanced Controllers, and Drive Controller CPUs 1504D TF and 1507D TF.

Reference List

A continuously updated list of supported modules for PRONETA Basic can be found on the [PRONETA Basic download page](#) (see also \2\)

Updating the PRONETA Basic GSDML database

Modules that appear after the release of version 2.6 can subsequently be supported by importing their GSDML file from the SIEMENS [Industry Online Portal](#) web pages, provided they do not require any new functionality. The chapter [GSDML Manager](#) provides more details on this.

2.4 Setup and Running PRONETA Basic

Setup

Extract the PRONETA Basic file archive into a folder on your PC and connect your PC by means of an Industrial Ethernet cable with your plant.

No further installation is required for PRONETA Basic.

NOTE

- The extraction path for PRONETA Basic must not contain either of the special characters “#” or “;”.
- To perform IO Tests (see [IO Test Task, 3.3](#)), PRONETA must be placed in a directory where it will have writing privileges during execution.

Starting PRONETA Basic

After setup, you can start PRONETA Basic by a double-click on the program icon in the extraction folder.

Figure 2-1



NOTE


When running PRONETA Basic for the first time, you will be asked to acknowledge the license conditions before you can proceed.

You may also create a shortcut link to PRONETA Basic on your desktop and start the program from there.

Finishing PRONETA Basic

To quit PRONETA Basic, click on the “Close”-icon of the program’s window.

Figure 2-2

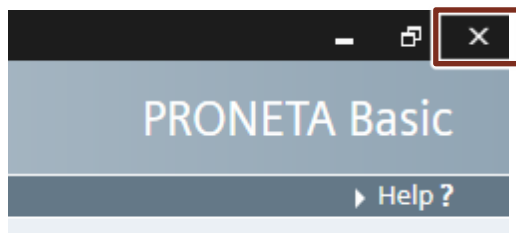**Removing PRONETA Basic from your system**

If you do not plan to use PRONETA Basic any further, perform the two following steps:

1. Delete the folder to which you extracted PRONETA Basic,
2. In the Windows start menu, execute “WinPcap -> Uninstall WinPcap 4.1.3” (if applicable).

3 PRONETA Basic User Guide

3.1 Fundamentals of PRONETA Basic

3.1.1 Overview

NOTE


Within the scope of this documentation, the term “device” is used as a synonym for “network participant”, “node”, or “component.” Any piece of equipment which takes part in the PROFINET communication with a designated IP address is considered a “device”.

PRONETA Basic is designed to allow you to accomplish one of several “tasks”. These tasks are currently:

- [Network Analysis Task](#)
- [IO Test Task](#)
- Adjusting the software [Settings](#)

The tasks can be chosen from the Home screen, and returning to the Home screen anytime during the operation of PRONETA Basic will allow you to select a different task.

Figure 3-1

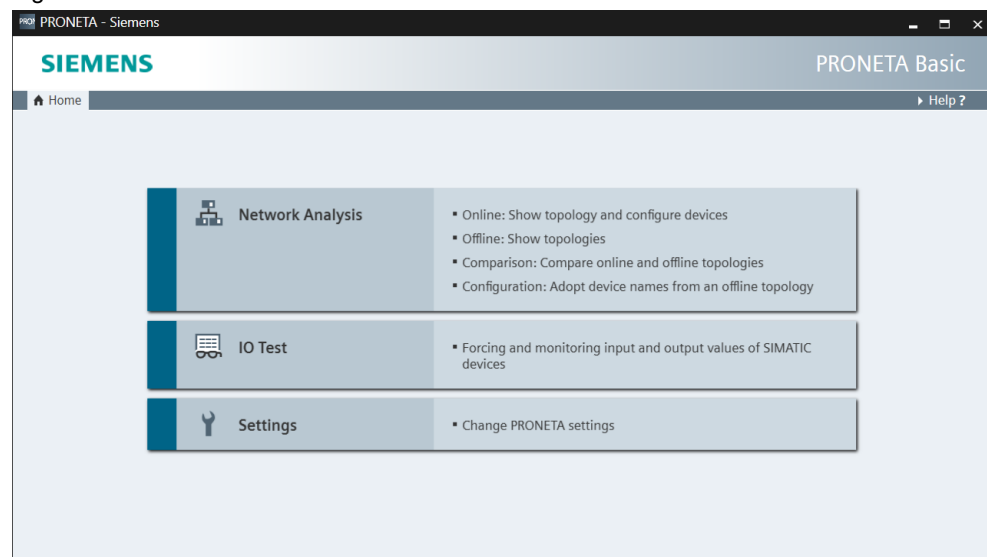


Screen Layout

In general, the PRONETA Basic window is split in several sections:

- A header bar (1) on the top
- A mode bar (2) which allows changing between the “modes”, or individual steps of the task chosen
- A function bar (3) which offers particular functions for the current mode
- One or more windows with Graphical Views of a network configuration (4) or tables of relevant information (5) below, like a Device Table
- The Graphical Views contain a tool bar, designed to perform particular operations depending on the chosen mode
- The window Device Details (6) shows the parameters of a particular device

Figure 3-2

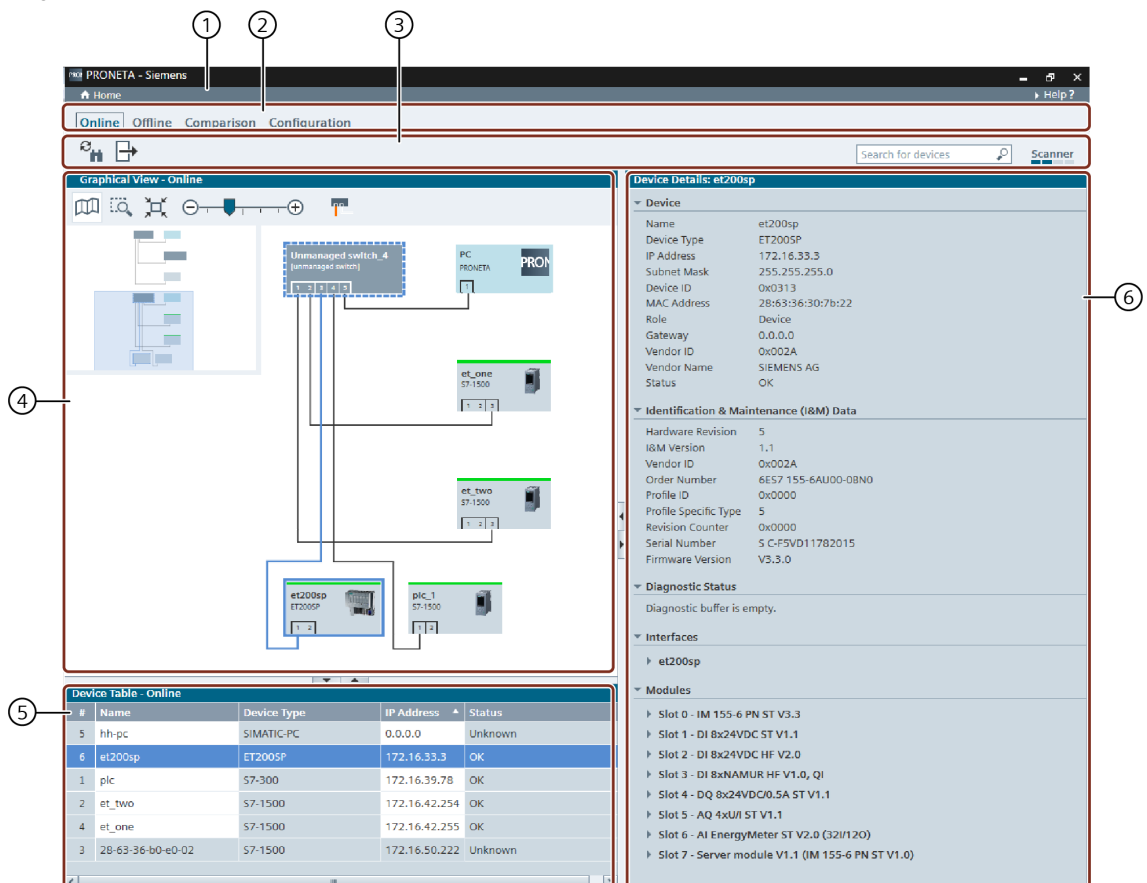

Depending on the task and mode chosen, the function bars and the context menus of the Graphical Views and the Device Tables offer differing functionality. Details can be found in the respective sections of chapter 3 of the [PRONETA Basic User Guide](#).


The relative size of the views can be changed by dragging the border between the panes in the corresponding direction. Panes can be displayed or removed by using the arrow symbols “►”, “◄”, “▲” or “▼”, on their pane border.

Header Bar

The header bar, which is always visible while PRONETA Basic is running, contains two control elements:


- The “Home” button on the left end of the header bar. Clicking on this will always return PRONETA Basic to the start screen.

Figure 3-3

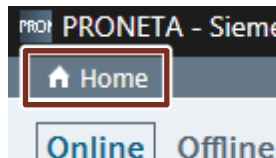

- The “Help?” button on the right end of the header bar. Clicking on it opens a menu with three commands:
 - “Help” opens or closes a frame on the right hand side of the window which brings up context-specific help. (Pressing the “F1” function key at any time offers the same functionality.) For more details, see [Help View](#).
 - “Report a Bug” collects information about the current state of PRONETA Basic and prompts you to submit an error report to SIEMENS to improve PRONETA Basic performance in the future.
 - “Version and Information” opens a small window with information about the PRONETA Basic version you are running. Here, you can also manually check for new updates of PRONETA Basic.

Figure 3-4

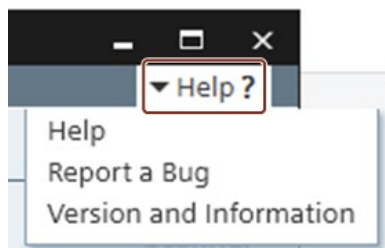

Reporting a Bug

Should you encounter a bug in PRONETA Basic, please use the bug reporting mechanism available through the “Help?” button on the right end of the header bar.

PRONETA Basic will create a diagnostic dump of its current state and prepare an e-mail to be sent to the PRONETA Basic support team with that dump attached. (Creating the dump will take a few moments.)

You will support the constant improvement of PRONETA Basic, if you add further information to this message before sending it, like the exact problems and circumstances of the error, and contact details for possible questions.

3.1.2 Help View

The PRONETA Basic Online Help is toggled by selecting the "Help" entry from the "Help?" drop-down menu on the right end of the header bar, or by pressing "F1" at any time. A Help View is opened on the right side of the PRONETA Basic window, where you can browse through the help topics by scrolling, following the links, or selecting entries from the table of contents. The view size can be changed by dragging the pane border to the left or the right.

The help provides the same information as this manual.

Function Bar

The Help View header consists of a function bar with four functions:


Table 3-1

Icon	Name	Function
	Show Table of Contents	Toggles a view of the table of contents
	Show Previous Topic	Goes to the previous topic in the browsing history
	Show Next Topic	Goes to the next topic in the browsing history
	Search in Help	Toggles a Search View inside the Help View

Help View Contents

The Help View consists of one or two elements arranged left to right. Beside the main help topic (1), to the left there is an optional second pane (2) which displays either the table of contents or the search view.

Figure 3-5

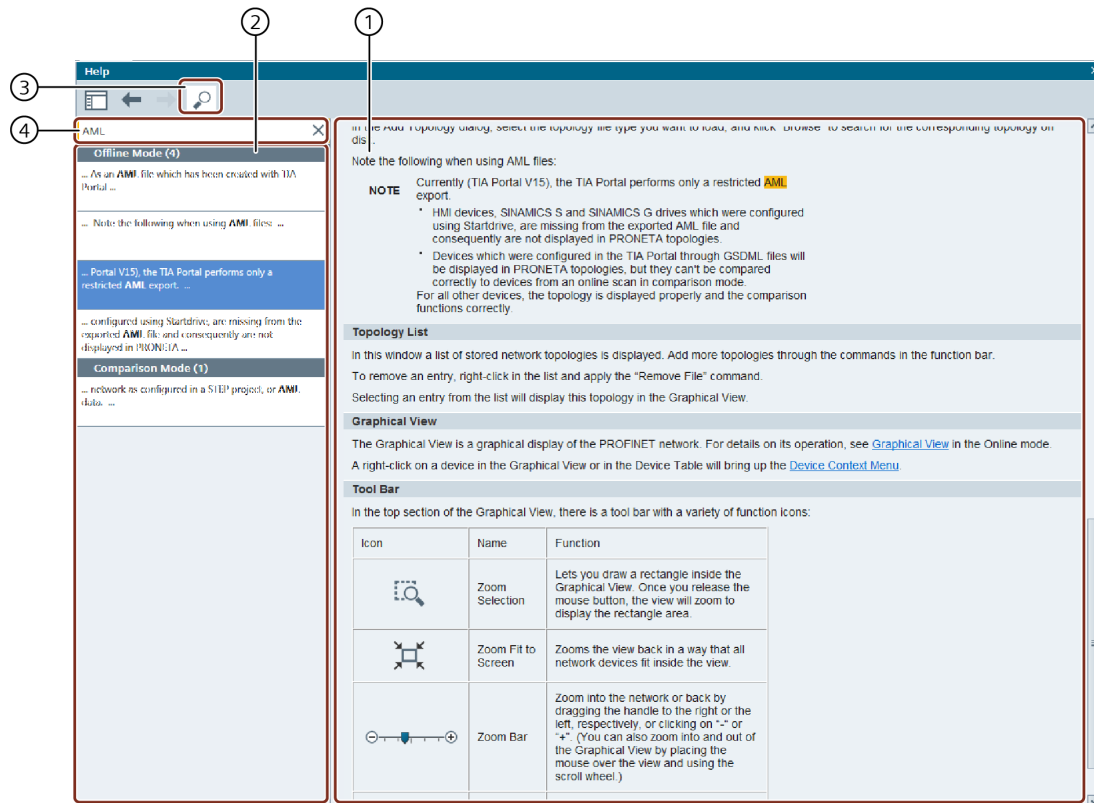

Search

Clicking on the "Search in Help" icon (3) in the header bar will turn the search view on and off.

Upon entering a search term in the search field (4), PRONETA Basic will perform a full text search across the complete help contents, displaying a results list below the search field. Click on one of the result entries to jump to the corresponding topic in the main help topic, where the search term found will be highlighted.

Search is case-insensitive and does not allow for wildcards or regular expressions. A search for "opolo" will find both "topology" and "TOPOLOGIES".

Clicking on the "x" symbol at the right end of the search field (4) clears the search term and all search results.

Table of Contents

Clicking on any topic in the table of contents will jump to the corresponding help topic.

Help Topics

A view of the currently selected help topic. Use the scroll bar on the right side to navigate up and down in the help topic.

To close the Help View, do one of the following:

- Click on the "x" symbol in the top right corner of the view's title bar.
- Hit "F1".
- Select "Help" from the "Help?" menu in the top right corner of the PRONETA Basic window.

3.2 Network Analysis Task

PRONETA Basic's Network Analysis gives you a quick overview about which devices are installed in your PROFINET network, and how they are connected with each other. The Network Analysis also lets you view and change various network parameters of the devices, like IP addresses, device names etc.

Different networks can be compared with each other, and the devices can be configured automatically or manually.


3.2.1 Online Mode

In Online mode, PRONETA Basic will scan the PROFINET network for present devices, in either a single sweep or continuously. The main screen is divided in three sections:

- A [Graphical View](#) (1)
- A [Device Table](#) (2) of accessible devices
- The [Device Details](#) (3) showing the parameters of a particular device

Display of the Device Table and Device Details can be toggled by clicking on the respective triangle icons on the separator bands in the PRONETA Basic window.

Figure 3-6

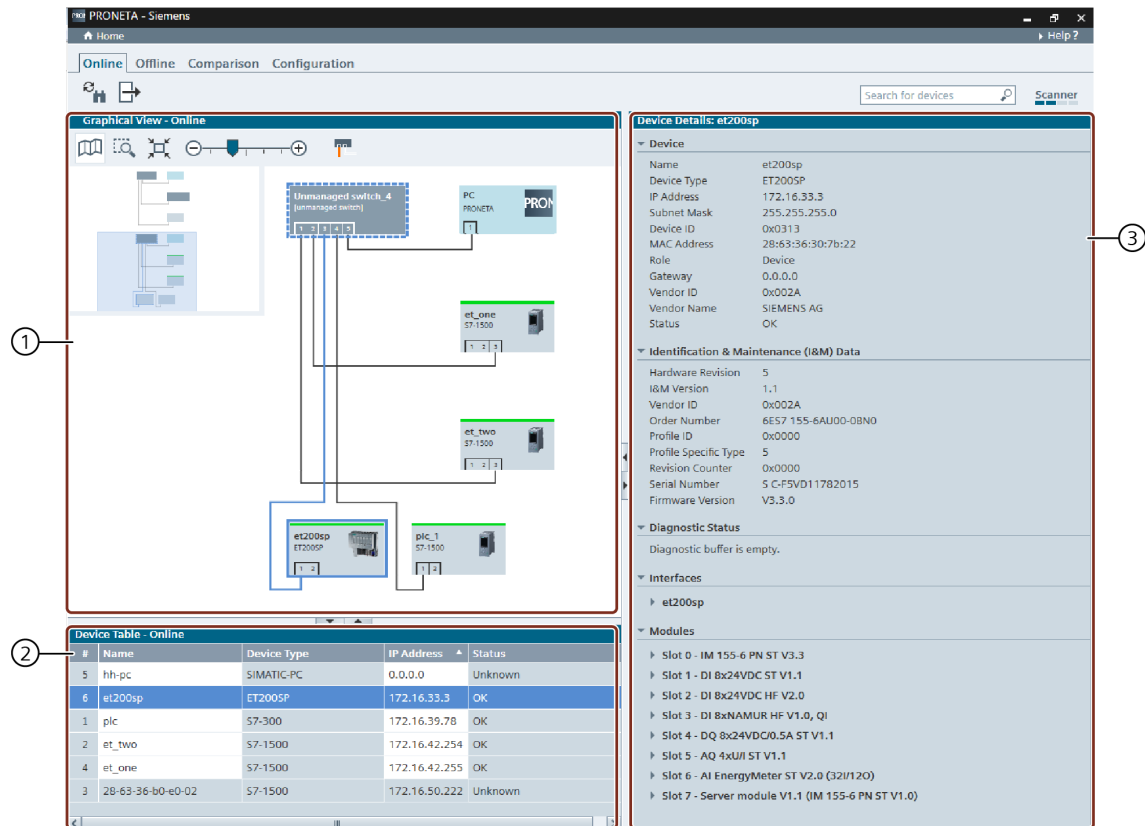**NOTE**

If the network size exceeds 500 devices, not all devices may be reliably detected during a scan. Crashes of PRONETA Basic may occur in this case.

Function Bar

The following functions are available in the function bar:

Table 3-2

Icon	Name	Function
	Refresh	Performs an immediate update of the network scan.
	Export Topology	Performs a Topology Export to disk.

Topology Export


A topology export can be performed in several different formats:

- As an XML file, for later use as a reference [Topology File](#) when working in [Offline Mode](#), [Comparison Mode](#) or [Configuration Mode](#), for example to quickly and conveniently duplicate a configuration.
- For documentation purposes to create reference files documenting the state of the network:
 - As a graphic of the network configuration (PNG (preferred format), BMP, or XPS).
 - As a CSV file with information from the Device Table for further processing with a spreadsheet application, like Microsoft Excel.
 - As a PDF with a combination of topology graphic and Device Table, for documentation and archiving of the configuration.

This is useful to:

- Quickly establish the required hardware when a network configuration is to be duplicated, and to
- Document and easily reference information about all plugged devices and modules, including detailed information like order number, Firmware Version and serial number, employed in a certain installation.

Figure 3-7

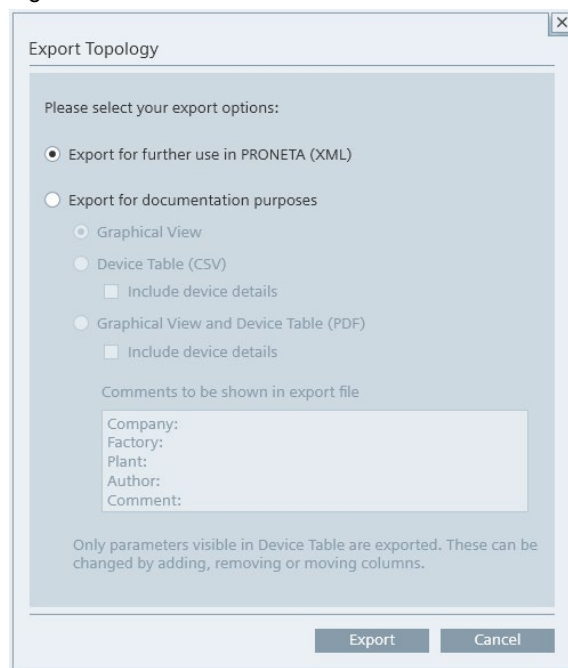

The option “Include device details” will add information about port configurations and modules to the resulting file.

The data fields contained in an exported configuration are the same as the fields currently visible in the corresponding [Device Table](#).

Figure 3-8

#	Name	Device Type	IP Address	Firmware	Hardware	Status	#	Name	IP Address	Port ID	Port Descr	Partner P	Partner D	Power Bu	#	Mc
1	plc	S7-300	172.16.39.78	V3.2.6		1 OK		1	plc	172.16.39.78	1 port-001	Siemens S	port-001	comfort 12"		
2	comfort 1	SIMATIC-1	172.16.34.1	V15.0.0		0 OK		1	comfort 1	172.16.34.1	1 port-001	SOC1 Port 1				
3	et_two	S7-1500	172.16.42.254	R28.29.29		10011 OK		1	et_two	172.16.42.254	2 port-002	SOC1 Port port-001	28-63-36-b0-e0-02			
4	kalliope	S7-PC	172.16.1.50			Unknown										
5	28-63-36-b0-e0-02	S7-1500	172.16.50.222	V2.1.0		3 Unknown		1	28-63-36-b0-e0-05	1 port-001	Siemens, port-002	comfort 12"				
6	et_one	S7-1500	172.16.42.255	V2.5.2		3 OK		1	et_one	172.16.42.255	2 port-002	Siemens, SIMATIC S7, Ethernet Port, X1 P2R				
7	hh-pc	SIMATIC-1	172.16.34.2			OK		1	hh-pc	172.16.34.2	3 port-003	Siemens, port-001	plc_1			
8	et200sp	ET200SP	172.16.33.3	V3.3.0		5 OK		1	et200sp	172.16.33.3	1 port-001	Berichtet	port-002	comfort 12"		
											2 port-002	Siemens, port-003	et_one		0 IM	
															1 DI	
															2 DI	
															3 DI	
															4 DC	
															5 AC	

When including the Graphical View, the network topology representation will be distributed over several pages in the PDF, if the network is sufficiently large.

Figure 3-9

#	Name	Device Type	IP Address	Status
1	plc	S7-300	172.16.39.78	OK
2	etxbtwoc6a7	S7-1500	172.16.42.254	OK
3	28-63-36-b0-e0-02	S7-1500	172.16.50.222	Unknown
4	etxbone565c	S7-1500	172.16.42.255	OK
5	hh-pc	SIMATIC-PC	0.0.0.0	Unknown
6	et200sp	ET200SP	172.16.33.3	OK
7	plcxb1d0ed	S7-1500	172.16.33.2	OK

Depending on the current mode, only some of the export options will be available:

Table 3-3


	Online	Offline	Comparison	Configuration
XML	X	-	-	-
Graphical View	X	X	X	-
Device Table (CSV)	X	X	X	-
Graphical View + Device Table (PDF)	X	X	-	-

Device Search

To the right of the function bar, there is an input box (1) which allows you to search for particular devices. The search term you enter will be matched against all information fields (e.g. device names, types, network parameters, ...).


Search is case-insensitive and does not allow for wildcards or regular expressions.

Figure 3-10

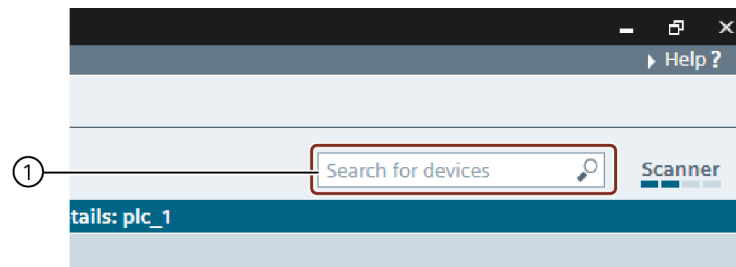

Matches of your search are highlighted in the [Graphical View](#) (1) and the [Device Table](#) (2) by orange shading.

Figure 3-11

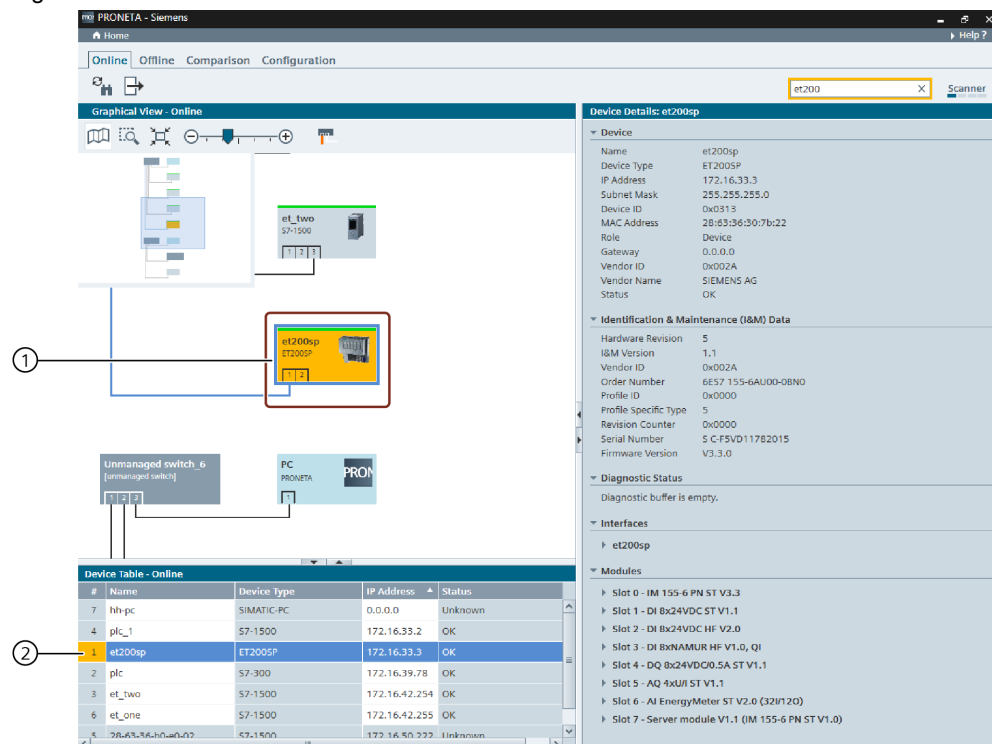

Scanner Status Indicator

On the far right of the function bar, there is a scanner status indicator (1) which displays the status of the current network scanning cycle.

Each network scanning cycle is divided into four phases, represented by the segments of the scanner status indicator. A network scan is complete when the indicator has gone through all four segments.

A right-click on the status indicator brings up a context menu with one item:

Figure 3-12

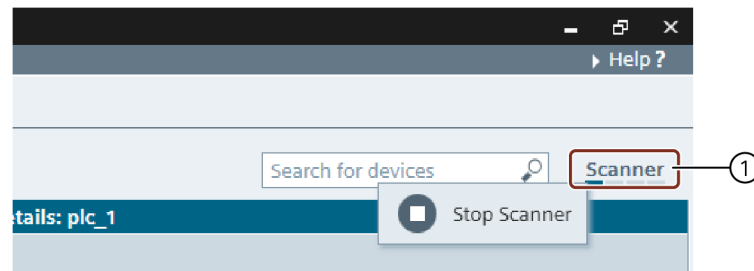


Table 3-4

Icon	Name	Function
	Start Scanner	Toggles the network scan: If it is currently running, it will be stopped, and vice versa.
	Stop Scanner	

While the scanner is stopped, no network load is generated, and no changes to the topology are acquired. In the [General Settings](#) dialog you can control whether PRONETA Basic will scan the network only once or continuously upon start of the scanner.

Graphical View

The Graphical View is a graphical display of the PROFINET network, its devices and their connections to each other either during a current network scan or from a previously stored reference network. The Graphical View occupies the top left corner of the PRONETA Basic window.

While over empty space, clicking and subsequent dragging will shift the visible network segment. Hovering the mouse pointer over a device will change the open hand to an arrow and bring up a [Device Tooltip](#) with basic information about that device.

Device Display

The device status is indicated by different colors of the device symbol and its borders:

- Field colors:
 - Grey with a green bar on top: Regular network device
 - Light grey with a green bar on top: Device connected to different subnet
 - Dark grey: Network device without valid IP address or without valid device name, or generic PC
 - Light blue: PC with active PRONETA Basic or STEP 7
 - Yellow: Device matching the [Device Search](#)

- Borders
 - Orange: Device parametrization conflict (duplicate IP address or device name)
 - Dark blue: Selected device and corresponding connections

Tool Bar

In the top section of the view, there is a tool bar with a variety of function icons:

Table 3-5

Icon	Name	Function
	Show Overview of Topology	Toggles a topology overview within the Online View. (See Topology Overview)
	Zoom Selection	Lets you draw a rectangle inside the Graphical View. Once you release the mouse button, the view will zoom to display the rectangle area.
	Zoom Fit to Screen	Zooms the view back in a way that all network devices fit inside the view.
	Zoom Bar	Zoom into the network or back by dragging the handle to the right or the left, respectively, or clicking on “-” or “+”. (You can also zoom into and out of the Graphical View by placing the mouse over the view and using the scroll wheel.)
	Show Physical Connection Types	Indicates different transmission mediums used in different colors. (See Device Connection Types)

Topology Overview

The Topology Overview is a view in the top left segment of the Graphical View which helps with the examination of large networks. It shows a schematic of all devices found during the current network scan, regardless of the zoom factor selected for the Online View.

The network segment currently visible in the Online View is indicated by a light blue partly transparent rectangle. Drag the rectangle across the Topology Overview to move the visible network segment in the Online View.

Drag the right or bottom border of the Topology Overview to change the size of the view.

Device Connection Types

If the option “Show Physical Connection Types” from the tool bar has been selected, connections between devices are color-coded as follows:

- Black: Copper Ethernet wiring
- Orange: Fiber optical connection

Two parallel lines indicate a ring topology.


For devices which are displayed without any connection to other devices, the required information could not be gathered.

Device Tooltips

Hovering over a device will bring up a tooltip which displays:

- Device name
- Device type
- IP address
- Firmware Version (where applicable)


Figure 3-13

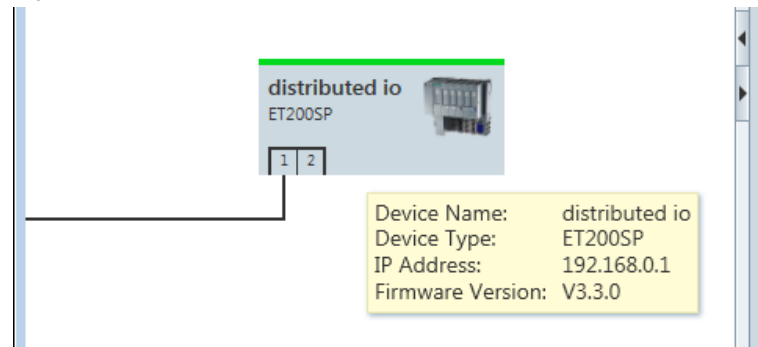

Hovering over a device port displays:

- Interface name
- IP address
- Port ID (for wired connections only)
- Name of the neighbor


Figure 3-14

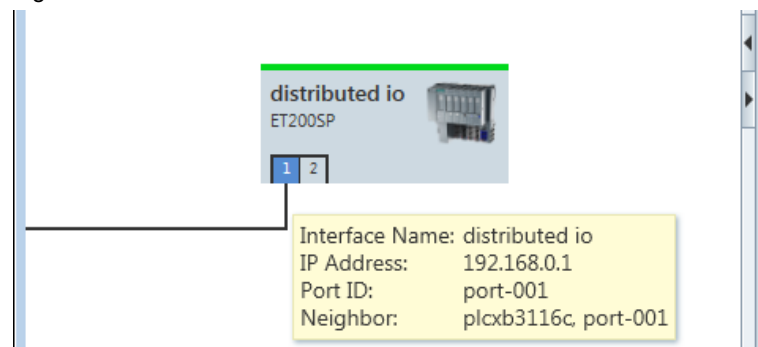

Device Context Menu

By right-clicking on any device in a Graphical View or in the corresponding Device Table, you can bring up a context menu with various functions.

Figure 3-15

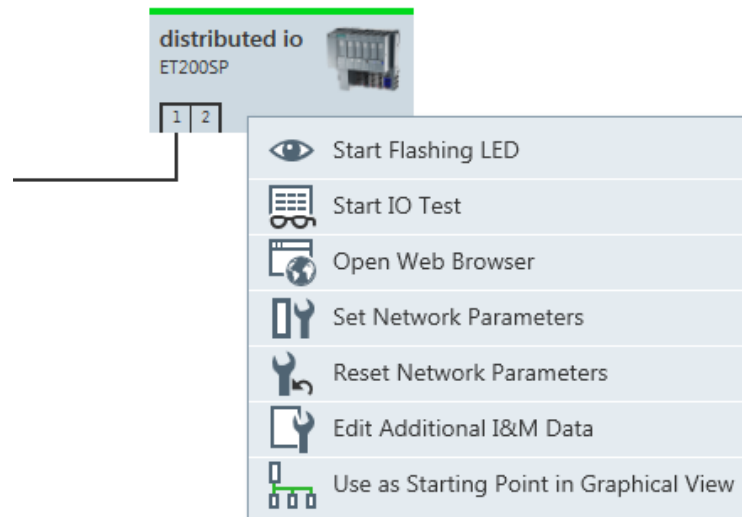

Not all menu entries are available for all devices with the actual entries depending on the state of the device. For example, in the case of scanning of more than one subnet in PRONETA There are only 3 menu items available: “Open Web Browser”, “Edit Additional I&M Data, and “Use as Starting Point in Graphical View”.

Table 3-6

Icon	Name	Function
	Flash LED	Sets the LEDs on the physical device to flashing for easy identification.
	Start IO Test	Immediately launches an IO Test Task with the selected device.
	Open Web Browser	Opens your PC's web browser and establishes a connection to the device's web server.
	Start (Stop) Flashing LED of Duplicates in Name/IP address	Like “Flash LED”, but flashes the LEDs of all devices which share their name and/or IP address with the selected device.
	Set Network Parameters	Opens a popup window which allows you to set various networking parameters of the chosen device. For details, see Set Network Parameters .
	Reset Network Parameters	Performs a factory reset of the device's IP address and device name. If the command is chosen from the Device Table , it is possible to reset several selected devices simultaneously.
	Edit Additional I&M Data	Opens a popup window which lets you enter data concerning identification and maintenance (“I&M”) of the device, like location and date of the installation.
	Use as Starting Point in Graphical View	Redraws the Graphical View with the chosen device in the upper left corner.

Device Table

This table lists the devices found either during your current network scan (Online mode only), or in a stored reference network. It is displayed below the Graphical View of the PRONETA Basic window.

Figure 3-16

Device Table - Online						
#	Name	Device Type	IP Address ▲	Firmware Version	Hardware Revision	Status
7	hh-pc	SIMATIC-PC	0.0.0.0			Unknown
4	plc_1	S7-1500	172.16.33.2	V1.8.1	2	OK
1	et200sp	ET200SP	172.16.33.3	V3.3.0	5	OK
2	plc	S7-300	172.16.39.78	V3.2.6	1	OK
3	et_two	S7-1500	172.16.42.254	R28.29.29	10011	OK
6	et_one	S7-1500	172.16.42.255	V2.5.2	3	OK
5	28-63-36-b0-e0-02	S7-1500	172.16.50.222	V2.1.0	3	Unknown

The table can display a large amount of different device data. Right-click anywhere in the table header fields to bring up a menu from which you can select the information fields you wish to display.


Figure 3-17

The screenshot shows the PRONETA - Siemens software interface. At the top, there are tabs for 'Home', 'Online', 'Offline', 'Comparison', and 'Configuration'. Below these is the 'Graphical View - Online' section, which displays a network diagram with various devices connected. A context menu is open over the 'Device Table - Online' section, listing various fields that can be displayed. The 'Device Table - Online' section shows a table with columns: #, Name, Device type, IP address, Status, and others. The table contains several entries, including 'es10', 'plc_1', and 'et200sp'. The 'Status' column shows 'OK' for most devices. The context menu lists the following fields: Name (checked), DNS Name, Device type (checked), IP address (checked), Subnet mask, Device ID, MAC address, Role, Gateway, Vendor ID, Vendor Name, Order Number, Firmware Version, Hardware Revision, Serial number, Plant Designation, Location Designation, Installation Date, Comment, Error Frames, and Status (checked).

#	Name	Device type	IP address	Status
5	es10	SIMATIC-PC	172.16.32.1	OK
4	plc_1	S7-1500	172.16.33.2	OK
1	et200sp	ET200SP	172.16.33.3	OK

Orange borders around table cells indicate duplicate device names or IP addresses.

Figure 3-18

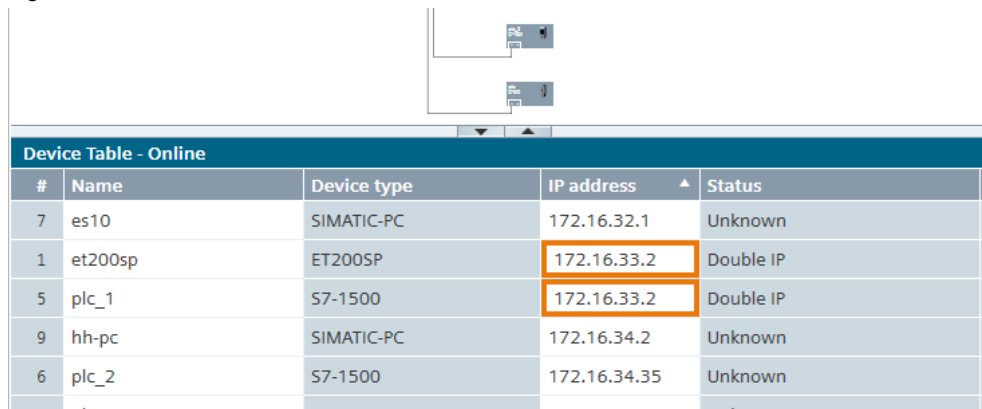

#	Name	Device type	IP address ▲	Status
7	es10	SIMATIC-PC	172.16.32.1	Unknown
1	et200sp	ET200SP	172.16.33.2	Double IP
5	plc_1	S7-1500	172.16.33.2	Double IP
9	hh-pc	SIMATIC-PC	172.16.34.2	Unknown
6	plc_2	S7-1500	172.16.34.35	Unknown

White cells inside the table allow information to be entered. The new values will be written to the respective device immediately when the cell loses focus. (This is an alternative way to the use of the context menu entry “[Set network parameters](#)”).

A left click on a column header will sort the table according to the data in this column in ascending order, another click reverses the order. Small triangles “▲” or “▼” in the column header indicate the sorting criterion.

Dragging a column header with the mouse rearranges the table columns accordingly.

Right-clicking on any table entry brings up the current device context menu.

Device Details

In the right part of the PRONETA Basic window, a details view is displayed.

This view shows additional device information for a device which has previously been selected in the [Device Table](#).


Branches of the tree of device properties can be opened and collapsed by clicking the triangular symbol of the corresponding branch.

Figure 3-19

Device Details: et200sp	
▼ Device	
Name	et200sp
Device Type	ET200SP
IP Address	172.16.33.3
Subnet Mask	255.255.255.0
Device ID	0x0313
MAC Address	28:63:36:30:7b:22
Role	Device
Gateway	0.0.0.0
Vendor ID	0x002A
Vendor Name	SIEMENS AG
Status	OK
▼ Identification & Maintenance (I&M) Data	
Hardware Revision	5
I&M Version	1.1
Vendor ID	0x002A
Order Number	6ES7 155-6AU00-0BN0
Profile ID	0x0000
Profile Specific Type	5
Revision Counter	0x0000
Serial Number	S C-F5VD11782015
Firmware Version	V3.3.0
▼ Diagnostic Status	
Diagnostic buffer is empty.	
▼ Interfaces	
▶ et200sp	
▼ Modules	
▼ Slot 0 - IM 155-6 PN ST V3.3	
Module Description	Interface module with PROFINET interface V2.3 (RT/IRT) with cycle time starting at 250 µs, PN connection method selectable via BusAdapter, 32 I/O modules including F modules; media redundancy (MRP); configuration control via PLC; module replacement during operation; start with gaps; supports PROFinenergy; shared device with up to 2 PROFINET controllers; supports MSI/MSO; station extension via ET-Connection; user data up to max. 256 bytes per I/O module; supports module distribution; firmware V3.3
Vendor ID	0x002A
Vendor Name	SIEMENS AG
Order Number	6ES7 155-6AU00-0BN0
Serial Number	S C-F5VD11782015

If you have activated the scanner function “Read out diagnostic information for all devices” in the [General Settings](#) and the diagnostic buffer is not empty, the device in the “Graphical view” is marked by a number of failures (1, 2, ..., 9+). The tooltip shows the actual number of entries (1, 2, ...n).

Figure 3-20

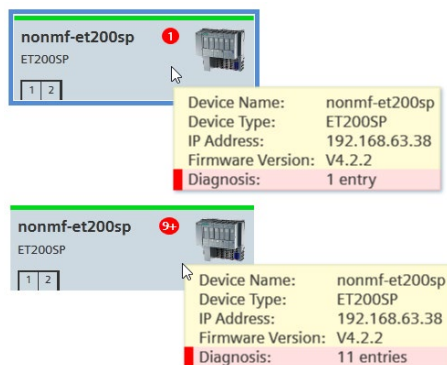

The device in the Device Table is marked by a red strip and the tooltip shows information about where to find details for the entries in the diagnostic buffer.

Figure 3-21

#	Name	Device Type
1	nonmf-et200sp	ET200SP

There is 1 entry in the diagnostic buffer. For details, click on the device and go to the "Diagnostic Status" section in the device details.

#	Name	Device Type
1	nonmf-et200sp	ET200SP

There are 11 entries in the diagnostic buffer. For details, click on the device and go to the "Diagnostic Status" section in the device details.

The device property "Interfaces" shows port specific information including the statistics for sent and received frames:

Figure 3-22

Interfaces	
▼ nonmf-et200sp	
▼ port-001	
Port ID	port-001
Port Description	Siemens, SIMATIC S7, Ethernet Port, X1 P1 R
State	Up
Partner Port ID	port-001
Partner MAC Address	18:0f:76:fa:d3:a7
Partner Device Name	PC
Cable Delay [ns]	0
Frames (In)	131750
Frames (Out)	29994
Rejected Frames (In)	0
Rejected Frames (Out)	0
Error Frames (In)	0
Error Frames (Out)	0
MAU Type	100Base-TX-FD
Medium Type	Copper Cable

For PROFINET devices which provide an Asset Management Record (AMR), data from the AMR is displayed in the Device Details, too.

For IO-Link devices, their port status is included in the Device Tables.

Figure 3-23

▼ Slot 2 - CM 4xIO-Link V2.2 32I/32O	
Module Description	IO-Link master CM 4xIO-Link, 4 Ports; degree of protection IP20; width 15mm; for connecting IO-Link devices; configurable diagnostics; supports PROFlenergy; Port parameter assignment performed with GSD file or port configuration tool (S7-PCT)
Vendor ID	0x002A
Vendor Name	SIEMENS AG
Order Number	6ES7 137-6BD00-0BA0
Serial Number	S C-D6VK64452013
Firmware Version	R22.0.8
Hardware Revision	1
▼ IO Link port 1	
Device ID	0x800082
Vendor ID	0x001A
Vendor Name	SICK AG
Description	Photoelectric retro-reflex sensor
Order number	1061063
Firmware Version	1.07
Hardware Revision	1.00
Serial Number	14150026
▼ IO Link port 2	
Device ID	0x0000
Vendor ID	0x0000
Vendor Name	-
▼ IO Link port 3	
Device ID	0x0000
Vendor ID	0x0000
Vendor Name	-
▼ IO Link port 4	
Device ID	0x0000
Vendor ID	0x0000
Vendor Name	-

PROFlenergy-conformant devices have their specific status data displayed here as well.

Figure 3-24

▼ PROFlenergy	
Current Mode	Ready to Operate
Remaining Time until Target Mode	0 ms
Current Energy Consumption	2,000 kWh
Supported Functionality	Standby Management
PROFlenergy Version	1.1
Supported Modes	Energy Saving: Mode 1
	Ready to Operate

Set Network Parameters

This popup window allows the immediate input of the following parameters for an individual device:

- Device name
- Static or DHCP IP configuration

Plus, where applicable:

- IP address
- Network mask
- Address of the gateway router

Checking the box “Apply settings permanently” will ensure that the new parameters are retained across a power-off of the device.

Figure 3-25

Set Network Parameters

Please select your network parameters

☒ Assign Device Name

☐ IP Configuration

☒ Static IP Configuration

IP Address

Network Mask

☐ Use router for gateway

☐ Obtain IP configuration from a DHCP server and identified by

☐ MAC address

☐ Device Name

☒ Client ID

Devices connected to an enterprise network or directly to the internet must be appropriately protected against unauthorized access, e.g. by use of firewalls and network segmentation. For more information about industrial security, please visit <http://www.siemens.com/industrialsecurity>


☒ Apply settings permanently

Set Cancel

3.2.2 Offline Mode

Offline mode allows you to examine a reference network which was previously stored to disk, in much the same manner as in Online mode. The Offline mode is strictly limited to reading operations and will never write to your devices.

Figure 3-26

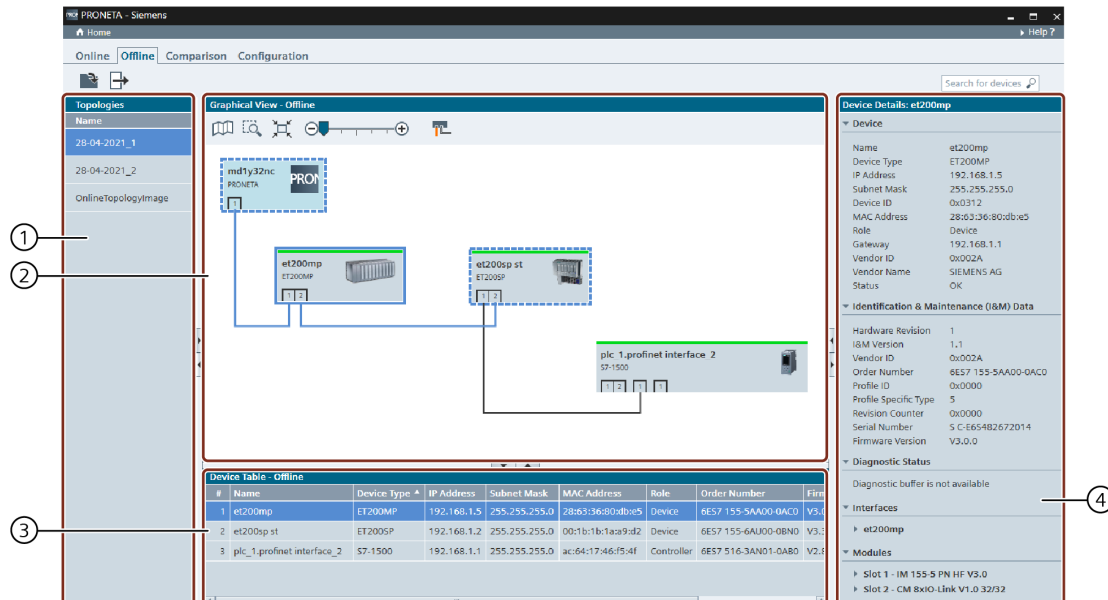

The main screen is divided in:

- A [Topology List](#) (1) of previously stored reference networks
- A [Graphical View](#) (2), and
- A [Device Table](#) (3) and [Device Details](#) (4) similar to the ones used in [Online Mode](#) which provide information about devices stored in the selected topology.

The relative size of the views can be changed by dragging the border between the panes in the corresponding direction. Panes can be displayed or removed by using the arrow symbols “►”, “◄”, “▲” or “▼”, on their pane border.

Function Bar

The following functions are available in the function bar:

Table 3-7


Icon	Name	Function
	Add Topology File	Adds a previously stored topology to the topologies list.
	Export Topology	Performs a Topology Export to disk.

Topology Import

Topologies can be loaded from a storage medium into PRONETA Basic in one of three formats:

- As an XML file which has previously been stored from PRONETA Basic
- As an AML file which has been created with TIA Portal
- As a STEP 7 project (versions 5.4, 5.5 or 5.6)

Figure 3-27

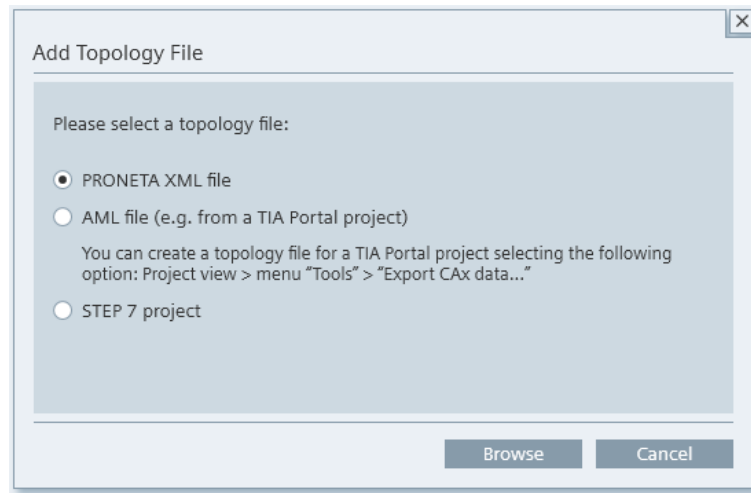

In the “Add Topology File” dialog, select the topology file type you want to load, and click “Browse” to search for the corresponding topology on a storage medium.

Note the following when using AML files:

NOTE

Currently (TIA Portal V15.1), the TIA Portal performs only a restricted AML export.

- HMI devices, SINAMICS S and SINAMICS G drives which were configured using Startdrive, are missing from the exported AML file and consequently are not displayed in PRONETA Basic topologies.
- Devices which were configured in the TIA Portal through GSDML files will be displayed in PRONETA Basic topologies, but they can't be compared correctly to devices from an online scan in comparison mode.

For all other devices, the topology is displayed properly and the comparison functions correctly.

Topology List

In this window a list of stored network topologies is displayed. Add more topologies through the commands in the function bar.

To remove an entry, right-click in the list and apply the “Remove File” command.

Selecting an entry from the list will display this topology in the Graphical View.

Graphical View

The Graphical View is a graphical display of the PROFINET network. For details on its operation, see [Graphical View](#) in the Online mode.

A right-click on a device in the Graphical View or in the Device Table will bring up the [Device Context Menu](#).

Tool Bar

In the top section of the Graphical View, there is a tool bar with a variety of function icons:


Table 3-8

Icon	Name	Function
	Show Overview of Topology	Toggles a topology overview within the Online View. (See Topology Overview)
	Zoom Selection	Lets you draw a rectangle inside the Graphical View. Once you release the mouse button, the view will zoom to display the rectangle area.
	Zoom Fit to Screen	Zooms the view back in a way that all network devices fit inside the view.
	Zoom Bar	Zoom into the network or back by dragging the handle to the right or the left, respectively, or clicking on “-” or “+”. (You can also zoom into and out of the Graphical View by placing the mouse over the view and using the scroll wheel.)
	Show Physical Connection Types	Indicates the transmission medium used in different colors. (See Device Connection Types)

3.2.3 Comparison Mode

Comparison mode serves to compare two networks with each other – usually one will be the physical network as found during the current network scans, and the other one will be a reference network. The reference network in turn can be a saved topology file of a network scan, a network as configured in a STEP 7 project, or AML data.

Figure 3-28

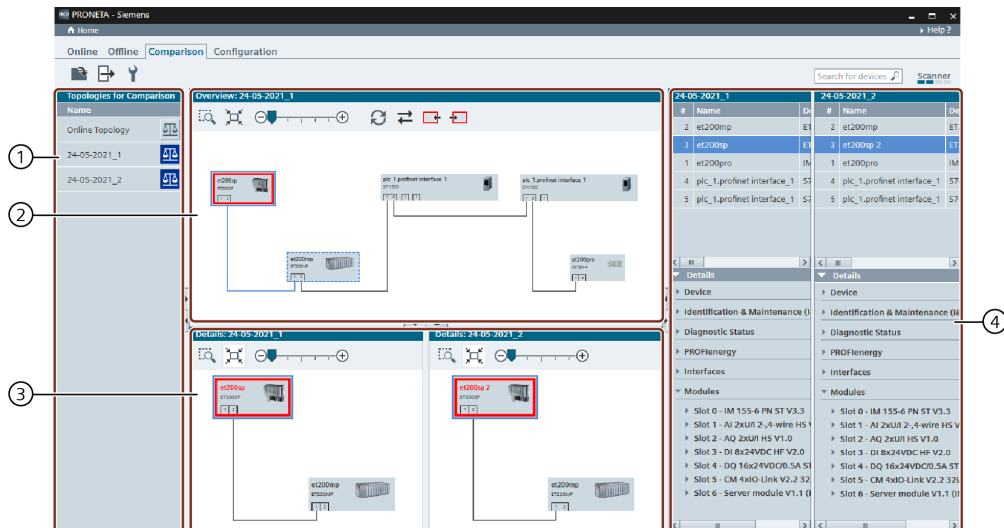

The main screen is separated into:

- A [Topologies List](#) (1) of “Topologies for Comparison”
- One major (2) and two smaller (3) Graphical Views
- Two [Device Tables](#) (4) with the devices stored in the selected topologies

The relative size of the views can be changed by dragging the border between the panes in the corresponding direction. Panes can be displayed or removed by using the arrow symbols “►”, “◄”, “▲” or “▼”, on their pane border.

Function Bar

The following functions are available in the Function Bar:

Table 3-9


Icon	Name	Function
	Add Topology File	Adds a previously stored topology to the topologies list.
	Export Topologies	Performs a Topology Export to disk.
	Set Comparison Criteria	Selects filter setting for the device comparison.

On the far right of the Function Bar, there are the [Device Search](#) and the [Scanner Status Indicator](#).

Set Comparison Criteria

The comparison criteria determine which device parameters are used in establishing differences between topologies or devices. Two devices are considered “counterparts” to each other only if they have the same values for all the parameters checked in this dialog, and if they fall within the IP address range chosen, if one is defined.

Figure 3-29

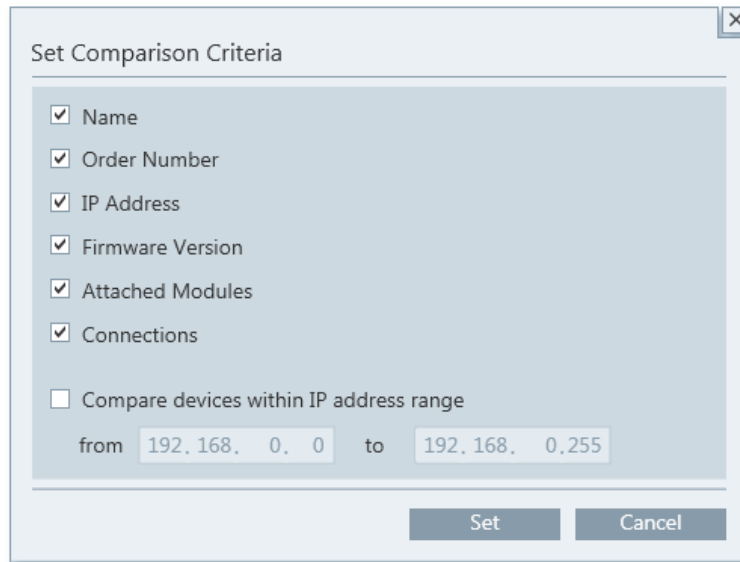

Topology List

In this window the current online topology and a list of stored network topologies for comparison is displayed. Add more topologies through the commands in the function bar.

To remove an entry, right-click in the list, and apply the “Remove File” command.

To compare two of the topologies from the list with each other, select both balance icons to the right of the respective topology names. The top entry of the pair will be displayed in the Graphical View and compared to the bottom entry.

The list of topologies displayed here is retained between PRONETA Basic sessions.

Graphical View

The Graphical View is a graphical display of the PROFINET network. For details on its operation, see [Graphical View](#) in the Online mode.

Display of Devices without a Counterpart

For devices with a red border, no equivalent counterpart was found in the other topology. Equivalency is determined by the parameters configured through [Set Comparison Criteria](#).


Graphical Views “Overview” and “Details”

The larger view shows an overview of the top network chosen in the topologies list.

Below the Overview are two topology Detail Views which highlight any device selected in the overview or the Device Table; the left detail view showing the device in the first topology, the right one showing the corresponding topology configuration in the second one (if there is any).

A red border around a device symbol indicates that differences between the devices in the first and the second network exist.

Figure 3-30

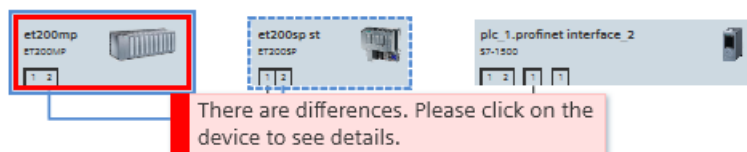

Hovering over such a symbol in either of the detail views brings up a tooltip with more details about the differences.

Figure 3-31

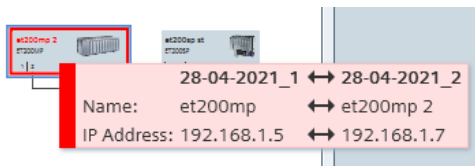


Figure 3-32

Module Comparison	
Online Topology: et200sp	08-10-2019_2: et200sp
1 Name: DI 8x24VDC ST V1.1 Order Number: 6ES7 131-6BF00-0BA0 Firmware Version: V1.1.1	1 Name: DI 8x24VDC ST V1.1 Order Number: 6ES7 131-6BF00-0BA0 Firmware Version: V1.1.1
2 Name: DI 8x24VDC HF V2.0 Order Number: 6ES7 131-6BF00-0CA0 Firmware Version: V2.0.0	2 Name: DI 8x24VDC HF V2.0 Order Number: 6ES7 131-6BF00-0CA0 Firmware Version: V2.0.0
3 No module plugged	3 Name: DI 8xNAMUR HF V1.0, QI Order Number: 6ES7 131-6TF00-0CA0 Firmware Version: V1.0.0
4 Name: DQ 8x24VDC/0.5A ST V1.1 Order Number: 6ES7 132-6BF00-0BA0 Firmware Version: V1.1.3	4 Name: DQ 8x24VDC/0.5A ST V1.1 Order Number: 6ES7 132-6BF00-0BA0 Firmware Version: V1.1.3
5 Name: AQ 4xU/I ST V1.1 Order Number: 6ES7 135-6HD00-0BA1 Firmware Version: V1.1.0	5 Name: AQ 4xU/I ST V1.1 Order Number: 6ES7 135-6HD00-0BA1 Firmware Version: V1.1.0
6 Name: AI EnergyMeter ST V2.0 (32I/12O) Order Number: 6ES7 134-6PA00-0BD0 Firmware Version: V2.0.1	6 Name: AI EnergyMeter ST V2.0 (32I/12O) Order Number: 6ES7 134-6PA00-0BD0 Firmware Version: V2.0.1
7 Name: Server module V1.1 (IM 155-6 PN ST V1.1) Order Number: 6ES7 193-6PA00-0AA0 Firmware Version: V1.1.0	7 Name: Server module V1.1 (IM 155-6 PN ST V1.1) Order Number: 6ES7 193-6PA00-0AA0 Firmware Version: V1.1.0

Differences may be the network configuration, module status etc., as configured through [Set Comparison Criteria](#).

Tool Bar

In the top section of the view, there is a tool bar with a variety of function icons:

Table 3-10

Icon	Name	Function
	Zoom Selection	Lets you draw a rectangle inside the Graphical View. Once you release the mouse button, the view will zoom to display the rectangle area.
	Zoom Fit to Screen	Zooms the view back in a way that all network devices fit inside the view.
	Zoom Bar	Zoom into the network or back by dragging the handle to the right or the left, respectively, or clicking on “-” or “+”. (You can also zoom into and out of the Graphical View by placing the mouse over the view and using the scroll wheel.)
	Refresh Comparison	Starts a new scanner cycle of the network. (As opposed to the Online mode, in Comparison mode the Graphical View is <i>not</i> constantly updated.)
	Change Topology Displayed in Overview	Toggles which of the two selected topologies is displayed in the overview.
	Go to Previous Difference	Selects the previous conflict in a comparison (if there is one).
	Go to Next Difference	Selects the subsequent conflict in a comparison (if there is one).

Device Context Menu

By right-clicking on any device in a Graphical View or in the corresponding Device Table, you can bring up a context menu with various functions.

Not all menu entries are available for all devices with the actual entries depending on the state of the device and the device type.

Table 3-11

Icon	Name	Function
	Flash LED	Sets the LEDs on the physical device to flashing for easy identification.
	Reset Network Parameters	Performs a factory reset of the device's IP address and device name. (Available only from the Device Table for devices in the online topology.)
	Use as Starting Point in Graphical View	Redraws the Graphical View with the chosen device in the upper left corner.

Device Tables

On the right side of the Comparison mode window there are two side-by-side device tables. The left table lists the devices found in the first network, while the right table lists the devices of the second network.

Clicking on an entry in either table will focus the corresponding network in the Graphical Views on this device.

3.2.4 Configuration Mode


The Configuration mode provides a semi-automatic mechanism to assign device names from a reference network to all or single devices in a physical network.

This provides a quick and reliable method to configure a large number of identical installations (like a series of switching cabinets). The results can then be checked in the [Comparison Mode](#).

The main screen is divided into:

- A [Topologies List](#) (1)
 - One major (2) and two smaller (3) [Graphical Views](#)¹
 - A [Device Table](#) (4) with the devices stored in the selected topology
- +

Figure 3-33


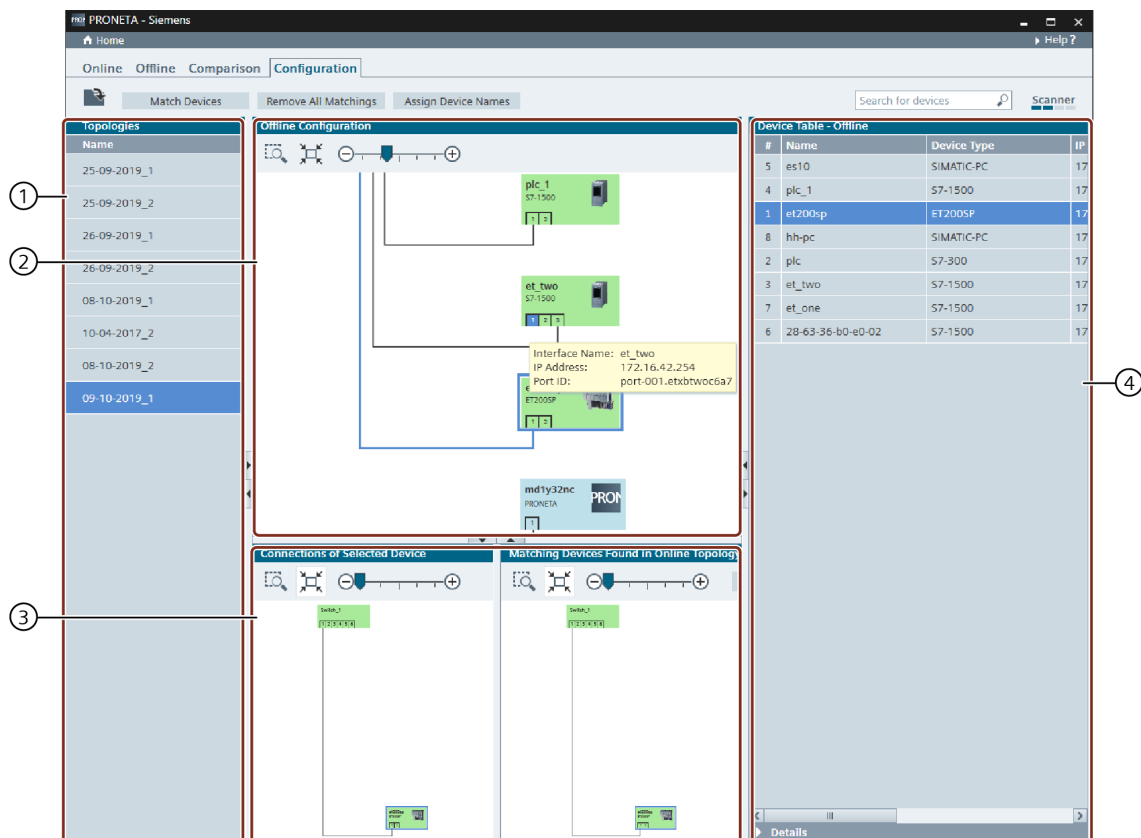


¹ The smaller Graphical View is automatically opened once you have clicked on one of the devices in the main Graphical View or the device tables. You can manually open it by clicking on the arrow symbols on the view divider bar.

Function Bar

The following functions are available in the function bar:

Table 3-12

Icon	Name	Function
	Add Topology File	Adds a previously stored topology to the topologies list.
	Match Devices	Tries to find matches between devices in the reference network and in the physical network according to the Matching Criteria in Configuration Mode ; found matches are highlighted green.
	Remove All Matchings	Discards results from the last matching operation.
	Assign Device Names	Writes the device names from all devices in the reference network, for which a match was found, to the corresponding devices in the physical network.



The last two commands have counterparts in the devices' context menus. There they do not operate on all devices of the network, but only on the selected device.

Graphical View

The Graphical View is a graphical display of the PROFINET network. For details on its operation, see the [Graphical View](#) in Online mode.

Device coloring indicates the device's availability for configuration:

Table 3-13

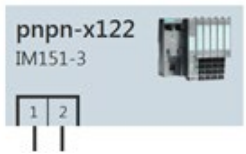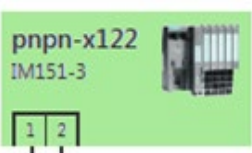Icon	Color	Meaning
	Greyed out	No match for this device from the reference network has been found in the physical network.
	Grey	Matching has not yet been performed, or no unique match for this device has been found in the physical network.
	Green	This device from the reference network has successfully been matched to a device in the physical network, or you have manually matched the devices.

Hovering the mouse pointer over a device will bring up [Device Tooltips](#) with basic information about that device.

Tool Bar

In the top section of the view, there is a tool bar with a variety of function icons:

Table 3-14

Icon	Name	Function
	Zoom Selection	Lets you draw a rectangle inside the Graphical View. Once you release the mouse button, the view will zoom to display the rectangle area.
	Zoom Fit to Screen	Zooms the view back in a way that all network devices fit inside the view.
	Zoom Bar	Zoom into the network or back by dragging the handle to the right or the left, respectively, or clicking on "-" or "+". (You can also zoom into and out of the Graphical View by placing the mouse over the view and using the scroll wheel.)

Device Context Menu

By right-clicking on any device in a Graphical View or in the corresponding Device Table, you can bring up a context menu with various functions.

Not all menu entries are available for all devices with the actual entries depending on the state of the device and the Device Type.

Table 3-15

Icon	Name	Function
	Assign Device Name	Copies the name of the device from the reference topology to its match in the physical network.
	Remove Matching	Discards the results of the matching from the Graphical View.
	Use as Starting Point in Graphical View	Redraws the Graphical View with the chosen device in the upper left corner.

Device Table

This table lists the devices existing in the selected reference network. The handling is similar to the [Device Table](#) in Online mode, but all write operations are disabled.

Finding Matching Devices in Configuration Mode

In this mode, matching between devices is determined based on:

- Device ID
- Vendor ID
- Connections between devices

Note that this is fixed and differs from how differences are being determined in Comparison mode – see [Set Comparison Criteria](#).

3.3 IO Test Task

The IO Test task serves to check the wiring of an IO device even without a programmed CPU, and to protocol the test results in a quick, error-free and simple manner.

NOTE In this chapter all components with testable IO connections are referred to as “modules.” This includes CPUs as well.

NOTE Due to the limitations of Microsoft Windows, PRONETA Basic uses a cycle time of 256 ms for the communication in the IO Test. This means that, if your installation introduces faster signal changes, these may go unobserved and may be missing in the [IO Event Log](#), or will only show up intermittently.


NOTE For Motor Starter units, the IO Test is only supported for firmware versions V1.1 and higher.

Prior to the actual test, a device must be selected in Device Selection mode.

3.3.1 Device Selection Mode

In Device Selection mode, PRONETA Basic shows a symbolic display of all supported devices which were found during the current network scan.


Figure 3-34

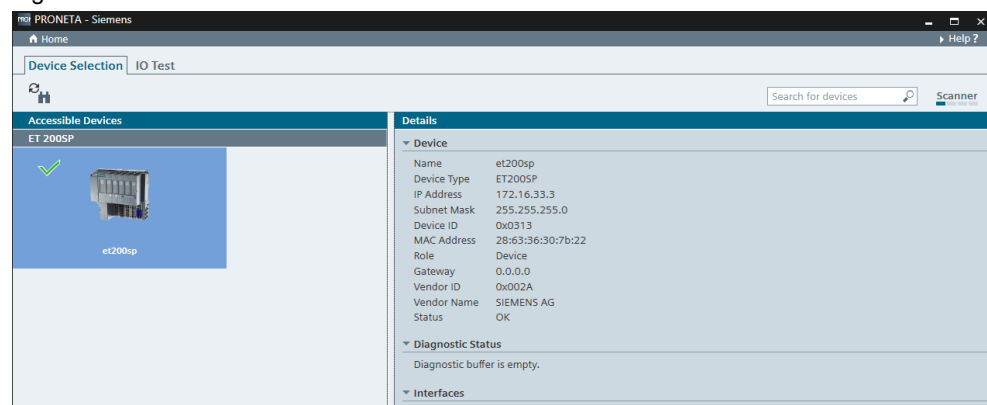

A green checkmark indicates that this device is available for IO Test (i.e. it has a valid IP address and device name). Select the device you want to test by clicking on it. In the right window section, a table with device details (type, network configuration, port and module configuration data, ...) is displayed upon selection, and the selected device is displayed with a blue background.

The crossed out circle indicates circuits that are not available, for example, they are part of another subnet.

Figure 3-35

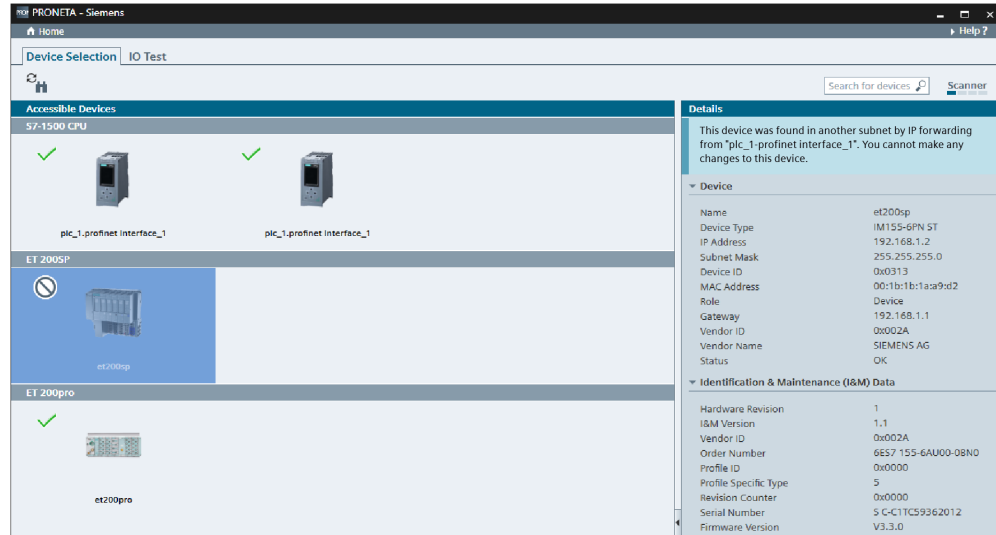

To proceed to the IO Test after selecting a device as test candidate, double-click on the device, or select the "IO Test" tab in the mode bar.

Function Bar

The following function is available in the function bar:

Table 3-16


Icon	Name	Function
	Refresh	Performs an immediate update of the network scan

3.3.2 IO Test Mode

In IO Test mode, the screen consists of two main views:

- “Device View” (1), a graphical representation of the tested device
- The “Details” table (2) which shows you additional information about the tested device and the test in general. The parameters are loaded from GSDM file

Figure 3-36

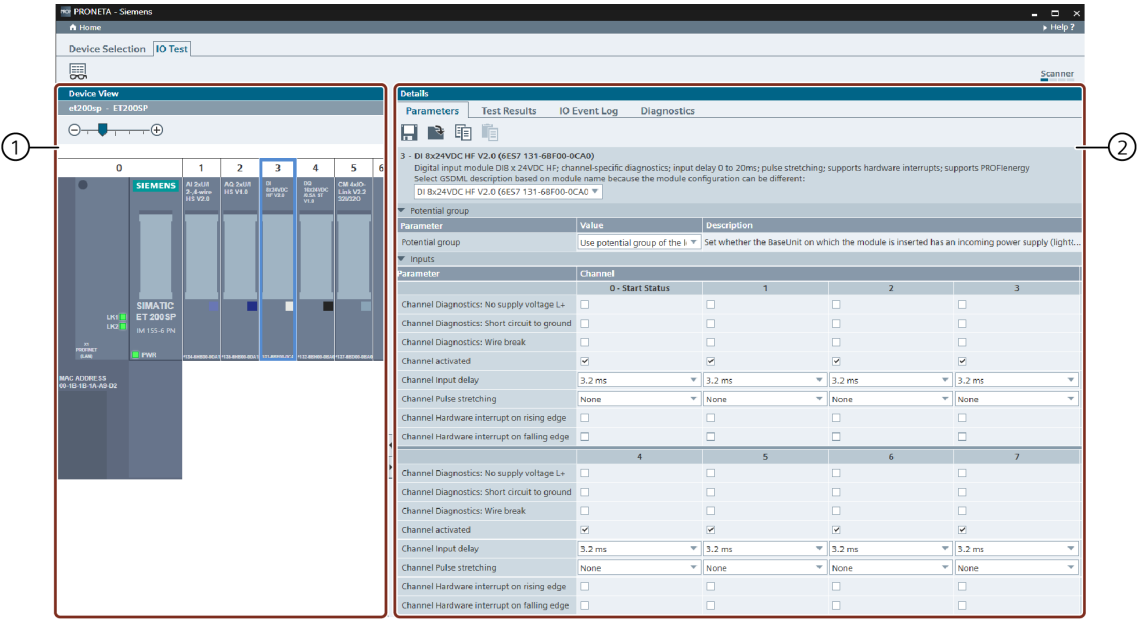

Function Bar

The following function is available in the function bar:

Table 3-17

Icon	Name	Function
	Force and Monitor Values	Activates and deactivates control of the device through PRONETA Basic for the IO Test.



WARNING

Manipulating the interfaces on control components can result in sudden movement of the machinery and the electrification of equipment.

Physical injury and electrical shock to personnel are consequently possible.

Make sure the machinery is in a safe state with no unauthorized personnel within range, before activating the IO Test.

NOTICE

Loss of F-destination addresses

After performing an IO test with PRONETA Basic on a device, the attached F-IO modules will have their F-destination addresses deleted, leading to the module entering a safe state.

In this case, assign the F-destination addresses anew to the F modules concerned using the respective engineering tool.

The test of F-IO modules is per default disabled.

NOTE

To perform an IO Test on distributed IO modules, PRONETA Basic establishes a PROFINET application relation (AR) with the target device. Make sure that no other PROFINET controller occupies this connection.

The state of the IO Test is indicated by the color of the “Device View” and “Details” table header bars:


- Light green indicates the IO Test is active. In addition, the words “Force Mode” appear at the right of the head bar.
- Dark petrol indicates the IO Test is inactive.

Device View

Usage

The device view shows a symbolic representation of the device you selected for the IO Test mode. The status and IO LEDs are updated in real time to reflect the state of the physical device.

Figure 3-37

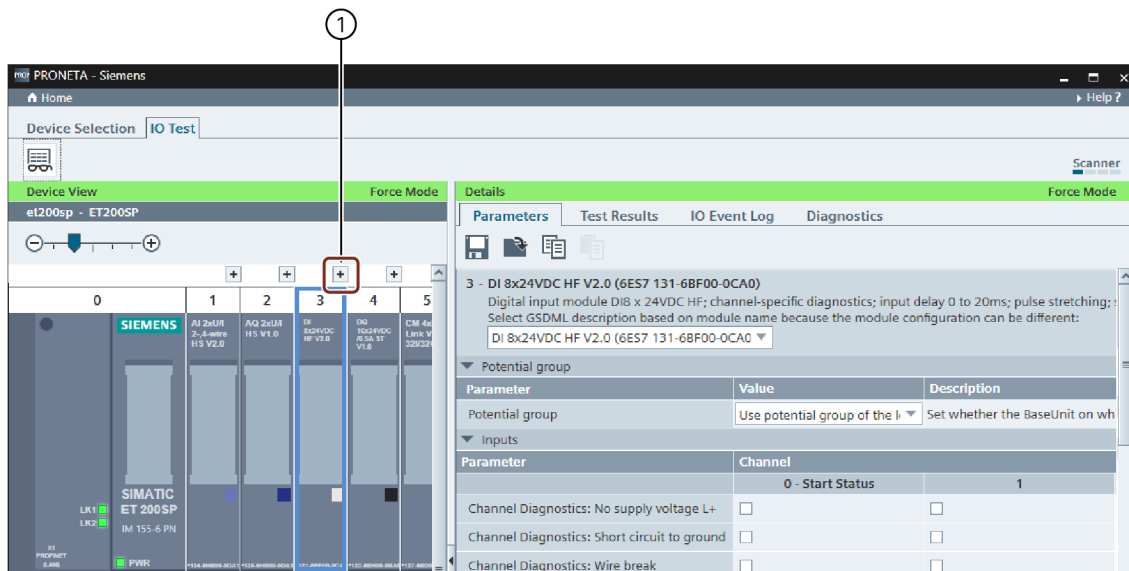

To get a larger view of any module click the “+” symbol (1) above the module. A small [Popup Window](#) will appear.

Clicking on any of the modules here will show the module’s parameter table in the “Details” view, or highlight the corresponding section, depending on the tab chosen.

Modules with information in their diagnostics buffer are displayed with a red header.

Digital IO

Click on any LED symbol of an output module to toggle the status of the corresponding output. Likewise, voltage applied to any input will light up the corresponding input module LED.

To force digital values, you can also use the “Test Results” tab in the [Details View](#).

Analog IO

Read analog values from input and output modules in the same fashion.

To force analog values, use either the [Popup Window](#) or the “Test Results” tab in the [Details View](#).

NOTE


Optional plugged connection terminals (3DI/LC modules) of Motor Starter units will only be shown after Force Mode has been activated.

Popup Window (IO Test)

Usage

Above each module of the device in the [Device View](#), a “+” symbol allows you to open a popup window with a larger symbolic view of the module’s inputs and outputs. If you open several modules, their popups will be arranged in a row within a single window.

Figure 3-38

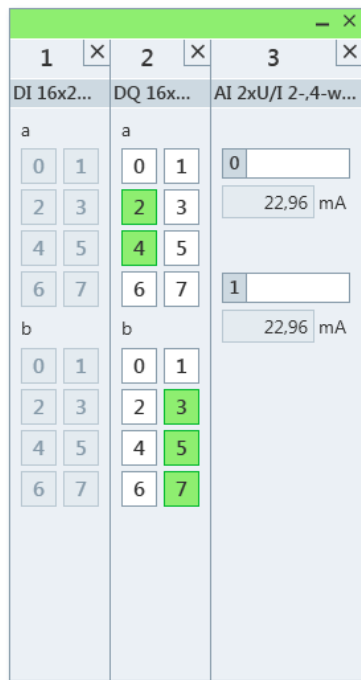

Click the close icon “x” in the top right of the popup window segment, or the “_” symbol above the module in the device view, to close the popup for this module again. To close the whole window, click the close icon “x” in the top right of the window. To rearrange the modules within the popup window, click the table header of the module in question and drag it to the desired position.

Digital IO

Digital inputs and outputs can be monitored and forced, respectively, by viewing or checking and unchecking the fields corresponding to their connections. Green fields indicate active lines.

Analog IO

For analog modules, symbolic channel names can be entered in the fields next to the indicated channel numbers. These will automatically be copied into the test protocol.

Analog output values can be forced by either entering the numeric value in the corresponding field, or by dragging the slider across the slider bar below. Clicking the symbol next to the field will reset the output to the default value.

Details Table


The Details Table consists of four tabs, each with its own function bar:

- [Parameters](#) to set the module parameters
- [Test Results](#) to perform and protocol the wiring test for the device
- [IO Event Log](#) to monitor regular events like the changes of input and output values of a module
- [Diagnostics](#) to record irregular system events like the pulling and plugging of modules

Parameters

This tab gives an overview over the parameter set of the module selected in the device view. Parameters can be only edited while “Force and Monitor Values” is not in operation (see [IO Test Mode](#), section “Function Bar”).

Figure 3-39

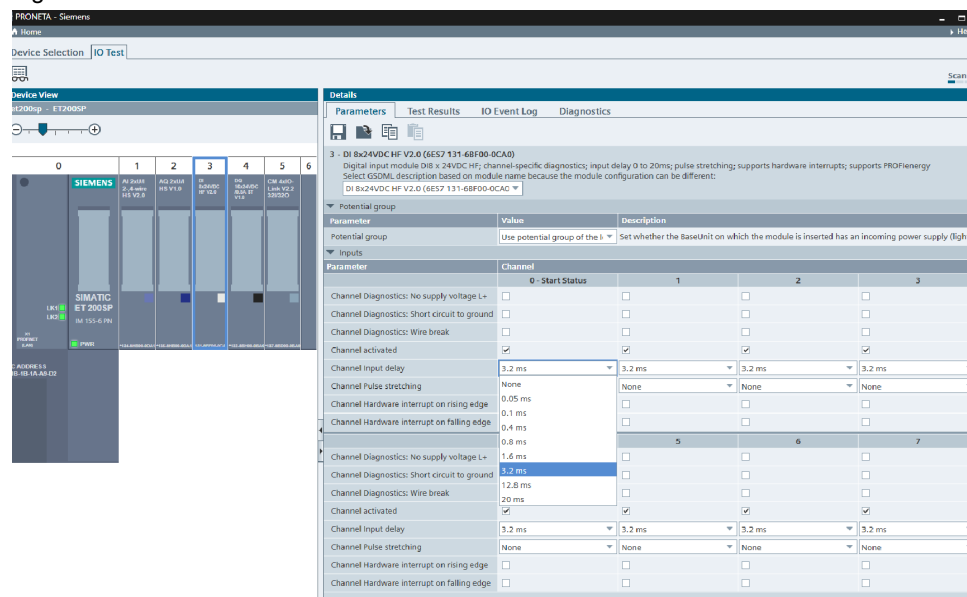

The parameter set can be stored to a file on disk, loaded from a file, and copied and pasted from the windows clipboard to transfer the parameters to a different module.

Function Bar

The following functions are available in the function bar:

Table 3-18


Icon	Name	Function
	Save Parameters	Saves the current parameter set of the whole device to disk.
	Load Parameters	Loads a previously saved parameter set from disk and assigns it to the current device.
	Copy Parameters	Copies the parameter set of the currently selected module to the Windows clipboard.
	Paste Parameters	A previously copied module parameter set will be pasted from the Windows clipboard to the currently selected module. The icon is greyed if the parameter set in the clipboard does not fit the selected module.

The commands “Save Parameters” and “Load Parameters” transfer parameter sets between devices and are useful to configure a number of identical devices. Opposed to that, “Copy Parameters” and “Paste Parameters” are used predominantly to “clone” module configurations within one device.

Test Results

This tab offers the functionality for the actual IO Test of the currently selected device.

Figure 3-40

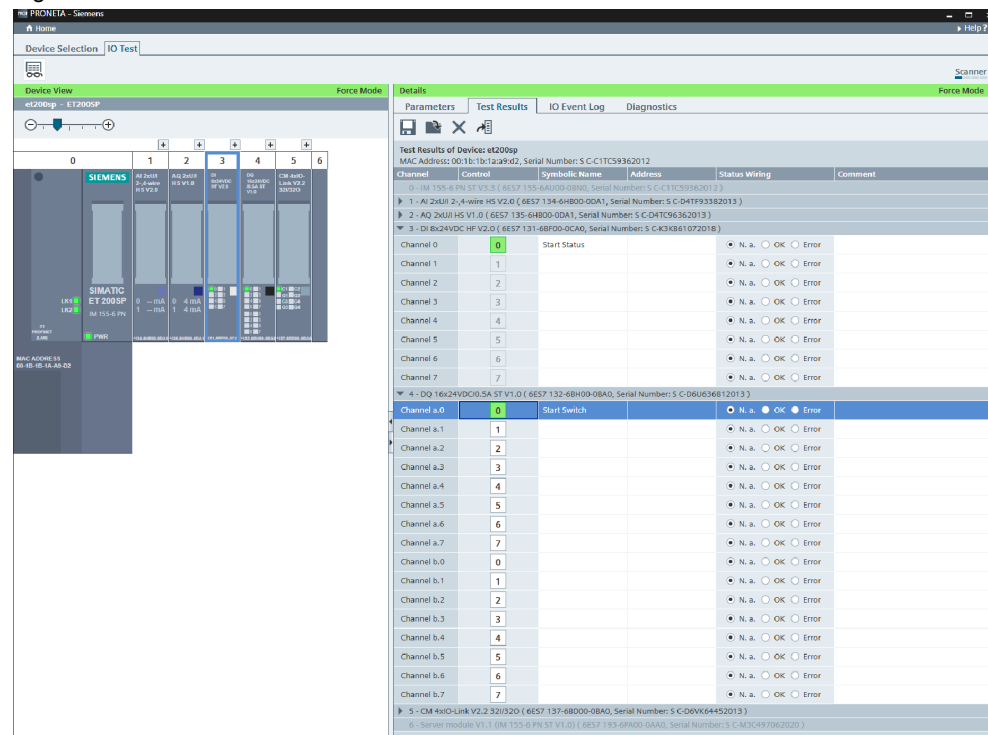

The test table is vertically divided into sections according to the IO modules present. Each section can be collapsed and expanded again by clicking on the triangle symbol “►” in the section header.

The test table consists of the following columns:

- “Channel”: The name of the IO channel as determined by the device.
- “Control”: Forcing status of the selected output.
Click on the icons to toggle the status of digital outputs or drag or enter manually the value for analog outputs. Values entered will be immediately forwarded to the hardware. (For inputs, this field is greyed out and read-only.) Alternatively, you can also change values by clicking on the LED representations of the device view, or by manipulating them in the popup window.
This column is only visible while the Force Mode is active.
- “Symbolic Name”: Arbitrary name, assigned by the tester to the channel. (See note below.)
- “Address”: Arbitrary memory address to which the IO is mapped. (See note below.)

- “Status Wiring”: Here the actual results as established by the IO Test are entered by the tester. Select one of:
 - “N.a.”: “Not applicable”, not tested yet (default)
 - “OK”: Test result correct, wiring in order
 - “Error”: Test result wrong, faulty wiring
- “Comment”: Any additional information you want to add to the test.

NOTE

The values for “Symbolic Name” and “Address” serve only as memory aids for the tester.

The IO Test can be suspended and resumed at a later point in time by saving and loading the protocol.

After completion of the test, the protocol can be stored to document the proper wiring of the device. (See the [Function Bar](#) for details.)

Function Bar

The following functions are available in the function bar:

Table 3-19

Icon	Name	Function
	Save Protocol	Stores the results of the current IO Test to disk (format: CSV), either when the test is completed, or when the test is interrupted.
	Load Protocol	Loads test results of an earlier IO Test from disk to proceed with testing.
	Reset Test Protocol	Discards the results of the current test and allows you to start over again. All results will be deleted from PRONETA Basic.
	Import Symbolic Names from an AML file	Imports symbolic names for device /IOs from an AML file (see Using an AML File as Reference.)

Using an AML File as Reference

To provide symbolic names for IOs, an AML file can be used.

The following features of the device to be tested must match the name of the device in the AML file:

- Device name
- Module types
- Module positions

If this is the case and the AML file contains symbolic names for the IOs, then the names from the AML file will be used for the IOs in the tested device, and shown in the column “Symbolic Name”.

NOTE

This feature is currently not available for integrated IOs of CPUs.

IO Event Log

This tab records a log of all regular events (like changes of the values of inputs and outputs) which occurred to the modules while the IO Test was active.

Clicking on a column header will sort the table accordingly.

Figure 3-41

Slot	Module	Description	Time Stamp
4	DQ 8x24VDC0.5A ST V1.1	Digital output a.6 was changed from 1 to 0.	10/9/2019 1:25:15 PM
4	DQ 8x24VDC0.5A ST V1.1	Digital output a.4 was changed from 1 to 0.	10/9/2019 1:25:14 PM
4	DQ 8x24VDC0.5A ST V1.1	Digital output a.2 was changed from 1 to 0.	10/9/2019 1:25:14 PM
4	DQ 8x24VDC0.5A ST V1.1	Digital output a.0 was changed from 1 to 0.	10/9/2019 1:25:13 PM
4	DQ 8x24VDC0.5A ST V1.1	Digital output a.2 was changed from 0 to 1.	10/9/2019 1:24:59 PM
4	DQ 8x24VDC0.5A ST V1.1	Digital output a.4 was changed from 0 to 1.	10/9/2019 1:24:59 PM
4	DQ 8x24VDC0.5A ST V1.1	Digital output a.6 was changed from 0 to 1.	10/9/2019 1:24:58 PM
4	DQ 8x24VDC0.5A ST V1.1	Digital output a.0 was changed from 0 to 1.	10/9/2019 1:24:57 PM
5	AQ 4xUI ST V1.1	Analog output 3 was changed from 4 mA to 15,9 mA.	10/9/2019 1:24:45 PM

Function Bar

The following functions are available in the function bar:

Table 3-20

Icon	Name	Function
	Save IO Event Log	Stores the event log to disc (format: CSV).
	Reset IO Event Log	Clears all entries from the current event log.

Diagnostics

The table in this tab shows a record of all irregular events which occurred to the device while the IO Test was active, like the pulling of modules or a signal wire break.

If the diagnostics buffer contains events pertaining to a module, the corresponding module header in the Device Table will be displayed red.

Clicking on a column header of the table will sort the table accordingly.

Selecting a table entry will highlight the corresponding module in the Device View. In return, selecting a module in the Device View will highlight the first entry concerning the module in this table.

Figure 3-42

Slot	Module	Channel	Symbolic Name	Description	Details	Time Stamp
2	DI 8x24VDC HF V2.0			Pull		09.10.2019 01:26:17
3	DI 8xNAMUR HF V1.0, QI			Pull		09.10.2019 01:26:23
0	IM 155-6 PN ST V3.3			Station stop - too many missing modules ((1:d1))	Check for pulled module, only one pulled module allowed	09.10.2019 01:26:44

The table consists of the following columns:

- “Slot”
- “Module”
- “Channel”
- “Symbolic Name” (as entered in the “Test Results” tab)
- “Description”
- “Details”
- “Time Stamp”

3.4 Settings

In the “Settings” window, there are three different tabs available:

- [General Settings](#)
- [Network Adapter](#)
- [GSDML Manager](#)

These modes are used to adjust the operational details of PRONETA Basic.

3.4.1 General Settings

You can set various parameters in connection with the network scan and visualization here.

Figure 3-43

PRONETA - Siemens

Home

General Settings Network Adapter GSDML Manager

Change General Settings

Online Topology

☐ Automatically assign temporary IP addresses

Subnet network IP address: 192.168.0.0

Subnet network mask: 255.255.255.0

Devices connected to an enterprise network or directly to the internet must be appropriately protected against unauthorized access, e.g. by use of firewalls and network segmentation. For more information about industrial security, please visit <http://www.siemens.com/industrialsecurity>

☐ Automatically assign temporary device names

Network Scanner

☒ Scan network automatically (scanner continually runs)

☐ Read out I&M data of controllers (not recommended for S7-1200 with firmware version 2.2)

☐ Read out diagnostic information for all devices

☐ Include devices found via IP forwarding in other subnets

☐ Include devices which do not support PROFINET

Scan IP addresses from: 192.168.0.0 to 192.168.0.255

Maximum load generated by the scan process: 1 4 10 50 100 10 Mb/s

Language Selection

Language: English

- “Online Topology”
 - “Automatically assign temporary IP addresses”,
 - “Automatically assign temporary device names”:
Checking either entry will ensure that all devices which are found during a network scan will automatically have valid IP addresses and/or device names assigned to them. The IP addresses will be taken from the subnet defined by “Subnet network IP address”, and the devices will receive the subnet mask from the respective field.
IP addresses and device names are lost when the respective device is powered off.
- “Network Scanner”
 - “Scan network automatically (scanner continually runs)”:
If this entry is checked, the scanner will be permanently active, unless specifically stopped. This will result in a constantly up-to-date representation of the physical network but will also create higher traffic loads and may lead to problems with time-critical communications on the network.
To stop the scanner, use the [Scanner Status Indicator](#)’s context menu.
 - “Read I&M data of controllers (not recommended for S7-1200 Firmware Version 2.2)”:
A PLC may provide additional “Identification and maintenance data”, like order number or Firmware Version.
 - “Read out diagnostic information for all devices”:
This option allows fast and good overview within the network view about diagnostics. Problems in the diagnostic buffer are read out, shown and are also part of an export file for documentation purposes. Devices with entries in their diagnostic buffer are marked.
 - “Include devices found via IP forwarding in other subnets”:
It is possible to recognize all devices connected to the PRONETA PC via PROFINET, not only those which are part of the subnet the PRONETA PC is connected, but also devices which are part of a subnet connected to another PROFINET interface. Cascading subnets are not supported.
 - “Include devices which do not support PROFINET”:
PRONETA Basic can also poll the network for devices which do not support the full PROFINET standard. “Scan IP addresses from ... to” gives the range of network addresses that PRONETA Basic will poll for these devices.
Using this option and giving large address ranges may result in higher response times of PRONETA Basic and increased network load.
 - “Maximum load generated by the scan process”: This slider lets you set an upper limit for the bandwidth used by PRONETA Basic’s network scan. Large traffic values may have a negative impact on general communication but will also lead to shorter update cycles.
Reduce this value if you experience general communication problems on your network due to PRONETA Basic’s scans.
- “Language Selection”:
The drop-down menu allows you to change between English, German and Simplified Chinese as the language of PRONETA Basic’s user interface.


NOTE

Changes introduced here will take effect immediately. You will not be asked for a confirmation of parameter changes.

3.4.2 Network Adapter

Here you can change the network adapter used for PRONETA Basic.

Figure 3-44

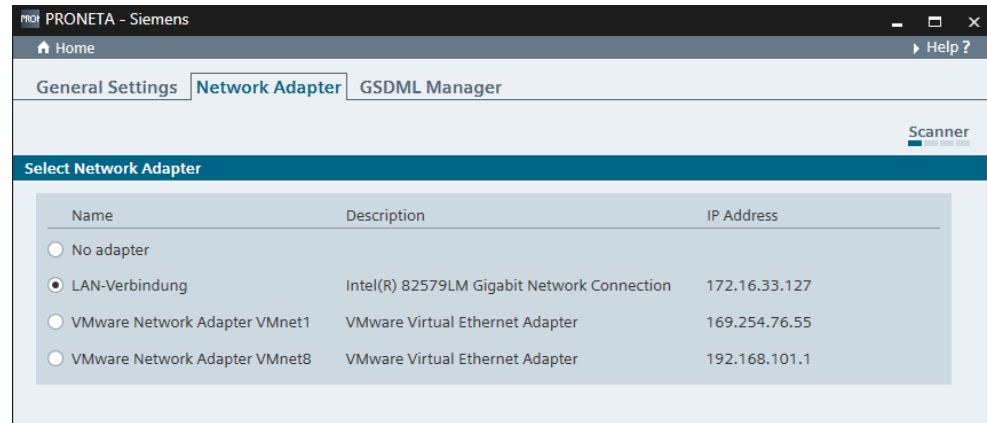


A list of Ethernet and Wi-Fi adapters found on your PC is displayed, chose the appropriate adapter from here.

If no adapter is selected, only offline functionality with PRONETA Basic is available ([Offline Mode](#) and the [Comparison Mode](#) when comparing two offline topologies).

3.4.3 GSDML Manager

GSDML files (“General Station Description Markup Language”) contain information about the features and capabilities of PROFINET IO devices, like the number of interfaces or supported baud rates. PRONETA Basic comes already with a large number of GSDML files preinstalled. With the GSDML manager you can include support for further devices, and for devices which were only released after the latest PRONETA Basic version.

Figure 3-45

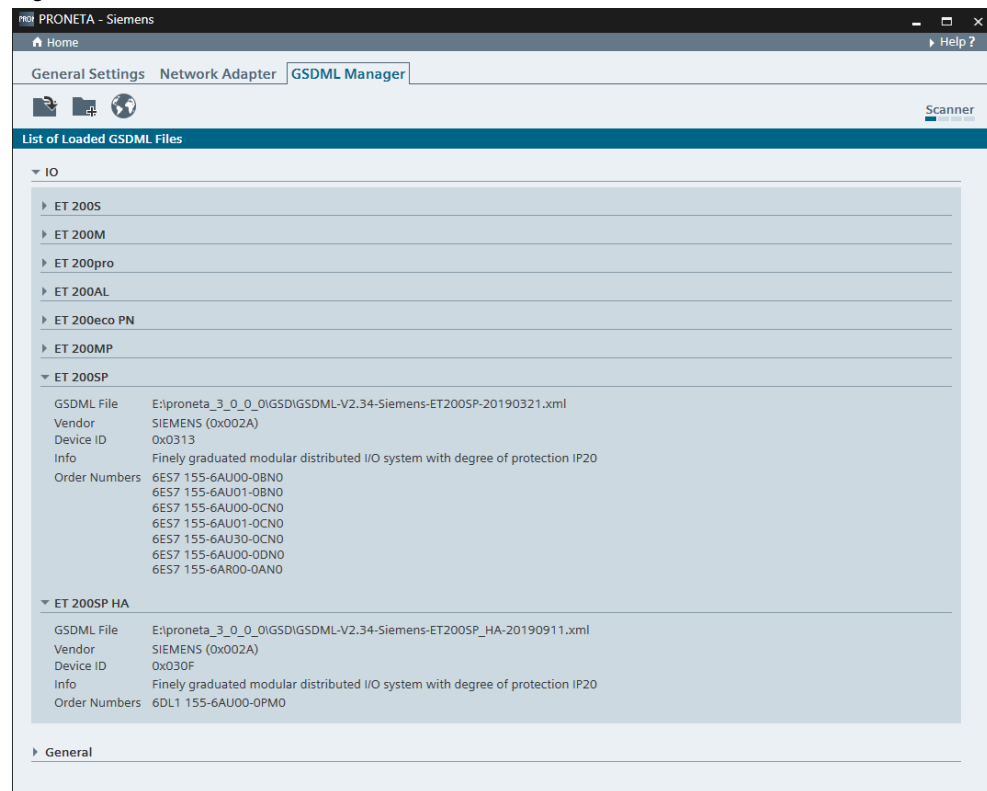

Function Bar

On the top of the screen, the following functions are available from the function bar:

Table 3-21

Icon	Name	Function
	Add GSDML File	Lets you add a single GSD file from disk. Clicking on the icon opens a file browsing dialog.
	Add GSDML Folder	Lets you add several GSD files in one action by simply designating a folder where the individual GSD files are stored. Clicking on the icon opens a file browsing dialog.
	Download GSDML Files for SIEMENS Devices	Will launch a web browser and establish a connection to the SIEMENS industry online support portal where you can download additional GSD files, e.g. for new devices.

4 Working with PRONETA Basic

This chapter gives you a short introduction into different use cases for PRONETA Basic and then leads you through the individual steps to complete your configuration tasks successfully.

The main use cases for PRONETA Basic are:


Table 4-1

Use Case	Chapter
Give an overview of all PROFINET devices, their configuration and connections in a network.	4.2, Displaying the Devices and Topology of a PROFINET Network
Compare a previously configured topology and the actual physical topology with each other.	4.3, Comparing and Configuring Different Topologies
Configure devices, and transfer data from a previously saved topology or a STEP 7 project file automatically or manually to a different network.	4.4, Configuration of the PROFINET Devices
Automatically collect information about all devices and components installed in a network, and write a comprehensive report of all relevant data to disk.	4.5, Creating an Inventory of the Network
Control the distributed IO for correct wiring and log the test results to document the plant status.	4.6, Testing the Correct Wiring of the Distributed IO

4.1 Selection of the PRONETA Basic Network Adapter

Before you can work with PRONETA Basic, the network adapter which connects you to the PRONETA Basic network should be selected. To do so, select the command [Network Adapter](#) from the [Settings](#) task.

Figure 4-1

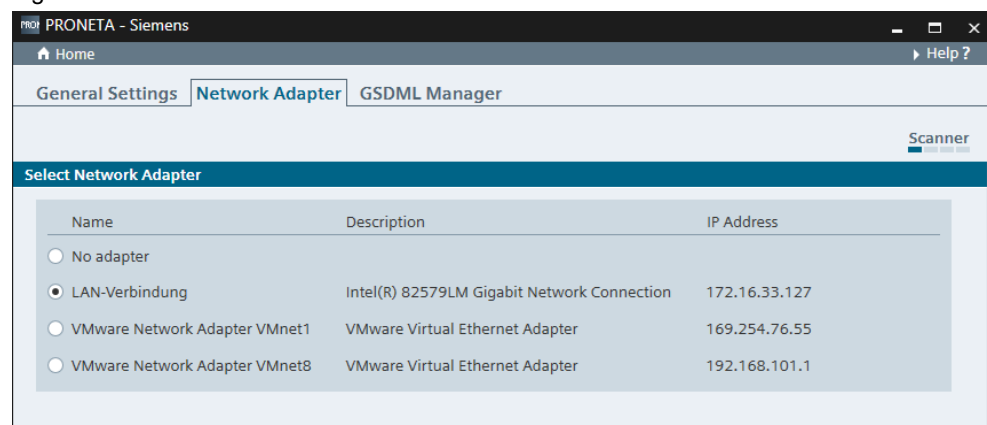

If you do not select a particular adapter, PRONETA Basic will try to reconnect to the adapter used in the previous PRONETA Basic session.

If no network adapter is available, PRONETA Basic provides offline functionality only (i.e. [Offline Mode](#) and [Comparison Mode](#) in the Network Analysis task).

4.2 Displaying the Devices and Topology of a PROFINET Network

Task

All devices of a physical PROFINET network are to be detected.

Optional it is possible to recognize all devices connected to the PRONETA PC via PROFINET, not only those which are part of the subnet the PRONETA PC is connected, but also devices which are part of a subnet connected to another PROFINET interface. These devices scanned via IP forwarding provide information only ("read only") and support less functionality. Cascading subnets are not supported.

The relevant information – IP addresses, device names, port connections etc. – are displayed in "Device Details".

If required, the network configuration is to be adapted. However, names and IP addresses cannot be assigned to a device found via IP forwarding.

The current topology is to be saved on the computer for further use.

Implementation

1. Start PRONETA Basic and select the [Network Analysis Task \(3.2\)](#).
2. Select the [Online Mode \(3.2.1\)](#) to get a display of all connected and active devices.


NOTE

Wait until the online scan has found all network devices. This takes a full cycle of the [Scanner Status Indicator](#) display.

Depending on the network topology, utilization and size, this can require between a few seconds and a few minutes.


3. Select a device by a single mouse-click on the device icon in the [Graphical View \(1\)](#) or on the corresponding entry in the [Device Table \(2\)](#) on the bottom.

Figure 4-2

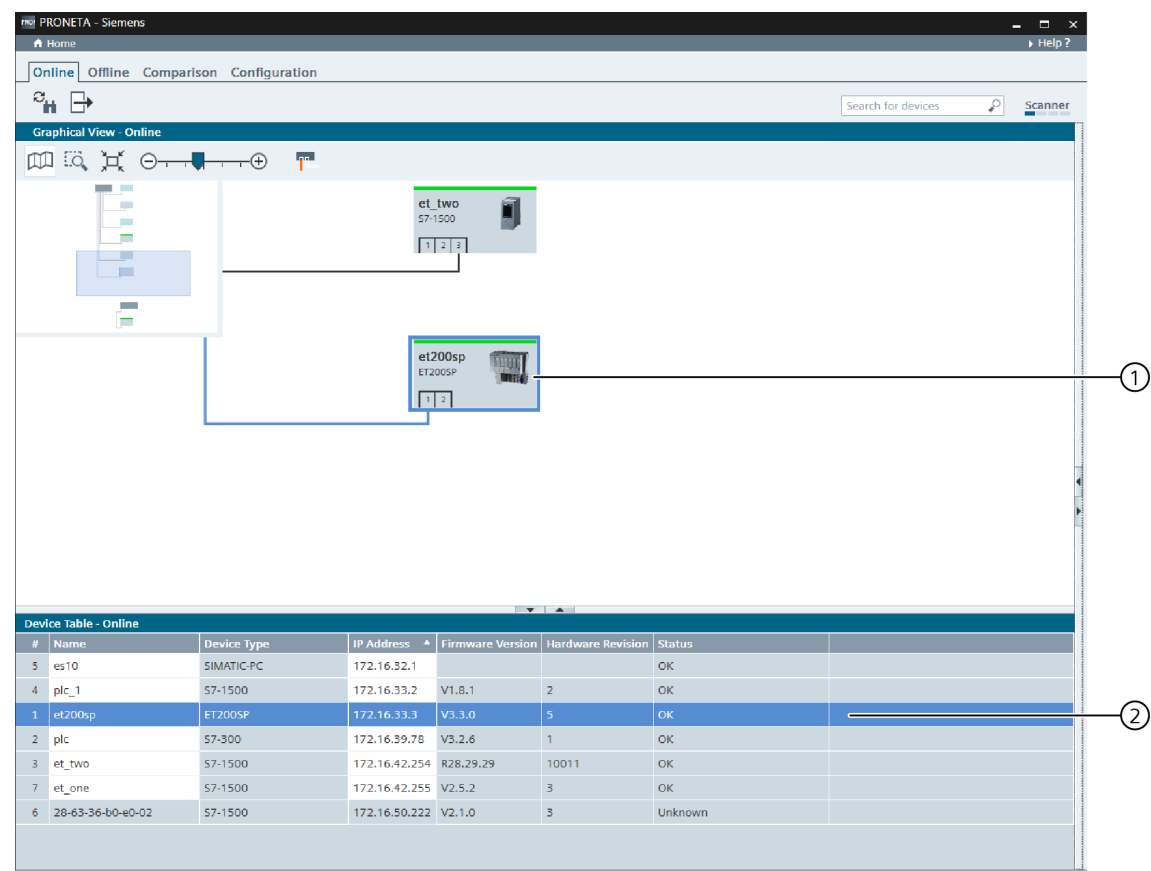

The Device Details View in the right part of the window displays information about the configuration of the device.


Figure 4-3

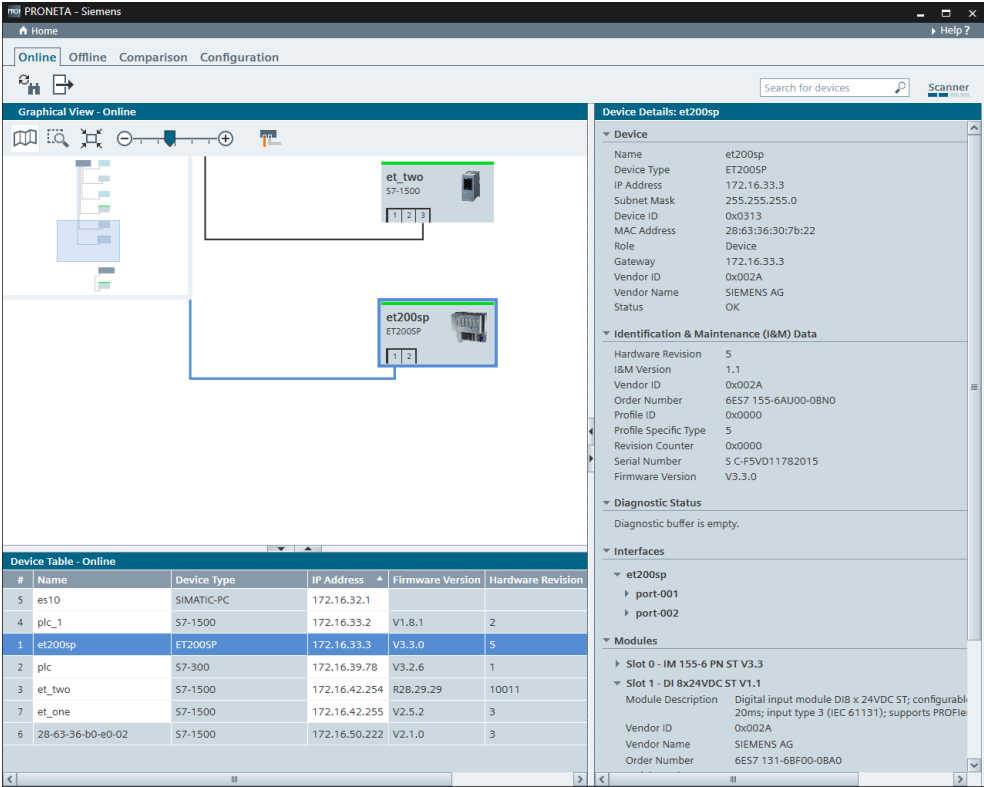

NOTE For devices found via IP forwarding a notification banner is displayed: "This device was found in another subnet by port forwarding from "{x}". You cannot make any changes to this device."

4. If necessary, change the network configuration (IP address, device name) in the [Device Context Menu](#), or with a double-click on the device in the Graphical View.

Figure 4-4

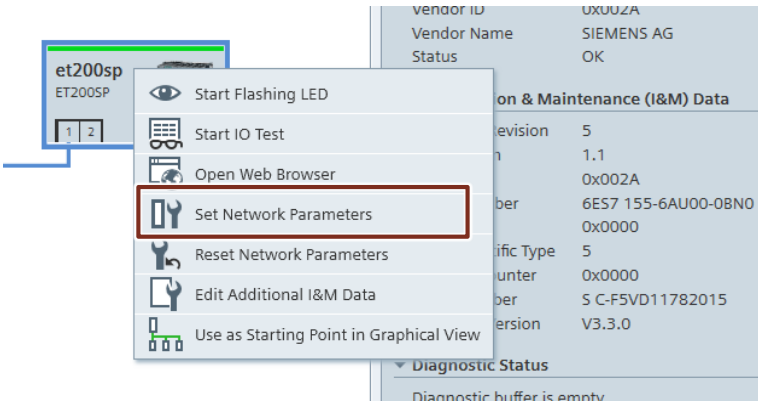

NOTE It is not possible to change any network parameters of devices connected to the second subnet (scanned via IP forwarding).

Figure 4-5

Set Network Parameters

Please select your network parameters

☒ Assign Device Name

☐ IP Configuration

☒ Static IP Configuration

IP Address

Network Mask

☐ Use router for gateway

☐ Obtain IP configuration from a DHCP server and identified by

☐ MAC Address

☐ Device Name

☒ Client ID


Devices connected to an enterprise network or directly to the internet must be appropriately protected against unauthorized access, e.g. by use of firewalls and network segmentation. For more information about industrial security, please visit <http://www.siemens.com/industrialsecurity>

☒ Apply settings permanently

Set Cancel

5. To save the current topology so you can compare it in the future with other network configurations, use the “Export Topology” icon in the header bar.

Figure 4-6

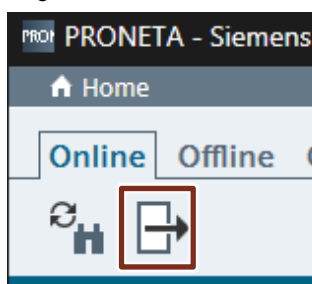

For more details, see [Topology Export](#).

4.3 Comparing and Configuring Different Topologies

Task

It is to be checked whether the physical layout of a PROFINET network matches the specified reference project.

This is particularly useful if, e.g. a number of identical machines or control cabinets are to be commissioned.

NOTE


This use case covers the network configuration, i.e. topology, devices, modules, and IP parameters.

To survey the wiring of the IO modules, refer to [Testing the Correct Wiring of the Distributed IO \(4.6\)](#)

Comparing Networks

1. Start PRONETA Basic and select the [Network Analysis Task \(3.2\)](#).
2. Select the [Comparison Mode \(3.2.3\)](#).
3. In addition to the automatically generated Online topology, load one or several reference files (see [Import Topology](#)) from disk (1). The reference files may have been previously created with PRONETA Basic (see [Online Mode \(3.2.1\)](#)), TIA Portal, or STEP 7, respectively.


Figure 4-7

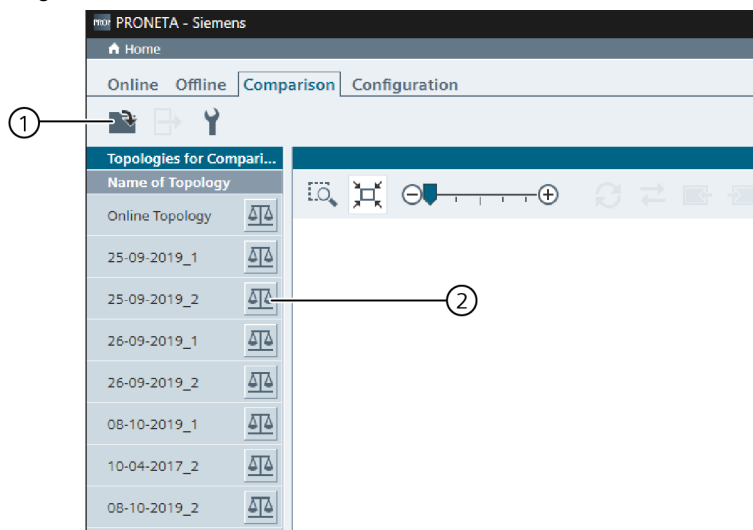

4. By clicking on their respective balance symbols (2), select *two* entries from the table of "Topologies for Comparison" which you would like to compare with each other.

The chosen topology with the higher position in the topology list— usually the physical network or "Online Topology" – will be displayed in the [Graphical View "Overview"](#), and compared against the second chosen topology. If you select more than two topologies, the "oldest" selected entry will be dropped from the comparison.

Figure 4-8

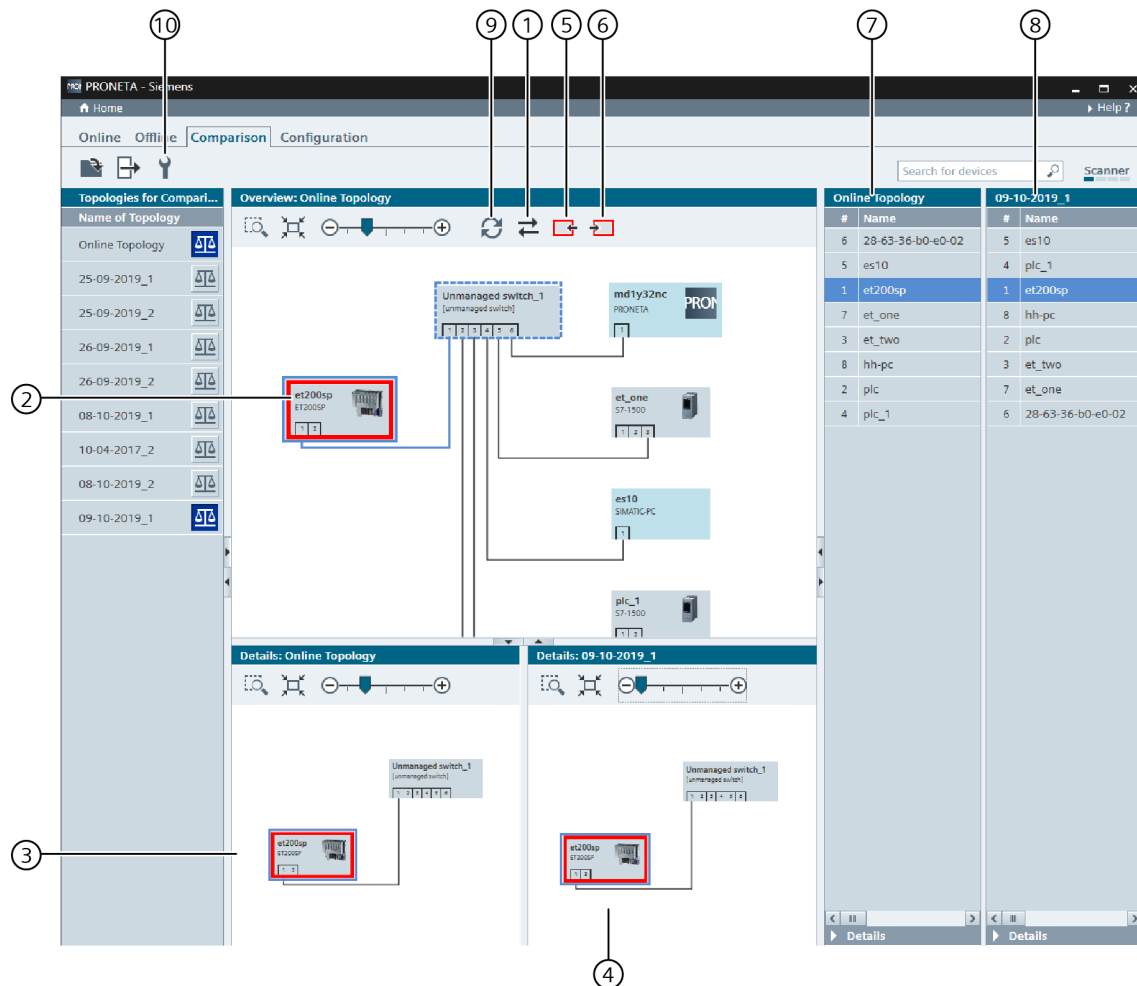

To toggle which of the two selected topologies is displayed in the overview, click the “Change Topology Displayed in Overview” icon in the tool bar (1). Any devices in the network which are “mismatched”, i.e. which do not match their counterpart in the other network (or which have no counterpart at all), will be displayed with a red border (2).


Clicking on any device brings up two smaller Graphical Views on the bottom of the screen, with the left view (3) displaying the configuration and neighbors for the respective device in the first topology, and the right one (4) displaying the corresponding device (if there is any) from the second network. Use the “Go to Previous Difference” (5) and “Go to Next Difference” (6) icons from the tool bar to systematically proceed through all conflicts found.

In the right section of the screen, two Device Tables are presented for the first (7) and second selected network (8), respectively. Click the “Refresh Comparison” icon (9) to update the Graphical View.

To control which differences are sufficient to constitute a mismatch between two devices, [Set Comparison Criteria](#) with the corresponding icon (10).

In the bottom details views, hovering over a mismatched device will bring up a tooltip with a summary of the differences.

Figure 4-9

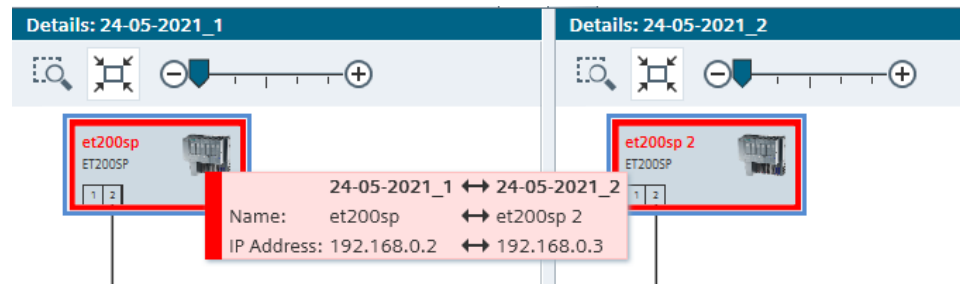

Click on the tooltip to open a window with more in-depth information.

Figure 4-10

Module Comparison	
Online Topology: et200sp	09-10-2019_1: et200sp
1 Name: DI 8x24VDC ST V1.1 Order Number: 6ES7 131-6BF00-0BA0 Firmware Version: V1.1.1	1 Name: DI 8x24VDC ST V1.1 Order Number: 6ES7 131-6BF00-0BA0 Firmware Version: V1.1.1
2 No module plugged	2 Name: DI 8x24VDC HF V2.0 Order Number: 6ES7 131-6BF00-0CA0 Firmware Version: V2.0.0
4 Name: DQ 8x24VDC/0.5A ST V1.1 Order Number: 6ES7 132-6BF00-0BA0 Firmware Version: V1.1.3	4 Name: DQ 8x24VDC/0.5A ST V1.1 Order Number: 6ES7 132-6BF00-0BA0 Firmware Version: V1.1.3
5 Name: AQ 4xU/I ST V1.1 Order Number: 6ES7 135-6HD00-0BA1 Firmware Version: V1.1.0	5 Name: AQ 4xU/I ST V1.1 Order Number: 6ES7 135-6HD00-0BA1 Firmware Version: V1.1.0
6 Name: AI EnergyMeter ST V2.0 (32I/12O) Order Number: 6ES7 134-6PA00-0BD0 Firmware Version: V2.0.1	6 Name: AI EnergyMeter ST V2.0 (32I/12O) Order Number: 6ES7 134-6PA00-0BD0 Firmware Version: V2.0.1
7 Name: Server module V1.1 (IM 155-6 PN ST V1.0) Order Number: 6ES7 193-6PA00-0AA0 Firmware Version: V1.1.0	7 Name: Server module V1.1 (IM 155-6 PN ST V1.0) Order Number: 6ES7 193-6PA00-0AA0 Firmware Version: V1.1.0

To assign changes to the network devices in the online topology, proceed with [4.4, Configuration of the PROFINET Devices](#).

NOTE

No changes can be done for devices found via IP forwarding.

4.4 Configuration of the PROFINET Devices

Task

Various basic configuration tasks are to be performed on the PROFINET devices, without using any other engineering software like STEP 7 or the TIA Portal.

The following table shows which device parameters are to be set with each of the various tasks, and other details:

Table 4-2

	4.4.1 Automatic PROFINET Device Configuration	4.4.2 Manual Configuration of a Single Device	4.4.3 Transfer of the Device Name for a Single Device	4.4.4 Transfer of Device Names for a Whole Network
Parameters	IP address, name	IP address, name	Name	Name
Scope	All devices	Single device	Single device	All devices
Lifetime	Temporary	Temporary/Permanent	Permanent	Permanent
Mode	Automatic	Manual	Manual	Automatic

4.4.1 Automatic PROFINET Device Configuration

Task

All devices of the PROFINET network are to be “named”, i.e. given a temporary IP address and/or a temporary device name.

This is particularly useful if a number of devices with factory settings have been added to the network for first-time use.

Implementation

For all unconfigured devices found, PRONETA Basic can generate missing IP addresses or device names and assign them automatically to the devices.

1. Select [Settings \(3.4\)](#) in the start screen, and switch to the [General Settings \(3.4.1\)](#) tab.
2. In the following screen:
 - To assign automatically generated IP addresses to all accessible “unnamed” devices, put a check-mark next to “Automatically assign temporary IP addresses” (1). The addresses generated in this way are from the subnet range given below (2).
 - To assign automatically generated device names to all accessible “unnamed” devices, put a check-mark next to “Automatically assign temporary device names” (3).

Figure 4-11

PRONETA - Siemens

Home

General Settings Network Adapter GSDML Manager

Change General Settings

Online Topology

① ☒ Automatically assign temporary IP addresses

Subnet network IP address 192.168.0.0

② Subnet network mask 255.255.255.0

Devices connected to an enterprise network or directly to the internet must be appropriately protected against unauthorized access, e.g. by use of firewalls and network segmentation. For more information about industrial security, please visit <http://www.siemens.com/industrialsecurity>

③ ☒ Automatically assign temporary device names

Network Scanner

☒ Scan network automatically (scanner continually runs)

☐ Read out I&M data of controllers (not recommended for S7-1200 with firmware version 2.2)

☐ Read out diagnostic information for all devices

☐ Include devices found via IP forwarding in other subnets

☐ Include devices which do not support PROFINET

Scan IP addresses from 192.168.0.0 to 192.168.0.255

NOTICE

If you set the respective check-marks, the naming of the device is carried out automatically and immediately for all accessible unconfigured devices as soon as you leave the view.

You will not be asked for any further confirmation.

The temporary IP addresses/device names that have been assigned this way remain valid until the devices have run through a reset, or have been disconnected from the voltage supply.

NOTE

The use of temporary device configurations is convenient in the case of using PRONETA Basic to prepare a network before a CPU is installed on it, when later the CPU will assign permanent device configurations to the single devices.

4.4.2 Manual Configuration of a Single Device

Task

A set of temporary or permanent network parameters is to be written to a single PROFINET device manually.

Implementation

To assign arbitrary configuration values to a single device, proceed as follows:

1. In the [Network Analysis Task \(3.2\)](#), select the [Online Mode \(3.2.1\)](#).
2. Highlight the device in the [Graphical View](#), or the [Device Table](#), and open the [Device Context Menu](#) with the right mouse button.
3. Select the command “[Set Network Parameters](#)”.
4. Set the desired device parameters in the [Set Network Parameters](#) dialog that opens up.

The new values can be temporary or permanent, depending on the settings in the parameters dialog.

Or alternatively:

1. In the [Network Analysis Task \(3.2\)](#), select the [Online Mode \(3.2.1\)](#).
2. In the [Device Table](#), enter the new values directly. All editable fields are distinguished by a white background.

Figure 4-12

The screenshot displays the PRONETA Basic software interface. The top navigation bar includes 'Home', 'Online', 'Offline', 'Comparison', and 'Configuration'. The 'Online' mode is selected. The main area is divided into two panes. The left pane, titled 'Graphical View - Online', shows a network topology with two devices: 'et_two' (57-1500) and 'et200sp' (ET200SP). The right pane, titled 'Device Details: et200sp', shows various parameters for the selected device. Below the graphical view is the 'Device Table - Online' table.

#	Name	Device Type	IP Address	Firmware Version	Hardware Revision
1	et200sp	ET200SP	172.16.33.2	V1.8.1	2
2	et200sp	ET200SP	172.16.33.3	V3.3.0	5
3	et200sp	ET200SP	172.16.34.2	V3.3.0	5
4	et200sp	ET200SP	172.16.34.2	V3.3.0	5
5	et200sp	ET200SP	172.16.34.2	V3.3.0	5
6	et200sp	ET200SP	172.16.34.2	V3.3.0	5
7	et200sp	ET200SP	172.16.34.2	V3.3.0	5
8	et200sp	ET200SP	172.16.34.2	V3.3.0	5
9	et200sp	ET200SP	172.16.34.2	V3.3.0	5
10	et200sp	ET200SP	172.16.34.2	V3.3.0	5
11	et200sp	ET200SP	172.16.34.2	V3.3.0	5
12	et200sp	ET200SP	172.16.34.2	V3.3.0	5
13	et200sp	ET200SP	172.16.34.2	V3.3.0	5
14	et200sp	ET200SP	172.16.34.2	V3.3.0	5
15	et200sp	ET200SP	172.16.34.2	V3.3.0	5
16	et200sp	ET200SP	172.16.34.2	V3.3.0	5
17	et200sp	ET200SP	172.16.34.2	V3.3.0	5
18	et200sp	ET200SP	172.16.34.2	V3.3.0	5
19	et200sp	ET200SP	172.16.34.2	V3.3.0	5
20	et200sp	ET200SP	172.16.34.2	V3.3.0	5
21	et200sp	ET200SP	172.16.34.2	V3.3.0	5
22	et200sp	ET200SP	172.16.34.2	V3.3.0	5
23	et200sp	ET200SP	172.16.34.2	V3.3.0	5
24	et200sp	ET200SP	172.16.34.2	V3.3.0	5
25	et200sp	ET200SP	172.16.34.2	V3.3.0	5
26	et200sp	ET200SP	172.16.34.2	V3.3.0	5
27	et200sp	ET200SP	172.16.34.2	V3.3.0	5
28	et200sp	ET200SP	172.16.34.2	V3.3.0	5
29	et200sp	ET200SP	172.16.34.2	V3.3.0	5
30	et200sp	ET200SP	172.16.34.2	V3.3.0	5
31	et200sp	ET200SP	172.16.34.2	V3.3.0	5
32	et200sp	ET200SP	172.16.34.2	V3.3.0	5
33	et200sp	ET200SP	172.16.34.2	V3.3.0	5
34	et200sp	ET200SP	172.16.34.2	V3.3.0	5
35	et200sp	ET200SP	172.16.34.2	V3.3.0	5
36	et200sp	ET200SP	172.16.34.2	V3.3.0	5
37	et200sp	ET200SP	172.16.34.2	V3.3.0	5
38	et200sp	ET200SP	172.16.34.2	V3.3.0	5
39	et200sp	ET200SP	172.16.34.2	V3.3.0	5
40	et200sp	ET200SP	172.16.34.2	V3.3.0	5
41	et200sp	ET200SP	172.16.34.2	V3.3.0	5
42	et200sp	ET200SP	172.16.34.2	V3.3.0	5
43	et200sp	ET200SP	172.16.34.2	V3.3.0	5
44	et200sp	ET200SP	172.16.34.2	V3.3.0	5
45	et200sp	ET200SP	172.16.34.2	V3.3.0	5
46	et200sp	ET200SP	172.16.34.2	V3.3.0	5
47	et200sp	ET200SP	172.16.34.2	V3.3.0	5
48	et200sp	ET200SP	172.16.34.2	V3.3.0	5
49	et200sp	ET200SP	172.16.34.2	V3.3.0	5
50	et200sp	ET200SP	172.16.34.2	V3.3.0	5
51	et200sp	ET200SP	172.16.34.2	V3.3.0	5
52	et200sp	ET200SP	172.16.34.2	V3.3.0	5
53	et200sp	ET200SP	172.16.34.2	V3.3.0	5
54	et200sp	ET200SP	172.16.34.2	V3.3.0	5
55	et200sp	ET200SP	172.16.34.2	V3.3.0	5
56	et200sp	ET200SP	172.16.34.2	V3.3.0	5
57	et200sp	ET200SP	172.16.34.2	V3.3.0	5
58	et200sp	ET200SP	172.16.34.2	V3.3.0	5
59	et200sp	ET200SP	172.16.34.2	V3.3.0	5
60	et200sp	ET200SP	172.16.34.2	V3.3.0	5
61	et200sp	ET200SP	172.16.34.2	V3.3.0	5
62	et200sp	ET200SP	172.16.34.2	V3.3.0	5
63	et200sp	ET200SP	172.16.34.2	V3.3.0	5
64	et200sp	ET200SP	172.16.34.2	V3.3.0	5
65	et200sp	ET200SP	172.16.34.2	V3.3.0	5
66	et200sp	ET200SP	172.16.34.2	V3.3.0	5
67	et200sp	ET200SP	172.16.34.2	V3.3.0	5
68	et200sp	ET200SP	172.16.34.2	V3.3.0	5
69	et200sp	ET200SP	172.16.34.2	V3.3.0	5
70	et200sp	ET200SP	172.16.34.2	V3.3.0	5
71	et200sp	ET200SP	172.16.34.2	V3.3.0	5
72	et200sp	ET200SP	172.16.34.2	V3.3.0	5
73	et200sp	ET200SP	172.16.34.2	V3.3.0	5
74	et200sp	ET200SP	172.16.34.2	V3.3.0	5
75	et200sp	ET200SP	172.16.34.2	V3.3.0	5
76	et200sp	ET200SP	172.16.34.2	V3.3.0	5
77	et200sp	ET200SP	172.16.34.2	V3.3.0	5
78	et200sp	ET200SP	172.16.34.2	V3.3.0	5
79	et200sp	ET200SP	172.16.34.2	V3.3.0	5
80	et200sp	ET200SP	172.16.34.2	V3.3.0	5
81	et200sp	ET200SP	172.16.34.2	V3.3.0	5
82	et200sp	ET200SP	172.16.34.2	V3.3.0	5
83	et200sp	ET200SP	172.16.34.2	V3.3.0	5
84	et200sp	ET200SP	172.16.34.2	V3.3.0	5
85	et200sp	ET200SP	172.16.34.2	V3.3.0	5
86	et200sp	ET200SP	172.16.34.2	V3.3.0	5
87	et200sp	ET200SP	172.16.34.2	V3.3.0	5
88	et200sp	ET200SP	172.16.34.2	V3.3.0	5
89	et200sp	ET200SP	172.16.34.2	V3.3.0	5
90	et200sp	ET200SP	172.16.34.2	V3.3.0	5
91	et200sp	ET200SP	172.16.34.2	V3.3.0	5
92	et200sp	ET200SP	172.16.34.2	V3.3.0	5
93	et200sp	ET200SP	172.16.34.2	V3.3.0	5
94	et200sp	ET200SP	172.16.34.2	V3.3.0	5
95	et200sp	ET200SP	172.16.34.2	V3.3.0	5
96	et200sp	ET200SP	172.16.34.2	V3.3.0	5
97	et200sp	ET200SP	172.16.34.2	V3.3.0	5
98	et200sp	ET200SP	172.16.34.2	V3.3.0	5
99	et200sp	ET200SP	172.16.34.2	V3.3.0	5
100	et200sp	ET200SP	172.16.34.2	V3.3.0	5

The 'Device Details' pane on the right shows the following information for the 'et200sp' device:

- Device:** Name: et200sp, Device Type: ET200SP, IP Address: 172.16.33.3, Subnet Mask: 255.255.255.0, Device ID: 0x0313, MAC Address: 28:63:36:30:7b:22, Role: Device, Gateway: 172.16.33.3, Vendor ID: 0x002A, Vendor Name: SIEMENS AG, Status: OK.
- Identification & Maintenance (I&M) Data:** Hardware Revision: 5, I&M Version: 1.1, Vendor ID: 0x002A, Order Number: 6ES7 155-6AU00-0BNO, Profile ID: 0x0000, Profile Specific Type: 5, Revision Counter: 0x0000, Serial Number: 5 C-F5VD11782015, Firmware Version: V3.3.0.
- Diagnostic Status:** Diagnostic buffer is empty.
- Interfaces:** et200sp.
- Modules:** Slot 0 - IM 155-6 PN ST V3.3, Slot 1 - DI 8x24VDC ST V1.1.

4.4.3 Transfer of the Device Name for a Single Device


Task

The device name of a single network device from a reference network is to be copied to one particular device found in the physical network.

Implementation


1. In the [Network Analysis Task \(3.2\)](#), select the [Configuration Mode \(3.2.4\)](#).
2. Open a reference topology with the "Add Topology File" icon from the function bar (1). You may load topology files you created and saved earlier with PRONETA Basic, TIA Portal or STEP 7.

Figure 4-13

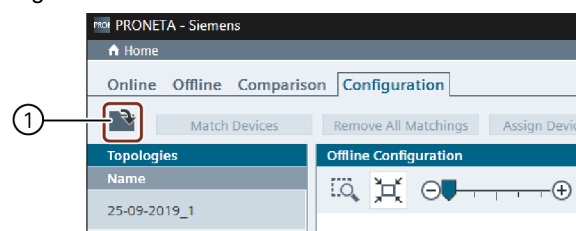


3. Use the button "Match Devices" to see for which devices of the reference network there is a match in the physical network.

Figure 4-14

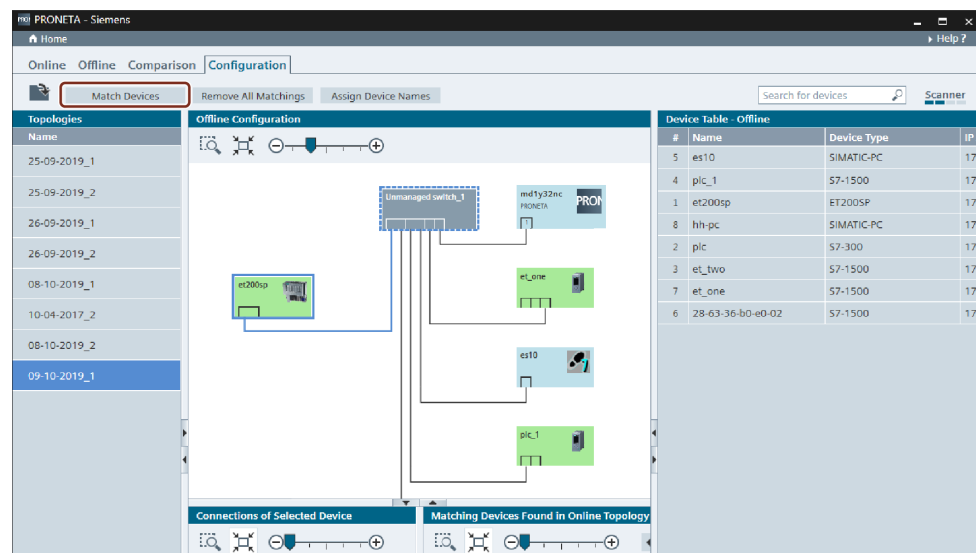

4. If a match between the reference configuration and the physical network has been found, highlight the corresponding device in the top or the bottom left Graphical View, open the [Device Context Menu](#) and execute the command "Assign Device Name".

Figure 4-15

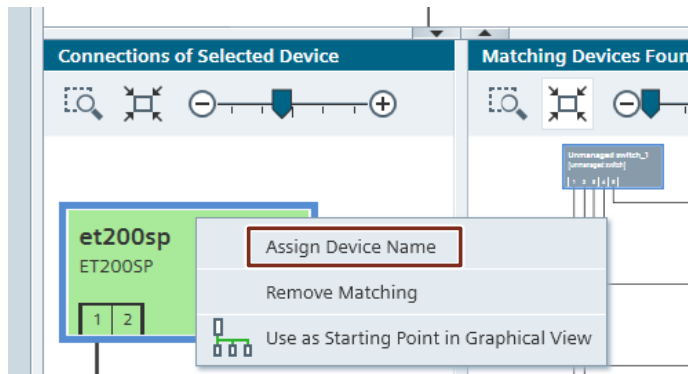

A device name from the reference network will be permanently assigned to the device.

NOTE

After the manual device configuration, the refreshed parameters are not immediately displayed in the Graphical View, but only during the next scan cycle. This can take between a few seconds and a few minutes. To refresh the table immediately, carry out a manual refresh.

4.4.4 Transfer of Device Names for a Whole Network


Task

Device names from an existing topology file or STEP 7 project are to be assigned to all devices on the physical network for which matches are found.

Implementation

1. In the [Network Analysis Task \(3.2\)](#), select the [Configuration Mode \(3.2.4\)](#).
2. Open a reference topology with the appropriate icon (1) from the function bar. You may load:
 - a. A topology file you created and saved earlier with PRONETA Basic, or
 - b. The topology information extracted from a project created with STEP 7.


Figure 4-16

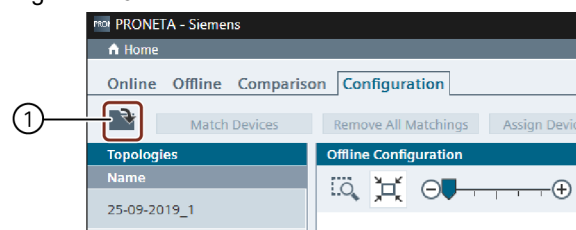

3. In the Graphical View of the offline configuration, use the button “Match devices” to see for which devices of the reference network unique matches in the physical network exist. Devices for which no or more than one potentially matching units were found in the physical network are displayed in light grey. Only devices in the physical


network with a valid IP address will be considered.
See [Finding Matching Devices in Configuration Mode](#) for precise criteria on how matches are established.

Figure 4-17

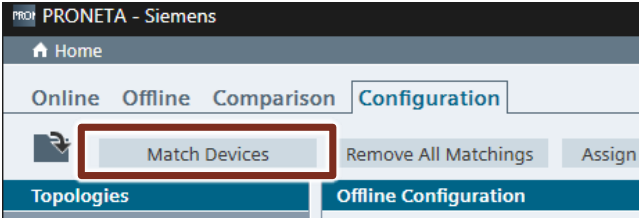

4. All devices for which matches have been found, or matching was manually performed, are displayed green.
To carry out the naming for all these devices automatically, click the “Assign Device Names” button.

Figure 4-18

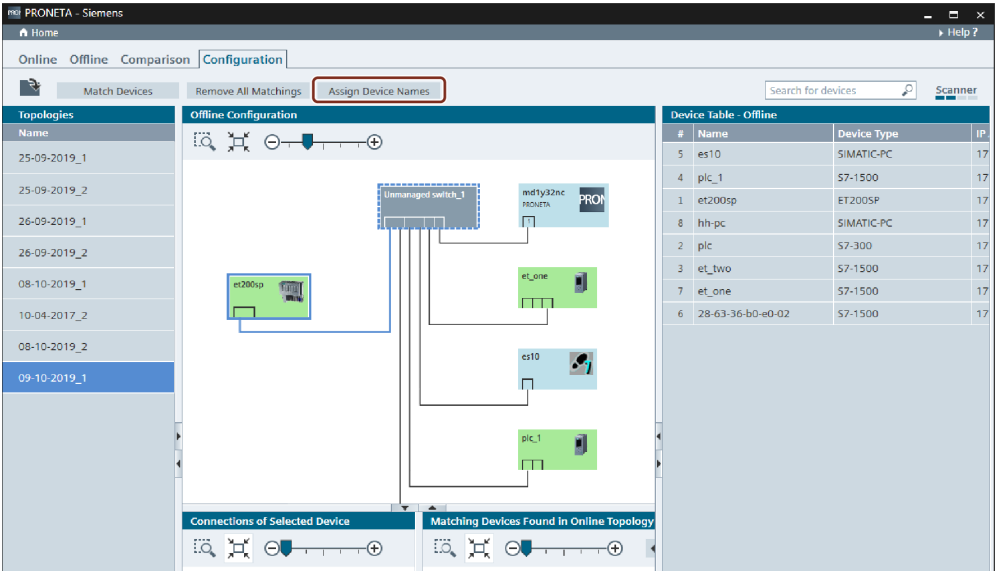

4.5 Creating an Inventory of the Network


Task

A detailed inventory of all network devices used in a physical network is to be created.

Implementation


1. In the [Network Analysis Task\(3.2\)](#), select the [Online Mode \(3.2.1\)](#).
2. Wait until a complete network scan cycle has been completed as shown by the [Scanner Status Indicator](#).
3. Click the “Export Topology” icon from the function bar to create a network inventory.

Figure 4-19

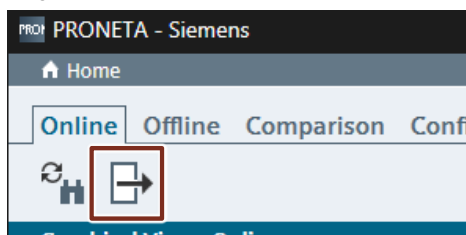

4. In the following popup window, select the file format and contents you want to save. See [Topology Export](#) for details.

Figure 4-20

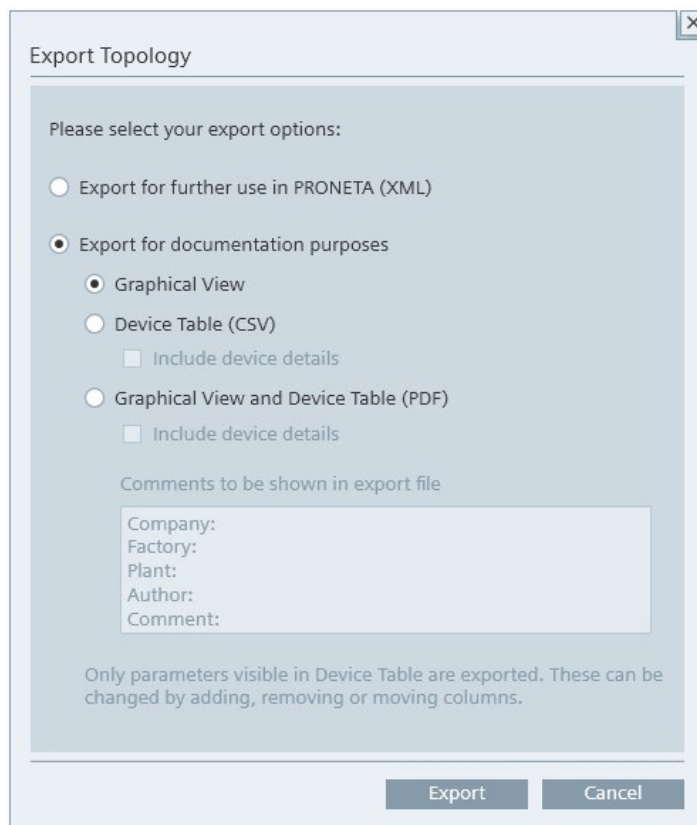

If you select “Include device details”, information about port configuration and connection partners on the ports will be included. Module information comprises I&M data for all IO modules installed.

The categories of information saved in the [Topology Export](#) are the same as currently displayed in the [Device Table](#). To filter the inventory data, activate or deactivate individual columns in the Devices Table by right-clicking on the column header in the table and selecting the relevant parameters.

Thus it can be ensured that not only the device type, module structure, IP addresses etc. are saved into the device list, but also information such as the version of the installed firmware, serial numbers etc.

Figure 4-21

The screenshot shows an Excel spreadsheet titled '22-10-2019_2.csv - Excel'. The active sheet is 'Online Topology'. The table contains the following data:

#	Name	Device Type	IP Address	Firmware	Hardware	Status	#	Name	IP Address	Port ID	Port Description	Partner Port	Partner Device	Power	Build	Module
1	plc	S7-300	172.16.39	V3.2.6		1 OK	1	plc	172.16.39	1 port-001	Siemens S	port-001	comfort 12"			
2	comf1	SIMATIC	172.16.34	V15.0.0		0 OK	1	comf1	172.16.34	1 port-001	SOC1 Port 1					
3	et_two	S7-1500	172.16.42	R28.29.29		10011 OK	1	et_two	172.16.42	1 port-001	Siemens, SIMATIC S7, Ethernet Port, X1 P1R					
4	kaliope-i	S7-PC	172.16.1.50			Unknown										
5	28-63-36-t	S7-1500	172.16.50	V2.1.0		3 Unknown	1	28-63-36-t	172.16.50	1 port-001	Siemens, port-002	comfort 12"				
6	et_one	S7-1500	172.16.42	V2.5.2		3 OK	1	et_one	172.16.42	1 port-001	Siemens, SIMATIC S7, Ethernet Port, X1 P1R					
7	hh-pc	SIMATIC	172.16.34.2			OK	1	hh-pc	172.16.34	1 port-001	Berichtet	port-002	comfort 12"			
8	et200sp	ET200SP	172.16.33	V3.3.0		5 OK	1	et200sp	172.16.33	1 port-001	Siemens, port-003	et_one				0 IM
										2 port-002	Siemens, SIMATIC S7, Ethernet Port, X1 P					1 DI
																2 DI
																3 DI
																4 DC
																5 AC

This information is important in the context of a device recall or necessary firmware updates. With a simple search in the inventory file (e.g. with Microsoft Excel or any other spreadsheet software), the devices requiring maintenance can be identified quickly and reliably.

4.6 Testing the Correct Wiring of the Distributed IO

Task

The hardware in the network is to be analyzed, and sensors and actuators in the network are to be controlled and/or checked for correct wiring, even before a PLC has been integrated.

The results of these tests are logged to document the correctness of the configuration.

4.6.1 Checking the Station Configuration

Task

The configuration of the modular distributed peripheral ET 200SP/S/MP/M/PRO/AL connected to your devices (that is, IO modules etc.) is to be checked.

Implementation

You can view the actual module installation of a device at any time in two different ways:

1.
 - a. In the [Network Analysis Task \(3.2\)](#), select the [Online Mode \(3.2.1\)](#).
 - b. Highlight the respective device in the [Graphical View](#), or the [Device Table](#).
 - c. In the detail view, open the branch “Modules” by clicking its triangle.
 - d. You can see the module configuration of the selected station. For details, you can open the branches corresponding to the individual slots.


Figure 4-22

The screenshot displays the PRONETA Basic software interface. The top navigation bar includes 'Home', 'Online', 'Offline', 'Comparison', and 'Configuration'. The main area is divided into two panes. The left pane, titled 'Graphical View - Online', shows a network topology with a central 'Unmanaged switch 6' connected to several devices: 'et_two S7-1500', 'et200sp ET200SP', 'hh-pc SIMATIC-PC', and '28-63-36-b0-e0-02 S7-1500'. The right pane, titled 'Device Details: et200sp', provides detailed information about the selected device. It includes sections for 'Device' (Name, Device Type, IP Address, Subnet Mask, Device ID, MAC Address, Role, Gateway, Vendor ID, Vendor Name, Status), 'Identification & Maintenance (I&M) Data' (Hardware Revision, I&M Version, Vendor ID, Order Number, Profile ID, Profile Specific Type, Revision Counter, Serial Number, Firmware Version), 'Diagnostic Status' (Diagnostic buffer is empty), and 'Interfaces'. The 'Modules' section is expanded, showing a list of modules installed in the device slots, including Slot 0 (IM 155-6 PN ST V3.3), Slot 1 (DI 8x24VDC ST V1.1), Slot 3 (DI 8xNAMUR HF V1.0, QI), Slot 4 (DQ 8x24VDC/0.5A ST V1.1), Slot 5 (AQ 4xUI ST V1.1), Slot 6 (AI EnergyMeter ST V2.0 (32I/12O)), and Slot 7 (Server module V1.1 (IM 155-6 PN ST V1.0)).

#	Name	Device type	IP Address	Firmware Version	Hardware Revision
4	plc_1	S7-1500	172.16.33.2	V1.8.1	2
1	et200sp	ET200SP	172.16.33.3	V3.3.0	5
7	hh-pc	SIMATIC-PC	172.16.34.2		
8	hmi_1	TP1200 Comfort	172.16.34.210	V15.1.0	0
2	plc	S7-300	172.16.39.78	V3.2.6	1
3	et_two	S7-1500	172.16.42.254	R28.29.29	10011
5	et_one	S7-1500	172.16.42.255	V2.5.2	3
1	28-63-36-b0-e0-02	S7-1500	172.16.50.222	V2.1.0	3

2. You get to the same information by switching to the [IO Test Task \(3.3\)](#) highlighting the respective device in the [Device Selection Mode \(3.3.1\)](#). In the right panel of the screen, module details will be displayed.

Figure 4-23

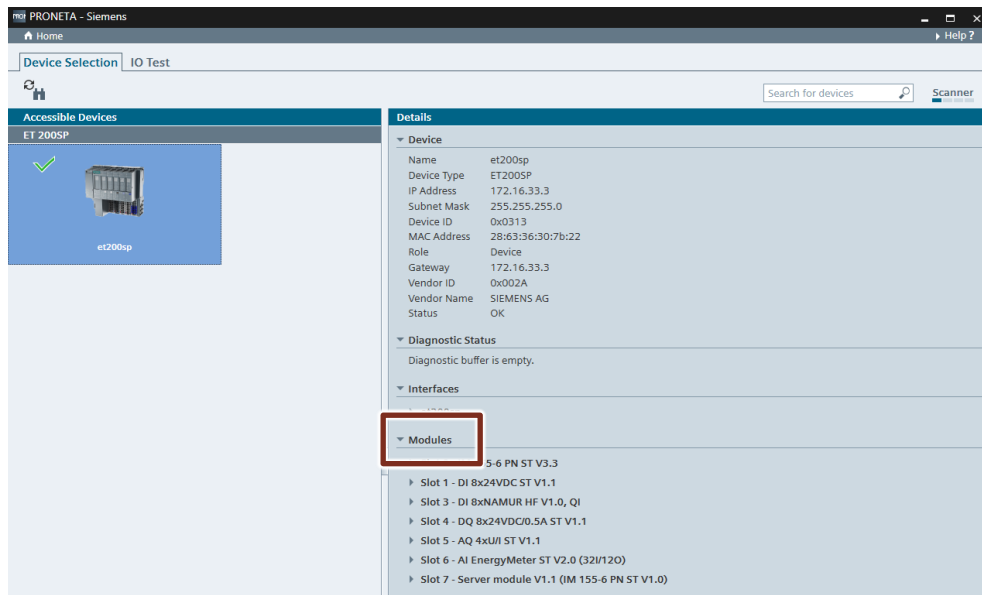

4.6.2 Checking the Signal Wiring: “IO Test”

Task

With the IO Test, the wiring of the inputs and outputs of the IOs used are checked to determine whether all devices have been connected correctly.

The test results are logged and saved to document the state of the system.

Preparations

NOTE For the IO Test, PRONETA Basic must have been extracted to a directory where it has writing privileges while running.

1. In the start screen, select the [IO Test Task \(3.3\)](#).
2. The device to be checked must have a valid IP address and device name. Make sure that this is the case by checking “Automatically assign temporary IP addresses” and “Automatically assign temporary device names” in the [General Settings](#) dialog ([3.4.1](#)).
3. In [Device Selection Mode \(3.3.1\)](#), click on the module to be tested. In the right-hand part of the window, you can see a table with details of the selected device.
4. To proceed to the IO Test, select the [IO Test Mode \(3.3.2\)](#) tab, or double-click on the device icon.



WARNING

Manipulating the interfaces of control components can result in sudden movement of the machinery and the electrification of equipment.

Physical injury and electrical shock to personnel are consequently possible.

Make sure the machinery is in a safe state with no unauthorized personnel within range, before turning the IO Test on.

NOTICE

Loss of F-destination addresses


After performing an IO test with PRONETA Basic on a device, the attached F-IO modules will have their F-destination addresses deleted, leading to the module entering a safe state.

In this case, assign the F-destination addresses anew to the F modules concerned using the respective engineering tool.

The test of F-IO modules is per default disabled.

The IO Test mode window consists of two segments: A [Device View](#) (1) on the left half of the window, and a [Details Table](#) (2) on the right half. By dragging the dividing bar between the panes to the left or the right, you can adjust the size of the segments.


Figure 4-24

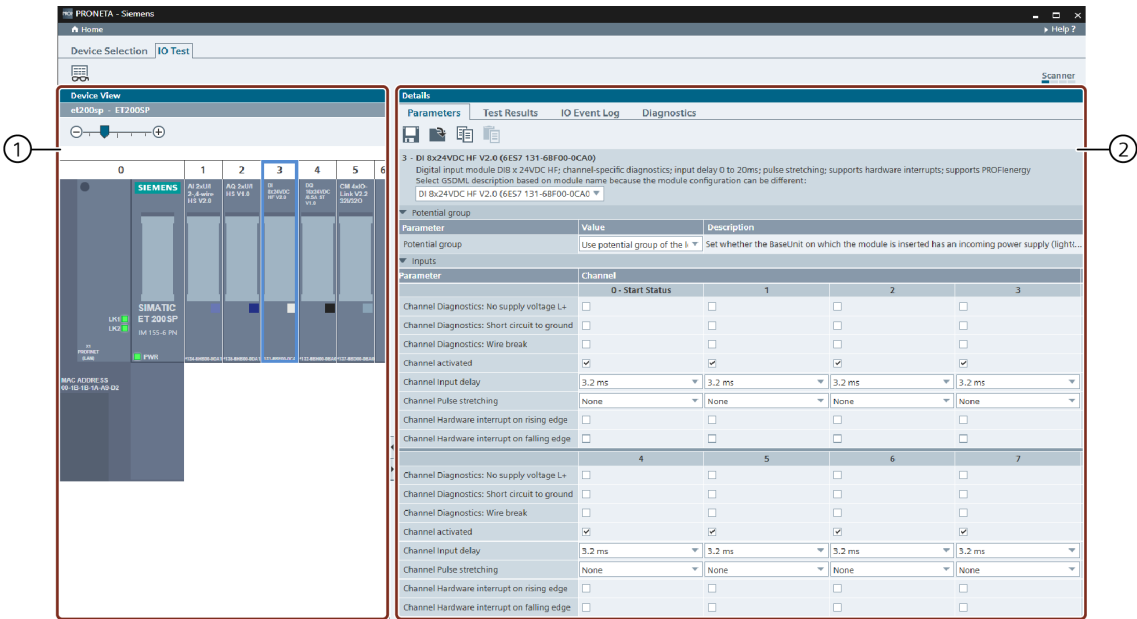

The Device View (1) gives you a graphical overview over the device you currently want to test, while the tables on the right side provide you with information about the test progress.

5. Select a module and click on the “Parameters” tab in the Details (2) to adjust the parameters of the IO modules to your actual configuration.
For example, enter the channel input delay for signals in the respective field of the table. If you leave a field unchanged, its default value will be used.
Repeat this step for all modules you want to check before turning to the actual test procedure.

Figure 4-25

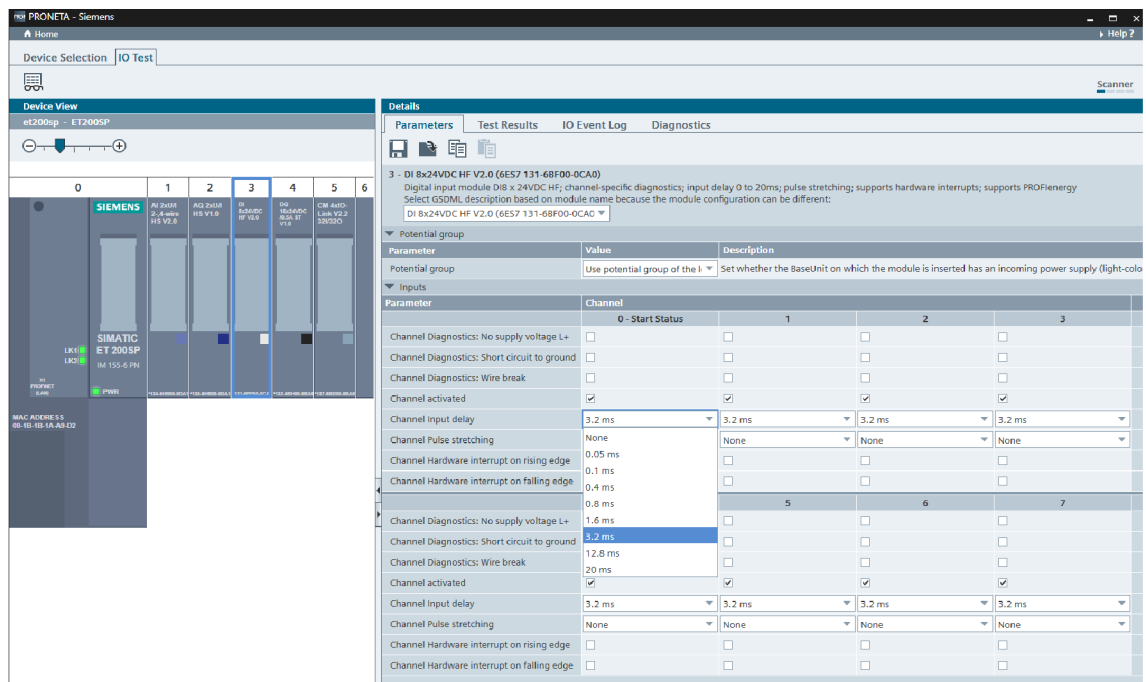

6. Click the “Force and Monitor Values” (2) icon in the function bar. This will establish a PROFINET application relation to the device. You can now start with the IO Test for the device.

NOTE

At any given time, only one PROFINET application relation (AR) can be established for one device. Make sure that no other PROFINET controller occupies this connection. To perform an IO Test of the device from another subnet, you must be connected to the corresponding subnet.


Monitoring the Installation

When Force Mode is established, the header bars of both the device and the details view will turn light green.

You can now monitor the status of digital inputs with the LED representations in the device view of the respective module, while for analog inputs the current value is displayed. Digital outputs can be monitored and forced by watching and clicking on the LED representations.

Use the [Popup Window](#) for a larger display of the modules by clicking on the “+” symbol (1) above the corresponding module in the device view.


Figure 4-26

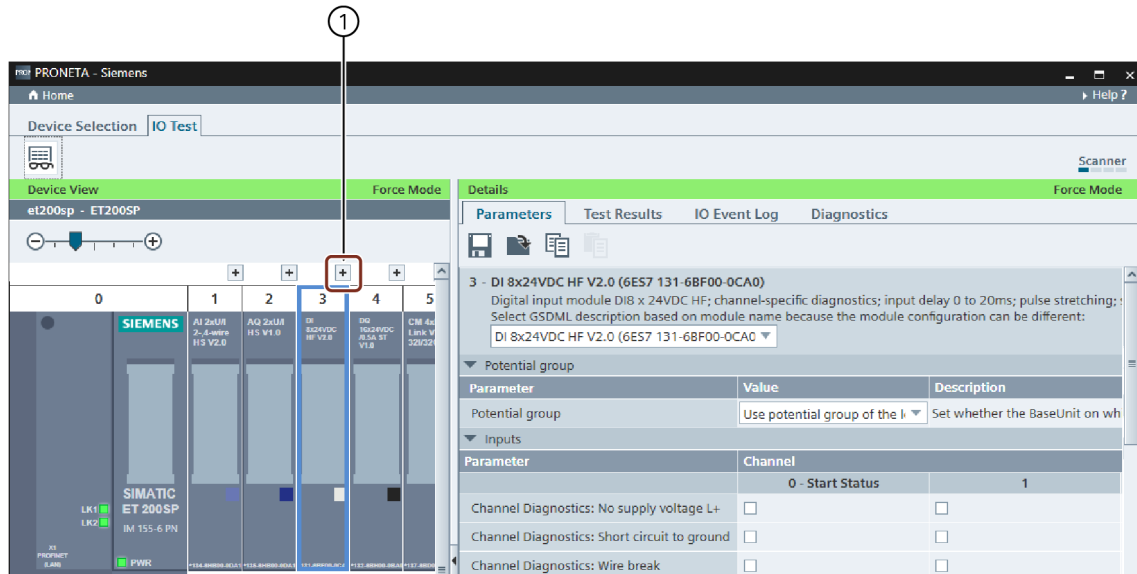

Performing and Documenting the Tests

1. Go to the “Test Results” tab in the details view.
2. If you want to continue a previous or incomplete test of a configuration, use the “Load Test Results” (1) icon from the function bar, to pick up your work from where you left. Otherwise, simply begin with the test procedure.

Figure 4-27

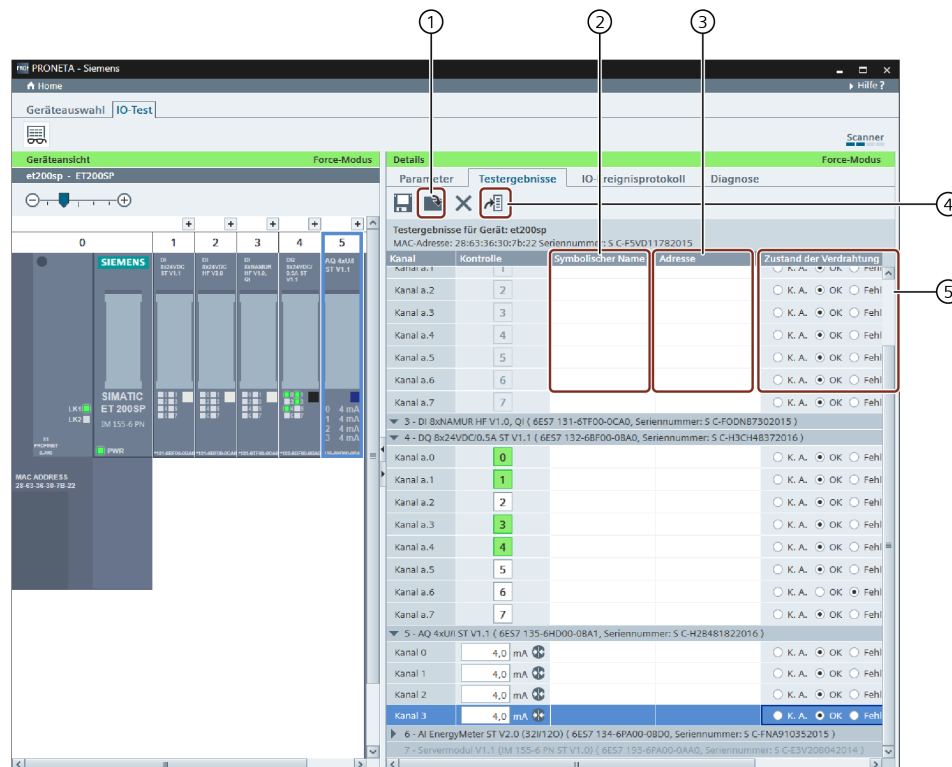


In the “Test Results” tab, you can assign names for the individual connections in the “Symbolic Name” (2) column and enter the address of the memory image in the “Address” (3) column. These are intended only as memory aids for the tester and have no effect on the actual configuration. Symbolic names can also be imported from AML files (see [Using an AML File as Reference](#) for details). To do so, click the corresponding icon (4).

The “Comment” column gives you space for additional comments.

3. Check your wiring by applying different signals to your inputs and setting the outputs and monitor the effects in your installation.
In “Status Wiring” (5), enter the respective test result for all connections. By default, all tests are marked “N.a.” (“Not applicable”, untested). Change this to “OK” if everything goes according to plan, or to “Error” if you found any faults.


Note that reading and writing information to a module interface is possible in several different places. In the image below, the boxed areas (1) – (3) all control the same module. Use the popup window to get a magnified representation of the interface values.

Figure 4-28

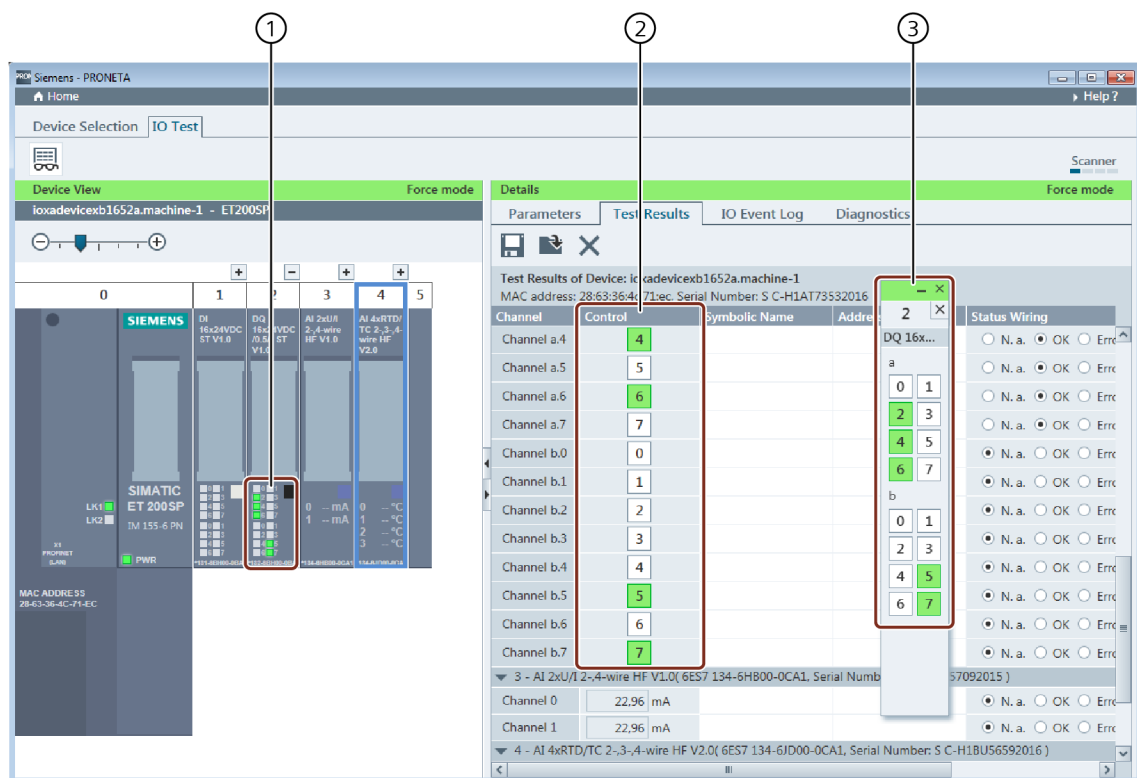

4. Check also which reactions your interventions provoked in the “IO Event Log” and “Diagnostics” tabs of the [Details Table](#).

Figure 4-29

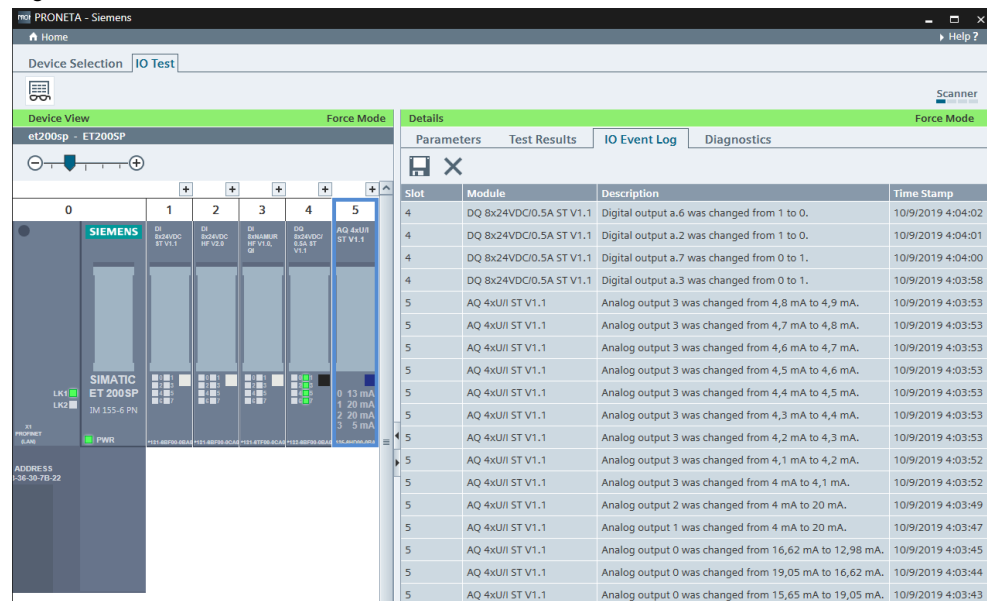


The “IO Event Log” tab (above) records all changes applied to inputs and outputs of the connected modules. The “Diagnostics” tab reflects the state of the device’s diagnostics buffer, which contains error messages like the pulling of a module.

When you have completed your installation check, or if you want to interrupt your work to proceed at a later time, you can save your results at any time with “Save IO Event Log” (1) from the “Test results” function bar.

To delete the results entered so far and start over from scratch, use “Reset Test Results” (2).

Figure 4-30

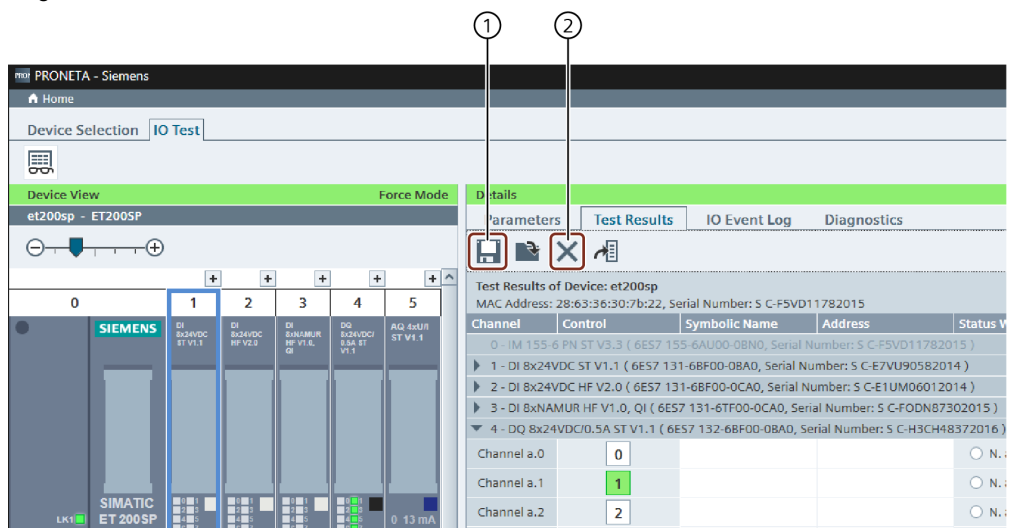

5. Repeat the previous steps for all the modules to be checked.
6. When you are done, save your test results to document the correct state of your installation. (See [Topology Export](#) for file formats and contents.)

Figure 4-31

Channel	Symbolic Address	Status	Wiring Comment	Identification Number
Test Results of Station et200sp (MAC Address: 28:63:36:30:7b:22, Serial Number: S C-F5VD11782015)				
0 - IM 155-6 PN ST V3.3 (6ES7 155-6AU00-0BN0, Serial 0x00074700)				
1	DI 8x24VDC ST V1.1 (6ES7 131-6BF00-0BA0, Serial 0x00004D4B)			
5	Channel a.0	OK		
6	Channel a.1	OK		
7	Channel a.2	OK		
8	Channel a.3	OK		
9	Channel a.4	OK		
10	Channel a.5	OK		
11	Channel a.6	OK		
12	Channel a.7	OK		
2 - DI 8x24VDC HF V2.0 (6ES7 131-6BF00-0CA0, Serial 0x00004D4D)				
14	Channel a.0	OK		
15	Channel a.1	OK		
16	Channel a.2	OK		
17	Channel a.3	OK		
18	Channel a.4	OK		
19	Channel a.5	OK		
20	Channel a.6	OK		
21	Channel a.7	OK		
3 - DI 8xNAMUR HF V1.0, QI (6ES7 131-6TF00-0CA0, Serial 0x00004D43)				
4 - DI 8x24VDC/0.5A ST V1.1 (6ES7 132-6BF00-0BA0, Serial 0x00004D8E)				
24	Channel a.0	OK		
25	Channel a.1	OK		
26	Channel a.2	OK		
27	Channel a.3	Error		
28	Channel a.4	N. a.		
29	Channel a.5	N. a.		
30	Channel a.6	N. a.		

The protocol containing the test results can be opened for further processing with any spreadsheet software, for example Microsoft Excel.

This provides you with a simple and reliable method to test and document your installations wiring. Note that, besides the PC running PRONETA Basic and your PROFINET devices, you do not require any additional hardware or configuration software to perform these tests.

5 Related Literature

Table 5-1

	Topic	Title / Link
\1\	Siemens Industry Online Support	http://support.industry.siemens.com
\2\	Download page of this entry	https://support.industry.siemens.com/cs/ww/en/view/67460624
\3\	PRONETA product page	https://new.siemens.com/global/en/products/automation/industrial-communication/profinet/portfolio/proneta.html
\4\	PRONETA Professional (SIEMENS Mall)	https://mall.industry.siemens.com/mall/en/WW/Catalog/Product/6ES7853-2BE01-0YA0

6 History

Table 6-1

Version	Date	Modifications
V1.0	02/2013	First version
V2.0	10/2013	Adapted to PRONETA 2.0.8.4
V2.3	12/2015	Complete rewrite, adaptation to PRONETA 2.3
V2.4	03/2017	Adapted to PRONETA 2.4
V2.4.1	10/2017	Minor corrections
V2.5	03/2018	Adapted to PRONETA 2.5
V2.6	03/2019	Adapted to PRONETA 2.6
V3.0	09/2019	Adapted to PRONETA 3.0
V3.1	06/2020	Adapted to PRONETA Basic 3.1
V3.2	05/2021	Adapted to PRONETA Basic 3.2