



Edition

11/2023

OPERATING INSTRUCTIONS

# SINAMICS/SIMOTICS

## SINAMICS S200 PROFINET servo drive system

SINAMICS S200 converter product line, PROFINET version (PN)  
SIMOTICS S-1FL2 servo motor



# SIEMENS

## SINAMICS/SIMOTICS

### SINAMICS S200 PROFINET servo drive system with SIMOTICS S-1FL2

#### Operating Instructions


PROFINET version (PN), Firmware V6.3


Introduction	1
Fundamental safety instructions	2
Description	3
Application planning	4
Mounting	5
Connecting	6
Commissioning (web server)	7
Commissioning (Startdrive)	8
Series commissioning	9
Functions	10
Tuning	11
System messages	12
Corrective maintenance	13
Technical data	14
Examples/applications	15
Appendix	A


## Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 <b>DANGER</b>
indicates that death or severe personal injury <b>will</b> result if proper precautions are not taken.

 <b>WARNING</b>
indicates that death or severe personal injury <b>may</b> result if proper precautions are not taken.

 <b>CAUTION</b>
indicates that minor personal injury can result if proper precautions are not taken.

<b>NOTICE</b>
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

### Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### Proper use of Siemens products

Note the following:

 <b>WARNING</b>
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

### Trademarks

All names identified by ® are registered trademarks of Siemens Aktiengesellschaft. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

# Table of contents

<b>1</b>	<b>Introduction</b>	<b>15</b>
1.1	About SINAMICS	15
1.2	About this manual	16
1.2.1	Content	16
1.2.2	Target group	16
1.2.3	What's new?	17
1.2.4	Standard scope	17
1.2.5	Use of third-party products in this documentation	18
1.2.6	Websites of third-party companies	18
1.3	SINAMICS documentation	19
1.4	Service and Support	20
1.4.1	Siemens Industry Online Support on the Web	20
1.4.2	Spare parts services	20
1.5	Important product information	21
1.5.1	Intended use	21
1.5.2	Firmware updates and constraints	22
1.5.3	Open-source software (OSS)	22
1.5.4	Compliance with the General Data Protection Regulation	23
<b>2</b>	<b>Fundamental safety instructions</b>	<b>25</b>
2.1	General safety instructions	25
2.2	Equipment damage due to electric fields or electrostatic discharge	33
2.3	Warranty and liability for application examples	34
2.4	Cybersecurity information	35
2.5	Residual risks of power drive systems	36
<b>3</b>	<b>Description</b>	<b>39</b>
3.1	System overview	39
3.1.1	Converter	43
3.1.2	Motor	44
3.1.3	MOTION-CONNECT 350 and 380 cables	44
3.2	Scope of delivery	45
3.2.1	Converter	45
3.2.1.1	Rating plate	46
3.2.1.2	Article number explanation	47
3.2.1.3	Serial number explanation	48
3.2.2	Motor	48
3.2.2.1	Rating plate	50
3.2.2.2	Article number explanation	52
3.2.2.3	Serial number explanation	53
3.2.3	MOTION-CONNECT 350 and 380 cables	54

3.2.3.1	Overview .....	54
3.2.3.2	Article number explanation .....	55
3.3	Device combinations .....	56
3.3.1	200 V servo drive system .....	56
3.3.2	400 V servo drive system .....	57
3.4	Accessories .....	59
3.4.1	Connector kits .....	59
3.4.2	Cables and connectors .....	60
3.4.2.1	MOTION-CONNECT cables and connectors .....	60
3.4.2.2	I/O cable and connector .....	62
3.4.3	Line filter .....	63
3.4.3.1	Recommended line filters .....	64
3.4.3.2	Technical data .....	64
3.4.3.3	Dimension drawing .....	65
3.4.3.4	Mounting instructions for the line filter .....	69
3.4.4	External 24 V DC power supply .....	70
3.4.5	Replacement fans .....	70
3.4.6	Shield plate kit .....	71
3.4.7	SD card .....	72
3.5	Directives and standards .....	73
3.5.1	Directives, standards and certificates for the converter .....	73
3.5.2	Directives, standards and certificates for the motor .....	74
3.5.3	Directives, standards and certificates for the MOTION-CONNECT cable .....	76
<b>4</b>	<b>Application planning .....</b>	<b>79</b>
4.1	Protection of persons from electromagnetic fields .....	79
4.2	Fault protection for the motor circuit .....	81
4.3	Permissible mains supply network configurations for motors .....	82
4.4	Line connection conditions for the converter with the motor 1FL2 .....	83
4.5	Removing the IT screw for the functional grounding .....	84
4.6	Minimum cross-section of the protective conductors .....	86
4.7	Electromagnetic compatibility (EMC) .....	88
4.7.1	Interference caused by electromagnetic fields .....	88
4.7.2	Electromagnetic compatibility (EMC) .....	88
4.7.3	EMC environments in residential and industrial areas .....	89
4.7.4	EMC category .....	89
4.7.5	EMC limit values in South Korea .....	90
4.7.6	Harmonic current emissions .....	90
4.8	EMC-compliant installation .....	92
4.8.1	EMC zones in the control cabinet .....	92
4.8.2	Shielding and potential equalization inside the control cabinet .....	92
4.8.3	Potential equalization between control cabinets .....	93
4.8.4	Electromechanical components .....	93
4.8.5	EMC-compliant cable routing .....	94
4.8.6	Shielded cables for the converter .....	95
4.8.7	Achievable EMC category .....	96

<b>5</b>	<b>Mounting .....</b>	<b>99</b>
5.1	Converter .....	99
5.1.1	Mounting instructions for the converter .....	99
5.1.2	Mounting position .....	99
5.1.3	Dimension drawings and drilling dimensions .....	100
5.1.3.1	Dimension drawing and drilling dimensions for the 200 V converter .....	100
5.1.3.2	Dimension drawing and drilling dimensions for the 400 V converter .....	101
5.1.4	Minimum clearances .....	102
5.2	Motor .....	103
5.2.1	Transporting and lifting .....	103
5.2.2	Checklist prior to mounting .....	106
5.2.3	Safety labels on the motor .....	107
5.2.4	Mounting instructions for the motor .....	108
5.2.5	Mounting position .....	110
5.2.6	Dimension drawings for motors .....	111
5.2.6.1	Dimension drawing for the 1FL2 motor, shaft height 20 .....	111
5.2.6.2	Dimension drawing for the 1FL2 motor, shaft height 30 .....	112
5.2.6.3	Dimension drawing for the 1FL2 motor, shaft height 40 .....	113
5.2.6.4	Dimension drawing for the 1FL2 motor, shaft height 45 .....	114
5.2.6.5	Dimension drawing for the 1FL2 motor, shaft height 48 .....	115
5.2.6.6	Dimension drawing for the 1FL2 motor, shaft height 52 .....	116
5.2.6.7	Dimension drawing for the 1FL2 motor, shaft height 65 .....	117
5.2.6.8	Dimension drawing for the 1FL2 motor, shaft height 90 .....	118
5.2.7	Mounting the feather key .....	119
5.2.8	Attaching output elements .....	120
5.2.9	Laying cables in cable carriers (for MOTION-CONNECT 380 only) .....	123
<b>6</b>	<b>Connecting .....</b>	<b>127</b>
6.1	System connection .....	128
6.2	Overview of the converter interfaces .....	129
6.3	Cables and connectors .....	130
6.3.1	Maximum permissible cable lengths .....	130
6.3.2	Conductor cross-sections and cable lugs .....	130
6.4	Connecting the mains supply .....	132
6.4.1	Interface description - X1 .....	132
6.4.2	Wiring .....	132
6.4.3	Using several single-phase converters in machines and plants .....	133
6.5	Connecting the motor .....	135
6.5.1	Routing cables in damp environments .....	135
6.5.2	Connecting the motor power .....	135
6.5.2.1	Interface description - X2 (converter side) .....	135
6.5.2.2	Interface description - power connector (motor side) .....	136
6.5.2.3	Wiring .....	138
6.5.3	Connecting the motor holding brake .....	139
6.5.3.1	Interface description (converter side) .....	139
6.5.3.2	Interface description (motor side) .....	139
6.5.3.3	Wiring .....	140
6.5.4	Connecting the encoder .....	143
6.5.4.1	Interface description - X120 (converter side) .....	143

6.5.4.2	Interface description (motor side) .....	144
6.5.4.3	Wiring .....	145
6.5.5	Rotating the connectors at the motor .....	145
6.6	Connecting the braking resistor.....	148
6.6.1	Interface description - X1 .....	148
6.6.2	Wiring .....	148
6.7	Connecting the 24 V DC power supply.....	151
6.7.1	Interface description - X124 .....	151
6.7.2	Wiring .....	151
6.8	Connecting the inputs and outputs .....	153
6.8.1	Interface description - X130 .....	153
6.8.2	Wiring .....	154
6.8.2.1	Wiring of digital inputs.....	154
6.8.2.2	Wiring of digital outputs .....	155
6.8.2.3	Wiring of pulse train outputs.....	155
6.9	Connecting STO (for S200 PN only) .....	157
6.9.1	Interface description - X131 .....	157
6.9.2	Wiring .....	157
6.10	Connecting to the fieldbus .....	159
6.10.1	Interface description - X150 .....	159
6.10.2	Wiring .....	160
6.11	Connecting the service interface (Ethernet).....	161
6.11.1	Interface description - X127 .....	161
<b>7</b>	<b>Commissioning (web server).....</b>	<b>163</b>
7.1	Introduction.....	163
7.2	Fundamentals.....	164
7.2.1	Supported operating units .....	164
7.2.2	Requirements for commissioning .....	164
7.2.3	Supported browsers.....	164
7.2.4	Communication interfaces .....	165
7.2.5	Making the operating instructions available for the web server information system.....	166
7.2.6	Using the web server information system .....	168
7.2.7	Reloading pages .....	171
7.3	Getting started .....	172
7.3.1	Calling the web server.....	172
7.3.2	Settings for brand-new converters.....	173
7.3.3	Basic settings.....	173
7.3.4	Security settings .....	174
7.4	Functions and menus.....	177
7.4.1	Home page.....	177
7.4.2	Commissioning.....	178
7.4.2.1	Complete commissioning workflow.....	178
7.4.2.2	Quick setup .....	180
7.4.2.3	Testing the converter configuration .....	183
7.4.2.4	Optimization.....	183
7.4.3	Monitoring and operation .....	186
7.4.3.1	Drive status .....	186



7.4.3.2	Inputs/outputs .....	188
7.4.4	Diagnostics .....	188
7.4.4.1	Messages .....	188
7.4.4.2	Diagnostic buffer .....	191
7.4.4.3	Safety Integrated (for S200 PN only).....	192
7.4.4.4	Connection overview .....	193
7.4.4.5	Communication .....	193
7.4.4.6	Status word and control word .....	195
7.4.5	Parameters .....	197
7.4.5.1	Parameter lists .....	197
7.4.5.2	User-defined parameter list .....	199
7.4.6	Backup and restore .....	199
7.4.6.1	Overview .....	199
7.4.6.2	Save drive data to backup file .....	201
7.4.6.3	Scope of the backup.....	201
7.4.6.4	Restoring data from an unencrypted backup data .....	202
7.4.6.5	Restoring data from an encrypted backup data .....	204
7.4.6.6	Restore factory settings.....	207
7.4.7	System .....	208
7.4.7.1	Settings .....	208
7.4.7.2	User management .....	209
7.4.7.3	Protection & Security.....	211
7.4.7.4	Licenses.....	213
7.4.7.5	Firmware update.....	215
7.4.7.6	About web server.....	215
7.4.8	Support .....	216
7.4.9	Control panel.....	217
<b>8</b>	<b>Commissioning (Startdrive).....</b>	<b>219</b>
8.1	Introduction.....	219
8.2	Requirements for commissioning .....	220
8.3	Basics .....	221
8.3.1	Communication interfaces .....	221
8.3.2	Protected communication .....	222
8.3.3	User administration and security .....	222
8.3.4	Loading data from the drive into the project.....	224
8.3.5	Loading project data into the drive .....	226
8.3.6	Saving changes in the project.....	226
8.3.7	Retentively saving changes to the SD card .....	227
8.3.8	Using parameter lists and user-defined lists .....	228
8.4	Procedures for device configuration and commissioning .....	230
8.4.1	Requirements .....	230
8.4.2	Simple basic parameterization (offline) .....	231
8.4.3	Simple basic parameterization (online).....	232
8.4.4	Basic parameterization together with a SIMATIC controller .....	233
8.5	Combining and configuring devices in the project.....	234
8.5.1	Converter .....	234
8.5.1.1	Inserting a converter into the project.....	234
8.5.1.2	Optional: Replacing a converter.....	236
8.5.1.3	Making detailed converter settings.....	240

8.5.1.4	Specifying a motor .....	241
8.5.2	Control and technology object .....	243
8.5.2.1	Inserting a SIMATIC S7 controller into the project.....	243
8.5.2.2	Networking a controller and a converter .....	245
8.5.2.3	Inserting a technology object into the SIMATIC S7 controller .....	247
8.5.2.4	Interconnecting the technology object and a converter.....	251
8.6	Carrying out guided quick startup .....	253
8.6.1	Overview .....	253
8.6.2	Editing mode (online only).....	256
8.6.3	Connection to PLC.....	258
8.6.4	Application .....	259
8.6.5	Limits .....	260
8.6.5.1	Configuring limits when "Speed control" is active .....	260
8.6.5.2	Configuring limits when "Positioning" is active .....	261
8.6.6	Application settings .....	265
8.6.6.1	Configuring active homing .....	266
8.6.6.2	Configuring absolute encoder adjustment .....	268
8.6.7	I/O configuration .....	270
8.6.8	Telegrams (offline only).....	271
8.6.9	Rotate & optimize .....	273
8.6.10	"Overview" function view .....	274
8.6.10.1	Offline mode.....	274
8.6.10.2	Online mode.....	275
8.7	Configuring the converter .....	276
8.7.1	Basic parameterization .....	276
8.7.2	Configuring digital inputs and outputs via technology objects.....	278
8.7.2.1	Configuring a measuring probe using the technology objects.....	279
8.7.3	Technology functions.....	280
8.7.3.1	Basic positioner.....	280
8.7.3.2	Configuring Pulse Train Output (PTO) (for the S200 converter only) .....	283
8.7.4	Configuring telegrams.....	285
8.7.4.1	Calling the telegram configuration .....	285
8.7.4.2	Telegram settings.....	286
8.7.4.3	Adding telegrams.....	286
8.8	Optimizing commissioning.....	288
8.8.1	Establishing an online connection to the converter.....	288
8.8.2	Traversing the converter from the control panel with speed setpoint.....	289
8.8.3	Performing One Button Tuning.....	291
8.8.4	Terminating the online connection from the converter .....	293
8.9	Using online diagnostic functions.....	294
8.9.1	Diagnostic icons.....	294
8.9.2	Display messages .....	294
8.9.3	Calling diagnostic functions .....	296
8.9.4	Security .....	298
8.9.5	Communication .....	299
8.9.5.1	Receive direction.....	299
8.9.5.2	Send direction .....	300
8.9.6	Functions.....	301
8.9.6.1	Overview .....	301
8.9.6.2	Setting the time-of-day .....	302

8.9.6.3	Setting the time with synchronization (NTP server).....	303
8.9.6.4	Setting the time with synchronization (PLC as NTP server) .....	304
8.9.6.5	Setting the time without synchronization .....	304
8.9.7	Backup and restore .....	305
8.9.7.1	Restarting the drive.....	305
8.9.7.2	Retentively saving the drive data .....	306
8.9.7.3	Restore factory settings.....	306
8.9.8	Overview of licenses .....	308
8.9.9	Updating the firmware in the Startdrive project.....	309
8.10	Checking using the trace function .....	311
<b>9</b>	<b>Series commissioning .....</b>	<b>315</b>
9.1	Series commissioning with SD card .....	316
9.2	Series commissioning using the web server .....	317
<b>10</b>	<b>Functions .....</b>	<b>319</b>
10.1	Overview of the functions .....	319
10.2	Inputs/outputs .....	321
10.2.1	Digital inputs .....	321
10.2.2	Digital outputs .....	322
10.3	Fieldbus communication .....	325
10.3.1	Communication via PROFINET IO .....	325
10.3.2	Configuring PROFINET IO operation .....	325
10.3.2.1	Connecting the PROFINET cable to the converter .....	325
10.3.2.2	Configuring communication using SIMATIC S7 control .....	326
10.3.2.3	Setting communication via PROFINET .....	326
10.3.3	PROFINET protocols.....	327
10.3.3.1	PROFINET protocols.....	327
10.3.3.2	Media redundancy .....	328
10.3.3.3	Connection-oriented communication protocols .....	329
10.3.4	Identification & Maintenance (I&M) data .....	330
10.4	Communication telegrams .....	332
10.4.1	Telegram structure.....	332
10.4.2	Supported telegrams.....	333
10.4.3	Telegrams for speed control .....	333
10.4.3.1	Telegram 1 .....	333
10.4.3.2	Telegram 2 .....	334
10.4.3.3	Telegram 3 .....	335
10.4.3.4	Telegram 5 .....	336
10.4.3.5	Telegram 102 .....	337
10.4.3.6	Telegram 105 .....	338
10.4.4	Telegrams for position control.....	338
10.4.4.1	Telegram 7 .....	338
10.4.4.2	Telegram 9 .....	339
10.4.4.3	Telegram 111 .....	340
10.4.4.4	Telegram 112 .....	341
10.4.5	Supplementary telegram.....	342
10.4.6	Control words, status words and message word.....	342
10.4.6.1	Control and status word 1 .....	342
10.4.6.2	Control and status word 2 .....	347

10.4.6.3	Control and status word for encoder 1 .....	349
10.4.6.4	Control word for block selection .....	350
10.4.6.5	Control word for MDI mode.....	351
10.4.6.6	Control and status word 1 for the positioner.....	352
10.4.6.7	Control and status word 2 for the positioner.....	354
10.4.6.8	Message word .....	356
10.5	General functions .....	357
10.5.1	Stopping method at servo-off .....	357
10.5.2	Speed limit .....	358
10.5.3	Torque limit .....	360
10.5.4	Vertical axis .....	361
10.5.5	PTO function (for S200 PN only) .....	362
10.5.6	Ramp-function generator .....	364
10.5.7	Setting motor overload protection in accordance with UL 61800-5-1 Ed.2.....	367
10.6	Basic positioner (EPOS) .....	368
10.6.1	Mechanical system.....	369
10.6.1.1	Axis type.....	369
10.6.1.2	Units of measurement.....	370
10.6.1.3	Setting the backlash.....	371
10.6.2	Limits .....	373
10.6.2.1	Limiting the traversing range .....	373
10.6.2.2	Limiting the traversing profiles .....	374
10.6.3	Position monitoring .....	374
10.6.3.1	Positioning and standstill monitoring .....	374
10.6.3.2	Following error monitoring .....	375
10.6.4	Homing .....	376
10.6.4.1	Terms for homing .....	377
10.6.4.2	Active homing .....	378
10.6.4.3	Passive homing .....	381
10.6.4.4	Absolute encoder adjustment.....	382
10.6.4.5	Setting the home position.....	383
10.6.5	Traversing blocks .....	383
10.6.5.1	Traversing block tasks .....	383
10.6.5.2	Travel to fixed stop .....	389
10.6.6	Direct setpoint input (MDI).....	390
10.6.7	Jog .....	394
10.6.8	Measuring probe evaluation and homing mark search .....	396
10.7	Safety Integrated (for S200 PN only).....	398
10.7.1	Safety Integrated Functions.....	399
10.7.2	Certification .....	400
10.7.3	PFH values .....	400
10.7.4	Usage time .....	401
10.7.5	Stop functions .....	401
10.7.5.1	Safe Torque Off (STO).....	401
10.7.5.2	Functional features of STO .....	403
10.7.5.3	Discrepancy time .....	404
10.7.5.4	Input filter.....	405
10.7.5.5	Self-test of the fail-safe digital input (F-DI).....	405
10.7.6	Safety Integrated function status/diagnostics.....	406
10.7.7	Responses to safety messages .....	406
10.7.7.1	Stop responses.....	406

10.7.7.2	Fail-safe acknowledgement of safety messages .....	407
10.7.8	Response time .....	408
10.7.9	Functional safety .....	408
10.7.10	Machinery Directive .....	409
<b>11</b>	<b>Tuning .....</b>	<b>411</b>
11.1	Tuning workflow .....	411
11.2	Autotuning .....	412
11.2.1	One Button Tuning.....	412
11.2.2	Real Time Tuning (Online Tuning).....	413
11.3	Manual tuning .....	415
11.3.1	Control loops .....	415
11.3.2	Servo gain adjustment .....	416
11.4	Resonance suppression .....	418
<b>12</b>	<b>System messages.....</b>	<b>421</b>
12.1	SDI Status .....	421
12.1.1	SDI Status overview .....	421
12.1.2	Status display via LEDs .....	422
12.1.3	SDI Status display.....	424
12.1.4	Function buttons .....	426
12.2	System runtime .....	427
12.3	Faults and alarms.....	428
12.3.1	Overview of faults and alarms .....	428
12.3.2	Faults .....	429
12.3.3	Alarms.....	430
12.3.4	Explanation of the list of faults and alarms .....	430
12.3.5	List of fault codes and alarm codes.....	436
<b>13</b>	<b>Corrective maintenance .....</b>	<b>587</b>
13.1	Service and maintenance for the converter.....	587
13.1.1	Restoring the converter to factory settings .....	587
13.1.1.1	Restoring factory settings via a commissioning tool .....	587
13.1.1.2	Reset of all user-defined settings to the factory setting via an SD card .....	587
13.1.2	Converter firmware update.....	589
13.1.2.1	Overview of firmware update .....	589
13.1.2.2	Firmware update via an SD card .....	589
13.1.3	Replacing the converter .....	590
13.1.3.1	Restoring the drive data via the web server .....	593
13.1.3.2	Restoring data from an unencrypted backup file .....	594
13.1.3.3	Restoring data from an encrypted backup file .....	596
13.1.4	Forming the DC link capacitors.....	598
13.2	Service and maintenance for the motor.....	600
13.2.1	Replacing the motor bearings.....	602
13.2.2	Replacing the motor.....	603
13.3	Service and maintenance for spare parts .....	605
13.3.1	Spare parts and spare parts compatibility .....	605
13.3.2	Replacing the fan unit (400 V converters FSC and FSD only).....	605

13.4	Device disposal .....	608
<b>14</b>	<b>Technical data .....</b>	<b>609</b>
14.1	Technical data of the converter .....	609
14.1.1	Permissible environmental conditions for the converter .....	609
14.1.2	General technical data .....	610
14.1.3	Specific data of the 200 V converters .....	612
14.1.4	Specific data of the 400 V converters .....	614
14.1.5	Overload capacity .....	616
14.1.6	Power derating as a function of the installation altitude and ambient temperature.....	617
14.1.7	Braking resistor .....	618
14.1.7.1	Internal braking resistor .....	618
14.1.7.2	External braking resistor.....	618
14.2	Technical data of the motor.....	623
14.2.1	General technical data .....	623
14.2.2	Permissible environmental conditions for the motor .....	624
14.2.3	Protection against electromagnetic fields (motor) .....	626
14.2.4	Cooling.....	626
14.2.5	Derating factors .....	627
14.2.6	Degree of protection .....	629
14.2.7	Balancing .....	631
14.2.8	Vibrational behavior .....	631
14.2.9	Shaft extension.....	632
14.2.10	Radial eccentricity, concentricity, and axial eccentricity.....	633
14.2.11	Axial and radial forces .....	635
14.2.11.1	Permissible axial forces .....	635
14.2.11.2	Permissible radial forces .....	636
14.2.12	Available encoders.....	641
14.2.13	Brake data .....	641
14.2.13.1	Overview of the 1FL2 holding brake.....	641
14.2.13.2	Technical data of the 1FL2 holding brake.....	643
14.2.14	Technical data and characteristics of the 1FL2 .....	644
14.2.14.1	1FL2102-2AG connected to 1 AC 200 V/3 AC 220 V .....	644
14.2.14.2	1FL2102-4AG connected to 1 AC 200 V/3 AC 220 V .....	646
14.2.14.3	1FL2103-2AG connected to 1 AC 200 V/3 AC 220 V .....	647
14.2.14.4	1FL2103-4AG connected to 1 AC 200 V/3 AC 220 V .....	648
14.2.14.5	1FL2104-2AG connected to 1 AC 200 V/3 AC 220 V .....	649
14.2.14.6	1FL2104-4AG connected to 1 AC 200 V/3 AC 220 V .....	650
14.2.14.7	1FL2102-2AF connected to 3 AC 380 V/3 AC 400 V.....	651
14.2.14.8	1FL2102-4AF connected to 3 AC 380 V/3 AC 400 V.....	652
14.2.14.9	1FL2103-2AF connected to 3 AC 380 V/3 AC 400 V.....	653
14.2.14.10	1FL2103-4AF connected to 3 AC 380 V/3 AC 400 V.....	654
14.2.14.11	1FL2104-2AF connected to 3 AC 380 V/3 AC 400 V.....	655
14.2.14.12	1FL2104-4AF connected to 3 AC 380 V/3 AC 400 V.....	656
14.2.14.13	1FL2105-2AF connected to 3 AC 380 V/3 AC 400 V.....	657
14.2.14.14	1FL2105-4AF connected to 3 AC 380 V/3 AC 400 V.....	658
14.2.14.15	1FL2203-2AG connected to 1 AC 200 V/3 AC 220 V .....	659
14.2.14.16	1FL2203-4AG connected to 1 AC 200 V/3 AC 220 V .....	660
14.2.14.17	1FL2204-2AG connected to 1 AC 200 V/3 AC 220 V .....	661
14.2.14.18	1FL2204-4AG connected to 1 AC 200 V/3 AC 220 V .....	662
14.2.14.19	1FL2203-2AF connected to 3 AC 380 V/3 AC 400 V.....	663

14.2.14.20	1FL2203-4AF connected to 3 AC 380 V/3 AC 400 V.....	664
14.2.14.21	1FL2204-2AF connected to 3 AC 380 V/3 AC 400 V.....	665
14.2.14.22	1FL2204-4AF connected to 3 AC 380 V/3 AC 400 V.....	666
14.2.14.23	1FL2205-2AF connected to 3 AC 380 V/3 AC 400 V.....	667
14.2.14.24	1FL2205-4AF connected to 3 AC 380 V/3 AC 400 V.....	668
14.2.14.25	1FL2304-2AF connected to 3 AC 380 V/3 AC 400 V.....	669
14.2.14.26	1FL2304-4AF connected to 3 AC 380 V/3 AC 400 V.....	670
14.2.14.27	1FL2306-1AC connected to 3 AC 380 V/3 AC 400 V.....	671
14.2.14.28	1FL2306-2AC connected to 3 AC 380 V/3 AC 400 V.....	672
14.2.14.29	1FL2306-4AC connected to 3 AC 380 V/3 AC 400 V.....	673
14.2.14.30	1FL2306-6AC connected to 3 AC 380 V/3 AC 400 V.....	674
14.2.14.31	1FL2306-7AC connected to 3 AC 380 V/3 AC 400 V.....	675
14.2.14.32	1FL2310-0AC connected to 3 AC 380 V/3 AC 400 V.....	676
14.2.14.33	1FL2310-2AC connected to 3 AC 380 V/3 AC 400 V.....	677
14.2.14.34	1FL2310-4AC connected to 3 AC 380 V/3 AC 400 V.....	678
14.2.14.35	1FL2310-6AC connected to 3 AC 380 V/3 AC 400 V.....	679
14.3	Technical data of MOTION-CONNECT cables.....	680
14.3.1	Technical data of MOTION-CONNECT 350.....	680
14.3.1.1	General technical data.....	680
14.3.1.2	Specific technical data.....	681
14.3.2	Technical data of MOTION-CONNECT 380.....	682
14.3.2.1	General technical data.....	682
14.3.2.2	Specific technical data.....	683
<b>15</b>	<b>Examples/applications.....</b>	<b>685</b>
<b>A</b>	<b>Appendix.....</b>	<b>687</b>
A.1	UL Markings.....	687
A.2	EMERGENCY OFF and EMERGENCY STOP.....	689
A.3	Parameters.....	691
A.3.1	Explanation of the list of parameters.....	691
A.3.2	Parameter list.....	695
A.4	Assembling cables.....	879
A.4.1	Assembling connectors on the converter side.....	880
A.4.1.1	Assembling the cable lugs.....	880
A.4.1.2	Assembling the encoder connector.....	881
A.4.1.3	Assembling the I/O connector.....	884
A.4.2	Assembling connectors on the motor side.....	885
A.4.2.1	Assembling the hybrid plug for 1FL2 motors, shaft heights 20, 30, and 40.....	885
A.4.2.2	Disassembling the hybrid plug for 1FL2 motors, shaft heights 20, 30, and 40.....	891
A.4.2.3	Assembling connectors for 1FL2 motors, shaft heights 48 and 52.....	893
A.4.2.4	Assembling connectors for 1FL2 motors, shaft heights 45, 65, and 90.....	895
A.5	Motor selection.....	900
A.5.1	Selection procedure.....	900
A.5.2	Selection examples.....	901





# Introduction

## 1.1 About SINAMICS

### Description

With the SINAMICS converter series you can solve drive tasks in the low, medium and DC voltage range. All Siemens drive components, such as converters, motors, and controls, are matched to each other and can be integrated into your existing automation systems.

You can find more information via the SINAMICS YouTube playlist (<https://www.youtube.com/playlist?list=PLw7lLwXw4H53rtHeTeifKtVMr2aXTYt0X>).

## 1.2 About this manual

### 1.2.1 Content

#### Description

This manual provides a summary of all of the information required to safely and reliably operate the converter-motor combination.

The manual enables the target groups being addressed to mount, connect, and commission the converter and motor safely and correctly.

To illustrate possible application areas for our products, typical use cases are listed in this product documentation and in the online help. These are purely exemplary and do not constitute a statement on the suitability of the respective product for applications in specific individual cases. Unless explicitly contractually agreed, Siemens assumes no liability for such suitability. Suitability for a particular application in specific individual cases must be assessed by the user, taking into account all technical, legal, and other requirements on a case-by-case basis. Always observe the descriptions of the technical properties and the relevant constraints of the respective product contained in the product documentation.

### 1.2.2 Target group

#### Description

This manual is intended for persons who perform different tasks in the drive environment. The intended target groups include, but are not limited to the following:

- Planning engineers
- Project engineers
- Machine manufacturers
- Commissioning engineers
- Electricians
- Installation personnel
- Service and maintenance personnel

### 1.2.3 What's new?

#### Description

##### Changes with respect to Edition 07/2023

- Updated the converter firmware to V6.3
- Updated the rating plate example for 1FL2 motors, shaft heights 20 and 30  
Rating plate (Page 50)
- Updated the serial number explanation for 1FL2 motors  
Serial number explanation (Page 53)
- Added the description of removing the IT screw for the functional grounding  
Removing the IT screw for the functional grounding (Page 84)
- Updated the wiring diagram for digital inputs  
Wiring of digital inputs (Page 154)
- Added the description of drive data encryption  
Security settings (Page 174)
- Optimized the description of Basic Positioner (EPOS) function  
Basic positioner (EPOS) (Page 368)
- Updated the description of LED states  
Status display via LEDs (Page 422)
- Updated the description of the converter replacement  
Replacing the converter (Page 590)
- Added the instructions on disassembling the hybrid connector of 1FL2 motors, shaft heights 20, 30, and 40  
Disassembling the hybrid plug for 1FL2 motors, shaft heights 20, 30, and 40 (Page 891)

### 1.2.4 Standard scope

#### Description

This documentation describes the functionality of the standard scope. This scope may differ from the scope of the functionality of the system that is actually supplied. Please refer to the ordering documentation only for the functionality of the supplied drive system.

Further functions may be executable in the system, which are not explained in this documentation. However, there is no entitlement to these functions in the case of a new delivery or service.

This documentation does not contain all detailed information on all types of the product. Furthermore, this documentation cannot take into consideration every conceivable type of installation, operation and service/maintenance.

The machine manufacturer must document any additions or modifications they make to the product themselves.

## 1.2.5 Use of third-party products in this documentation

### Description

This documentation contains recommendations relating to third-party products. Siemens accepts the fundamental suitability of these third-party products. You can use equivalent products from other manufacturers.

Siemens does not accept any warranty for the use of third-party products.

## 1.2.6 Websites of third-party companies

### Description

This document may contain hyperlinks to third-party websites. Siemens is not responsible for and shall not be liable for these websites and their content. Siemens has no control over the information which appears on these websites and is not responsible for the content and information provided there. The user bears the risk for their use.

## 1.3 SINAMICS documentation

### Description

The documentation on the SINAMICS product series is available under Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/view/109807358>).

You can display documents or download them in PDF and HTML5 formats.

The SINAMICS product documentation essentially includes the following manuals:

Table 1-1 SINAMICS product documentation

Information	Documentation class	Content
Device information	Operating Instructions	Compilation of all of the information required to operate the SINAMICS product
	Compact Operating Instructions	Essential contents of the Operating Instructions in reduced and compressed form
	Product Information	Information that only becomes known shortly before or even after start of delivery and is therefore not included in the associated user documentation
General information	Industrial Cybersecurity Configuration Manual	Information on the Industrial Cybersecurity functions and on the safe operation of SINAMICS product

## 1.4 Service and Support

### 1.4.1 Siemens Industry Online Support on the Web

Important product information is available through Siemens Industry Online Support using the following options:

- Website: SIOS (<https://support.industry.siemens.com/cs/ww/en/>)
- App Industry Online Support (for Apple iOS and Android)

#### Content of Siemens Online Support

- Product support
- Global forum for information and best practice sharing between users and specialists
- Local contact persons via the contact person database (→ Contact)
- Product information
- FAQs (frequently asked questions)
- Application examples
- Manuals
- Downloads
- Compatibility tool
- Newsletter with product selection
- Catalogs/brochures
- Certificates

For products with QR code, the manual and certificate can be directly called.

### 1.4.2 Spare parts services

#### Description


The online spare part service "Spares on Web" offers certain spare parts for the product:


- Website: SOW address (<https://www.sow.siemens.com>).

## 1.5 Important product information

### 1.5.1 Intended use

#### Requirement

 <b>WARNING</b>
<b>Death or serious injury if not used as intended</b>
Not using as intended can result in hazardous states.
<ul style="list-style-type: none"> <li>Carefully observe the description of intended use.</li> </ul>

 <b>WARNING</b>
<b>Incorrect use of the motor</b>
Incorrect use of the motor may cause death, serious injury (crushing) and/or property damage.
<ul style="list-style-type: none"> <li>Carefully observe the description of intended use.</li> <li>Do not use the motors in hazardous areas (where there is a risk of explosion), if the motors have not been expressly released and authorized for these types of applications. Carefully observe any special supplementary notes that may be attached.</li> <li>Make sure that the conditions at the location of use comply with all the rating plate data.</li> <li>Make sure that the conditions at the location of use comply with the conditions specified in this documentation. When necessary, take into account deviations regarding approvals or country-specific regulations.</li> </ul>

#### Note

It cannot be guaranteed that EMC emission limits are complied with if the products are connected to an isolated line supply grounded through a high ohmic connection or a line supply with grounded line conductor.

- Draw-up an EMC plan to comply with the EMC requirements of the intended application.

#### Description

The products described in this manual, together with software, accessories and options, form an electric drive to supply low-voltage AC motors.

The products are professional equipment for stationary indoor use in industrial, light-industrial, and commercial applications and are intended for supply from non-public (industrial) low-voltage line supplies. The products are not intended for use in residential areas and are not intended for supply from public low-voltage networks.

The products must be properly transported and stored and must be installed, commissioned and maintained by professionals who have adequate knowledge to implement the safety, cybersecurity and EMC measures in accordance with the specifications described in this manual and with recognized state-of-the-art engineering practice.

You may only use the products when the following requirements are complied with:

- All regulations and directives that are applicable at the place of final use, especially with regard to electrical safety, functional safety and electromagnetic compatibility (EMC).
- All instructions, notes, technical data, safety information and cybersecurity information contained in this document and other supporting documentation.

The products are part of a machine or system. When designing the system, apply suitable measures to ensure that the products can provide intended safety to persons and material assets and achieve intended electromagnetic compatibility.

Perform a risk assessment of the complete application, including third-party products and implement adequate safety and cybersecurity measures before using the product.

Products without protective enclosure (IP00 or IP20) are intended for installation in control panels or control cabinets that provide the required level of protection.

Any other use that is not expressly permitted can result in malfunctions and unpredictable hazards.

The motors are intended for converter control and may not be connected directly to the line supply. The motors are not approved for use in explosive atmospheres.

## 1.5.2 Firmware updates and constraints

### Description

Firmware updates and constraints for the converters with the current firmware are available in SIOS:

Updates and constraints for SINAMICS S200 (<https://support.industry.siemens.com/cs/ww/en/view/109812409>)

## 1.5.3 Open-source software (OSS)

### Description

The license conditions and copyright information of the open-source software components used by the device are saved on the device itself. You can download license and copyright information onto your PC via the support page of the integrated web server.



## 1.5.4 Compliance with the General Data Protection Regulation

### Description

Siemens complies with the principles of the **General Data Protection Regulation (EU)**, in particular the principle of data minimization (privacy by design). For this SINAMICS product, this means:

- **User management and access control (UMAC)**

The product processes or stores the following personal data:

- Login data for user management and access control:  
User name, group, password, role, rights.

The data for user management and access control is stored in the converter and optionally on a memory card.

- **Support data (optional)**

For optimal support in service cases, the end user or machine manufacturer (OEM) can optionally store contact data (header, email address, telephone number, homepage) in the converter.

If this data is created, the author must give thought to data protection consent for this optional data. Siemens takes no responsibility for this data.

This support contact data can be read and is freely accessible in, for example, the user interface as well as in the diagnostics report. This data is not encrypted.

This data is used for user management and access control (UMAC) and for the support function. The storage of this data is appropriate and limited to what is necessary, as it is essential to identify the authorized operators and service contact.

The personal data is also available as part of the backup system to ensure fast recovery of use cases.

The above-mentioned personal data cannot be stored anonymously or pseudonymized, as it serves the purpose of identifying the operating personnel. The anonymization or pseudonymization, e.g. of the login data, must be performed using suitable login names and contact data by the plant/machine operator.

Our product does not provide any functions for automatically deleting personal data. Individual UMAC data can be deleted manually by authorized personnel as soon as this is deemed recommended/required.



## Fundamental safety instructions

### 2.1 General safety instructions



#### WARNING

##### Electric shock and danger to life due to other energy sources

Touching live components can result in death or severe injury.

- Only work on electrical devices when you are qualified for this job.
- Always observe the country-specific safety rules.

Generally, the following steps apply when establishing safety:

1. Prepare for disconnection. Notify all those who will be affected by the procedure.
2. Isolate the drive system from the power supply and take measures to prevent it being switched back on again.
3. Wait until the discharge time specified on the warning labels has elapsed.
4. Check that there is no voltage between any of the power connections, and between any of the power connections and the protective conductor connection.
5. Check whether the existing auxiliary supply circuits are de-energized.
6. Ensure that the motors cannot move.
7. Identify all other dangerous energy sources, e.g. compressed air, hydraulic systems, or water. Switch the energy sources to a safe state.
8. Check that the correct drive system is completely locked.

After you have completed the work, restore the operational readiness in the inverse sequence.



#### WARNING

##### Risk of electric shock and fire from supply networks with an excessively high impedance

Excessively low short-circuit currents can lead to the protective devices not tripping or tripping too late, and thus causing electric shock or a fire.

- In the case of a conductor-conductor or conductor-ground short-circuit, ensure that the short-circuit current at the point where the converter is connected to the line supply at least meets the minimum requirements for the response of the protective device used.
- You must use an additional residual-current device (RCD) if a conductor-ground short circuit does not reach the short-circuit current required for the protective device to respond. The required short-circuit current can be too low, especially for TT supply systems.



**⚠ WARNING**

**Risk of electric shock and fire from supply networks with an excessively low impedance**

Excessively high short-circuit currents can lead to the protective devices not being able to interrupt these short-circuit currents and being destroyed, and thus causing electric shock or a fire.

- Ensure that the prospective short-circuit current at the line terminal of the converter does not exceed the breaking capacity (SCCR or Icc) of the protective device used.



**⚠ WARNING**

**Electric shock if there is no ground connection**

For missing or incorrectly implemented protective conductor connection for devices with protection class I, high voltages can be present at open, exposed parts, which when touched, can result in death or severe injury.

- Ground the device in compliance with the applicable regulations.



**⚠ WARNING**

**Electric shock due to connection to an unsuitable power supply**

When equipment is connected to an unsuitable power supply, exposed components may carry a hazardous voltage. Contact with hazardous voltage can result in severe injury or death.

- Only use power supplies that provide SELV (Safety Extra Low Voltage) or PELV- (Protective Extra Low Voltage) output voltages for all connections and terminals of the electronics modules.



**⚠ WARNING**

**Electric shock due to damaged motors or devices**

Improper handling of motors or devices can damage them.

Hazardous voltages can be present at the enclosure or at exposed components on damaged motors or devices.

- Ensure compliance with the limit values specified in the technical data during transport, storage and operation.
- Do not use any damaged motors or devices.



**⚠ WARNING**

**Electric shock due to unconnected cable shields**

Hazardous touch voltages can occur through capacitive cross-coupling due to unconnected cable shields.

- As a minimum, connect cable shields and the cores of cables that are not used at one end at the grounded housing potential.



**⚠ WARNING**

**Arcing when a plug connection is opened during operation**

Opening a plug connection when a system is in operation can result in arcing that may cause serious injury or death.

- Only open plug connections when the equipment is in a voltage-free state, unless it has been explicitly stated that they can be opened in operation.



**⚠ WARNING**

**Electric shock due to residual charges in power components**

Because of the capacitors, a hazardous voltage is present for up to 5 minutes after the power supply has been switched off. Contact with live parts can result in death or serious injury.

- Wait for 5 minutes before you check that the unit really is in a no-voltage condition and start work.

**NOTICE**

**Damage to equipment due to unsuitable tightening tools.**

Unsuitable tightening tools or fastening methods can damage the screws of the equipment.

- Only use screw inserts that exactly match the screw head.
- Tighten the screws with the torque specified in the technical documentation.
- Use a torque wrench or a mechanical precision nut runner with a dynamic torque sensor and speed limitation system.
- Adjust the tools used regularly.

**⚠ WARNING**

**Electromagnetic interference due to inadequate shield support**

A lack of adequate shield support for the power cables can cause malfunctions and impermissibly high levels of interference.

- Use the shield connection plates supplied or recommended.
- Use the shield connection clips recommended.

 **WARNING**

**Spread of fire from built-in devices**

Built-in devices can cause a fire and a pressure wave in the event of a fault. Fire and smoke can escape from the control cabinet and cause serious personal injury and property damage.

- Install built-in appliances in a robust metal control cabinet that is suitable for protecting people from fire and smoke.
- Only operate built-in devices with the control cabinet doors closed.
- Ensure that smoke can only escape via controlled and monitored paths.

 **WARNING**

**Active implant malfunctions due to electromagnetic fields**

Converters generate electromagnetic fields (EMF) in operation. Electromagnetic fields may interfere with active implants, e.g. pacemakers. People with active implants in the immediate vicinity of an converter are at risk.

- As the operator of an EMF-emitting installation, assess the individual risks of persons with active implants.
- Observe the data on EMF emission provided in the product documentation.



 **WARNING**

**Active implant malfunctions due to permanent-magnet fields**

Even when switched off, electric motors with permanent magnets represent a potential risk for persons with heart pacemakers or implants if they are close to converters/motors.

- If you have a heart pacemaker or implant, maintain the minimum distance specified in the Chapter "Technical data".
- When transporting or storing permanent-magnet motors always use the original packing materials with the warning labels attached.
- Clearly mark the storage locations with the appropriate warning labels.
- IATA regulations must be observed when transported by air.

 **CAUTION****Symptomatic respiratory and skin reaction to chemicals**

A newly purchased product might contain traces of substances that are identified as sensitizers.

Sensitizers are substances which can cause sensitization in the lungs and skin after exposure to them.

Once sensitized, individuals can have severe reactions to further exposure, even in small amounts. In the most extreme cases, individuals might develop asthma or dermatitis respectively.

- If the product has a strong smell, keep it in a well-ventilated area for 14 days.

 **WARNING****Unexpected machine movement caused by radio devices or mobile phones**

Using radio devices, cellphones, or mobile WLAN devices in the immediate vicinity of the components can result in equipment malfunction. Malfunctions may impair the functional safety of machines and can therefore put people in danger or lead to property damage.

- Therefore, if you move closer than 20 cm to the components, be sure to switch off radio devices, cellphones or WLAN devices.
- Use the "SIEMENS Industry Online Support App" or a QR code scanner only on equipment that has already been switched off.

 **CAUTION****Radio frequency interference in residential areas**

When you operate EMC category C2 devices in residential areas, the devices can cause radio frequency interference.

When you operate EMC category C3 or C4 devices in residential areas, it is to be expected that the devices will cause radio frequency interference.

- Do not operate EMC category C2 devices in residential areas.
- Do not operate EMC category C3 or C4 devices in public low-voltage networks supplying residential buildings.

**NOTICE**

**Damage to motor insulation due to excessive voltages**

When operated on systems with grounded line conductors or in the event of a ground fault in the IT system, the motor insulation can be damaged by the higher voltage against ground. If you use motors that have insulation that is not designed for operation with grounded line conductors, you must perform the following measures:

- IT system: Use a ground fault monitor and eliminate the fault as quickly as possible.
- TN or TT systems with grounded line conductor: Use an isolating transformer on the line side.



**WARNING**

**Fire due to inadequate ventilation clearances**

Inadequate ventilation clearances can cause overheating of components with subsequent fire and smoke. This can cause severe injury or even death. This can also result in increased downtime and reduced service lives for devices/systems.

- Ensure compliance with the specified minimum clearance as ventilation clearance for the respective component.

**NOTICE**

**Overheating due to inadmissible mounting position**

The device may overheat and therefore be damaged if mounted in an inadmissible position.

- Only operate the device in admissible mounting positions.



**WARNING**

**Unrecognized dangers due to missing or illegible warning labels**

Dangers might not be recognized if warning labels are missing or illegible. Unrecognized dangers may cause accidents resulting in serious injury or death.

- Check that the warning labels are complete based on the documentation.
- Attach any missing warning labels to the components, where necessary in the national language.
- Replace illegible warning labels.



**NOTICE****Device damage caused by incorrect voltage/insulation tests**

Incorrect voltage/insulation tests can damage the device.

- Before carrying out a voltage/insulation check of the system/machine, disconnect the devices as all converters and motors have been subject to a high voltage test by the manufacturer, and therefore it is not necessary to perform an additional test within the system/machine.

 **WARNING****Unexpected movement of machines caused by inactive safety functions**

Inactive or non-adapted safety functions can trigger unexpected machine movements that may result in serious injury or death.

- Observe the information in the appropriate product documentation before commissioning.
- Carry out a safety inspection for functions relevant to safety on the entire system, including all safety-related components.
- Ensure that the safety functions used in your drives and automation tasks are adjusted and activated through appropriate parameterizing.
- Perform a function test.
- Only put your plant into live operation once you have guaranteed that the functions relevant to safety are running correctly.

 **WARNING****Malfunctions of the machine as a result of incorrect or changed parameter settings**

As a result of incorrect or changed parameterization, machines can malfunction, which in turn can lead to injuries or death.

- Protect the parameterization against unauthorized access.
- Handle possible malfunctions by taking suitable measures, e.g. emergency stop or emergency off.

 **WARNING****Injury caused by moving or ejected parts**

Contact with moving motor parts or drive output elements and the ejection of loose motor parts (e.g. feather keys) out of the motor enclosure can result in severe injury or death.

- Remove any loose parts or secure them so that they cannot be flung out.
- Do not touch any moving parts.
- Safeguard all moving parts using the appropriate safety guards.


 **WARNING**

**Fire due to incorrect operation of the motor**

When incorrectly operated and in the case of a fault, the motor can overheat resulting in fire and smoke. This can result in severe injury or death. Further, excessively high temperatures destroy motor components and result in increased failures as well as shorter service lives of motors.

- Operate the motor according to the relevant specifications.
- Only operate the motors in conjunction with effective temperature monitoring.
- Immediately switch off the motor if excessively high temperatures occur.



 **CAUTION**

**Burns and thermal damage caused by hot surfaces**

Temperatures above 100 °C may occur on the surfaces of motors, converters, and other drive components.

Touching hot surfaces may result in burns. Hot surfaces may damage or destroy temperature sensitive parts.

- Ensure that temperature-sensitive parts do not come into contact with hot surfaces.
- Mount drive components so that they are not accessible during operation.

Measures when maintenance is required:

- Allow drive components to cool off before starting any work.
- Use appropriate personnel protection equipment, e.g. gloves.

## 2.2 Equipment damage due to electric fields or electrostatic discharge

Electrostatic sensitive devices (ESD) are individual components, integrated circuits, modules or devices that may be damaged by either electric fields or electrostatic discharge.



### NOTICE

#### Equipment damage due to electric fields or electrostatic discharge

Electric fields or electrostatic discharge can cause malfunctions through damaged individual components, integrated circuits, modules or devices.

- Only pack, store, transport and send electronic components, modules or devices in their original packaging or in other suitable materials, e.g. conductive foam rubber or aluminum foil.
- Only touch components, modules and devices when you are grounded by one of the following methods:
  - Wearing an ESD wrist strap
  - Wearing ESD shoes or ESD grounding straps in ESD areas with conductive flooring
- Only place electronic components, modules or devices on conductive surfaces (table with ESD surface, conductive ESD foam, ESD packaging, ESD transport container).

## 2.3 Warranty and liability for application examples

Application examples are not binding and do not claim to be complete regarding configuration, equipment or any eventuality which may arise. Application examples do not represent specific customer solutions, but are only intended to provide support for typical tasks.

As the user you yourself are responsible for ensuring that the products described are operated correctly. Application examples do not relieve you of your responsibility for safe handling when using, installing, operating and maintaining the equipment.

## 2.4 Cybersecurity information

Siemens provides products and solutions with industrial cybersecurity functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial cybersecurity concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial cybersecurity measures that may be implemented, please visit <https://www.siemens.com/cybersecurity-industry>.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Cybersecurity RSS Feed under <https://new.siemens.com/cert>.

Further information is provided on the Internet:

Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>)

### WARNING

#### Unsafe operating states resulting from software manipulation

Software manipulations, e.g. viruses, Trojans, or worms, can cause unsafe operating states in your system that may lead to death, serious injury, and property damage.

- Keep the software up to date.
- Incorporate the automation and drive components into a state-of-the-art, integrated industrial cybersecurity concept for the installation or machine.
- Make sure that you include all installed products in the integrated industrial cybersecurity concept.
- Protect files stored on exchangeable storage media from malicious software by with suitable protection measures, e.g. virus scanners.
- Carefully check all cybersecurity-related settings once commissioning has been completed.

## 2.5 Residual risks of power drive systems

When assessing the machine or system-related risk in accordance with the respective local regulations (e.g. EC Machinery Directive), the machine manufacturer or system integrator must take into account the following residual risks emanating from the control and drive components of a drive system:

1. Unintentional movements of driven machine or system components during commissioning, operation, maintenance, and repairs caused by, for example,
  - Hardware faults and/or software errors in the sensors, control system, actuators, and connections
  - Response times of the control system and of the drive
  - Operation and/or environmental conditions outside the specification
  - Condensation/conductive contamination
  - Parameterization, programming, cabling, and installation errors
  - Use of wireless devices/mobile phones in the immediate vicinity of electronic components
  - External influences/damage
  - X-ray, ionizing radiation and cosmic radiation
2. Unusually high temperatures inside and outside the components, including open flames, as well as emissions of light, noise, particles, gases, etc. due to fault conditions, e.g.:
  - Component failure
  - Software errors
  - Operation and/or environmental conditions outside the specification
  - External influences/damage
  - Short circuits or ground faults in the intermediate DC circuit of the converter
3. Hazardous shock voltages caused by, for example:
  - Component failure
  - Influence during electrostatic charging
  - Induction of voltages in moving motors
  - Operation and/or environmental conditions outside the specification
  - Condensation/conductive contamination
  - External influences/damage
4. Electrical, magnetic and electromagnetic fields generated in operation that can pose a risk to people with a pacemaker, implants or metal replacement joints, etc., if they are too close
5. Release of environmental pollutants or emissions as a result of improper operation of the system and/or failure to dispose of components safely and correctly

6. Influence of network-connected and wireless communications systems, e.g. ripple-control transmitters or data communication via the network or mobile radio, WLAN or Bluetooth.
7. Motors for use in potentially explosive areas:  
When moving components such as bearings become worn, this can cause enclosure components to exhibit unexpectedly high temperatures during operation, creating a hazard in areas with a potentially explosive atmosphere.

For more information about the residual risks of the drive system components, see the relevant sections in the technical user documentation.





## Description

### 3.1 System overview

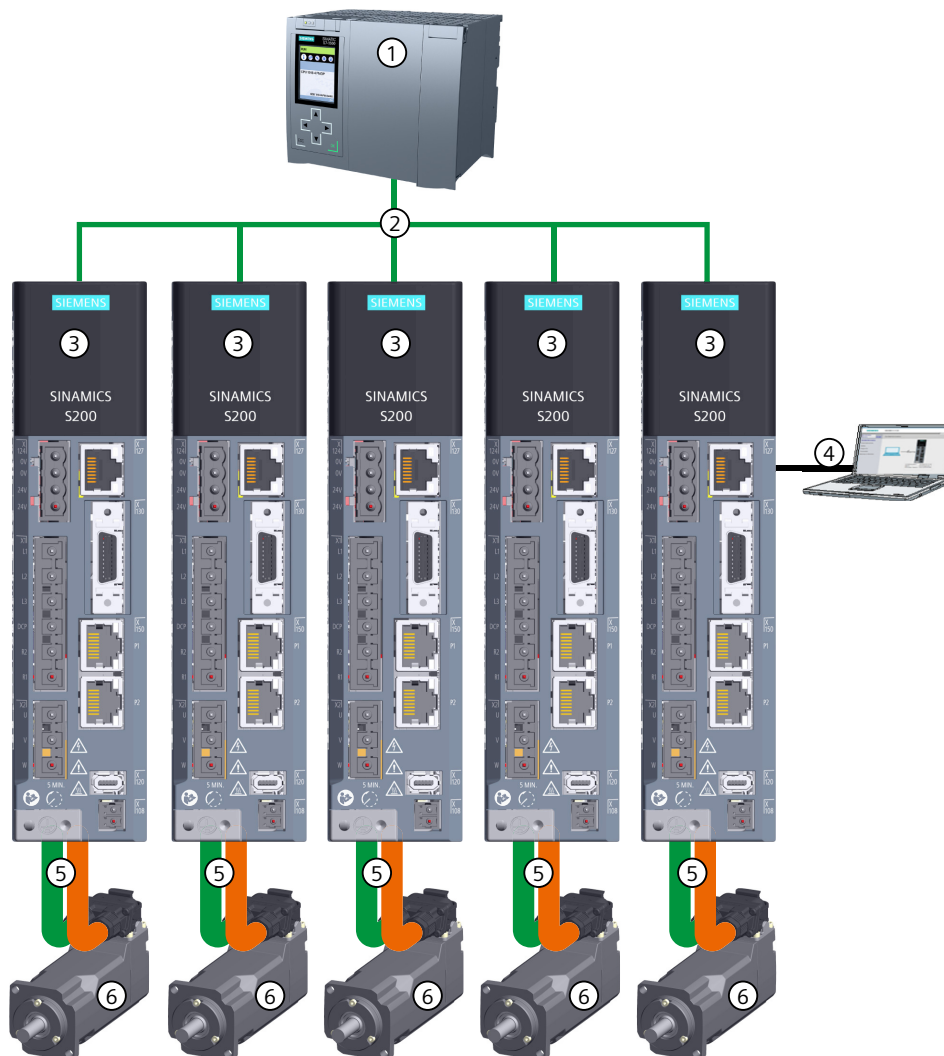
#### Description

The SINAMICS S200 servo drive system (PN version) is a single-axis servo drive system. It includes the following components tailored to one another:

- SINAMICS S200 converter product line (PN version), which is available in the following two variants:
  - SINAMICS S200 Basic PN converter (referred to as "S200 Basic PN")
  - SINAMICS S200 PN converter (referred to as "S200 PN")
- SIMOTICS S-1FL2 motor (referred to as "1FL2")
- MOTION-CONNECT 350 standard cable or MOTION-CONNECT 380 flexible cable


The converter and the motor are intended for use with a higher-level controller (PLC). Prefabricated MOTION-CONNECT 350 and MOTION-CONNECT 380 cables are available in various lengths for simple and reliable connection of the motor to the converter.

3.1 System overview



- ① Controller (for example, SIMATIC S7-1500)
- ② Communication between the converter and the controller via PROFINET
- ③ SINAMICS S200 converter product line (PN version)
- ④ Engineering via LAN with the web server in the converter
- ⑤ MOTION-CONNECT 350 or MOTION-CONNECT 380 cables for the motor power, the motor holding brake, and the encoder connections
- ⑥ SIMOTICS S-1FL2 motor

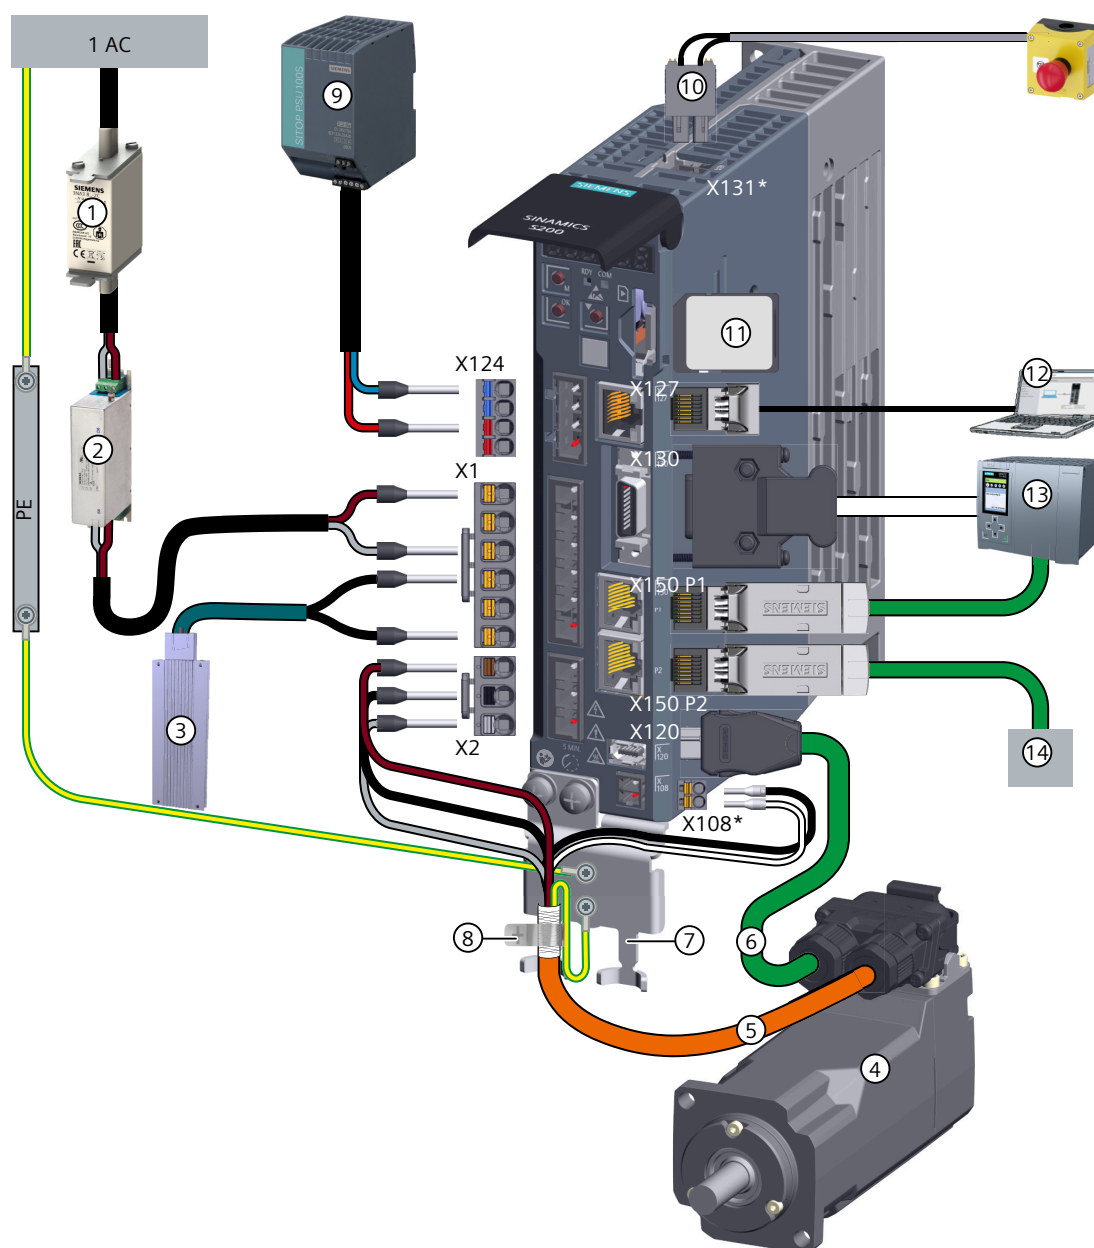Figure 3-1 System overview



\* The interfaces X131 and X108 are available on S200 PN only. For more information about the motor holding brake connection on S200 Basic PN, see Section "Connecting the motor holding brake (Page 139)".


- |                                                      |                                             |
|------------------------------------------------------|---------------------------------------------|
| ① Fuse or motor starter protector                    | ⑧ Shield clamp                              |
| ② Line filter (optional) <sup>1)</sup>               | ⑨ 24 V DC power supply                      |
| ③ External braking resistor (optional) <sup>1)</sup> | ⑩ STO plug                                  |
| ④ SIMOTICS S-1FL2 motor                              | ⑪ SD card (optional)                        |
| ⑤ Motor power cable (with brake conductors)          | ⑫ Commissioning device                      |
| ⑥ Encoder cable                                      | ⑬ Controller (for example, SIMATIC S7-1500) |
| ⑦ Shield plate                                       | ⑭ PROFINET to the next participant          |

<sup>1)</sup> When using the components, make sure that they are connected to the ground correctly.

Figure 3-2 System components and accessories for converters with 1 AC line connection

Description

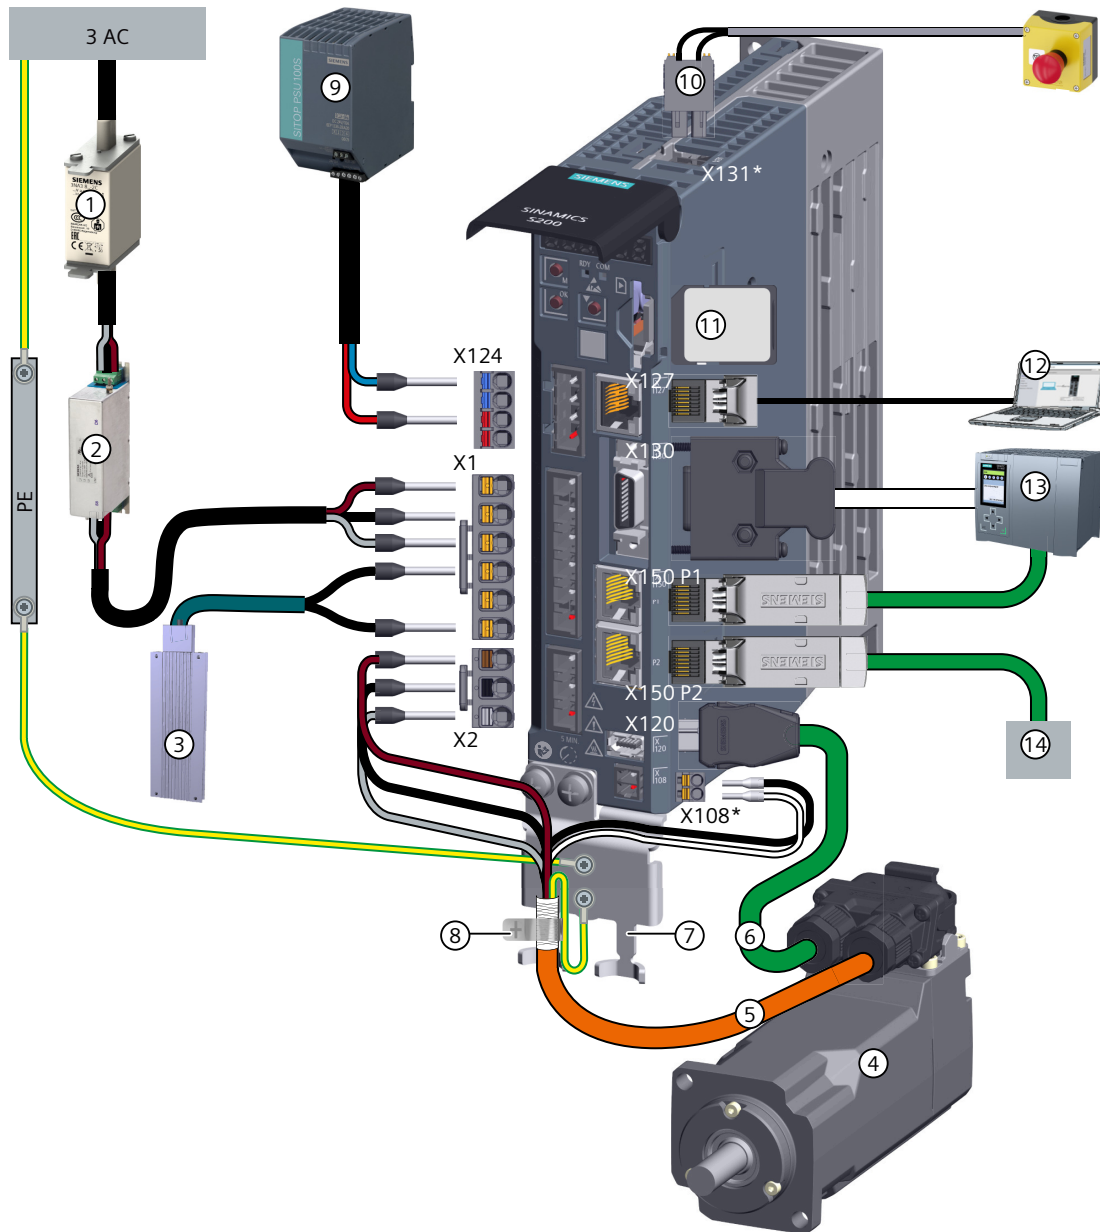3.1 System overview



\* The interfaces X131 and X108 are available on S200 PN only. For more information about the motor holding brake connection on S200 Basic PN, see Section "Connecting the motor holding brake (Page 139)".

- |                                                      |                                             |
|------------------------------------------------------|---------------------------------------------|
| ① Fuse or motor starter protector                    | ⑧ Shield clamp                              |
| ② Line filter (optional) <sup>1)</sup>               | ⑨ 24 V DC power supply                      |
| ③ External braking resistor (optional) <sup>1)</sup> | ⑩ STO plug                                  |
| ④ SIMOTICS S-1FL2 motor                              | ⑪ SD card (optional)                        |
| ⑤ Motor power cable (with brake conductors)          | ⑫ Commissioning device                      |
| ⑥ Encoder cable                                      | ⑬ Controller (for example, SIMATIC S7-1500) |
| ⑦ Shield plate                                       | ⑭ PROFINET to the next participant          |

<sup>1)</sup> When using the components, make sure that they are connected to the ground correctly.

Figure 3-3 System components and accessories for converters with 3 AC line connection

## More information

For more information about the device combination, see Section "Device combinations (Page 56)".

For more information about the interface connection, see Section "Connecting (Page 127)".

### 3.1.1 Converter

#### Description

The S200 converter product line (PN version) includes two converter variants: S200 Basic PN (200 V only) and S200 PN (200 V and 400 V).

All the converter variants can be used on the 1 AC 200 V or 3 AC 200 V mains supply network to control the 1FL2 motor with low or medium moments of inertia.

S200 PN can additionally be used on the 3 AC 400 V mains supply network to control the 1FL2 motor with all the moments of inertia.

Table 3-1 Converter variants

Converter	Frame size	Rated power (kW)	Mains supply network
S200 Basic PN/S200 PN	FSA	0.1, 0.2	1 AC/3 AC 200 V ... 240 V
	FSB	0.4	
	FSC	0.75, 1.0	
S200 PN	FSA	0.2, 0.4	3 AC 380 V ... 480 V
	FSB	0.75, 1.0	
	FSC	1.75, 2.5	
	FSD	3.5, 5.0, 7.0	

### 3.1.2 Motor

#### Description

The 1FL2 motor is intended for use with the S200 converter product line. The motor is available in the 200 V variant (low or medium inertia) and the 400 V variant (low, medium, or high inertia), and with different shaft heights.

Table 3-2 Motor variants

Shaft height	Moments of inertia	Rated power (kW)	Mains supply network
SH20	Low inertia	0.05, 0.1	200 V/400 V
SH30	Low inertia, medium inertia	0.2, 0.4	
SH40		0.75, 1.0	
SH48	Medium inertia	1.0, 1.5	400 V
SH52	Low inertia	1.45, 2.1	
SH45	High inertia	0.4, 0.75	
SH65		0.75, 1.0, 1.5, 1.75, 2.0	
SH90		2.5, 3.5, 5.0, 7.0	

### 3.1.3 MOTION-CONNECT 350 and 380 cables

#### Description

Prefabricated MOTION-CONNECT cables are used to connect the 1FL2 motor to the S200 converter product line. The cables are available in two variants:

- MOTION-CONNECT 350 standard cable, which provides a connection solution for fixed installation applications
- MOTION-CONNECT 380 drag chain cable, which provides a connection solution for drag chain installation applications that require a high number of bending cycles

## 3.2 Scope of delivery

### Description

You must order the converter, motor, and cable components individually.

### 3.2.1 Converter

#### Description

The converter delivery includes at least the following components:

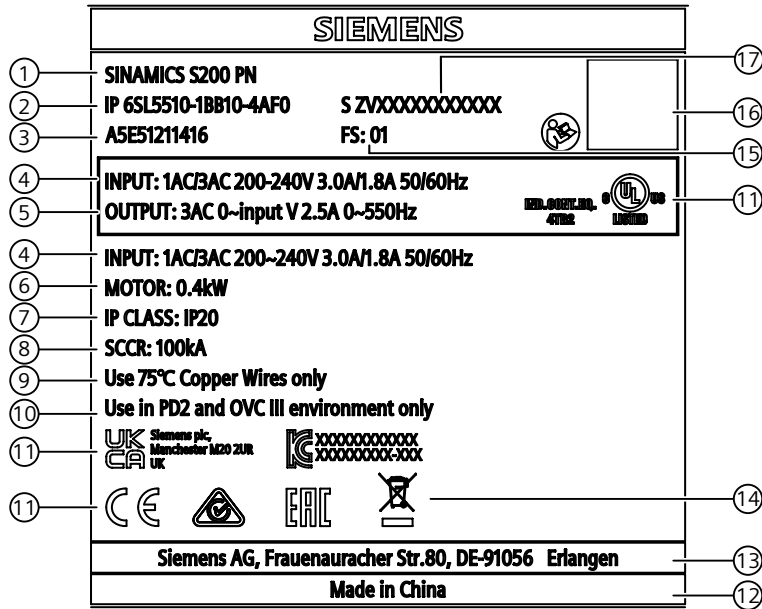
- A ready-to-run converter with loaded firmware
- A connector kit:
  - X124 plug: connector for external 24 V DC power supply
  - X1 plug: connector for power supply (jumper for internal braking resistor and blanking plug for R1 terminal are included)
  - X2 plug: connector for motor power connection
  - X108 plug: connector for motor holding brake (only available in the delivery scope of S200 PN)
  - X131 (STO) plug: connector for connecting the external safety devices (only available in the delivery scope of S200 PN)
  - X131 (STO) disable plug: connector for disabling Safety Integrated Functions (only available in the delivery scope of S200 PN)
  - A shield plate kit
- A "Safety instructions" sheet
- The converter contains open-source software (OSS). The OSS license terms are stored in the converter and can be displayed via webserver.

3.2 Scope of delivery

3.2.1.1 Rating plate

Description

The rating plate contains the article number and the technical data of the converter.



1	Converter type	10	Pollution degree and overvoltage category
2	Article number	11	Certifications
3	Material number	12	Country of origin
4	Mains input	13	Manufacturer's address
5	Output data	14	Note on disposal
6	Supported motor rated power	15	Function release/version
7	Degree of protection	16	QR code
8	Rated short-circuit current	17	Serial number
9	Copper wire		

Figure 3-4 Rating plate example



### 3.2.1.2 Article number explanation

#### Description

The following figure shows an explanation of the article number for the converter.


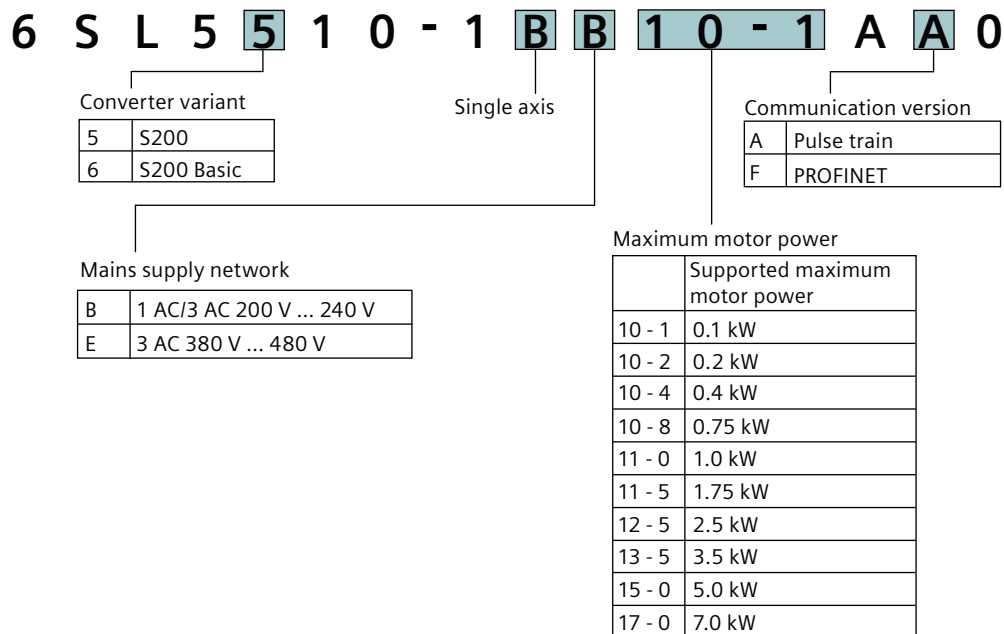


Figure 3-5 Article number for the S200 converter product line

3.2.1.3 Serial number explanation

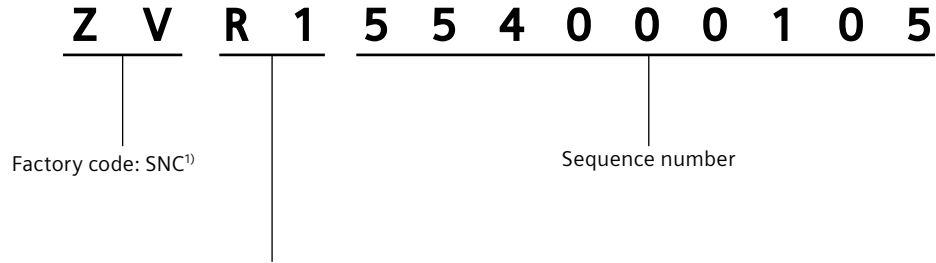Description



Production date (year/month)

Code	Calendar year	Code	Month
A	2010, 2030	1	January
B	2011, 2031	2	February
C	2012, 2032	3	March
D	2013, 2033	4	April
E	2014, 2034	5	May
F	2015, 2035	6	June
H	2016, 2036	7	July
J	2017, 2037	8	August
K	2018, 2038	9	September
L	2019, 2039	0	October
M	2020, 2040	N	November
N	2021, 2041	D	December
P	2022, 2042		
R	2023, 2043		
S	2024, 2044		
T	2025, 2045		
U	2026, 2046		
V	2027, 2047		
W	2028, 2048		
X	2029, 2049		

¹) SNC = Siemens Numerical Control Ltd., Nanjing

Figure 3-6 Serial number for S200 converter product line

### **3.2.2 Motor**

#### **Description**

The 1FL2 motor is a servo motor with an integrated encoder and a high degree of protection.

The motor delivery includes the following components:

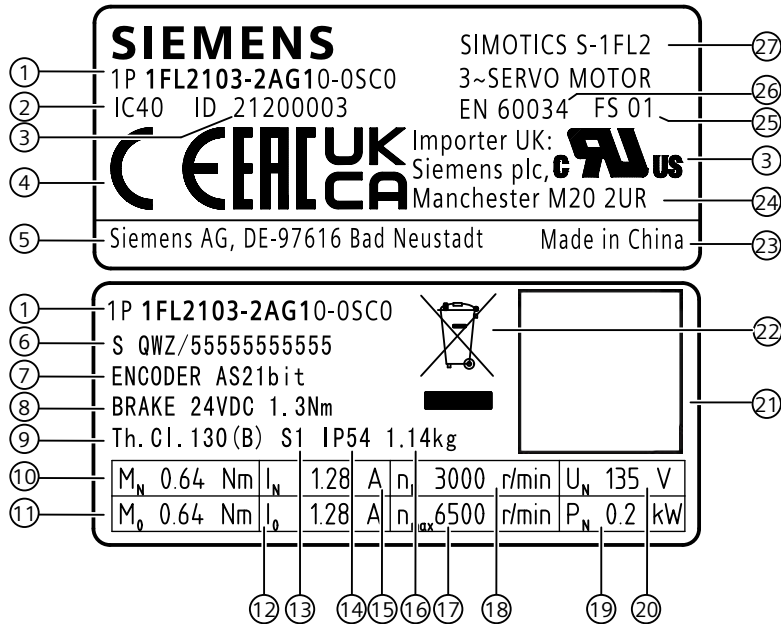
- A ready-to-run motor
- A "Safety instructions" sheet
- Three "Hot surface" warning labels

3.2 Scope of delivery

3.2.2.1 Rating plate


Description

The rating plate contains the article number and the technical data of the motor.



1	Article number	15	Rated current $I_N$
2	Cooling method according to EN 60034-6	16	Weight
3	Motor ID	17	Maximum speed $n_{max}$
4	Certifications	18	Rated speed $n_N$
5	Manufacturer's address	19	Rated power $P_N$
6	Serial number	20	Rated voltage $U_N$
7	Encoder type and resolution	21	QR code
8	Holding brake	22	Note on disposal
9	Thermal class	23	Country of origin
10	Rated torque $M_N$	24	UK importer address
11	Static torque $M_0$	25	Function release/version
12	Stall current $I_0$	26	Standard for all rotating electrical machines
13	Motor operating mode	27	Motor type
14	Degree of protection		

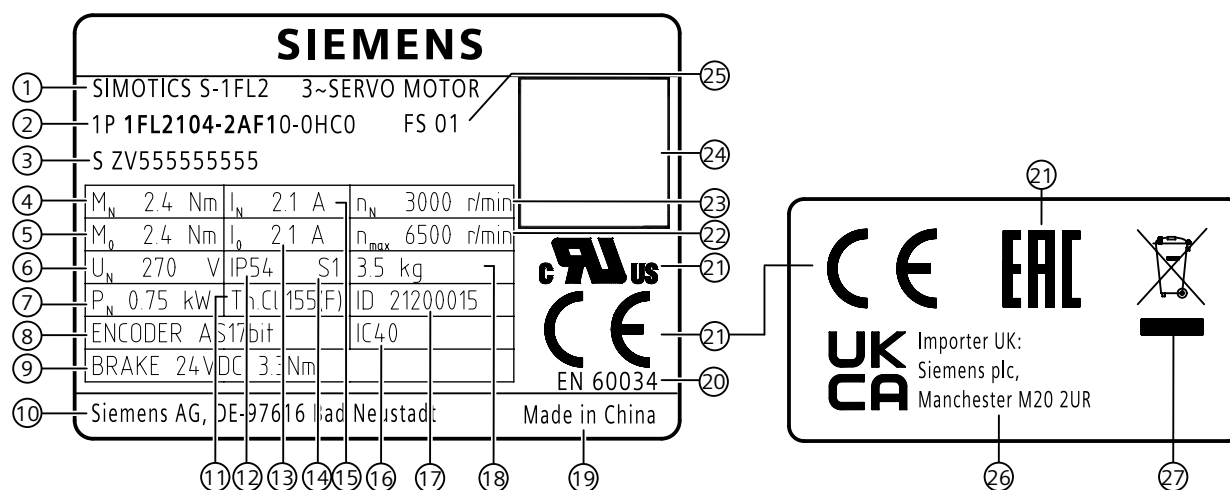Figure 3-7 Rating plate example for 1FL2 SH20 and SH30



1	Motor type	15	Rated current $I_N$
2	Article number	16	Cooling method according to EN 60034-6
3	Serial number	17	Motor ID
4	Rated torque $M_N$	18	Weight
5	Static torque $M_0$	19	Country of origin
6	Rated voltage $U_N$	20	Standard for all rotating electrical machines
7	Rated power $P_N$	21	Certifications
8	Encoder type and resolution	22	Maximum speed $n_{max}$
9	Holding brake	23	Rated speed $n_N$
10	Manufacturer's address	24	QR code
11	Thermal class	25	Function release/version
12	Degree of protection	26	UK importer address
13	Stall current $I_0$	27	Note on disposal
14	Motor operating mode		

Figure 3-8 Rating plate example for 1FL2 SH40 and above

3.2 Scope of delivery

3.2.2.2 Article number explanation

Description

The following figure shows an explanation of the article number for the motor.


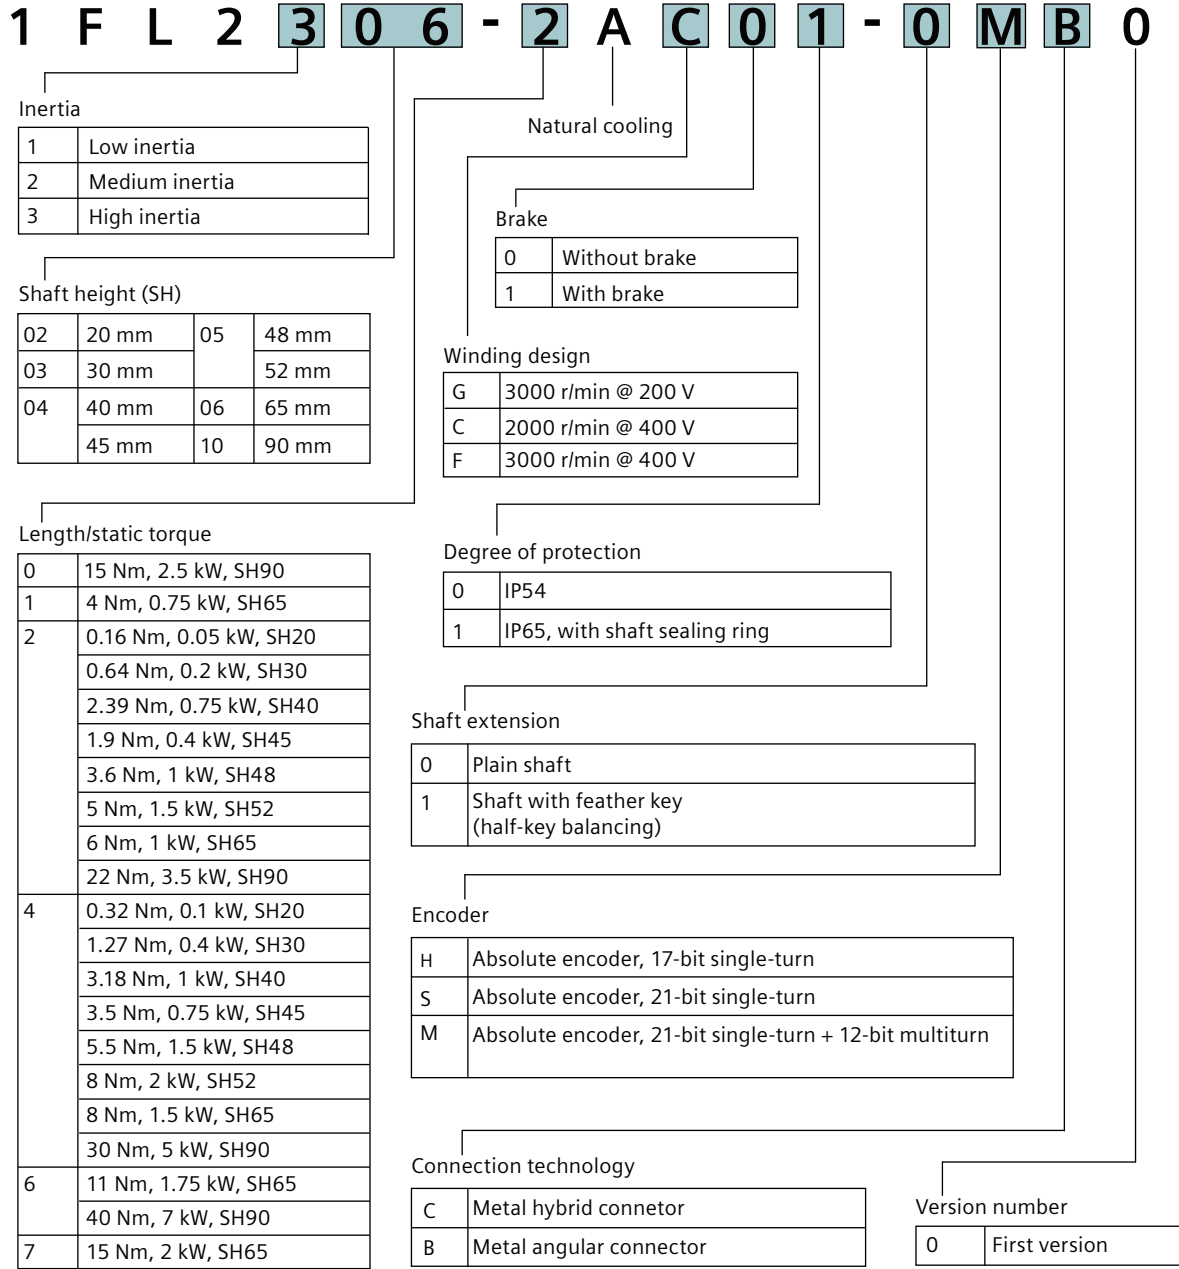


Figure 3-9 Article number for 1FL2 servo motors

## 3.2.2.3 Serial number explanation
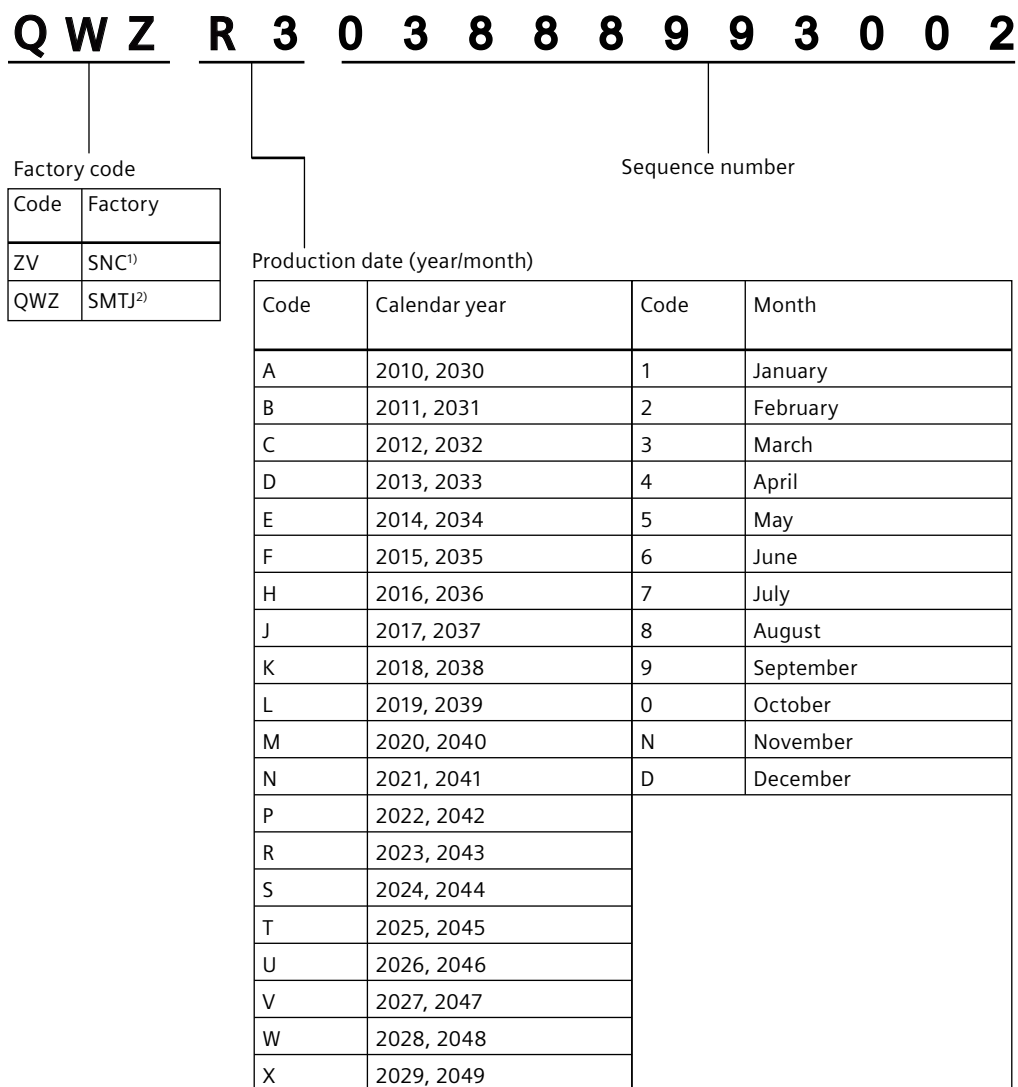
## Description



<sup>1)</sup> SNC = Siemens Numerical Control Ltd., Nanjing

<sup>2)</sup> SMTJ = Siemens Mechatronics Technology JiangSu Ltd.

Figure 3-10 Serial number for 1FL2 servo motors

### 3.2.3 MOTION-CONNECT 350 and 380 cables

#### 3.2.3.1 Overview

#### Description

The MOTION-CONNECT 350/380 cable delivery includes the following components:

- The MOTION-CONNECT cable with assembled connectors for connecting the motor to the converter
- A shield clamp for connection of the power cable to the shield plate of the converter
- A "Safety instructions" sheet



### 3.2.3.2 Article number explanation

#### Description

Table 3-3 Article numbers for MOTION-CONNECT 350 and 380 cables

Description		Position of the article number																	
		1	2	3	4	5	6	7	-	8	9	10	11	12	-	13	14	15	16
<b>MOTION-CONNECT cables</b>		6	F	X	3		0	2											
<b>Cable variant</b>	MOTION-CONNECT 350 standard cable	5																	
	MOTION-CONNECT 380 drag chain cable	8																	
<b>Connector type</b>	Hybrid connector									7									
	Power connector or brake connector									5									
	Encoder connector									2									
<b>Cable type</b>	Power cable with brake conductors										D								
	Power cable without brake conductors										C								
	Dual cable with hybrid connector, drive end outlet											D							
	Dual cable with hybrid connector, non-drive end outlet											N							
	Power cable with M17 circular connector											K							
	Power cable with M23 circular connector								5		C	L							
	Brake cable								5		B	L							
	Encoder cable								2		X	B							
<b>Cable cross-section</b>	Dual cable with hybrid connector (0.75 mm <sup>2</sup> /18 AWG)											0	1						
	Power cable with M23 circular connector (0.75 mm <sup>2</sup> /18 AWG)																		
	Power cable with M23 circular connector (1.5 mm <sup>2</sup> /16 AWG)											0	2						
	Power cable with M23 circular connector (2.5 mm <sup>2</sup> /14 AWG)											1	2						
	Power cable with M17 circular connector (0.75 mm <sup>2</sup> /18 AWG)											3	2						
	Brake cable (0.75 mm <sup>2</sup> /18 AWG)								5		B	L	0	3					
	Encoder cable (0.25 mm <sup>2</sup> /24 AWG and 0.38 mm <sup>2</sup> /22 AWG)								2		X	B	1	1					
<b>Cable length</b>	3 m															1	A	D	0
	5 m															1	A	F	0
	7 m															1	A	H	0
	10 m															1	B	A	0
	15 m															1	B	F	0
	20 m															1	C	A	0
	30 m															1	D	A	0

#### More information

For more information about the cable and connector combination, see Section "MOTION-CONNECT cables and connectors (Page 60)".

### 3.3 Device combinations

#### 3.3.1 200 V servo drive system

##### Description

Table 3-4 200 V servo drive system

1FL2 servo motors						200 V converters (S200 PN/S200 Basic PN)		MOTION-CONNECT prefabricated cables		
Rated torque (Nm)	Rated power (kW)	Rated speed (r/min)	Shaft height (mm)	Inertia	Article number 1FL2	Article number 6SL5□10-1BB	Frame size	Article number 6FX3□02-7□□01- <sup>1)</sup>		
0.16	0.05	3000	20	Low	102-2AG□□-□□C0	10-1AF0	FSA	□□□□		
0.32	0.1	3000			102-4AG□□-□□C0					
0.64	0.2	3000	30	Low	103-2AG□□-□□C0	10-2AF0				
				Medium	203-2AG□□-□□C0					
1.27	0.4	3000		Low	103-4AG□□-□□C0	10-4AF0	FSB			
				Medium	203-4AG□□-□□C0					
2.4	0.75	3000	40	Low	104-2AG□□-□□C0	10-8AF0	FSC			
				Medium	204-2AG□□-□□C0					
3.2	1.0	3000		Low	104-4AG□□-□□C0	11-0AF0				
				Medium	204-4AG□□-□□C0					
<b>Cable length</b>										
3 m								1AD0		
5 m								1AF0		
7 m								1AH0		
10 m								1BA0		
15 m								1BF0		
20 m								1CA0		
30 m								1DA0		

<sup>1)</sup> The last four digits (□□□□) in the cable article number define the cable length corresponding to the length code.

### 3.3.2 400 V servo drive system

#### Description

Table 3-5 400 V servo drive system

1FL2 servo motors						400 V converters (S200 PN only)		MOTION-CONNECT prefabricated cables
Rated torque (Nm)	Rated power (kW)	Rated speed (r/min)	Shaft height (mm)	Inertia	Article number 1FL2	Article number 6SL5510-1BE	Frame size	Article number 6FX3□02- <sup>1)</sup>
0.16	0.05	3000	20	Low	102-2AF□□-□□C0	10-2AF0	FSA	Dual cable with hybrid connector: 7□□01-□□□□
0.32	0.1	3000			102-4AF□□-□□C0			
0.64	0.2	3000	30	Low	103-2AF□□-□□C0	10-4AF0	FSB	Dual cable variants: • Power cable (with brake conductors) + encoder cable • Power cable (without brake conductors) + encoder cable
				Medium	203-2AF□□-□□C0			
1.27	0.4	3000	30	Low	103-4AF□□-□□C0	10-4AF0	FSB	Dual cable variants: • Power cable (with brake conductors) + encoder cable • Power cable (without brake conductors) + encoder cable
				Medium	203-4AF□□-□□C0			
2.4	0.75	3000	40	Low	104-2AF□□-□□C0	10-8AF0	FSB	Dual cable variants: • Power cable (with brake conductors) + encoder cable • Power cable (without brake conductors) + encoder cable
				Medium	204-2AF□□-□□C0			
3.2	1.0	3000	40	Low	104-4AF□□-□□C0	11-0AF0	FSB	Dual cable variants: • Power cable (with brake conductors) + encoder cable • Power cable (without brake conductors) + encoder cable
				Medium	204-4AF□□-□□C0			
3.0	1.0	3000	48	Medium	205-2AF□□-□□B0	11-5AF0	FSC	Power cable (with brake conductors): 5DK32-□□□□
4.6	1.45	3000			205-4AF□□-□□B0			
4.6	1.45	3000	52	Low	105-2AF□□-□□B0	12-5AF0	FSC	Power cable (without brake conductors): 5CK32-□□□□ Encoder cable: 2XB11-□□□□
6.6	2.1	3000			105-4AF□□-□□B0			

## Description

### 3.3 Device combinations

1FL2 servo motors					400 V converters (S200 PN only)		MOTION-CONNECT prefabricated cables	
Rated torque (Nm)	Rated power (kW)	Rated speed (r/min)	Shaft height (mm)	Inertia	Article number 1FL2	Article number 6SL5510-1BE	Frame size	Article number 6FX3□□02- <sup>1)</sup>
1.27	0.4	3000	45	High	304-2AF□□-□□B0	10-4AF0	FSA	Power cable: 5CL□□-□□□□ Brake cable: 5BL03-□□□□ Encoder cable: 2XB12-□□□□
2.39	0.75	3000			304-4AF□□-□□B0	10-8AF0	FSB	
3.58	0.75	2000	65		306-1AC□□-□□B0	11-0AF0		
4.78	1.0				306-2AC□□-□□B0			
7.16	1.5	2000	306-4AC□□-□□B0		11-5AF0	FSC		
8.4	1.75	2000	306-6AC□□-□□B0					
9.6	2.0	2000	306-7AC□□-□□B0		12-5AF0			
11.9	2.5	2000	90		310-0AC□□-□□B0	13-5AF0	FSD	
16.7	3.5				310-2AC□□-□□B0			
23.9	5.0				310-4AC□□-□□B0	15-0AF0		
33.4	7.0				2000	310-6AC□□-□□B0	17-0AF0	
<b>Cable length</b>								
3 m								1AD0
5 m								1AF0
7 m								1AH0
10 m								1BA0
15 m								1BF0
20 m								1CA0
30 m								1DA0

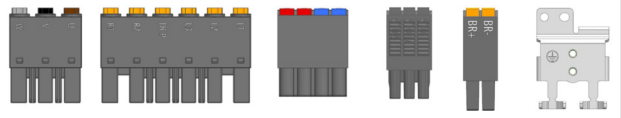
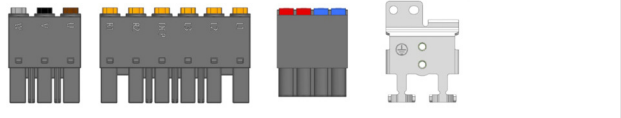
<sup>1)</sup> The last four digits (□□□□) in the cable article number define the cable length corresponding to the length code.

## 3.4 Accessories

### 3.4.1 Connector kits

#### Description

If you need new connectors used on the converter front panel, you can order connector kits from Siemens using the following article numbers.

Converter	Article number	Illustration
S200 PN	6SL5568-OXX00-0AA0	
S200 Basic PN	6SL5668-OXX00-0AA0	



### 3.4.2 Cables and connectors




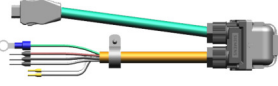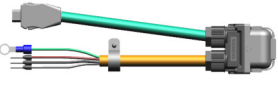
#### 3.4.2.1 MOTION-CONNECT cables and connectors

##### Description

Siemens recommends that you use MOTION-CONNECT prefabricated cable assemblies and connectors for connecting the motor to the converter. All Siemens cable assemblies and connectors are tested and compliant with CE standards and EMC requirements.

Table 3-6 Overview of MOTION-CONNECT 350 and 380 cables

MOTION-CONNECT 350 and 380 cables				Connectors	
Type	Article number 6FX3□□02- <sup>1)</sup>	Applicable 1FL2 motor	Cross-section for conductors (mm <sup>2</sup> )	Drive side 6FX2003 -	Motor side 6FX2003- -
<b>Dual cable with hybrid connector:</b> Power cable (with brake conductors) <sup>2)</sup> + encoder cable 	7DD01- □□□□	SH20 SH30	<ul style="list-style-type: none"> <li>Power cable (with brake conductors):                             <ul style="list-style-type: none"> <li>– 4 × 0.75 + 2 × 0.38 (4 × 18 AWG + 2 × 22 AWG)</li> </ul> </li> <li>Encoder cable:                             <ul style="list-style-type: none"> <li>– Cable length ≤ 15 m: 3 × 2 × 0.25 (3 × 2 × 24 AWG)</li> <li>– Cable length 20 m or 30 m: 2 × 2 × 0.25 + 2 × 0.38 (2 × 2 × 24 AWG + 2 × 22 AWG)</li> </ul> </li> </ul>	ODE61	3HD00
	7DN01- □□□□	SH40			3HN00
<b>Dual cable with hybrid connector:</b> Power cable (without brake conductors) + encoder cable 	7CD01- □□□□		<ul style="list-style-type: none"> <li>Power cable (without brake conductors):                             <ul style="list-style-type: none"> <li>– 4 × 0.75 (4 × 18 AWG)</li> </ul> </li> <li>Encoder cable:                             <ul style="list-style-type: none"> <li>– Cable length ≤ 15 m: 3 × 2 × 0.25 (3 × 2 × 24 AWG)</li> <li>– Cable length 20 m or 30 m: 2 × 2 × 0.25 + 2 × 0.38 (2 × 2 × 24 AWG + 2 × 22 AWG)</li> </ul> </li> </ul>		3HD00
	7CN01- □□□□			3HN00	

MOTION-CONNECT 350 and 380 cables				Connectors		
Type	Article number 6FX3□□02. <sup>1)</sup>	Applicable 1FL2 motor	Cross-section for conductors (mm <sup>2</sup> )	Drive side 6FX2003 -	Motor side 6FX2003- -	
Power cable (with brake conductors) 	5DK32- □□□□	SH48 SH52	4 × 0.75 + 2 × 0.38 (4 × 18 AWG + 2 × 22 AWG)	-	0LL63	
Power cable (without brake conductors) 	5CK32- □□□□		4 × 0.75 (4 × 18 AWG)			
	5CL01- □□□□	SH45 SH65	4 × 0.75 (4 × 18 AWG)			0LL13
	5CL02- □□□□	SH90	4 × 1.5 (4 × 16 AWG)			
	5CL12- □□□□		4 × 2.5 (4 × 14 AWG)			
Encoder cable 	2XB11- □□□□	SH48 SH52	<ul style="list-style-type: none"> <li>Cable length ≤ 15 m: 3 × 2 × 0.25 (3 × 2 × 24 AWG)</li> <li>Cable length 20 m or 30 m: 2 × 2 × 0.25 + 2 × 0.38 (2 × 2 × 24 AWG + 2 × 22 AWG)</li> </ul>	0DE61	0DB63	
	2XB12- □□□□	SH45 SH65 SH90			0DB13	
Brake cable 	5BL03- □□□□		2 × 0.75 (2 × 18 AWG)	-	0LL53	

- <sup>1)</sup> The last four digits (□□□□) in the cable article number define the cable length corresponding to the length code: 1AD0 = 3 m, 1AF0 = 5 m, 1AH0 = 7 m, 1BA0 = 10 m, 1BF0 = 15 m, 1CA0 = 20 m, 1DA0 = 30 m.
- <sup>2)</sup> The conductors for the motor holding brake are integrated in the MOTION-CONNECT power cable.











If you prefer to use non-Siemens cables, Siemens provides the following connectors for you to assemble your own cables.

Note that Siemens does not provide any guarantee or warranty regarding the functionality, reliability or quality of non-Siemens cables used with the S200 servo drive system, and is not responsible for device (e.g. motor and converter) damages due to the use of non-Siemens cables.

## Description

### 3.4 Accessories

Table 3-7 Overview of connectors and crimp contacts

Cable connectors					
	Article number 6FX2003-	Description	Connection type	Quantity per package	Illustration
Connector (connected to motor)	3HD00	Hybrid plug (drive end)	Crimping	5 pieces/pack	
	3HN00	Hybrid plug (non-drive end)	Crimping	5 pieces/pack	
	0LL63	M17 circular connector	Crimping	5 pieces/pack	
	0DB63	M17 circular connector	Crimping	5 pieces/pack	
	0LL13	M23 circular connector	Crimping	5 pieces/pack	
	0DB13	M17 circular connector	Crimping	5 pieces/pack	
	0LL53	M23 circular connector	Crimping	5 pieces/pack	
Connector (connected to converter)	0DE61	IX-C connector	Crimping	5 pieces/pack	
Crimp contact	7HP00	Hybrid power contacts	Crimping	2000 pieces/reel	
	7HS00	Hybrid signal contacts	Crimping	2000 pieces/reel	

### More information

For more information about the MOTION-CONNECT cable article number explanation, see Section "Article number explanation (Page 55)".

For more information about assembling cables, see Section "Assembling cables (Page 879)".

#### 3.4.2.2 I/O cable and connector

### Description

The cable is used to connect the converter to a controller for signal transmission on the interface X130.



Table 3-8 I/O cable and connector

Name	Article number	Length (m)
I/O cable (20 pins)	6SL5562-1XX00-0AC0	1
I/O connector (20 pins)	6SL3260-2MA00-0VA0	-

### More information

For more information about the I/O cable and connector, see Section "Connecting the inputs and outputs (Page 153)".

For more information about how to assemble the I/O connector, see Section "Assembling the I/O connector (Page 884)".

## 3.4.3 Line filter

### Description

Line filters limit the conducted interference emissions from the converters to the permissible limit values according to IEC 61800-3 Category C2.

Line filters are passive components used to expand the EMC properties of the servo drive system.

Siemens recommends that you use a line filter to protect the system from high frequency noise.

---

#### Note

For applications in European Union, UK, and Korea, the use of the recommended line filters is mandatory to fulfill the local EMC directives.

---

#### Note

The maximum length of the cable used to connect the line filter to the converter is 3 m.

---

### 3.4.3.1 Recommended line filters

Table 3-9 Recommended line filters

Converter frame size	Rated current (A)	Article number	Degree of protection
<b>1 AC, 200 V ... 240 V</b>			
FSA/FSB/FSC	18	6SL5550-0XB21-8CA0	IP20
<b>3 AC, 200 V ... 240 V</b>			
FSA/FSB/FSC	5	6SL3203-0BE15-0VA0	IP20
<b>3 AC, 380 V ... 480 V</b>			
FSA/FSB	5	6SL5550-0XE20-5CA0	IP20
FSC	12	6SL5550-0XE21-2CA0	
FSD	20	6SL5550-0XE22-0CA0	

### 3.4.3.2 Technical data

#### Technical data


Table 3-10 Technical data of line filters

Article number	6SL5550-0XB21 -8CA0	6SL3203-0BE15 -0VA0	6SL5550-0XE20 -5CA0	6SL5550-0XE21 -2CA0	6SL5550-0XE22 -0CA0
Line voltage (V)	200 ... 240 V, 1 AC	275 ... 480 V, 3 AC	275 ... 480 V, 3 AC	275 ... 480 V, 3 AC	275 ... 480 V, 3 AC
Rated current (A)	18	5	5	12	20
Power loss (W)	4.7	2	2.7	3.9	10.1
Type of connection	Screw terminals	Screw terminals	Screw terminals	Screw terminals	Screw terminals
<b>Conductor cross-section (mm<sup>2</sup>)</b>					
For single-conductor connection	0.75 ... 6 (AWG 18 ... 10)	0.75 ... 6 (AWG 18 ... 10)	0.75 ... 6 (AWG 18 ... 10)	0.75 ... 6 (AWG 18 ... 10)	0.75 ... 6 (AWG 18 ... 10)
For flexible cable connection	0.75 ... 4 (AWG 18 ... 10)	0.75 ... 4 (AWG 18 ... 10)	0.75 ... 4 (AWG 18 ... 10)	0.75 ... 4 (AWG 18 ... 10)	0.75 ... 4 (AWG 18 ... 10)
Insulation stripping length (mm)	8 ... 9	8 ... 9	8 ... 9	8 ... 9	8 ... 9
Protective conductor connection	M5	M6	M6	M6	M6
Degree of protection	IP20	IP20	IP20	IP20	IP20
Dimensions (W × H × D, mm)	58 × 155 × 53	55 × 170 × 130	55 × 170 × 130	75 × 195 × 140	60 × 250 × 130
Weight (kg)	0.75	0.67	0.72	1.34	1.5
Leakage current (mA)	11.84	4.31	4.37	7.05	8.88

### 3.4.3.3 Dimension drawing

#### 6SL5550-0XB21-8CA0

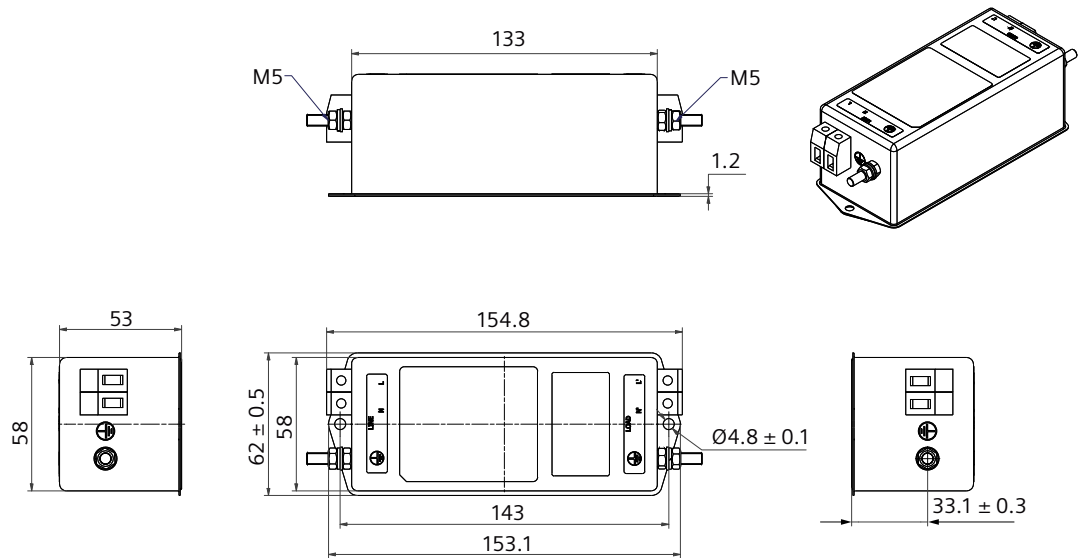All dimensions are specified in millimeters.




Tightening torque for the mounting screws: 2.5 Nm

Tightening torque for the protective conductor fastening bolt: 2.0 Nm ... 2.2 Nm

Tightening torque for the line-side and load-side screw connection: 0.7 Nm ... 0.8 Nm

**6SL3203-0BE15-0VA0 and 6SL5550-0XE20-5CA0**

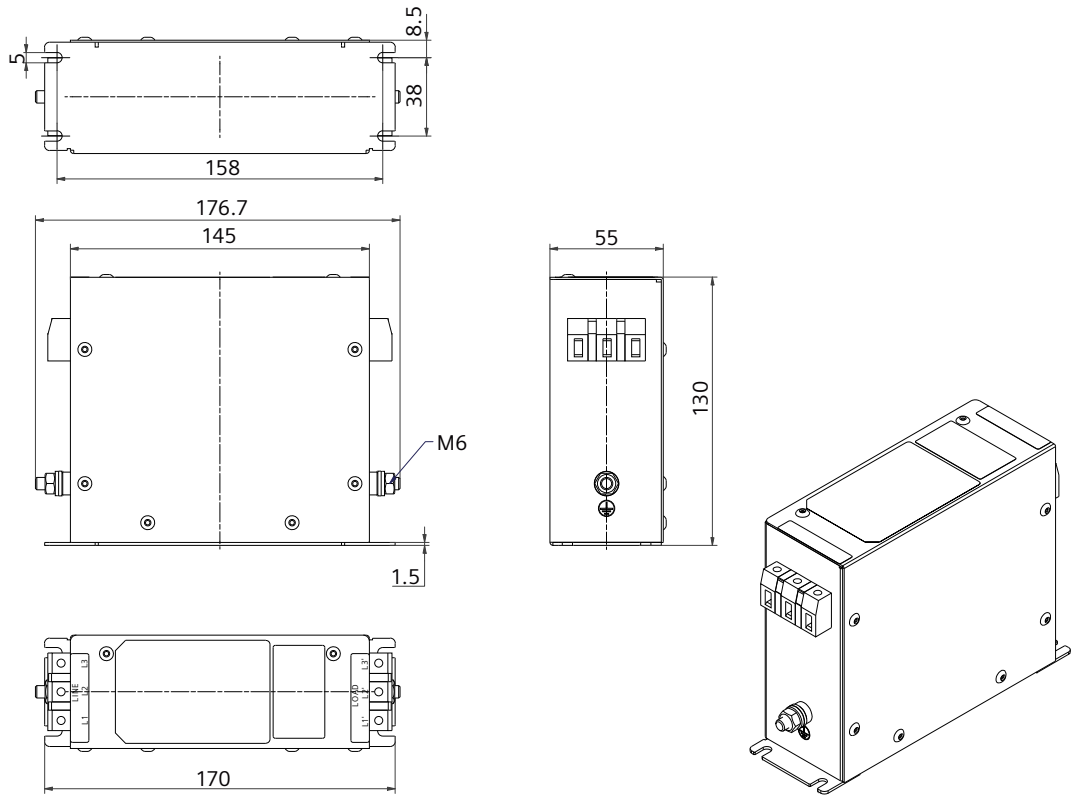All dimensions are specified in millimeters.




Tightening torque for the mounting screws: 2.5 Nm

Tightening torque for the protective conductor fastening bolt: 3.5 Nm ... 4.0 Nm

Tightening torque for the line-side and load-side screw connection: 0.7 Nm ... 0.8 Nm

### 6SL5550-0XE21-2CA0

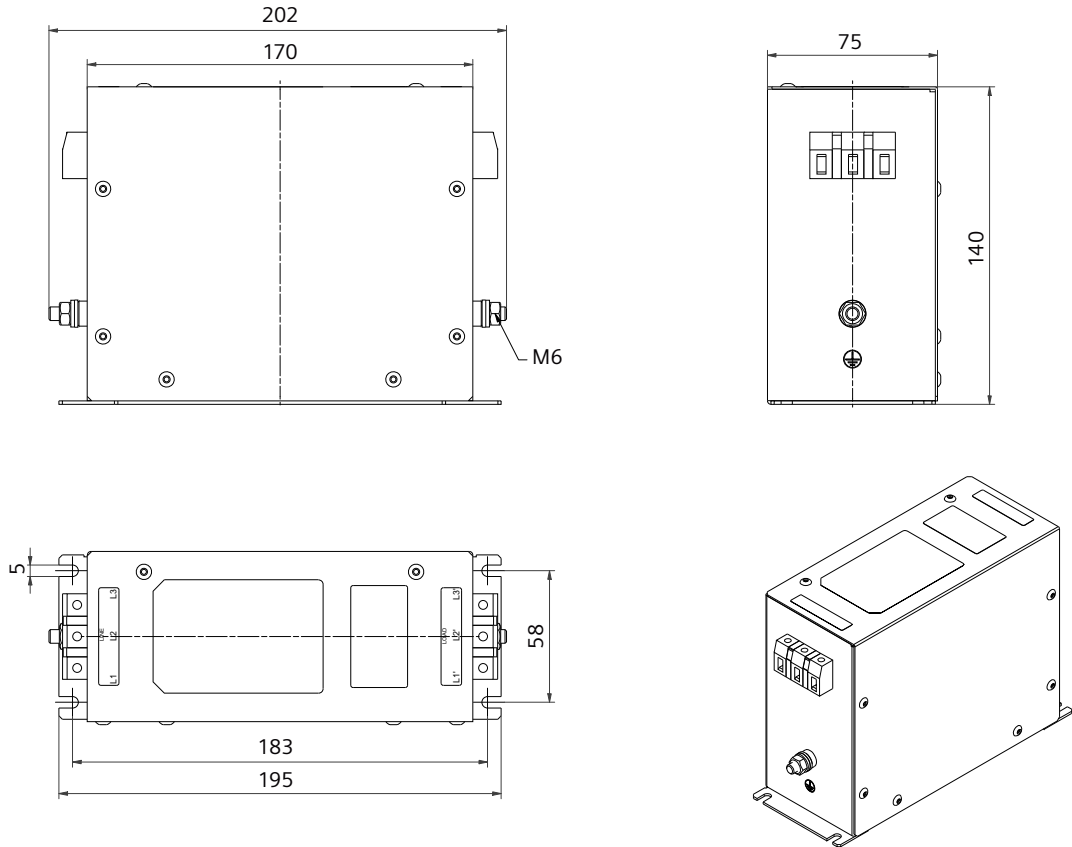All dimensions are specified in millimeters.




Tightening torque for the mounting screws: 2.5 Nm

Tightening torque for the protective conductor fastening bolt: 3.5 Nm ... 4.0 Nm

Tightening torque for the line-side and load-side screw connection: 0.7 Nm ... 0.8 Nm

### 6SL5550-0XE22-0CA0

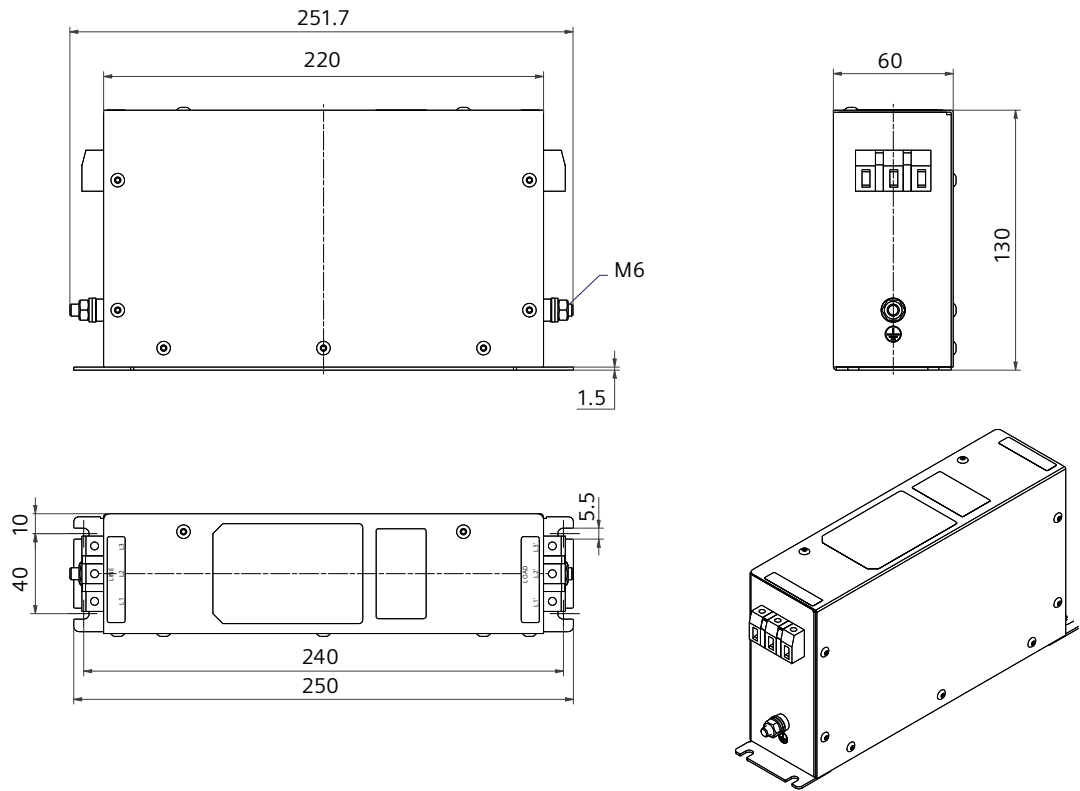All dimensions are specified in millimeters.



Tightening torque for the mounting screws: 2.5 Nm

Tightening torque for the protective conductor fastening bolt: 3.5 Nm ... 4.0 Nm

Tightening torque for the line-side and load-side screw connection: 0.7 Nm ... 0.8 Nm

### 3.4.3.4 Mounting instructions for the line filter

#### Description

- Observe the requirements for "EMC-compliant installation (Page 92)" when mounting the line filter.
- To achieve a low-impedance connection, mount the line filter on the same metallic mounting plate as the converter. Mount these two components as close as possible.

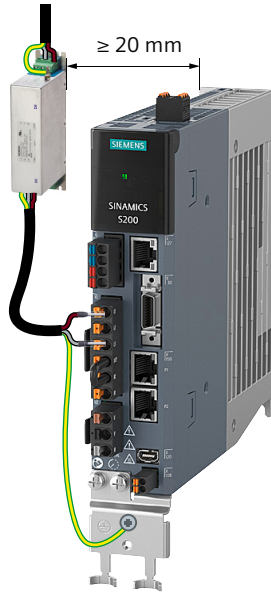


Figure 3-11 Connecting the line filter (example)

### 3.4.4 External 24 V DC power supply

#### Description

A 24 V DC power supply is needed to supply the converter. The following table provides the technical specifications of the required external 24 V DC power supply:

Table 3-11 Specifications of the required external 24 V DC power supply

Parameter	Description
Rated voltage (V)	24 (-15% to +20%) <sup>1)</sup>
Permissible voltage fluctuation (V)	When using a motor without brake: 20.4 ... 28.8 When using a motor with brake: 22.8 ... 28.8
Maximum current (A)	<ul style="list-style-type: none"> <li>For 200 V variants When using a motor without brake: 1.2 When using a motor with brake: 2.2</li> <li>For 400 V variants When using a motor without brake: 1.2 When using a motor with brake: 3.2</li> </ul>
Safety insulation class	SELV/PELV

<sup>1)</sup> When using a motor with brake, the minimum voltage of 24 V DC -5% must be available at the connector on the motor side to guarantee that the brake reliably opens. If the maximum voltage of 24 V DC +20% is exceeded, then the brake could re-close. The voltage drop along the brake feeder cable must be taken into consideration. The voltage drop  $\Delta U$  for copper cables can be approximately calculated as follows:

$$\Delta U [V] = 0.01742 \Omega \cdot \text{mm}^2/\text{m} \cdot (2 \cdot l/q) \cdot I_{\text{Brake}}$$

Where:  $l$  = cable length [m],  $q$  = brake cable cross section [ $\text{mm}^2$ ],  $I_{\text{Brake}}$  = DC current of brake [A]

#### Note

Siemens recommends that you use different 24 V DC power supplies for the converter and for the inductive loads such as relays or solenoid valves.

If you use the 24 V DC power supply to supply both the inductive loads and the converter at the same time, make sure that you connect surge protection devices to the load side.

### 3.4.5 Replacement fans

#### Description

The 400 V converters FSC and FSD are integrated with a fan unit. The service life of the fan can reach 20000 hours at the rated operating temperature and the average 100% operating load.

Replace the defective fan in time to ensure the proper operation of the converter.

To replace the fan, you can order fan units from Siemens using the following article numbers.



Table 3-12 Replacement fans

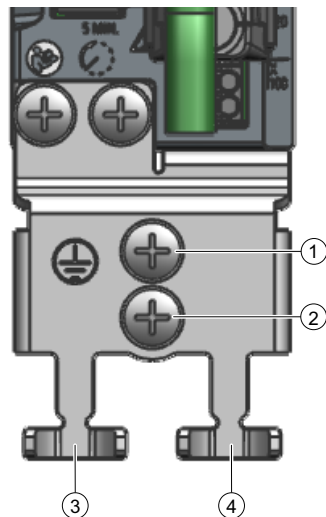
SINAMICS S200 PN	Article number
<b>3 AC, 380 V ... 480 V</b>	
FSC	6SL5560-OCE00-0AA0
FSD	6SL5560-ODE00-0AA0

### 3.4.6 Shield plate kit

#### Description

The shield plate kit (article number: 6SL5566-0AB00-0AA0) includes a shield plate and four fixing screws (M4 × 12). The shield plate can establish ground connections to both shielded cables and protective conductors.

You can use the supplied two M4 screws to fix the shield plate with a tightening torque of 2.2 Nm.



- ① Converter grounding
- ② Motor cable grounding
- ③ Fixing motor power cable
- ④ Reserved (recommended to fix brake cable and encoder cable)

Figure 3-12 Shield plate

For the connection of ① or ②, you can connect the protective conductor with a cable lug and an M4 screw to the shield plate.

### 3.4.7 SD card

#### Description

The converter can be operated with or without an SD card.

The converter supports FAT32-format SD cards with a capacity of up to 32 GB.

A permanently inserted SD card from Siemens is required to use functions that require a license. The license key can only be assigned to the Siemens SD card.

An SD card from Siemens or a third-party manufacturer (for example, Kingston or SanDisk) is suitable for the following situations:

- Data backup and restore
- Transfer of the converter settings from one converter to another
- Firmware update

Table 3-13 SD card ordering data

Siemens SD card	Article number
SD card without firmware	6SL5970-0AA00-0AA0
SD card with firmware V6.2	6SL5570-0GC00-0AA0
SD card with firmware V6.3	6SL5570-0GD00-0AA0

## 3.5 Directives and standards

### 3.5.1 Directives, standards and certificates for the converter

The following directives and standards are relevant for the converter:



#### European Low Voltage Directive

The converter fulfills the requirements stipulated in the Low-Voltage Directive 2014/35/EU, if it is covered by the application area of this directive.

#### European Machinery Directive

The converter fulfills the requirements stipulated in the Machinery Directive 2006/42/EC, if it is covered by the application area of this directive.

However, the use of the converter in a typical machine application has been fully assessed for compliance with the main regulations in this directive concerning health and safety.

#### European RoHS Directive

The converter complies with Directive 2011/65/EU regarding limiting the use of certain hazardous substances.

#### European EMC Directive

The compliance of the converter with the regulations of the Directive 2014/30/EU has been verified through full compliance with the IEC 61800-3.

#### European Directive on Waste Electrical and Electronic Equipment (WEEE)

The converter complies with the 2012/19/EU directive on taking back and recycling waste electrical and electronic equipment.

#### Safety Integrated

The S200 PN converter complies with the requirements relating to functional safety/safety of machinery.

#### Underwriters Laboratories (North American market)

The converters provided with the test symbol displayed fulfill the requirements stipulated for the North American market.



#### UKCA certification

The converter complies with the requirements for the market in Great Britain (England, Wales and Scotland).



#### Australia and New Zealand (RCM formerly C-Tick)

The converter with the symbol displayed on the rating plate fulfills the EMC requirements for Australia and New Zealand.





#### Eurasian Conformity

The converter complies with the requirements of the Russia/Belarus/Kazakhstan customs union (EAC).



#### EMC requirements for South Korea

The converter with the KC marking on the rating plate satisfies the EMC requirements for South Korea.

#### China RoHS

The converter complies with the requirements of China RoHS. You can find additional information on the Internet:

 China RoHS (<https://support.industry.siemens.com/cs/ww/en/ps/29596/cert>)

#### Immunity to voltage drop of semiconductor process equipment

The converter fulfills the requirements of the standard SEMI F47-0706.

#### Quality systems

Siemens AG employs a quality management system that meets the requirements of ISO 9001 and ISO 14001.

### Certificates for download

You can find all relevant certificates for download on the Internet:

 Certificates (<https://support.industry.siemens.com/cs/ww/en/ps/29596/cert>)

### 3.5.2 Directives, standards and certificates for the motor

The following directives and standards are relevant for the motors:



#### European Low Voltage Directive

The motors fulfill the requirements stipulated in the Low-Voltage Directive 2014/35/EU, if they are covered by the application area of this directive.

#### European Machinery Directive

The motors fulfill the requirements stipulated in the Machinery Directive 2006/42/EC, if they are covered by the application area of this directive.

However, the use of the motors in a typical machine application has been fully assessed for compliance with the main regulations in this directive concerning health and safety.

#### European Directive on rotating electrical machines

The motors comply with the requirements of EN 60034 directive on rotating electrical machines.

**European RoHS Directive**

The motors comply with Directive 2011/65/EU regarding limiting the use of certain hazardous substances.

**European EMC Directive**

The compliance of the motors with the regulations of the Directive 2014/30/EU has been verified through full compliance with the IEC/EN 61800-3.

**European Directive on Waste Electrical and Electronic Equipment (WEEE)**

The motors comply with the 2012/19/EU directive on taking back and recycling waste electrical and electronic equipment.

**Underwriters Laboratories (North American market)**

The motors provided with the test symbol displayed fulfill the requirements stipulated for the North American market.

**UKCA certification**

The motors comply with the requirements for the market in Great Britain (England, Wales and Scotland).

**Eurasian Conformity**

The motors comply with the requirements of the Russia/Belarus/Kazakhstan customs union (EAC).

**Registration, Evaluation and Authorization of Chemicals**

The motors comply with the requirements of Registration, Evaluation and Authorization of Chemicals (REACH).

**China RoHS**

The motors comply with the requirements of China RoHS. You can find additional information on the Internet:

 China RoHS (<https://support.industry.siemens.com/cs/ww/en/ps/29685/cert>)

**Quality systems**

Siemens AG employs a quality management system that meets the requirements of ISO 9001 and ISO 14001.

**China Energy Label**

The motors fulfill the China Energy Label Grade 2 according to GB 30253-2013.

Table 3-14 Specifications of China Energy Label

<b>Name of the standard</b>	Minimum allowable values for energy efficiency and energy efficiency class of permanent-magnet synchronous motors (GB30253-2013)
<b>Date of entry into force</b>	July 1, 2020
<b>Affected motors</b>	Permanent-magnet synchronous motors (without incorporated brake) with a rated power of 0.55 kW to 90 kW and a rated speed of 500 r/min to 3000 r/min driven by variable-frequency equipment on a power supply below 1000 V.

3.5 Directives and standards

<b>Motor requirements</b>	As of the implementation date of the standard, all affected motors must be provided with the "China Energy Label".
<b>Affected Siemens products</b>	Affected Siemens motors are subject to the requirements of standard GB30253-2013: SIMOTICS S-1FL2 servo motors.



Figure 3-13 Example of the China Energy Label

The article number ① stated on the China Energy Label corresponds to the first 11 digits of the article number of the SIMOTICS S-1FL2 motor.

**Certificates for download**

You can find all relevant certificates for download on the Internet:

 Certificates (<https://support.industry.siemens.com/cs/ww/en/ps/29685/cert>)

**3.5.3 Directives, standards and certificates for the MOTION-CONNECT cable**

The following directives and standards are relevant for the MOTION-CONNECT cables:



**European Low Voltage Directive**

The MOTION-CONNECT cables fulfill the requirements stipulated in the Low-Voltage Directive 2014/35/EU, if they are covered by the application area of this directive.

**European Machinery Directive**

The MOTION-CONNECT cables fulfill the requirements stipulated in the Machinery Directive 2006/42/EC, if they are covered by the application area of this directive.

However, the use of the converters and motors in a typical machine application has been fully assessed for compliance with the main regulations in this directive concerning health and safety.

**European RoHS Directive**

The MOTION-CONNECT cables comply with Directive 2011/65/EU regarding limiting the use of certain hazardous substances.

**European EMC Directive**

The compliance of the MOTION-CONNECT cables with the regulations of the Directive 2014/30/EU has been verified through full compliance with the IEC/EN 61800-3.

**European Directive on Waste Electrical and Electronic Equipment (WEEE)**

The MOTION-CONNECT cables comply with the 2012/19/EU directive on taking back and recycling waste electrical and electronic equipment.

**Underwriters Laboratories (North American market)**

The MOTION-CONNECT cables provided with the test symbol displayed fulfill the requirements stipulated for the North American market.

**UKCA certification**

The MOTION-CONNECT cables comply with the requirements for the market in Great Britain (England, Wales and Scotland).

**Eurasian Conformity**

The MOTION-CONNECT cables comply with the requirements of the Russia/Belarus/Kazakhstan customs union (EAC).

**China RoHS**

The MOTION-CONNECT cables comply with the requirements of China RoHS. You can find additional information on the Internet:

 China RoHS (<https://support.industry.siemens.com/cs/ww/en/ps/14662/cert>)

**Quality systems**

Siemens AG employs a quality management system that meets the requirements of ISO 9001 and ISO 14001.

**Certificates for download**

You can find all relevant certificates for download on the Internet:

 Certificates (<https://support.industry.siemens.com/cs/ww/en/ps/14662/cert>)





# Application planning

## 4.1 Protection of persons from electromagnetic fields

### Overview

Protection of workers from electromagnetic fields is specified in the European EMF Directive 2013/35/EU. This directive is implemented in national law in the European Economic Area (EEA). Employers are obligated to design workplaces in such a way that workers are protected from impermissibly strong electromagnetic fields.

To this end, assessments and/or measurements must be performed for workplaces.

### Requirement

The following general conditions apply for the evaluations and measurements:

1. The laws for protection from electromagnetic fields in force in individual EU member states can go beyond the minimum requirements of the EMF Directive 2013/35/EU and always take precedence.
2. The ICNIRP 2010 limits for the workplace are the basis for the assessment.
3. The 26th BImSchV (German Federal Emission Protection Regulation) defines 100  $\mu\text{T}$  (RMS) for the assessment of active implants.  
According to Directive 2013/35/EU, 500  $\mu\text{T}$  (RMS) at 50 Hz is applicable here.
4. The routing of power cables has a significant impact on the electromagnetic fields that occur. Install and operate the components inside metallic cabinets in compliance with the documentation and use shielded motor cables (see "EMC-compliant installation (Page 92)").

### Description

The converters are normally used in machines. The assessment and testing is based on DIN EN 12198-1 and IEC 62311.

Compliance with the limit values was assessed for the following frequencies:

- Line frequency 47 ... 63 Hz
- 8 kHz pulse frequency

4.1 Protection of persons from electromagnetic fields

The indicated minimum distances apply to the head and complete torso of the human body. Shorter distances are possible for extremities.

Table 4-1 Minimum distances to the converter

Individuals without active implants		Individuals with active implants	
Control cabinet closed	Control cabinet open	Control cabinet closed	Control cabinet open
0 cm	Forearm length (approximately 35 cm)	Must be separately assessed depending on the active implant.	

## 4.2 Fault protection for the motor circuit

### Description

The converter provides short-circuit protection at the motor output terminals.

The manufacturer's declaration describes the conditions regarding protection against electric shock in the event of an insulation failure in the motor circuit.

### More information

You can find more information on the Internet: Manufacturer's declaration (<https://support.industry.siemens.com/cs/ww/en/view/109476638>)

## 4.3 Permissible mains supply network configurations for motors

### Description

In combination with the drive system, the motors are generally certified for operation on TN and TT line systems with grounded neutral point and on IT line systems.

The following special features should be noted:

- For operation on IT line systems, the occurrence of the first fault between an active part and ground must be signaled by a monitoring device. According to IEC 60364-4-41, it is recommended that the first fault is removed as quickly as practically possible. Motor operation in such a fault situation can reduce the service life due to a damage insulation system as a result of partial discharge.
- For 3 AC 380 V ... 480 V mains supply networks with a grounded line conductor, an isolating transformer with grounded neutral point (secondary side) must be connected between the mains supply and the drive system to protect the motor insulation from excessive stress.

## 4.4 Line connection conditions for the converter with the motor 1FL2

### Description

The drive system is designed for connection to grounded TN/TT and non-grounded IT mains supply networks.

Depending on the motor/converter combination and the planned installation altitude, the following constraints must be taken into account regarding the line connection.

Table 4-2 Line connection conditions for the converter with the motor 1FL2

Motor	Converter input voltage	Permissible line system configurations for installation altitude no higher than 2000 m	Permissible line system configurations for installation between 2000 m and 4000 m
200 V	1 AC 200 V ... 240 V (-15% ... +10%)	<ul style="list-style-type: none"> <li>TN and TT line systems with grounding at any potential</li> <li>IT line systems<sup>*)</sup></li> </ul>	Install an isolating transformer and ground the secondary side at any potential.
200 V	3 AC 200 V ... 240 V (-15% ... +10%)	<ul style="list-style-type: none"> <li>TN and TT line systems with grounding at any potential</li> <li>IT line systems<sup>*)</sup></li> </ul>	<ul style="list-style-type: none"> <li>TN and TT line systems with grounded neutral point</li> <li>IT line systems with an isolating transformer with grounded neutral point (secondary side)</li> </ul>
400 V	3 AC 380 V ... 480 V (-15% ... +10%)	<ul style="list-style-type: none"> <li>TN and TT line systems with grounded neutral point</li> <li>IT line systems<sup>*)</sup></li> </ul>	Install an isolating transformer and ground the secondary side at the neutral point.

<sup>\*)</sup> With the IT screw for the functional grounding removed. For more information about removing the IT screw, see Section "Removing the IT screw for the functional grounding (Page 84)".

#### NOTICE

##### Damage to motor insulation due to excessive voltages

In the event of a ground fault in the IT supply system, the motor insulation can be damaged by the higher voltage to ground.

- Use a ground fault monitor.
- Eliminate the ground fault as quickly as possible.


## 4.5 Removing the IT screw for the functional grounding

### Overview

When connecting the converter to an IT line system, you must remove the IT screw for the functional grounding.

### Requirement

Switch off the converter power supply.

 **CAUTION**

**Damage to the converter when connected to an IT line system**

The converter will be damaged if it is operated on an IT line system.

- Remove the IT screw of the converter.



 **WARNING**

**Electric shock as a result of a residual charge in power components**

After the power supply has been switched off, it takes up to 5 minutes until the capacitors in the converter have discharged so that the residual charge is at a non-hazardous level. Touching live components can result in death or severe injury.

- Check that there is absolutely no voltage between any of the power connections, or between them and the protective conductor connection.

### Procedure



Figure 4-1 Removing the IT screw for the functional grounding

Proceed as follows to remove the IT screw of the converter:

1. Open the protective flap at the converter housing, e.g. using a slotted screwdriver.
2. Release the IT screw for the functional grounding and remove it.

## 4.6 Minimum cross-section of the protective conductors

### Overview

A high leakage current flows through the protective conductor in converter operation. For reliable touch protection during operation, the protective conductor of the converter must not be interrupted. This primarily results in requirements for the minimum conductor cross-section of the protective conductor.

No restriction applies to the length of the protective conductor for touch protection; however, short protective conductors are advantageous for EMC-compliant installation.

### Description



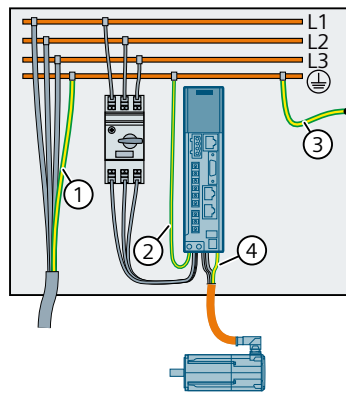
#### **WARNING**

#### **Electric shock due to interrupted protective conductor**

The drive components conduct a high leakage current via the protective conductor. Touching conductive parts when the protective conductor is interrupted can result in death or serious injury.

- Comply with the requirements for the protective conductor.





- ① **Protective conductor for the mains supply cable**  
 The protective conductor must be dimensioned in compliance with local installation rules for equipment with high leakage currents. As a minimum, one of the following conditions must be satisfied:
- The protective conductor is routed so that along its complete length it is protected against mechanical damage.
  - The protective conductor has a cross-section  $\geq 10 \text{ mm}^2 \text{ Cu}$ .
  - A second protective conductor with the same cross-section is provided.
  - The protective conductor of a multi-conductor cable has a cross-section  $\geq 2.5 \text{ mm}^2 \text{ Cu}$ .
- ② **Protective conductor of the converter line supply cable**  
 The protective conductor must be dimensioned in compliance with local installation rules.
- If each converter is individually protected, the protective conductor with the same cross-section must be routed in the same way as the line connection cable to the converter.
- ③ **Protective conductor between PE and control cabinet**  
 The cable cross-section must be dimensioned in compliance with local installation rules.
- ④ **Protective conductor of the motor power cable**  
 The protective conductor has the same cross-section as the line conductor of the motor power cable.

## 4.7 Electromagnetic compatibility (EMC)

### 4.7.1 Interference caused by electromagnetic fields

#### Description

Fluctuating currents and voltages generate electromagnetic fields. Electromagnetic fields can interfere with the operation of electrical devices.

Equipment that generates electromagnetic fields is called a source of interference. Sources of interference may be converters that have not been correctly installed, for example. On the other hand, interference sinks are devices that are disturbed by electromagnetic fields, e.g. mobile telephones.

The type of transmission is another distinguishing feature of interference. A source of interference transmits the interference to the sink either through conduction or through radiation.

### 4.7.2 Electromagnetic compatibility (EMC)

#### Description

Interference suppression measures increase the electromagnetic compatibility (EMC).

EMC interference suppression measures allow the device to function correctly. As a consequence, the device is neither a source of interference for other devices nor an interference sink that can be disturbed by other devices.

#### More information

Fundamental information for EMC-compliant planning and EMC-compliant installation is provided in the Internet:

EMC Design Guidelines Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/60612658>).

### 4.7.3 EMC environments in residential and industrial areas

#### Description

IEC 61800-3 defines EMC requirements for using variable-speed drives in the following 2 environments:

- 1st environment: Residential environment  
The residential environment includes residential buildings or locations where the drive is directly connected to the public low-voltage grid without using an intermediate transformer. Equipment and systems that are operated on the public low-voltage grid must comply with defined limit values for interference immunity and interference emission. The limit values are specified in the applicable standards. Especially for interference emissions, increased requirements apply regarding the 2nd environment.
- 2nd environment: Industrial Environment  
An industrial environment includes all other installations that are not directly connected to the low-voltage supply for residential buildings. The 2nd environment essentially encompasses industrial areas that are supplied from the medium voltage grid via their own transformers.

### 4.7.4 EMC category

#### Description

Together with the associated motors and encoders, including the connecting cables, the converter forms a variable-speed drive. Product standard IEC 61800-3 defines the EMC requirements for a variable-speed drive. Product standard IEC 61800-3 calls a variable-speed drive a "Power Drive System" (PDS).

IEC 61800-3 defines categories for electromagnetic compatibility in the 1st environment and the 2nd environment.

Table 4-3 Environments and categories according to IEC 61800-3

Environment	1st environment		2nd environment	
Category	C1	C2	C3	C4 <sup>1)</sup>
Voltage, current	< 1 000 V			≥ 1 000 V or ≥ 400 A
Line system configuration	TN, TT			TN, TT, IT
Installation, commissioning	No requirement	By professional personnel		

<sup>1)</sup> Precondition: Plant manufacturers and operating companies agree on plant-specific measures in an appropriate EMC plan. If specified in the product documentation, the drive can also be operated on ungrounded line supplies (IT line systems) in accordance with product standard IEC 61800-3.

### More information

To comply with product standards of plants and/or machines, when integrating the converter in plants or machines, additional measures may be required. The additional measures are the responsibility of the plant builder or machine OEM.

Disturbance-free operation of the converter is only guaranteed when specialist personnel carry out the installation work in strict compliance with EMC regulations.

## 4.7.5 EMC limit values in South Korea

### Description

이 기기는 업무용(A 급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.  
For sellers or users, please keep in mind that this device is an A-grade electromagnetic wave device. This device is intended to be used in areas other than home.

The EMC limit values to be observed for Korea correspond to the limit values of the EMC product standard for variable-speed electric drives EN 61800-3 of category C2 or the limit value class A, Group 1 to KN11.

By implementing appropriate additional measures, the limit values according to category C2 or limit value class A, Group 1, are observed.

Additional measures, such as the use of an additional RFI suppression filter (EMC filter), may be necessary.

In addition, measures for EMC-compliant configuration of the plant or system are described in detail in this manual.

The final statement on compliance with the applicable standard is given by the respective label attached to the individual device.

## 4.7.6 Harmonic current emissions

### Overview

IEC 61800-3 does not define any current harmonic limits when converters are operated on industrial line supplies. A system evaluation according to IEC 61800-3 Annex B.4 is recommended.

## Description

When operated with rated power, the converter generates the following typical current harmonics:

Table 4-4 Typical harmonic currents of the converter, 1 AC 200 V

200 V converter	Typical harmonic current (A) at $U_k$ 4%								
	5th	7th	11th	13th	17th	19th	23rd	25th	THC
FSA	0.57	0.42	0.16	0.07	0.10	0.10	0.07	0.04	1.05
FSB	0.55	0.44	0.22	0.11	0.05	0.06	0.05	0.02	1.04
FSC	0.19	0.18	0.15	0.10	0.04	0.03	0.01	0.02	0.43

THC = Total Harmonic Current: sum of all harmonic currents

Table 4-5 Typical harmonic currents of the converter, 3 AC 200 V

200 V converter	Typical harmonic current (A) at $U_k$ 4%								
	5th	7th	11th	13th	17th	19th	23rd	25th	THC
FSA	0.18	0.13	0.08	0.05	0.04	0.02	0.02	0.02	0.26
FSB	0.94	0.66	0.19	0.08	0.15	0.13	0.07	0.07	1.2
FSC	2.37	1.64	0.40	0.22	0.34	0.25	0.10	0.13	2.97

THC = Total Harmonic Current: sum of all harmonic currents

Table 4-6 Typical harmonic currents of the converter, 3 AC 400 V

400 V converter	Typical harmonic current (A) at $U_k$ 4%								
	5th	7th	11th	13th	17th	19th	23rd	25th	THC
FSA	0.38	0.31	0.24	0.29	0.34	0.29	0.30	0.29	1.03
FSB	1.11	0.79	0.74	0.87	0.80	0.72	0.75	0.74	2.56
FSC	3.05	2.08	2.11	2.40	2.10	1.80	1.66	1.47	6.17
FSD	5.69	3.29	4.42	4.58	2.81	2.47	1.86	1.26	10.27

THC = Total Harmonic Current: sum of all harmonic currents

## 4.8 EMC-compliant installation

### 4.8.1 EMC zones in the control cabinet

#### Description

Spatially separating disturbance sources and disturbance sinks avoids mutual disturbances. To achieve this, the control cabinet and the plant or machine are split up into EMC zones. Disturbance sources and disturbance sinks are installed in their own specific EMC zones.

An EMC-compliant control cabinet is structured as follows:

- All devices in the control cabinet are assigned to the appropriate EMC zones.
- Using one of the following measures, the zones are electromagnetically decoupled from one another:
  - Lateral clearance
  - Separate metal enclosure
  - Partition panels with large surface areas
- The cables associated with various EMC zones are routed in separate cable harnesses or cable ducts.
- Filters or isolating amplifiers are used at the interfaces of the EMC zones.

### 4.8.2 Shielding and potential equalization inside the control cabinet

#### Description

A control cabinet with EMC-compliant shielding is structured as follows:

- The size of the openings and breakouts at the control cabinet depend on whether it is to be used in the 1st or 2nd environment.
- Connect the door, side panels, top and base panels of the control cabinet with the control cabinet frame using one of the following methods:
  - Electrical contact surface of several cm<sup>2</sup> for each contact location
  - Several screwed connections
  - Short, finely stranded, braided copper wires with cross-sections  $\geq 95 \text{ mm}^2 / 000 (3/0) (-2) \text{ AWG}$
- A shield support is provided for shielded cables that are routed out of the control cabinet.
- The PE rail and shield support should be connected to the control cabinet frame through a large surface area to establish a good electrical connection.
- Devices and components are mounted on a bare, metal mounting plate.

- The mounting plate is connected to the control cabinet frame, PE rail and shield support through a large surface area to establish a good electrical connection.
- For screwed connections on painted or anodized surfaces, establish a good electrical connection by using one of the following methods:
  - Serrated contact washers that cut through the painted or anodized surface
  - The insulating coating (e.g. paint) at the contact locations has been removed.

### 4.8.3 Potential equalization between control cabinets

#### Description

EMC-compliant potential equalization between control cabinets is structured as follows:

- The PE rail runs through all control cabinets without any interruption.
- The frames of the control cabinets are connected at multiple locations using serrated washers through a large surface area to establish a good electrical connection.
- In systems where the control cabinets are lined up next to one another, and which are installed in two groups back to back, the PE rails of the two cabinet line-ups are connected with one another at multiple locations.

### 4.8.4 Electromechanical components

#### Description

EMC-compliant installation includes overvoltage protection. Different components are suitable depending on the type of voltage:

- RC elements or varistors for AC-operated coils
- Freewheeling diodes or varistors for DC-operated coils

The following components have overvoltage protection connected directly to the coil:

- Coils of contactors
- Relays
- Solenoid valves
- Motor holding brakes

## 4.8.5 EMC-compliant cable routing

### Overview

Power cables with a high interference level significantly influence the electromagnetic fields in a system or a machine.

Routing cables to be compliant with EMC is a requirement for disturbance-free operation of a system or machine.

### Description

The converter connection cables have different interference levels:

- Cables with a high level of interference:
  - Cable between the line filter and converter
  - Motor connection cables
  - Cable at the converter DC link connection
- Cables with a low level of interference:
  - Cable between the line and line filter
  - Signal and data cables

EMC-compliant cable routing complies with the following requirements:

- All cables are as short as possible.
- All cables are routed close to the mounting plates or control cabinet frames.
- Power cables with a high level of interference are routed so that there is a minimum clearance of 20 cm to cables with a low level of interference.  
If the minimum clearance of 20 cm is not possible, insert separating metal panels between the cables with a high level of interference and those with a low level of interference. The separating metal panels are connected to the mounting plate to establish a good electrical connection.
- Cables with a high level of interference and cables with a low level of interference only cross over at right angles.
- All signal and data cables enter the control cabinet from only one side, from below, for example.
- Signal and data cables, as well as the associated equipotential bonding cables, are routed in parallel and close to one another.
- Any unused conductors of signal and data cables are grounded at both ends.
- Incoming and outgoing individual conductors that are not shielded are twisted with one another.  
Alternatively, incoming and outgoing conductors are routed in parallel, but close to one another.



## 4.8.6 Shielded cables for the converter

### Description

The following cables must be shielded to comply with EMC regulations:

- Inside the control cabinet:
  - Cable between the converter and line filter
  - Signal and data cables
- Outside the control cabinet:
  - Motor connection cables
  - Signal and data cables

To achieve EMC-compliant installation of the converter, connect the shields of the power cable to the shield plate via the shield clamps. The shield plate is shipped with the converter.

For better EMC effects, Siemens recommends that you strip the brake cable and the encoder cable and connect the cable shields to earth. Make sure that the shield plate, the converter and the motor are properly grounded.

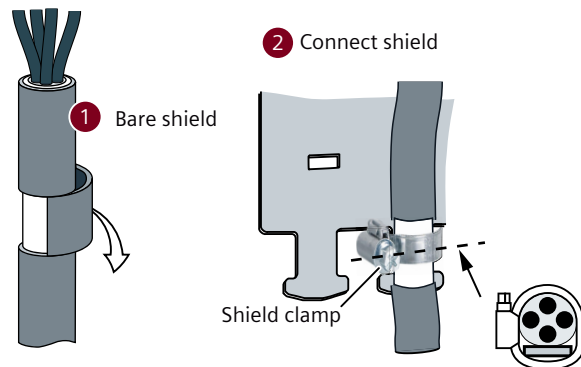


Figure 4-2 Correct EMC-compliant shield connection

## 4.8.7 Achievable EMC category

### Overview

The servo drive system has been tested in accordance with the emission requirements of IEC 61800-3 Category C2.

- For a radiated emission test, an external line filter (between the mains supply network and the converter) is required to meet the EMC requirements. The converter needs to be installed inside a shielded metallic cabinet, while other parts of the motion control system (including the PLC, DC power supply, spindle drive, and motor) need to be put outside the shielded cabinet.
- For a conductive emission test, an external line filter (between the mains supply network and the converter) is required to meet the EMC requirements.
- For the radiated emission and conductive emission tests, the length of the line supply cable between the line filter and the converter must be shorter than 1 m.

### Description

The achievable EMC category is dependent on the motor cable length and the line system configuration. The following conditions apply to the possible application environment.

Requirements		Achievable EMC Category	
		C2	C3
Converter		With line filters C2	With line filters C2 or C3
Maximum permissible cable length	Motor	30 m shielded	30 m shielded
	Line filter to the converter	3 m	3 m
Permissible application environment	Residential	No	No
	Light industrial	Yes	Yes
	Commercial	Yes	Yes
Permissible line system	Public	Yes	Yes
	Non-public	Yes	Yes
Line system configuration		TN or TT line system with a grounded neutral point	TN or TT line system with a grounded neutral point

#### Note

##### To be observed for devices used in Category C2

In a residential environment this product may cause radio-frequency interference, which may make interference suppression measures necessary.

- Have qualified personnel carry out the installation and commissioning with suitable interference suppression measures.

**Note****To be observed for devices used in Category C3**

In a residential environment this product may cause radio-frequency interference.

- Do not use this device in the first environment (residential area).
- 

**Note****Complying with Category C2 interference emission**

When using a cable of more than 3 m to connect the converter to the PROFINET or Ethernet interface, electromagnetic interferences may occur. Use appropriate ferrite clamps, cabinet feedthrough, or fiber optic transceivers to minimize the interference emission.

---

**Note**

The conducted and radiated emissions of the PROFINET ports are in compliance with the standards of IEC 61800-6-8, Class A (CISPR 32), and IEC 61800-3 Category C3.

---



# Mounting

## 5.1 Converter

### 5.1.1 Mounting instructions for the converter

#### Description

Observe the conditions listed below in order to guarantee reliable, continuous and trouble-free operation:

- The converter is designed for installation in a control cabinet.
- The converter is certified for use in environments with degree of pollution 2 without condensation; i.e. in environments where no conductive pollution/dirt occurs. Condensation is not permissible.
- The converter fulfills degree of protection IP20 according to IEC 60529.
- Ensure that all converters and cabinets are grounded according to Section "EMC-compliant installation (Page 92)".
- Use a conductive steel sheet no thinner than 2 mm as the mounting plate.

---

#### Note

Keep the cover of the integrated operator panel closed to protect the control buttons and the SD card.

---

### 5.1.2 Mounting position

#### Description

<b>NOTICE</b>
<b>Overheating due to impermissible mounting position</b>
The converter can overheat and therefore be damaged if mounted in an impermissible position.
<ul style="list-style-type: none"> <li>• Only mount the converter in a permissible position.</li> </ul>



The converter supports vertical mounting only. Mount the converter vertically with the integrated operator panel facing upwards.



Figure 5-1 Converter mounting orientation

### 5.1.3 Dimension drawings and drilling dimensions

#### 5.1.3.1 Dimension drawing and drilling dimensions for the 200 V converter

##### Dimension drawing

All dimensions are specified in millimeters.

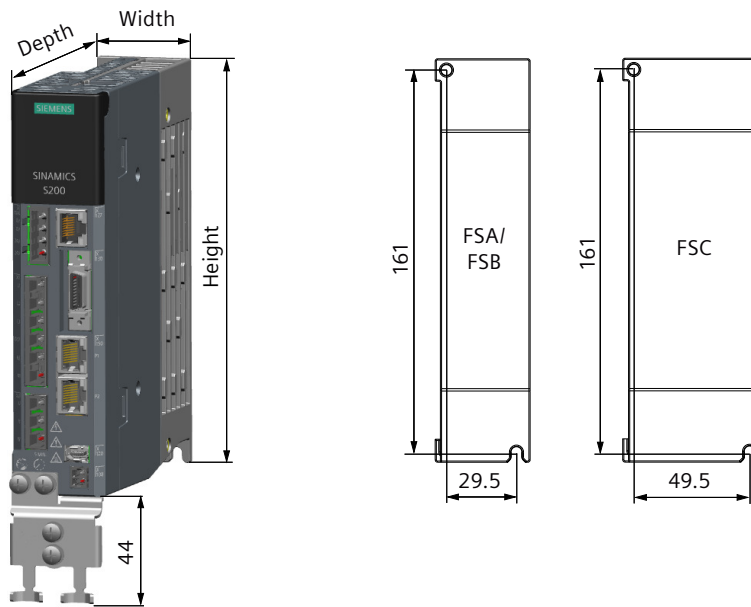


Table 5-1 Dimensions and mounting, 1 AC/3 AC 200 V, FSA ... FSC, IP20

Frame size	Width	Height	Depth	Fixing
FSA	40 mm	170 mm	135 mm	2 x M4 / 2.5 Nm
FSB	40 mm	170 mm	170 mm	
FSC	60 mm	170 mm	195 mm	

### 5.1.3.2 Dimension drawing and drilling dimensions for the 400 V converter

#### Dimension drawing

All dimensions are specified in millimeters.

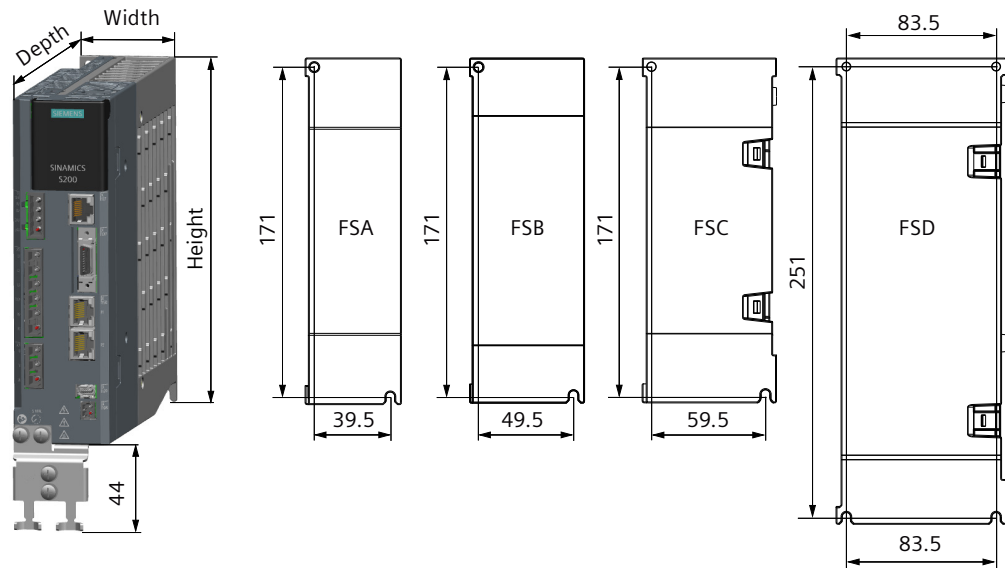


Table 5-2 Dimensions and mounting, 3 AC 400 V, FSA ... FSD, IP20

Frame size	Width	Height	Depth	Fixing
FSA	50 mm	180 mm	200 mm	2 x M4 / 2.5 Nm
FSB	60 mm	180 mm	200 mm	
FSC	70 mm	180 mm	200 mm	
FSD	95 mm	260 mm	230 mm	4 x M4 / 2.5 Nm

### 5.1.4 Minimum clearances

#### Description

Observe the following minimum mounting clearances. For converters without built-in fans, install cooling fans above the converters for sufficient heat dissipation.

**Note**

For converters without built-in fans, when the surrounding temperature in the cabinet is  $\geq 45\text{ }^\circ\text{C}$ , the airflow velocity above the converters must be greater than 0.5 m/s.

All dimensions are specified in millimeters.

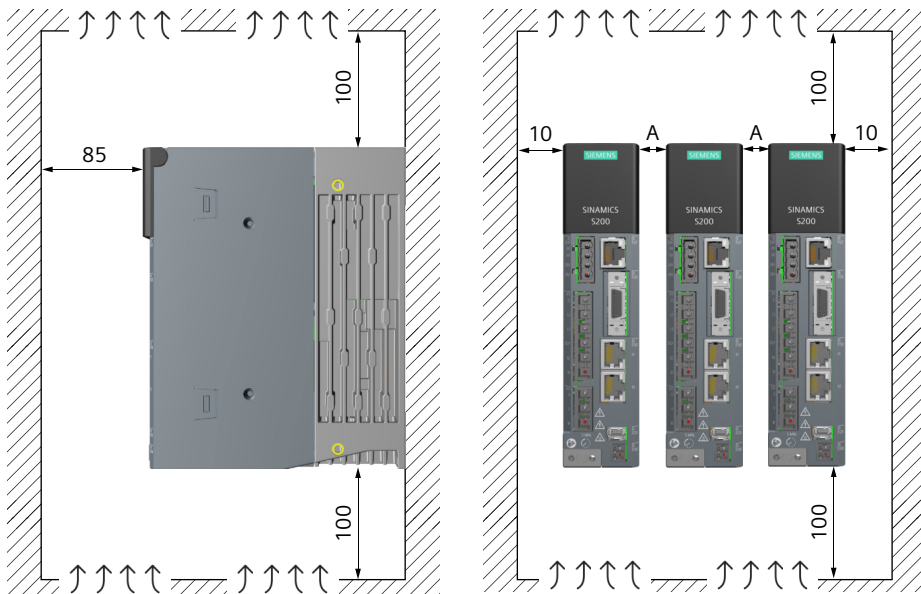


Table 5-3 Minimum clearances to other devices or components

	Single-converter installation	Side-by-side installation
Minimum clearance at top and bottom	100 mm	100 mm
Minimum clearance at front	85 mm	85 mm
Minimum lateral clearance (A) between multiple converters	-	200 V converter: 1 mm 400 V converter: 10 mm A mixture of 200 V and 400 V converters: 10 mm
Minimum lateral clearance to other devices	10 mm	10 mm



## 5.2 Motor

### 5.2.1 Transporting and lifting

---

**Note**

Comply with the local national regulations for the transportation of motors.

---

**Requirement**

- Use suitable load suspension devices when transporting and installing the motor.
- Do not lift the motor by the connector.
- Transport the motor carefully.

**Procedure****Lifting and transporting the motor using slings**

You can lift and transport the motor using lifting slings.

**! WARNING****Incorrectly dimensioned or incorrectly used lifting slings**

If lifting slings are incorrectly dimensioned or incorrectly used, the motor can fall and cause death, severe injury and/or damage to property.

- Only use lifting slings that are suitable for the weight of the motor.
- Attach the lifting slings as shown in the figure "Lifting and transporting with lifting slings".



Figure 5-2 Lifting and transporting with lifting slings (example diagram)

**Lifting and transporting the motor using eyebolts**

The 1FL2310 motor (SH90) has two M8 threaded holes for screwing in two eyebolts. You can use eyebolts and a crossbar for lifting and transporting the motor.



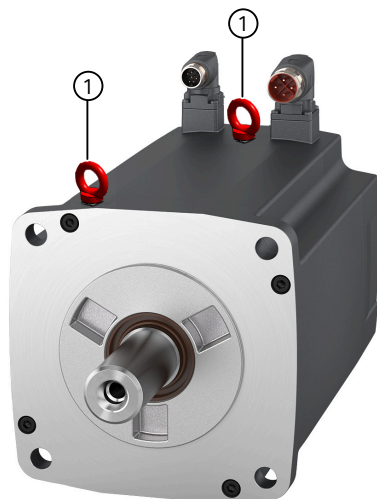
**! WARNING**

**Incorrect or unused lifting points**

Due to incorrect or unused lifting points, the motor can fall and cause death, severe injury and/or damage to property.

- Only lift and transport larger motors using the eyebolts.
- Completely screw in the eyebolts and tighten by hand (approx. 10 Nm, or according to your specific requirement).
- Do not use bent or damaged eyebolts.
- Only use eyebolts with laminated fiber washers.
- Loads applied transversely to the plane of the eyebolts are not permitted.

1. Screw in the eyebolts.



① Position of the eyebolts

2. Hook the crossbar into the eyebolts.

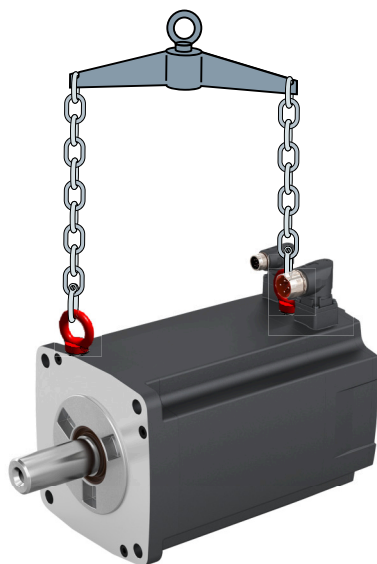


Figure 5-3 Lifting and transporting with a crossbar (example diagram)

3. Set the motor down on a hard, level surface.



**⚠ WARNING**

**Danger of severe injury due to unintentional movements of the motor**

If the motor is not secured after being set down, unintentional movements of the motor can cause serious injury.

- After the motor has been set down, secure it in position.
- Do not release the lifting devices until the motor has been secured in position.

4. Secure the motor against unintentional movements.

## 5.2.2 Checklist prior to mounting

### Description

The checklist below is a minimum benchmark and must be performed in any case. Further checks before, during, and after the installation of the motor depend on the system-specific conditions and are the responsibility of the plant or system manufacturer.

Table 5-4 Checklist before installing



Check	OK
<b>General checks</b>	
Are the environmental conditions in the permissible range?	
<b>Checks regarding the mechanical system</b>	
Is the motor free of visible damage?	
Have the mounting surfaces such as the flange and shaft on the customer machine and on the motor been cleaned?	
Are the mounting surfaces free of corrosion?	
Do the mounting dimensions such as the shaft diameter, shaft length, and radial eccentricity on the customer machine meet the specifications?	

### 5.2.3 Safety labels on the motor

#### Description

<b>NOTICE</b>
<b>Damage to the encoder due to shocks</b>
Shocks at the motor shaft extension can cause an encoder damage.
<ul style="list-style-type: none"> <li>Do not exert any shock at the shaft extension.</li> </ul>

In the delivery state, the following two warning labels are attached to the motor. In addition, there are three "hot surface" warning labels included in the scope of delivery. Before mounting the motor, attach them to the motor surfaces and make sure that they are clearly visible on all the four longitudinal sides of the motor.

	"Hot surface" warning label
	"No shocks at the shaft extension" warning label

## 5.2.4 Mounting instructions for the motor

### Description

**NOTICE****Damage to shaft sealing rings caused by solvent**

If shaft sealing rings come into contact with solvents when preservation coating is removed, the shaft sealing rings can be damaged.

- Avoid contact between solvents and shaft sealing rings.

**NOTICE****Damage to the motor due to radial eccentricity at the shaft extension**

Radial eccentricity and axial forces at the shaft extension can damage the motor.

- Mount the motor in such a way that no radial eccentricity and axial forces at the shaft extension occur.

- Adhere to the specifications on the rating plate (Page 50).
- Observe the warning and information plates on the motor.
- Check the installation site and permissible environmental conditions such as temperature and installation altitude. See Section "Permissible environmental conditions for the motor (Page 624)".
- Thoroughly remove any anti-corrosion agents from the shaft extension with commercially available solvents.
- Ensure that power losses are adequately dissipated. See Section "Cooling (Page 626)".
- If the motor is installed vertically with the shaft extension facing up, ensure that no liquid can enter the upper bearing.
- Ensure that the flange is in even contact with the mounting surface.
- Use hexagon socket head cap screws with a property class of at least 8.8.

- Avoid any uneven stressing when tightening the fastening screws.
- Observe the tightening torques for the fastening screws.  
The general tolerance for the tightening torque is 10%. The tightening torque is based on a friction coefficient of  $\mu = 0.14$ .

Motor	Screw DIN 7984	Washer ISO 7092 (mm)	Tightening torque for screws (not for electrical connections)
1FL2102	M4	4 ( $d_{2 \max} = 8$ )	2.4 Nm
1FL2□03	M5	5 ( $d_{2 \max} = 9$ )	4.7 Nm
1FL2104 1FL2204 1FL2205	M6	6 ( $d_{2 \max} = 11$ )	8 Nm
1FL2105 1FL2304 1FL2306	M8	8 ( $d_{2 \max} = 15$ )	20 Nm
1FL2310	M12	12 ( $d_{2 \max} = 20$ )	85 Nm




Tightening torques for the fastening screws

### 5.2.5 Mounting position

#### Description

The 1FL2 motor supports flange mounting only. It can be installed in three orientations as shown in the following table.

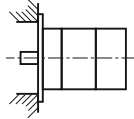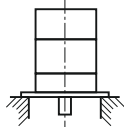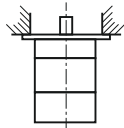Table 5-5 Type of construction according to IEC 60034-7

Designation	Representation	Description
IM B5		Standard
IM V1		The motor can be used in types of construction IM V1 and IM V3 without restriction.
IM V3		

#### Note

##### IM V3 type of construction

When configuring the IM V3 type of construction, pay attention to the permissible axial forces and especially to the necessary degree of protection.

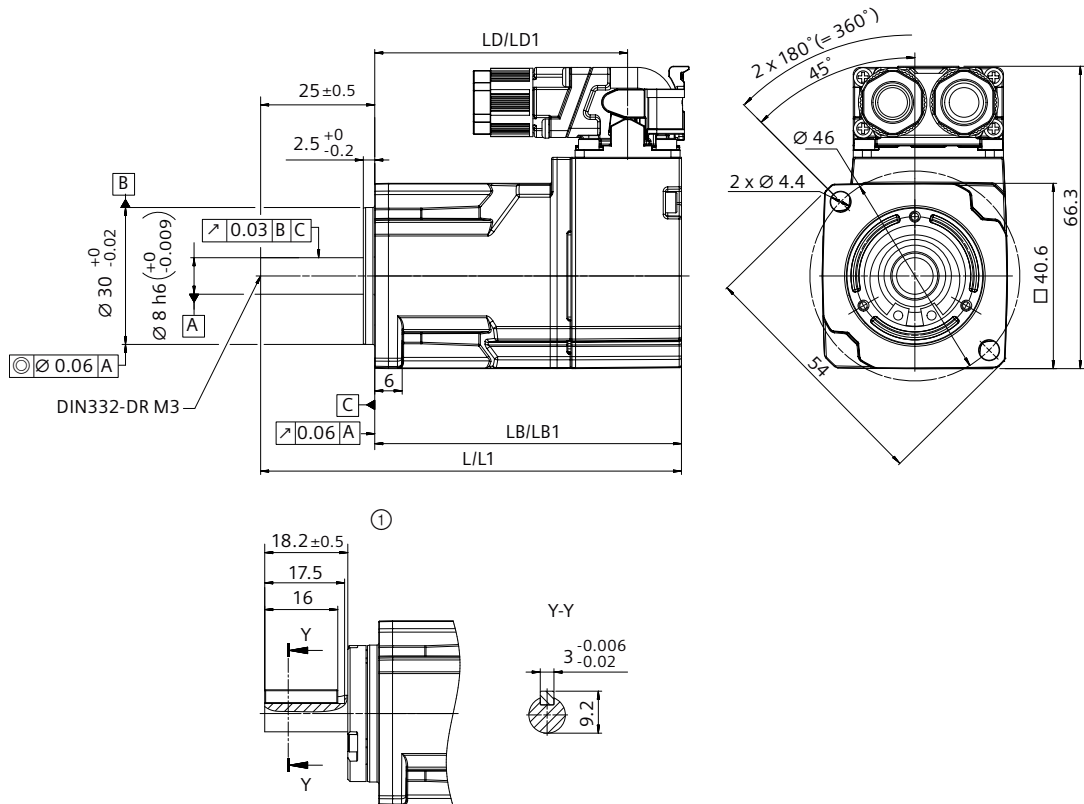


## 5.2.6 Dimension drawings for motors

### 5.2.6.1 Dimension drawing for the 1FL2 motor, shaft height 20

#### Dimension drawing

All dimensions are specified in millimeters.



① With shaft sealing ring (IP65) and feather key


Table 5-6 Dimensions, 1FL2102

SIMOTICS S-1FL2 Shaft height 20	Motor length					
	Without brake			With brake		
	L	LB	LD	L1	LB1	LD1
1FL2102-2	92.2	67.2	55.7	121.9	96.9	85.4
1FL2102-4	105.2	80.2	68.7	134.9	109.9	98.4

5.2.6.2 Dimension drawing for the 1FL2 motor, shaft height 30

Dimension drawing

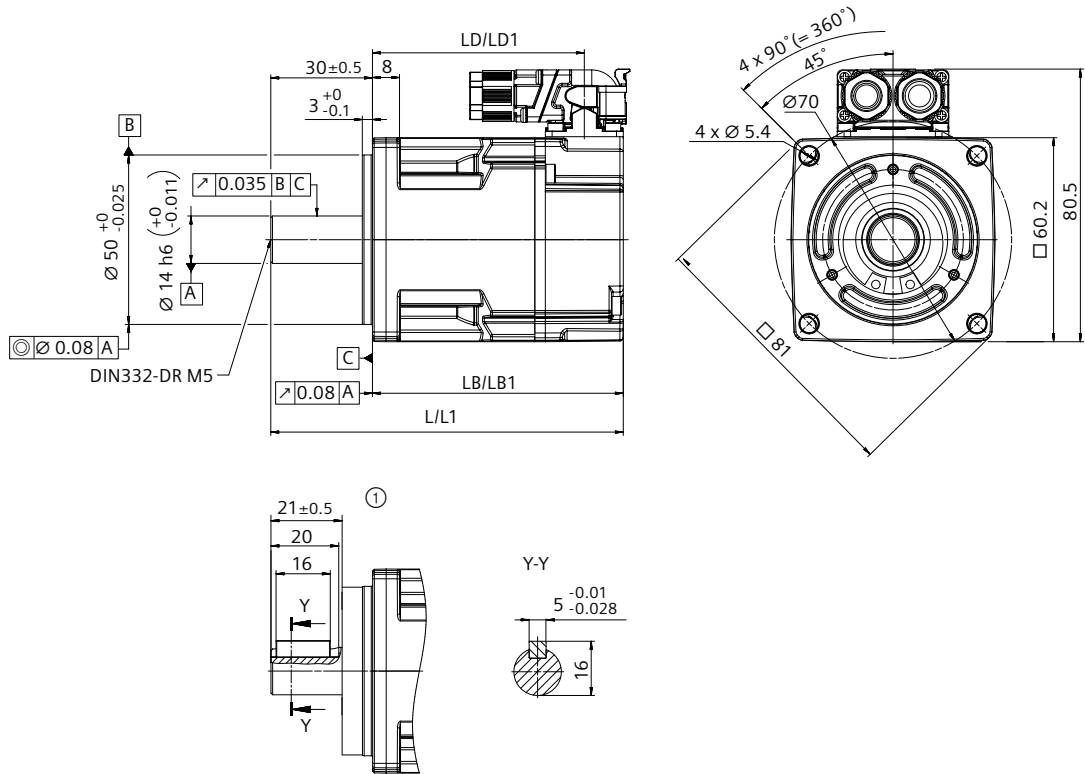All dimensions are specified in millimeters.



① With shaft sealing ring (IP65) and feather key


Table 5-7 Dimensions, 1FL2□03

SIMOTICS S-1FL2 Shaft height 30	Motor length					
	Without brake			With brake		
	L	LB	LD	L1	LB1	LD1
1FL2103-2	105.5	75.5	63.8	135.5	105.5	93.8
1FL2103-4	124.5	94.5	82.8	154.5	124.5	112.8
1FL2203-2	104	74	62.3	134	104	92.3
1FL2203-4	121.5	91.5	79.8	151.5	121.5	109.8

5.2.6.3 Dimension drawing for the 1FL2 motor, shaft height 40

Dimension drawing

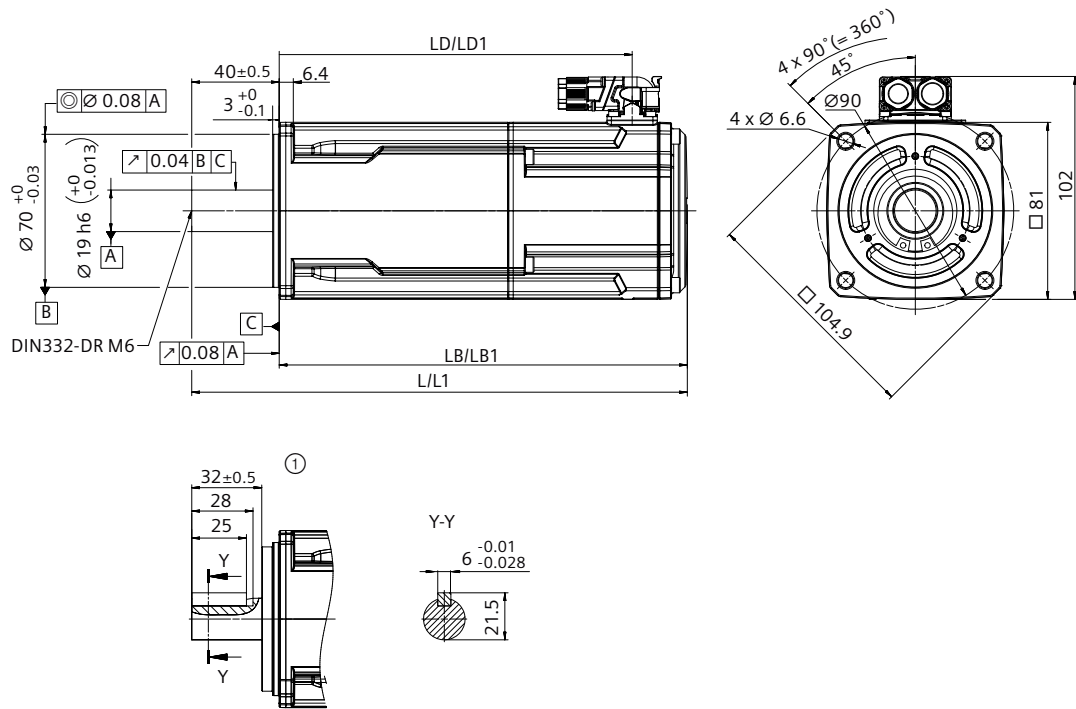All dimensions are specified in millimeters.



① With shaft sealing ring (IP65) and feather key

Table 5-8 Dimensions, 1FL2104, 1FL2204

SIMOTICS S-1FL2 Shaft height 40	Motor length					
	Without brake			With brake		
	L	LB	LD	L1	LB1	LD1
1FL2104-2	164.6	124.6	99.4	208.6	168.6	143.4
1FL2204-2						
1FL2104-4	182.6	142.6	117.4	226.6	186.6	161.4
1FL2204-4						

5.2.6.4 Dimension drawing for the 1FL2 motor, shaft height 45

Dimension drawing

All dimensions are specified in millimeters.

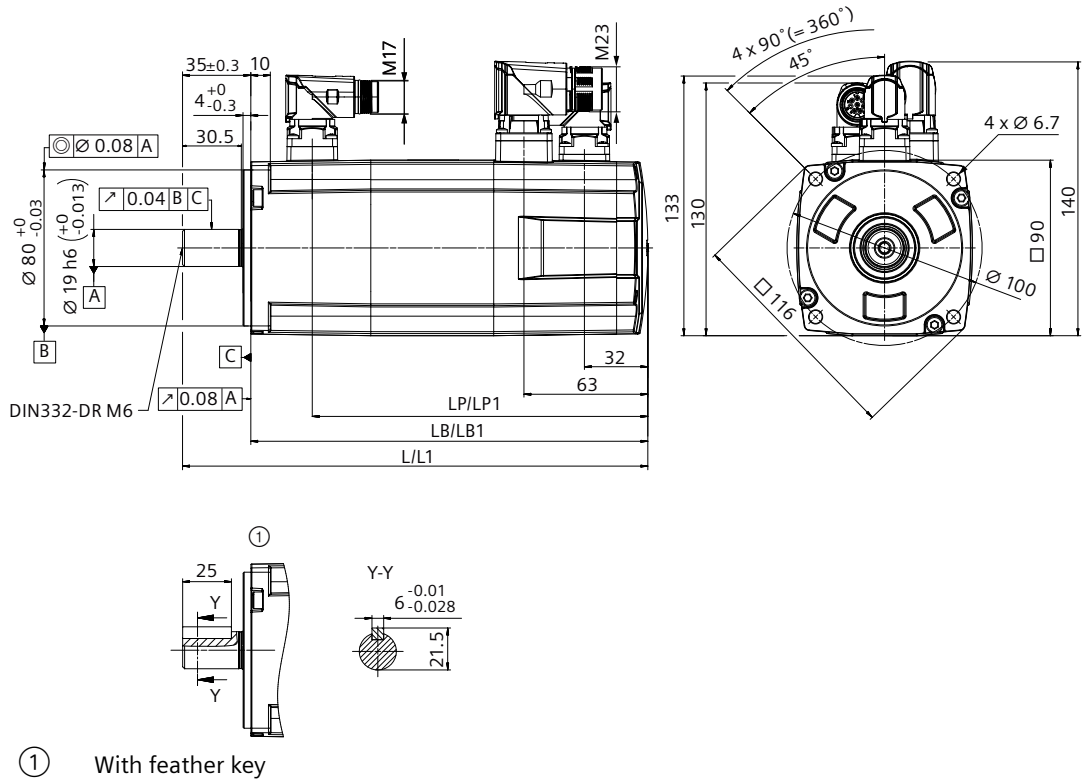



Table 5-9 Dimensions, 1FL2304

SIMOTICS S-1FL2 Shaft height 45	Motor length					
	Without brake			With brake		
	L	LB	LP	L1	LB1	LP1
1FL2304-2	192	157	/	238.5	203.5	172
1FL2304-4	239	204	/	285.5	250.5	219

5.2.6.5 Dimension drawing for the 1FL2 motor, shaft height 48

Dimension drawing

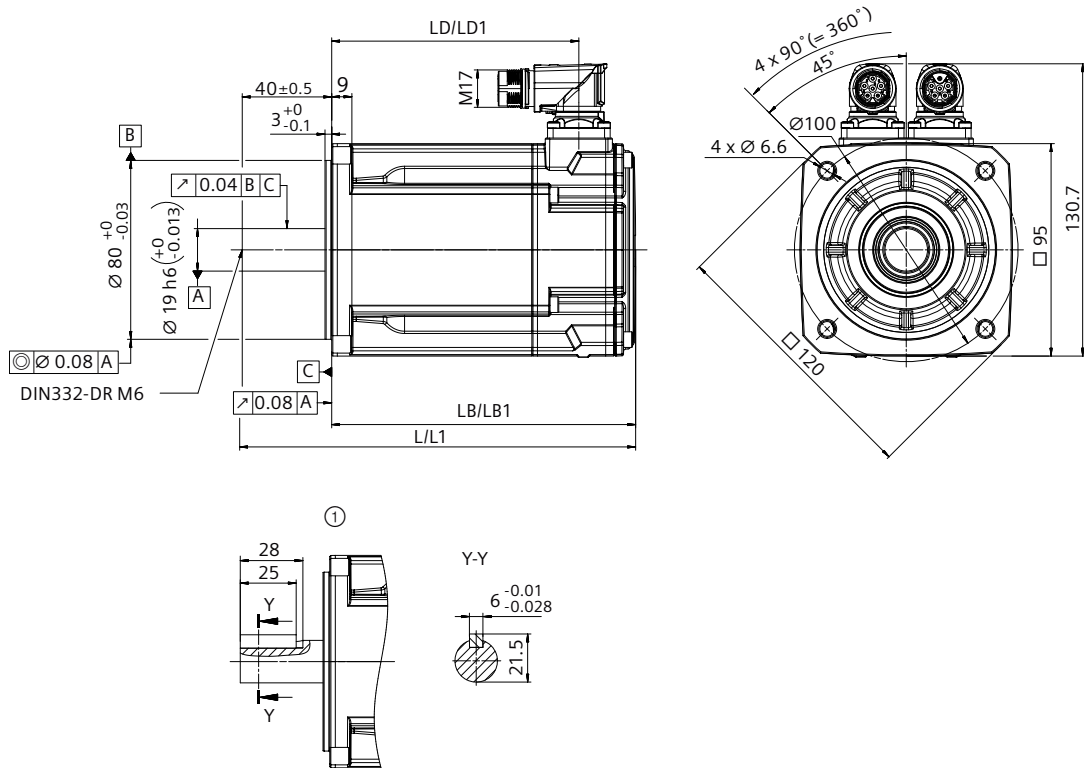All dimensions are specified in millimeters.



① With feather key

Table 5-10 Dimensions, 1FL2205

SIMOTICS S-1FL2 Shaft height 48	Motor length					
	Without brake			With brake		
	L	LB	LD	L1	LB1	LD1
1FL2205-2	175.9	135.9	110.5	218.9	178.9	153.5
1FL2205-4	207.9	167.9	142.5	250.9	210.9	185.5

5.2.6.6 Dimension drawing for the 1FL2 motor, shaft height 52

Dimension drawing

All dimensions are specified in millimeters.

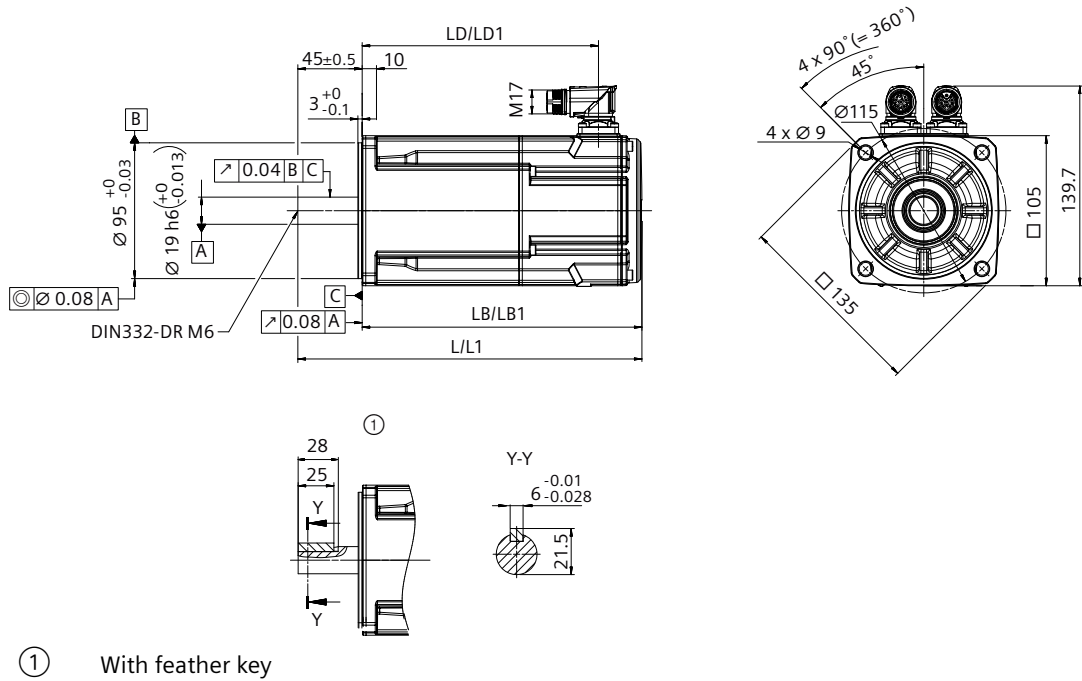



Table 5-11 Dimensions, 1FL2105

SIMOTICS S-1FL2 Shaft height 52	Motor length					
	Without brake			With brake		
	L	LB	LD	L1	LB1	LD1
1FL2105-2	213.9	168.9	138.5	240.7	195.7	165.3
1FL2105-4	255.9	210.9	180.5	282.7	237.7	207.3

### 5.2.6.7 Dimension drawing for the 1FL2 motor, shaft height 65
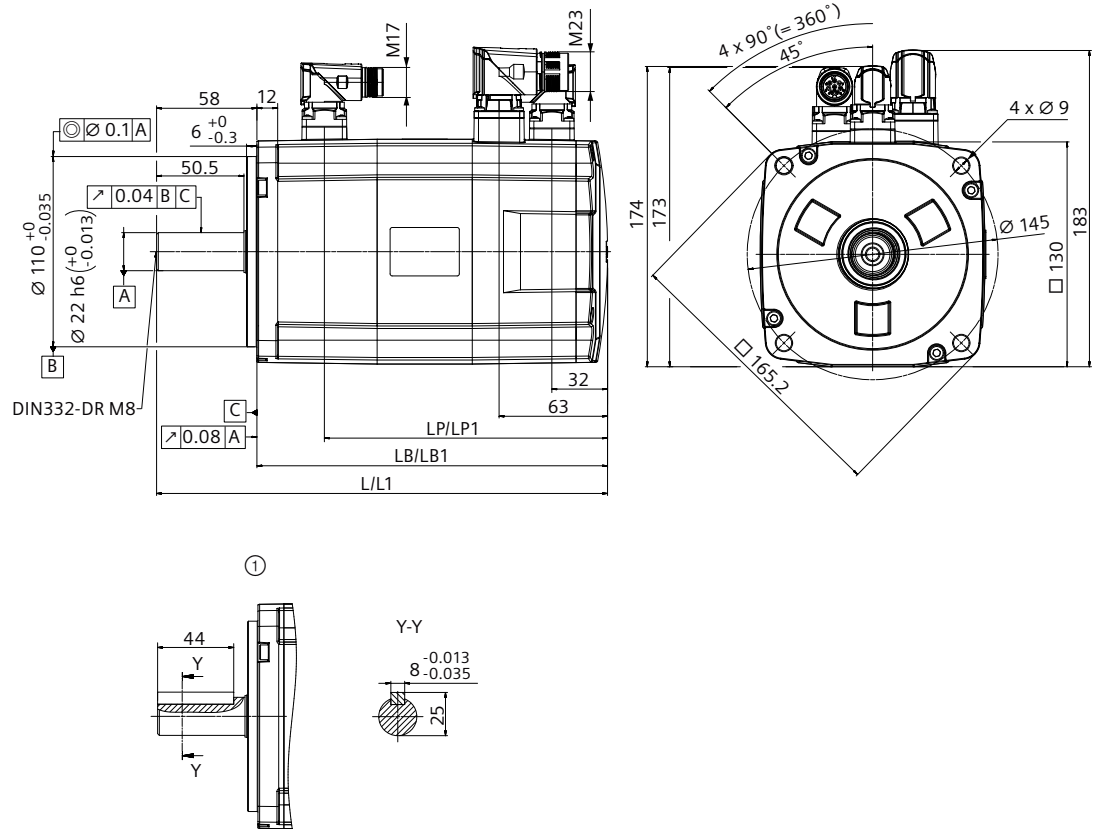
#### Dimension drawing

All dimensions are specified in millimeters.



① With feather key

Table 5-12 Dimensions, 1FL2306

SIMOTICS S-1FL2 Shaft height 65	Motor length					
	Without brake			With brake		
	L	LB	LP	L1	LB1	LP1
1FL2306-1	206.2	148.2	/	260.7	202.7	163.7
1FL2306-2	222.7	164.7	/	277.2	219.2	180.2
1FL2306-4	239.2	181.2	/	293.7	235.7	196.7
1FL2306-6	272.2	214.2	/	326.7	268.7	229.7
1FL2306-7	305.2	247.2	/	359.7	301.7	262.7

5.2.6.8 Dimension drawing for the 1FL2 motor, shaft height 90

All dimensions are specified in millimeters.

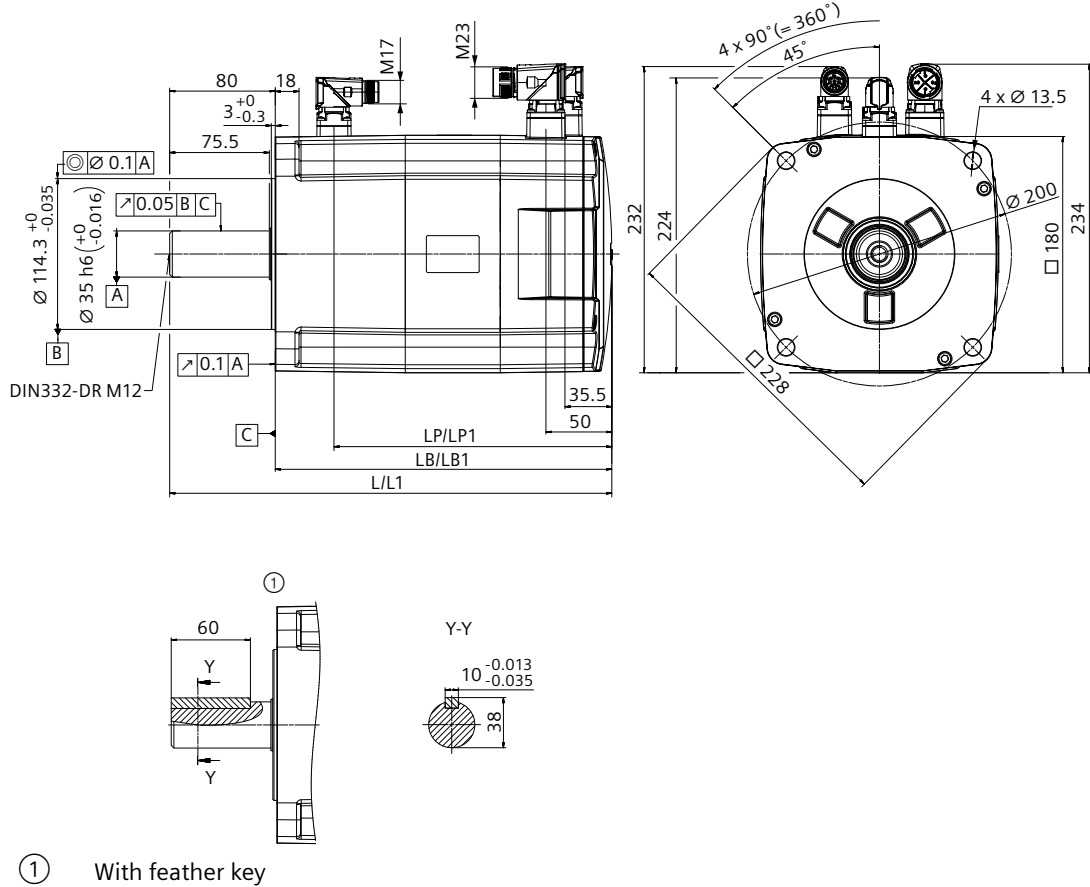


Table 5-13 Dimensions, 1FL2310

SIMOTICS S-1FL2 Shaft height 90	Motor length					
	Without brake			With brake		
	L	LB	LP	L1	LB1	LP1
1FL2310-0	269.5	189.5	/	335	255	210.5
1FL2310-2	295.5	215.5	/	361	281	236.5
1FL2310-4	321.5	241.5	/	387	307	262.5
1FL2310-6	373.5	293.5	/	439	359	314.5



## 5.2.7 Mounting the feather key

### Requirement



#### **WARNING**

##### **Injuries due to feather key flung out**

When a motor using a key is running, the feather key on the shaft can be thrown out by centrifugal force. This can result in personal injury or material damage.

- Before operating the motor, the feather key on the shaft must be firmly secured to prevent from being thrown out by the centrifugal force.

#### **NOTICE**

##### **Damage to motor bearing due to improper operation**

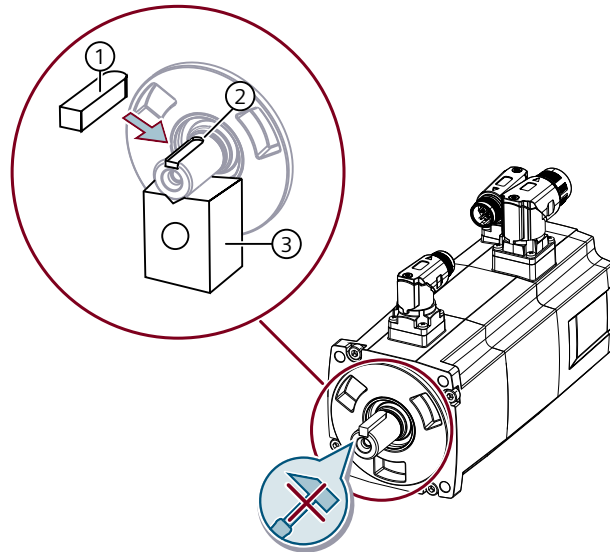
Never mount the feather key by hammering into the key slot; otherwise, there is a risk of bearing damage.

- Pay attention to the installation direction of the feather key.
- Mount the key without striking the key slot or the shaft extension.

## Procedure

Proceed as follows to mount the feather key into the key slot:

1. Install the feather key ("①") to the key slot ("②") and make sure that the feather key and the key slot are fitted closely. Siemens recommends that you place the V-type block ("③") under the shaft extension for supporting.
2. Knock the feather key into the key slot by using a copper bar.



- ① Well-lubricated feather key
- ② Key slot
- ③ V-type block

Figure 5-4 Mounting the feather key


## 5.2.8 Attaching output elements
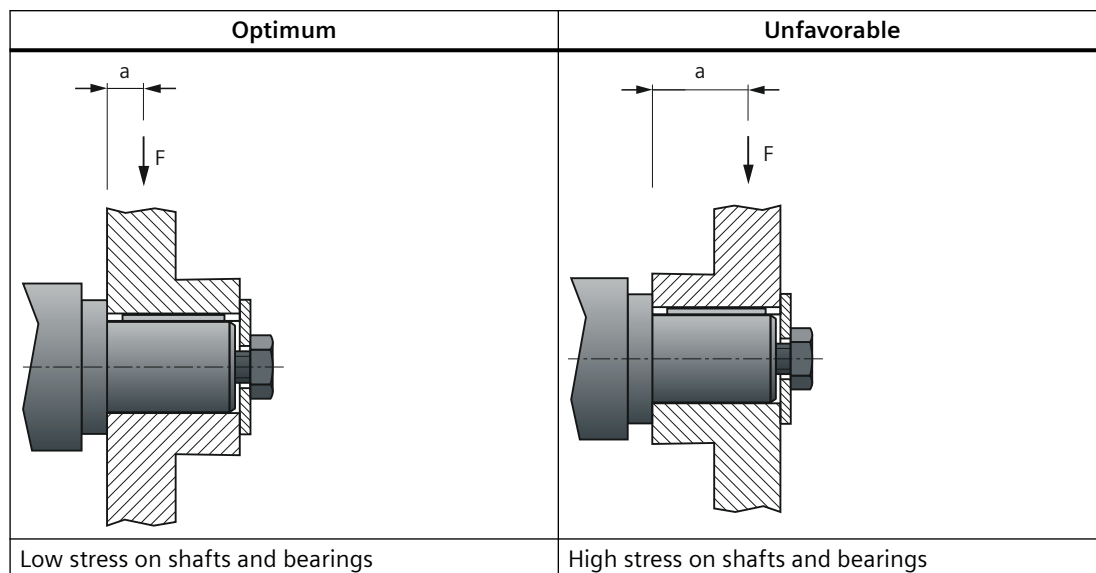
### Overview

Appropriate arrangement of the output elements reduces the bending torque load applied to the shaft and the bearing.


## Requirement

Mount the output elements as close as possible to the motor bearing.



Mount or remove the output elements (for example, couplings, gear wheels, and belt pulleys) by using suitable devices only.

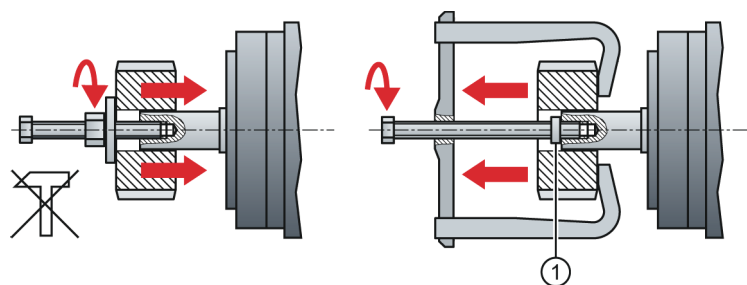- Use the threaded hole in the shaft extension.
- If required, heat up the output elements before mounting or removing.
- When removing the output elements, use an intermediate disk to protect the centering in the shaft extension.



① Intermediate washer/disk

Figure 5-5 Mounting and removing output elements

- If necessary, completely balance the motor together with the output elements according to ISO 1940.


## Note

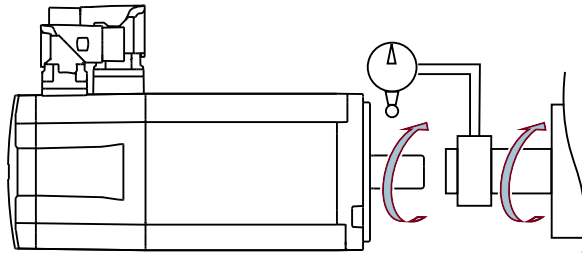Motors with feather key are half-key balanced. The motors have been balanced with half a feather key.


## Procedure

Proceed as follows to attach an output element (for example, a coupling) to the motor:

1. Select a coupling.  
Use a flexible coupling with high torsional rigidity specifically designed for servo motors, which can transfer the motor torque to the mechanics and compensate radial, axial, and angular misalignments.
2. Install the coupling.  
Do not strike the shaft when installing a coupling. Ensure that the radial and axial forces are smaller than the allowable maximum values specified in Section "Axial and radial forces (Page 635)".
3. Align the coupling.  
When a motor is used with a flange coupling, the radial deviation must be smaller than 0.03 mm; otherwise, the bearing will be damaged. The required alignment accuracy varies with the motor speed and the coupling type. Determine the accuracy according to actual applications.



- Rotate the motor shaft and the machine shaft to align the coupling.
  - An alignment accuracy test is preferred. If unachievable, judge the accuracy by observing whether the coupling can slide smoothly on both shafts.
4. Realign the coupling.  
If the coupling gives out abnormal sounds, refer to Step 3 "Align a coupling" to realign the coupling until the sounds disappear.
  5. Measure tension.  
The belt tension must be smaller than the allowable radial forces of the motor.

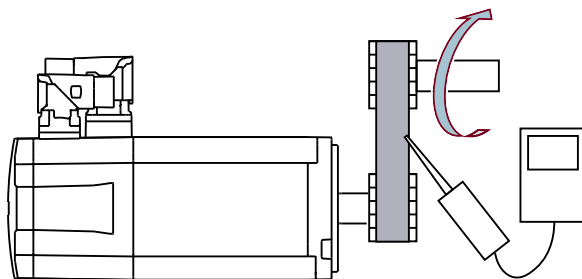

- Measure the belt tension at multiple points using a tension meter while turning the motor shaft by 45°.
- Reduce the axial misalignment of the belt-pulleys to keep the axial forces to the motor shaft to a minimum.

## 5.2.9 Laying cables in cable carriers (for MOTION-CONNECT 380 only)

### Requirement

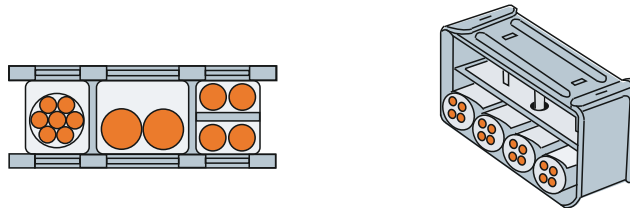
None

**Procedure**

Proceed as follows to arrange cables in cable carriers:


1. Lay the cables.

- Use spacers to separate cables with different outer diameters or cables made of different materials.
- Fill the spacers evenly to ensure that the position of cables does not change during operation.
- Distribute cables symmetrically according to their weights and dimensions.
- Keep cables untwisted in the cable carrier.
- When inserting prefabricated cables in the cable carrier, do not pull the connector, as this may damage the strain relief or cable clamping.



2. Move the cables.

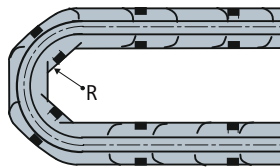
- Lay the cables loosely in the carrier, so that the cables are free to move in particular in the bending radii of the carrier.
- Observe the specified minimum bending radii.



R Bending radius on the cable carrier

3. Fix the cables.

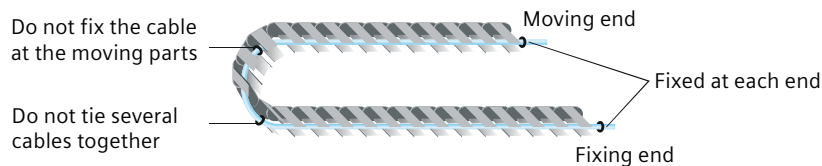- Make sure that cables in the carrier are unattached and movable.
- Place cable fixings in a "dead" zone at each end, suitably far away from each end point of the moving parts.



**Note****Additional fixing of the cable**

If between the cable strain relief on the cable carrier and the terminal at the motor, part of the cable is hanging loose or is not routed, Siemens recommends that the cable is additionally fixed for vibration load and with horizontal or vertical cable entries.

- Additionally fix the cable where the motor is fixed so that machine vibrations are not transferred to the connector.
-





## Connecting

---

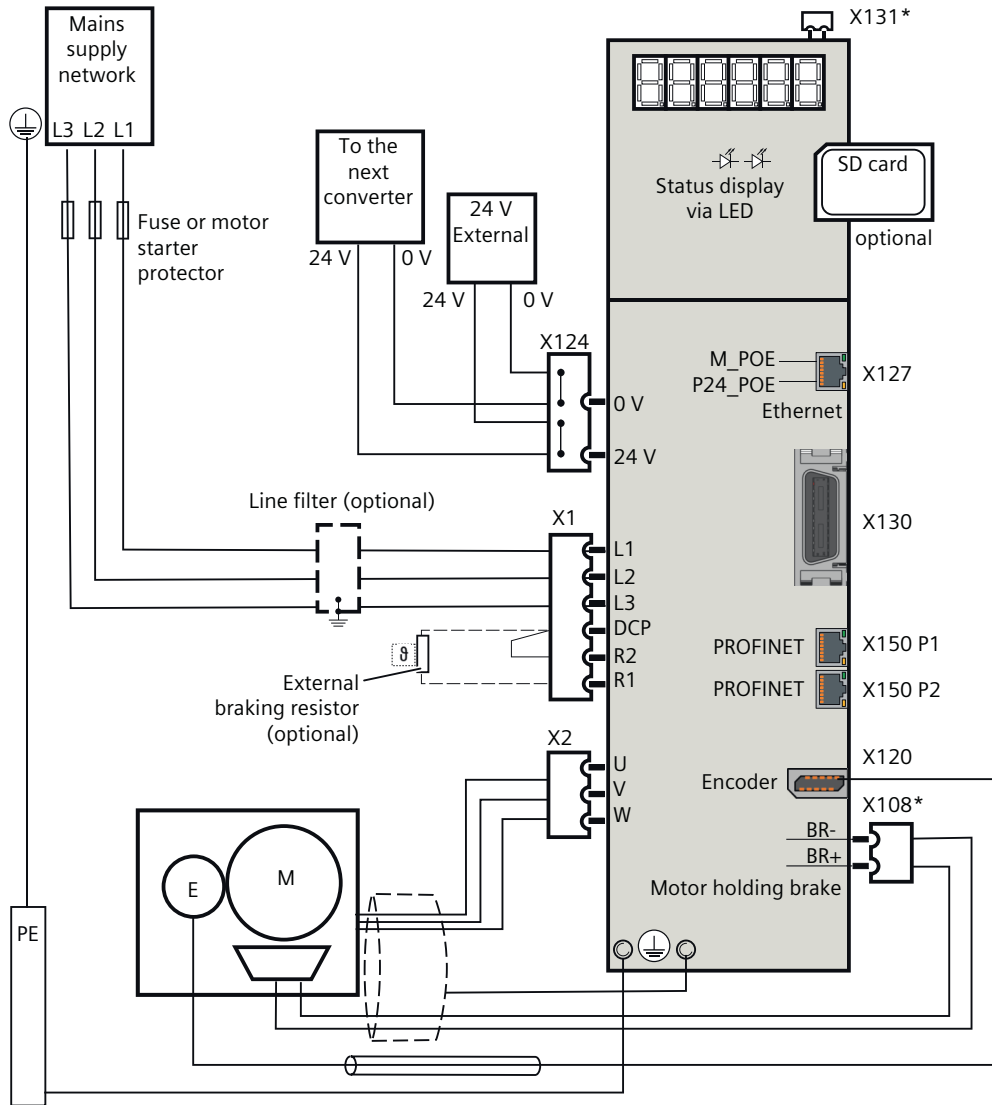
**Note****Note for connecting the drive system**

Fix all the connecting cables to the converter shield plate by using shield clamps or suitable cable ties.

---

## 6.1 System connection

### Overview diagram




\* The interfaces X131 and X108 are available on SINAMICS S200 PN.

Figure 6-1 Connection example for converters with 3 AC line connection

## 6.2 Overview of the converter interfaces
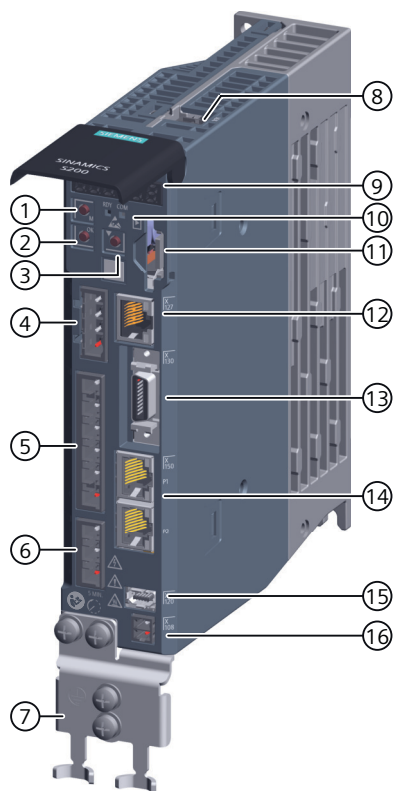
### Overview diagram



- |                                             |                                                      |
|---------------------------------------------|------------------------------------------------------|
| ① M button                                  | ⑨ 6-digit display                                    |
| ② OK button                                 | ⑩ LED status indicators                              |
| ③ DOWN button                               | ⑪ SD card slot                                       |
| ④ 24 V DC power supply - X124               | ⑫ Service interface (Ethernet) - X127                |
| ⑤ Mains and braking resistor interface - X1 | ⑬ Control/status inputs and outputs - X130           |
| ⑥ Motor power interface - X2                | ⑭ PROFINET interface - X150                          |
| ⑦ Shield plate                              | ⑮ Encoder interface - X120                           |
| ⑧ STO interface - X131 <sup>1)</sup>        | ⑯ Motor holding brake interface - X108 <sup>1)</sup> |

<sup>1)</sup> The interfaces X131 and X108 are available on SINAMICS S200 PN.

Figure 6-2 Converter interfaces

## 6.3 Cables and connectors

### 6.3.1 Maximum permissible cable lengths

#### Technical data


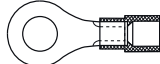
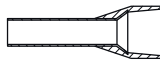
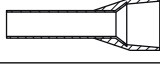
Table 6-1 Maximum permissible cable length


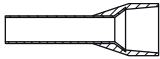
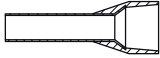
Connection type	Interface on the converter	Maximum permissible cable length (m)
Mains supply	X1 (L1, L2, and L3)	No restriction
External braking resistor	X1 (DCP and R1)	3
24 V DC power supply	X124	30
Motor power connection	X2	30
Encoder connection	X120	30
Motor holding brake	X108	30
Control/status inputs and outputs	X130	3
PROFINET connection	X150	100
Ethernet connection	X127	10
STO connection	X131	30

### 6.3.2 Conductor cross-sections and cable lugs

#### Description

Table 6-2 Conductor cross-sections and cable lugs

Connection type	Terminal type	Conductor cross-section	Stripping length	Cable lug
Mains supply (L1, L2, L3)	Spring-loaded	0.75 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> (AWG: 14 ... 12)	9 mm ... 10 mm	Pin-type 
Mains supply (PE)	Screw-type	0.75 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> (AWG: 14 ... 12)	10 mm	Ring type 
24 V DC power supply	Spring-loaded	0.5 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> (AWG: 20 ... 12)	10 mm ... 11 mm <sup>1)</sup>	Pin-type 
External braking resistor	Spring-loaded	0.75 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> (AWG: 18 ... 12)	9 mm ... 10 mm	Pin-type 

Connection type	Terminal type	Conductor cross-section	Stripping length	Cable lug
STO connection <sup>2)</sup>	Spring-loaded	0.2 mm <sup>2</sup> ... 1.5 mm <sup>2</sup> (AWG: 24 ... 16)	10 mm	Pin-type 
Motor power connection	Spring-loaded	0.75 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> (AWG: 18 ... 12)	9 mm ... 10 mm	Pin-type 
Motor holding brake <sup>2)</sup>	Spring-loaded	0.38 mm <sup>2</sup> ... 0.75 mm <sup>2</sup> (AWG: 22 ... 18)	9 mm ... 10 mm	Pin-type 

<sup>1)</sup> If you use cable lugs with insulated end sleeves, make sure that the length of the cable lugs is 12 mm.

<sup>2)</sup> For S200 PN only

### More information

For more information about assembling cable terminals, see Section "Assembling cables (Page 879)".

## 6.4 Connecting the mains supply


### 6.4.1 Interface description - X1

#### Overview

The converter connects to the mains supply via terminals L1, L2, and L3 on the interface X1.

#### Description

Table 6-3 Interface X1

X1	Terminal	Designation	Technical data
	L1	Line phase L1/line phase L <sup>1)</sup>	Maximum current limit: 20 A
	L2	Line phase L2	
	L3	Line phase L3/neutral N <sup>1)</sup>	
	DCP		
	R2		
	R1		

<sup>1)</sup> For applications on the single-phase mains supply network

### 6.4.2 Wiring

#### Requirement

You have assembled the converter line supply cable.

## Procedure

1. Assemble the X1 plug to the converter.
2. Attach the cable terminals to the plug as shown below:

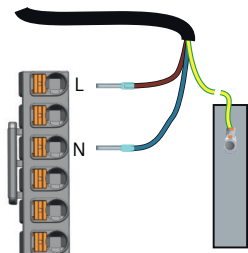


Figure 6-3 Connecting to the single-phase mains supply network

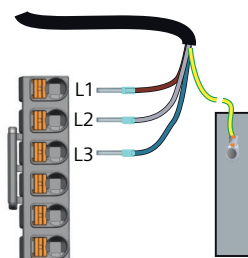


Figure 6-4 Connecting to the three-phase mains supply network

## More information

For more information about cable requirements, see Section "Cables and connectors (Page 130)".

For more information about assembling cable terminals, see Section "Assembling the cable lugs (Page 880)".

### 6.4.3 Using several single-phase converters in machines and plants

#### Overview

Evaluate the input currents of single-phase converters in your machine or plant in terms of harmonics and unbalance.

#### Description

In unfavorable cases, the harmonic currents of several converters in the neutral conductor (N) add up to a value greater than the currents of the line conductors (L1, L2, L3). The current-carrying capacity of the neutral conductor must be sufficient for this.

IEC 60364-5-52:2019 Section 524 makes recommendations for sizing the neutral conductor. If no more precise information is available, the standard recommends dimensioning the neutral conductor for 1.45 times the current-carrying capacity of the line conductors.

 **WARNING**

**Fire caused by neutral conductor (N) overload**

The neutral conductor can heat up due to the load from harmonic currents and cause a fire.

- Consider the harmonic currents when dimensioning the neutral conductor.



 **WARNING**

**Electric shock caused by PEN conductor overload**

In TN-C supply networks, the protective function of the PEN conductor can be adversely affected by exposure to harmonic currents.

- Consider the harmonic currents when dimensioning the PEN conductor.



## 6.5 Connecting the motor

### 6.5.1 Routing cables in damp environments

#### Description

To operate the motor in a damp environment, follow the installation instructions below:

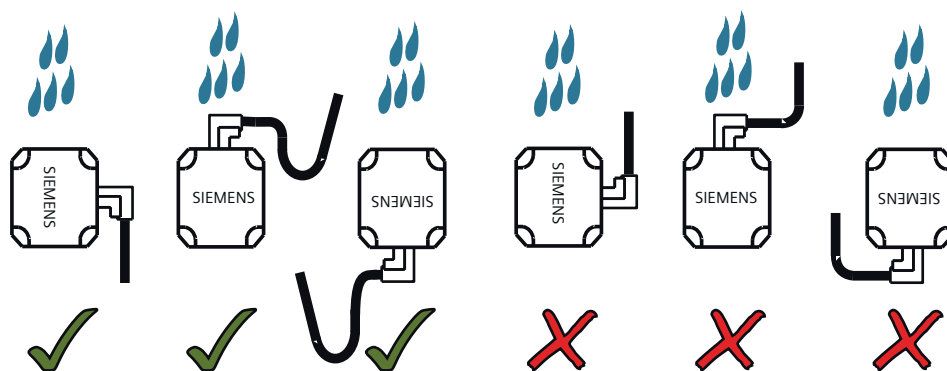


Figure 6-5 Routing cables in damp environments

### 6.5.2 Connecting the motor power


#### 6.5.2.1 Interface description - X2 (converter side)

#### Overview

The converter connects to the motor on the interface X2.

#### Description

Table 6-4 Interface X2

X2	Terminal	Designation	Technical data
 U V W	U	Motor phase U	Maximum current limit: 20 A
	V	Motor phase V	
	W	Motor phase W	

### 6.5.2.2 Interface description - power connector (motor side)

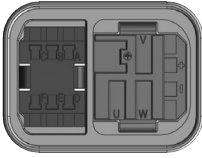
#### Overview

The 1FL2 motor power interface on the motor side has different variants:


- SH20, 30, and 40: hybrid connector that integrates power, encoder, and holding brake interfaces
- SH48 and 52: M17 angular connector that integrates power and holding brake interfaces
- SH45, 65, and 90: M23 angular connector

## Description


- 1FL2 shaft heights 20, 30, and 40

Motor power interface	Pin	Designation
 Hybrid connector	U	Phase U
	V	Phase V
	W	Phase W
	PE	Protective grounding
	+	Holding brake, positive
	-	Holding brake, negative
	A	Encoder power supply, 5 V
	B	Encoder power supply, reference ground
	C	Absolute encoder clock signal, positive
	D	Absolute encoder clock signal, negative
E	Absolute encoder data signal, positive	
F	Absolute encoder data signal, negative	

- 1FL2 shaft heights 48 and 52

Motor power interface	Pin	Designation
 M17 angular connector	U	Phase U
	V	Phase V
	W	Phase W
	PE	Protective grounding
	A	Holding brake, positive
	B	Holding brake, negative

- 1FL2 shaft heights 45, 65, and 90

Motor power interface	Pin	Designation
 M23 angular connector	1	Phase U
	2	Phase V
	3	Phase W
	PE	Protective grounding

### 6.5.2.3 Wiring

#### Connection example


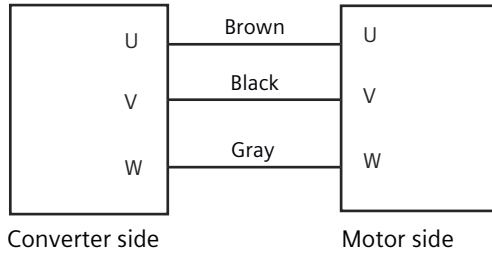



Figure 6-6 Motor power connection

#### Connection example of the hybrid connector

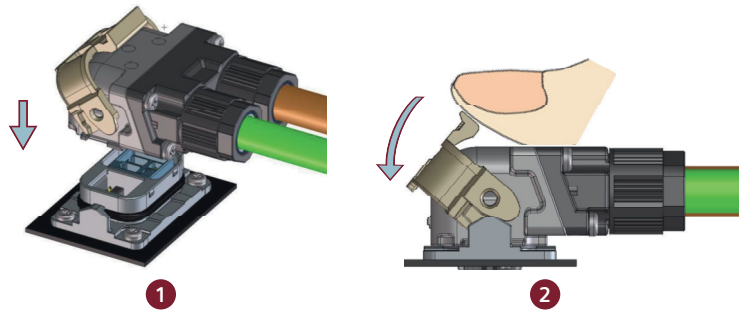- Connecting the hybrid plug to the socket  
Insert the hybrid plug into the socket and push down the lever to secure the connection.



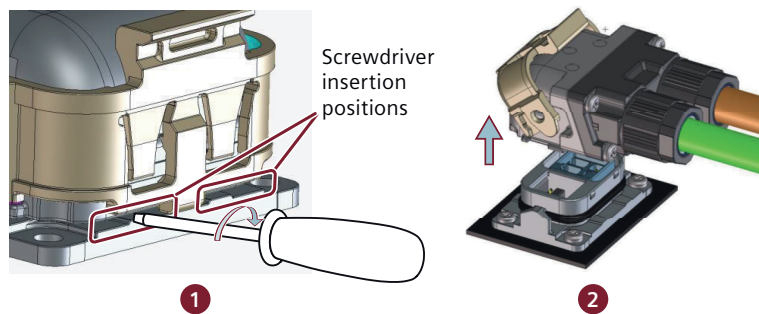- Disconnecting the hybrid plug from the socket  
Insert a slotted screwdriver into the gap between the lever and the housing and slightly rotate the screwdriver to release the lever.



#### More information

For more information about cable requirements, see Section "Cables and connectors (Page 130)".

For more information about assembling cable terminals, see Section "Assembling cables (Page 879)".

## 6.5.3 Connecting the motor holding brake

### 6.5.3.1 Interface description (converter side)

#### Overview

The motor holding brake prevents the moving load from unexpected motions (for example, falling under the influence of gravity) when the servo drive system is deactivated.


The holding brake is activated once the motor power is cut off. Use the holding brake only when the motor is at a standstill. Do not use the holding brake to stop the load in motion.

#### Description

##### S200 PN

SINAMICS S200 PN connects to the motor holding brake via the interface X108.

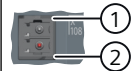Table 6-5 Interface X108

X108	Terminal	Designation	Technical specifications
	1	BRN	Motor holding brake, negative
	2	BRP	Motor holding brake, positive

##### S200 Basic PN

SINAMICS S200 Basic PN does not have a designated interface for connecting to the holding brake. To use the holding brake, connect a third-party device via a digital output at the interface X130 and configure the holding brake function as follows:

- Set p1215 to 3.
- Interconnect the digital output signal to r0899.12.


### 6.5.3.2 Interface description (motor side)

#### Overview

The motor holding brake interface on the motor is used to connect the built-in holding brake to the converter.

**Description**

- 1FL2 shaft heights 20, 30, and 40  
The holding brake interface is integrated into the hybrid connector. For more information, see Section "Interface description - power connector (motor side) (Page 136)".
- 1FL2 shaft heights 48 and 52  
The holding brake interface is integrated into the M17 power connector. For more information, see Section "Interface description - power connector (motor side) (Page 136)".
- 1FL2 shaft heights 45, 65, and 90

Holding brake interface	Pin	Designation
 M17 angular connector	1	Holding brake, positive
	2	Holding brake, negative

**6.5.3.3 Wiring**

**Connection example**

**Connecting S200 PN to the motor holding brake**

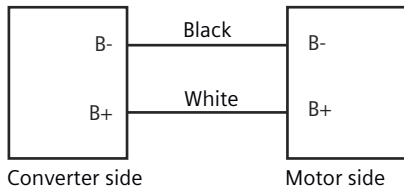


Figure 6-7 Motor holding brake connection via X108

## Connecting S200 Basic PN to the motor holding brake

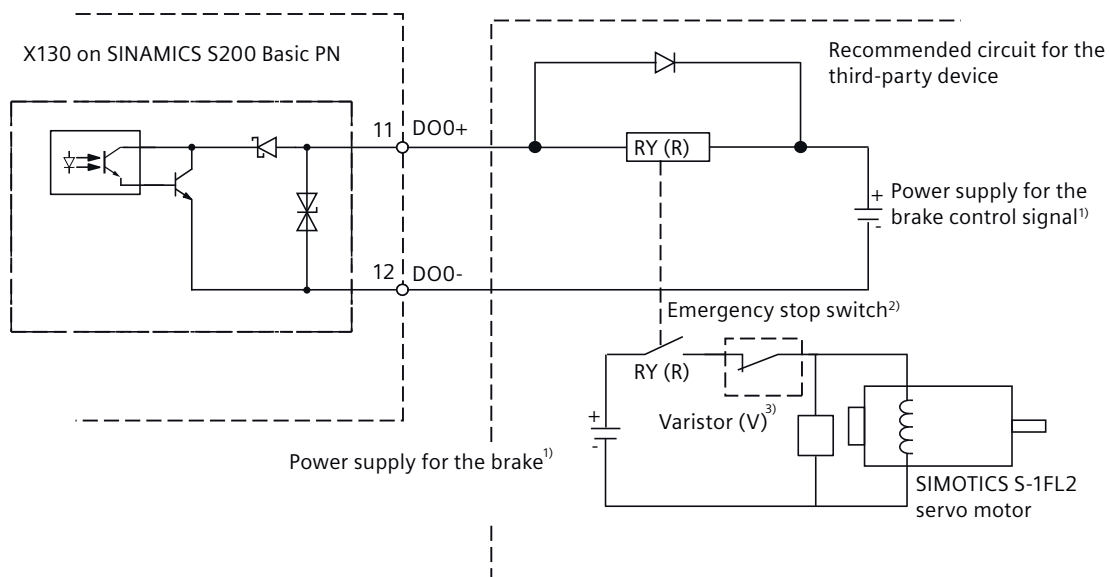


Figure 6-8 Motor holding brake connection via a digital output (example 1)

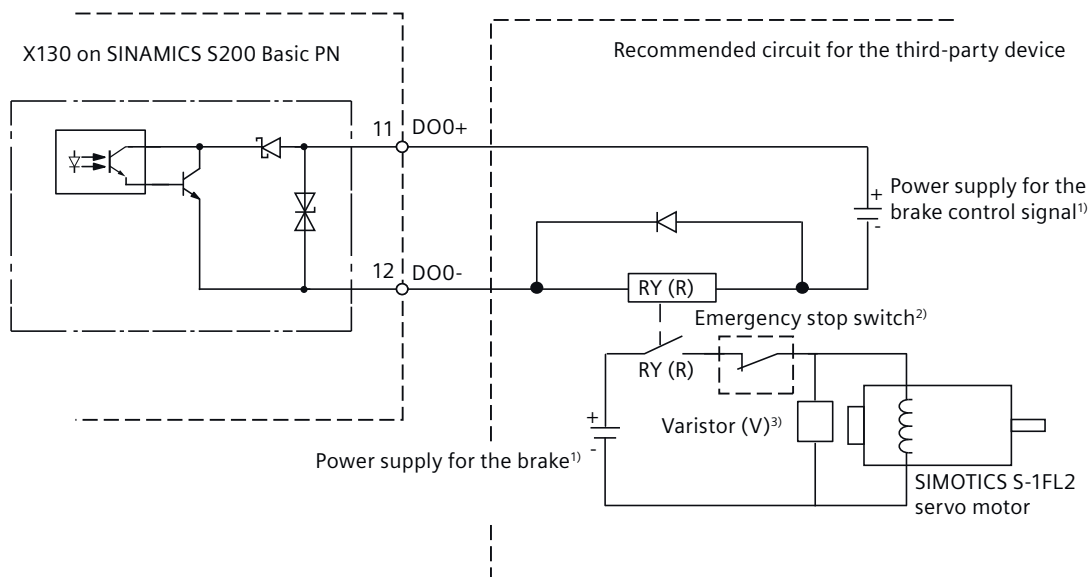


Figure 6-9 Motor holding brake connection via a digital output (example 2)

**Note**

<sup>1)</sup> To avoid electro-magnetic interference to electronic components, make sure that you use different power supplies for the brake and the brake control signal.

<sup>2)</sup> The motor holding brake can be controlled by the brake control signal from the digital output and an external emergency stop.

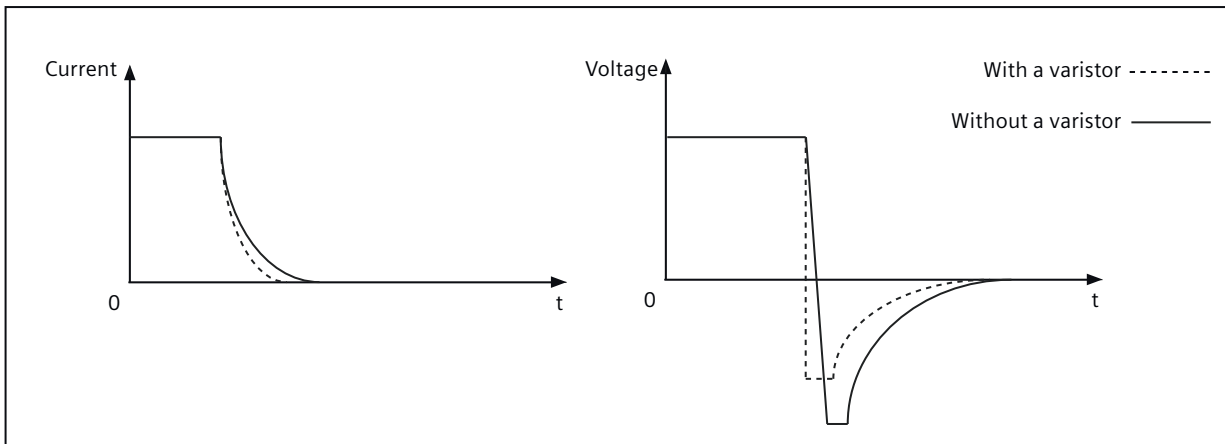
<sup>3)</sup> Install a varistor to suppress the surge voltage or surge current generated by the relay (RY) during its ON/OFF operation.

**Varistor (V) used for the power supply of the brake**

**Note**

All the following data on a varistor is provided based on the low inertia motors with a rated power of 2 kW; however, the data is also applicable to the low inertia motors of other power ranges.

Consider the following current-time and voltage-time characteristics when using a varistor to suppress the surge voltage or surge current:



You may select an appropriate varistor with reference to the table below:

Power supply voltage of the brake		24 V DC
Order information	Manufacturer	EPCOS
	Model	S20K20
Specification requirements	Operating temperature	-20 °C to 60 °C
	Delay switching frequency	< 10 times/min
	Maximum operating DC voltage	26 V
	Average power dissipation	0.2 W
	Voltage at 1 mA	33 V ± 10%
	Clamping voltage at 20 A (8/20 μs)	65 V
Energy absorption (2 ms) at a time		18 J

**Relay (R) used for the power supply of the brake**

Siemens recommends that you choose a Siemens relay (article number: 3RQ2000-1AW00 or 3RQ2000-2AW00).

You can also select other appropriate relays with reference to the table below:

Insulation voltage for overvoltage category III according to IEC 60664 for pollution degree 3	300 V
Max. permissible voltage for protective separation between control circuit and auxiliary circuit according to IEC 60947-1	300 V
Control supply voltage	24 ... 240 AC/DC; 50/60 Hz



Operating range factor of control supply voltage	0.7 ... 1.1
Current-carrying capacity of the output relay	2 A
<ul style="list-style-type: none"> <li>At DC-13 at 24 V</li> </ul>	

## More information

For more information about cable requirements, see Section "Cables and connectors (Page 130)".

For more information about assembling cable terminals, see Section "Assembling cables (Page 879)".

## 6.5.4 Connecting the encoder

### 6.5.4.1 Interface description - X120 (converter side)

#### Overview


The servo drive system supports three types of encoders:

- Absolute encoder, 17-bit single-turn
- Absolute encoder, 21-bit single-turn
- Absolute encoder, 21-bit single-turn +12-bit multturn

The converter connects to the encoder of the motor on the interface X120.

#### Description

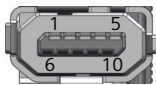Table 6-6 Interface X120

X120	Pin	Designation	Technical specifications
 IX-C socket	1	DP1	Absolute encoder data signal, positive
	2	DN1	Absolute encoder data signal, negative
	3	Reserved	Reserved
	4	CLKP1	Absolute encoder clock signal, positive
	5	CLKN1	Absolute encoder clock signal, negative
	6	M	Reference ground
	7	Power_ENC1	Encoder power supply, 5 V DC
	8	M_ENC1	Encoder power supply, reference ground
	9	Reserved	Reserved
	10	Reserved	Reserved


### 6.5.4.2 Interface description (motor side)

#### Overview


The encoder interface on the motor is used to transfer position data to the converter for real time control.

#### Description

- 1FL2 shaft heights 20, 30, and 40  
The encoder interface is integrated into the hybrid connector. For more information, see Section "Interface description - power connector (motor side) (Page 136)".
- 1FL2 shaft heights 48 and 52

Encoder interface	Pin	Designation
 M17 angular connector	1	Encoder power supply, 5 V
	2	Encoder power supply, reference ground
	3	Absolute encoder clock signal, positive
	4	Absolute encoder clock signal, negative
	5	Absolute encoder data signal, positive
	6	Absolute encoder data signal, negative

- 1FL2 shaft heights 45, 65, and 90

Encoder interface	Pin	Designation
 M17 angular connector	1	Encoder power supply, 5 V
	2	Encoder power supply, reference ground
	3	Reserved
	4	Absolute encoder clock signal, negative
	5	Absolute encoder data signal, positive
	6	Absolute encoder clock signal, positive
	7	Reserved
	8	Absolute encoder data signal, negative

### 6.5.4.3 Wiring

#### Connection example

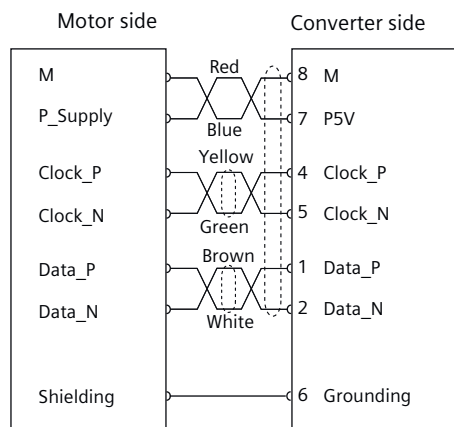


Figure 6-10 Encoder connection

#### More information

For more information about cable requirements, see Section "Cables and connectors (Page 130)".

For more information about assembling cable terminals, see Section "Assembling cables (Page 879)".

### 6.5.5 Rotating the connectors at the motor

#### Overview

The connectors at the 1FL2 motor with shaft heights 45, 48, 52, 65, and 90 can be rotated to a different angle to a limited extent.

Use a suitable socket connector as a lever to rotate the connector.

#### Note

##### Rotating the connectors

- Do not exceed the permissible range of rotation.
- To ensure the degree of protection, do not rotate more than 10 times.



#### WARNING

##### Adjusting cable directions

Before adjusting the cables, switch off the power supply. Otherwise, the motor contains a hazardous voltage and a risk of electric shock.

**Description**

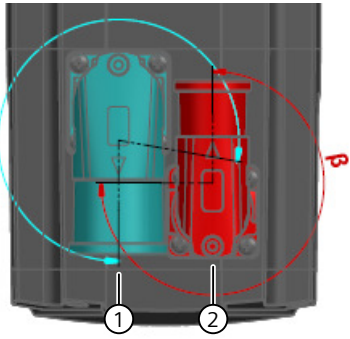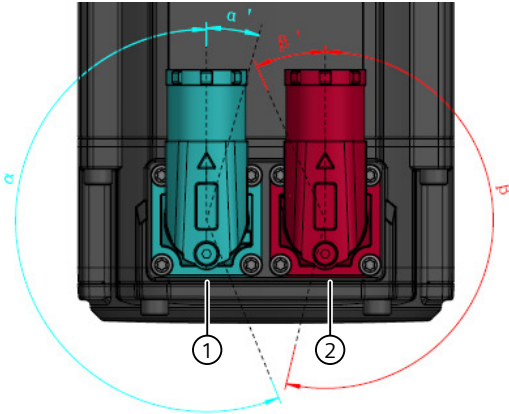Table 6-7 Rotation range of the power connector ① and encoder connector ②

Motor	Power connector ①, size M17 and M23			Encoder connector ②, size M17		Drawing
	Size	Angle $\alpha$	Angle $\alpha'$	Angle $\beta$	Angle $\beta'$	
SH45	M23	280°	-	270°	-	
SH48 SH52	M17	225°	45°	225°	35°	

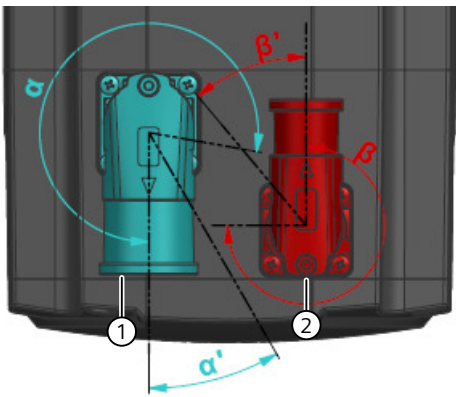
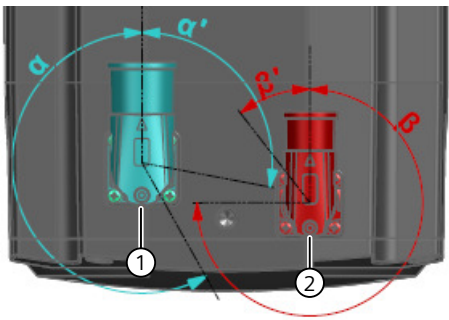
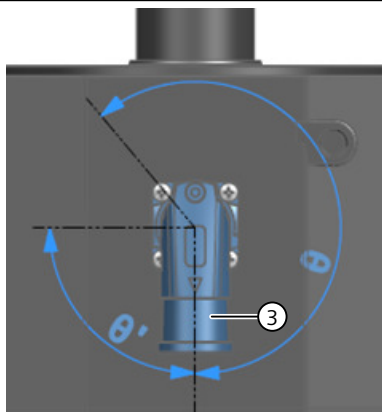
Motor	Power connector ①, size M17 and M23			Encoder connector ②, size M17		Drawing
	Size	Angle $\alpha$	Angle $\alpha'$	Angle $\beta$	Angle $\beta'$	
SH65	M23	280°	30°	270°	40°	
SH90	M23	210°	100°	270°	40°	

Table 6-8 Rotation range of the holding brake connector ③

Motor	Holding brake connector ③, size M17		Drawing
	Angle $\theta$	Angle $\theta'$	
SH45 SH65 SH90	220°	90°	

## 6.6 Connecting the braking resistor


### 6.6.1 Interface description - X1

#### Overview

The converter connects to the braking resistor via terminals DCP, R1, and R2 on the interface X1.

#### Description

Table 6-9 Interface X1

X1	Terminal	Designation
	DCP	DC link positive (for connection to the braking resistor)
	R2	Connection to the internal braking resistor <sup>1)</sup>
	R1	Connection to the external braking resistor

<sup>1)</sup> S200 Basic PN (FSA and FSB) and S200 PN FSA (0.1 kW) do not have an internal braking resistor.

### 6.6.2 Wiring

#### Overview

S200 Basic PN FSC and S200 PN (excluding FSA 0.1 kW) converters have an integrated braking resistor for absorbing regenerative energy from the motor. To use the internal braking resistor, connect DCP and R2 with the jumper included in the scope of delivery.

To use an external braking resistor, connect the converter to an external braking resistor via terminals DCP and R1.

When the terminal R1 or R2 is not in use, cover it with the blanking plug provided in the connector kit (installed on R1 upon delivery).

## Requirement

### WARNING

#### Electric shock as a result of a residual charge in power components

After the power supply has been switched off, it takes up to five minutes until the capacitors in the converter have discharged so that the residual charge is at a non-hazardous level. Touching the converter immediately after powering off can result in electric shock due to residual charge in the power components.

- Check the voltage at the converter connections before you connect the external braking resistor.

### WARNING

#### Fire caused by an unsuitable or improperly installed braking resistor

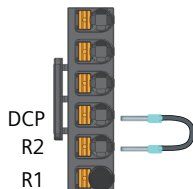
Using an unsuitable or improperly installed braking resistor can result in fire and formation of smoke. Fire and smoke can cause severe personal injury or property damage.

- Only use braking resistors that are approved for the converter.
- Install the braking resistor in accordance with regulations.

## Procedure

### Connecting the internal braking resistor

1. Switch off all power supplies to the converter, including the mains supply and the 24 V DC power supply.
2. Cover the terminal R1 with the blanking plug.
3. Connect DCP and R2 with the jumper included in the scope of delivery as shown below:




### Connecting an external braking resistor

1. Switch off all power supplies to the converter, including the mains supply and the 24 V DC power supply.
2. Wait for five minutes to allow the converter to discharge and check that no voltage is present at the converter connections.
3. Remove the connection between DCP and R2.

### 6.6 Connecting the braking resistor

---

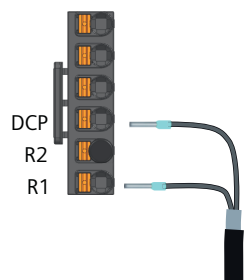4. Remove the blanking plug from R1 and insert it into R2.
5. Connect the external braking resistor cable to terminals DCP and R1 as shown below:



#### More information

For more information about cable requirements, see Section "Cables and connectors (Page 130)".

For more information about assembling cable terminals, see Section "Assembling cables (Page 879)".



## 6.7 Connecting the 24 V DC power supply


### 6.7.1 Interface description - X124

#### Overview

The servo drive system supports the daisy-chain connection of multiple converters to an external 24 V power supply via interface X124. The maximum permissible number of daisy-chained converters depends on the maximum current limit of the X124 plug.


#### Description

Table 6-10 Interface X124

X124	Terminal	Designation	Technical data
 0 V 0 V 24 V 24 V	0 V	Power supply, 0 V	Maximum current limit: 10 A
	0 V	Power supply, 0 V	
	24 V	Power supply, 24 V DC	
	24 V	Power supply, 24 V DC	


### 6.7.2 Wiring

#### Requirement

 <b>WARNING</b>
<b>Electric shock due to unsuitable power supply</b>
<p>When the converter is connected to an unsuitable power supply, exposed components may carry a hazardous voltage that might result in serious injury or death.</p> <ul style="list-style-type: none"> <li>• Only use 24 V power supplies that provide SELV (Safety Extra Low Voltage) or PELV (Protective Extra Low Voltage) output voltages (maximum 60 V DC briefly).</li> </ul>

### Procedure

1. Assemble the X124 plug to the converter.
2. Attach the cable to the plug as shown below:



- ① Connecting to the 24 V DC power supply
- ② Connecting to the daisy-chained converter

### More information

For more information about cable requirements, see Section "Cables and connectors (Page 130)".

For more information about assembling cable terminals, see Section "Assembling the cable lugs (Page 880)".

## 6.8 Connecting the inputs and outputs


### 6.8.1 Interface description - X130

#### Overview

The converter connects to the controller for signal transmission on the interface X130.

#### Description

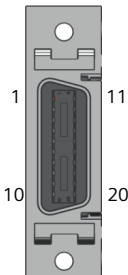Table 6-11 Interface X130

X130	Pin	Designation		Technical specifications	Conductor color
		S200 PN	S200 Basic PN		
 <p>20-pin MDR socket</p> <p>Tightening torque: 0.2 Nm</p>	1	DI0	DI0	Digital input 0 (high-speed digital input)	White-Gray
	2	DI1	DI1	Digital input 1 (high-speed digital input)	Gray-Brown
	3	DI2	DI2	Digital input 2	White-Pink
	4	DI3	DI3	Digital input 3	Pink-Brown
	5	M	M	Reference ground	White
	6	DI_COM	DI_COM	Common terminal for digital inputs	Brown
	7	DI_COM	DI_COM	Common terminal for digital inputs	Green
	8	M	M	Reference ground	Yellow
	9	-	-	-	-
	10	FE	FE	Functional grounding	Pink
	11	DO0+	DO0+	Digital output 0, positive	Blue
	12	DO0-	DO0-	Digital output 0, negative	Red
	13	DO1+	-	Digital output 1, positive	Black
	14	DO1-	-	Digital output 1, negative	Violet
	15	PTOA+	-	Pulse train output A, positive	Gray-Pink
	16	PTOA-	-	Pulse train output A, negative	Red-Blue
	17	PTOB+	-	Pulse train output B, positive	White-Green
	18	PTOB-	-	Pulse train output B, negative	Brown-Green
	19	PTOZ+	-	Pulse train output Z, positive	White-Yellow
	20	PTOZ-	-	Pulse train output Z, negative	Yellow-Brown

#### More information

For more information about cable requirements, see Section "Cables and connectors (Page 130)".

For more information about assembling cable terminals, see Section "Assembling the I/O connector (Page 884)".

## 6.8.2 Wiring

### 6.8.2.1 Wiring of digital inputs

#### Overview

The converter offers four digital inputs. DI0 and DI1 only support PNP wiring, and DI2 and DI3 support both NPN and PNP types of wiring.

#### Connection example

##### Connecting DI0 and DI1



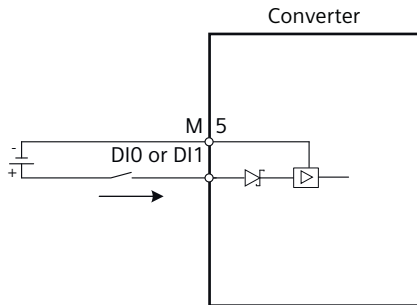


Figure 6-11 PNP wiring

##### Connecting DI2 and DI3

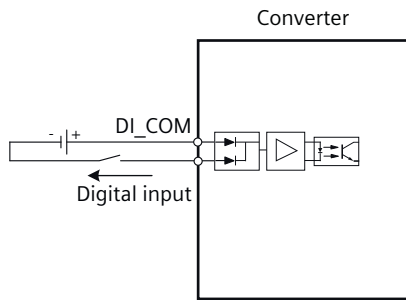

NPN wiring

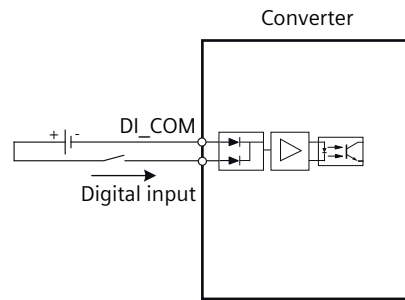

PNP wiring

#### More information


For more information about the technical data of digital inputs, see Section "General technical data (Page 610)".

### 6.8.2.2 Wiring of digital outputs

#### Overview

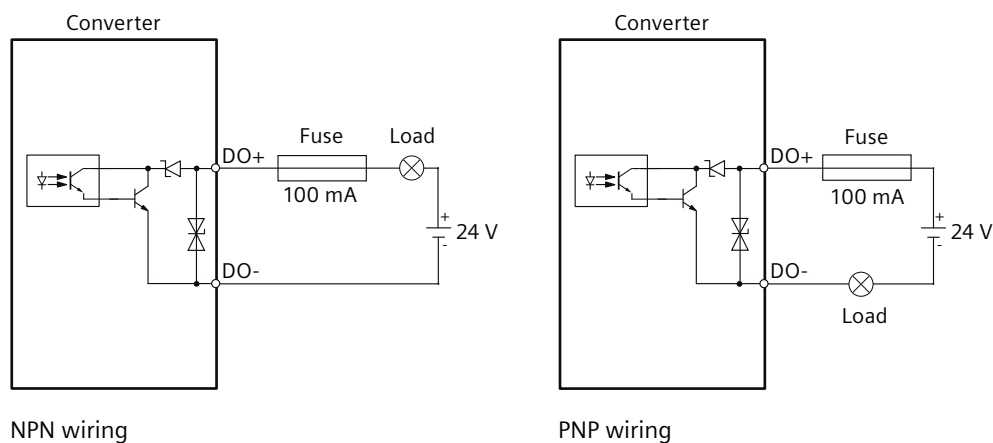
S200 PN offers two digital outputs, DO0 and DO1, and S200 Basic PN offers only DO0. The digital outputs support both NPN and PNP types of wiring.

#### Requirement

 <b>CAUTION</b>
<b>Damage to property due to overload of digital outputs</b>
<p>If digital outputs are overloaded, this can result in damage due to fire, device defects, or malfunctions.</p> <ul style="list-style-type: none"> <li>• Ensure that the digital outputs are not loaded in excess of 100 mA.</li> <li>• Install a 100 mA fuse for connection to the digital output.</li> </ul>

#### Connection example

You can connect the digital outputs as shown below:



#### More information

For more information about the technical data of digital outputs, see Section "General technical data (Page 610)".

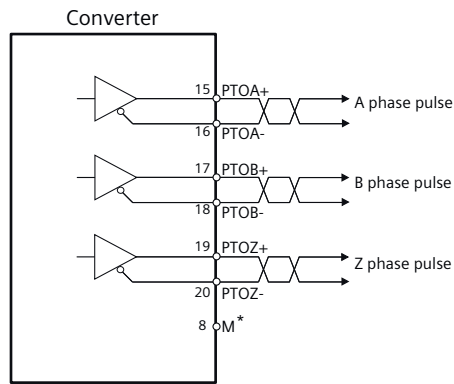
### 6.8.2.3 Wiring of pulse train outputs

#### Overview

S200 PN supports high-speed 5 V differential signals (A+/A-, B+/B-, Z+/Z-).

**Connection example**

You can connect the pulse train outputs as shown below:



\* Connected to the reference ground of the PLC

**More information**

For more information about the technical data of pulse train outputs, see Section "General technical data (Page 610)".

## 6.9 Connecting STO (for S200 PN only)


### 6.9.1 Interface description - X131

#### Overview

S200 PN offers the Safe Torque Off (STO) function. The function is enabled by default and cannot be configured.


To disable the Safety Integrated Functions, cover the interface X131 with the STO disable plug included in the connector kit.

#### Requirement

 <b>WARNING</b>
<b>Material damages and personal injuries by the drop of a vertical axis</b>
Unexpected drop of the vertical axis can cause material damages and personal injuries.
<ul style="list-style-type: none"> <li>Do not use the STO function with a vertical axis.</li> </ul>

#### Description

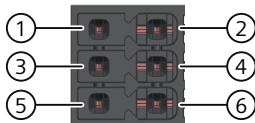Table 6-12 Interface X131

X131	Terminal	Designation	Technical specifications
	1	STO1+	STO channel 1, positive
	2	STO1-	STO channel 1, negative
	3	STO-VS	STO power supply
	4	STO-M	STO power supply, reference ground
	5	STO2+	STO channel 2, positive
	6	STO2-	STO channel 2, negative

### 6.9.2 Wiring

#### Overview

Two STO channels are available for connection to external safety devices.

To connection to external safety devices, first assemble the X131 plug to the converter. You can use the internal or an external 24 V power supply for the connection.

To ensure EMC performance, Siemens recommends that you use twisted pair cables for STO connection.

**Connection example**

The following illustrations take EMERGENCY STOP buttons as an example.

**Interconnection for an EMERGENCY STOP button with 24 V DC internal**

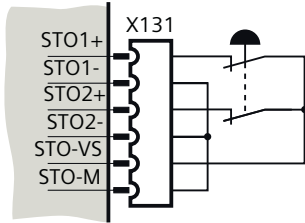


Figure 6-12 STO connection example with 24 V internal

**Interconnection for an EMERGENCY STOP button with 24 V DC external**

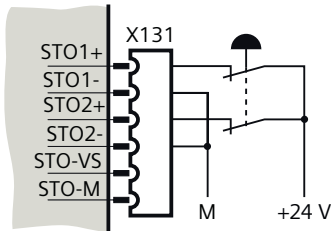


Figure 6-13 STO connection example with 24 V external

**More information**

For more information about cable requirements, see Section "Cables and connectors (Page 130)".

For more information about assembling cable terminals, see Section "Assembling the cable lugs (Page 880)".

For more information about the STO function, see Section "Safety Integrated (for S200 PN only) (Page 398)".



## 6.10 Connecting to the fieldbus

### 6.10.1 Interface description - X150

#### Overview


The converter connects to the PROFINET network via ports 1 and 2 of interface X150. The transmission rate on the interface is 10 Mbit/s or 100 Mbit/s.

Every PROFINET device on the network is uniquely identified by its PROFINET interface. For this purpose, a PROFINET interface has the following attributes:

- A MAC address (factory default)
- An IP address
- A device name (name of the station)

#### Description

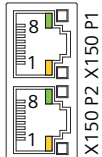Table 6-13 Interface X150

X150	Pin	Designation	Technical specifications
	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	Reserved	Reserved
	5	Reserved	Reserved
	6	RXN	Receive data -
	7	Reserved	Reserved
	8	Reserved	Reserved

#### LED states

For diagnostic purposes, the PROFINET interface X150 is equipped with a green LED and a yellow LED.

Table 6-14 LED states of the service interface X150

LED	Color	Status	Description
Link port	-	Off	Missing or faulty link
	Green	Continuous light	10 or 100 Mbit link is available
Activity port	-	Off	No activity
	Yellow	Flashing light	Sending or receiving data

## 6.10.2 Wiring

### Overview

The maximum length of cables between stations (L1 to Ln) is 100 m. Siemens recommends that you fix the cable on the cabinet to prevent connector damage caused by dragging. If a cable with a length of more than 3 m is connected to the PROFINET port, electromagnetic interference may occur. Minimization of the interference emission is possible by the use of ferrite cores, cabinet feedthrough or fiber optic transceiver.

#### Note

When connecting the ports P1 and P2, make sure that the physical input and output connections are the same with the connections in the topology.

### Connection example

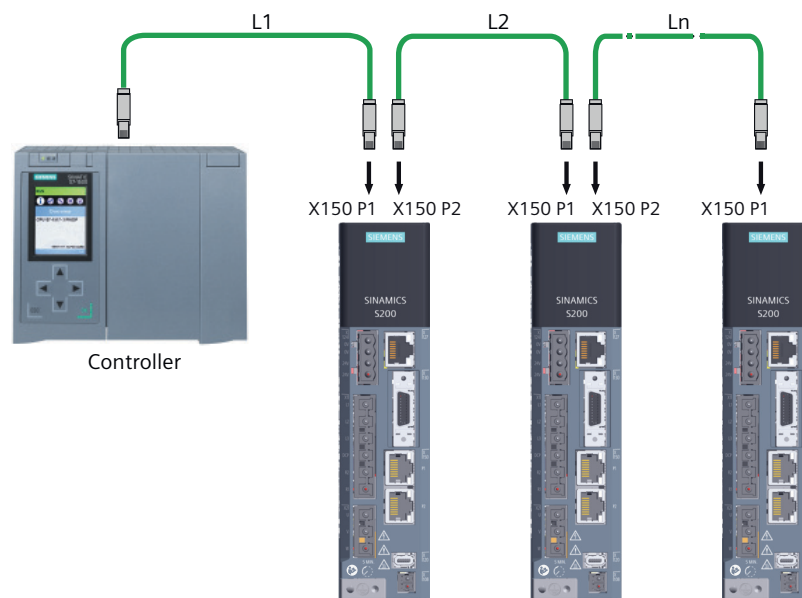


Figure 6-14 Connecting to the fieldbus

### More information

For more information about cable requirements, see Section "Cables and connectors (Page 130)".

## 6.11 Connecting the service interface (Ethernet)

### 6.11.1 Interface description - X127

#### Overview

The converter connects to a commissioning device via the Ethernet interface X127. The interface offers 24 V DC power supply to the connected device. The transmission rate on the interface is 10 Mbit/s or 100 Mbit/s.


#### Requirement

##### Note

The service interface X127 is used for commissioning and diagnostics. Do not use it for long-term monitoring.

#### Description

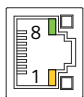Table 6-15 Interface X127

X127	Pin	Designation	Technical specifications
 RJ45 socket	1	TXP	Transmit data +
	2	TXN	Transmit data -
	3	RXP	Receive data +
	4	P24_POE	Power supply over Ethernet, 24 V DC
	5	P24_POE	Power supply over Ethernet, 24 V DC
	6	RXN	Receive data -
	7	M_POE	Power supply over Ethernet, reference ground
	8	M_POE	Power supply over Ethernet, reference ground

#### LED states

For diagnostic purposes, the service interface X127 is equipped with a green LED and a yellow LED.

Table 6-16 LED states of the service interface X127

LED	Color	Status	Description
Link port	-	Off	Missing or faulty link
	Green	Continuous light	10 or 100 Mbit link is available
Activity port	-	Off	No activity
	Yellow	Flashing light	Sending or receiving data

**More information**

For more information about cable requirements, see Section "Cables and connectors (Page 130)".

# Commissioning (web server)

## 7.1 Introduction

### Description

The web server commissioning tool is integrated in the converter.

The web server supports you throughout the service life of the application:

- Online commissioning
- Diagnostics
- Monitoring and operation
- Service and maintenance
- Support

After commissioning has been completed, the settings made are applied and transferred to the converter.

The web server has multi-level industrial cybersecurity functionality.

### More information

For more information about security settings in the web server, see Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## 7.2 Fundamentals

### 7.2.1 Supported operating units

#### Description

The following operating units are supported for the connection with the web server:

- Programming device, PC, notebook
- Smartphone, tablet PC  
Mobile devices can be connected to the converter via third-party Ethernet OTG adapters or external WLAN access points.

As a result of the responsive design, content is adapted to the screen size of the operating unit.

### 7.2.2 Requirements for commissioning

#### Description

- You have correctly installed the converter and the motor.
- You have attached the motor including encoder to the mechanical system.
- You have connected the motor to the converter.
- You have connected the converter and the operating unit via service interface X127 or PROFINET interface X150.
- You have switched on the converter supply voltage.
- The converter has ramped up.

### 7.2.3 Supported browsers

#### Description

Table 7-1 Browsers supported by the web server

Browser <sup>1)</sup>	Version
Apple Safari	≥ Version 15.0
Google Chrome	≥ Version 83
Microsoft Edge	≥ Version 88
Mozilla Firefox	≥ Version 91

<sup>1)</sup> Siemens recommends that you use the latest version of the browsers.

## 7.2.4 Communication interfaces

### Description

The following interfaces are available for accessing the converter:

Interface	Information
Service interface X127	The default access to the web server is via the service interface X127.
	Ethernet interface X127 is intended for commissioning and diagnostics, which means that it must always be accessible.
	Defaults: <ul style="list-style-type: none"> <li>• IP address: 169.254.11.22</li> <li>• Subnet mask: 255.255.0.0</li> <li>• Data transfer via HTTPS is activated in the factory setting.</li> </ul>
	Restrictions: <ul style="list-style-type: none"> <li>• Only local access is allowed.</li> <li>• Only local networking in a closed and locked electrical cabinet is permissible.</li> <li>• For remote access to the electrical cabinet, you must apply additional Industrial Cybersecurity measures to prevent misuse through sabotage, data manipulation by unqualified persons and interception of confidential data.</li> </ul>
PROFINET interface X150	<ul style="list-style-type: none"> <li>• Converters are connected to several components, such as an operating unit or a higher-level control system, via PROFINET interface X150.</li> <li>• The network at PROFINET interface X150 must be located in a secure protection zone. Access to cables and open connections must be implemented in a protected fashion, such as in a control cabinet.</li> <li>• The IP addresses of the service interface X127 and the PROFINET interface X150 must not be in the same subnet.</li> </ul>

## 7.2.5 Making the operating instructions available for the web server information system

### Overview

For selected topics, you can use the information system of the web server to access the product documentation directly. To do this, you must make the product documentation available on a prepared SD card.

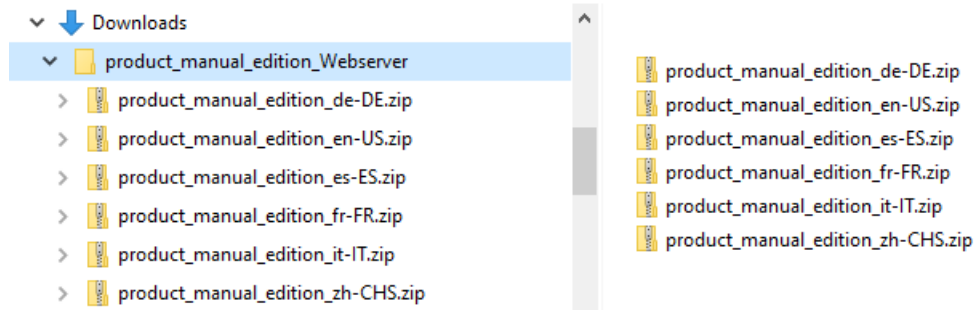
### Requirement

- You have an empty SD card with a maximum storage capacity of 32 GB (e.g. 6SL5570-0GC00-0AA0) onto which you can load the product documentation.
- You have connected a suitable SD card reader to your PC.

### Procedure

To make the product documentation available for the web server information system, proceed as follows:


1. Download the product documentation to your PC.  
The product documentation for the web server information system can be found at this address (<https://support.industry.siemens.com/cs/ww/en/ps/29596>).  
The file "product\_manual\_edition\_Webserver.zip" is located under "Appendix to this entry".  
Explanation of the file name:
  - Product: Abbreviated form of product names
  - Manual: Abbreviated form of the manual title, for example "op\_instr" for operating instructions
  - Edition: Month and year of publication of the manual in the format MMY
2. Unzip the file that you downloaded "product\_manual\_edition\_Webserver.zip".  
The file contains all available language versions as separately zipped files.



3. Unzip the required language version to a folder with the name of the ZIP file (e.g. for the English version "product\_manual\_edition\_en-US").
4. Insert the SD card into your PC's SD card reader.
5. In the root directory of the SD card, create a folder called "DOC".



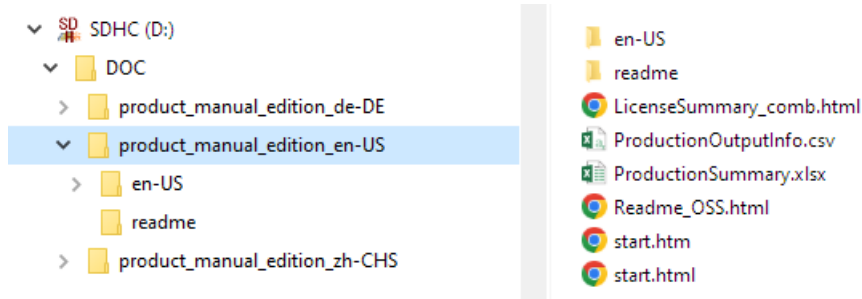- Copy the unzipped folder (for example "product\_manual\_edition\_en-US") to the "DOC" directory on the SD card.



Depending on the available space on the SD card, you can copy all available language versions to the SD card. To do this, repeat the unzip/copy process for each language version.

- Eject the SD card from the PC.
- Remove the SD card from the reader.
- Insert the SD card into the converter.

## Result

You have made the product documentation available for the web server information system. For selected topics, you can now access the instructions via the context-sensitive information system.

## 7.2.6 Using the web server information system


### Overview

In the web server, you have the support of an integrated, multi-level information system. You decide in a context-sensitive interface how much and what kind of information is displayed.

## Description of function

- ① **Display general information about the function of the current view**
  - Click or tap on the header or on the expand icon to show general information about the function of the current view.
  - ✓ Click or tap again on the header or on the collapse icon to hide the general information about the function of the current view.
- ② **Display detailed information in a context-sensitive help window**
  - Point with the mouse pointer or tap on the setting you need information about. The setting is highlighted and the assigned info icon appears.
  - When you move the mouse pointer to the info icon, the icon and the mouse pointer change their appearance. If you now click or tap on the info icon, a context-sensitive help window appears with detailed information.
- ③ **Display a tooltip with context-sensitive short information about a setting**
  - Point with the mouse pointer or tap on the setting you need information about.
  - If you hold the mouse pointer or keep the tap pressed on the setting for longer, a tooltip with the context-sensitive short information is displayed.

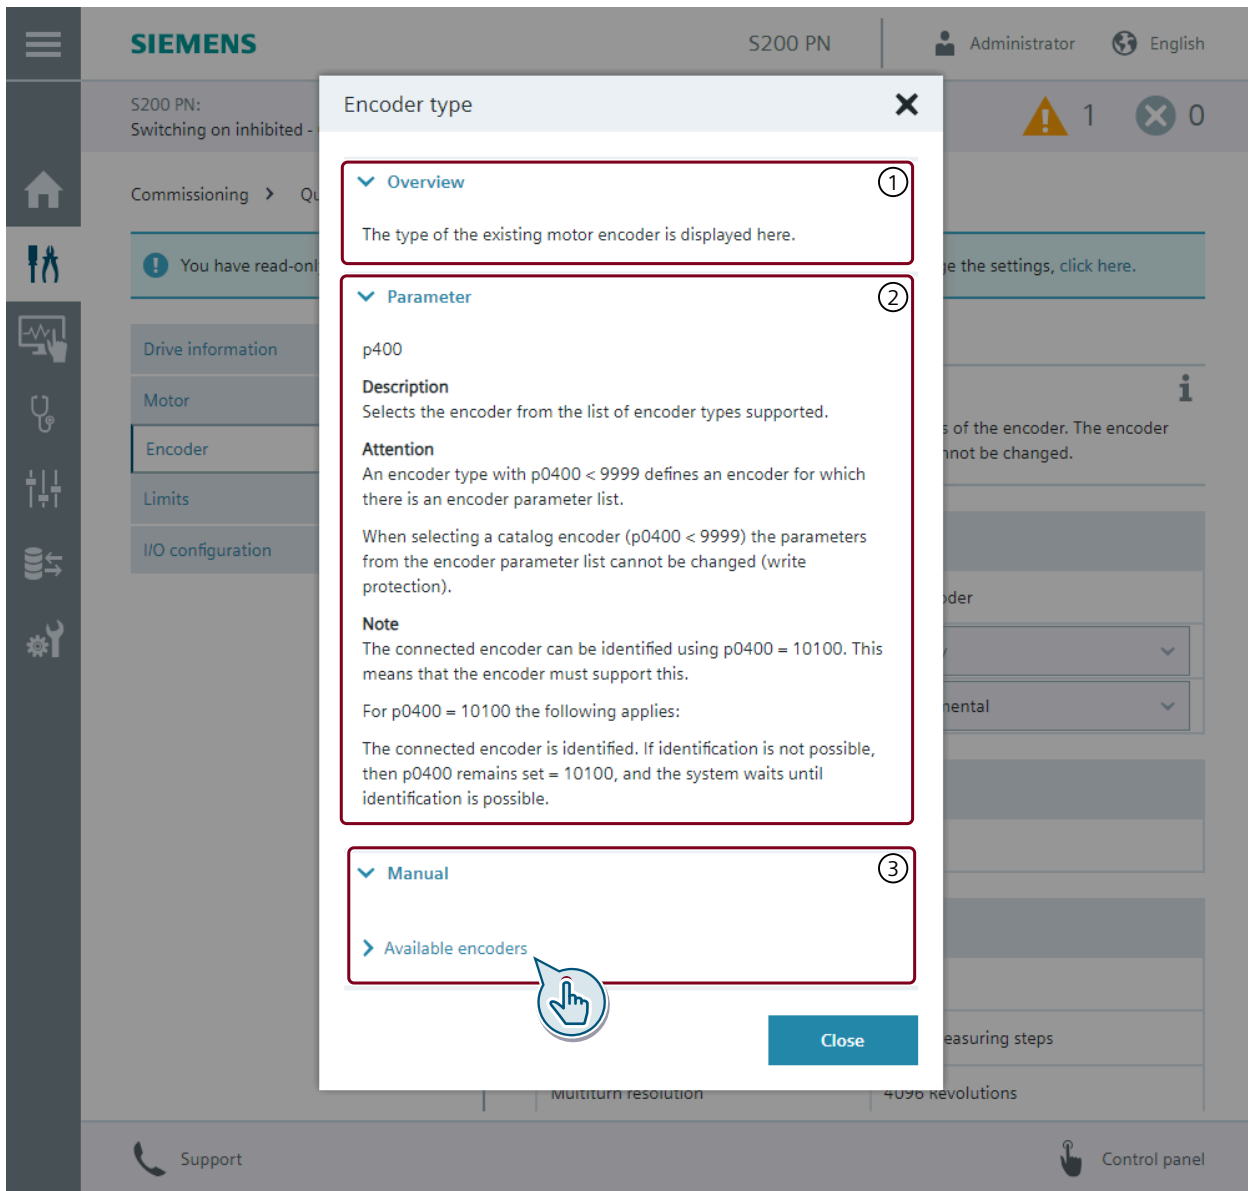Figure 7-1 Information displayed in the current view



- ① **Overview**  
Displays general information about the meaning or function of the setting.
  - Click or tap on "Overview" or on the associated expand icon to show general information about the meaning or function of the setting.
  - ✓ Click or tap again on "Overview" or on the associated collapse icon to hide the general information about the meaning or function of the setting.
  
- ② **Parameters**  
Displays detailed information about the parameter defined by the setting.
  - Click or tap on "Parameter" or on the associated expand icon to show detailed information about the parameter.
  - ✓ Click or tap again on "Parameter" or on the associated collapse icon to hide the detailed information about the parameter.

③

**Manual**

For selected settings, you can use the links under "Manual" to access the operating instructions directly.

The requirements in order to do this are set out in Chapter "Making the operating instructions available for the web server information system (Page 166)".



Click or tap on "Manual" or on the associated expand icon to show links to the operating instructions.

Then, you can click or tap on a link to open the web browser and display the linked information in the operating instructions.



Click or tap again on "Manual" or on the associated collapse icon to hide the links to the operating instructions.


Figure 7-2 Product-dependent information in a context-sensitive help window

## 7.2.7 Reloading pages

### Procedure

If the web server does not respond, or if buttons are inactive or not labeled, although the converter is not fully utilized with internal calculations, then reload the web server pages.

Examples:

- At the PG/PC via <F5>
- At the tablet PC or smartphone via 

## 7.3 Getting started

### 7.3.1 Calling the web server

#### Overview

Converter commissioning takes place with the user interface of the web server.

#### Requirement

- You have connected the converter and the operating unit via the service interface X127.

#### Procedure

To access the web server via the service interface X127, enter the IP address of the converter, e.g. <https://169.254.11.22>, in the browser.

#### More information

- Basic settings
  - When you call the web server for the first time, you are prompted to define the basic settings.
  - If you have already made the basic settings, then the web server starts and opens the home page. You can commission the converter, troubleshoot it, operate it, monitor it or call up support through the support pages.
- Alternative access via PROFINET interface X150  
You can also access the web server via PROFINET interface X150.  
To access the integrated web server, you must assign PROFINET interface X150 a valid IP address (other than X127) using Startdrive.

## 7.3.2 Settings for brand-new converters

### Overview

The basis settings are required before performing first commissioning for a brand-new converter.

### Requirement

- The operating unit is connected to the converter via the service interface X127 or the PROFINET interface X150.
- The web server is accessed with the IP address:
  - For service interface X127: 169.254.11.22 (default)
  - For PROFINET interface X150: 0.0.0.0 (default)  
Before you establish an online connection via PROFINET, you must configure a suitable IP address for the PROFINET interface. With firmware V6.2, the configuration is possible in Startdrive only.

### Description of function

If the web server is called, a forwarding function starts automatically to define the following settings:

- Basic settings (Page 173)
- Security settings (Page 174)

## 7.3.3 Basic settings

### Overview

Initial basic settings are defined in the function view.

### Requirement

The web server is being called for the first time.

### Description of function

The basic settings are as follows:

- Preferred language of the user interface
- Converter date and time; either manually or via NTP

After these entries have been made, using the "Next" button, you can continue to the Security Wizard.

## 7.3.4 Security settings

### Overview

The Security Wizard offers the following settings:

- User Management & Access Control (UMAC)
- Access to the integrated web server via the fieldbus or service interface
- Drive data encryption

### Requirement

#### NOTICE

##### Data manipulation due to low protection

An inadequately protected drive makes it easier for potential attackers to access the drive data. Data manipulation can cause the drive to malfunction or damage it.

You can find information about the following actions on the Internet: Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

- Only use the low security settings in exceptional cases and only if an information security risk analysis finds that it is reasonable to do so.
- Configure the settings for full protection immediately after adding a drive or several drives to the project.

### Description of function

One of the following options can be selected:

- "Configure security settings"  
Siemens recommends this setting for comprehensive protection.
- "Continue with low security settings"  
With this setting, UMAC is deactivated.  
You can configure the settings at a later time. You can find the settings in Section "Protection & Security (Page 211)".



### Select "Configure security settings"

Define the settings for UMAC:

- "Activate User Management & Access Control":  
The function is activated by default.  
If UMAC is activated, it can only be deactivated by a full reset of the converter to factory settings. This causes all settings to be lost.  
You can find more information about the full reset to factory settings in Section "Restore factory settings (Page 207)".
- "Administrator setup":  
Specify the user name and password of the drive administrator.  
The drive administrator is permanently assigned the runtime role "Drive Administrator". This assignment cannot be changed.
- "Guest access configuration":  
Specify whether the user has read rights without logging in and whether the user is allowed to acknowledge results without logging in.  
The option is deactivated in the factory setting. If guest access is not permitted, then the login page is displayed when the web server is called.

Define the settings to access the web server:

- "Web server activation":
  - The factory setting to access the web server is service interface X127 with HTTPS protocol.
  - It is also possible to activate PROFINET interface X150 with HTTPS protocol.If the factory settings are deactivated, then it is not possible to access the web server.

Assign an additional password for encryption of the drive data.

- "Drive data encryption":  
The function is activated by default.  
The function encrypts sensitive data in the backup file and on the memory card of the converter. UMAC user data and passwords are sensitive data.  
To use function "Drive data encryption" independent of UMAC, option "Activate UMAC for the drive" must be deselected on page "Activate User Management & Access Control".

Check the configured settings:

- "Summary":  
The summary provides an overview of the configured settings.

### Finish and continue

The settings are checked by clicking on "Finish". If there is no error, the settings are applied.

After finishing, you can continue with one of the following options:

- Continue with commissioning
- Continue with the web server home page

## More information

More information about "Drive data encryption" can be found on the Internet.

7.3 Getting started

Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>)

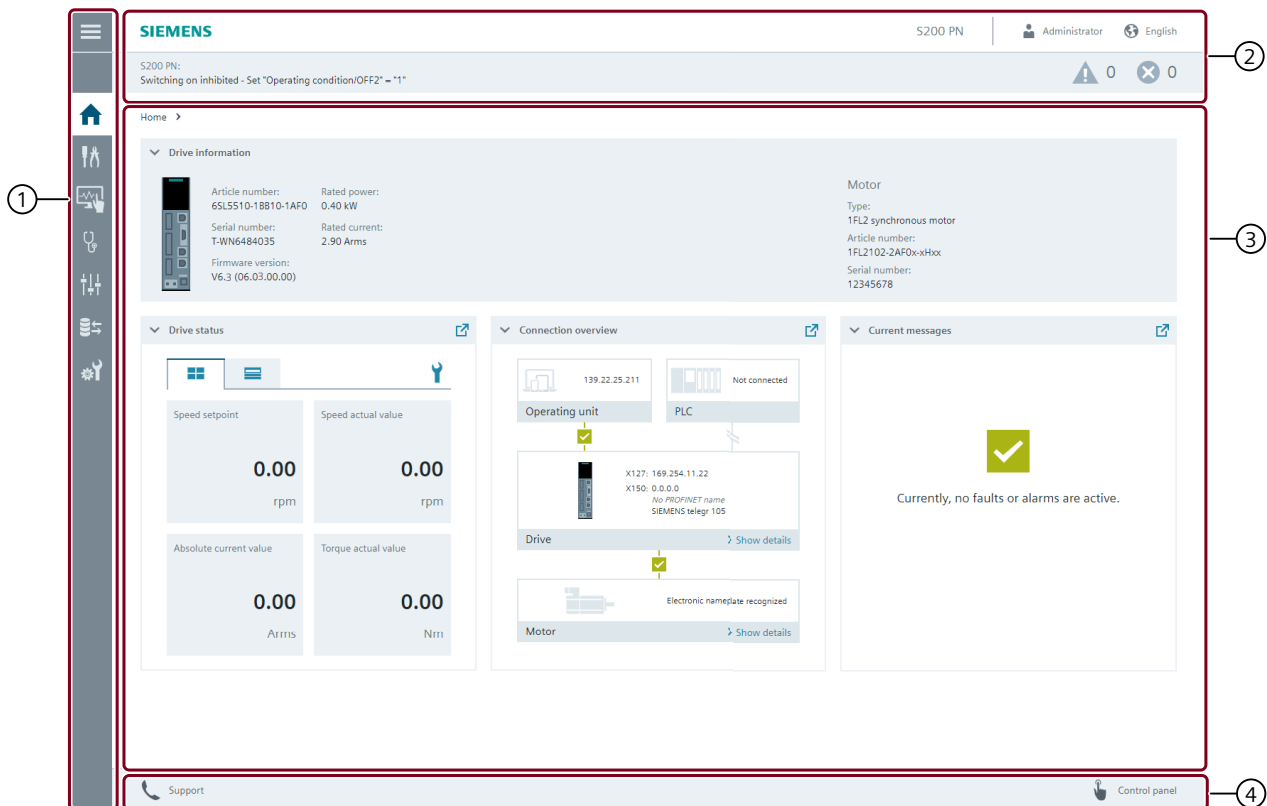
## 7.4 Functions and menus

### 7.4.1 Home page

#### Description

The web server interface depends on the converter. The web server view of your converter may vary from that shown here depending on your product and firmware version.

The following figure shows the basic structure of the web server pages.



① Navigation bar

The navigation bar provides access to converter functions and menus.

② Status bar

The status bar displays the converter product name and the converter status. Log in at the status bar and select the user interface language.

③ Main window

The main window provides information about converter functions and allows settings to be made.

④ Action bar

When manual saving is activated in menu "System" > "Settings", then symbol  is also shown in the action bar.

Figure 7-3 Structure of the web server (example)


## 7.4.2 Commissioning
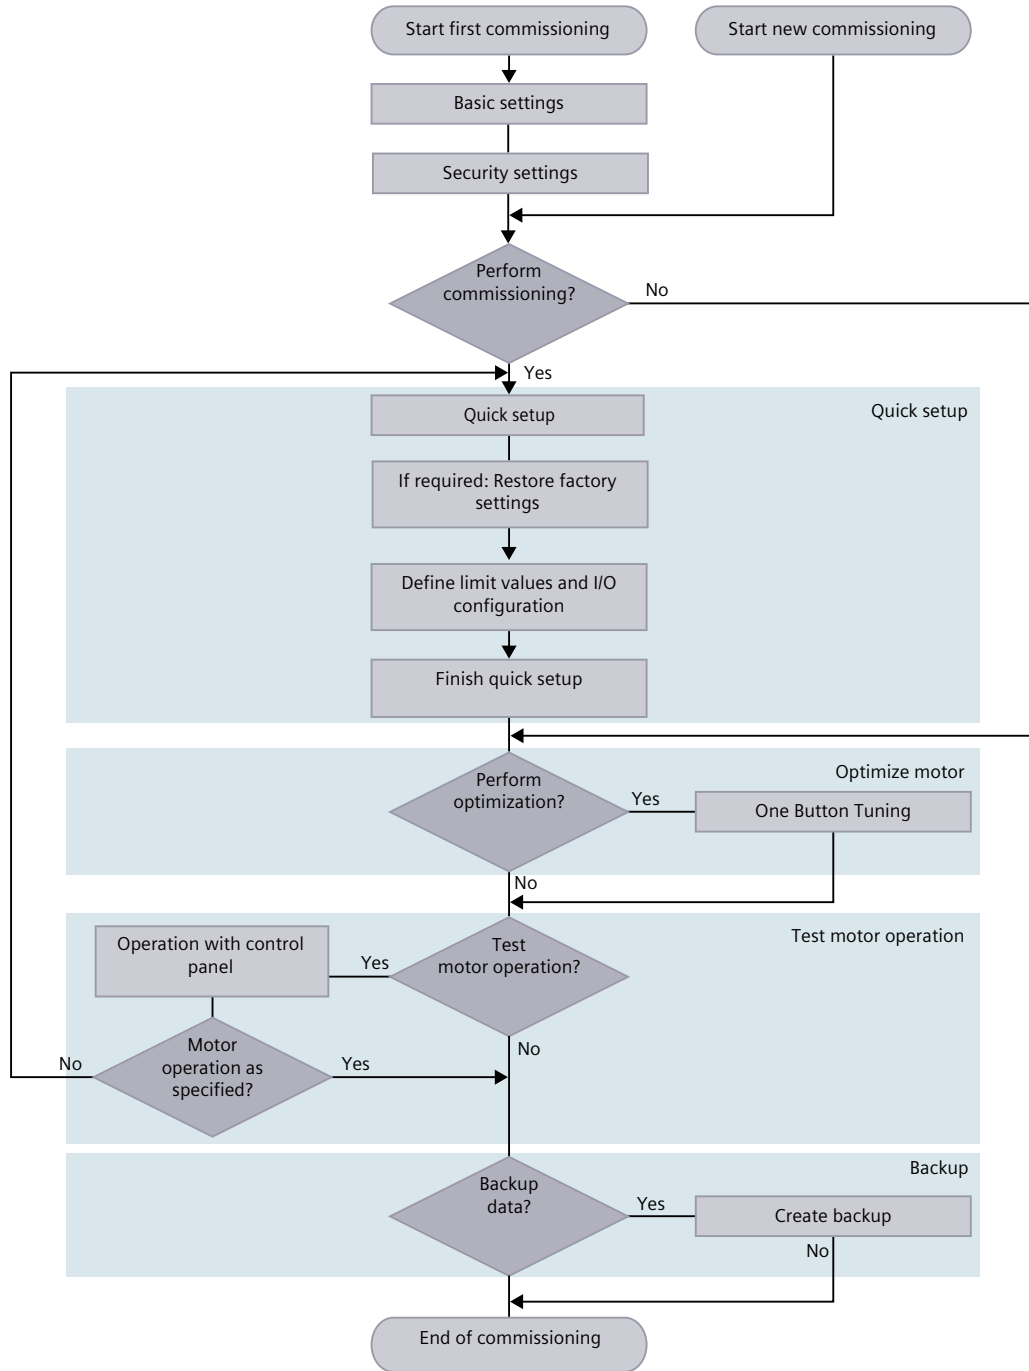
### 7.4.2.1 Complete commissioning workflow

#### Overview

The web server guides users step-by-step through the converter commissioning.

Description of function



Commissioning involves the following steps:

- **Basic settings:**  
If the converter has already been commissioned, then the web server jumps to the basic settings.  
The following settings are required for a brand-new converter:
  - Language, date, time
- **Security settings:**  
The settings are configured with the help of the Security Wizard.  
You can find more information in Section "Security settings (Page 174)".
- **Quick setup:**  
Menu "Commissioning" > "Quick setup"
  - Entry or checking of motor and encoder data
  - Limit values and I/O configuration
- **Optimize motor:**  
Menu "Commissioning" > "Optimization"  
The Optimization function measures the mechanical drive train using short test signals and adapts the controller parameters to the mechanics installed.
- **Test motor operation:**  
Action bar > "Control panel"  
Test of motor operation using the control panel in jog mode or continuous operation
- **Backup:**  
Menu "Backup and restore"  
Siemens recommends a backup of the drive settings after commissioning.

### More information

For more information about user management and security settings, see the Configuration Manual Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

#### 7.4.2.2 Quick setup

##### Overview

The converter can generally be operated without making additional settings using quick setup. Siemens recommends that quick setup is performed to set the limit values and the I/O configuration to optimally address the target application.

##### Requirement

- The drive system has been configured. The components are wired.
- Web server access is active.

## Description of function

The screenshot displays the Siemens S200 PN web server commissioning interface. The top navigation bar includes the Siemens logo, the drive name 'S200 PN', and user information 'Administrator' and 'English'. Below this, a status bar indicates 'Switching on inhibited - Exit commissioning mode' with warning and error icons. The main content area is divided into a left navigation menu and a main display area. The navigation menu includes 'Drive information', 'Motor', 'Encoder', 'Limits', and 'I/O configuration'. The main display area shows 'Drive information' with a sub-section 'About the drive' containing a table of drive details. A 'Motor' button is located at the bottom right of the main display area. The control bar at the bottom features a 'Cancel' button and a 'Finish commissioning' button.

Converter	
Type	S200 PN
Fieldbus standard	PROFINET
Article number	6SL5510-1BB10-1AF0
Firmware version	V6.3 (06.03.00.00)
Rated power	0.40 kW

Motor	
Motor type	1FL2 synchronous motor
Article number	1FL2102-2AF0x-xHxx

Encoder	
Encoder type	
Article number	See motor

Holding brake	
Brake version	No data
Article number	See motor

- ① Navigation menu for quick setup
- ② Display of the individual quick setup steps
- ③ Alternative navigation
- ④ Control bar to cancel or complete quick setup

## 7.4 Functions and menus

- ✔ Display if changes have been made to the factory settings  
The values entered are valid.
- 👁 Display for checking of the modified values
- 🔥 At least one of the values needs to be modified.  
Mandatory to complete quick setup

Figure 7-4 Quick setup (example)

The most important properties of the converter are configured in the quick setup.

Motor and encoder are directly detected during ramp-up. The data is accepted and shown in steps "Motor" and "Encoder". The data is for information only and cannot be changed during quick setup.

The converter creates a restore point when quick setup is started. The converter saves the changes after every commissioning step. The converter is reset to the restore point if quick setup is canceled.

The web server has a read-only mode for quick verification of the configuration data set.

### Quick Setup Wizard

#### I/O configuration

- "Drive information"  
The step provides information about the converter, motor, encoder and motor holding brake being used.  
The following data can be changed:
  - Drive name  
A specific drive name can be assigned.
- "Motor"  
The data of the motor being used are displayed. It is not possible to configure another motor. The direction of rotation of the motor can be selected.
- "Encoder"  
The data of the encoder being used are displayed. Configuration is not possible.
- "Limits"  
The following data can be configured:
  - Limit values by making an entry in the table  
The table and diagram are linked with one another.
  - Device supply voltage (only available for 400 V variants)
- "I/O configuration"  
In the table, a function can be assigned to an input or output of the terminal. Specified functions can be selected. Do not assign a function to more than one input or output.
- "Summary"  
The summary provides an overview of the configured settings.



### 7.4.2.3 Testing the converter configuration

#### Overview

After the quick setup, the web server allows you to test the converter configuration in jog mode or continuous motion via the control panel.

#### Description of function

To test the configuration, the control panel must be open and the speed setpoint entered.

There are 2 ways of opening the control panel:

- Button "Finish quick setup" > Dialog query with selection option "Open control panel"
- Action bar > "Control panel"

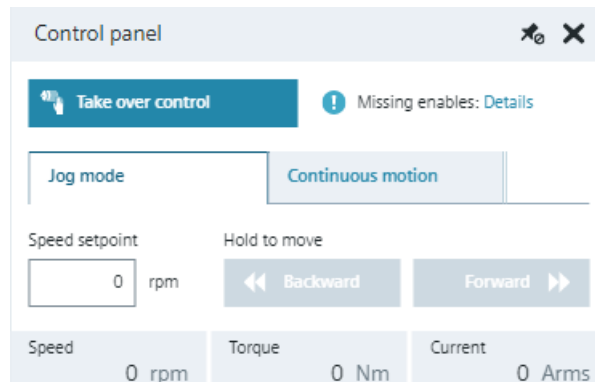


Figure 7-5 Testing the converter configuration via the control panel

#### More information

For more information, see Section "Control panel (Page 217)"

### 7.4.2.4 Optimization

#### Overview

After quick setup has been completed, you can use the function One Button Tuning (OBT) to optimize the converter settings.

With One Button Tuning, the mechanical drive train is measured using short test signals. In this way, the controller parameters are optimally adapted to the existing mechanical system.

## Requirement

To reduce the stress on the mechanical system, the torque limit can be reduced before OBT. After OBT has been completed, the previous value can be set again.

<b>NOTICE</b>
<b>Material damage caused by an impermissible direction of motion of the motor</b>
One Button Tuning runs the motor in both directions. Impermissible directions of motion can damage the machine or installation.
<ul style="list-style-type: none"><li>• If a particular direction of motion of the motor is impermissible, do not carry out One Button Tuning.</li></ul>

### Description of function

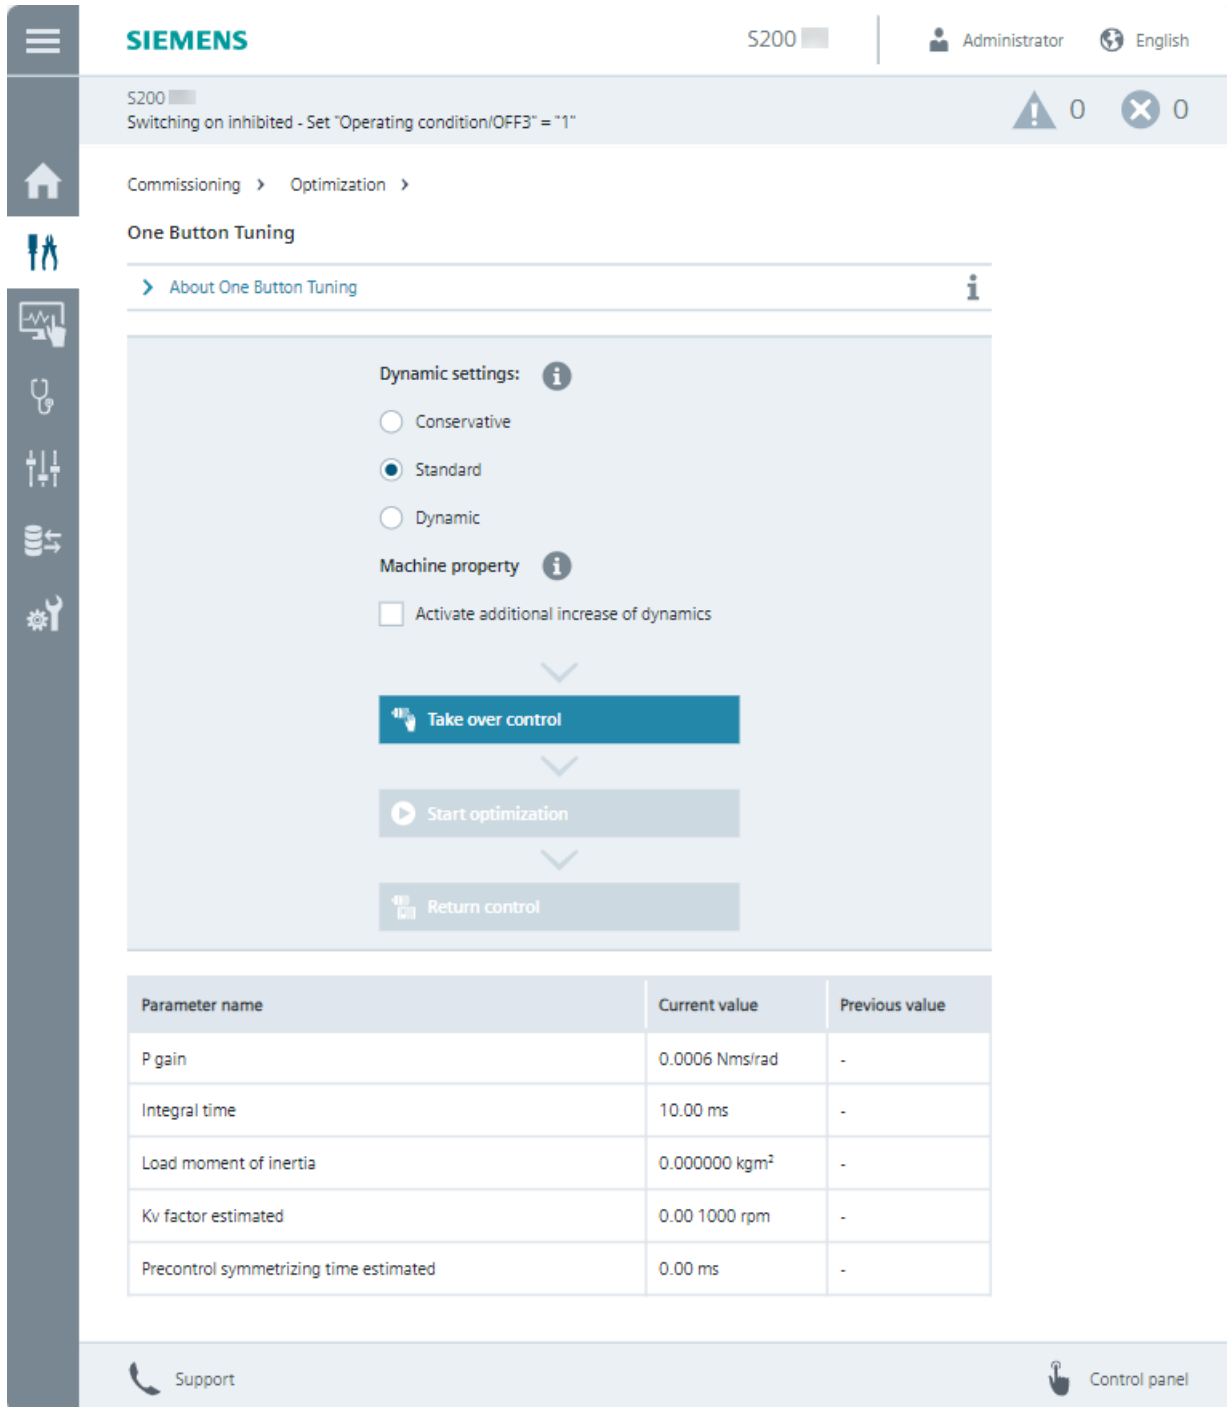


Figure 7-6 One Button Tuning

The optimum controller settings are determined using the following settings:

- "Dynamic settings"
  - Conservative  
60% dynamic response; speed control without torque precontrol
  - Standard  
80% dynamic response; speed control with torque precontrol
  - Dynamic  
100% dynamic response; speed control with fast torque precontrol
- "Machine property"  
The "Activate additional increase of dynamics" option increases the proportional gain of the optimized speed control. The dynamic response is increased. The speed controller becomes faster.  
If the dynamic factor is increased too much, the speed controller may become unstable.
- "Take over control" and "Return control"  
Take over master control before starting to optimize the controller.  
Return master control back to the converter once the controller has been optimized.
- "Start optimization"
  - Enter the angle of rotation (rotation limit) through which the motor and the connected machine are permitted to turn for the required measurements (e.g. 360°) without the mechanical system being damaged. Sensible controller parameters are obtained from an angle > 90°.  
When a negative angle is entered, then the motor moves in the opposite direction.
  - The table shows how the settings have been changed by OBT.

If OBT was not successful, then optimization must be repeated with other settings.

## 7.4.3 Monitoring and operation

### 7.4.3.1 Drive status

#### Overview

Function view "Drive status" shows the current status of the converter.

## Description of function

The screenshot displays the Siemens S200 web server interface for drive status monitoring. The top navigation bar shows 'SIEMENS' and 'S200'. The user is logged in as 'Administrator' in 'English'. A status bar indicates 'Switching on inhibited - Set "Operating condition/OFF3" = "1"'. The main content area is titled 'Monitoring and operation > Drive status >'. It features a list of drive parameters and a trend graph for DC link voltage.

Parameter	Value
Speed setpoint	0.00 rpm
Speed actual value	0.00 rpm
Absolute current value	0.00 Arms
Torque actual value	0.00 Nm
DC link voltage	325.2 V
Active power actual value	0.00 kW
Motor utilization thermal	3.0 %
Thermal converter utilization	0.00 %

The DC link voltage trend graph shows a value of 325.2 V at 10:05:50. The y-axis ranges from -32.8 to 357.7 V, and the x-axis shows time from 10:05:10 to 10:08:10. A 'Pause' button is visible below the graph.

Figure 7-7 Drive status

The drive information displayed is preset in the factory setting, and when required, can be adapted using symbol . If user management is active, the "Edit web server configuration" right is required in order to make changes.

Values are indicated as follows:

- Factory setting: 8 values are displayed
- It is possible to display all values completely

The drive status is displayed as follows:

- : Individual values are continuously displayed
- : Individual values and trend diagrams are continuously displayed

### 7.4.3.2 Inputs/outputs

#### Overview

The function view "Inputs/outputs" shows the status of the digital inputs offered by the converter.

#### Description of function

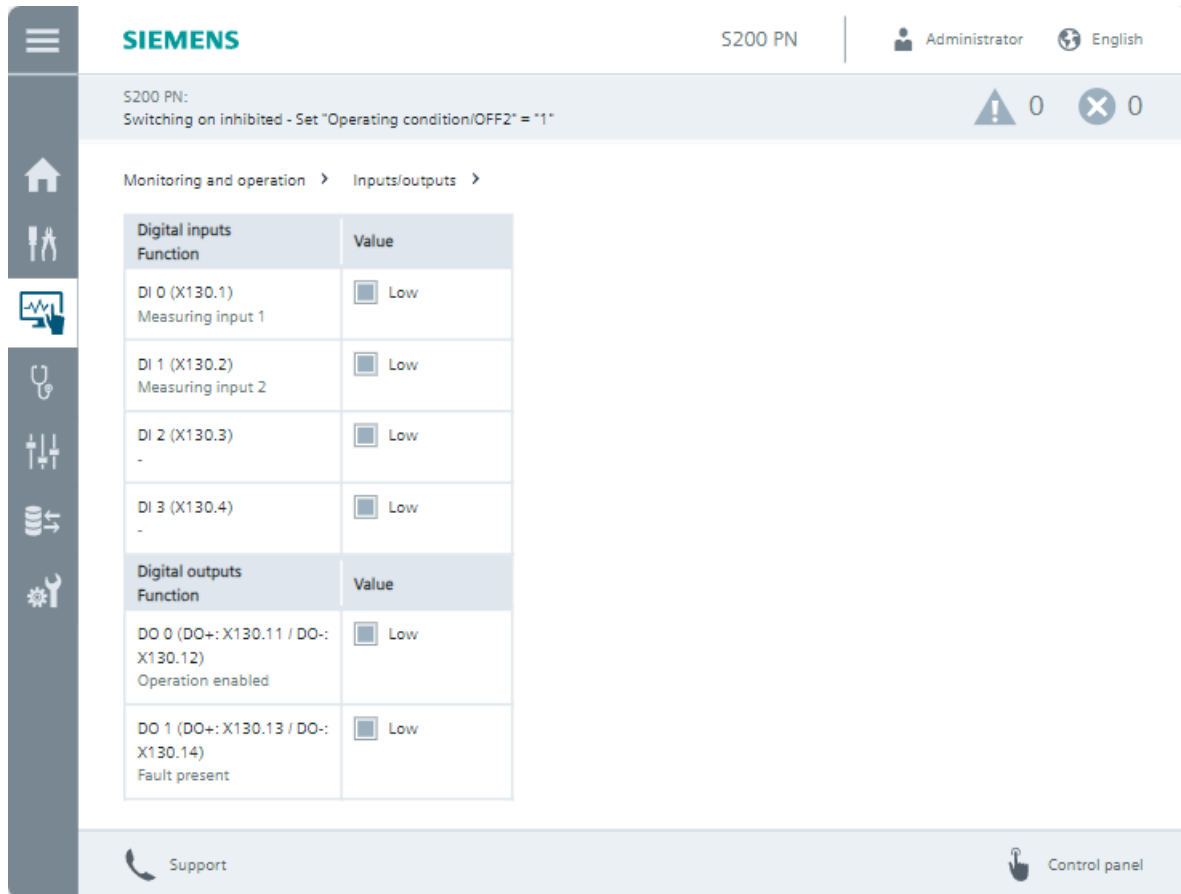


Figure 7-8 Inputs/outputs

### 7.4.4 Diagnostics

#### 7.4.4.1 Messages

#### Overview

The function view "Messages" shows active and historical messages.

## Description of function

With search and filter options, the number of alarms and faults can be restricted. The available filter options can be combined with one another and can be reset at any time.

The message history can be optionally displayed.

The screenshot shows the Siemens S200 web interface. At the top, the Siemens logo is on the left, and 'S200' is in the center. On the right, there are links for 'No user management' and 'English'. Below this, a status bar shows 'S200' and a message 'Switching on inhibited - Carry out first commissioning' with a warning icon and the number '2'. The main content area is titled 'Diagnostics > Messages >'. It features a 'Search and filters' section with a search box containing 'Message text', a 'Filter by date' section with 'YYYY-MM-DD' and 'to' fields, and a 'Message types' dropdown menu set to 'All'. There is also a checkbox for 'Show message history'. Below the search section, the 'Current drive time' is '2020-01-02 07:46:08' and there is an 'Acknowledge faults' button. A table of messages is displayed with columns for Type, Incoming, Class, Message, and Outgoing. Two messages are shown, both with expandable details for Cause and Remedy.

Type	Incoming	Class	Message	Outgoing
Alarm	2020-01-02 07:43:53	18	1637: SI: Safety configuration not protected	-
Alarm	2020-01-02 07:43:59	2	30016: Power unit: Load supply switched off (2)	-

Figure 7-9 Messages

### Selecting messages

Search	Enter a keyword
Filter by date	Select a date or time interval
Message types	Select the message type that should be displayed: <ul style="list-style-type: none"><li>• All</li><li>• Fault</li><li>• Alarm</li></ul>

### Displaying messages

Type	Displaying the message type: <ul style="list-style-type: none"><li>• Alarm</li><li>• Fault</li></ul>
Incoming	Time when the message was received
Class	Assign the message to a message class according to PROFIdrive <ul style="list-style-type: none"><li>• The message number is output on all operating units, e.g. PC.</li></ul>
Message	Specification of the message number with message text
Outgoing	Time when the message went <ul style="list-style-type: none"><li>• Faults are given the status "Outgoing" if the following are true:<ul style="list-style-type: none"><li>– The causes have been eliminated.</li><li>– The message has been acknowledged.</li></ul></li></ul>
>	Selection for more information: <ul style="list-style-type: none"><li>• Description of the message with cause and remedy</li></ul>



### 7.4.4.2 Diagnostic buffer

#### Overview

Function view "Diagnostics buffer" provides information about all system-relevant operations, e.g. commissioning, new ramp-up, generation of a certificate.

#### Description of function

The screenshot displays the Siemens S200 web server interface. At the top, the 'SIEMENS' logo is on the left, and 'S200' is in the center. On the right, the user is identified as 'Administrator' and the language is set to 'English'. Below this, a status bar shows 'Switching on inhibited - Set "Operating condition/OFF3" = "1"' with two warning icons (0 each). The main content area is titled 'Diagnostics > Diagnostics buffer >'. It features a 'Search and filters' section with a search box for 'Event text' and two date range selectors (YYYY-MM-DD to YYYY-MM-DD). Below the search section, the 'Current drive time' is shown as '2020-01-04 16:25:26'. A table lists 11 events with columns for 'No.', 'Date and time', and 'Event text'. At the bottom, there are 'Support' and 'Control panel' buttons.

No. ^	Date and time	Event text
1	2020-02-19 17:01:20	DO 1 retentively saved
2	2020-02-19 17:01:19	Retentive save DO 1 started
3	2020-02-19 17:01:17	Device commissioning activated (0)
4	2020-02-19 17:01:17	Commissioning DO 1 activated (0)
5	2020-02-19 16:58:53	Device commissioning activated (3)
6	2020-02-19 16:58:53	Commissioning DO 1 activated (1)
7	2020-02-19 16:58:52	DO 1 retentively saved
8	2020-02-19 16:58:52	Retentive save DO 1 started
9	2020-02-19 16:43:11	DO 1 retentively saved
10	2020-02-19 16:43:11	Retentive save DO 1 started
11	2020-02-19 16:43:11	DO 1 retentively saved

Figure 7-10 Diagnostic buffer

Reading out the diagnostic buffer facilitates converter diagnostics and supports fault analysis.

The search can be limited by searching for keywords and using the filter function according to date.

The diagnostic buffer is kept when restoring factory settings via menu "Backup and restore".

### 7.4.4.3 Safety Integrated (for S200 PN only)

#### Overview

Function view "Safety Integrated" provides information about the Safety Integrated Functions that have been enabled.

#### Description of function

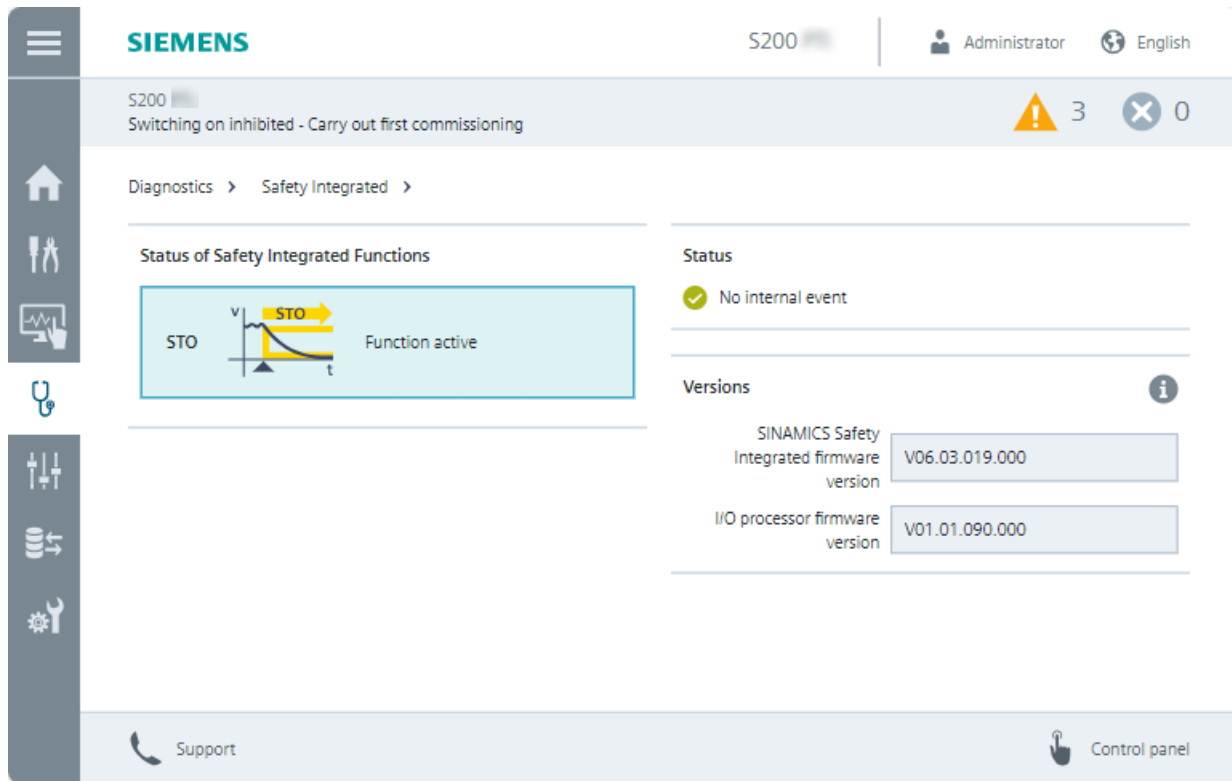


Figure 7-11 Monitoring Safety Integrated Functions

The following content is displayed:

- "Status of Safety Integrated Functions"  
Displays the status of STO
- "Status"  
Displays "Active" if STO is active
- "Versions"  
Displays the safety-relevant software versions of the corresponding components

### 7.4.4.4 Connection overview

#### Overview

Function view "Connection overview" provides information about the connections in the drive system.

#### Description of function

The individual components with IP address and additional details are graphically displayed in the connection overview.

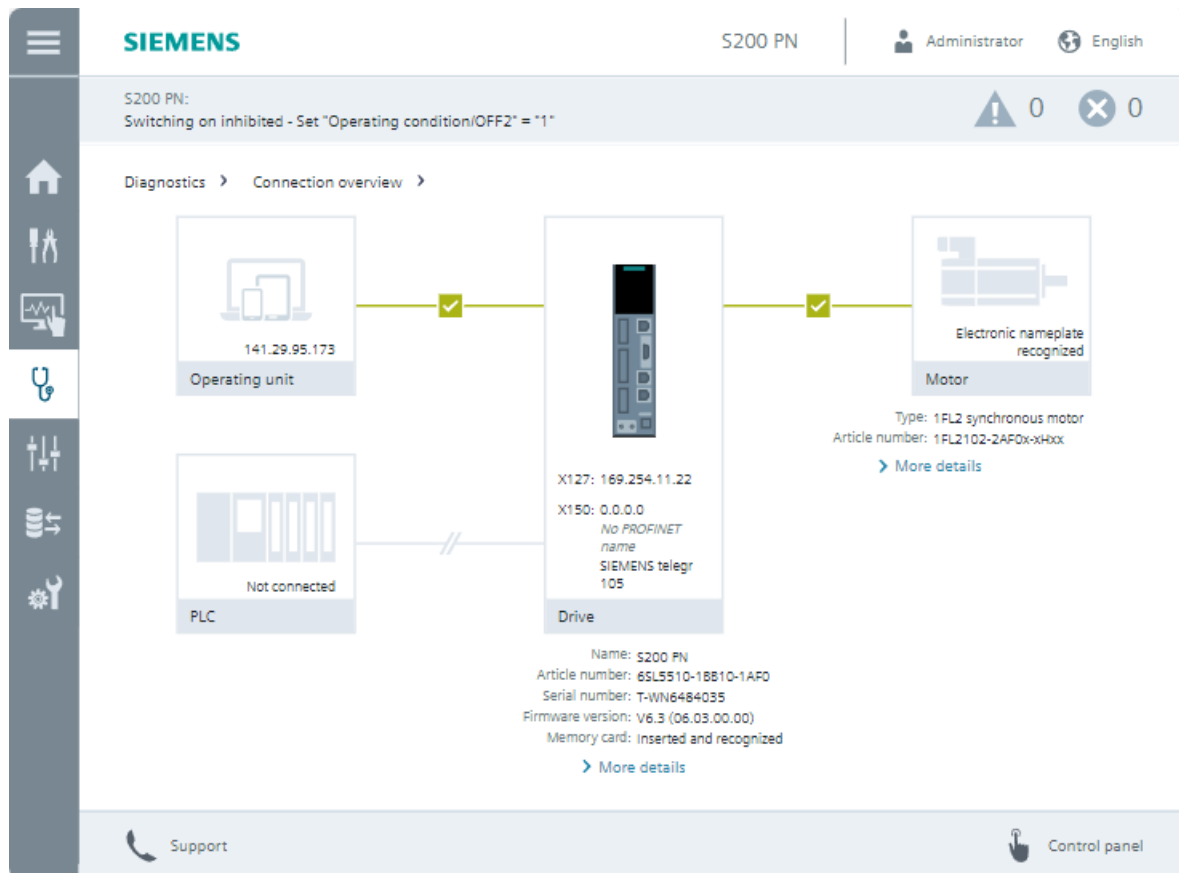


Figure 7-12 Connection overview

### 7.4.4.5 Communication

#### Overview

Function view "Communication" provides information about the activated fieldbus interface.

Description of function

SIEMENS S200 PN Administrator English

S200 PN: Switching on inhibited - Set "Operating condition/OFF2" = "1"

Diagnostics > Communication >

PROFINET IP of Station: 0.0.0.0  
 PROFINET Name of Station: -  
 PN cyclic connection diagnostics: Not connected  
 PROFIdrive PZD telegram selection: SIEMENS telegram 105, PZD-10/10

Receive direction: control > converter

PZD	Designation	Explanation	Value	
1	STW1	Control word 1	0000	hex
2_3	NSOLL_B	Speed setpoint B (32-bit)	0000 0000	hex
4	STW2	Control word 2	0000	hex
5	MOMRED	Torque reduction	0000	hex
6	G1_STW	Encoder 1 control word	0000	hex
7_8	XERR	Position deviation	0000 0000	hex
9_10	KPC	Position controller gain factor	0000 0000	hex

Send direction: converter > control

PZD	Designation	Explanation	Value	
1	ZSW1	Status word 1	0340	hex
2_3	NIST_B	Speed actual value B (32-bit)	0000 0000	hex
4	ZSW2	Status word 2	0010	hex
5	MELDW	Message word	11CF	hex
6	G1_ZSW	Encoder 1 status word	4000	hex
7_8	G1_XIST1	Encoder 1 position actual value 1	0000 0000	hex
9_10	G1_XIST2	Encoder 1 position actual value 2	0000 0000	hex

Support Control panel

Figure 7-13 Communication

The following content is displayed:

- Connection status
- Process data of the set telegram in the send and receive directions.  
The values are shown in the hexadecimal format. The display of individual values is switched between the binary and hex format by clicking on the button to the right of the value.

#### **7.4.4.6 Status word and control word**

##### **Overview**

The function view "Control/status word" provides information about the current status of the sequence control system.

Description of function

The screenshot shows the Siemens S200 web server interface. At the top, it displays 'SIEMENS S200' and user information 'Administrator English'. A status bar indicates 'Switching on inhibited - Set "Operating condition/OFF3" = "1"'. Below this, the breadcrumb 'Diagnostics > Control/ status word >' is visible. Two tables are presented side-by-side:

Parameter	Value	Parameter	Value
Control word sequence control	143A H	Status word sequence control	2250 H
00: ON/OFF1	No	00: Ready for switching on	No
01: Operating condition / OFF2	Yes	01: Ready	No
02: Operating condition / OFF3	No	02: Operation enabled	No
03: Enable operation	Yes	03: Jog active	No
04: Enable ramp-function generator	Yes	04: No coasting active	OFF2 inactive
05: Continue ramp-function generator	Yes	05: No Quick Stop active	OFF3 active
06: Enable speed setpoint	No	06: Switching on inhibited active	Yes
07: Command open brake	No	07: Drive ready	No
10: Master control by PLC	Yes	08: Controller enable	No
12: Enable speed controller	Yes	09: Control requested	Yes
14: Command close brake	No	11: Pulses enabled	No
		12: Motor holding brake control	No
		13: Motor holding brake status	Yes

At the bottom of the interface, there are links for 'Support' and 'Control panel'.

Figure 7-14 Control and status word

The control and status word is indicated by all sequence control states. This also includes states that are not available, which prevent the motor from being switched on and switched off. Diagnostics supports fault analysis.

## 7.4.5 Parameters

### 7.4.5.1 Parameter lists

#### Overview

The parameter list shows all the parameters of the converter. The parameter list allows specific parameters to be changed.

#### Description of function

No.	Parameter	Value	Unit
<input type="checkbox"/>	r2	Switching on inhibited - Carry out first commissioning (35)	
<input type="checkbox"/>	r20	Speed setpoint smoothed	0.0 rpm
<input type="checkbox"/>	r21	Speed actual value smoothed	0.0 rpm
<input type="checkbox"/>	r26	DC link voltage smoothed	2.8 V
<input type="checkbox"/>	r27	Absolute actual current smoothed	0.00 Arms
<input type="checkbox"/>	r31	Actual torque smoothed	0.00 Nm
<input type="checkbox"/>	r32	Active power actual value smoothed	0.00 kW
<input type="checkbox"/>	r34	Motor utilization thermal	0 %



- ① Displays all the parameter of the converter
- ② Creates a user-defined parameter list  
For details, see User-defined parameter list (Page 199).

Figure 7-15 Parameter list

7.4 Functions and menus

The parameter list offers the following options:

- Toggling between two list views
  - Show as "Simple view" and "Advanced view" with parameter numbers
- Managing user-defined parameter lists
  - Create a user-defined parameter lists
  - Copy the selected parameters to a designated user-defined parameter list
  - Import and export user-defined parameter lists
- Searching parameters
  - Search by parameter number or text search within parameter names
- Filtering the parameter list
  - Parameter groups: Only show the parameters that are assigned to a particular function.
  - Parameter types: display and/or setting parameters
- Changing parameter values directly in a parameter list
  - Exception: blocked parameters

p	Setting parameters	Are read/write.
		The setting parameter can only be parameterized in the active commissioning mode. Depending on the parameter, changes are possible in the quick setup.
		The setting parameter can only be parameterized when the user has the appropriate function rights.
r	Display parameters	Can only be read and cannot be edited.
c	Display parameters	Can only be read and cannot be edited.



## 7.4.5.2 User-defined parameter list

### Overview

A user-defined parameter list is a combination of specific parameters from the standard parameter list of the converter. These can be used to configure frequently used user functions, for example.

### Description of function

To create a user-defined parameter list, click  [Create list](#) in the function view "Parameter list".

With the user-defined parameter lists, the web server provides the following functions:

- Creating up to 20 user-defined parameter lists
  - Configuring list properties
    - Name
    - Position or sequence of the tabs
    - Comment
    - Delete list
  - Exporting and importing user-defined parameter lists
    - Export:
      - Export one or several user-defined parameter lists.
      - The web server exports the lists exclusively as a json file.
      - Export files generated by the web server can be imported into a Startdrive project.
    - Import:
      - The list import function in the web server exclusively imports json files.
      - User-defined parameter lists exported via the web server or Startdrive as a json file can be imported into another drive of the same type via the web server.  
Requirement: same drive type and same firmware version
- If values are changed, the data must be saved retentively.

## 7.4.6 Backup and restore

### 7.4.6.1 Overview

#### Overview

With "Backup and restore" you can back up parameters and other settings and restore the settings again if necessary.

Description of function

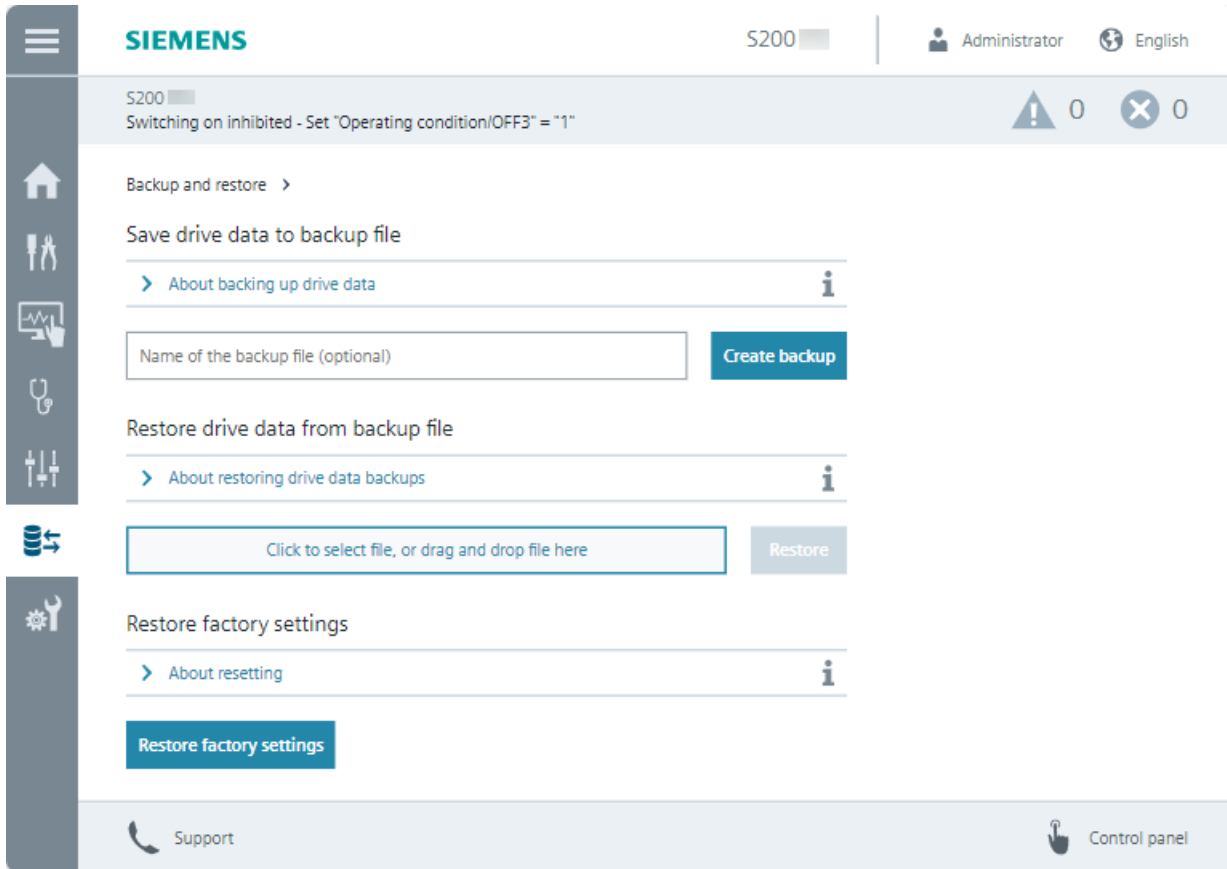


Figure 7-16 Backup and restore

The following functions are available to back up and restore data and settings:

- Save drive data to backup file  
 Back up the settings to a file after commissioning.  
 The drive data are encrypted in the backup file if function "Drive data encryption" is activated in the Security Wizard.
- Restore drive data from backup file  
 When replacing a device or for series commissioning, load the backed-up parameter settings to the converter.  
 To restore drive data from an encrypted backup file, the previously defined password for function "Drive data encryption" will be requested. For more details, see Section "Restoring data from an encrypted backup data (Page 204)".
- Restore factory settings  
 The user-specific parameterization of the converter is deleted.  
 The following settings are retained after you restore factory settings via the web server:
  - Settings of the communication interfaces
  - UMAC and security data

To restore all settings, an SD card is required. For more details, see section "Reset of all user-defined settings to the factory setting via an SD card (Page 587)"

### 7.4.6.2 Save drive data to backup file

#### Overview

Run the "Save drive data to backup file" function in the following situations:

- After commissioning
- Before drive data is reset using function "Restore factory settings" in the web server  
You can find more information in Chapter "Restore factory settings (Page 207)".
- Before drive data is completely reset  
You can find more information in Chapter "Reset of all user-defined settings to the factory setting via an SD card (Page 587)".
- Before a firmware upgrade/downgrade

#### Requirement

None

#### Procedure

1. Call the "Backup and restore" menu.
2. Click on the "Save drive data to backup file" button.  
Optional: Assign a name for the backup file.  
The drive data is backed up. The backup file is saved in the download folder of your operating unit.

#### Result

- The drive data are not encrypted in the backup file if you deactivated function "Drive data encryption" in the Security Wizard.
- The drive data are encrypted in the backup file if function "Drive data encryption" is activated in the Security Wizard and you have configured a drive password.  
Recommendation:
  - Store the password in a secure location, for example, in a password manager. Ensure that you can access the password if needed.

### 7.4.6.3 Scope of the backup

#### Overview

The "Back up parameters" function backs up all converter settings to one file.

## Description

The converter backs up the following data and settings:

- Communication interface settings
- Parameters (including safety parameters)
- Security settings
- UMAC data
- Web server settings:
  - Modified settings in window "Drive status" on the home page
  - User-defined parameter lists
  - Support settings
  - Save changes manually/automatically
- Displayed parameters (display standard parameters/all parameters):
  - Standard parameters
  - View all parameters
  - Display brightness

The converter firmware files are not backed up.

### 7.4.6.4 Restoring data from an unencrypted backup data

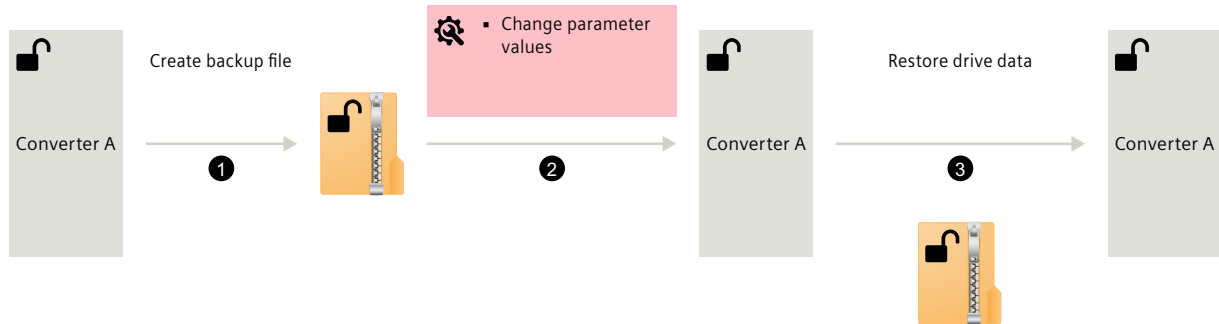
#### Requirement

- You have an unencrypted backup file of the converter on your operating unit.
- Rights required for active user management (UMAC):
  - "Create backup or load drive data to Startdrive"

#### Procedure


1. Call the "Backup and restore" menu.
2. Navigate to the "Restore drive data from backup file" area.
3. Use the "Click to select file, or drag and drop file here" button to select the backup file.
4. To restore the drive data, proceed as described below depending on the specific application. This step is included in the following diagrams as step 3.

- **Scenario 1:** A drive password has not been configured as function "Drive data encryption" has not been activated.



- Click on "Restore".  
The drive data are loaded into the converter from the backup file.  
As a consequence, the status of the settings at the instant of the backup are restored.

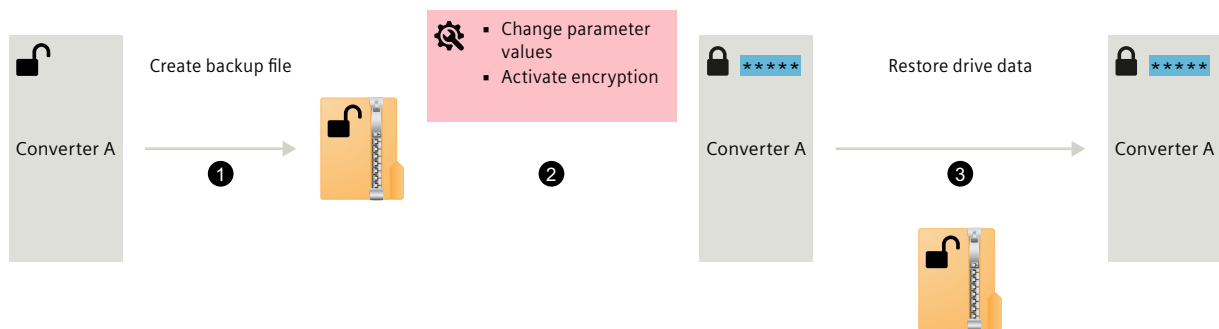- **Scenario 2:** A drive password is configured after the backup file has been created.



\*\*\*\*\*: Configured drive password

- Click on "Restore".  
A dialog to enter the password opens.
- Enter the drive password.  
The drive data are loaded into the converter from the backup file.  
As a consequence, the status of the settings at the instant of the backup are restored.  
Function "Drive data encryption" is activated. The drive password configured in step 2 is still effective in the converter after data has been restored.

### More information

- Series commissioning:  
For series commissioning, save the drive data of a source converter and transfer this data to one or several target converters. You can find more information in Chapter "Series commissioning (Page 315)".
- Replacing the converter without memory card:  
If a converter has to be replaced, restore the drive data of a defective converter via the web server. You can find more information in Chapter "Replacing the converter (Page 590)".

#### 7.4.6.5 Restoring data from an encrypted backup data

##### Requirement

- You have an encrypted backup file of the converter on your operating unit.
- Configured drive password:
  - You know the originally configured drive password with which the drive data in the backup file were encrypted.
  - You know the currently configured drive password.  
This is only applicable if the currently configured drive password deviates from the originally configured drive password, with which the drive data in the backup file were encrypted.
- Rights required for active user management (UMAC):
  - "Create backup or load drive data to Startdrive"

---

##### Note

##### Lost password

The following restrictions apply if the password is lost:

- Drive data encryption cannot be deactivated.
- The drive data cannot be restored from an encrypted backup file.

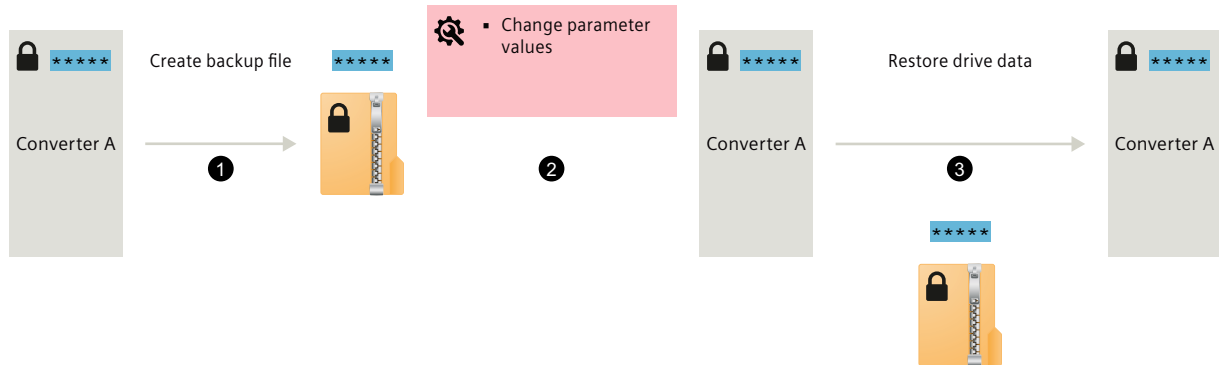
Recommendation:

- Store the password in a secure location, for example, in a password manager. Ensure that you can access the password if needed.
- 

##### Procedure

1. Call the "Backup and restore" menu.
2. Navigate to the "Restore drive data from backup file" area.
3. Use the "Click to select file, or drag and drop file here" button to select the backup file.
4. To restore the drive data, proceed as described below depending on the specific application. This step is included in the following diagrams as step 3.


- **Scenario 1:** A drive password is configured. The drive data in the backup file were encrypted using this password.



\*\*\*\*\*: Originally configured drive password

- Click on "Restore".  
A dialog to enter the password opens.
- Enter the drive password.  
The drive data are loaded into the converter from the backup file.  
As a consequence, the status of the settings at the instant of the backup are restored.  
Function "Drive data encryption" is activated. The drive password configured in step 2 is still effective in the converter after data has been restored.

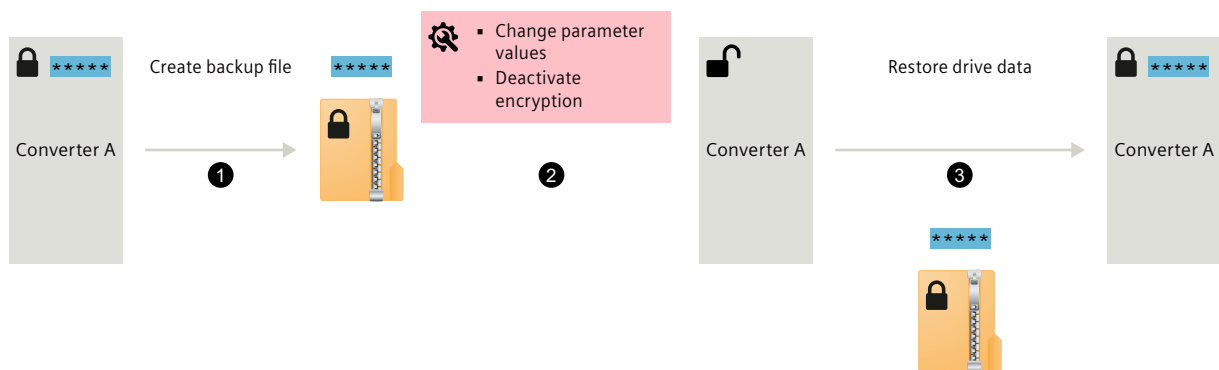
- **Scenario 2:** A drive password is configured. The drive data in the backup file were encrypted using this password. Function "Drive data encryption" is deactivated after creating the backup file.



\*\*\*\*\*: Originally configured drive password

- Click on "Restore".  
A dialog to enter the password opens.
- Enter the drive password.  
The drive data are loaded into the converter from the backup file.  
As a consequence, the status of the settings at the instant of the backup are restored.  
Function "Drive data encryption" is activated. The originally configured drive password is applied.

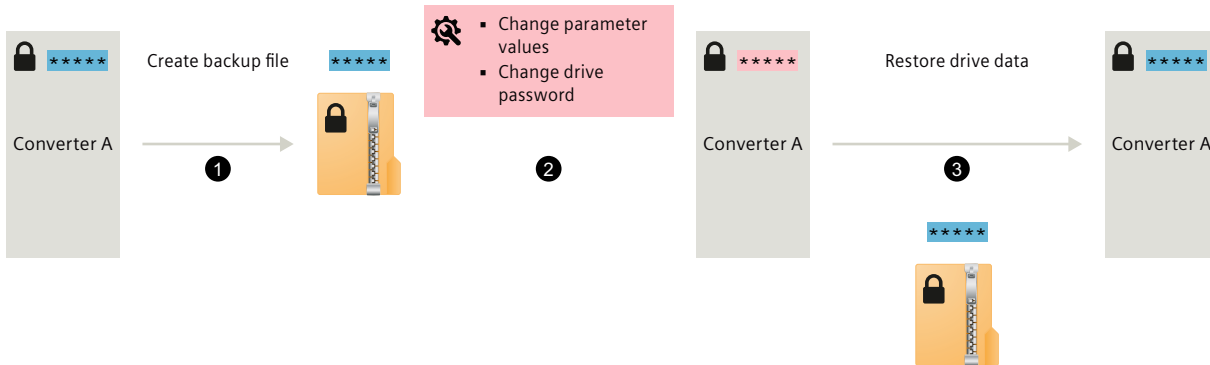
- **Scenario 3:** The originally configured drive password is modified.



\*\*\*\*\*: Originally configured drive password  
 \*\*\*\*\*: Subsequently changed drive password

- Click on "Restore".  
A dialog to enter the password opens.
- Enter the drive password configured in step 2.  
The drive password configured in this step differs from the drive password with which the drive data in the backup file were encrypted.  
A dialog to enter the password opens.
- Enter the drive password that was used to encrypt the drive data in the backup file.  
The drive data are loaded into the converter from the backup file.  
As a consequence, the status of the settings at the instant of the backup are restored.  
Function "Drive data encryption" is activated. The originally configured drive password is applied. The drive password configured in step 2 is then overwritten.

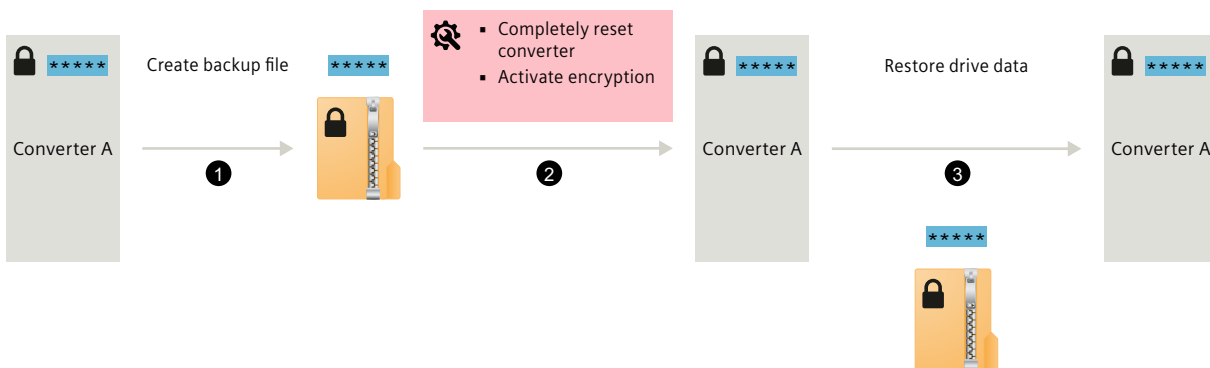- **Scenario 4:** Before restoring, the converter is completely reset to the factory settings and a drive password is configured. More information about the complete reset is provided in Section "Reset of all user-defined settings to the factory setting via an SD card (Page 587)".



\*\*\*\*\*: Originally configured drive password

- Click on "Restore".  
A dialog to enter the password opens.



- Enter the drive password configured in step 2.  
The drive password configured in this step corresponds to the drive password with which the drive data in the backup file were encrypted.  
A dialog to enter the password opens.
- Enter the drive password that was used to encrypt the drive data in the backup file.  
The drive data are loaded into the converter from the backup file.  
As a consequence, the status of the settings at the instant of the backup are restored.  
Function "Drive data encryption" is activated. The originally configured drive password is applied.

### 7.4.6.6 Restore factory settings

#### Overview

The reset to factory settings with the web server deletes the user-specific parameterization of the converter, for example the motor data.

The following data are retained when the factory settings are restored:

- Communication interface settings
- Security settings (including UMAC)
- Language setting
- Date and time

In the following cases it may be necessary to restore the converter to factory settings:

- If the motor is changed
- If there is uncertainty regarding the previous parameterization and/or the previous use of the converter

#### Requirement

If User Management & Access Control is activated, you will need the following function rights:

- Edit device configuration or drive applications

#### Procedure

1. Call the "Backup and restore" menu.
2. Click the "Restore factory settings" button.
3. Acknowledge the confirmation prompt.

The converter is reset and then restarted.

#### More information

For a full reset of the converter, proceed as described in Chapter "Reset of all user-defined settings to the factory setting via an SD card (Page 587)".

## 7.4.7 System

### 7.4.7.1 Settings

#### Overview

The function view "Settings" offers basic settings for the web server and the converter.

#### Requirement

- To edit the web server settings you will need the "Edit web server configuration" right.
- To edit the drive settings you will need the "Edit device configuration or drive applications" right.

#### Description of function

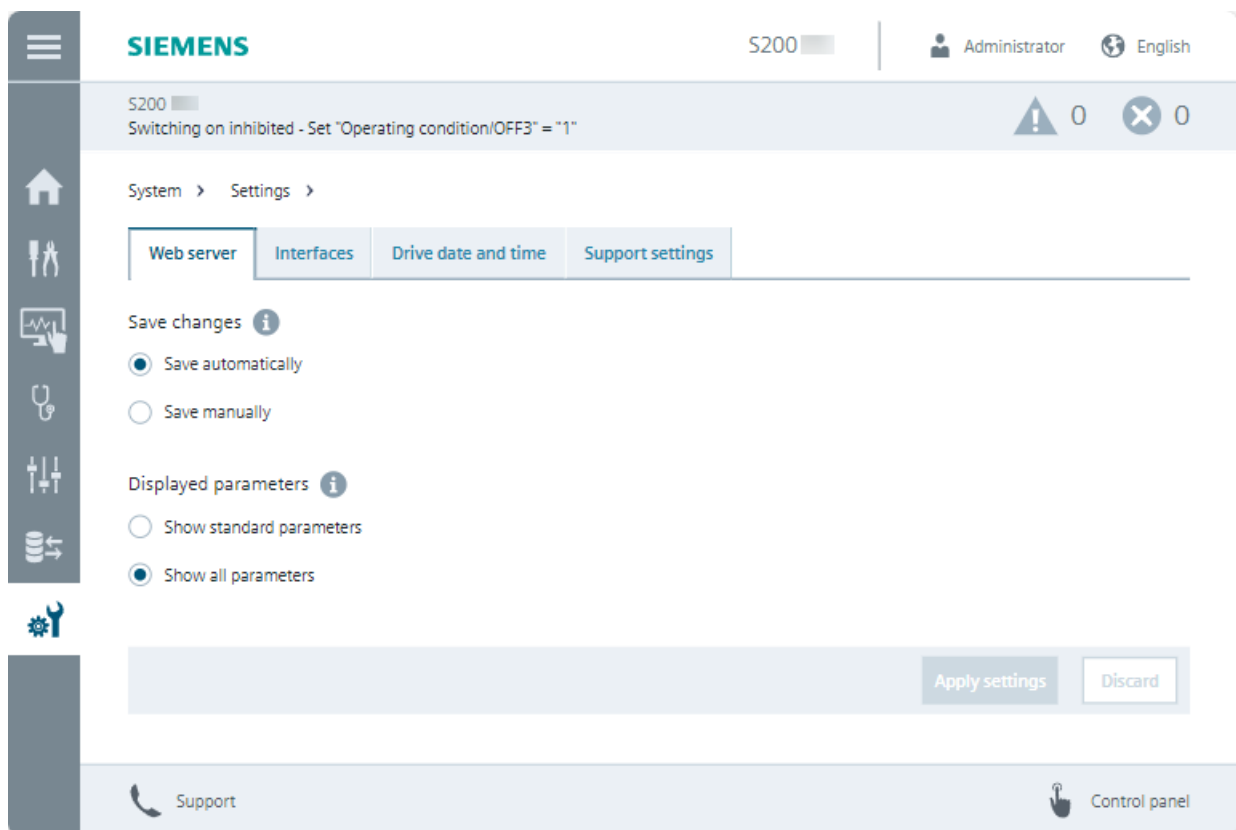


Figure 7-17 Web server system setting

#### Web server

Under "Web server", the web server offers options for saving changes and displaying parameters.

**Interfaces**

Under "Interfaces", the web server provides information about the status and the settings of the interfaces of the converter.

**Drive date and time**

Under "Drive date and time", the web server provides options for setting the date format and for obtaining the date, time and time zone of the converter.

**Support settings**

Under "Support settings", the web server provides the option to store additional support and hotline data. The web server displays these data in the function view "Support".

**7.4.7.2 User management****Overview**

In "User management" you manage users and configure their roles and rights for accessing the converter.

**Requirement**

- You activated user management (UMAC) in Security Wizard at the step "Configure security settings (Page 174)" during first commissioning.
- You are logged into the web server and have the necessary rights to manage users.

Description of function

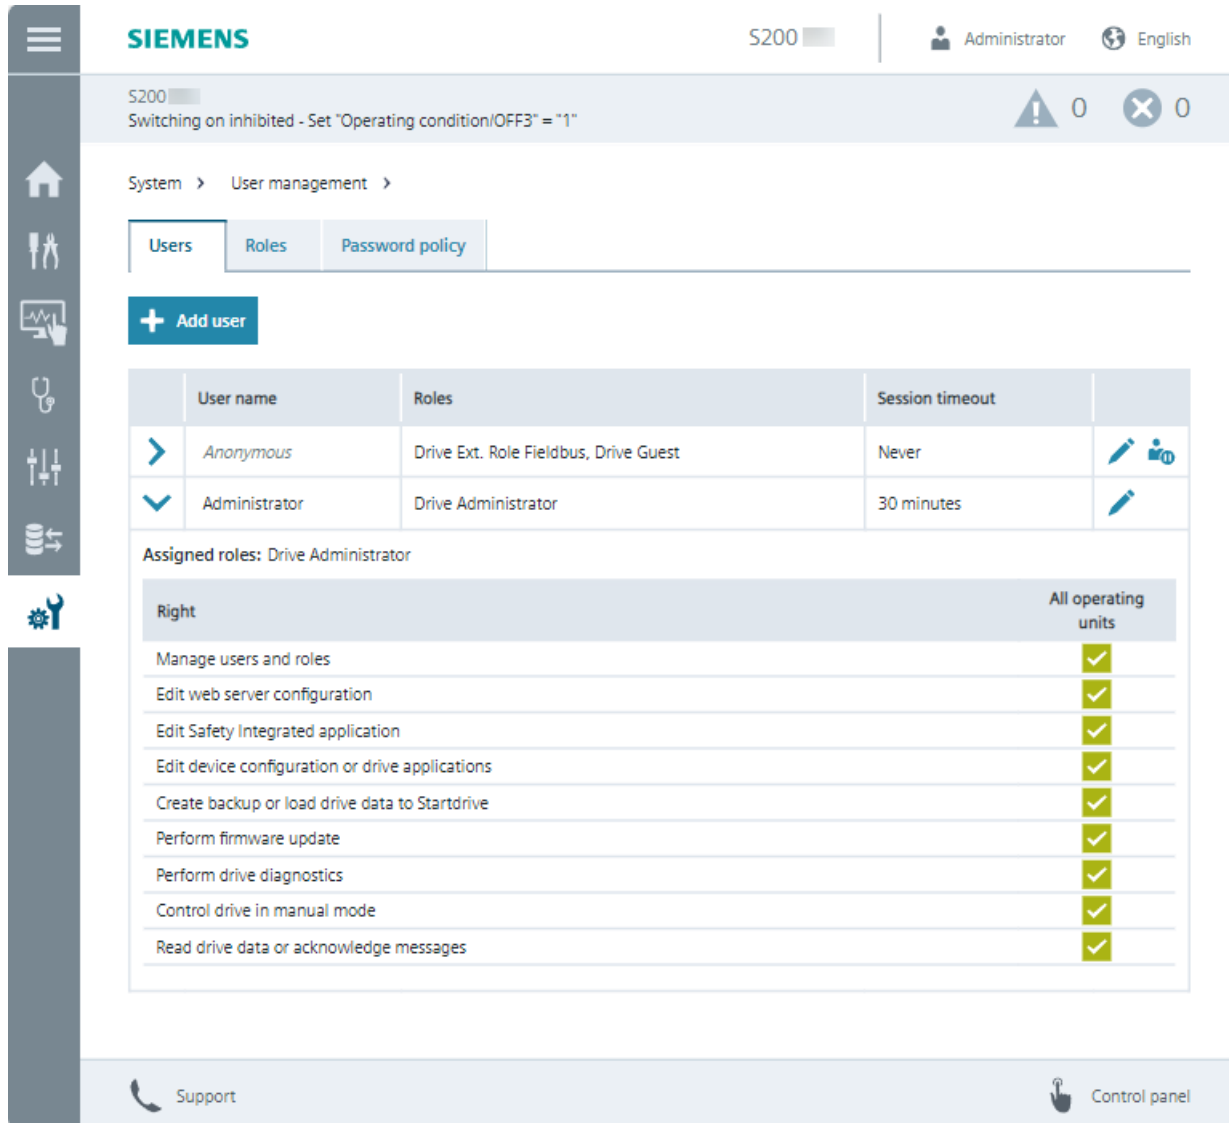


Figure 7-18 User management

**Users**

Under "Users", the web server provides a summary of the created users and offers the following functions:

- Create new user accounts
- Change existing user accounts
- Activate or deactivate user accounts

Roles are assigned to give users read or write access to certain functions.

**Roles**

Under "Roles", the web server provides a summary of the existing roles and the assigned rights.

**Password policy**

Under "Password policy", you specify the requirements a password must meet. You define the password complexity and the time to password expiry (if any).

**More information**

More detailed information on user management and security settings is provided in Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

**7.4.7.3 Protection & Security****Overview**

In "Protection & Security", you configure basic security settings using the Security Wizard and the tables it contains.

**Requirement**

- You activated the security settings during first commissioning.
- You are logged into the web server and have the necessary rights to edit drive data.

## Description of function

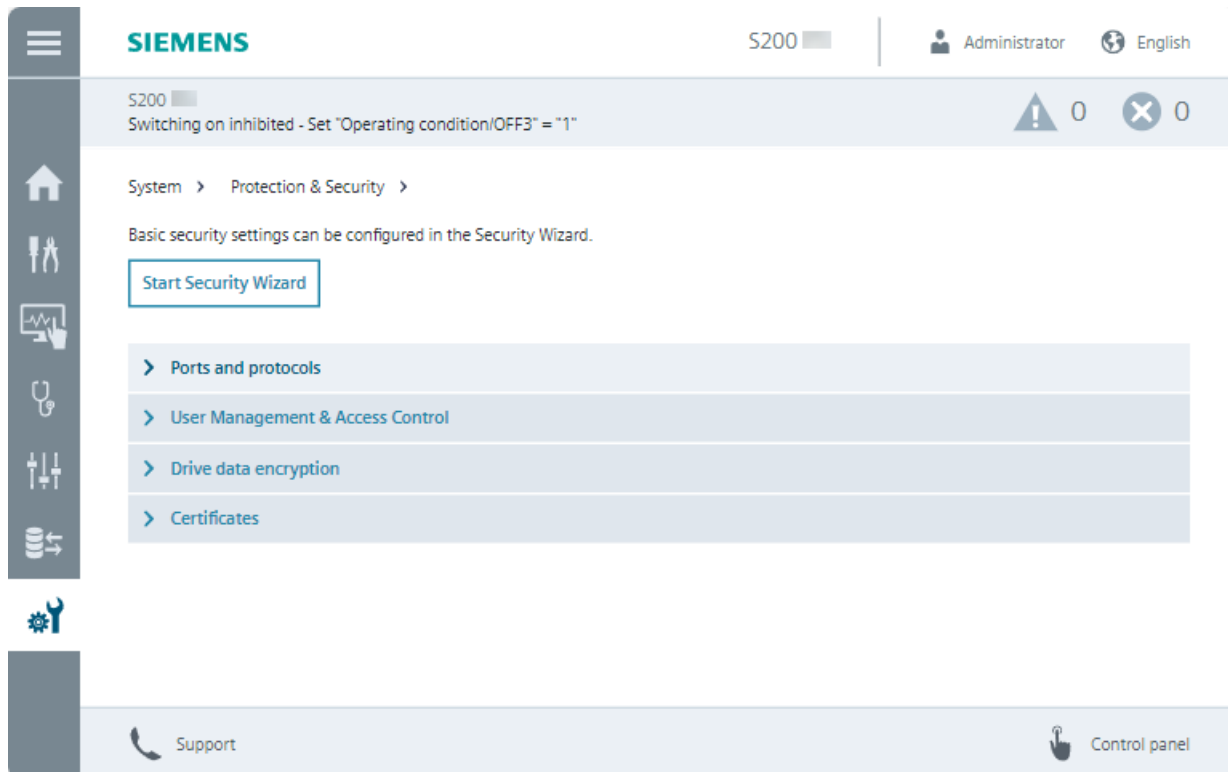


Figure 7-19 Protection &amp; Security

**Start Security Wizard**

In the Security Wizard, you configure the most important security settings for the converter. They include User Management & Access Control and web server activation.

**Ports and protocols**

The web server provides an overview of the available ports and protocols and their status. This is where you activate or deactivate the communication interfaces.

**User Management & Access Control**

The web server provides an overview of the settings in user management.

**Drive data encryption**

The web server shows whether the function of drive data encryption is enabled.

## Certificates

The necessary certificate files are included in the firmware files of the converter. The web server provides an overview of the following certificates used:

- **HTTPS certificate:**  
Generated automatically when the web server is called for the first time.  
The HTTPS certificate is classified as not trusted when the web server is called for the first time. The browser establishes a non-secure HTTPS connection to the web server. The browser flags the non-secure connection with a security warning. The next time the web server is called, the HTTPS is classified as trusted if it is signed by the root certificate.
- **Root certificate:**  
Needed in order for the HTTPS certificate to be signed by a trusted root certification authority. If the root certificate has been imported into the certificate store of the operating unit, the HTTPS certificate will be signed when the web server is called. The browser then classifies the signed HTTPS certificate as valid and establishes a secure HTTPS connection to the web server.

Use "Download certificate to operating panel" to download a certificate to the operating unit. Please keep and install the downloaded certificates in the operating unit.

## More information

More detailed information on configuring secure communication is provided in Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

### 7.4.7.4 Licenses

#### Overview

You must purchase licenses for supplementary functions and options.

Use the function view "Licenses" to manage the licenses for drive functions and options.

#### Requirement

- You are logged into the web server and have the necessary rights to edit drive data.
- The operating panel is connected online with the drive.

## Description of function

The screenshot shows the Siemens S200 web server interface. At the top, the status bar indicates 'S200' and 'Switching on inhibited - Set "Operating condition/OFF3" = "1"'. The user is logged in as 'Administrator' in 'English'. The main content area is titled 'System > Licenses >' and contains two sections:

- Trial License mode and licenses:** This section displays the current license status as 'Licenses OK' and 'System response: Ready for operation'. The trial period is 'Trial License mode not active'. There is a field for the 'Serial number of the memory card:' with a file upload icon. Buttons include 'Activate Trial License mode', 'Load license file into the converter', and 'Store license file here or click'.
- Function that requires a license:** A table with columns: 'Function that requires a license', 'Existing/required licenses', 'License status', and 'Remaining operating time'. Below the table, it states: 'The actual configuration does not include functions requiring a license.'
- Save Certificates of License (eCoL) archive:** This section has a sub-section 'Certificates of License (eCoL)' with an input field for 'Archive name (optional)' and a 'Save eCoL archive' button.

At the bottom, there are links for 'Support' and 'Control panel'.

Figure 7-20 Licenses

The function view "Licenses" offers the following functions:

- Display the installed functions requiring licenses
- Read and copy the serial number of the SD card inserted into the converter
- Load and activate purchased licenses

#### Load and activate licenses

Under "Trial License mode and licenses", you upload license files created with the Web License Manager.

In Trial License mode, you can try out functions for a specified period.

#### Using functions/options requiring a license

The web server provides an overview of the options that require licensing and their license status.



### Certificates of License (eCoL)

Under "Certificates of License (eCoL)", you load purchased licenses directly from an SD card into the file system of the operating unit.

## 7.4.7.5 Firmware update

### Overview

You can perform a firmware update in the web server:

- For an upgrade, the converter and web server settings are retained.
- For a downgrade, the converter and web server are reset to factory settings. All user-defined settings are reset to the factory settings, including:
  - Parameterization of the converter
  - Activation and settings of User Management & Access Control
  - "IP configuration" and "Device name" communication settings of the service interface (X127)
  - Self-generated certificates
  - User-defined parameter lists in the web server

### Requirement

- The operating unit is connected to the converter's web server.
- An empty SD card is inserted into the card slot of the converter before starting the firmware update for storing the user data temporarily.  
Note: The SD card must be inserted when the converter is switched off.
- The converter is in servo-off state.

### Description of function

This function view "Firmware update" displays the current version of the firmware and of the web server.

To copy a different firmware version to the converter, load the ZIP file containing the firmware from the file system of the operating panel.

## 7.4.7.6 About web server

### Overview

"About web server" contains information about the web server and links to additional information.

## Description of function

Under "Versions" you can see the revision levels of the web server and the loaded firmware.

Under "Third-party software" there is a link to information about any third-party software used. The license conditions are loaded to the operating panel in the file "READ\_OSS.ZIP". You can display the HTML file included in the ZIP file using your browser.

There are more links to information about:

- Cookie policies
- Industrial Cybersecurity
- Privacy policy

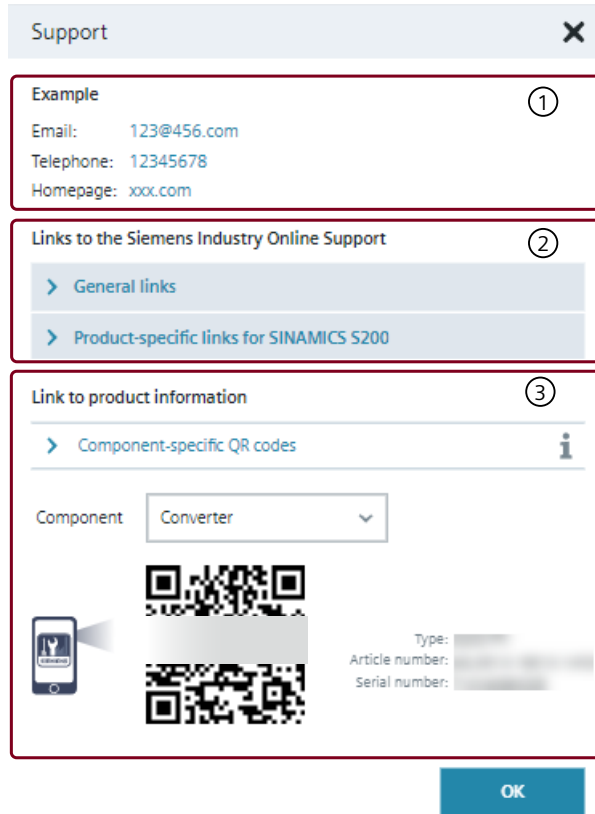
## 7.4.8 Support

### Overview

The footer of the web server contains a support dialog.

## Description of function

The support dialog contains links to additional information for the converter.



- ① Displays additional support and hotline data  
For more information about configuration, see Chapter "Settings (Page 208)".
- ② Displays the links to product support websites
- ③ Displays QR codes of online support pages for individual components

Figure 7-21 Support information

## 7.4.9 Control panel

### Overview

The control panel moves the motor using the operating unit, bypassing the higher-level controller, for example to test the converter settings after commissioning.

## Requirement

**⚠ WARNING**

**Unexpected motor movement through incorrect operation**

If the control panel is active, the safety shutdowns of the higher-level controller have no effect. The "Stop with space bar" function is not guaranteed in all operating states. Incorrect operation by untrained personnel may result in unexpected motor movement which can cause death or serious injuries.

- Only use the control panel for commissioning, diagnostics and service purposes.
- Only use the control panel if you are trained and authorized accordingly.
- Install an EMERGENCY STOP for the drive which is independent of the higher-level controller.

## Description of function

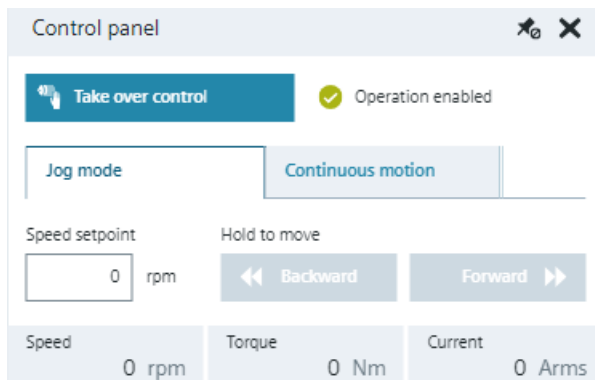


Figure 7-22 Control panel

The "Take over control" dialog deactivates the signals of the higher-level controller and switches the source for enables and the setpoint value to the control panel.

### Note

#### Drive responds immediately

Although all enable signals are removed before returning the master control, the setpoints and commands still come from the original parameterized sources after the master control is returned.

The control panel offers the following operating modes to move the motor:

- Jog mode moves the motor while the direction buttons are pressed.
- Continuous motion starts the motor when a direction button is pressed.

# Commissioning (Startdrive)

## 8.1 Introduction

### Overview

You configure devices and commission your converter in the Startdrive commissioning tool. Further information about the Startdrive commissioning tool can be found in the information system of the TIA Portal.

## 8.2 Requirements for commissioning

### Requirements

- TIA Portal version V19 or higher is installed on your operating unit.
- Startdrive version V19 or higher is installed on your operating unit. You will find the download page at the following link (<https://support.industry.siemens.com/cs/ww/en/ps/13438/dl>).
- Firmware version V6.3 or higher is installed in the converter.
- You have all of the required licenses to use the TIA Portal without any restrictions.

## 8.3 Basics

### 8.3.1 Communication interfaces

#### Overview

The following interfaces are available for accessing the converter:

Interface	Information
Service interface X127	The default access to Startdrive is via the service interface X127.
	Ethernet interface X127 is intended for commissioning and diagnostics, which means that it must always be accessible.
	Defaults: <ul style="list-style-type: none"> <li>• IP address: 169.254.11.22</li> <li>• Subnet mask: 255.255.0.0</li> <li>• Connection type: HTTPS</li> </ul>
	Restrictions: <ul style="list-style-type: none"> <li>• Only local access is allowed.</li> <li>• No networking or only local networking in a closed and locked electrical cabinet is permissible.</li> <li>• For remote access to the electrical cabinet, you must apply additional security measures to prevent misuse through sabotage, data manipulation by unqualified persons and interception of confidential data.</li> </ul>
PROFINET interface X150	Access using mobile end devices: <ul style="list-style-type: none"> <li>• If you carry out commissioning or diagnostics using a mobile end device such as a smartphone or tablet, you may temporarily connect the service interface X127 to an external WLAN access point.</li> </ul>
	Defaults (offline): <ul style="list-style-type: none"> <li>• IP address: 0.0.0.0</li> <li>• Subnet mask: 0.0.0.0</li> </ul>
	Requirements: <ul style="list-style-type: none"> <li>• The converter and your operating unit must be located in the same subnet to ensure an effective online connection.</li> <li>• Before you can go online on a converter via PROFINET, you must assign the PROFINET interface of the converter a suitable IP address.</li> <li>• The IP addresses of the service interface X127 and the PROFINET interface X150 must not be in the same subnet.</li> </ul>

## 8.3.2 Protected communication

### Description

If the Startdrive project and the converter are unprotected, access is possible via both interfaces. This enables unrestricted access from the project or a higher-level controller to the converter data.

Non-authorized users can manipulate the converter data. To avoid the risk of data manipulation, Siemens recommends that you protect access to the project and the converter.

Detailed information about security settings is provided in Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## 8.3.3 User administration and security

### Overview

Startdrive provides the possibility to use user management and access control (UMAC) for projects. This allows you to create and manage user accounts and roles in your project. The roles bundle different access rights for the project. Different users can be granted different access rights to functions. Once the project protection has been activated, the project can only be opened and edited by authorized users.

### Requirement

- A project has been created or an existing project is open.



## Description of function

You can define the following settings through the "Security settings" entry in the project tree.

- **Project protection**  
With the help of the user administration you can activate project protection for Startdrive projects.  
As soon as you specify a project administrator, your project will be protected. Users can then only access the project in Startdrive by logging in. The drive itself is also protected. In this case, you must always log in to access the drive online.  
Activated project protection cannot be canceled. Activated drive protection (runtime) can only be deactivated by completely restoring the factory settings (using an SD Card).
- **Users and roles**  
You can create local and global user accounts in the user administration and specify the general roles and rights for these users.  
The following rules apply when you create user accounts:

Setting	Number
Maximum number of roles	In addition to the system-defined roles, you can create 20 user-defined roles.
Maximum number of user accounts	25 (excluding "Anonymous" user)
Maximum assignable roles to a user account	10
Role names (maximum number of characters)	32
User account name (maximum number of characters)	100
Maximum password length (maximum number of characters)	120

Each user requires function rights to access protected drive data. These function rights are summarized in roles and define which data and functions the respective user can access. Each user can be assigned multiple system-defined roles. In addition, user-specific roles can also be created and assigned. This is done by a user who has the function right "Manage users and roles".

In regard to function rights, a distinction must be made between two groups:

- **Engineering rights**  
These always refer to a protected Startdrive project (UMAC for the project is enabled). However, these rights are also checked when accessing a protected drive.
- **Runtime rights**  
These always refer to a protected device accessed in online mode (UMAC for the drive is enabled).  
SINAMICS Startdrive and web server use the same runtime rights.

## More information

For more information about UMAC, see the information system of the TIA Portal.

## 8.3.4 Loading data from the drive into the project

### Overview


If you change the configuration of a converter in the online mode, then the configuration deviates from the data in the Startdrive project. To update project data, load the drive data from the converter into the project.

### Requirement

- A project with a matching drive is created and is open in Startdrive.
- The converter and SIMATIC S7 controller are in offline mode.
- For activated user management (UMAC):  
The function rights for editing drive data are activated for your user account.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

Proceed as follows to load data from the drive into your project:

1. Click the  icon in the toolbar.  
The following dialog box opens. Establish an online connection to the required drive in the dialog box.

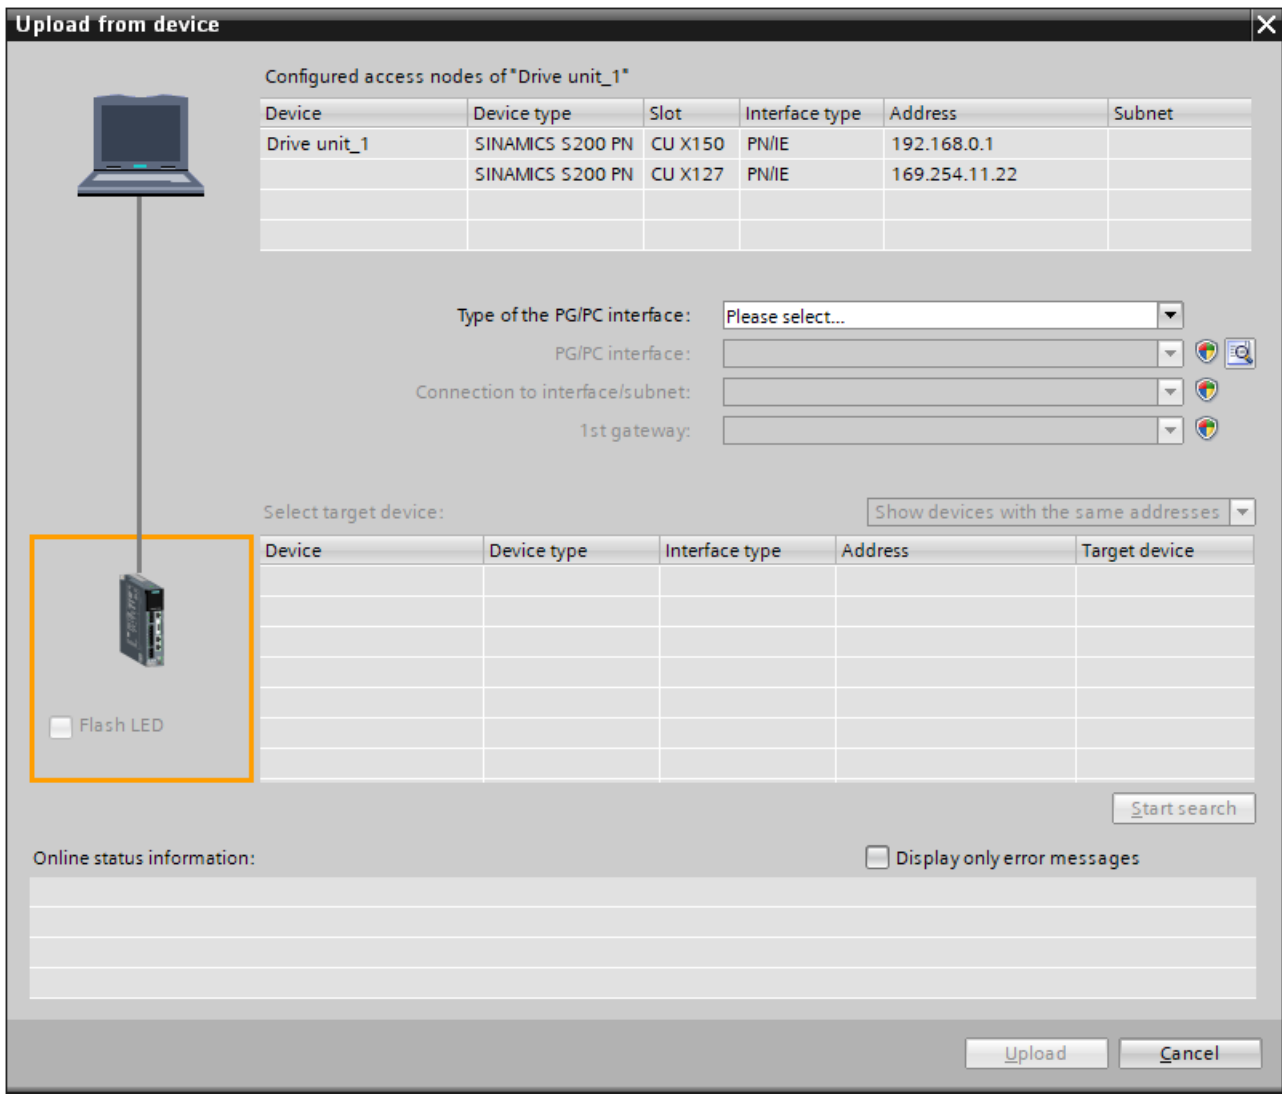


Figure 8-1 Uploading data from the device

2. Check the messages in the "Online status information" area.  
As soon as uploading becomes possible, the "Upload" button is enabled.
3. Click the "Upload" button.  
The data are loaded from the drive into the project. The drive data are saved with the project.

### 8.3.5 Loading project data into the drive

#### Overview


Load the data from your Startdrive project into a drive.

#### Requirement

- A project has been created.
- A drive has been created and completely configured in the project.
- Optional: There is an active online connection between the converter and operating unit.
- For activated user management (UMAC):  
The function rights for editing and loading drive data are activated for the user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

#### Procedure

Proceed as follows to load the project data into your converter:

1. Select a drive in the project tree.
2. Click the  icon in the toolbar.
  - If you have already established an online connection, then the "Load preview" dialog opens.  
This dialog displays alarms and proposes actions necessary for loading.
  - If you have not established an online connection, then the "Extended loading" dialog opens.  
Using this dialog, establish an online connection to the required drive.
3. Check the messages in the "Load preview" dialog.  
The "Save parameterization retentively" action is enabled by default.
4. Click "Load".  
The project data are downloaded into the drive.

### 8.3.6 Saving changes in the project

#### Overview


Project data that are not saved are lost when closing the project. The entire project must be saved in order for the settings to take effect permanently.

## Requirement

- For activated user management (UMAC):  
The function rights for editing drive data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

Proceed in either of the following ways to save changes in the project:

- In the toolbar, click the  icon.
- Select the "Project > Save" or "Project > Save as" menu.

### 8.3.7 Retentively saving changes to the SD card

## Overview

Parameter assignments of your converter are always volatile and are lost when the converter is switched off. Information is subsequently provided as to how you can retentively save online data or offline data.


## Requirement

- A project has been created.
- A drive has been created and completely configured in the project.
- For activated user management (UMAC):  
The function rights for editing drive data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

### Retentively saving online data

Proceed in either of the following ways to save online data retentively:


- In the function view of the active Startdrive project, click the  icon.
- In the project tree of your drive device, double-click "Online & Diagnostics".
  - In the secondary navigation select the "Functions > Backup/Restore" menu.
  - In the "Retentively save RAM data" area, click "Save".

The system checks whether an SD card is available. If an appropriate SD card is detected, then the parameter values are retentively saved to the SD card.

### Retentively saving offline data

When retentively saving data, it is important that the settings made are not only saved on your operating unit in the Startdrive project, but also permanently saved on the SD card (also known as "save retentively" or "RAM to ROM"). An online connection must be established to the drive for this purpose.

Proceed as follows to save offline data retentively:

1. Establish an online connection to your drive.
2. Load the project data into your drive.
3. Click the  icon in the function view of the active Startdrive project.  
The current project settings are stored retentively on the SD card of the drive.

## 8.3.8 Using parameter lists and user-defined lists

### Overview

Users configure a drive in Startdrive as standard using specific configuration views. For the configuration, experienced users preferably take the parameter lists or user-defined lists.

### Requirement

- For activated user management (UMAC):  
The function rights for editing drive data are activated for your user account.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

### Description of function

#### Parameter list

The following functions are available:

- Monitoring parameter values
- Editing parameter values directly from the parameter view  
Only parameters with a light grey background can be directly edited in the parameter list. Other parameters are locked in the parameter list and cannot be edited in the current operating mode.
- Exporting parameters as CSV
- Comparing parameter settings:
  - Offline - Factory setting
  - Online - Offline
  - Online - Factory setting

### User-defined list

You compile the selected parameters in a user-defined list. This involves an excerpt with specific parameters, from an underlying parameter list.

User-defined lists are only created and edited in the project tree.

You use user-defined lists for the following purposes:

- Compiling the most important parameters
- Assigning parameters to parameter groups with comments for users
- Carrying out series commissioning based on saved parameter values
- Documentation of the drive with listed parameters and setting values

### Opening and reading parameter lists in the web server engineering tool

Parameter lists are exported in the json format. You can open lists and view parameter values if you access the converter using the web server.

### Example

In the following application, you create a user-defined list with the objective of accepting parameter values for an additional drive.

1. You create a user-defined list with parameter values for a configured drive.
2. You open the list in another drive with the same hardware configuration.
3. You compare the parameter values of the drive with the saved values.
4. You apply the required parameter values for the drive.

### More information

For more information about parameter lists and use-defined lists, see the related TIA Portal information system.

## 8.4 Procedures for device configuration and commissioning

### 8.4.1 Requirements

#### Description

---

**Note****Only in the offline mode**

The drive components can only be combined and specified in the offline mode. In the online mode, all corresponding setting ranges are disabled in the device view and in the inspector window.

---

**Note****User management and security**

SINAMICS converters of the latest generation generally have extended protection. This usually has the effect that, as a user, you have to log in to view or edit the converter data offline as well as online.

The most important protective measures in brief:

- Project protection can be activated for Startdrive projects in the TIA Portal (offline). If project protection is activated, corresponding rights are required for access. Once project protection has been activated, it cannot be deactivated.
- A "Security Wizard" usually appears when creating new converters in the project. With the help of this wizard, you can already make the most important security settings for this converter within the project when creating the converter. After loading the project data into the converter, the protection settings become effective there.
- To access a protected converter online, you ALWAYS need the corresponding access rights. This also applies if no project protection is activated for the Startdrive project.

Detailed information on this topic is provided in the Configuration Manual SINAMICS Industrial Security in Chapter "Security settings in Startdrive".

---

**Note****Editing mode required for online commissioning**

If you want to make important settings online, activation of the editing mode is mandatory. Restore points that are required as a return point following a cancellation of the current online parameterization are automatically created by the editing mode in the "guided quick startup" (and in the "Parameterization" area) during configuration.

No separate editing mode is necessary in the "Rotate & optimize" area.

---

**Note****Telegram configuration offline**

In the guided quick startup, telegram settings can in principle only be made offline.

---



## 8.4.2 Simple basic parameterization (offline)

### Overview

The following workflow represents the simplest form of commissioning.

### Requirement

None

### Procedure

Proceed as follows to perform basic parameterization in offline mode:

1. Create or open a project with Startdrive.
2. Create device configuration in Startdrive offline.
  - Insert and specify the SINAMICS drive in the project.
  - Optional: Configure user management and make protection settings for the drive.
  - Create and specify SINAMICS components.
  - Make detailed settings for the drive and components.
3. Make basic settings offline via the guided quick startup.
4. Load project data to the target device.
5. Establish an online connection between Startdrive and the target device.
6. Optimize commissioning.

### Result

The motor rotates.

### 8.4.3 Simple basic parameterization (online)

#### Overview

The basic parameterization can be carried out in online mode as an alternative to offline mode.

#### Requirement

None

#### Procedure

Proceed as follows to perform basic parameterization in online mode:

1. Create or open a project with Startdrive.
2. Create device configuration in Startdrive offline.
  - Insert the specify the SINAMICS drive in the project.
  - Optional: Configure user management and make protection settings for the drive.
  - Create and specify SINAMICS components.
  - Make detailed settings for the drive and components.
3. Load project data to the target device.
4. Establish an online connection between Startdrive and the target device.
5. Make basic parameterization settings online via the guided quick startup in the editing mode.
  - Make basic settings in the quick startup steps.
  - Optimize commissioning.

#### Result

The motor rotates.

## 8.4.4 Basic parameterization together with a SIMATIC controller

### Overview

SINAMICS drives are frequently operated with SIMATIC or SINUMERIK controls. To speed up commissioning the individual components, the drive and control can be commissioned together in a Startdrive project.

### Requirement

None

### Procedure

Proceed as follows to perform the basic parameterization for the drive together with a SIMATIC controller:

1. Create or open a project with Startdrive.
2. Create device configuration in Startdrive offline.
  - Insert and specify the SINAMICS drive in the project.
  - Optional: Configure user management and protection settings for the drive and control system.
  - Insert and specify the SIMATIC controller in the project.
  - Network the SIMATIC controller and the SINAMICS drive.
  - Insert a technology object into the SIMATIC controller.
  - Interconnect the technology object with the drive.
3. Load project data to the target devices.
4. Establish an online connection between Startdrive and the target device.
5. Make basic settings online via the guided quick startup in the editing mode.
  - Make basic parameterization settings in the quick startup steps.
  - Optimize commissioning.

### Result

The motor rotates.

## 8.5 Combining and configuring devices in the project

### 8.5.1 Converter

#### 8.5.1.1 Inserting a converter into the project

##### Overview

You either add a new converter to the project view or to the portal view. For the latest generation of SINAMICS converters, you can define the security settings for access to the drive data at the time of setup.

##### Requirement

---

###### Note

###### Firmware versions

The description in these operating instructions refers exclusively to S200 drives with firmware version V6.3 or higher, which are configured with a Startdrive version V19 or higher.

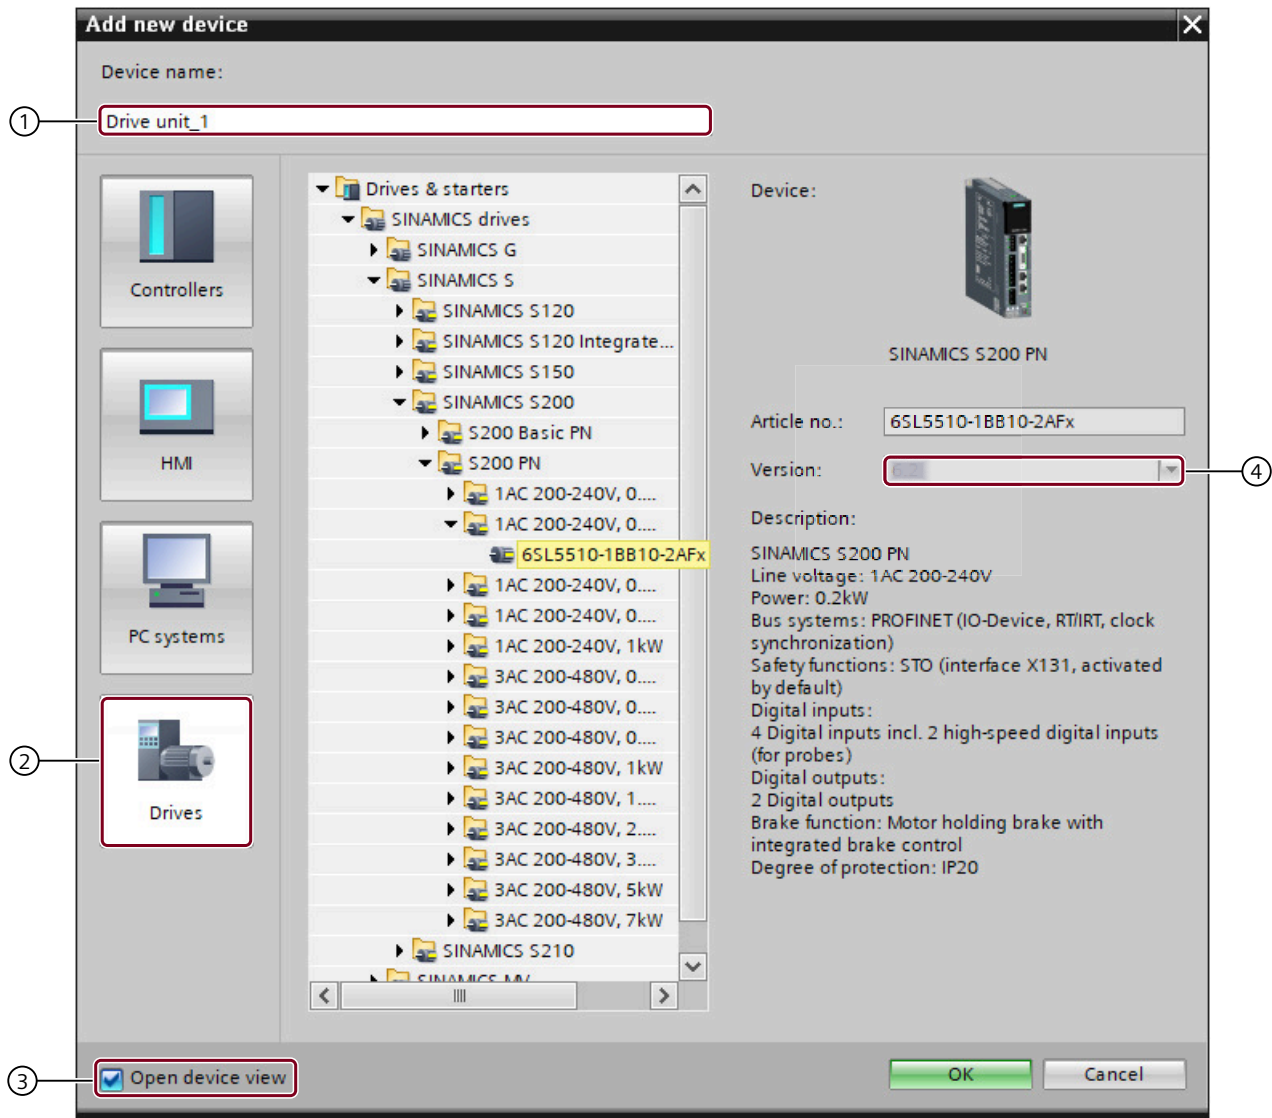
---

- A new project has been created or an existing project is open.
- For activated user management (UMAC):  
The function rights for editing drive data are activated for your user account.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

Proceed as follows to insert a converter into the project:

1. Double-click "Add new device" in the project tree.  
The corresponding dialog box opens.



- ① "Device name" input field ("Drive unit\_xx" by default)
- ② "Drives" button
- ③ Enable/disable the "Open device view" option
- ④ Firmware version drop-down list

Figure 8-2 Inserting a converter into the project

2. Click "②" to display the available SINAMICS converters.
3. Expand the "SINAMICS S200" entry in the displayed list.  
A list of all available SINAMICS S200 Basic and S200 PROFINET converters is displayed.

## 8.5 Combining and configuring devices in the project

4. Expand the entry (e.g. 1AC 200-240 V, 0.2 kW) for the relevant converter.  
The selected converter is displayed with the corresponding article number.
5. Click on the desired converter.  
When a converter is created, the latest firmware version is always suggested in "④".
6. If the firmware version on the converter SD card deviates from the displayed firmware version, then change the firmware version via "④". You can also install the corresponding firmware version on your converter.  
It will not be possible to go online later if the firmware versions do not match.
7. Assign a different device name in "①" if required.
8. Click "OK".  
If "③" is enabled, the converter is automatically created in the project and displayed in the device view.

### Result

The inserted converter is displayed in the device view and can be configured.

### 8.5.1.2 Optional: Replacing a converter

#### Overview

In the device configuration and the project tree of a drive, at any time, you can replace the current device by a device with another power rating. When replacing the drive, previous configurations of the motor and/or the encoder are kept if both devices are compatible with one another.

#### Requirement

- A project has been created.
- A converter has been inserted in the device configuration.
- For activated user management (UMAC):  
The function rights for editing drive data are activated for your user account.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

### Replacing a device via the project tree

Proceed as follows to replace the current device via the project tree:

1. In the project tree, select the converter to be replaced. Open context menu "Change device". The corresponding dialog box opens.

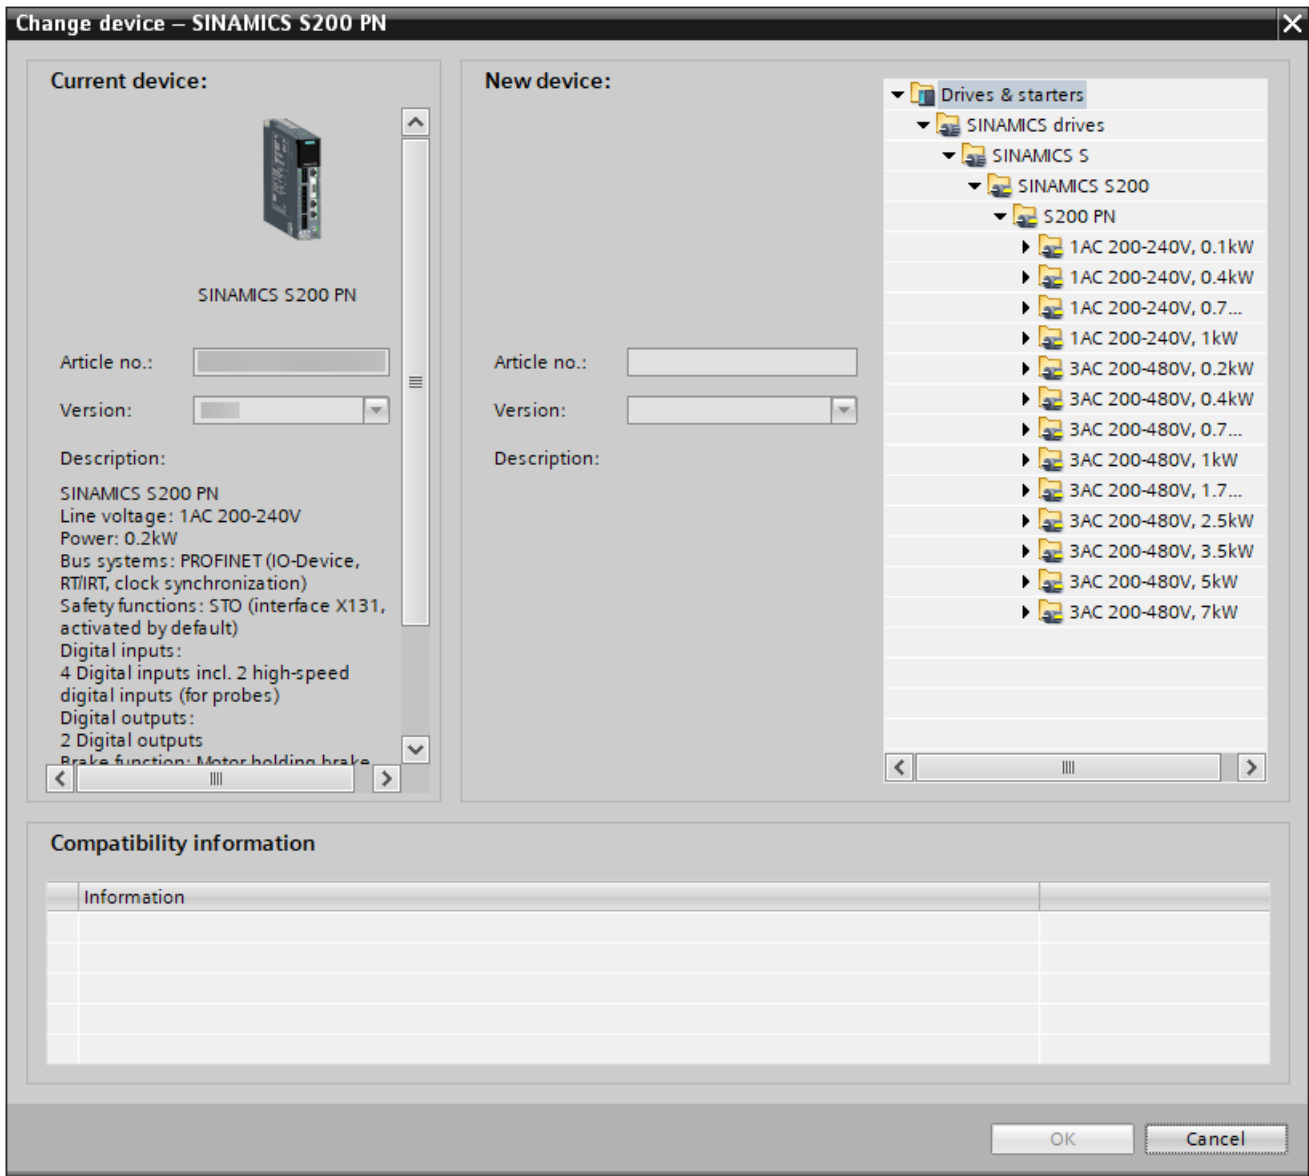


Figure 8-3 Changing the device via the project tree

The data of the current converter are displayed on the top left. At the top right, the replacement devices that are applicable are displayed in a hardware catalog.

2. Select the replacement device required in the hardware catalog of the dialog box.

### 8.5 Combining and configuring devices in the project

Only the most important data of the new converter are displayed at the center of the dialog box in the "New device" field. You can compare these data with the data of the current converter (left-hand side).

If both converters are not fully compatible, then the corresponding information is displayed in the "Compatibility information" field. This means that you may have to assign another motor if you still go ahead and accept the required replacement device.

3. Click "OK" to accept the new converter.



### Replacing a device using the hardware catalog

Proceed as follows to replace the current device using the hardware catalog:

1. Select the new converter in the "Hardware catalog" task card. Drag the drive to the placeholder for the current drive in the "Device view" tab.  
The corresponding dialog box opens.

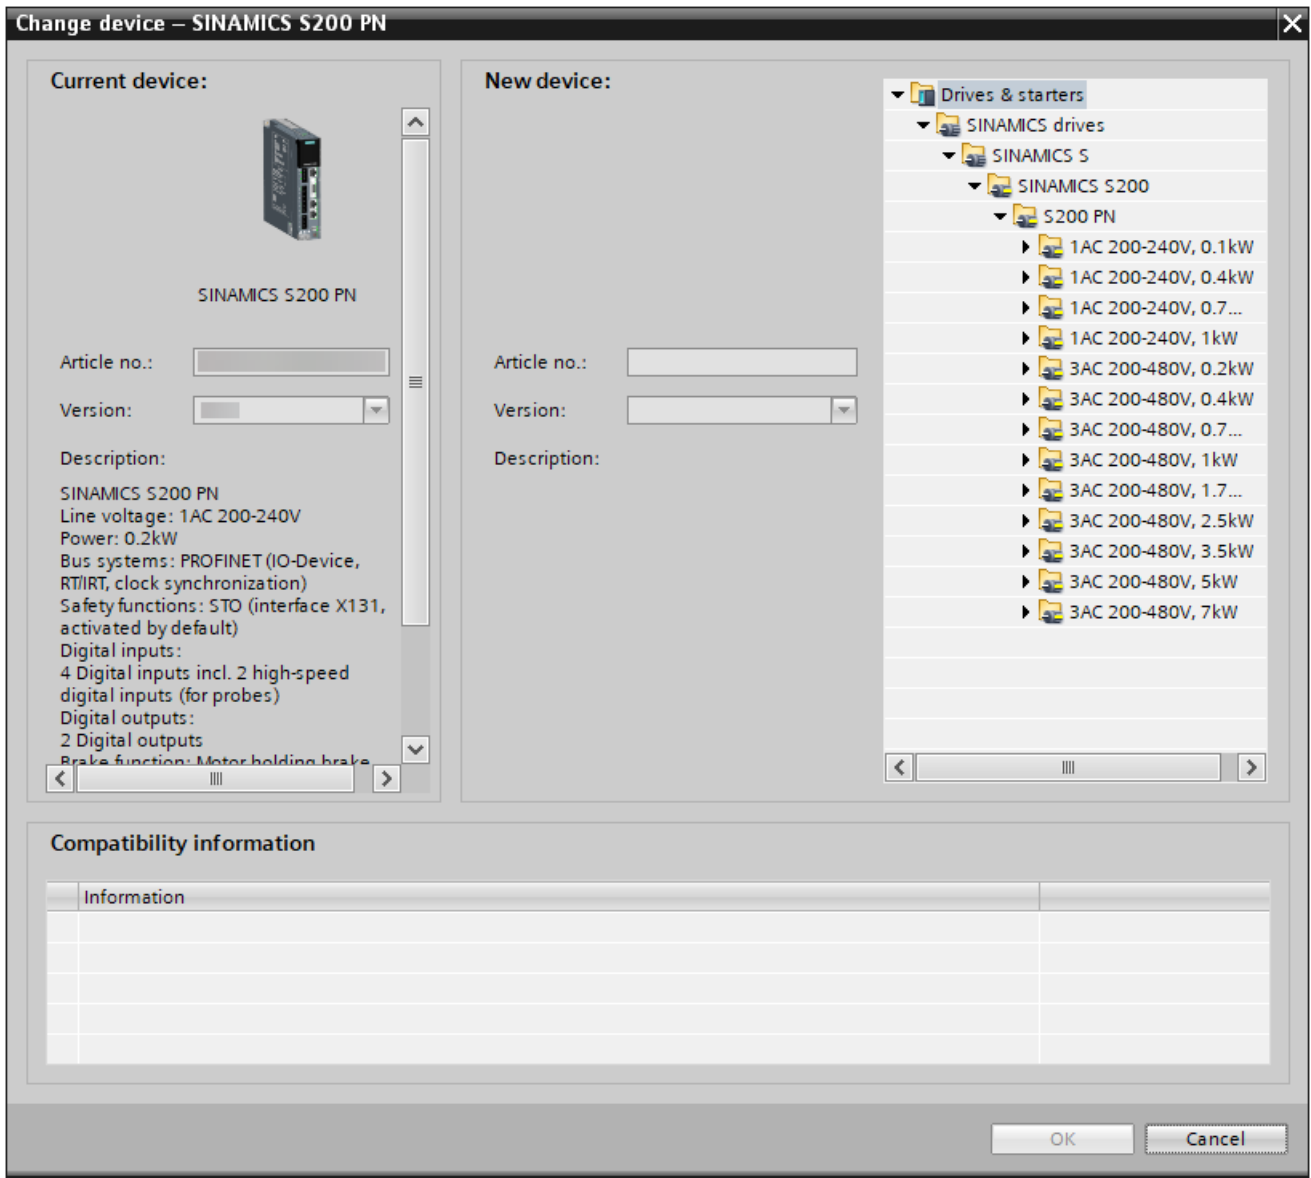


Figure 8-4 Changing the device using the hardware catalog

In the dialog box, the most important data of the existing converter and the new converter are compared.

If both converters are not fully compatible, then the corresponding information is displayed in the "Compatibility information" field. This means that you may have to assign another motor if you still go ahead and accept the required replacement device.

2. Click "OK" to accept the new drive.

8.5 Combining and configuring devices in the project

**Result**

The current device is replaced by the required replacement device.

If the two devices are not completely compatible with one another, then in the "Device view" tab, the placeholder for the motor is displayed unspecified. You must reassign an appropriate motor power.

**8.5.1.3 Making detailed converter settings**

**Overview**

You can configure the following details for the converter:

Table 8-1 Detailed converter settings in the inspector window

Group	Settings
General	<ul style="list-style-type: none"> <li>• Product information Name data</li> <li>• Catalog information Brief description, description of the components included, firmware version used</li> <li>• Identification &amp; Maintenance Information and data to identify and localize a drive within a plant or system.</li> </ul>
PROFINET interface [X150]	<ul style="list-style-type: none"> <li>• General</li> <li>• Ethernet addresses Subnet, IP address, subnet mask, PROFINET names</li> <li>• Telegram configuration                             <ul style="list-style-type: none"> <li>– Telegrams of the closed-loop drive control: Send, receive Details are contained in Chapter "Configuring telegrams (Page 285)"</li> </ul> </li> <li>• Advanced options                             <ul style="list-style-type: none"> <li>– Interface options</li> <li>– Media redundancy</li> <li>– Clock cycle synchronization for local modules (isochronous mode)</li> <li>– Real time settings</li> <li>– Port [X150 P1] and port [X150 P2]</li> </ul> </li> </ul>
Module parameters	<ul style="list-style-type: none"> <li>• Activation of channel diagnostics</li> </ul>
Protection & Security	<ul style="list-style-type: none"> <li>• Wizard for security settings</li> <li>• User Management &amp; Access Control (UMAC)</li> <li>• Ports and protocols</li> <li>• Encryption of drive data</li> </ul> <p><b>Note:</b> Information about these protection settings is provided in the Configuration Manual SINAMICS Industrial Security or in the information system of the TIA Portal.</p>
Ethernet commissioning interface [X127]	<ul style="list-style-type: none"> <li>• General</li> <li>• Ethernet addresses:                             <ul style="list-style-type: none"> <li>– Subnet, IP address, subnet mask</li> </ul> </li> </ul>

Group	Settings
Time synchronization/Time	<ul style="list-style-type: none"> <li>Option "Synchronize with NTP server" If the drive is connected to a controller in the device configuration, the option "Use PLC as NTP server" is activated automatically. If the drive is connected to a PLC, the IP address of the PLC is displayed. In this case, the IP address and the time zone of the NTP server can be changed.</li> <li>Option "No synchronization" In this case, NTP synchronization is not managed in the project. You can configure this synchronization separately for the drive in online mode with the Online &amp; Diagnostics function "Set time".</li> </ul>
Hardware settings	<ul style="list-style-type: none"> <li>Supply voltage</li> </ul>
Web server	<ul style="list-style-type: none"> <li>Enabling access to the PROFINET interface [X150] and the service interface [X127] via HTTP or HTTPS.</li> </ul>

## Requirement

- A new project has been created or an existing project is open.
- An S200 drive has been created in the project.
- For activated user management (UMAC):  
The function rights for editing drive data are activated for your user account.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

1. Select the converter in the device view and open the inspector window.
2. In the secondary navigation of the inspector window, select the desired detail menu (see the table above).
3. Make the required detail settings in the white fields. Default settings are usually available in most detail menus.  
The gray fields are corrected automatically in accordance with their setting. Fields with a gray background cannot be edited directly.

## Result

You have made the detailed settings for the converter in your device configuration.

### 8.5.1.4 Specifying a motor

#### Overview

The drive that has just been inserted in the project has a placeholder for the required motor (standard motor type: "1FL2"). You must specify this placeholder in the configuration.

### Requirement

- A project has been created.
- An S200 drive is inserted in the device configuration.
- For activated user management (UMAC):  
The function rights for editing drive data and configuring in the inspector window are activated for your user account.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

### Procedure

1. Double-click on the white motor placeholder (MOT) in the drive. The inspector window is displayed.
2. Select the "Motor - selection - 1FL2" entry in the secondary navigation in the inspector window.
3. In the list, select the motor power rating and an associated encoder based on the article number.

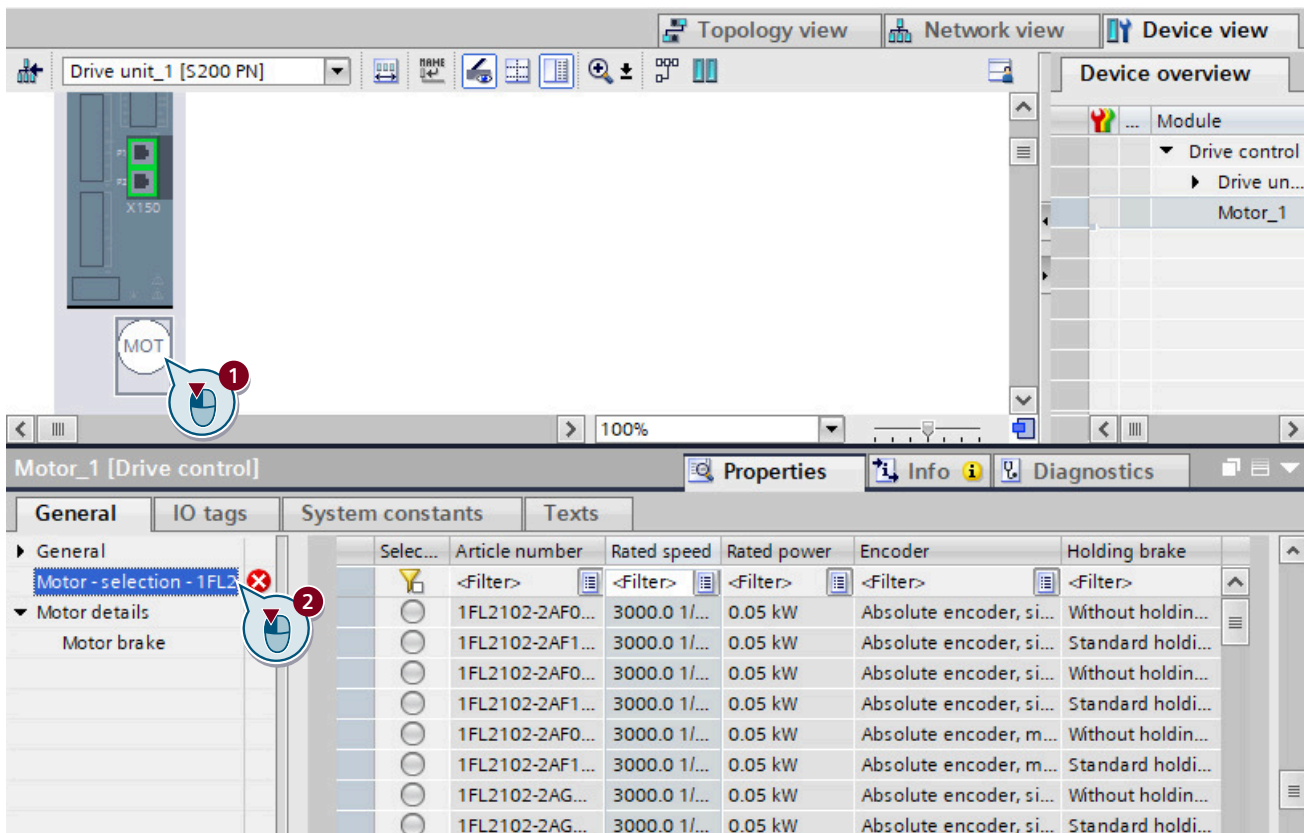


Figure 8-5 Selecting a motor in the inspector window

## Result

The motor placeholder is assigned the data of the selected motor. The white area turns gray.

The motor has been added. The assigned encoder and the encoder evaluation are automatically also added and specified.

You can then carry out the basic parameterization (Page 276), or alternatively, you can carry out the guided quick startup (Page 253).

## 8.5.2 Control and technology object

### 8.5.2.1 Inserting a SIMATIC S7 controller into the project

#### Overview

If, in addition to the SINAMICS drive, you also wish to use a SIMATIC S7 controller in the device configuration, then create an appropriate PLC in your project.

---

#### Note

##### Other control systems

As an alternative to a SIMATIC S7 controller, a SINUMERIK ONE or a SINUMERIK MC can be used. The procedure remains the same.

---

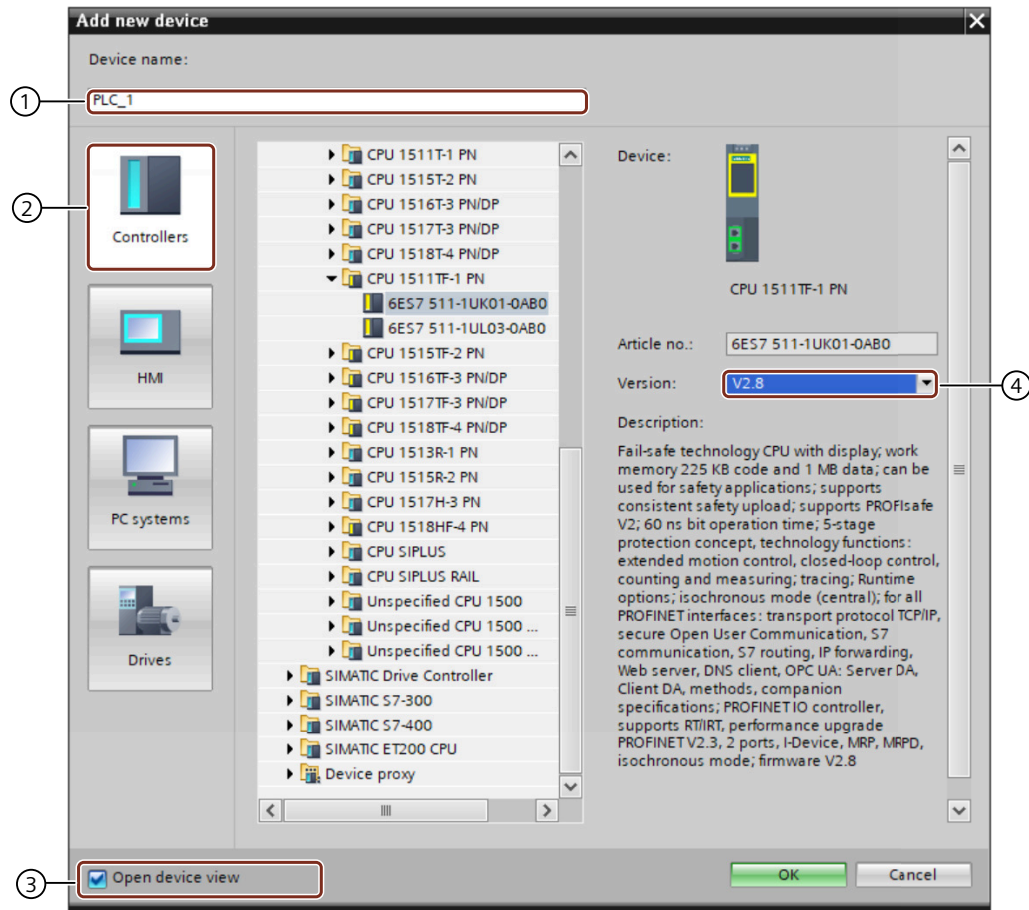
#### Requirement

- A new project has been created or an existing project is open.
- For activated user management (UMAC):  
The function rights for editing drive and control system data are activated for your user account.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

**Procedure**

Proceed as follows to insert a SIMATIC S7 controller into the project:

1. Double-click "Add new device" in the project tree.  
The corresponding dialog opens.



- ① "Device name" input field ("PLC\_xx" by default)
  - ② "Controller" button
  - ③ Enable/disable the "Open device view" option
  - ④ Firmware version drop-down list
2. Click "②" to show the available controllers.
3. Expand the desired controller type (e.g. SIMATIC S7-1500) and select the desired CPU (e.g. CPU 1511TF-1 PN) in the list.  
When the CPU is expanded, the component is displayed with its article number.  
The current firmware version is always suggested in "④" when you create a SIMATIC S7 controller.
4. If the firmware version on the SD card of your SIMATIC S7 controller deviates from the displayed firmware version, then change the firmware version via "④".  
It will not be possible to go online later if the firmware versions do not match.

5. Assign a different device name in "①" if required.
6. Click "OK".  
If "③" is activated, the SIMATIC S7 controller is automatically created in the project and then displayed in the device view.

## Result

The inserted SIMATIC S7 controller is displayed in the device view and can be configured.

### 8.5.2.2 Networking a controller and a converter

#### Overview

After inserting a SIMATIC S7 controller and a converter into the project, network the components in the network and topology view.

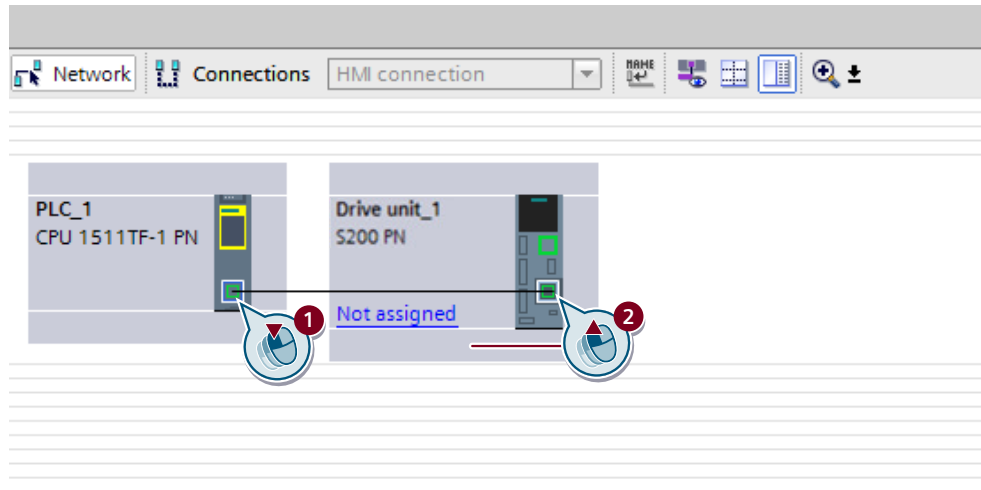
#### Requirement

- A project is open.
- The project includes at least one drive and one control system.
- For activated user management (UMAC):  
The function rights for editing drive and control system data are activated for your user account.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).


## Procedure

Proceed as follows to establish the connection between the controller and the drive.

1. Double-click "Devices & networks" in the project tree to open the network view.
2. Draw a connection between the PROFINET interface of the controller and the PROFINET interface X150 of the converter.  
The PROFINET connection is established, and the converter is assigned to the controller.



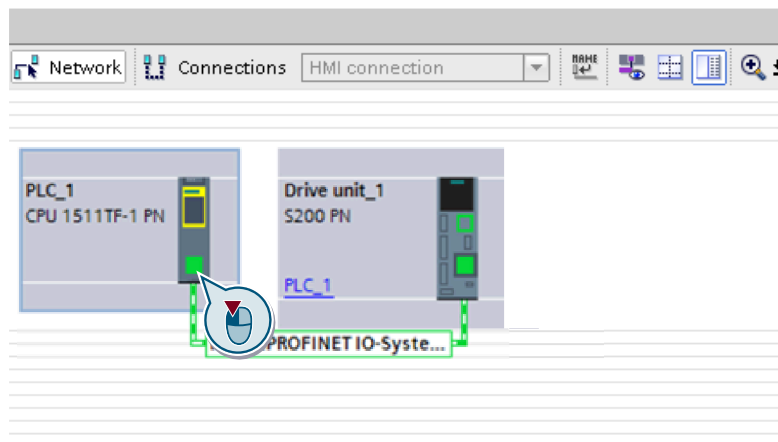
3. Click the PROFINET interface\_1 [X1].




4. Open the "Advanced options" menu.  
The menu item is in the secondary navigation, in the "General" tab.
5. Open the "Realtime settings" menu.



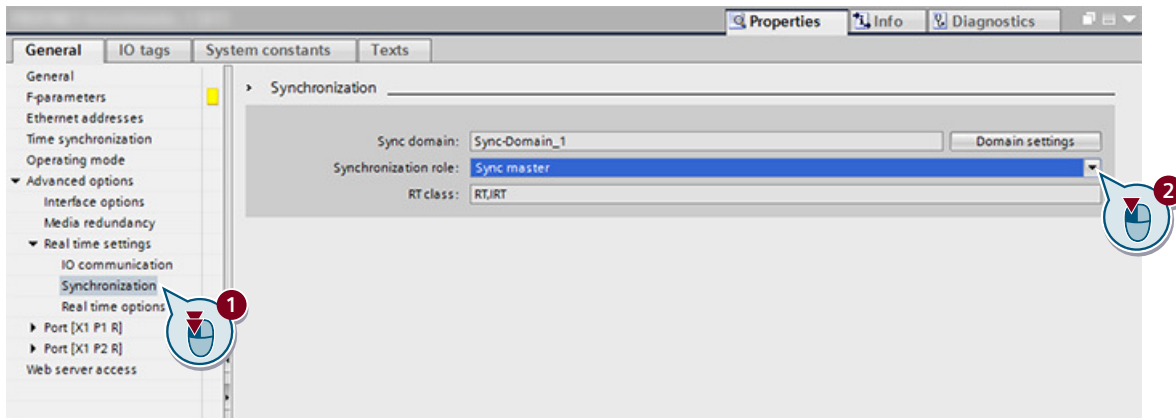- Open the "Synchronization" menu with a double-click.



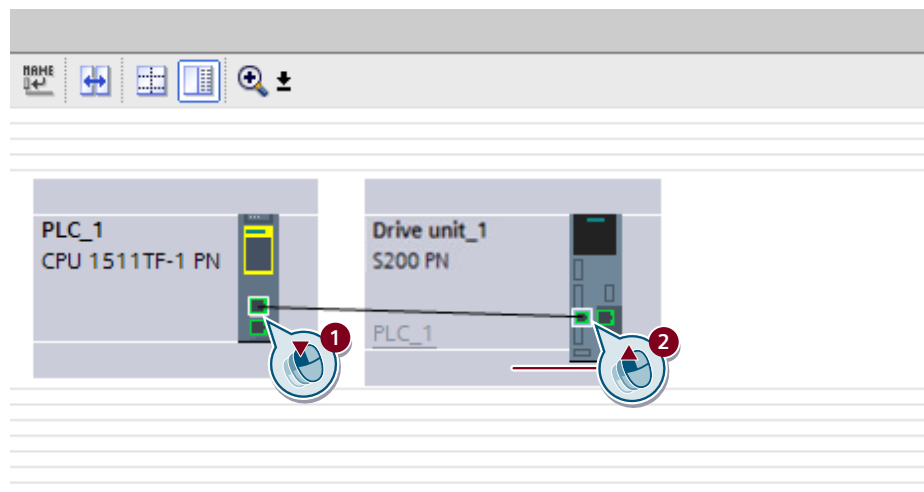- Select the "Sync master" setting from the "Synchronization role" drop-down list.
- Switch to the topology view.
- Draw a connection between Port\_1 [X1.P1] of the controller and Port\_1 [X150.P1] of the converter.



## Result

The SIMATIC S7 controller and the converter are networked with one another in the network and topology view.

### 8.5.2.3 Inserting a technology object into the SIMATIC S7 controller

## Overview

Through the technology object, Motion Control functions such as positioning and synchronous axes are available to you. For this reason, insert a new technology object (TO) in the SIMATIC S7 controller. In the "Configuration" function view, you can directly assign the inserted SINAMICS drive and go to the drive configuration.

## 8.5 Combining and configuring devices in the project

Positioning is the most frequent application for SINAMICS drives. To be able to perform positioning tasks in the SIMATIC S7 controller, you need to insert the Motion Control function "TO\_PositioningAxis". Inserting a TO is described below based on the example of the Motion Control function "TO\_PositioningAxis".

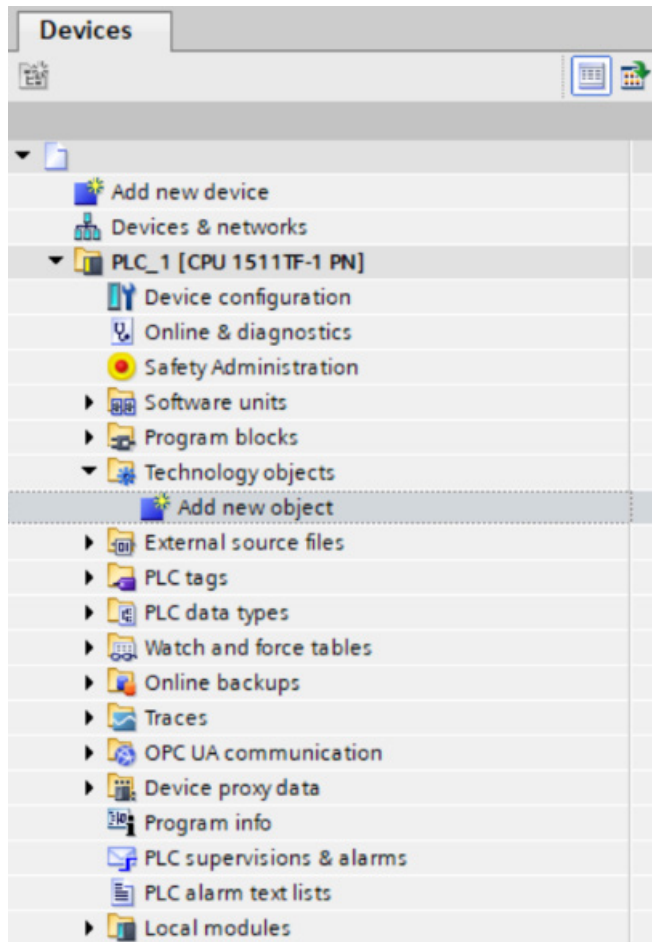
### Requirement

- A SINAMICS drive is created and specified.
- A control system (e.g. SIMATIC S7-1500) is created and networked with the drive.
- For activated user management (UMAC):  
The function rights for editing drive and control system data are activated for your user account.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).


## Procedure

Proceed as follows to insert a technology object into the controller:

1. In the project tree, expand the "Technology objects" entry under the menu for the SIMATIC S7 controller.



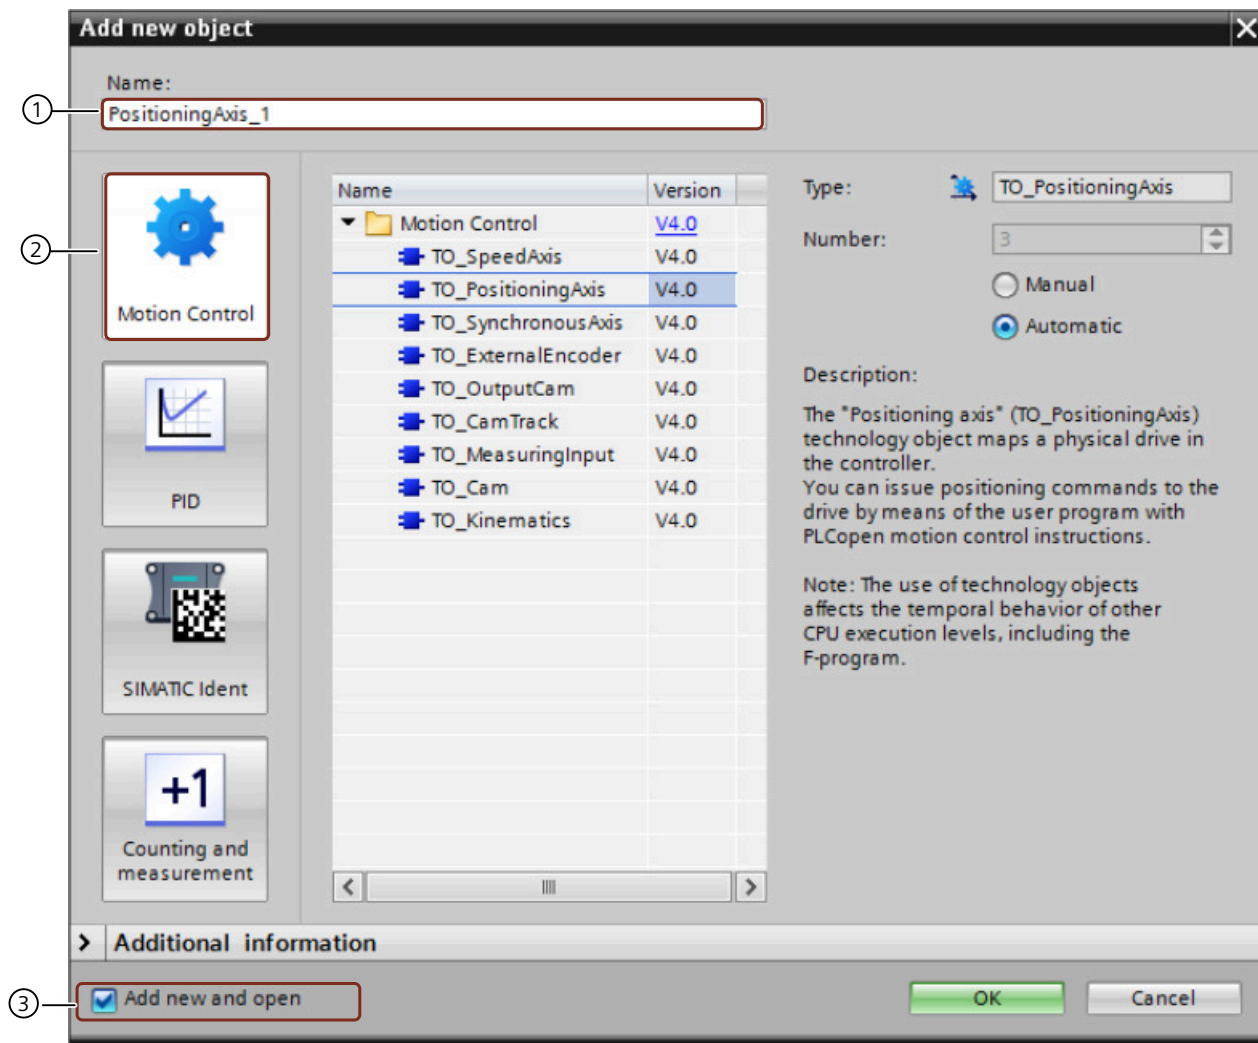2. Double-click the "Add new object" entry.  
The corresponding dialog opens.



① "Object name" input field

② "Motion Control" button

③ Enable/disable "Add new and open" option

3. Click "②" to present the available technology objects.
4. Select the object "TO\_PositioningAxis".
5. If required, assign a different name for the object in "①".
6. Click "OK".

## Result

The "TO\_PositioningAxis" technology object has been inserted and can be configured.

### 8.5.2.4 Interconnecting the technology object and a converter

#### Overview

The inserted technology object "TO\_PositioningAxis" must be interconnected with the converter.

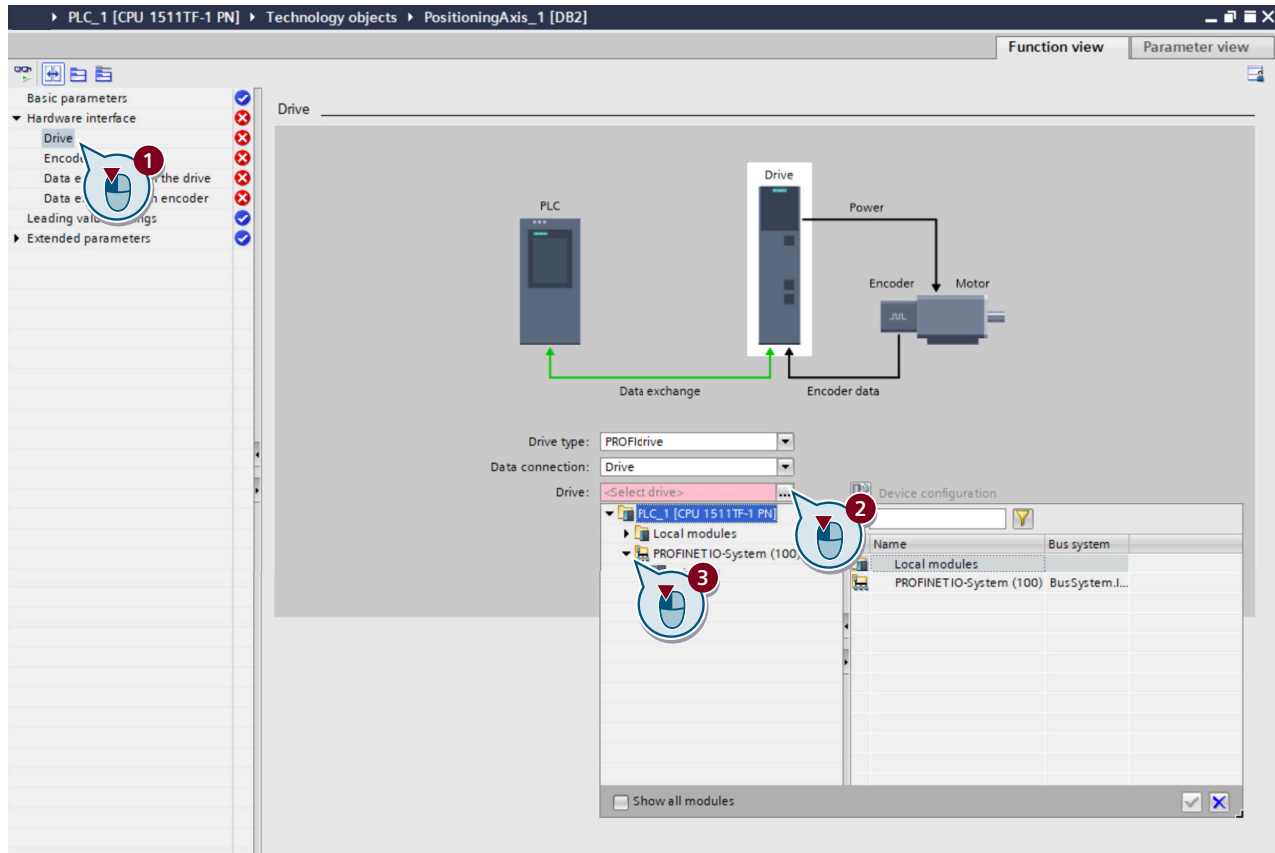
#### Requirement


- A SINAMICS drive is created and specified.
- A control system (e.g. SIMATIC S7-1500) is created and networked with the drive.
- For activated user management (UMAC):  
The function rights for editing drive and control system data are activated for your user account.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

Proceed as follows to manually interconnect the drive with the inserted TO:

1. In the project tree, double-click the "Configuration" entry under the created technology object.
2. Select the "Hardware interface" menu ① in the secondary navigation. The corresponding function view opens.



3. Open the selection list in the "Drive" selection box ②.
4. Expand the "PROFINET IO system (100)" entry ③.
5. Click on the displayed converter (in this case: "Drive unit\_1"). Telegram 105 is automatically preset.
6. Click on the checkmark icon  to confirm the selection. The "Device configuration" setting option is enabled. In addition, the "Drive configuration" setting option is displayed and enabled.
7. Click  to get to the basic parameter assignment of the converter.

## 8.6 Carrying out guided quick startup

### 8.6.1 Overview

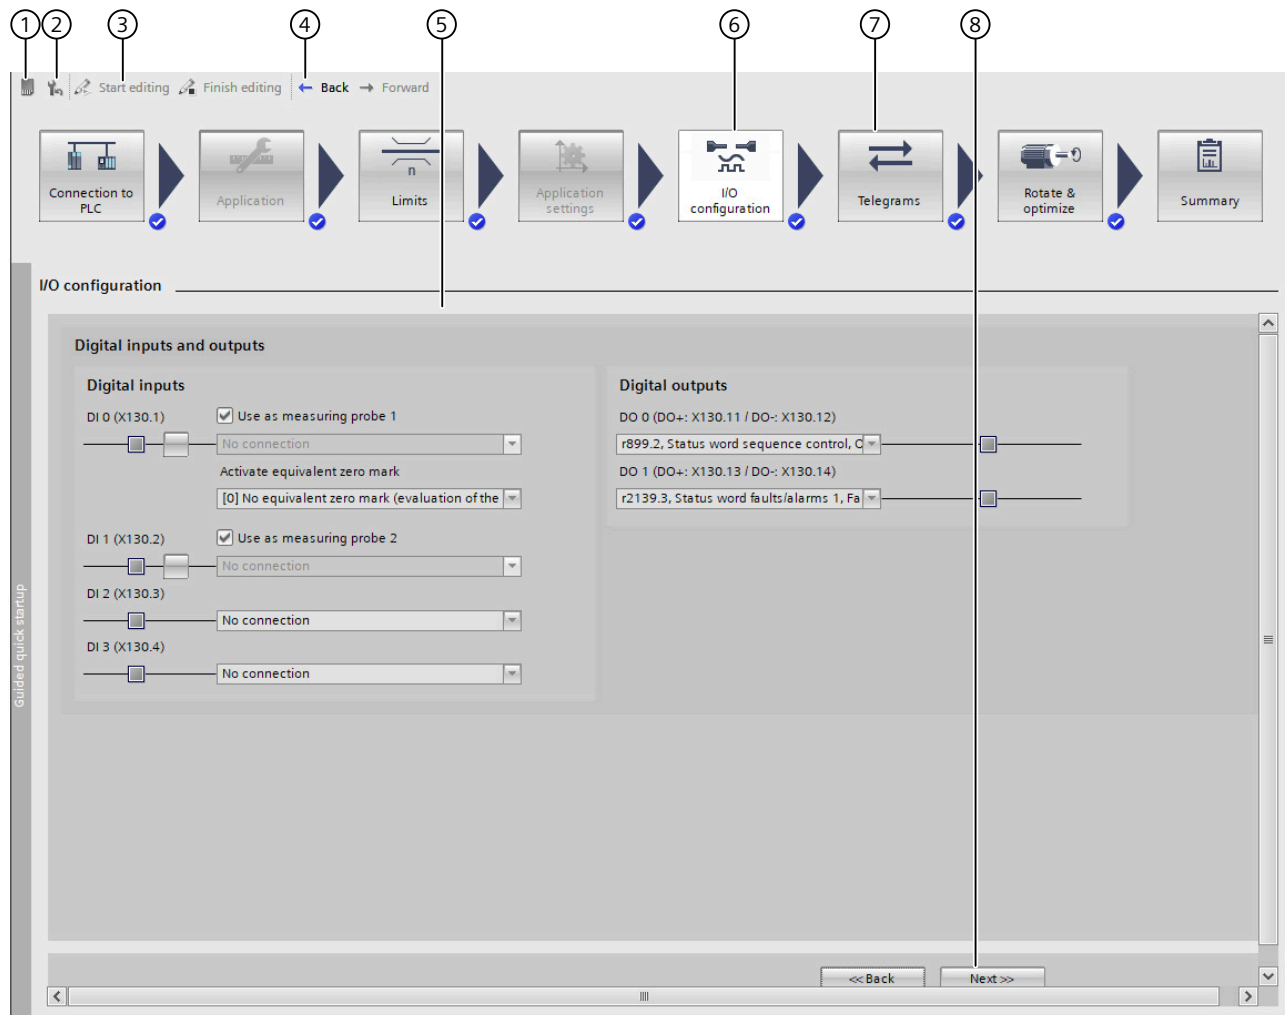
#### Overview

Using the "guided quick startup", you perform the basic settings for the drive in Startdrive that are used to avoid the following detailed settings as far as possible. All drive settings are pre-assigned according to the required application use via these basic settings.

#### Requirement

- The drive has been completely created and specified in the device configuration. Without a complete specification, the guided quick startup cannot be used and a message appears.
- If a control is also used, it must be connected to the drive in the topology view and in the network view. The connection between the devices must also be configured.
- Optional: The operating unit is connected to the drive via LAN (physically online).
- For activated user management (UMAC):  
The function rights for editing drive data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

Description of function



- ① Icon: save data retentively (in the online mode)
- ② Icon: restore the factory settings (in online mode)
- ③ Buttons: start or exit the editing mode (in the online mode)
- ④ Buttons: jump to the next or previous step
- ⑤ Detailed setting of active quick startup step
- ⑥ Active quick startup step: button is brightened
- ⑦ Inactive quick startup step: one of several possible steps
- ⑧ Quick startup buttons:
  - Back/Next: are always displayed.
  - Cancel/finish: only displayed in online mode.

Figure 8-6 Example: guided quick startup in offline mode




You can define the following basic settings in the quick startup steps with the same name:

- **Connection to PLC**  
This step shows that the converter in the project can only be operated with a controller only. You specify whether Motion Control is carried out by the drive or the controller.
- **Application**  
You define the converter control mode in this step. With the "Positioning" control mode activated, make detailed settings, for example the motion type, the measuring unit, encoder settings for the position control or the values for a modulo correction.
- **Limits**  
The settings in this step depend on the control mode selected in step "Application".
  - "Speed control" control mode  
In this case, you define the minimum and maximum values of the motor used: torque, speed, and operating times.
  - "Positioning" control mode  
In this case, you make the settings for the traversing profile, for alternative ramp-down times, for jerk limitation and for traversing range limitation.
- **Application settings**  
This step is only active when the "Positioning" control mode is activated. You make the detailed settings for active homing and absolute encoder adjustment in this step.
- **I/O configuration**  
You specify the function of individual inputs and outputs of the converter.
- **Telegrams**  
The preferred telegrams are suggested based on the selected control mode. You can define different telegrams and make detailed settings. Telegram settings can be made in offline mode only.
- **Rotate & Optimize**  
You optimize the motor in the online mode. The control panel or One Button Tuning is available for this purpose.
- **Summary**  
You find a compilation of all settings made after completing the configuration in the guided quick startup.
  - Offline mode: When required, you can load these settings directly to the drive.
  - Online mode: When required, you can load these settings directly to the Startdrive project.


---


## Note

### The significance of Note symbols

Settings of individual steps may affect the previous settings of other steps. In this case, an appropriate note with the  symbol appears at the active quick startup step. Check and, if necessary, correct the corresponding settings.

Further identifications:

The  symbol designates information or a context-sensitive note for users.




The  symbol identifies an area of the step where an entry is urgently required.

---

**Status display after changes**

Changes to individual settings can also affect settings in the guided quick startup. Status symbols indicate the change state of the particular step

Table 8-2 Status symbols

Icon	Meaning
	The system defaults in this step are valid.
	The settings made in this step are valid. The settings were made directly in this step, or are the consequences of settings in another step.
	The program changed the settings in this step. Possible causes are: <ul style="list-style-type: none"> <li>• Subsequent changes were made in other steps, which are not automatically valid.</li> <li>• The device configuration was subsequently changed. The changes influence the original settings.</li> </ul> Check the settings of this step.

**More information**

For more information about guided quick startup, see the information system of the TIA Portal.

**8.6.2 Editing mode (online only)****Overview**

If you want to work with the guided quick startup in online mode, you need restore points in case commissioning is aborted. Restore points are stored retentively on the SD card of the converter.

Restore points are automatically created when activating or exiting the editing mode and also when switching from one step into the next step of the quick startup.

**Note****Behavior when the online connection is terminated**

If the connection to the drive is re-established after the online connection has been terminated, the program reverts to the stored data of the last restore point.

**Requirement**


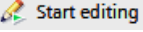
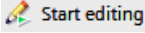

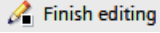
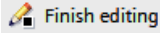
- The drive has been completely created and specified in the device configuration.
- If a control is also used, it must be connected to the drive in the topology view and in the network view. The connection between the devices must also be configured.
- There is an active online connection between the drive and the operating unit.
- No other access from another operating unit to the selected converter is active.

## Procedure

### Activating/exiting editing mode

Settings in the guided quick startup can be made online only in an "editing mode".

Table 8-3 Activating and exiting editing mode

Display	Status	Description
	The editing mode is not yet activated.	<p>Proceed in either of the following ways to activate editing mode:</p> <ul style="list-style-type: none"> <li>In the toolbar of the step, click on the button </li> <li>Click in the step below the button </li> </ul> <p>You can configure the settings.</p>
	The editing mode is active.	<p>Proceed in either of the following ways to exit editing mode:</p> <ul style="list-style-type: none"> <li>In the toolbar of the step, click on the button </li> <li>Click in the step below the button </li> </ul> <p>Editing has been finished. A new restore point is assigned automatically. The current configuration is saved retentively.</p>

#### Note

##### Message in case of multiple access

The editing mode can only be activated if the drive is not simultaneously accessed by another PC via Startdrive or the web server.

If another access is active, activation of the editing mode will be denied. An appropriate message is displayed.

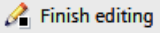
#### Note

##### Message when editing factory settings in the online mode

A message is displayed if a drive still has the factory settings, and the editing mode of the guided quick startup is started. This states that the motor data are based on the rated power of a standard motor.

Therefore, check the motor data online in the "Show motor data" dialog box. When required, correct the motor data and close the dialog.

### Completing online commissioning

- To complete online commissioning in the guided quick startup, click on button . All settings made in the quick startup are then saved retentively. You are provided with an overview of all of the settings made in the last "Overview" step.

### Canceling online commissioning

- If you want to cancel online commissioning via the guided quick startup, click on the "Cancel" button, and a confirmation prompt appears.
- If you really want to cancel, click "OK". All settings made in the quick startup are then discarded. Then the previous settings are restored via the last restore point.

### 8.6.3 Connection to PLC

#### Overview

The quick startup step "Connection to PLC" indicates that this drive can only be commissioned in conjunction with a controller.

In this step, you specify whether Motion Control is carried out by the drive or the controller.


#### Requirement

- The drive has been completely created and specified in the device configuration. Optionally, a controller (PLC) also can be created in the device configuration and networked with the drive.
- For activated user management (UMAC):  
The function rights for configuring in the quick startup are activated for your user role. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

#### Procedure

The setting "Define the connection to PLC" is automatically preassigned with "Yes". SINAMICS S200 drives can only be operated in conjunction with a PLC. For this reason, this setting cannot be changed.

Proceed as follows to define whether Motion Control is executed by the drive or by the controller:

1. Specify whether the Motion Control is executed by the drive or by a connected controller. The activated area of the switch is marked blue (). Click the white part of the switch if you wish to change the active setting.
2. Save the setting in the project.
3. Click "Next" to display the next quick startup step.

#### Result

Startdrive defines the default settings of the setup based on your specifications.

---

#### Note

##### EPOS settings deactivated

If you defined that the ramp-function generator function (Motion Control) is performed by a connected control system, then quick startup steps "Application" and "Application settings" are deactivated. EPOS settings are then not possible.

---

## 8.6.4 Application

### Overview

In quick startup step "Application" you define in detail in which application area the drive is to be used. You define the following settings:

- The control mode of the application
- The motion type of the drive
- The encoder (type) for the position control
- The modulo correction

### Requirements

- The drive has been completely created and specified in the device configuration.
- In quick startup step "Connection to the PLC", it is defined that the ramp-function generator in the drive should be used.
- For activated user management (UMAC):  
The function rights for configuring in the quick startup are activated for your user role. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

### Procedure

1. Select how you wish to control your drive in your application. Define the required control mode. Click the appropriate button:
  - Speed control  
The speed is controlled as precisely as possible to track a specified setpoint.
  - Positioning  
A "Basic positioner (EPOS)" calculates the traversing profile to traverse an axis as quickly as possible to a target position.

It is impossible to select several control modes simultaneously. For control mode "Speed control" no other settings are possible.  
For control mode "Positioning", the following detailed settings are required:
2. Select the motion type that you wish to use for the drive when positioning.  
For more information about the motion type, see Section "Axis type (Page 369)".
3. Select the measurement units for position and velocity.  
The units that can be set depend on the motion type. All values are reset to the default values when changing the measurement unit and the axis type.
4. Use the settings for the motor encoder used for the position control:
  - Acquire the number of motor revolutions, load revolutions, and leadscrew pitch.
5. Optionally, activate option "Modulo correction activation" and define the modulo range.
6. Click "Next" to display the next quick startup step.

**Result**

Startdrive defines the default settings of the setup based on what you have specified. The telegrams that match the selected application area are also preset.

When control mode "Positioning" is activated, then the additional quick startup step "Application settings" is activated. In this step, you define the settings for active homing or for an absolute encoder adjustment.

You can also configure additional EPOS functions via the function view "Parameterization > Technology functions > Basic positioner".

**8.6.5 Limits****8.6.5.1 Configuring limits when "Speed control" is active****Overview**

When speed control is active, you define the basic properties of the closed-loop drive control in the "Limits" quick startup step. When positioning is active, all other settings are visible (see Section "Configuring limits when "Positioning" is active (Page 261)").

Designation	Number	Description
Positive speed limit	p1083	Maximum speed for the positive direction. The set value must be less than or equal to the maximum speed (p1082).
Negative speed limit	p1086	Maximum speed for the negative direction. The set value must be less than or equal to the maximum speed (p1082).
Torque limit upper	p1520	Defines the upper torque limit or torque limit when motoring.
Torque limit lower	p1521	Defines the lower torque limit or the torque limit when generating.
Quick stop Ramp-down time (OFF3)	p1135	The OFF3 ramp-down time is effective from the maximum speed down to the motor standstill.

**Note****Displaying the actual motor data**

The actual motor data of the drive are shown in dialog "Show motor data". The dialog can be opened using button "Show motor data". The following values can be configured:

- Supply voltage
- Motor ambient temperature
- Direction of rotation

## Requirement

- The motor used in the device configuration of the drive has been completely specified and configured.
- Control mode "Speed control" is activated in the quick startup step "Application". When "Positioning" is active other settings are displayed.
- For activated user management (UMAC):  
The function rights for configuring in the quick startup are activated for your user role. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

1. When required, adapt the specified default values (see the table above).
2. Click "Next" to display the next quick startup step.

## Result

Startdrive defines the default settings of the setup based on what you have specified.

### 8.6.5.2 Configuring limits when "Positioning" is active

#### Overview

The following settings are displayed in quick startup step "Limits" if a basic positioner is used in the drive for positioning. You define the following limits for EPOS in the lower part of the step:

- Traversing profile  
Defines the maximum traversing profile limitation referred to the velocity.
- Ramp-down times  
Defines the maximum delay time referred to the maximum speed.
- Jerk  
Jerk limitation delays the acceleration.
- Traversing range limitation  
The traversing range is dynamically limited by the software limit switch, or alternatively, via the hardware limit switch.

---

**Note**

**Displaying the actual motor data**

The actual motor data of the drive are shown in dialog "Show motor data". The dialog can be opened using button "Show motor data". The following values can be configured:

- Supply voltage
  - Motor ambient temperature
  - Direction of rotation
- 

**Requirement**

- The motor used in the device configuration of the drive has been completely specified and configured.
- Control mode "Positioning" is activated in the quick startup step "Application".  
When "Speed control" is active other settings are displayed.
- For activated user management (UMAC):  
The function rights for configuring in the quick startup are activated for your user role.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).



## Procedure

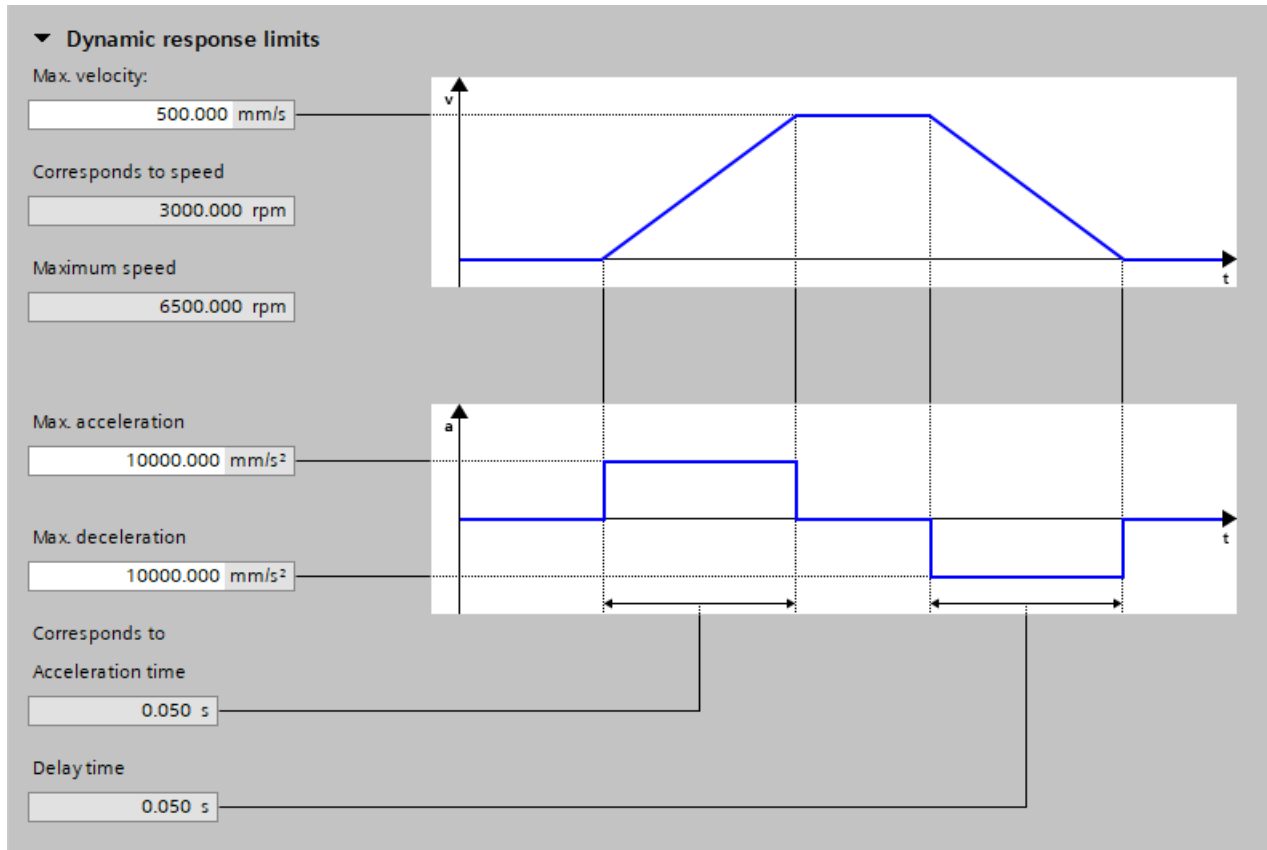


Figure 8-7 Specifying the maximum traversing profile limitation

### Step 1: Specifying the maximum traversing profile limitation

Proceed as follows to specify the maximum traversing profile limitation

1. Correct the specified value for the maximum velocity in the "Max. velocity" field.  
The maximum velocity defines the maximum travel velocity. A change immediately limits the velocity of an active traversing block.  
The "Corresponds to speed" field displays the converted speed, the "Maximum speed" field displays the maximum speed.  
The limitation acts when positioning (jogging, processing the traversing blocks, direct setpoint input, home position approach).
2. Correct the specified value for the acceleration at "Max. acceleration".  
The "Corresponds to Acceleration time" field displays the converted acceleration time.
3. Correct the specified value for the deceleration at "Max. deceleration".  
The "Delay time" field displays the converted deceleration time.  
The maximum acceleration and maximum deceleration specify the maximum acceleration for increasing the velocity and the maximum deceleration for reducing the velocity. Both values act when positioning (jogging, processing the traversing blocks, direct setpoint input, home position approach).
4. Save the settings.

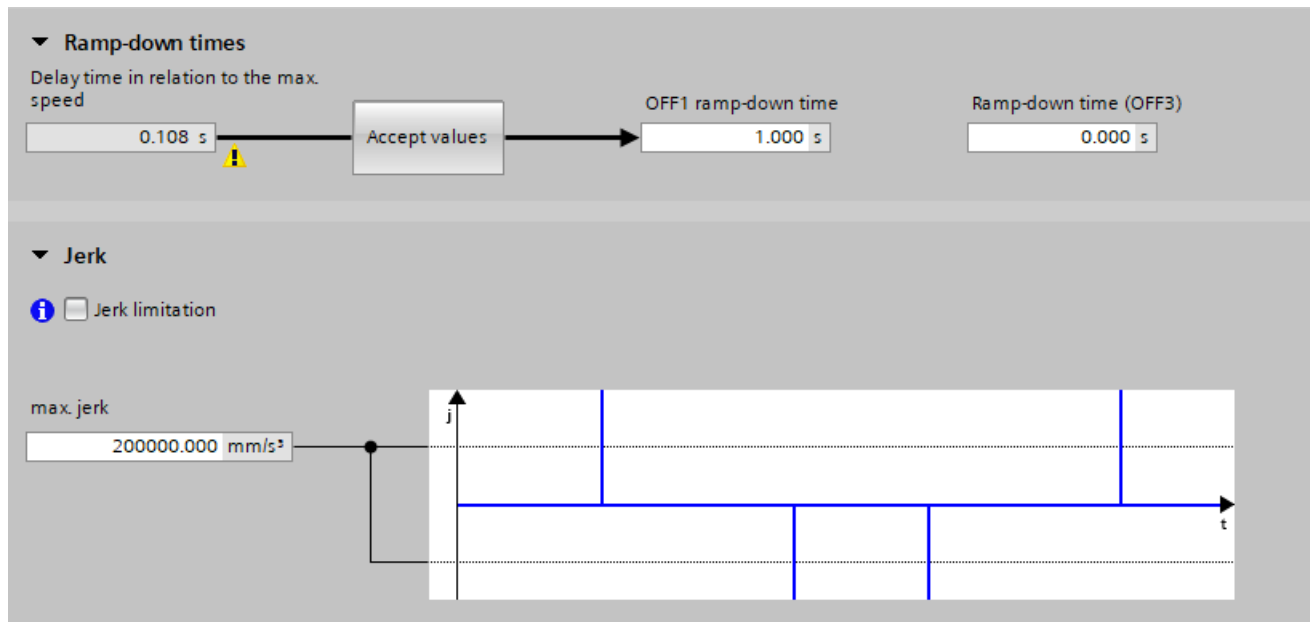


Figure 8-8 Specifying the ramp-down time and jerk limitation

**Step 2: Specifying the ramp-down time referred to the maximum speed**

The velocity, acceleration and deceleration limitation values do not apply for faults or for a safe stop. Instead, the ramp-down times for OFF1 and OFF3 are used. The proposed ramp-down time is displayed in the "Delay time in relation to the max. speed" field.

1. If you want to apply this delay time to OFF1, click the "Accept values" button. The delay time is now applied to the "OFF1 ramp-down time" (p1121) field.
2. Enter the required value in field "Ramp-down time (OFF3)" (p1135).
3. Save the settings.

**Step 3: Specifying the maximum jerk limitation**

A jerk limitation delays the acceleration. Proceed as follows to specify the maximum jerk limitation:

1. Activate option "Jerk limitation". (p2575)
2. Enter a value for the maximum jerk limitation under "max. jerk" (p2574). The converted values for the minimum acceleration time and minimum deceleration time are displayed in the fields below the graphic.
3. Save the settings.

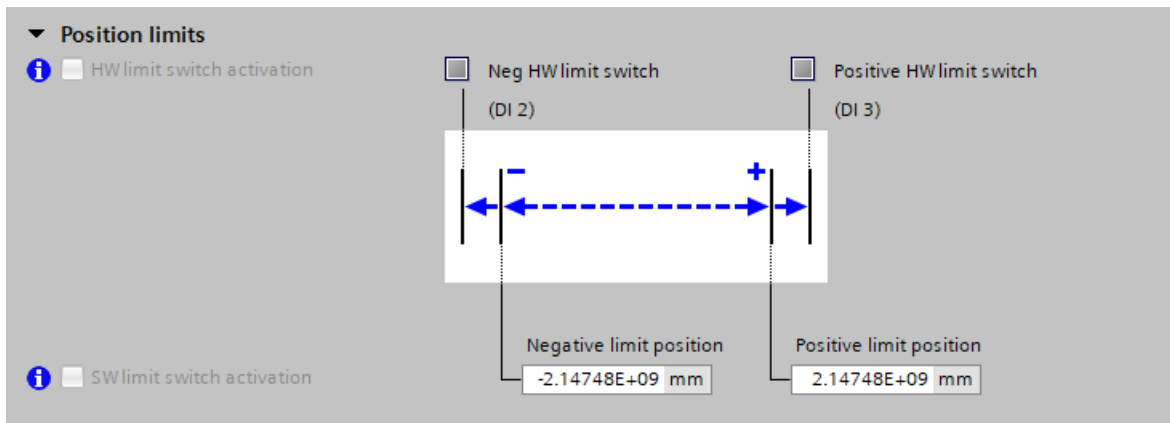


Figure 8-9 Defining traversing range limitation

**Step 4: Defining traversing range limitation**

1. Activate option "SW limit switch activation" if you wish to limit the traversing range using the software.
2. Then enter the values for the negative end position and the positive end position. Both values are preassigned with the factory settings.
3. Activate option "HW limit switch activation" if you wish to limit the traversing range optionally or additionally on the hardware side.
4. Save the settings.

**Result**

Startdrive defines the default settings of the setup based on what you have specified. These default settings have an impact on the following EPOS settings in the guided quick startup or under "Parameterization > Technology functions > Basic positioner".

**8.6.6 Application settings****Overview**

Make the positioning settings for EPOS in quick startup step "Application settings". The positioning settings listed depend on the defined application area.

**Description of function**

You can make the following EPOS settings:

- Active homing
- Absolute encoder adjustment

8.6 Carrying out guided quick startup

You can make the following additional EPOS settings via function view "Parameterization":

- Passive homing
- Limitations
- Position monitoring functions
- Direct setpoint specification (MDI)
- Traversing blocks
- Jogging

In addition, in the same function view you can also see the status of all EPOS functions.

8.6.6.1 Configuring active homing

Overview

With an incremental measuring system, the drive can be homed without requiring a higher-level control. Active homing can be used to traverse to a home position.

The drive itself controls and monitors the homing cycle. There are 3 homing modes for active homing.

Requirements

- The drive has been completely created and specified in the device configuration.
- In quick startup step "Connection to the PLC", it is defined that the drive executes the Motion Control.
- "Positioning" as method of control is defined in quick startup step "Application".
- For activated user management (UMAC):  
The function rights for configuring in the quick startup are activated for your user role. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

Procedure

1. In quick startup step "Application settings" open the detailed settings for homing mode "Active homing".  
The detailed settings are displayed.
2. Activate the required homing mode in field "Homing mode selection".

①	Use the encoder zero mark and reference cam
②	Use the encoder zero mark
③	Use the external zero mark via digital input

3. Activate the required approach direction (positive or negative).

4. Optional (for ① and ③):  
For home position approach, enter the approach velocity to the reference cam in field "to the reference cam".

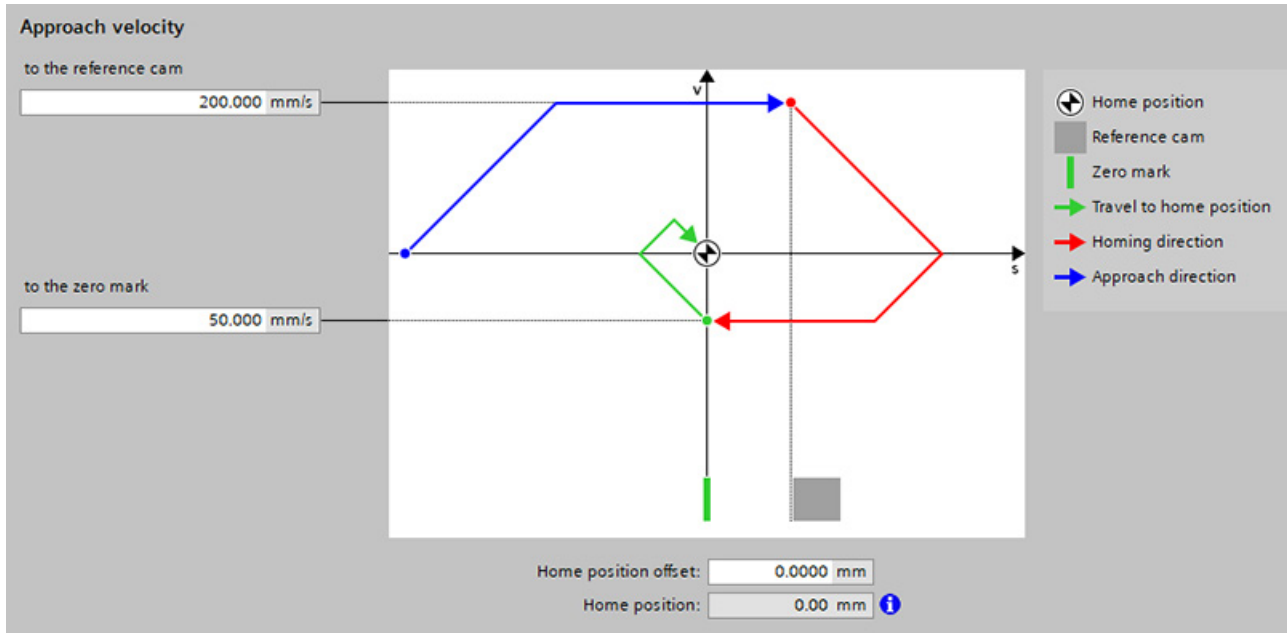


Figure 8-10 Example: configuring approach velocity in mode ①

5. Enter an approach velocity in field "to the zero mark".  
For home position approach, this approach velocity is applicable after detecting the reference cam to search for the zero mark.
6. Optional (for ③):  
From drop-down list "Digital input of the external zero mark" (p0494) select the input terminal to connect a zero mark replacement.  
This parameter supplies incorrect measured values during an active measurement. In this particular case, it is not permissible to write to the parameter.
7. Enter the required home position offset for the home position approach in field "Home position offset".
8. Enter the position value of the home position coordinate in field "Home position".
9. Click on "Next" if you do not wish to make any additional EPOS settings.  
The quick setup step "I/O configuration" is displayed.

## Result

Drive configuration continues based on the selected positioning settings.

### 8.6.6.2 Configuring absolute encoder adjustment

#### Overview

Absolute encoders must be adjusted during commissioning. When the machine is switched off, the position information of the encoder is retained. The absolute encoder is therefore first adjusted to the home position, e.g. by jogging.

#### Requirements

- The drive has been completely created and specified in the device configuration.
- In quick startup step "Connection to the PLC", it is defined that the ramp-function generator in the S200 drive should be used.
- Control mode "Positioning" is activated in the quick startup step "Application".
- An online connection to the drive has been established.
- For activated user management (UMAC):  
The function rights for configuring in the quick startup are activated for your user role. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

#### Procedure

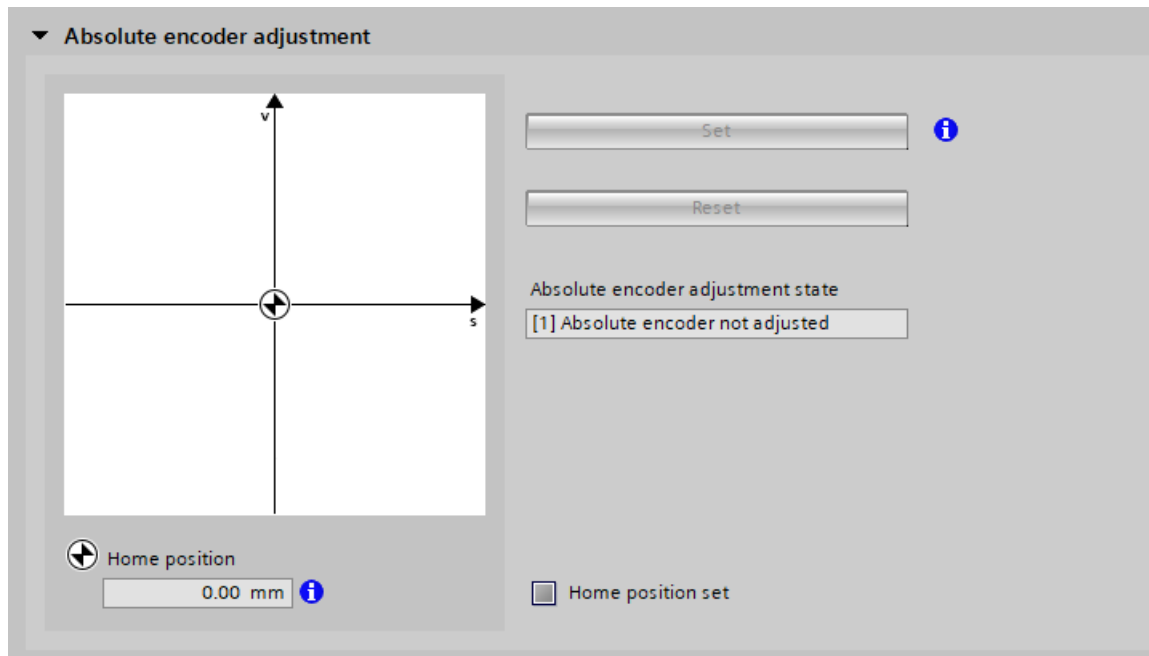


Figure 8-11 Absolute encoder adjustment

**Setting the home position coordinate**

1. In quick startup step "Application settings", open the detailed settings for homing mode "Absolute encoder adjustment".  
The absolute encoder adjustment settings are displayed.
2. Optional: Establish an online connection to the drive if an online connection does not already exist.
3. Correct the home position value in the field "Home position".
4. Click "Set".  
Status display "Home position set" is then updated. When the adjustment is correct, entry "Absolute encoder adjusted" is displayed in field "Absolute encoder adjustment state".

**Resetting the home position coordinate**

1. In quick startup step "Application settings", open the detailed settings for homing mode "Absolute encoder adjustment".  
The absolute encoder adjustment settings are displayed.
2. Click "Reset".  
Status display "Home position set" is then updated. After the reset, entry "Absolute encoder not adjusted" is displayed in field "Absolute encoder adjustment state".
3. Optional: Then set a new home position coordinate.

**Result**

Drive configuration continues based on the selected positioning settings. Click on "Next" if you do not wish to make any additional EPOS settings.

The quick setup step "I/O configuration" is displayed.

## 8.6.7 I/O configuration

### Overview

In quick startup step "I/O configuration", make the basic settings for the digital inputs of the converter:

- Digital input (DI 0 to DI 3)  
You can assign control signals (high/low) or functions to all digital inputs using drop-down lists. The program prevents the same signals or functions being assigned to different digital inputs.  
You can alternatively use digital inputs DI 0 and DI 1 as measuring probe and therefore evaluate in the control.
- Digital output (DO 0 to DO 1)  
You can assign status signals (high/low) or functions to the two digital outputs using drop-down lists. Different signals or functions should be assigned to the two digital outputs. The program prevents a multiple assignment.

---

#### Note

##### S200 Basic

SINAMICS S200 Basic drives only have one DO.

---

### Requirement

- The motor used in the device configuration of the drive has been completely specified and configured.
- You do not want to manage the digital inputs via a technology object of the control system.
- For activated user management (UMAC):  
The function rights for configuring in the quick startup are activated for your user role. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).



## Procedure

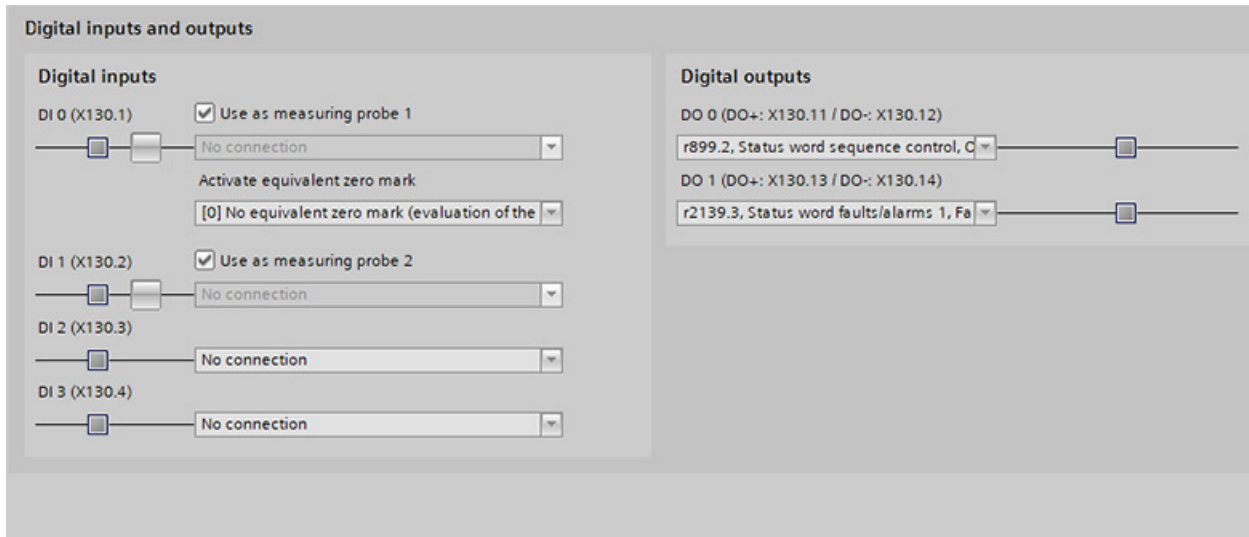




Figure 8-12 Presettings of digital inputs and outputs

1. If you wish to use the digital inputs as measuring probe, for DI 0 or DI 1 activate option "Use as measuring probe".  
Both digital inputs can be activated as measuring probe. The corresponding drop-down list is then deactivated.  
When activating a DI as measuring probe, option "Activate equivalent zero mark" is displayed.
2. Optional: Click the  icon to invert the signal.  
When the signal is inverted, the icon changes to .
3. In the drop-down list "Activate equivalent zero mark", select whether you wish to use an equivalent zero mark or whether this equivalent zero mark should apply for DI 2 or DI 3.
4. If you want to additionally execute status signals of functions via digital inputs, in the digital input, select the appropriate signal or the required function.  
You can use all 4 digital inputs for this purpose. However, it is not permissible that the required digital input is activated as measuring probe (drop-down list deactivated).  
The program prevents the same signal being selected a multiple number of times or the same function for several digital inputs.
5. In the drop-down list under "Digital outputs", select the required status signals or functions for digital outputs DO 0 to DO 1.
6. Click "Next" to display the next quick startup step.

### 8.6.8 Telegrams (offline only)

#### Overview

The telegrams of the drive were preconfigured by the specifications previously defined in the guided quick startup.

## 8.6 Carrying out guided quick startup


In quick startup step "Telegrams", you can optimize these default settings if this is necessary for your drive.

### Requirement

- The motor used in the device configuration of the drive has been completely specified and configured.
- Optionally, a controller (PLC) can also be created in the device configuration and networked with the drive.
- There is no active online connection between the drive and operating unit. Telegrams can only be configured offline.
- For activated user management (UMAC):  
The function rights for configuring in the quick startup are activated for your user role. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

### Procedure

Proceed as follows to configure the telegrams:

1. Select the desired standard telegram from the "Telegram" drop-down list.
2. Correct the preset reference speed in the field with the same name.
3. Click  if you wish to optimize the settings of the telegrams used in the telegram configuration.  
The properties of the PROFINET interface are displayed in the inspector window. Make the required settings under "Telegram settings (Page 286)".
4. Switch back to the quick startup step "Telegrams".
5. Click "Next" to display the next quick startup step.

### Result

The telegrams for communication are configured.

## 8.6.9 Rotate & optimize

### Overview

Optimize the converter online in quick startup step "Rotate & Optimize". To do this, use either the control panel or One Button Tuning (OBT). No settings can be made in offline mode.

---

#### Note

##### **Alternatively: Operate the converter from the control panel**

If you wish to traverse the converter, click on the "Use control panel" button. Instead of One Button Tuning, the control panel is now displayed in the quick startup step. Proceed as described in the following chapter: "Traversing the converter from the control panel with speed setpoint (Page 289)".

---

### Requirement

- The motor used in the device configuration of the drive has been completely specified and configured.
- There is an active online connection between the drive and the operating unit.
- The editing mode is activated.
- For activated user management (UMAC):  
The function rights for configuring in the quick startup and using the control panel are activated for your user account.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

### Procedure

Proceed as follows to carry out the optimization settings:

1. Choose the dynamic response setting for the OBT based on the mechanical system of your machine.  
The OBT optimizes the converter based on the selected dynamic response setting.
  - Conservative  
Slow closed-loop speed control – low mechanical load
  - Standard  
Best compromise between fast closed-loop speed control and low mechanical load
  - Dynamic  
Fast speed control – high mechanical load
2. In the "Distance limit" field, enter the angle through which the motor and the connected machine are permitted to turn for the required measurements (e.g. 360°) without the mechanical system being damaged.  
The angle should be at least 60° in order to determine useful controller parameters. Longer traversing distances result in better optimization results.

## 8.6 Carrying out guided quick startup

3. If you want to perform extended settings, click the "Extended settings" button.  
The "Machine property" dialog opens. You obtain information about the conditions under which you can increase the speed control dynamic performance. If you wish to increase the dynamic response, activate option "Set the current setpoint filter with loop compensation".
4. Establish an online connection to the converter if up until now you had worked in the offline mode.
  - Activate master control.
  - Start the OBT.
  - Check the optimization results.
  - Deactivate the master control.
5. Click on "Next" to display the next quick startup step.

### Result

The result of the optimization is displayed in the "Status" area. The "Optimization result" list compares the settings changed by the optimization with the earlier settings prior to optimization.

If optimization was not successful, repeat the optimization, possibly with modified data.

### More information

For more information about One Button Tuning, see Section "Performing One Button Tuning (Page 291)".

## 8.6.10 "Overview" function view

### 8.6.10.1 Offline mode

#### Overview

After completing the commissioning steps in the guided quick startup, here, you will find a compilation of all settings that were made offline.

If necessary, you can load the settings made offline from the "Overview" function view into the device.

## Requirement

- The drive has been completely created and specified in the device configuration.
- For activated user management (UMAC):  
The function rights for configuring in the quick startup are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

Proceed as follows to download the project data to the device:

1. In the "Overview" function view, click "Download".  
To transfer the protected project data, you must log into the device with your user data.
2. Proceed as described in Chapter "Loading project data into the drive (Page 226)".

### 8.6.10.2 Online mode

## Overview



After completing the commissioning steps in the guided quick startup, here, you will find a compilation of all settings that were made online. You can sort and export the corresponding information or also compare it with the factory settings.

## Requirement

- The drive has been completely created and specified in the device configuration.
- There is an active online connection between the converter and the operating unit.
- The online configuration was completed.
- For activated user management (UMAC):  
The function rights for configuring in the quick startup are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

Proceed as follows to upload project data from the device:

1. After the online commissioning has been completed, if you want to transfer the current project data into the TIA project of your operating unit, click "Finish".  
 is subsequently displayed in function view "Overview".
2. Click  and proceed as described in the following chapter: "Loading data from the drive into the project (Page 224)".

## 8.7 Configuring the converter

### Overview

After carrying out the basic configuration of devices in the project, make the extended settings for commissioning.

### Description of function

The following areas are provided in display area "Parameterization":

- **Basic parameterization**  
Here you can view the preassigned basic parameters of the converter, and if necessary you can change individual values. If the motor brake is available, then you can also set that this brake is forced open.
- **Inputs/outputs**  
Here you can configure the digital inputs and outputs of the converter.
- **Technology functions**  
Here you configure the basic positioner (EPOS) and pulse train output (PTO).

---

#### Note

##### Guided quick startup

You can also easily configure the settings of the basic parameterization and the digital inputs using the guided quick startup (Page 253).

---

#### Note

##### Telegram configuration

You configure the telegrams used in the converter configuration in the inspector window in the telegram configuration. The most important settings are listed in Chapter "Configuring telegrams (Page 285)".

---

### 8.7.1 Basic parameterization

#### Overview

You can parameterize the following operating parameters in the basic setting:

- Device supply voltage
- Direction of rotation
- Speed limit
- Torque limit

- Ramp-down times  
After an OFF1 command, and for a quick stop OFF3.
- Forced opening of the brake  
Only if the motor being used is equipped with a holding brake.

### Requirement

- The drive has been completely created and completely specified in the device configuration.
- For activated user management (UMAC):  
The function rights required to read the drive data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

### Procedure

Proceed as follows to carry out the basic parameterization:

1. Change the default settings of this function view.
2. Optionally, if the motor being used is equipped with a "Standard holding brake", and you wish to permanently open this brake:  
Click "Force open brake".
3. Save the project to apply the settings.

## 8.7.2 Configuring digital inputs and outputs via technology objects

### Overview

The function of the digital inputs DI 0 (≙ activate measuring probe 1) and DI 1 (≙ activate measuring probe 2) is already pre-configured and activated.

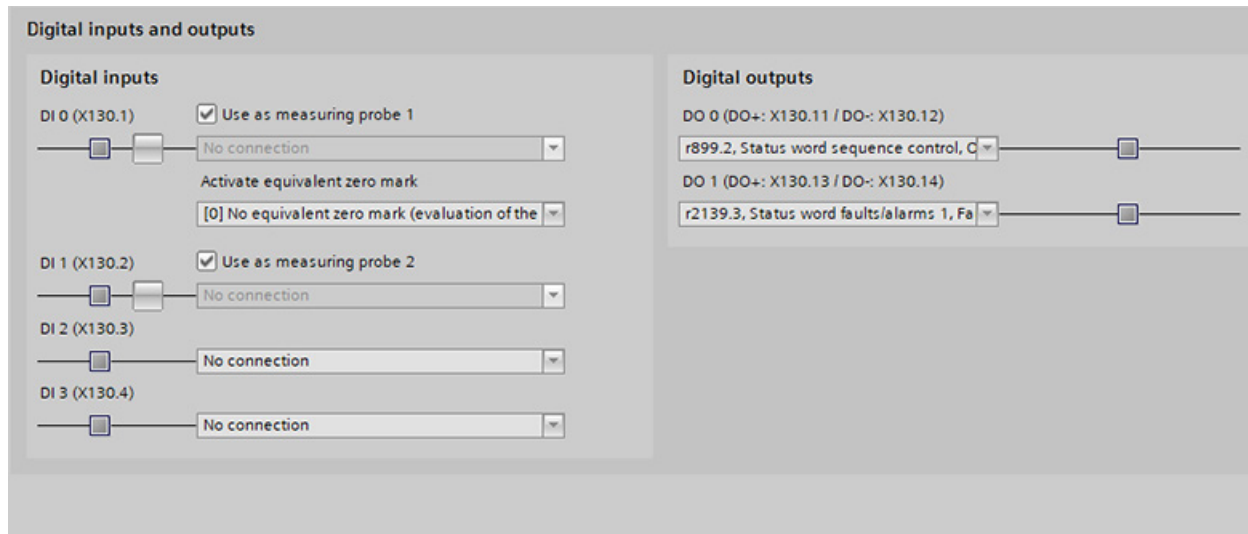


Figure 8-13 Configuring digital inputs and outputs

### Requirement

- The drive has been completely created and completely specified in the device configuration.
- For activated user management (UMAC):  
The function rights required to edit the drive data are activated for your user role. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

### Procedure

Proceed as follows to configure digital inputs and outputs:

1. If you are not using any measuring probes, you can deactivate them manually using the check box.  
Measuring probes are generally available. The default setting is correct in these cases.
2. In the drop-down list "Activate equivalent zero mark", select whether you wish to use an external zero mark and whether this external zero mark should apply for DI 0 or DI 1.
3. If required, you can assign a function for each digital input/output using the drop-down list.
4. Save the project to apply the settings.



### 8.7.2.1 Configuring a measuring probe using the technology objects

#### Requirement

- The project includes a control system, and is connected to the converter.
- A technology object "PositioningAxis\_1" is created for the control system and is active.

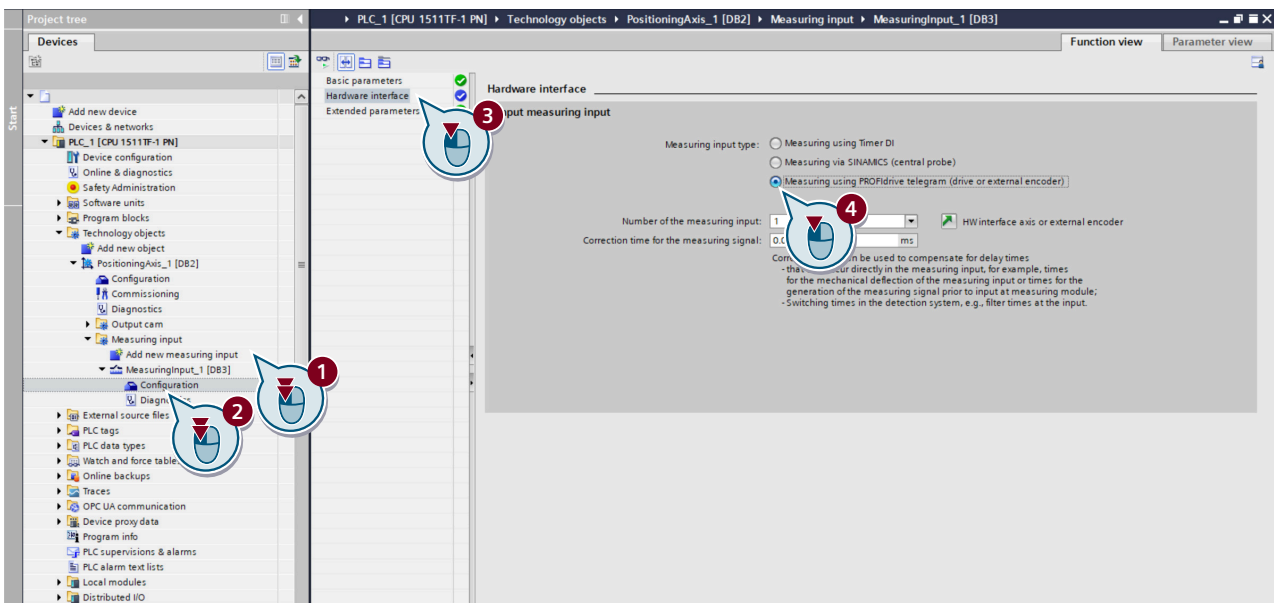
#### Procedure

Proceed as follows to use a measuring input:

1. In the project navigation, expand the follow entries in the order specified below:
  - Technology objects
  - PositioningAxis\_1
  - Measuring inputs

The "Add new measuring input" entry is displayed.

2. Double-click the "Add new measuring input" entry ①.  
A new measuring input is created and additional functions are displayed.



3. Double-click the "Configuration" entry ②.  
The corresponding screen form opens in the device view.
4. Click the "Hardware interface" option ③ in the secondary navigation.  
The corresponding screen form opens.

## 8.7 Configuring the converter

5. Select the measuring input type "Measuring using PROFIdrive telegram (drive or external encoder)" ④.  
A measuring input of the type "Measuring using PROFIdrive telegram (drive or external encoder)" is created.  
With measurement using a PROFIdrive telegram, only one measuring input can be active at the same time on an actual value or encoder in the PROFIdrive telegram. A maximum of two measuring inputs can be configured using PROFIdrive on an actual value or encoder in the PROFIdrive telegram.
6. To correct the measuring time point, set a correction time.

### Result

A measuring input of the type "Measuring using PROFIdrive telegram (converter or external encoder)" is created and can be used.

## 8.7.3 Technology functions

### 8.7.3.1 Basic positioner

#### Overview

The basic positioner (EPOS) calculates the traversing profile for the time-optimized traversing of the axis to the target position.

#### Requirement

- The device configuration is completely executed (an encoder has been assigned).
- The configuration in the guided quick startup has been completely executed.
- Control mode "Positioning" is activated in the quick startup step "Application".
- For activated user management (UMAC):  
The function rights for editing drive data are activated for your user account.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Description of function

You can define the following settings in the function view with the same name:

- Limitation
  - Position limits  
You can activate and configure the software and hardware limit switches to limit the traversing range.
  - Dynamic response limits  
You can define the limitations of the traversing profile by specifying the maximum velocity, acceleration, deceleration, and jerk.
- Homing
  - Active homing  
You can select from three active homing modes to traverse the axis to a home position. The drive itself then controls and monitors the homing cycle. You can also decide whether absolute encoder adjustment should be automatically performed after home position approach.
  - Passive homing  
You select the input terminal for direct measuring probe 1 in the function view. When the measuring probe is detected, the difference between the home position and the determined measured value is corrected on-the-fly.
  - Absolute encoder adjustment  
Absolute encoders must be adjusted during commissioning. When the machine is switched off, the position information of the encoder is retained. The absolute encoder is therefore first adjusted to the home position, e.g. by jogging.
- Position monitoring functions
  - Position/standstill monitoring  
You specify the positioning window, positioning monitoring time, standstill window, and standstill monitoring time. The drive sets the "Setpoint stationary" signal to 1 as soon as the setpoint for the position within a positioning operation no longer changes. With this signal, the drive starts to monitor the actual position value.
  - Following error monitoring  
You specify the maximum following error for the actual position value. If this following error is violated, the position control cancels the current positioning operation and generates a fault message.
- Direct setpoint specification (MDI)  
The setpoints listed in the function view are entered via PLC communications. You check these setpoints in the function view for diagnostic purposes.
- Traversing blocks  
You can define a maximum of 32 traversing blocks in a configuration table in the function view. For each traversing block, you define the required settings (Page 383) and make fixed stop configuration. An external control can subsequently select a traversing block that has been selected.

## 8.7 Configuring the converter

- Jog  
You set the following parameters for incremental jogging:
  - Velocity setpoint (either for jog 1 or 2)
  - Traversing distances (either for jog 1 or 2)
- Function status  
You view the active EPOS operating mode, existing enables, and the detailed status of individual EPOS functions.

### More information

For more information about the basic positioner, see Section "Basic positioner (EPOS) (Page 368)".

For more information about configuring the basic positioner in Startdrive, see the information system of the TIA Portal.

### 8.7.3.2 Configuring Pulse Train Output (PTO) (for the S200 converter only)

#### Overview

Pulse Train Output (PTO) is referred to as pulse/direction interface. The pulse/direction interface comprises two signals. The frequency of the pulse output represents the speed and the number of output pulses for the section to be traversed. The direction output defines the traversing direction. As a consequence, the position is specified in precise increments.

#### Requirements

- The drive has been completely created and specified in the device configuration.
- A control (PLC) is created in the device configuration and networked with the drive. The required technology objects for the control have been completely created in the device configuration (e.g. "TO\_PositioningAxis").
- For activated user management (UMAC):  
The function rights for editing drive data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

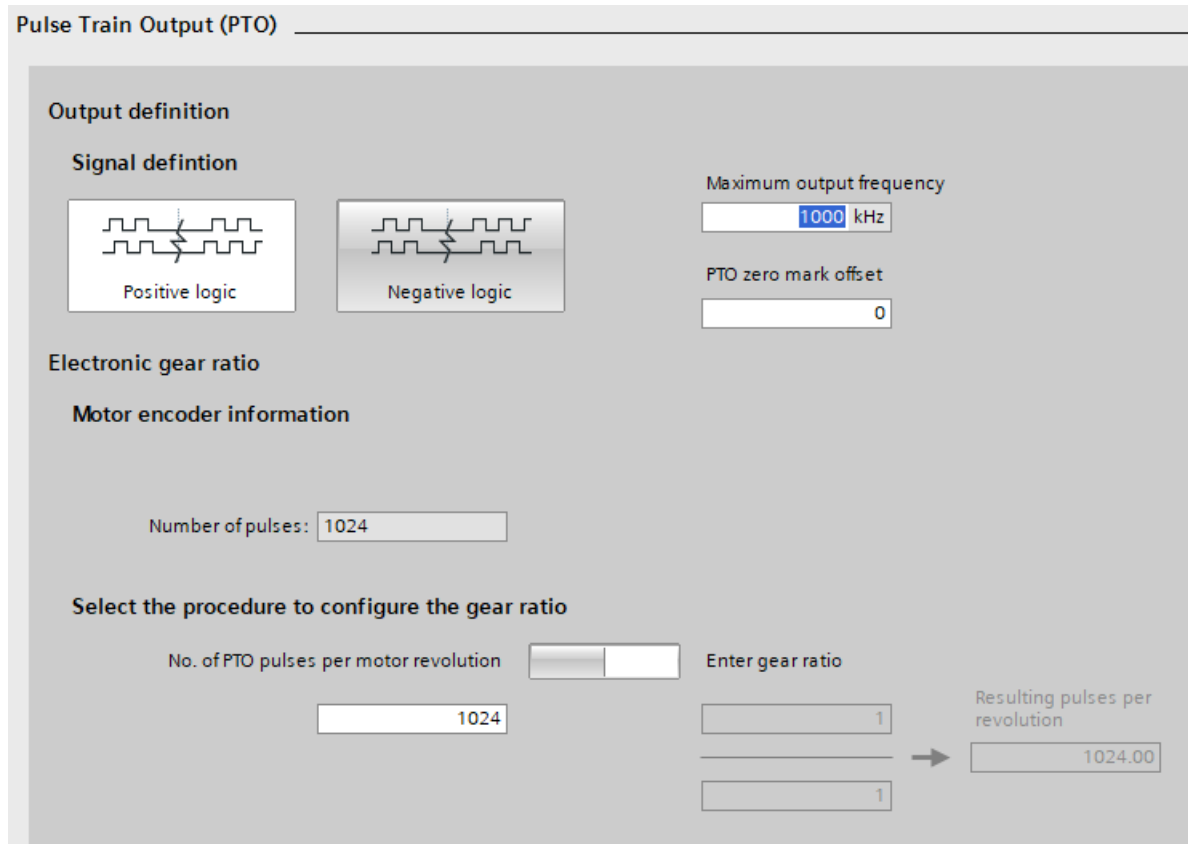


Figure 8-14 Configuring PTO

Proceed as follows to configure PTO in the function view:

1. Define whether the PTO position actual value should be inverted. Click on the appropriate button:
  - Positive logic (= not inverted, default setting)
  - Negative logic (= inverted)
2. Correct the value for the maximum output frequency.  
This value represents the velocity and the number of output pulses for the section to be traversed.
3. Using a switch, define which values you wish to use to define the gearbox ratio.
  - Number of PTO pulses per motor revolution
  - Gearbox ratio is entered using numerator/denominator = p4410/p4409

4. Proceed as follows according to your selection:
  - If you select "No. of PTO pulses per motor revolution", enter the number of pulses per motor revolution.
  - If you select "Enter gear ratio", enter the gearbox ratio directly in the two input fields above and below the fraction bar.  
The resulting pulses per revolution are calculated from this entry.
5. Save the settings in the project.

## 8.7.4 Configuring telegrams

### 8.7.4.1 Calling the telegram configuration

#### Overview

The "Telegram configuration" function is part of the device configuration, and is displayed in the inspector window.

You can either call this function via the project tree or for Startdrive S drives, also via direct links from the communication screen forms.

Information about the telegrams used in the converter is provided in "Communication telegrams (Page 332)".

#### Requirement

- The converter has been completely created and specified in the device configuration.
- For activated user management (UMAC):  
The function rights required to configure telegrams in the inspector window are activated for your user role.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

#### Procedure

1. Double-click the entry "Device configuration" in the project tree.
2. Click on the converter in the device configuration.
3. Click the entry "Telegram configuration" under "PROFINET interface [X150]" in the "Properties" tab of the inspector window.  
The settings for the telegram configuration are displayed below the respective fieldbus interface.

### 8.7.4.2 Telegram settings

#### Overview

The dialog box for the telegram configuration is structured as follows:

Name	Item	Link	Telegram	Length	Extension	Direction	Type	Partner	Partner data area
▼ Drive control-Telegrams	1								
Send (Actual value)		↗	SIEMENS telegram 1..	12 w...	—	→	CD	unspecified	
Receive (Setpoint)		↖	SIEMENS telegram 1..	17 w...	—	←	CD	unspecified	
<Add telegram>									

- ① Drive object display
- ② Link to the communication screen forms of the particular drive object
- ③ Drop-down list with the available telegrams
- ④ Length of the telegram
- ⑤ Telegram extension
- ⑥ Communication direction (send direction → /receive direction ←)
- ⑦ Type of communication  
CD = Controller - Device for PROFINET IO
- ⑧ Name of the partner (controller)
- ⑨ Partner data area
- ⑩ Area for drive objects (setpoints and actual values)
- ⑪ Area for the interfaces
- ⑫ Area for the communication partners of the drive (e.g. controller or another converter)

### 8.7.4.3 Adding telegrams

#### Overview

You can add the following telegrams once, as long as they are still not available in the telegram list of the drive object:

- Torque telegram 750



## Requirement

- A drive and a partner are created in the project, and connected via a fieldbus. The drive is selected and the parameter editor is open.
- For activated user management (UMAC):  
The function rights required to configure telegrams in the inspector window are activated for your user role.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

Proceed as follows to add a telegram:

1. Open the following menu path from the secondary navigation of the inspector window:  
"Properties > PROFINET interface > Telegram configuration".
2. Click the "Add telegram" entry (at the required drive object).  
A drop-down list opens. All telegram types that have not been assigned yet can be used.
3. Select the required telegram type.  
The entries for the telegram are created.
4. If required, now change the telegram type, e.g. from telegram 30 to telegram 901.
5. Save the project.

## 8.8 Optimizing commissioning

### 8.8.1 Establishing an online connection to the converter

#### Overview

Before you traverse your drive with the control panel or perform optimization of the axis, you need to connect to your drive online.

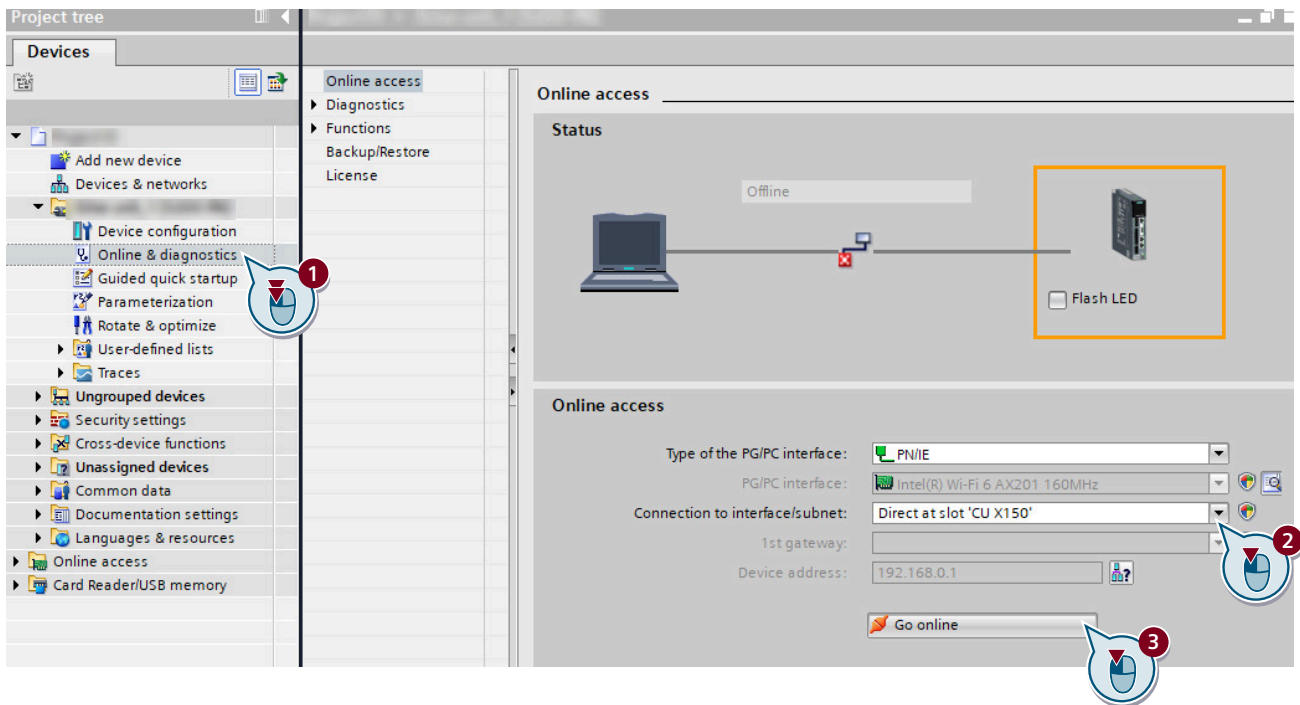
#### Requirement

- The configuration is loaded into the SIMATIC S7 controller.  
The converter can therefore be accessed in the PROFINET network via the SIMATIC S7 controller and your operating unit is connected to the corresponding PROFINET interface of the controller (e.g. X1).
- For activated user management (UMAC):  
The function rights required to edit the drive data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

#### Procedure

Proceed as follows to establish an online connection to your converter:

1. Double-click "Online & diagnostics" in the project navigation under the S200 drive.  
The "Online access" function view is displayed.
2. Select the PROFINET network in the "Connection to interface/subnet" drop-down list.
3. Click "Go online".



## Result

The online connection to the drive is established.

## 8.8.2 Traversing the converter from the control panel with speed setpoint

### Overview

Traverse the drive from the control panel and test the settings made. The control panel can only be activated for one drive.

By activating the control panel, you assume master control of the drive. Although all enable signals are removed before returning the master control, the setpoints and commands still come from the original parameterized sources after the master control is returned.



**WARNING**

**Risk of death if the safety instructions for the control panel are not carefully complied with**

The safety shutdowns from the higher-level controller have no effect with this function. The **Stop with space bar** function is not guaranteed in all operating states. Incorrect operation by untrained personnel – without taking into account the appropriate safety instructions – can therefore result in death or severe injury.

- Make sure that this function is only used for commissioning, diagnostic and service purposes.
- Make sure that this function is only used by trained and authorized skilled personnel.
- Ensure that EMERGENCY OFF circuit is always implemented as hardware circuit.

**Note**

**Drive responds immediately**

Although all enable signals are removed before returning the master control, the setpoints and commands still come from the original parameterized sources after the master control is returned.

**Requirement**

- The drive has been completely created and specified in the device configuration.
- There is an active online connection between the converter and the operating unit.
- Display area "Rotate & Optimize" was opened via the project tree.
- For activated user management (UMAC):  
The function rights required to edit the drive data and to use the control panel are activated for your user account.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

**Procedure**

You can traverse the drive using both the control panel of the technology object and the control panel of the drive itself.

Proceed as follows to traverse the converter from the control panel of the drive:

1. Select the "Control panel" function in the secondary navigation.  
The corresponding function view is displayed.
2. Click the "Activate" button to enable master control for the drive.  
The "Activate master control" message window is displayed.

3. Read the alarms carefully and check the value for the monitoring time.  
The monitoring time specifies the time during which the connection from your operating unit to the drive is cyclically monitored. The monitoring time is preset to 2000 ms and should only be changed if required.
4. Confirm the monitoring time with "OK".  
The message window closes and the control panel is enabled. The drive enables are set automatically.
5. In the "Speed" input field, enter a value  $\leq$  the maximum speed.
6. Traverse the drive in the desired direction using the controller buttons.
7. Click the "Deactivate" button to disable master control.  
The "Deactivate master control" dialog window is displayed.
8. Confirm deactivation of master control with "Yes".

## Result


The current values of various parameters are displayed under "Actual values". Enables and faults are displayed under "Drive status". In addition to "Active fault", the currently pending fault is displayed.

### 8.8.3 Performing One Button Tuning



#### Overview

For One Button Tuning (OBT), the mechanical drive train is measured using short test signals. This means that you optimally adapt the controller parameters to the mechanical system being used. Using this optimization routine, you can determine the optimum controller settings with just a few entries.

#### Requirement

- The drive has been completely created and specified in the device configuration.
- There is an active online connection between the drive and the operating unit.
- Display area "Rotate & Optimize"  was opened via the project tree.
- For activated user management (UMAC):  
The function rights required to edit the drive data and to use the control panel are activated for your user account.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure




1. Select the "One Button Tuning" function in the secondary navigation.  
The corresponding function view is displayed.
2. Select the desired setting (e.g. "Conservative") in the "Dynamic settings" area.  
The "Standard" setting is selected by default.
3. Enter a value (e.g. 360) in the input field "Path limit from 0° to".  
Sensible controller parameters are obtained from an angle > 90°.
4. Confirm the entry with "Enter".  
The error icon  is then hidden.
5. Click the "Activate" button to enable master control for the drive.  
The "Activate master control" message window is displayed.
6. Read the alarms carefully and check the value for the monitoring time.  
The monitoring time specifies the time during which the connection from your operating unit to the drive is cyclically monitored. The monitoring time is preset to 2000 ms and should only be changed if required.
7. Confirm the monitoring time with "OK".  
The message window is closed and One Button Tuning is activated.
8. Click the "Start" button to start the optimization.  
Optimization of the drive is performed. After optimization is completed successfully, the green status icon  appears in the "Drive status" area and the changed values are shown in the "Actual values" area.

### NOTICE

#### Unpredictable drive response when making manual changes after One Button Tuning

Manual changes of the calculated values can lead to unpredictable behavior of the drive. This can damage the drive.

- After the One Button Tuning, carefully check that the optimized values are not subsequently changed manually.
- Always first restore the factory settings if you do not want to use the values optimized using One Button Tuning.

9. Click the "Deactivate" button to disable master control.  
The "Deactivate master control" dialog window is displayed.
10. Confirm deactivation of master control with "Yes".
11. Click  to store the result of the optimization permanently in your drive.
12. To load the data from your drive into the project, first select the drive unit in the project tree and then click  in the toolbar.
13. Click  to store the result of the optimization permanently in your project.

## Result

You have performed the optimization routine and saved the result of the optimization permanently in your drive and project.

## 8.8.4 Terminating the online connection from the converter

### Overview


After you traverse your converter from the control panel or optimize the axis, you need to disconnect the online connection to the converter.

### Requirement

- For activated user management (UMAC):  
The function rights required to edit the converter data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

### Procedure

Proceed as follows to

1. Click the drive in the project tree.
2. Click  in the menu bar.

### Result

The online connection to the converter is disconnected.

## 8.9 Using online diagnostic functions

### 8.9.1 Diagnostic icons

#### Overview

Faults, alarms and any maintenance that is required are indicated using diagnostic icons.













#### Description of function

The diagnostics icons are displayed in the following areas of the TIA Portal:

- Project tree
- Device view
- Device overview

The icons are displayed in both the network as well as topology views.

Table 8-4 Overview of the possible diagnostic icons

Icon	Meaning
	No fault or maintenance required
	Maintenance required
	Maintenance requirement for a subordinate component
	Maintenance request
	Maintenance request for a subordinate component
	Fault/error
	Fault/error on a subordinate component
	Connection error to the device
	Establish a connection
	The diagnostic status is determined.
	The configured device and the actual device have incompatible types.
	The device is only available in the offline configured device configuration and has been deactivated.

### 8.9.2 Display messages

#### Overview

The diagnostic icons, which are displayed in the network and topology views, are assigned to specific messages.




## Requirement

- For activated user management (UMAC):  
The function rights required to read the drive data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

Proceed as follows to display messages:

1. Double-click a diagnostics icon, for example .  
The inspector window opens.
2. Click the "Message display" tab.  
All current messages are displayed.

### 8.9.3 Calling diagnostic functions

#### Overview

In the diagnostics view, you can see important information about the drive or make important basic settings.

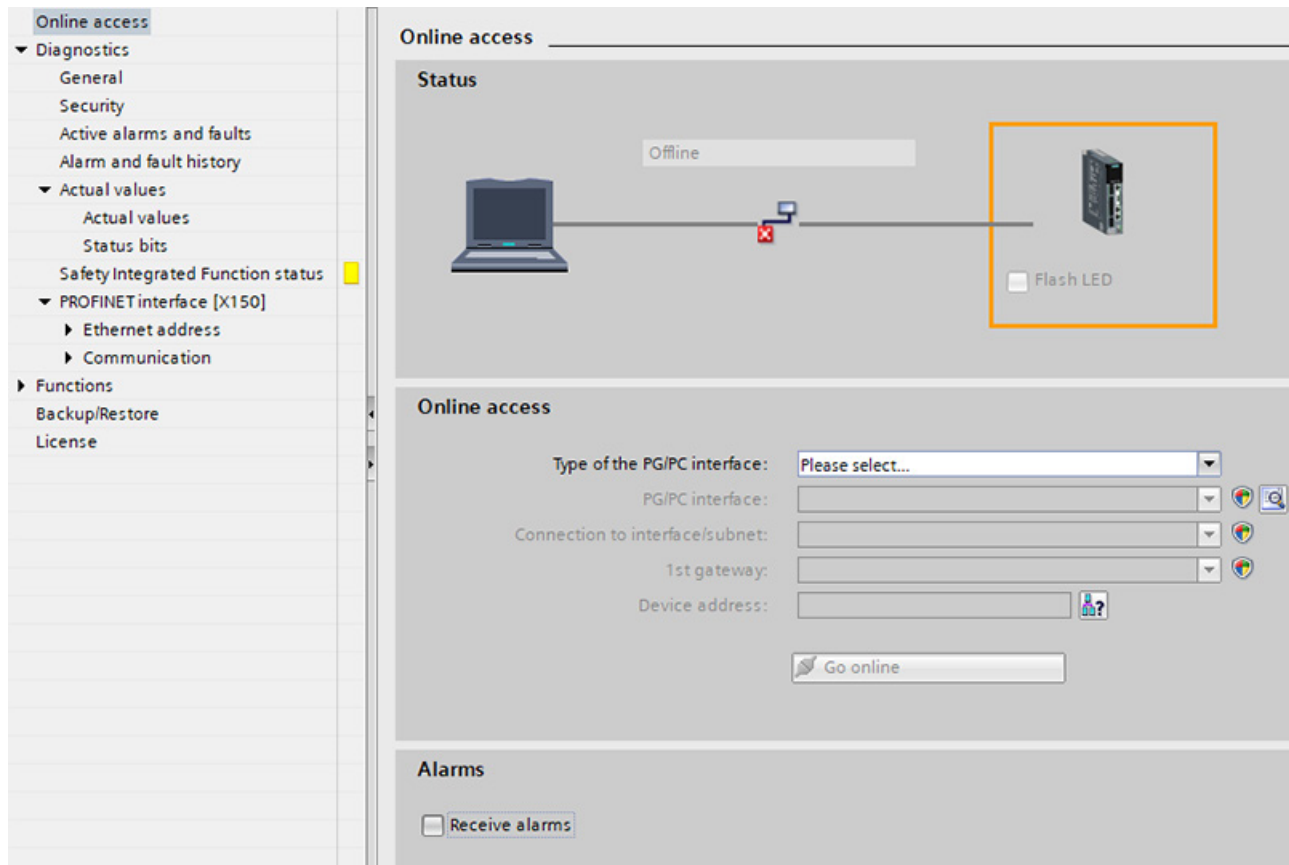


Figure 8-15 Overview: diagnostic functions

#### Requirement

- For activated user management (UMAC):  
The function rights required to read the drive data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

Proceed as follows to call the diagnostic functions:

1. In the project tree, double-click on menu "Online & 'Diagnostics".  
Diagnostics and diagnostic functions are displayed in the secondary navigation and can be called from here.
2. Select the "Online access" entry in the secondary navigation.
3. Select the network interface of your operating unit.
4. Click "Go online".  
The online connection to the converter is established.
5. Click "Go offline" in the menu bar.  
The online connection to the converter is disconnected.

## Overview

In the "Diagnostics" area, you can receive the following information via the secondary navigation:

- General
- Active alarms and message history
- Actual values
- Safety Integrated functional status
- PROFINET interface (X150)

A description of how you can use these functions on your converter is provided below.




## Requirement

- There is an online connection between the converter and the operating unit.  
Diagnostic information can only be read out in the online mode.
- For activated user management (UMAC):  
The function rights required to read the drive data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Description of function

You call the individual diagnostic information in the secondary navigation of the diagnostics view.

The following information on the connected converter is provided in the diagnostics view:

- **General**  
Information about component, module and manufacturer
  - You can identify the converter, and the most important converter data are displayed.
- **Security**  
Information about security settings of the connected converter  
You can find more information in Chapter "Security (Page 298)".
- **Active messages**  
Information about active alarms and faults
  - For a fault, the status signal ZSW1.3 is sent. Faults must be acknowledged once the cause has been resolved. To do this, use the function icon at the top of the function view ().
  - For an alarm, status signal ZSW1.7 is set. The alarm is also entered into the alarm buffer. Alarms are self-acknowledging.
- **Message history**
  - The message history records all alarms and faults.
  - Using the function icons in the function view, you can either delete the fault buffer () or export to a CSV file ().
- **Actual values**  
Information about the most important parameter actual values and status bits
- **Safety Integrated functional status**  
Information on the current status of STO
- **PROFINET interface (X150)**
  - Ethernet address  
Information about IP parameters (IP address and subnet mask) and network connection (MAC address)
  - Communication  
Information about send and receive directions (PZDs of telegrams e.g. 105)  
More detailed information on PZDs and telegrams is provided in Section "Communication (Page 299)".

## 8.9.4 Security

### Overview

The "Security" function, which are displayed in view "Diagnostics" to set security settings of the converter.

## Requirement

- There is an online connection between the converter and the operating unit. Diagnostic information can only be read out in the online mode.
- The user administration (UMAC) is activated for the project and converter. The following applies:  
The function rights required to read the converter data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Description of function

A summary of the active security settings of the connected converter is displayed in diagnostics view "Security".

- Logged-in user:
  - The user that is logged into the converter.  
OR
  - No logged-in user, as UMAC is not active.  
In this case, Siemens recommends that you activate UMAC.
- Ports & protocols:  
Displays the activation state for the interfaces of the following areas:
  - Web server access
  - Fieldbus and associated protocols
  - S7 commissioning reports
  - DHCP configuration
- UMAC:  
Shows certain UMAC settings which are activated for the converter. Shows, for example, whether UMAC is active and what rights the user account "Anonymous" has.


You can only change the displayed security settings offline in the inspector window of the converter in the project.

## 8.9.5 Communication

### 8.9.5.1 Receive direction

#### Overview

As standard, the components and interconnections of PROFIdrive telegrams in the receive direction for the converter are displayed in this function view (e.g. 105 or 750).

You can add additional telegrams via the telegram configuration (). The content of the selected telegram is then displayed in the "Supplementary data" area.

## Requirement

- For activated user management (UMAC):  
The function rights required to read the drive data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Description of function

The process data in the receive direction are created automatically.

Only those telegrams available for the converter are offered. The following information of the displayed telegrams is displayed:

Table 8-5 Telegram structure

Telegram type	PZD	Display of the value	Format switchover	Control words
	The numbering and arrangement of the process data.	Value of the process data (PZD)	The value of the process data is switched to a different representation (hex, bin, dec).	List of the control words that are transmitted in the telegram.
PROFdrive 3, 5, 102, 105	X	X	X	X
Torque supplementary telegram 750	X	X	X	X

### 8.9.5.2 Send direction

#### Overview

As standard, the components and interconnections of PROFdrive telegrams in the send direction for the converter are displayed in this function view (e.g. 105 or 750).

You can add additional telegrams via the telegram configuration (). The content of the selected telegram is then displayed in the "Supplementary data" area.

## Requirement

- For activated user management (UMAC):  
The function rights required to read the converter data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Description of function

The interconnections for the process data in the send direction are created automatically for the standard and manufacturer-specific telegrams.

The following information of the displayed telegrams is displayed:

Table 8-6 Telegram structure

Telegram type	Status words	Value	Format switchover	PZD
	List of the status words that are transferred in the telegram.	Value of the process data (PZD)	The value of the process data is switched to a different representation (hex, bin, dec).	Numbering and arrangement of the process data.
PROFdrive 3, 5, 102, 105	X	X	X	X
Torque supplementary telegram 750	X	X	X	X

## 8.9.6 Functions

### 8.9.6.1 Overview

#### Overview

In the "Functions" area, you can call the following functions via the secondary navigation of the diagnostic view and make settings within them:

- Assign IP address
- Firmware update
- Assign PROFINET device name
- Reset PROFINET interface parameters
- Set time

#### Overview

To restore the converter to the delivery state, you need to reset the PROFINET interfaces of the converter in addition to restoring the factory settings.

If the converter is connected to a controller while the PROFINET interfaces are being reset, the controller assigns new interface parameters to the converter immediately after the reset. To prevent this, switch the controller to "Stop" mode before the reset or terminate the connection between controller and converter.

## Requirement

- The connection between the converter and control system is disconnected.
- For activated user management (UMAC):  
The function rights required to edit drive data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

Proceed as follows to reset the parameter assignment of the PROFINET interfaces to the factory settings:

1. Expand the "Functions" entry in the secondary navigation.
2. Click the "Reset of PROFINET interface parameters" entry.  
The corresponding screen form opens.
3. Select one of the following options:
  - Retain I&M data  
If the option "Retain I&M data" is active, the I&M1 to I&M3 data are retained.
  - Delete I&M data  
If the option "Delete I&M data" is active, the I&M1 to I&M3 data are deleted.
4. Click the "Reset" button.

## Result

The parameters of the PROFINET interfaces are reset. The reset data are displayed in the "Online access" function view.

## More information

More information on restoring the factory settings is provided in Chapter "Restore factory settings (Page 306)".

### 8.9.6.2 Setting the time-of-day

#### Overview

The option "Synchronize with an NTP server" is activated when the "Set time" diagnostics view is called up for the first time.




## Description of function

For the operation of a drive, the definition of a drive time is important. The following options are available:

- Synchronize with NTP server  
If the drive is connected to other devices and a central NTP server is to provide the time for the connected devices. Alternatively, a controller can also act as NTP server.
- No synchronization, set time manually  
if the drive is initially operated without control.

You set the drive time in the diagnostics view as a direct function. If a time has already been set, it is displayed in the "Current drive time" area. If it is a synchronized time, the NTP server used is also displayed in the "Time source" field.

Alternatively, you can set the time settings offline in the inspector window of the drive. However, these settings are only transferred to the drive when the drive data are loaded.

If you differentiate the time settings between the drive and the project, this is indicated by the . In this case, reload the drive data into the drive.

### 8.9.6.3 Setting the time with synchronization (NTP server)

#### Requirement

- The drive is operated with a controller.
- There is an online connection between the drive and the operating unit.  
The direct functions can only be performed in online mode.

#### Procedure

Proceed as follows to set the time with synchronization (NTP server):

1. If the "Synchronize with NTP server" option is not enabled, enable this option.  
By default, the "Use PLC as NTP server" option is now enabled. If the drive is connected to a PLC, the IP address of the PLC is displayed.
2. Disable the option "Use PLC as NTP server".  
The input field for the IP address is cleared.
3. Enter the IP address of the desired NTP server in the "IP address" field.
4. Select the time zone of your country in the "Time zone" area.  
Example: For Central Europe, use the time zone "GMT+01:00".
5. Then click "Apply".

#### Result

The set time is directly transferred to the drive. The current time settings are displayed in the "Current drive time" area.

#### 8.9.6.4 Setting the time with synchronization (PLC as NTP server)

##### Requirement

- The drive is operated with a controller.
- There is an online connection between the drive and the operating unit.  
The direct functions can only be performed in online mode.

##### Procedure

Proceed as follows to set the time with synchronization (NTP server):

1. If the "Synchronize with NTP server" option is not enabled, enable this option.  
By default, the "Use PLC as NTP server" option is now enabled. If the drive is connected to a PLC, the IP address of the PLC is displayed.
2. Select the time zone of your country in the "Time zone" area.  
Example: For Central Europe, use the time zone "GMT+01:00".
3. Then click on "Apply".

##### Result

The set time is directly transferred to the drive. The current time settings are displayed in the "Current drive time" area.

#### 8.9.6.5 Setting the time without synchronization

##### Overview

A time of the drive without synchronization is used if the drive is operated for test purposes without a control unit connected.

##### Requirement

- There is an online connection between the drive and the operating unit.  
The direct functions can only be performed in online mode.

## Procedure

1. Activate the option "No synchronization, set time manually".  
You can then choose whether to copy the time from your operating unit or enter the time manually.
2. If you want to use the time from your operating unit, activate the option "Use time from PG/PC".  
Or  
If you want to set the time manually, proceed as follows:
  - In the "Drive time" area, set the current calendar day, the current year, and the desired time.
  - Select the time zone of your country in the "Time zone" area.  
Example: For Central Europe, use the time zone "GMT+01:00".
3. Then click "Apply".

## Result

The set time is directly transferred to the drive. The current time settings are displayed in the "Current drive time" area.

## 8.9.7 Backup and restore

### Overview

Perform the following actions in function view "Backup/Restore":

- Restart the drive now
- Retentively save the data in the converter
- Restore the drive data to factory settings  
Security and interface settings are excluded.

### 8.9.7.1 Restarting the drive

#### Requirement

- There is an online connection between the project and the drive (see Chapter "Establishing an online connection to the converter (Page 288)").
- The drive is switched on and has voltage.
- For activated user management (UMAC):  
The function rights required to edit the converter data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

## Procedure

Proceed as follows to restart the converter:

1. In the secondary navigation, click menu "Backup/Restore".  
The corresponding function view opens.
2. In the "Restart the drive" field, click on "Restart".

### 8.9.7.2 Retentively saving the drive data

#### Requirement

- There is an online connection between the project and the drive (see Chapter "Establishing an online connection to the converter (Page 288)").
- Optional SD card is inserted (for a parameter backup).
- For activated user management (UMAC):  
The function rights required to edit and save the drive data are activated for your user account.  
Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

#### Procedure

Proceed as follows to save the drive data retentively:

1. In the secondary navigation, click on menu "Backup/Restore".  
The corresponding function view opens.
2. Click the "Save" button in the "Save RAM data retentively" field.

#### Result

Drive data are retentively saved in the drive.

If you have inserted a SD card in the converter, the drive data are stored on the SD card in addition.

### 8.9.7.3 Restore factory settings

#### Overview

With this function, you restore the user-specific parameterization of the converter to factory settings.

The following data are retained when the factory settings are restored:

- Communication interface settings
- Security settings

- Language setting
- Date and time

In the following cases it may be necessary to restore the converter to factory settings:

- Incomplete commissioning
- If the motor is changed
- If there is uncertainty regarding the previous parameterization and/or the previous use of the converter

### Requirement

- There is an online connection between the project and the drive (see Chapter "Establishing an online connection to the converter (Page 288)").
- For activated user management (UMAC):  
The function rights required for "Restore factory settings" are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

### Procedure

Proceed as follows to restore factory settings:

1. In the secondary navigation, click on menu "Backup/Restore".  
The corresponding function view opens.
2. Click the "Start" button in the "Restore factory setting" field.

### Result

The converter is reset and then restarted. If the "RDY" and "COM" LEDs on the converter light up green, resetting is complete.

### More information

For a full reset of the converter, see Section "Reset of all user-defined settings to the factory setting via an SD card (Page 587)"

## 8.9.8 Overview of licenses

### Overview




In the online mode, in function view "License", you can view information about options/ functions that require licensing and also perform the following actions:

- View status of individual licenses.
- Load license file.
- Display and copy serial number of the SD card being used.
- Activate Trial License mode.

### Requirement

- For activated user management (UMAC):  
The function rights required to edit the drive data are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

### Description of function

Element	Description
General license status	Indicates the current license status (e.g. you do not have all of the licenses you need).
System response	Displays the system response to the current license status, e.g. "Blocks the drive from being switched on again."
Trial period	Displays of the Trial License status; e.g. "Trial License mode not active".
Serial number of the SD card	Serial number of the SD card and button to copy the serial number
Activate Trial License mode	Button for activating Trial License mode
Activate the license key file	Button for loading a license file
Save eCoL archive	Button for saving the license certificates to the file system of the operating unit
<b>Table columns</b>	
Status	The following icons indicate the status:  License is complete.  Trial License mode is active.  License is not available or the SD card with license is not inserted (under licensed).
Function that requires licensing	List of all used system options/functions subject to licensing
Existing/required licenses	The required number of licenses compared with the number of licenses included with the license key. For operation, the number of available licenses $\geq$ the number of licenses required.
License status	Displays the current status of the function subject to licensing.
Remaining operating time	Displays the remaining operating time of a trial period.

## 8.9.9 Updating the firmware in the Startdrive project

### Overview

You upgrade the converter firmware directly in the Startdrive project.

---

#### Note

##### Firmware version in Startdrive project and converter

Online connections between the Startdrive project and converter are only possible if the firmware versions in the project and the converter are the same.

- Create a new project if your current project works with a firmware version that is older than the firmware version of the converter. Set the firmware version of the project to the currently upgraded version of the converter. Apply all of the other settings from the old project.
  - If you are using an old Startdrive version, it may be necessary to install a new Startdrive version that supports the firmware version.
- 

### Requirement

- A backup is made before updating the firmware.
  - The ZIP file with the desired firmware is saved in the file directory of your operating unit.
- 

#### Note


An empty SD card must be inserted into the converter during update progress for storing the user data temporarily.

---

- A physical connection between the Ethernet interface of your operating unit and the Ethernet or PROFINET interface of your converter.
- For activated user management (UMAC):  
The function rights required for the firmware update are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

### Procedure

Proceed as follows to perform a firmware update directly from your project:

1. Open the  Online access entry in the project tree.
2. Select the network interface of your operating unit.
3. Double-click "Update accessible devices".  
The accessible device is displayed with the IP address.
4. Call the "Online & diagnostics" function for the displayed device.  
An online connection to the selected participant is established and the "Online access" function view opens.
5. Expand the "Functions" entry in the secondary navigation.

8.9 Using online diagnostic functions

6. Click the "Firmware update" entry.  
The corresponding function view opens.  
In the "Online data" area, the article number of the converter and the firmware version currently in use are displayed.
7. Click the "Browse" button in the "Firmware loader" area.  
A selection dialog opens.
8. Select the firmware file with the required version in the file system of your operating unit.  
The firmware file is displayed in the line with the same name in the "Firmware loader" area.
9. Check in the "Firmware version" field whether you have selected the required firmware version.
10. In the "Status" field, check that the firmware can be read.
11. Optional: Activate the option "Restart drive automatically".  
If this option is activated, there is no need to restart the converter manually after the firmware update. Step 13 is omitted in this case.
12. To load the firmware to the converter, click on "OK".  
The status of the firmware update is displayed in the "Status" field.  
The new firmware is installed. The installation may take up to 15 minutes or longer.

---

**Note**

**Check that the firmware has been updated**

Startdrive displays an appropriate message when completing the update. After the message has been displayed, using the LEDs, check whether the converter update has been completed.

---

13. Optional: If you have not activated the option "Restart drive automatically...", switch the converter off and on again.
14. Optional: Call the catalog information using the secondary navigation in the inspector window. Check whether the new firmware version is installed.



## 8.10 Checking using the trace function

### Overview

In a trace configuration, depending on the SINAMICS S drive being used, define the following:

- Signals to be recorded
- Recording duration
- Trigger conditions

### Requirement

- For activated user management (UMAC):  
The function rights required for trace configuration are activated for your user account. Details on this topic are provided in Chapter "Security settings in Startdrive" of Industrial Cybersecurity Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

**Description of function**

The trace configuration for S200 drives is characterized by the following special features and device-specific default settings:

- Preset trace signals:  
 For the first trace that you create for an S200 drive, the first four signals are preassigned with the following parameters, which are typical for Motion Control applications:
  - r0062 (Speed setpoint after filter)
  - r0061[0] (Actual speed unsmoothed: Encoder 1)
  - r0080 (Torque actual value)
  - r0479[0] (Diagnostics encoder position actual value Gn\_XIST1: Encoder 1)

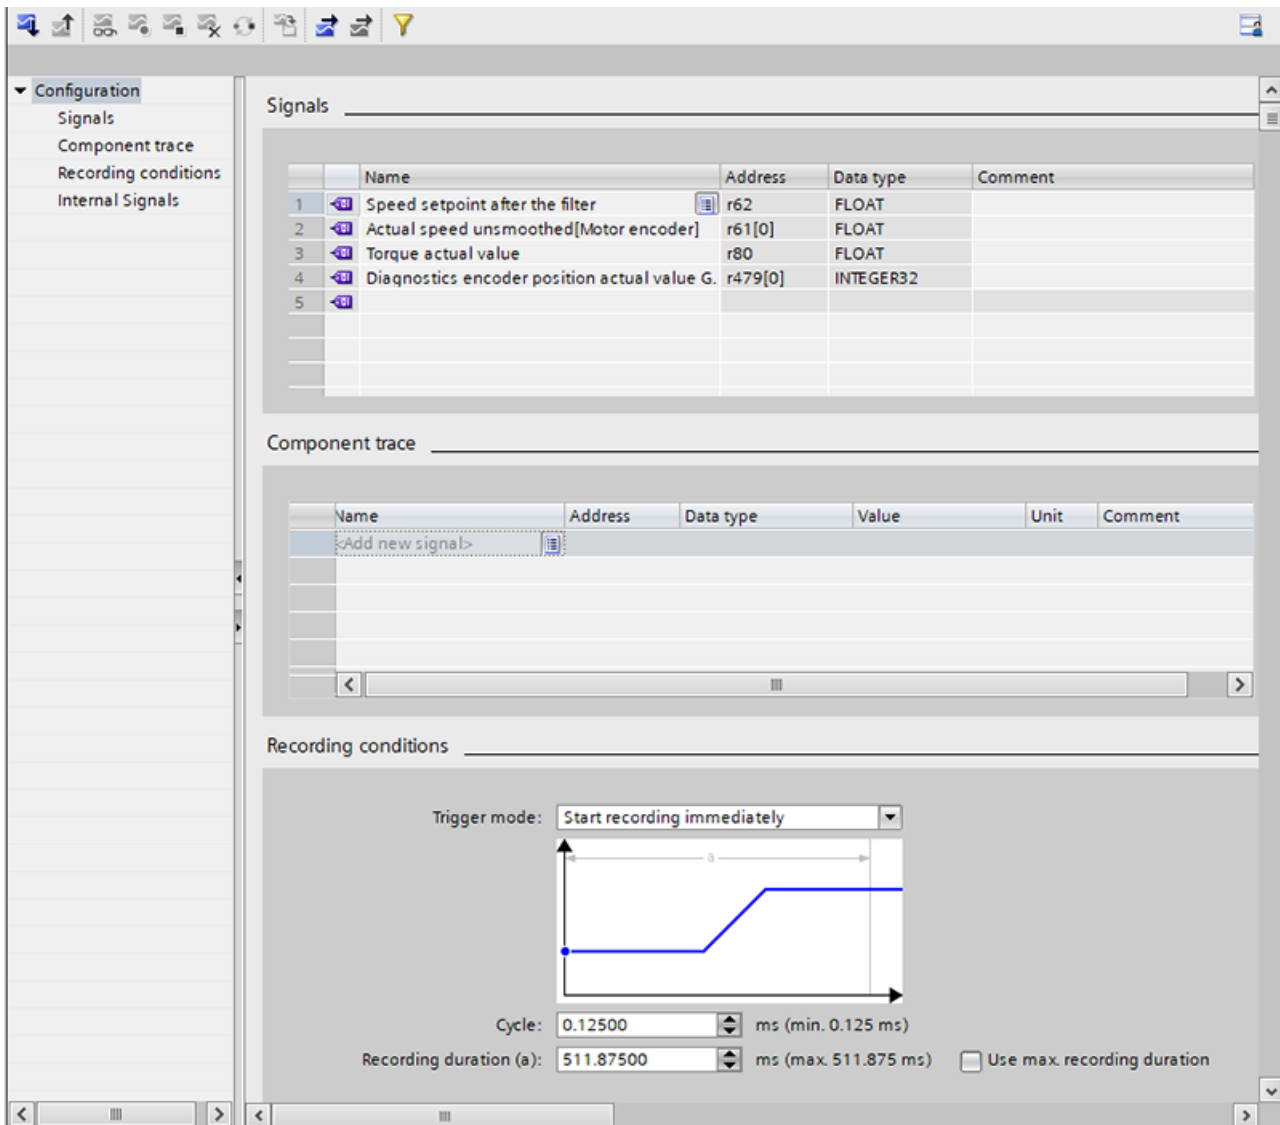


Figure 8-16 S200 trace called

No signals are preset for other traces you create for an S200 drive. Up to eight signals can be selected.



- Possible cycle times:  
In the "Cycle" input field of the trace configuration, you can enter the cycle time with which the trace should be recorded. The minimum cycle time for an S200 drive is 0.125 ms.
- Selecting signal bits based on plain text descriptions:  
By selecting a trigger variable, you can display individual signal bits based on plain text descriptions (e.g. "Drive control.control word sequence control.ON / OFF1") in the trace configuration and select them directly. A description of how you can select an individual signal bit and set a trigger event is provided below using the "Drive control.control word sequence control" trigger variable as an example.


## More information

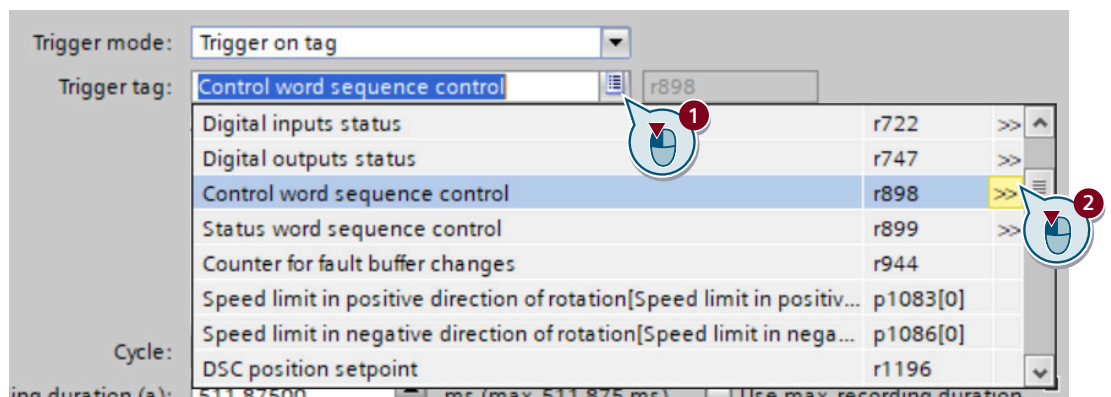More information about the trace function and configuration in the TIA Portal, see TIA Portal information system.

## Example

In the following application, you want to make the basic settings for evaluating a trace.


1. Define a trigger mode (e.g. "Trigger on tag") via the "Trigger mode" drop-down list.
2. To open the signal selection table, click the  in the "Trigger tag" input field. The signal selection table is displayed.
3. In the signal selection table, scroll to the desired signal (e.g. "control word sequence control").
4. Click  in the row with the desired signal to open the bit selection table. The bit selection table shows the bits of the selected signal in plain text (e.g. "control word sequence control.ON / OFF1").



5. Select the required bit.  
The selected bit is displayed in "①".

8.10 Checking using the trace function

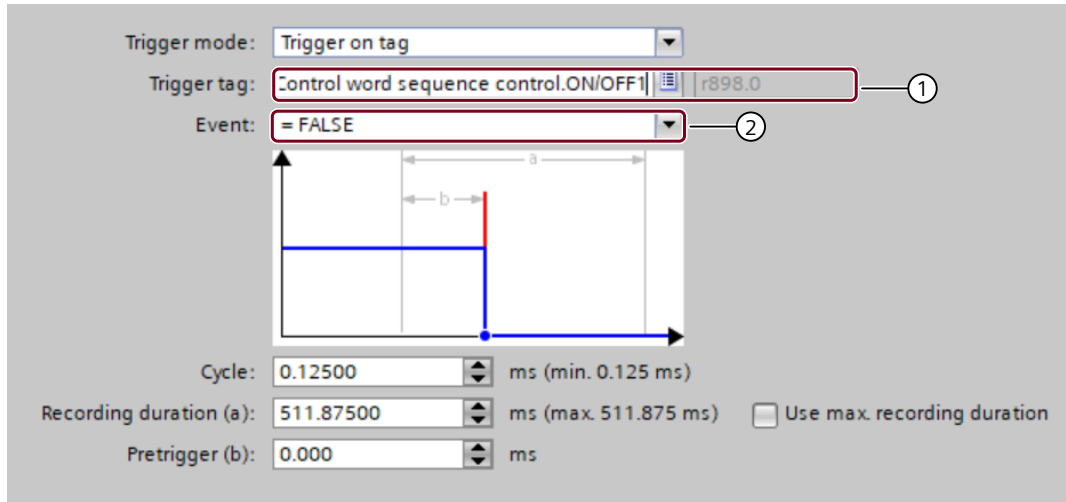- To show the "Event" input field ("②"), press <Enter>. The input field is displayed with a preset trigger event.



- Select the desired trigger event, if necessary, using the drop-down list in "②". The selected trigger event is displayed in "②".

# Series commissioning

## Overview

In series commissioning, the backed-up data and settings of a converter are loaded to other converters.

## Requirement

The target converter must satisfy the following prerequisites:

- The rated power of the target converter is the same as the rated power of the converter from which the backed-up data and settings originate.
- The firmware version of the target converter is higher than or equal to the firmware version of the converter from which the backed-up data and settings originate.
- The machines that are commissioned via series commissioning are identical in terms of the application, converter and motor.
- The target converters are all configured to factory settings.

## Description of function

---

### Note

PROFINET-IP address and PROFINET device name are transferred for series commissioning. You must configure the PROFINET IP address and the PROFINET device names for the new devices later.

---

There are two options when carrying out series commissioning of the converter:

- **Series commissioning with SD card**  
All settings on the SD card (including user management and access control) are transferred to the converter.
- **Series commissioning using the web server**  
All settings from the parameter backup (including user management and access control) are transferred to the converter.  
When performing series commissioning, also observe the fundamental principles for working with the web server (see section "Fundamentals (Page 164)").

## 9.1 Series commissioning with SD card

### Requirement

- The machines that are commissioned via series commissioning are identical in terms of the application, converter and motor.

### Procedure

Proceed as follows to perform series commissioning using an SD card:

1. Insert an empty SD card with a maximum capacity of 32 GB (e.g.: 6SL5570-0GC00-0AA0) into the card slot of the converter while it is switched off.
2. Switch on the converter and perform commissioning.
3. Save the settings at the end of commissioning.  
This saves the settings in a non-volatile manner not only on the converter but also to the SD card.
4. Switch off the converter and remove the SD card from the converter.
5. Insert the SD card into the next, and switched off converter.
6. Switch on the converter and wait until it has ramped up - the RDY LED lights green.  
During ramp-up, the converter takes the settings from the SD card - including user management and access control.
7. Switch off the converter and remove the SD card from the converter.

Repeat steps 5 to 7 for all converters to which you want to transfer these settings.

## 9.2 Series commissioning using the web server

### Requirement

- The machines that are commissioned via series commissioning are identical in terms of the application, converter and motor.

### Procedure

Proceed as follows to perform series commissioning using the web server:

1. Switch on the converter supply voltage and use your operating unit, e.g. a PC, to perform commissioning.  
You can find more information in Chapter "Commissioning (web server) (Page 163)".
2. Save the settings at the end of commissioning.
3. Select "Backup and Restore" in the navigation - and back up the parameter settings in a file using "Back up parameters".
4. Connect your operating unit to the next converter.
5. Switch on the supply voltage to the converter.
6. Enter the IP address of the converter, e.g. `https://169.254.11.22`, in the browser.
7. Select the option "Exit the Security Wizard and continue with low security settings".  
User management and access control (UMAC) is not activated.  
You can configure the security settings at a later time, see Chapter "Protection & Security (Page 211)".
8. In the navigation, select "Backup and Restore" - and load the parameter settings using "Restore drive data from backup file" to the converter.  
The converter accepts the parameters (including from user management and access control) from the file and restarts.

Repeat steps 4 to 7 for all converters to which you want to transfer these settings.





# Functions

## 10.1 Overview of the functions

### Overview

The converter receives its commands from the higher-level controller via the PROFINET fieldbus interface. It uses different telegrams to realize different control functions.

### Description of function

#### Supported telegrams

- Telegram 1
- Telegram 2
- Telegram 3
- Telegram 5
- Telegram 7
- Telegram 9
- Telegram 102
- Telegram 105
- Telegram 111
- Telegram 112
- Supplementary telegram

#### Control functions

- Stopping method at servo-off
- Vertical axis
- Speed limit
- Torque limit
- PTO function (for S200 PN only)

### 10.1 Overview of the functions

- Motor overload protection
- Basic positioner (EPOS)
  - Mechanical system
  - Limits
  - Position monitoring
  - Homing
  - Traversing blocks
  - Direct setpoint input (MDI)
  - Jogging

#### **Safety functions (for S200 PN only)**

- Safe Torque Off (STO) safety function  
Safe Torque Off (STO) is a safety function that immediately ensures that torque or force-generating energy is not fed to the motor.

## 10.2 Inputs/outputs

### 10.2.1 Digital inputs

#### Overview

A digital input detects a signal coming from outside. The function of a digital input is adjustable.

#### Description of function

S200 PN and S200 Basic PN have four digital inputs, DI0 ... DI3. A parameter r0722.x is assigned to each digital input. You can adjust the function of digital inputs by interconnecting the signals to r0722.x in commissioning tools.

The following signals are assignable to the digital inputs.

Table 10-1 Assignable signals

Parameter	Signal	Type	Description	Available control mode	
				EPOS	S
c2104	Acknowledge all faults (RESET)	Edge 0→1	0→1: reset alarms	✓	✓
c2569	EPOS negative hardware limit switch	Edge 1→0	<ul style="list-style-type: none"> <li>1: condition for operation</li> <li>1→0: quick stop (OFF3)</li> </ul>	✓	-
c2570	EPOS positive hardware limit switch	Edge 1→0	<ul style="list-style-type: none"> <li>1: condition for operation</li> <li>1→0: quick stop (OFF3)</li> </ul>	✓	-
c0849	No quick stop OFF3 (EMGS)	Level	<ul style="list-style-type: none"> <li>0: OFF3</li> <li>1: no OFF3</li> </ul>	✓	✓
c29048	Torque limit selection bit 0 (TLIM0)	Level	TLIM1 : TLIM0 <ul style="list-style-type: none"> <li>0 : 0: internal torque limit 0</li> <li>0 : 1: internal torque limit 1</li> <li>1 : 0: internal torque limit 2</li> <li>1 : 1: internal torque limit 3</li> </ul>	✓	✓
c29049	Torque limit selection bit 1 (TLIM1)	Level			
c29063	Speed limit selection bit 0 (SLIM0)	Level	SLIM1 : SLIM0 <ul style="list-style-type: none"> <li>0 : 0: internal speed limit 0</li> <li>0 : 1: internal speed limit 1</li> <li>1 : 0: internal speed limit 2</li> <li>1 : 1: internal speed limit 3</li> </ul>	✓	✓
c29064	Speed limit selection bit 1 (SLIM1)	Level			
c2596	EPOS set home position (SREF)	Level	<ul style="list-style-type: none"> <li>0: do not set home position</li> <li>1: set home position</li> </ul>	✓	-
c2612	EPOS active homing reference cam (REF)	Level	1: reference cam active	✓	-

The following signals are assigned to the digital inputs by default.

Table 10-2 Default configuration of digital inputs

Digital input	Parameter	Default signal	
		S200 PN	S200 Basic PN
DI0	r0722.0	Measuring probe 1	Measuring probe 1
DI1	r0722.1	Measuring probe 2	Measuring probe 2
DI2	r0722.2	EPOS negative hardware limit switch	-
DI3	r0722.3	EPOS positive hardware limit switch	-

### More information

For more information about wiring digital inputs, see Section "Wiring of digital inputs (Page 154)".

### Parameters

The following list includes the parameters of the "Digital inputs" function.

Number	Name	Unit
r0722.0...3	Digital inputs status	
c0849[0]	No Quick Stop / Quick Stop (OFF3)	
c2104[0]	2nd acknowledge faults	
c2569	EPOS negative hardware limit switch	
c2570	EPOS positive hardware limit switch	
c2596	EPOS set home position	
c2612[0...1]	EPOS active homing reference cam	
c29048	Torque limit selection bit 0	
c29049	Torque limit selection bit 1	
c29063	Speed limit selection bit 0	
c29064	Speed limit selection bit 1	

## 10.2.2 Digital outputs

### Overview

A digital output reports signal states of the converter to the outside. The function of a digital output is adjustable.

### Description of function

S200 PN has two digital outputs, DO0 and DO1. S200 Basic PN offers DO0 only.

You can adjust the function of digital inputs by interconnecting the signal parameters to c730 and c731 in commissioning tools.

The following signals are assignable to the digital outputs.

Table 10-3 Assignable signals

Parameter	Signal	Available control mode	
		EPOS	S
r899.2	Operation enabled (RDY) <ul style="list-style-type: none"> <li>1: the converter is ready.</li> <li>0: the converter is not ready (a fault occurs or the enable signal is missing).</li> </ul>	✓	✓
r29404.0	Ready for servo-on (RDY_ON) <ul style="list-style-type: none"> <li>1: the converter is ready for servo-on.</li> <li>0: the converter is not ready for servo-on.</li> </ul>	✓	✓
r2139.3	Fault present (FAULT) <ul style="list-style-type: none"> <li>1: in the fault state.</li> <li>0: no fault.</li> </ul>	✓	✓
r2684.10	Target position reached <ul style="list-style-type: none"> <li>1: the converter has reached target position.</li> <li>0: the converter has not reached target position.</li> </ul>	✓	-
r2199.0	$ n_{act}  < p2161$ : zero speed detection (ZSP) <ul style="list-style-type: none"> <li>1: motor speed <math>\leq</math> zero speed (can be set with p2161).</li> <li>0: motor speed <math>&gt;</math> zero speed + hysteresis (10 r/min).</li> </ul>	✓	✓
r1407.7	Torque limit reached (TLR) <ul style="list-style-type: none"> <li>1: the generated torque has nearly (internal hysteresis) reached the value of the positive torque limit or negative torque limit.</li> <li>0: the generated torque has not reached any torque limit.</li> </ul>	✓	✓
r899.12	Motor holding brake control <ul style="list-style-type: none"> <li>1: release the motor holding brake. The motor can rotate.</li> <li>0: engage the motor holding brake. The motor cannot rotate.</li> </ul>	✓	✓
r899.13	Motor holding brake status <ul style="list-style-type: none"> <li>1: the motor holding brake is active. The motor cannot rotate.</li> <li>0: the motor holding brake is released. The motor can rotate.</li> </ul>	✓	✓
r29404.2	Overload level reached (OLL) <ul style="list-style-type: none"> <li>1: the motor has reached the parameterizable output overload level (p29080 in % of the rated torque).</li> <li>0: the motor has not reached the overload level.</li> </ul>	✓	✓
r2684.11	Home position set (REFOK) <ul style="list-style-type: none"> <li>1: homing is completed.</li> <li>0: homing is not completed.</li> </ul>	✓	-

Parameter	Signal	Available control mode	
		EPOS	S
r46.8	STO status (STO_EP) <ul style="list-style-type: none"> <li>1: the enable signal is missing, indicating that STO is active.</li> <li>0: the enable signal is available, indicating that STO is inactive.</li> </ul> Note: STO_EP is only a status signal for STO input terminals but not a safe DO for the Safety Integrated function.	✓	✓
r2683.10	Direct output 1 via traversing block	✓	-
r2683.11	Direct output 2 via traversing block	✓	-

The following signals are assigned to the digital outputs by default.

Table 10-4 Default configuration of digital outputs

Digital output	Parameter	Default signal	
		S200 PN	S200 Basic PN
DO0	c0730	RDY	RDY
DO1	c0731	FAULT	-

### More information

For more information about wiring digital outputs, see Section "Wiring of digital outputs (Page 155)".

### Parameters

The following list includes the parameters of the "Digital outputs" function.

Number	Name	Unit
r0046.0...30	Missing enable signals	
c0730	Signal for terminal DO 0	
c0731	Signal for terminal DO 1	
r0899.0...13	Status word sequence control	
r1407.0...28	Status word speed controller	
r2139.0...15	Status word faults/alarms 1	
r2199.0...11	Status word monitoring 3	
r2683.0...14	EPOS status word 1	
r2684.0...15	EPOS status word 2	
r29404.0...5	DO status word	

## 10.3 Fieldbus communication

### 10.3.1 Communication via PROFINET IO

#### Overview

You can integrate the converter into a PROFINET network.

#### Description of function

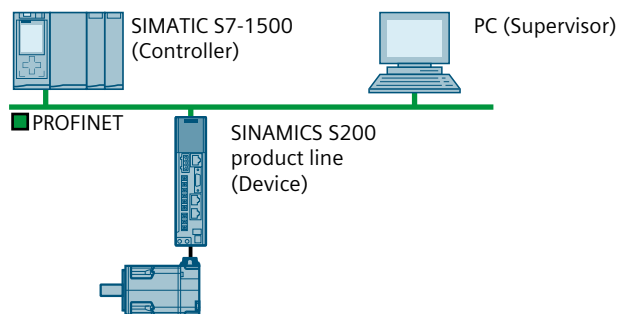


Figure 10-1 The converter in PROFINET IO operation (examples)

The converter supports the following functions:

- RT (Real-Time)
- IRT (Isochronous Real-Time)
- MRP (Media Redundancy Protocol): Media redundancy, with transition bump.
- MRPD (Media Redundancy Planned Duplication): Media redundancy, bumpless.
- Diagnostic alarms in accordance with the error classes specified in the PROFIdrive profile.
- Device replacement without removable data storage medium: The replacement converter is assigned the device name from the IO controller, not from its SD card or from the programming device.

### 10.3.2 Configuring PROFINET IO operation

#### 10.3.2.1 Connecting the PROFINET cable to the converter

#### Requirement

You have set up a PROFINET network for connecting the converter.

### Procedure

1. Connect the PROFINET cables to the two PROFINET sockets X150-P1 and X150-P2 on the controller.  
The maximum permitted cable length from the previous station and to the next station is 100 m.
2. Connect the external 24 V power supply to the terminals X124: 1, 3 and X124: 2, 4. The external 24 V power supply is only required if communications with the controller is also intended to run when the line voltage is disconnected.

### Result

You have connected the PROFINET cable to the converter.

#### 10.3.2.2 Configuring communication using SIMATIC S7 control

### Procedure

Proceed as follows to configure communication with a SIMATIC S7 controller in PROFINET:

- Install the current Startdrive version.  
OR
- Install the GSDML of the converter using "Option/Manage general station description (GSD)" in the components catalog.

#### 10.3.2.3 Setting communication via PROFINET

### Overview

For PROFINET communication between the IO controller and the converter, you must set a device, an IP address, and a telegram.

### Requirement

None

### Procedure

1. Assign a device name that is unique in the PROFINET network.  
PROFINET uses a device name in addition to the MAC address and the IP address to identify the PROFINET devices.
2. Specify an IP address.  
You have the following options to specify the IP address of the converter:
  - The IP address is specified using the engineering software.
  - The IO controller assigns an IP address to the converter.



3. Set the same telegram in the IO controller as in the converter.  
If you have not set a telegram in the converter, the converter assumes the telegram setting of the IO controller.
4. Interconnect the telegram in the control program of the IO controller with the signals of your choosing.

**Result**

You have set communication via PROFINET.

**10.3.3 PROFINET protocols**

**10.3.3.1 PROFINET protocols**

**Overview**

The converter supports the PROFINET protocols listed in the table.

The information contained is required to set Industrial Cybersecurity measures such as the firewall to protect the system.

**Description of function**

The address parameters, the relevant communication layer, and the communication role and communication direction are specified for each protocol.

Table 10-5 PROFINET protocols

Protocol	Port number	Layer (2) Link layer (4) Transport layer	Description
DCP: Discovery and Configuration Protocol	not relevant	(2) Ethernet II and IEEE 802.1Q and Ethertype 0x8892 (PROFINET)	<b>Accessible stations, PROFINET Discovery and Configuration</b> DCP detects PROFINET devices and enable basic settings. DCP uses the special multicast MAC address: xx-xx-xx-01-0E-CF, xx-xx-xx = Organizationally Unique Identifier
LLDP: Link Layer Discovery Protocol	not relevant	(2) Ethernet II and IEEE 802.1Q and Ethertype 0x88CC (PROFINET)	<b>PROFINET Link Layer Discovery Protocol</b> LLDP determines and manages neighbor relationships between PROFINET devices. LLDP uses the special multicast MAC address: 01-80-C2-00-00-0E

10.3 Fieldbus communication

Protocol	Port number	Layer (2) Link layer (4) Transport layer	Description
MRP: Media Redundancy Protocol	not relevant	(2) Ethernet II and IEEE 802.1Q and Ethertype 0x88E3 (PROFINET)	<b>PROFINET Medium Redundancy</b> MRP enables the control of redundant routes through a ring topology. MRP uses the special multicast MAC address: xx-xx-xx-01-15-4E, xx-xx-xx = Organizationally Unique Identifier
PTCP: Precision Transparent Clock Protocol	not relevant	(2) Ethernet II and IEEE 802.1Q and Ethertype 0x8892 (PROFINET)	<b>PROFINET send clock and time synchronization, based on IEEE 1588</b> PTCP enables the send clock synchronization and time synchronization between RJ45 ports required for IRT operation. PTCP uses the special multicast MAC address: xx-xx-xx-01-0E-CF, xx-xx-xx = Organizationally Unique Identifier
PROFINET IO data	not relevant	(2) Ethernet II and IEEE 802.1Q and Ethertype 0x8892 (PROFINET)	<b>PROFINET cyclic IO data transfer</b> The PROFINET IO telegrams transfer process data cyclically between the PROFINET IO controller and IO devices via Ethernet.
PROFINET Context Manager	34964	(4) UDP	<b>PROFINET connection less RPC</b> The PROFINET Context Manager provides an endpoint mapper in order to establish an application relationship (PROFINET AR).

10.3.3.2 Media redundancy

Overview

The converter supports media redundancy based on MRP (Media Redundancy Protocol). Media redundancy is a function to increase system availability through redundant communication paths.

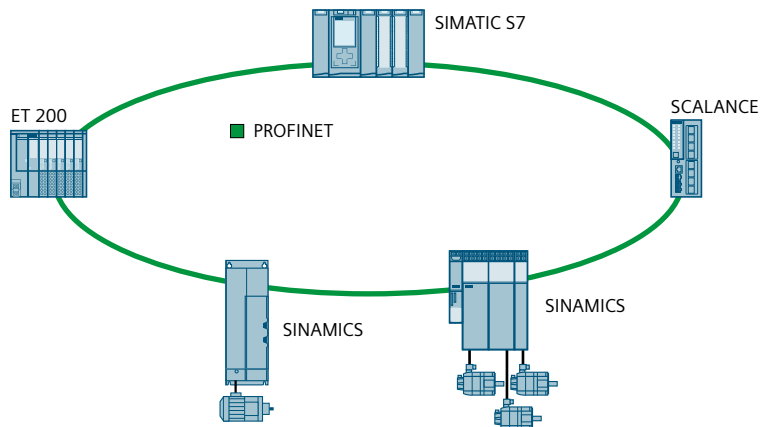
MRP can be expanded to MRPD (Media Redundancy with Planned Duplication of frames).

Requirement

The following preconditions apply regarding media redundancy:

- PROFINET as ring topology with redundancy manager
- Each device in the ring topology supports MRP or MRPD
- Maximum of 50 devices for each ring topology
- MRPD requires a suitable controller. In addition, a topology must be configured.

## Description of function



SIMATIC S7	PROFINET controller
ET 200	Distributed I/O
SINAMICS	Converter
SCALANCE	Redundancy manager

Figure 10-2 Example of a ring topology

Ethernet as basis for PROFINET only permits a single, unique data path from the controller to a device via a line-type topology or a star-type topology. MRP allows a line-type topology to be closed using a redundancy manager to create a ring-type topology. This means that every device can be accessed via 2 data paths.

When a device fails or if a cable is interrupted, the redundancy manager informs the device that the ring-type topology has now been switched over to a linear-type topology. The devices can be accessed again once a switchover has been made to a linear-type topology.

When the cable is interrupted, a short-time interruption (0 ... 200 ms) of the data transfer may occur until the redundant data path is switched.

If a short-time interruption is not allowed, there are two alternative ways:

- Set the watchdog time in the hardware configuration above 200 ms.
- Set the data transfer to IRT High Performance.

### 10.3.3.3 Connection-oriented communication protocols

#### Overview

The converter supports connection-oriented communication protocols.

Connection-oriented communication ensures that data arrives in the correct order.

## Description of function

Table 10-6 Connection-oriented communication protocols

Protocol	Port number	Layer (2) Link layer (4) Transport layer	Description
DHCP Dynamic Host Configuration Protocol	68	(4) UDP	Is used to query an IP address. Is closed when delivered, and is opened when selecting the DHCP mode.
ISO on TCP (according to RFC 1006)	102	(4) TCP	ISO on TCP (according to RFC 1006) is used for the message-oriented data exchange to a remote CPU, WinAC or devices of other suppliers. Communication with engineering system, human machine interface, etc. Is activated in the factory setting.
SNMP Simple network management protocol	161	(4) UDP	SNMP enables network management data to be read out and set (SNMP managed objects) by the SNMP manager.
https Secure Hypertext Transfer Protocol	443	(4) TCP	https is used for communication with the CU-internal web server via Transport Layer Security (TLS). Is open in the as-supplied state and can be deactivated.
Reserved	49152 ... 65535	(4) TCP (4) UDP	Dynamic port area that is used for the active connection endpoint if the application does not specify the local port number.

### 10.3.4 Identification & Maintenance (I&M) data

#### Overview

I&M data are identification and maintenance data that are stored in a device. The higher-level controller has access to the I&M data of all devices on the fieldbus.

Using the I&M data, the plant operator can identify and label devices and define maintenance measures.

The converter supports the identification and maintenance (I&M) data listed in the table.

## Description of function

Table 10-7 I&M data

I&M data	Format	Explanation	Example for the content
I&M0	u8[54] PROFINET	Converter-specific data, read only	See below
I&M1	Visible String [32]	Plant/system identifier	"ak12-ne.bo2=fu1"
	Visible String [22]	Location code	"sc2+or45"
I&M2	Visible String [16]	Date	"2013-01-21 16:15"
I&M3	Visible String [54]	Any comment or remark	-
I&M4	Octet String[54]	Check signature to track changes for Safety Integrated.	Values of r9781[0] and r9782[0]

When requested, the converter transfers its I&M data to a higher-level control or to a PC/PG with installed TIA Portal.

Table 10-8 I&MO

Designation	Format	Example for the content
MANUFACTURER_ID	u16	42d hex (=Siemens)
ORDER_ID	Visible String [20]	"6SL3246-0BA22-1FA0"
SERIAL_NUMBER	Visible String [16]	"T-R32015957"
HARDWARE_REVISION	u16	0001 hex
SOFTWARE_REVISION	char, u8[3]	"V" 04.70.19
REVISION_COUNTER	u16	0000 hex
PROFILE_ID	u16	3A00 hex
PROFILE_SPECIFIC_TYPE	u16	0000 hex
IM_VERSION	u8[2]	01.02
IM_SUPPORTED	bit[16]	001E hex

## 10.4 Communication telegrams

### 10.4.1 Telegram structure

#### Overview

Converter and higher-level control system exchange data via a fieldbus using telegrams.

#### Description of function

The converter receives data from the higher-level control cyclically and returns data to the control cyclically.

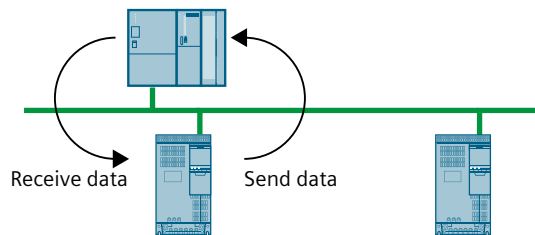


Figure 10-3 Cyclic data exchange

Converter and higher-level control system package their data in telegrams.

Specific telegrams are defined for typical applications in the PROFIdrive profile and are provided with a fixed PROFIdrive telegram number. Behind every PROFIdrive telegram number is thus a fixed composition of signals. This means that a telegram number provides an unambiguous description of the cyclic data exchange.

## 10.4.2 Supported telegrams

### Overview

The converter supports standard telegrams and Siemens telegrams for speed control and position control.

### Description of function

From the perspective of the converter, the received process data represents the receive words and the process data to be sent represents the send words.

Table 10-9 Overview of supported telegrams

Telegram	Maximum number of PZD <sup>1)</sup>	
	Received word	Send word
Standard telegram 1	2	2
Standard telegram 2	4	4
Standard telegram 3	5	9
Standard telegram 5	9	9
Standard telegram 7	2	2
Standard telegram 9	10	5
Siemens telegram 102	6	10
Siemens telegram 105	10	10
Siemens telegram 111	12	12
Siemens telegram 112	17	12
Siemens telegram 750 (supplementary telegram)	3	1

<sup>1)</sup> One PZD = one word

## 10.4.3 Telegrams for speed control

### 10.4.3.1 Telegram 1

#### Overview

The telegram is suitable for closed-loop speed control of a drive.

**Description of function**

Process data	Telegram 1			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZD01	STW1	Control word 1	ZSW1	Status word 1
PZD02	NSOLL_A	16-bit speed setpoint	NIST_A	Speed actual value 16-bit

**10.4.3.2 Telegram 2**

**Overview**

The telegram is suitable for closed-loop speed control of a drive.

**Description of function**

Process data	Telegram 2			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZD01	STW1	Control word 1	ZSW1	Status word 1
PZD02	NSOLL_B	32-bit speed setpoint	NIST_B	Speed actual value 32-bit
PZD03				
PZD04	STW2	Control word 2	ZSW2	Status word 2



### 10.4.3.3 Telegram 3

#### Overview

The telegram is suitable for closed-loop speed control of a drive and the control of 1 position encoder.

#### Description of function

Process data	Telegram 3			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZD01	STW1	Control word 1	ZSW1	Status word 1
PZD02	NSOLL_B	32-bit speed setpoint	NIST_B	Speed actual value 32-bit
PZD03				
PZD04	STW2	Control word 2	ZSW2	Status word 2
PZD05	G1_STW	Control word for encoder 1	G1_ZSW	Status word from encoder 1
PZD06	---	Not assigned	G1_XIST1	Position actual value 1 from encoder 1
PZD07	---			
PZD08	---		G1_XIST2	Position actual value 2 from encoder 1
PZD09	---			

### 10.4.3.4 Telegram 5

#### Overview

The telegram is suitable for the closed-loop speed control and closed-loop position control of a drive and to control 1 position encoder.

#### Requirement

PROFINET with IRT (Isochronous Real-Time)

#### Description of function

Process data	Telegram 5			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZD01	STW1	Control word 1	ZSW1	Status word 1
PZD02	NSOLL_B	32-bit speed setpoint	NIST_B	Speed actual value 32-bit
PZD03				
PZD04	STW2	Control word 2	ZSW2	Status word 2
PZD05	G1_STW	Control word for encoder 1	G1_ZSW	Status word for encoder 1
PZD06	XERR	Position controller deviation	G1_XIST1	Position actual value 1 from encoder 1
PZD07				
PZD08	KPC	Gain factor for the position controller	G1_XIST2	Position actual value 2 from encoder 1
PZD09				

### 10.4.3.5 Telegram 102

#### Overview

The telegram is suitable for closed-loop speed control of a drive and the control of 1 position encoder.

#### Description of function

Process data	Telegram 102			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZD01	STW1	Control word 1	ZSW1	Status word 1
PZD02	NSOLL_B	32-bit speed setpoint	NIST_B	Speed actual value 32-bit
PZD03				
PZD04	STW2	Control word 2	ZSW2	Status word 2
PZD05	MOMRED	Torque reduction	MELDW	Message word
PZD06	G1_STW	Control word for encoder 1	G1_ZSW	Status word from encoder 1
PZD07	---	Not assigned	G1_XIST1	Position actual value 1 from encoder 1
PZD08	---			
PZD09	---		G1_XIST2	Position actual value 2 from encoder 1
PZD10	---			

### 10.4.3.6 Telegram 105

#### Overview

The telegram is suitable for the closed-loop speed control and closed-loop position control of a drive and to control 1 position encoder.

#### Requirement

PROFINET with IRT (Isochronous Real-Time)

#### Description of function

Process data	Telegram 105			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZD01	STW1	Control word 1	ZSW1	Status word 1
PZD02	NSOLL_B	32-bit speed setpoint	NIST_B	Speed actual value 32-bit
PZD03				
PZD04	STW2	Control word 2	ZSW2	Status word 2
PZD05	MOMRED	Torque reduction	MELDW	Message word
PZD06	G1_STW	Control word for encoder 1	G1_ZSW	Status word for encoder 1
PZD07	XERR	Position controller deviation	G1_XIST1	Position actual value 1 from encoder 1
PZD08				
PZD09	KPC	Gain factor for the position controller	G1_XIST2	Position actual value 2 from encoder 1
PZD10				

## 10.4.4 Telegrams for position control

### 10.4.4.1 Telegram 7

#### Overview

The telegram is suitable for closed-loop position control of a drive.

#### Description of function

Process data	Telegram 7			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZD01	STW1	Control word 1	ZSW1	Status word 1
PZD02	SATZANW	Position block selection	AKTSATZ	Selected position block

### 10.4.4.2 Telegram 9

#### Overview

The telegram is suitable for closed-loop position control of a drive.

#### Description of function

Process data	Telegram 9			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZD01	STW1	Control word 1	ZSW1	Status word 1
PZD02	SATZANW	Position block selection	AKTSATZ	Selected position block
PZD03	STW2	Control word 2	ZSW2	Status word 2
PZD04	MDI_TARPOS	MDI position	XIST_A	Position actual value A
PZD05				
PZD06	MDI_VELOCITY	MDI velocity	---	Not assigned
PZD07			---	
PZD08	MDI_ACC	MDI acceleration override	---	
PZD09	MDI_DEC	MDI deceleration override	---	
PZD10	MDI_MOD	Position MDI mode	---	

### 10.4.4.3 Telegram 111

#### Overview

The telegram is suitable for closed-loop position control of a drive.

#### Description of function

Process data	Telegram 111			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZD01	STW1	Control word 1	ZSW1	Status word 1
PZD02	POS_STW1	Position control word	POS_ZSW1	Position status word
PZD03	POS_STW2	Position control word	POS_ZSW2	Position status word
PZD04	STW2	Control word 2	ZSW2	Status word 2
PZD05	OVERRIDE	Position velocity override	MELDW	Message word
PZD06	MDI_TARPOS	MDI position	XIST_A	Position actual value A
PZD07				
PZD08	MDI_VELOCITY	MDI velocity	NIST_B	32-bit speed actual value
PZD09				
PZD10	MDI_ACC	MDI acceleration override	FAULT_CODE	Fault code
PZD11	MDI_DEC	MDI deceleration override	WARN_CODE	Alarm code
PZD12	---	---	---	---

### 10.4.4.4 Telegram 112

#### Overview

The telegram is suitable for closed-loop position control of a drive.

#### Description of function

Process data	Telegram 112			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZD01	STW1	Control word 1	ZSW1	Status word 1
PZD02	POS_STW1	Position control word	POS_ZSW1	Position status word
PZD03	POS_STW2	Position control word	POS_ZSW2	Position status word
PZD04	STW2	Control word 2	ZSW2	Status word 2
PZD05	OVERRIDE	Position velocity override	Reserved	---
PZD06	MDI_TARPOS	MDI position	XIST	Position actual value
PZD07				
PZD08	MDI_VELOCITY	MDI velocity	VIST	Velocity actual value
PZD09				
PZD10	MDI_ACC	MDI acceleration override	MELDW	Message word
PZD11			FAULT_CODE	Fault code
PZD12	MDI_DEC	MDI deceleration override	WARN_CODE	Alarm code
PZD13			---	Not assigned
PZD14	Reserved	---	---	
PZD15		---	---	
PZD16	REF_COORDINATE	EPOS home position signal	---	
PZD17			---	

### 10.4.5 Supplementary telegram

#### Overview

Telegram 750 is suitable to control the drive torque, e.g. for an electronic counterweight of a vertical axis.

#### Description of function

Process data	Telegram 750			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZDn+1	M_ADD1	Acceleration compensation	M_ACT	Current torque
PZDn+2	M_LIM-IT_POS	Positive torque limit	---	Not assigned
PZDn+3	M_LIM-IT_NEG	Negative torque limit	---	

### 10.4.6 Control words, status words and message word

#### 10.4.6.1 Control and status word 1

#### Overview

Control word 1 (STW1) activates the converter drive functions.

Status word 1 (ZSW1) signals the status of the converter to the higher-level control.

#### Description of function

**For speed control (telegrams 1, 2, 3, 5, 102, 105)**

---

#### Note

When telegram 5 and telegram 105 are used, STW1.4 and STW1.6 must be set to 1.

---

#### Note

STW1.10 must be set to 1 to allow the PLC to control the converter.

---



Control word 1 (STW1)				
Control → Converter				
Bit	Drive function		Explanation	
	Telegrams 102, 105	Telegrams 1, 2, 3, 5	Telegrams 102, 105	Telegrams 1, 2, 3, 5
00	0 = OFF1		The motor brakes with the ramp-down time p1121 of the ramp-function generator. The converter switches off the motor at standstill.	
	0 → 1 = ON		The converter goes into the "ready" state. If, in addition, bit 3 = 1, the converter switches on the motor.	
01	0 = OFF2		Switch off the motor immediately, the motor then coasts down to a standstill.	
	1 = No OFF2		The motor can be switched on (ON command).	
02	0 = Quick stop (OFF3)		Quick stop: The motor brakes to a standstill with the OFF3 ramp-down time p1135.	
	1 = No quick stop (OFF3)		The motor can be switched on (ON command).	
03	0 = Inhibit operation		Immediately switch off motor (cancel pulses).	
	1 = Enable operation		Switch on motor (pulses can be enabled).	
04	0 = Inhibit RFG		The converter immediately sets its ramp-function generator output to 0.	
	1 = Do not inhibit RFG		The ramp-function generator can be enabled.	
05	0 = Stop RFG		The output of the ramp-function generator stops at the current value.	
	1 = Enable RFG		The output of the ramp-function generator follows the setpoint.	
06	0 = Inhibit setpoint		The converter brakes the motor with the ramp-down time p1121 of the ramp-function generator.	
	1 = Enable setpoint		Motor accelerates to the setpoint with the ramp-up time p1120.	
07	0 → 1 = Acknowledge faults		Acknowledge fault. If the ON command is still active, the converter switches to the "switching on inhibited" state.	
08	Reserved			
09	Reserved			
10	0 = No control by PLC		Converter ignores the process data from the fieldbus.	
	1 = Control via PLC		Control via fieldbus, converter accepts the process data from the fieldbus.	
11	Reserved			
12	1 = Open holding brake	Reserved	Unconditionally open motor holding brake	--
13	Reserved			

Control word 1 (STW1)				
Control → Converter				
Bit	Drive function		Explanation	
	Telegrams 102, 105	Telegrams 1, 2, 3, 5	Telegrams 102, 105	Telegrams 1, 2, 3, 5
14	1 = Torque control active 0 = Closed-loop speed control active	Reserved	Switch-over from speed to torque control	--
15	Reserved			

Status word 1 (ZSW1)				
Converter → Control				
Bit	Status		Explanation	
	Telegrams 102, 105	Telegrams 1, 2, 3, 5	Telegrams 102, 105	Telegrams 1, 2, 3, 5
00	1 = Ready for switching on		Power supply switched on; electronics initialized; pulses inhibited.	
01	1 = Ready for operation		Motor is switched on (ON/OFF1 = 1), no fault is active. With the command "Enable operation" (STW1.3), the converter switches on the motor.	
02	1 = Operation enabled		Motor follows setpoint. See control word 1, bit 3.	
03	1 = Fault present		The converter has a fault. Acknowledge fault using STW1.7.	
04	1 = OFF2 inactive		Coast down to standstill is not active.	
05	1 = OFF3 inactive		Quick stop is not active.	
06	1 = "Switching on inhibited" active		It is only possible to switch on the motor after an OFF1 followed by ON.	
07	1 = Alarm active		Motor remains switched on; no acknowledgement is necessary.	
08	1 = Speed deviation within the tolerance range		Setpoint / actual value deviation within the tolerance range.	
09	1 = Control requested		The automation system has been requested to take over control of the converter.	
10	1 = Comparison speed reached or exceeded		Speed is greater than or equal to the corresponding maximum speed.	
11	1 = Alarm class bit 0	1 = Torque limit reached	Internal diagnostics for automation systems with integrated SINAMICS functionality	Comparison value for current or torque has been reached or exceeded.
12	1 = Alarm class bit 1	1 = Holding brake open		Signal to open and close a motor holding brake.
13	Reserved	0 = Alarm, motor over-temperature	--	Motor temperature alarm threshold reached

Status word 1 (ZSW1)				
Converter → Control				
Bit	Status		Explanation	
	Telegrams 102, 105	Telegrams 1, 2, 3, 5	Telegrams 102, 105	Telegrams 1, 2, 3, 5
14	1 = Torque control active	1 = Motor rotates clockwise	Switched over from speed to torque control	Internal converter actual value > 0.
		0 = Motor rotates counter-clockwise		Internal converter actual value < 0.
15	Reserved	0 = Alarm, converter thermal overload	--	Converter temperature alarm threshold reached

**For position control (telegrams 7, 9, 111, 112)**

**Note**

STW1.10 must be set to 1 to allow the PLC to control the converter.

Control word 1 (STW1)		
Control → Converter		
Bit	Drive function	Explanation
00	0 = OFF1	The motor brakes with the ramp-down time p1121 of the ramp-function generator. The converter switches off the motor at standstill.
	0 → 1 = ON	The converter goes into the "ready" state. If, in addition, bit 3 = 1, the converter switches on the motor.
01	0 = OFF2	Switch off the motor immediately, the motor then coasts down to a standstill.
	1 = No OFF2	The motor can be switched on (ON command).
02	0 = Quick stop (OFF3)	Quick stop: The motor brakes to a standstill with the OFF3 ramp-down time p1135.
	1 = No quick stop (OFF3)	The motor can be switched on (ON command).
03	0 = Inhibit operation	Immediately switch off motor (cancel pulses).
	1 = Enable operation	Switch on motor (pulses can be enabled).
04	0 = Reject a traversing task	The converter rejects a traversing task. The motor brakes with the maximum deceleration rate.
	1 = Do not reject a traversing task	The converter accepts a traversing task.
05	0 = Intermediate stop	The converter stops performing the traversing task.
	1 = No intermediate stop	The converter continues to perform the traversing task.
06	0 → 1 = Activate traversing task	The traversing task is activated.
07	0 → 1 = Acknowledge faults	Acknowledge fault. If the ON command is still active, the converter switches to the "switching on inhibited" state.
08	1 = Jog 1 signal source	Jog 1 is activated.
09	1 = Jog 2 signal source	Jog 2 is activated.

Control word 1 (STW1)		
Control → Converter		
Bit	Drive function	Explanation
10	0 = No control by PLC	Converter ignores the process data from the fieldbus.
	1 = Control via PLC	Control via fieldbus, converter accepts the process data from the fieldbus.
11	1 = Start homing	The converter starts homing.
	0 = Stop homing	The converter stops homing.
12	Reserved	
13	0 → 1 = External block change	The external block is changed.
14	Reserved	
15	Reserved	

Status word 1 (ZSW1)			
Converter → Control			
Bit	Status		Explanation
	Telegrams 7, 9	Telegrams 111, 112	
00	1 = Ready for switching on		Power supply switched on; electronics initialized; pulses inhibited.
01	1 = Ready for operation		Motor is switched on (ON/OFF1 = 1), no fault is active. With the command "Enable operation" (STW1.3), the converter switches on the motor.
02	1 = Operation enabled		Motor follows setpoint. See control word 1, bit 3.
03	1 = Fault present		The converter has a fault. Acknowledge fault using STW1.7.
04	1 = OFF2 inactive		Coast down to standstill is not active.
05	1 = OFF3 inactive		Quick stop is not active.
06	1 = "Switching on inhibited" active		It is only possible to switch on the motor after an OFF1 followed by ON.
07	1 = Alarm present		Motor remains switched on; no acknowledgement is necessary.
08	1 = Following error in tolerance		The actual difference between the actual position and the position setpoint is within the permissible tolerance p2546.
09	1 = Control requested		The automation system has been requested to take over control of the converter.
10	1 = Target position reached		The axis has reached the target position.
11	1 = Home position set		---
12	0 → 1 = Acknowledgement, traversing block active		---
13	1 = Setpoint fixed		---
14	Reserved	1 = Axis accelerated	---
15	Reserved	1 = Axis decelerated	---

### 10.4.6.2 Control and status word 2

#### Overview

Control word 2 (STW2) activates the converter drive functions.

Status word 2 (ZSW2) signals the status of the converter to the higher-level control.

#### Description of function

Control word 2 (STW2)		
Control → Converter		
Bit	Drive function	
	Telegrams 102, 105	Telegrams 2, 3, 5, 9, 111, 112
00	Reserved	
01	Reserved	
02	Reserved	
03	Reserved	
04	Reserved	
05	Reserved	
06	1 = Speed controller integrator disable	Reserved
07	Reserved	
08	1 = Travel to fixed stop	
09	Reserved	
10	Reserved	
11	Reserved	
12	Controller sign-of-life bit 0	
13	Controller sign-of-life bit 1	
14	Controller sign-of-life bit 2	
15	Controller sign-of-life bit 3	

Status word 2 (ZSW2)		
Converter → Control		
Bit	Status	
	Telegrams 102, 105	Telegrams 2, 3, 5, 9, 111, 112
00	Reserved	
01	Reserved	
02	Reserved	
03	Reserved	
04	Reserved	
05	1 = Open holding brake	1 = Alarm class bit 0
06	1 = Speed controller integrator disable	1 = Alarm class bit 1
07	Reserved	
08	1 = Travel to fixed stop active	

Status word 2 (ZSW2)		
Converter → Control		
Bit	Status	
	Telegrams 102, 105	Telegrams 2, 3, 5, 9, 111, 112
09	Reserved	
10	Reserved	1 = Pulses enabled
11	Reserved	
12	Device sign-of-life bit 0	
13	Device sign-of-life bit 1	
14	Device sign-of-life bit 2	
15	Device sign-of-life bit 3	

### 10.4.6.3 Control and status word for encoder 1

#### Overview

The encoder control word (G1\_STW) activates encoder functions.

The encoder status word (G1\_ZSW) signals the status of the encoder to the higher-level control.

#### Description of function

Control word 1 (G1_STW)		Status word 1 (G1_ZSW)	
Control → Converter		Converter → Control	
Bit	Encoder function	Bit	Encoder status
00	Request function 1	00	Function 1 active
01	Request function 2	01	Function 2 active
02	Request function 3	02	Function 3 active
03	Request function 4	03	Function 4 active
04	Request command bit 0	04	Value 1
05	Request command bit 1	05	Value 2
06	Request command bit 2	06	Value 3
07	Mode	07	Value 4
08	Reserved	08	Measuring probe 1 deflected
09	Reserved	09	Measuring probe 2 deflected
10	Reserved	10	Reserved
11	Reserved	11	Acknowledge encoder fault active
12	Reserved	12	Reserved
13	Request absolute value cyclically	13	Cyclic absolute value
14	Request parking encoder	14	Parking encoder active
15	Acknowledge encoder fault	15	Encoder fault

### 10.4.6.4 Control word for block selection

#### Overview

The block selection control word (SATZANW) activates the traversing block selection functions.

#### Description of function

Bit	Function
0	1 = Traversing block selection, bit 0
1	1 = Traversing block selection, bit 1
2	1 = Traversing block selection, bit 2
3	1 = Traversing block selection, bit 3
4	1 = Traversing block selection, bit 4
5	1 = Traversing block selection, bit 5
6	Reserved
7	Reserved
8	Reserved
9	Reserved
10	Reserved
11	Reserved
12	Reserved
13	Reserved
14	Reserved
15	1 = Activate MDI 0 = Deactivate MDI



### 10.4.6.5 Control word for MDI mode

#### Overview

The MDI mode control word (MDI\_MOD) activates the positioning type selection.

#### Description of function

Bit	Function
0	1 = Absolute positioning is selected 0 = Relative positioning is selected
1	00, 11 = Absolute positioning for a rotary axis through the shortest distance
2	01 = Absolute positioning for rotary axes in the positive direction 10 = Absolute positioning for rotary axes in the negative direction
3	Reserved
4	Reserved
5	Reserved
6	Reserved
7	Reserved
8	Reserved
9	Reserved
10	Reserved
11	Reserved
12	Reserved
13	Reserved
14	Reserved
15	Reserved

### 10.4.6.6 Control and status word 1 for the positioner

#### Overview

Positioning control word 1 (POS\_STW1) activates the converter drive functions.

Positioning status word 1 (POS\_ZSW1) signals the status of the converter to the higher-level control.

#### Description of function

Positioning control word 1 (POS_STW1)	
Control → Converter	
Bit	Function
0	1 = Traversing block selection, bit 0
1	1 = Traversing block selection, bit 1
2	1 = Traversing block selection, bit 2
3	1 = Traversing block selection, bit 3
4	1 = Traversing block selection, bit 4
5	1 = Traversing block selection, bit 5
6	Reserved
7	1 = Unconditionally open the holding brake
8	1 = Absolute positioning is selected 0 = Relative positioning is selected
9	00, 11 = Absolute positioning for a rotary axis through the shortest distance
10	01 = Absolute positioning for rotary axes in the positive direction 10 = Absolute positioning for rotary axes in the negative direction
11	Reserved
12	1 = Continuous transfer 0 = Activate MDI block change with of a traversing task (STW1.6)
13	Reserved
14	1 = Signal setting-up selected 0 = Signal positioning selected
15	1 = MDI selection

Positioning status word 1 (POS_ZSW1)	
Converter → Control	
Bit	Status
0	Active traversing block bit 0
1	Active traversing block bit 1
2	Active traversing block bit 2
3	Active traversing block bit 3
4	Active traversing block bit 4
5	Active traversing block bit 5

Positioning status word 1 (POS_ZSW1)	
Converter → Control	
Bit	Status
6	Reserved
7	1 = Open the holding brake
8	1 = Negative hardware limit switch active
9	1 = Positive hardware limit switch active
10	1 = Jogging active
11	1 = Home position approach active
12	1 = Passive homing active
13	1 = Traversing block active
14	1 = Set-up active
15	1 = MDI active 0 = MDI inactive

### 10.4.6.7 Control and status word 2 for the positioner

#### Overview

Positioning control word 2 (POS\_STW2) activates the converter drive functions.

Positioning status word 2 (POS\_ZSW2) signals the status of the converter to the higher-level control.

#### Description of function

Positioning control word 2 (POS_STW2)		
Control → Converter		
Bit	Function	
	Telegram 112	Telegram 111
0	1 = Tracking mode active	
1	1 = Set home position	
2	1 = Reference cam active	
3	1 = Initiate absolute encoder adjustment	Reserved
4	Reserved	
5	1 = Jogging, incremental active 0 = Jogging, velocity active	
6	Reserved	
7	Reserved	
8	1 = Select homing using passive homing 0 = Select homing via the home position approach	
9	1 = Start the search for homing in the negative direction 0 = Start the search for homing in the positive direction	
10	1 = Select measuring probe 2 0 = Select measuring probe 1	
11	1 = Falling edge of the measuring probe 0 = Rising edge of the measuring probe	
12	Reserved	
13	Reserved	
14	1 = Software limit switch active	
15	1 = Hardware limit switch active	

Positioning status word 2 (POS_ZSW2)		
Converter → Control		
Bit	Status	
	Telegram 112	Telegram 111
0	1 = Tracking mode active	
1	1 = Velocity limiting active	
2	1 = Set position reached	1 = Setpoint fixed

Positioning status word 2 (POS_ZSW2)		
Converter → Control		
Bit	Status	
	Telegram 112	Telegram 111
3	1 = Printing mark outside outer window	
4	1 = Axis moves forward	
5	1 = Axis moves backwards	
6	1 = Negative software limit switch reached	
7	1 = Positive software limit switch reached	
8	1 = Position actual value ≤ cam switching position 1	
9	1 = Position actual value ≤ cam switching position 2	
10	1 = Direct output 1 via traversing block	
11	1 = Direct output 2 via traversing block	
12	1 = Fixed stop reached	
13	1 = Fixed stop clamping torque reached	
14	1 = Travel to fixed stop active	
15	1 = Traversing command active	

### 10.4.6.8 Message word

#### Overview

The message word (MELDW) signals the status of the converter to the higher-level control.

#### Description of function

Message word (MELDW)	
Converter → Control	
Bit	Status
00	Reserved
01	Torque utilization < threshold 2
02	n_actual  < speed threshold 3
03	n_actual  < speed threshold 2
04	Reserved
05	Reserved
06	No warning motor overtemperature
07	No warning converter overtemperature
08	n-target/actual deviation within tolerance
09	Reserved
10	Reserved
11	Servo enable
12	Drive ready
13	"Pulses enabled"
14	Reserved
15	Reserved

## 10.5 General functions

### 10.5.1 Stopping method at servo-off

#### Overview

You can select a stopping method when the converter is in "servo-off" state. The following stopping methods are available:

- Ramp-down (OFF1)
- Coast-down (OFF2)
- Quick stop (OFF3)

#### Description of function

##### Ramp-down (OFF1) and coast-down (OFF2)

The ramp-down and coast-down can be configured with the PROFINET control words STW1.0 and STW1.1:

- **Ramp-down (OFF1)**

Control word	Setting	Description
STW1.0	Rising edge (0 → 1)	Power circuit is powered on and the servo motor is ready to run.
	0	Motor ramps down.

##### Note

The control word STW1.0 can be used to control the start and stop of the motor.

- **Coast-down (OFF2)**

Control word	Setting	Description
STW1.1	1	The servo motor is ready to run.
	0	Motor coasts down.

**Quick stop (OFF3)**

The quick stop can be configured with the PROFINET control word STW1.2 or the digital input signal EMGS:

- **Configuring with STW1.2**

Control word	Setting	Description
STW1.2	1	The servo motor is ready to run.
	0	Quick stop.

- **Configuring with EMGS**

DI signal	Setting	Description
EMGS	1	The servo motor is ready to run.
	0	Quick stop.

**More information**

For more information about the PROFINET control word and the digital input signal EMGS, see Sections "Control words, status words and message word (Page 342)" and "Inputs/outputs (Page 321)".

**10.5.2 Speed limit**

**Overview**

The following four sources are available for the speed limit selection. You can select one of them via a combination of digital input signals SLIM0 and SLIM1 and switch among them when the converter is running.

Table 10-10 Combinations of SLIM0 and SLIM1 signals

Digital input		Speed limit
SLIM1	SLIM0	
0	0	Internal speed limit 0
0	1	Internal speed limit 1
1	0	Internal speed limit 2
1	1	Internal speed limit 3

In addition to the above four sources, the overall speed limit is also valid.

**Note**

Fault F07901 occurs when the actual speed exceeds the positive speed limit + hysteresis speed (p2162) or the negative speed limit - hysteresis speed (p2162).



## Description of function

### Internal speed limit

Select an internal speed limit by setting the following parameters. The default parameter value depends on the maximum motor speed.

Table 10-11 Parameter - internal speed limit

Parameter	Value range	Default	Unit	Description	Digital input	
					SLIM1	SLIM0
p29070[0]	0 ... 210000	210000	r/min	Internal speed limit 0 (positive)	0	0
p29070[1]	0 ... 210000	210000	r/min	Internal speed limit 1 (positive)	0	1
p29070[2]	0 ... 210000	210000	r/min	Internal speed limit 2 (positive)	1	0
p29070[3]	0 ... 210000	210000	r/min	Internal speed limit 3 (positive)	1	1
p29071[0]	-210000 ... 0	-210000	r/min	Internal speed limit 0 (negative)	0	0
p29071[1]	-210000 ... 0	-210000	r/min	Internal speed limit 1 (negative)	0	1
p29071[2]	-210000 ... 0	-210000	r/min	Internal speed limit 2 (negative)	1	0
p29071[3]	-210000 ... 0	-210000	r/min	Internal speed limit 3 (negative)	1	1

### Overall speed limit

The overall speed limit can be configured by setting the following parameters.

Table 10-12 Parameter - overall speed limit

Parameter	Value range	Default	Unit	Description
p1083	0 ... 210000	210000	r/min	Overall speed limit for positive direction
p1086	-210000 ... 0	-210000	r/min	Overall speed limit for negative direction

### Note

After the motor is commissioned, the internal speed limit is set to the default value and the overall speed limit is set to the maximum speed of the motor automatically.

## Parameters

The following list includes the parameters of the "Speed limit" function.

Number	Name	Unit
p1083[0]	Speed limit in positive direction of rotation	[rpm]
p1086[0]	Speed limit in negative direction of rotation	[rpm]
p2162[0]	Hysteresis speed $n_{act} > n_{max}$	[rpm]
p29070[0...3]	Speed limit in positive direction of rotation	[rpm]
p29071[0...3]	Speed limit in negative direction of rotation	[rpm]

### 10.5.3 Torque limit

#### Overview

The following four sources are available for the torque limit in all control modes. You can select one of them via a combination of digital input signals TLIM0 and TLIM1 and switch among them when the converter is running.

Table 10-13 Combinations of TLIM0 and TLIM1 signals

Digital input		Torque limit
TLIM1	TLIM0	
0	0	Internal torque limit 0
0	1	Internal torque limit 1
1	0	Internal torque limit 2
1	1	Internal torque limit 3

In addition to the above four sources, the overall torque limit is also valid.

#### Note

When the motor torque exceeds the torque limit of the selected group determined by TLM0 and TLM1, fault F07900 occurs.

#### Description of function


##### Internal torque limit

Select an internal torque limit by setting the following parameters.

Table 10-14 Parameter - internal torque limit

Parameter	Value range	Default	Unit	Description	Digital input	
					TLIM1	TLIM0
p29050[0]	-150 ... 350	350	%	Internal torque limit 0 (upper)	0	0
p29050[1]	-150 ... 350	350	%	Internal torque limit 1 (upper)	0	1
p29050[2]	-150 ... 350	350	%	Internal torque limit 2 (upper)	1	0
p29050[3]	-150 ... 350	350	%	Internal torque limit 3 (upper)	1	1
p29051[0]	-350 ... 150	-350	%	Internal torque limit 0 (lower)	0	0
p29051[1]	-350 ... 150	-350	%	Internal torque limit 1 (lower)	0	1
p29051[2]	-350 ... 150	-350	%	Internal torque limit 2 (lower)	1	0
p29051[3]	-350 ... 150	-350	%	Internal torque limit 3 (lower)	1	1

The following diagram shows how the internal torque limit functions. When the torque setpoint reaches the torque limit, the actual torque output is limited to the value selected by TLIM0/TLIM1.

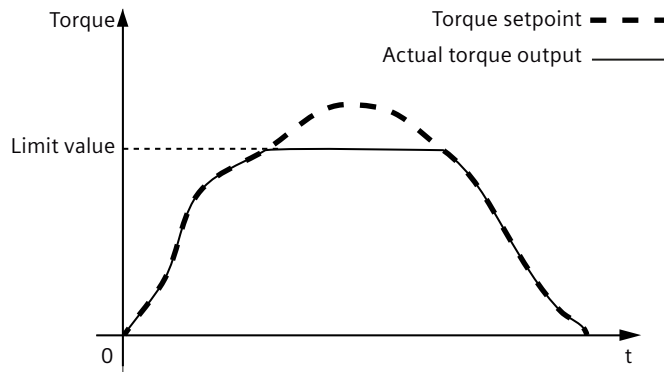

### Overall torque limit

The overall torque limit takes effect when a quick stop (OFF3) happens. In this case, the servo drive brakes with a maximum torque.

Table 10-15 Parameter - overall torque limit

Parameter	Value range	Default	Unit	Description
p1520	-1000000.00 ... 20000000.00	0	Nm	Overall torque limit (upper)
p1521	-20000000.00 ... 1000000.00	0	Nm	Overall torque limit (lower)

### Torque limit reached (TLR)

When the generated torque has nearly (internal hysteresis) reached the value of the upper torque limit, lower torque limit or analog torque limit, the signal TLR is output.

## Parameters

The following list includes the parameters of the "Torque limit" function.

Number	Name	Unit
p1520[0]	Torque limit upper	[Nm]
p1521[0]	Torque limit lower	[Nm]
p29050[0...3]	Upper torque limit	[%]
p29051[0...3]	Lower torque limit	[%]

## 10.5.4 Vertical axis

### Description of function

With a vertical axis without mechanical weight compensation, electronic weight compensation can be set by offsetting the torque limits (p1532). The torque limits specified in p1520 and p1521 are shifted by this offset value. The offset value can be read in r0031 and transferred in p1532.

To reduce compensation after a brake has been released, the torque offset can be interconnected as a supplementary torque setpoint. As a result, the holding torque is immediately specified after the brake is released.

#### **Automatically configuring weight compensation**

Siemens recommends that this function is used for vertical axes with an almost constant force due to weight. Start the automatic determination of the force due to weight using  $p1558 = 1$ . As soon as the technique has been started, the torque, which is required to hold the axis, is measured and entered into  $p1532$ . Further, interconnection between supplementary torque setpoint and  $p1532$  is established for the precontrol, and the scaling of the precontrol channel is set to 100%.

The measurement can be started when the pulses are inhibited or the pulses are enabled ( $p1558 = 1$ ). If the measurement was started with the pulses inhibited, it is only executed after the pulses have been enabled. In both cases, after starting, alarm A07991 (Drive: motor data identification activated) is output. The alarm is automatically withdrawn after the motor data identification routine has been successfully completed.

### **10.5.5 PTO function (for S200 PN only)**

#### **Overview**

Pulse Train Output is a simple and universal interface between a SIMATIC control and a SINAMICS drive. PTO is supported worldwide by many stepper drives and servo drives and is used in many positioning applications, for example, for adjusting or feed axes.

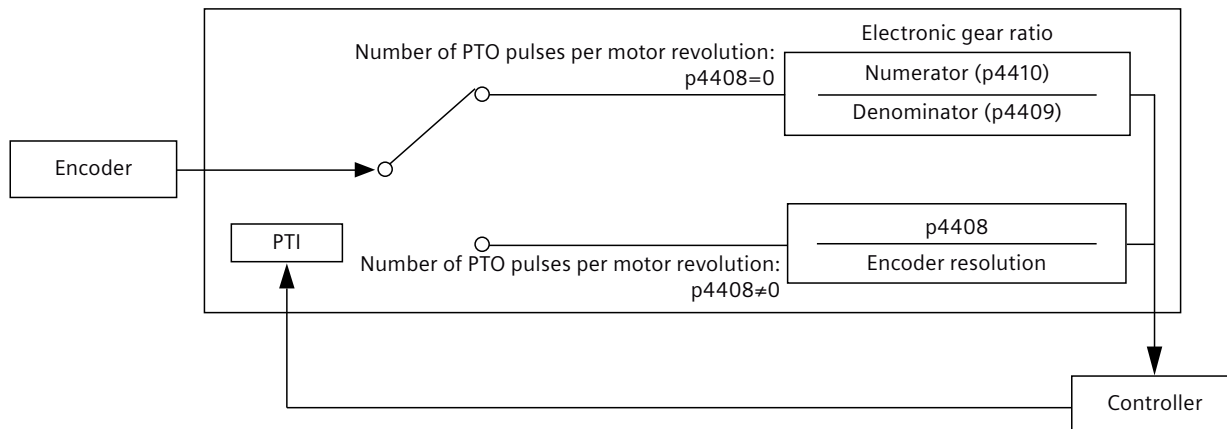
A pulse train encoder output which provides pulse signals can transmit the signals to the controller to realize a closed-loop control system inside the controller, or transmit them to another drive as pulse train setpoint for a synchronous axis or as control interface of another device (for example, a line scan camera).

#### **Description of function**

PTO is also referred to as pulse/direction interface. The pulse/direction interface comprises two signals.

- **PTO direction output**  
The direction output defines the traversing direction. You can define whether the PTO position actual value should be inverted via  $p4422$ :
  - Positive logic (= not inverted, default setting)
  - Negative logic (= inverted)
- **Maximum output frequency**  
The maximum output frequency represents the velocity and the number of output pulses for the section to be traversed. You can set the maximal output frequency of the pulse train output via  $p4405$ .

### Electronic gear ratio



The electronic gear ratio is a multiplier factor to the pulse train output to a controller.

You can select one of the following two values to define the electronic gear ratio:

- Number of PTO pulses per motor revolution (p4408).
- Gear ratio by using a numerator (p4410) and a denominator (p4409).

**Note**

When you use the numerator and the denominator to define the electronic gear ratio, the number of PTO pulses per motor revolution (p4408) must be set to 0. Otherwise, no electronic gear ratio is active.

**Note**

When you use the PTO electronic gear function, the electronic gear is based on the encoder resolution. The encoder resolution can be read from parameter r0979[2] and the default value is 1024 ppr.

The range of electronic gear ratio is from 0.02 to 8000.

The electronic gear ratio can be set at servo-off state only.

**Note**

When you use the PTO electronic gear function, if the product of the PTO setpoint pulses per motor revolution multiplied by the electronic gear ratio is not an integer, there is no zero mark generated.

### Parameters

The following list includes the parameters of the "PTO" function.

Number	Name	Unit
p4405	PTO maximum output frequency	[kHz]
p4408	PTO pulse number	

p4409	Gearbox encoder (motor)/PTO denominator (Control Unit)
p4410	Gearbox encoder (motor)/PTO numerator (Control Unit)
r4419	PTO diagnostics position setpoint
c4420	PTO position setpoint
p4422.0	PTO configuration
p4426	PTO zero mark offset

## 10.5.6 Ramp-function generator

### Overview

The "ramp-function generator" function is used to limit acceleration in the event of abrupt setpoint changes and thus helps prevent load surges during drive operation.

### Description of function

The ramp-up time p1120 and ramp-down time p1121 can be used to set mutually independent acceleration and deceleration ramps. This allows a controlled transition to be made in the event of setpoint changes.

The maximum speed p1082 is used as a reference value for calculating the ramps from the ramp-up and ramp-down time. For a quick stop (OFF3), a special adjustable ramp is available via the ramp-down time p1135 (for example, for quick, controlled stopping after an EMERGENCY OFF button has been pressed).

The following versions are available:

- Basic ramp-function generator (p1115 = 0)
- Extended ramp-function generator (p1115 = 1)

#### Basic ramp-function generator

The basic ramp-function generator is characterized by the following features:

- Ramp-up time  $T_{up}$  (p1120)
- Ramp-down time  $T_{dn}$  (p1121)

You can see the properties of the ramp-function generator from the diagram below:

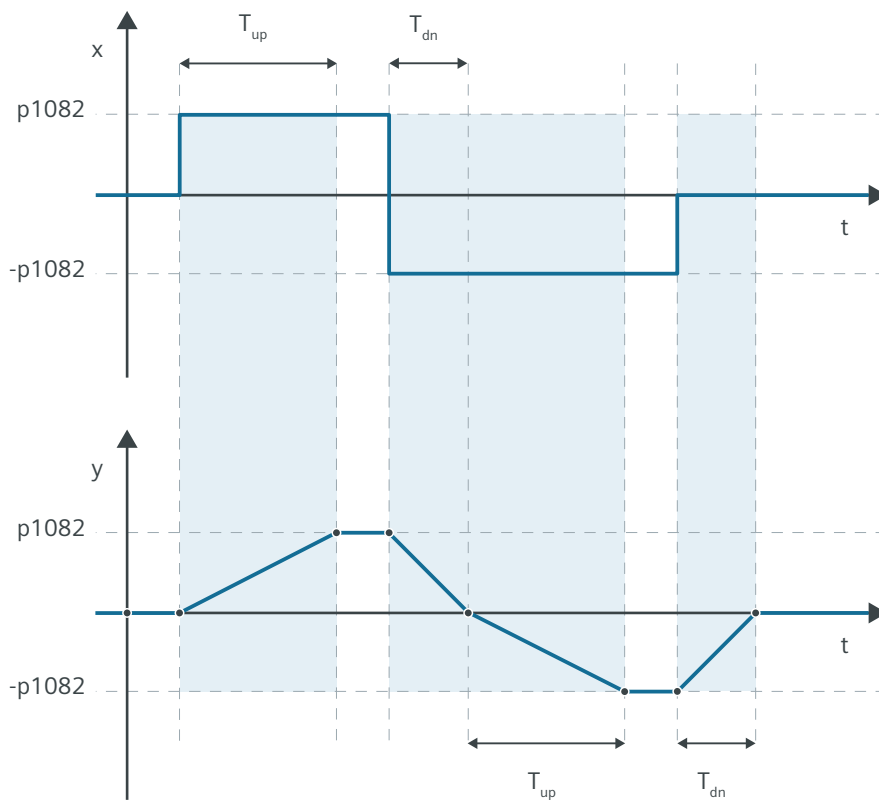


Figure 10-4 Basic ramp-function generator

**Extended ramp-function generator**

The extended ramp-function generator is characterized by the following features:

- Ramp-up time  $T_{up}$  (p1120)
- Ramp-down time  $T_{dn}$  (p1121)
- Initial rounding IR (p1130)
- Final rounding FR (p1131)
- Effective ramp-up time  
 $T_{up\_eff} = T_{up} + (IR/2 + FR/2)$
- Effective ramp-down time  
 $T_{dn\_eff} = T_{dn} + (IR/2 + FR/2)$

You can see the properties of the extended ramp-function generator from the diagram below:

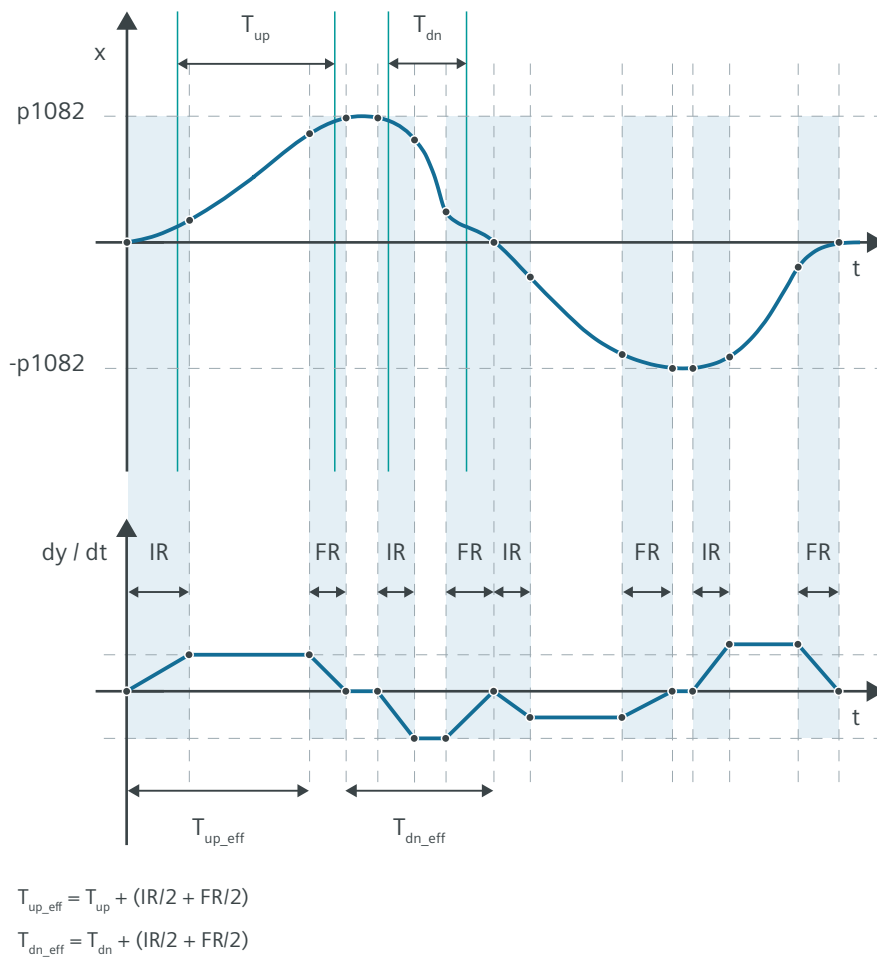


Figure 10-5 Extended ramp-function generator

### Parameters

The following list includes the parameters of the "Ramp-function generator" function.

Number	Name	Unit
p1082[0]	Maximum speed	[rpm]
p1115	Ramp-function generator selection	
p1120[0]	Ramp-function generator ramp-up time	[s]
p1121[0]	OFF1 ramp-down time	[s]
p1130[0]	Ramp-function generator initial rounding-off time	[s]
p1131[0]	Ramp-function generator final rounding-off time	[s]
p1135[0]	OFF3 ramp-down time	[s]



## 10.5.7 Setting motor overload protection in accordance with UL 61800-5-1 Ed.2

### Overview

The motor overload protection function works without temperature sensors in the 1FL2 motors. To comply with UL 61800-5-1 Ed.2, you must make some additional settings when operating the converter with a 1FL2 motor.

### Requirement

- You have completed quick commissioning with the correct motor data.

### Procedure

Proceed as follows to activate the motor overload protection according to UL 61800-5-1 Ed.2:

1. Set p5375.0 = 1
2. Set p5375.1 = 1

## 10.6 Basic positioner (EPOS)

### Overview

Position control means controlling the position of an axis. An "axis" is a machine or system component that comprises the converter with active position control and the driven mechanical system.

The basic positioner (EPOS) is a positioner integrated in the converter and calculates the traversing profile for the time-optimized traversing of the axis to the target position for the position controller. With the basic positioner (EPOS), the positioning tasks can be transferred to the converter and thus relieve the higher-level control system.

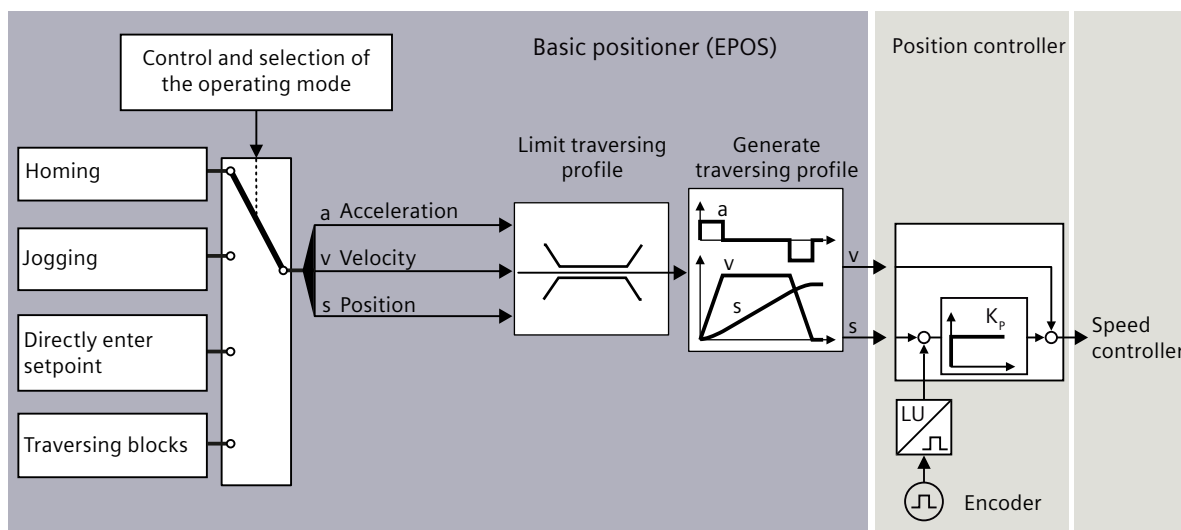


Figure 10-6 Basic positioner and position control

### Description of function

The following functions can be carried out by using the basic positioner:

- **Limits**
  - Limiting the traversing range: specification of the possible traversing range through the configuration of various end positions
  - Limiting the traversing profiles: restriction of the dynamic travel response through limitation of the maximum velocity, acceleration, deceleration, and jerk
- **Monitoring**
  - Position/standstill monitoring: monitoring of the axis positioning motion and monitoring of the axis position after a traversing motion
  - Following error monitoring: monitoring of the maximum deviation between the actual value and the setpoint

- **Homing**  
Homing establishes the home position measurement in the converter to the machine.  
Possible homing types are:
  - Active homing
  - Passive homing
  - Absolute encoder adjustment
- **Traversing blocks**  
Position, velocity, and acceleration are saved in different traversing blocks in the converter.  
The external control selects a traversing block.
- **Direct setpoint input (MDI)**  
The external control specifies the setpoints (position, velocity, and acceleration) for the axis.
- **Jogging**  
This function is used to incrementally traverse the axis (for example, for setting up).

## More information

For more information about configuring the basic positioner (EPOS) in Startdrive, see the information system of the TIA Portal.

## 10.6.1 Mechanical system

### 10.6.1.1 Axis type

#### Overview

Axes in your actual application can be configured with different motion control applications:

- For speed control applications: flexible control of the speed and direction of rotation of rotary axes
- For positioning control applications: relative/absolute positioning of rotary or linear axes (depending on mechanics)

#### Description of function

##### Linear axis

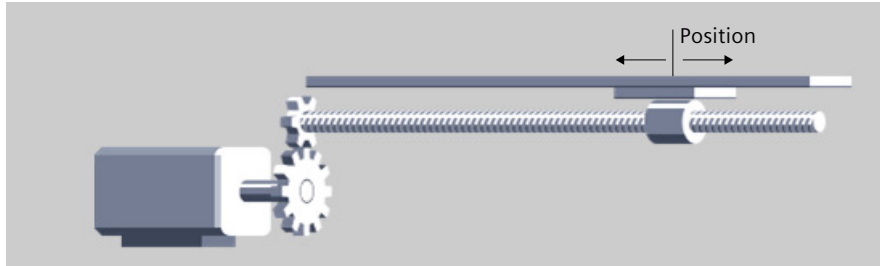
A linear axis is an axis whose traversing range is limited in both motor directions of rotation by the mechanical system of the machine, for example:

- Stacker crane
- Elevating platform
- Tilting station
- Gate/door drive

## 10.6 Basic positioner (EPOS)

- Conveyor belt
- Roller conveyor

For linear axes, the position of the axis is specified as a linear measure, for example, millimeters (mm).



### Rotary axis

A rotary axis is an axis with an infinite traversing range, for example:

- Rotary table

For rotary axes, the position of the axis is specified as an angular measure, for example, degrees ( $^{\circ}$ ).



### 10.6.1.2 Units of measurement

#### Overview

In addition to physical units, the converter also supports the length unit (LU) for positioning operation.

### Description of function

- Physical units (default setting)**  
 The converter provides the physical units for position, speed, acceleration/deceleration, and jerk. You can select the desired physical units according to the actual axis type via relevant parameters during commissioning.

Axis type	Available physical units	
	Position	Velocity
Linear axis	km, m, <b>mm</b> , μm, nm, in, ft, mi	km/h, km/min, m/h, m/min, m/s, mm/h, mm/min, <b>mm/s</b> , in/min, in/s, ft/min, ft/s, mi/h
Rotary axis	<b>degree (°)</b>	<b>degree (°)/s</b>

**Note:**

Units in bold are the default units.

The acceleration is set accordingly as the position/s<sup>2</sup> measurement unit.

The jerk is set accordingly as the position/s<sup>3</sup> measurement unit.

**Note**

When using the physical unit for positioning operation, POS\_STW2.0 must be set to 1. Otherwise, fault F07452 occurs.

- Length unit**  
 The converter calculates the position actual value of the axis using the neutral position unit LU (Length Unit). The length unit LU is independent of whether the converter controls the position of an elevating platform or the angle of rotary table.

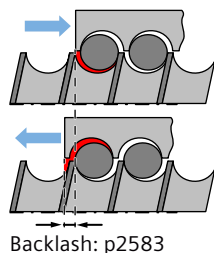
**Note**

If you change the axis type from linear axis to rotary axis or vice versa, the units will be set to default units automatically.

The settings you made will not be converted when changing the units.

### 10.6.1.3 Setting the backlash

#### Overview



Backlash (also called play, dead travel on reversing) is the distance or the angle that a motor must travel through when the direction of rotation reverses until the axis actually moves in the other direction.

## Description of function

### Backlash measurement

Proceed as follows to measure the backlash:

1. Move the axis to position A in the machine. Mark this position in the machine and note down the actual position value in the converter.
2. Move the axis a little bit more in the same direction.
3. Move the axis in the opposite direction until the actual position value in the converter shows the same value as at position A. Due to the backlash when reversing, the axis is now at position B.
4. Measure the position difference  $\Delta = A - B$  in the machine.

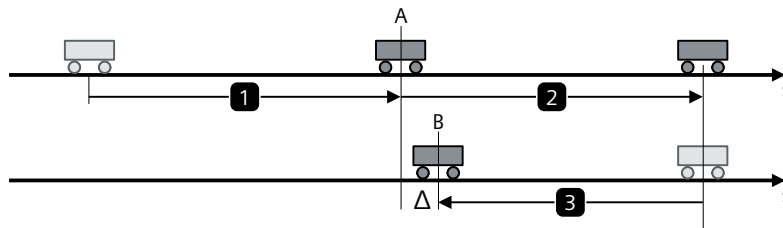


Figure 10-7 Measuring backlash

### Backlash compensation

When mechanical force is transferred between a machine part and its drive, generally backlash occurs. If the mechanical system was to be adjusted/ designed so that there was absolutely no backlash, this would result in high wear. Thus, backlash can occur between the machine component and the encoder. For axes with indirect position sensing, when the axis is operated in a process that the traversing direction is reversed, the mechanical backlash results in an error of the traversing distance, as the axis travels either too far or not far enough.

#### Note

##### Precondition for backlash compensation

The backlash compensation is active with the precondition that the axis has been adjusted for absolute measuring systems.

In order to compensate the backlash, the determined backlash must be specified in p2583 with the correct polarity. At each direction of rotation reversal, the actual axis value is corrected dependent on the actual traversing direction and displayed in r2667. This value is taken into account in the actual position value using p2516 (position offset).

If a stationary axis is homed by setting the home position or an adjusted axis is powered-up with an absolute encoder, then the parameter c2604 (home position approach, starting direction) is relevant for switching-in the compensation value.

## 10.6.2 Limits

### 10.6.2.1 Limiting the traversing range

#### Overview

The traversing range of a linear axis can be limited using either the software limit switch or the hardware limit switch.

#### Description of function

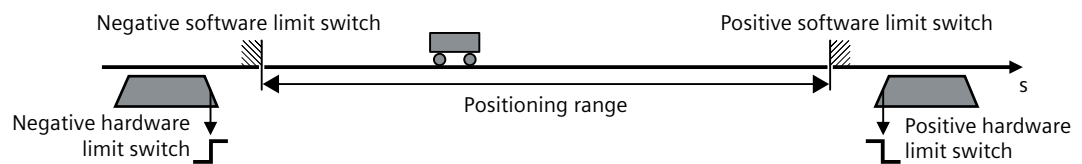


Figure 10-8 Software and hardware limit switches

The converter only accepts position setpoints that lie within the software limit switches. Activated software limit switches limit the position set value by specifying the p2580 (negative software limit switch) and p2581 (positive software limit switch).

The traversing range limiting by using software limit switch is only active when the following preconditions are met:

- The software limit switches are activated ( $c2582 = 1$ ).
- The home position is set ( $r2684.11 = 1$ ).
- The modulo correction is not active ( $c2577 = 0$ ).

Activated hardware limit switches are evaluated on the converter using c2569 (negative hardware limit switch) and c2570 (positive hardware limit switch) and they are low active. When passing the hardware limit switch, the converter brakes the axis with the OFF3 ramp-down time, switches the motor off and outputs fault F07491 or F07492. In order to bring the axis back into the valid traversing range, you must move the axis away from the hardware limit switch, for example, by using the jogging function.

The traversing range limiting by using hardware limit switch is only active when the following precondition is met:

- The hardware limit switches are activated ( $c2568 = 1$ ).

#### NOTICE

##### Damage to the machine when passing a hardware limit switch

The machine can be damaged when a hardware limit switch is passed.

- Monitor axis motion, and manually stop the axis in time, e.g. by issuing an Emergency Stop.

### 10.6.2.2 Limiting the traversing profiles

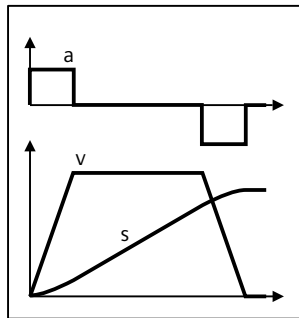
#### Overview

The traversing profile is the acceleration, velocity and position characteristics of an axis when being positioned. You can influence the traversing profile by limiting the velocity, the acceleration, or the jerk (= change of the acceleration over time).


#### Description of function

If the axis must traverse more slowly or must accelerate at a lower rate or "softly", then you must set the relevant limits to lower values. The lower that one of the limits is, the longer the converter needs to position the axis.

- Without jerk limitation



- With jerk limitation

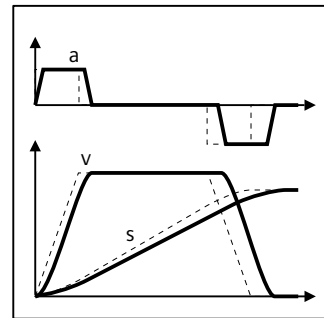

#### Note

Jerk limitation is not active when messages are generated with stop responses OFF1/OFF2/OFF3.

### 10.6.3 Position monitoring

The converter supports the following position monitoring functions:

- Standstill and positioning monitoring
- Following error monitoring

#### 10.6.3.1 Positioning and standstill monitoring

#### Overview

Positioning and standstill monitoring is used to monitor the axis positioning motion and the axis position after a traversing motion.



### Description of function

As soon as the setpoint for the position within a positioning operation no longer changes, then the converter sets the "Setpoint stationary" signal to 1. With this signal, the converter starts to monitor the position actual value:

- As soon as the axis has reached the positioning window, the converter signals that the target has been reached, and maintains the axis in closed-loop control.
- If the axis does not come to a standstill within the standstill monitoring time, the converter reports fault F07450.
- If the axis does not enter the positioning window within the positioning monitoring time, the converter reports fault F07451.

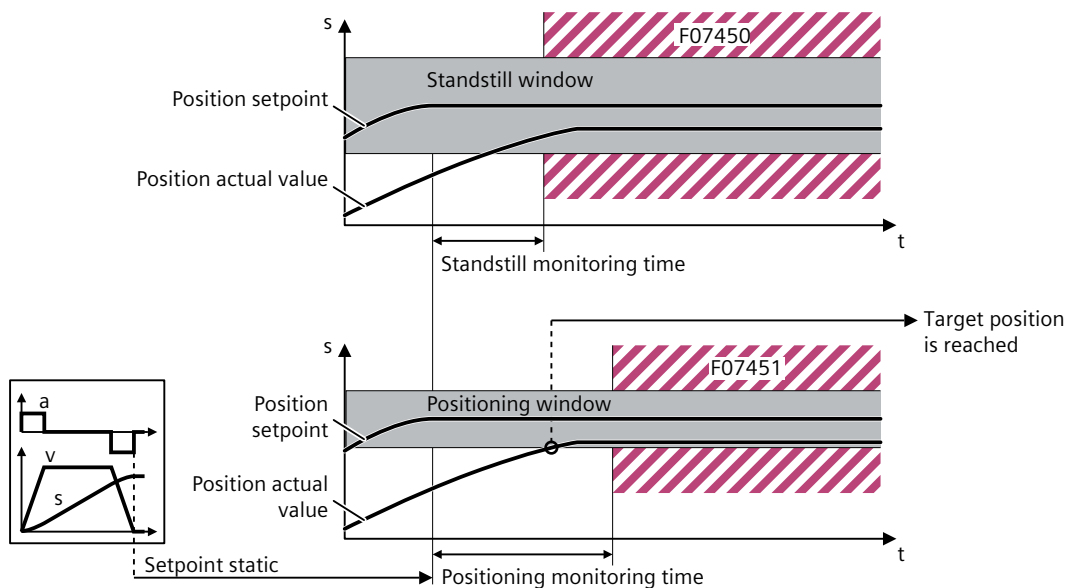


Figure 10-9 Standstill monitoring and positioning monitoring

### 10.6.3.2 Following error monitoring

#### Overview

Following error monitoring is used to monitor the maximum deviation between the actual value and the position setpoint.

## Description of function

The following error is the deviation between the position setpoint and the position actual value while the converter is positioning the axis. The converter reports fault F07452 if the following error is too high. If you set the tolerance to 0, monitoring is deactivated.

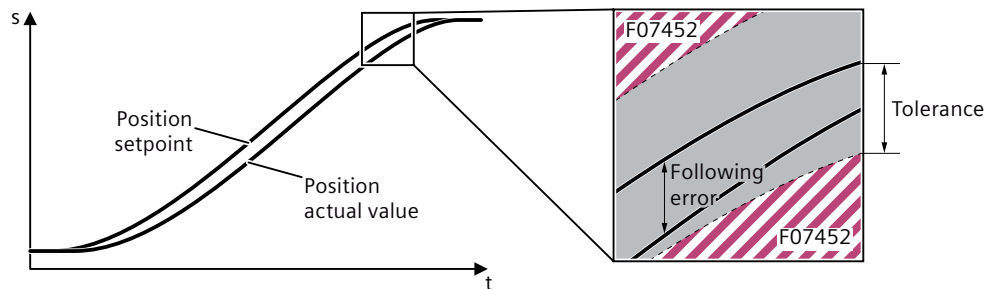


Figure 10-10 Following error monitoring

## 10.6.4 Homing

### Overview

Homing re-establishes the reference between the zero point of the position calculated in the converter and the machine zero point. Homing is a requirement for display of the correct position for the technology object and for absolute positioning.

Absolute encoders retain their position information, even after the supply has been switched off.

The converter offers various ways of homing the axis:

- Active homing - with all encoder types
- Passive homing - with all encoder types
- Set home position - with all encoder types
- Absolute encoder adjustment - with absolute encoders

### Description of function

Homing can occur by means of an independent homing motion (active homing), the detection of a homing mark during a motion initiated (passive homing) or a direct position assignment.

- **Active homing**  
The converter automatically traverses the axis to a defined home position.
- **Passive homing**  
The converter corrects its position actual value while traversing and reduces errors, e.g. caused by wheel slip or a gear ratio that has not been precisely set.
- **Set the home position and absolute encoder adjustment**  
The converter takes the reference point coordinate as the new axis position.

### 10.6.4.1 Terms for homing

#### Overview

After switching on the machine, the absolute dimensional reference to the machine zero must be created for positioning. This progress is called homing. The following terms are relevant to the homing.

#### Description

##### Homing mark

A homing mark is an input signal, on whose occurrence a known mechanical position can be assigned to the actual values.

A homing mark can be:

- **A zero mark**  
The zero mark of an encoder or an external zero mark via digital input is used as a homing mark.

##### Reference cam

If there are several zero marks in the traversing range, the reference cam is used to select a specific zero mark before or after the reference cam.

The reference cam is evaluated with the settings of the telegrams 111 and 112 via the higher-level control system. Alternatively, there is also the possibility to evaluate the reference cam via a digital input of the converter. For this purpose, a digital input must be parameterized as the reference cam selection 2.

##### Homing mark position

This is the position assigned to the homing mark.

With active homing, the homing mark position corresponds to the home position minus home position offset.

With passive homing, the homing mark position corresponds to the home position.

##### Home position

At the end of the active homing motion, the axis arrives at the home position.

##### Home position offset

The difference between the home position and the homing mark position is the home position offset.

##### Approach velocity

Up to three parameterizable approach velocities are available:

- to the reference cam
- to the zero mark
- to the home position

### 10.6.4.2 Active homing

#### Overview

Three homing modes are available for active homing:

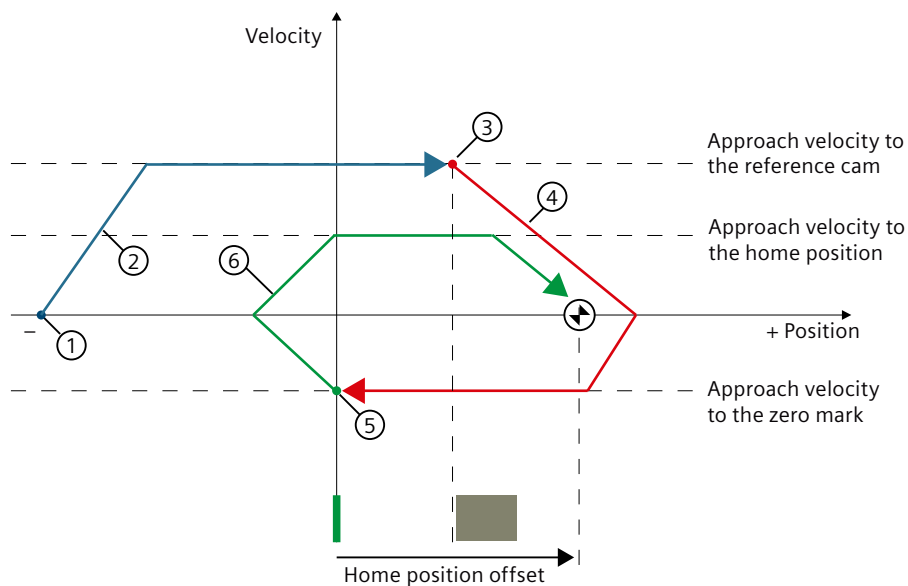
- Use encoder zero mark and reference cam
- Use encoder zero mark
- Use external zero mark via digital input




## Description of function

### Active homing by using encoder zero mark and reference cam

The following figure shows an example of the homing motion with the following settings:

- Active homing with reference cam and encoder zero mark
- Homing in the positive direction
- Positive home position offset



-  Home position
-  Zero mark (Homing mark)
-  Reference cam

#### Motion sequence


- ① Start of active homing
- ② Approach to the reference cam in approach direction with the corresponding approach velocity
- ③ Enable detection of the reference cam and homing mark detection
- ④ Approach to the homing mark with the corresponding approach velocity
- ⑤ Detection of the homing mark
- ⑥ Approach to the home position with the corresponding approach velocity

Figure 10-11 Example: active homing in positive direction by using encoder zero mark and reference cam

### Active homing by using encoder zero mark

The following figure shows an example of the homing motion with the following settings:

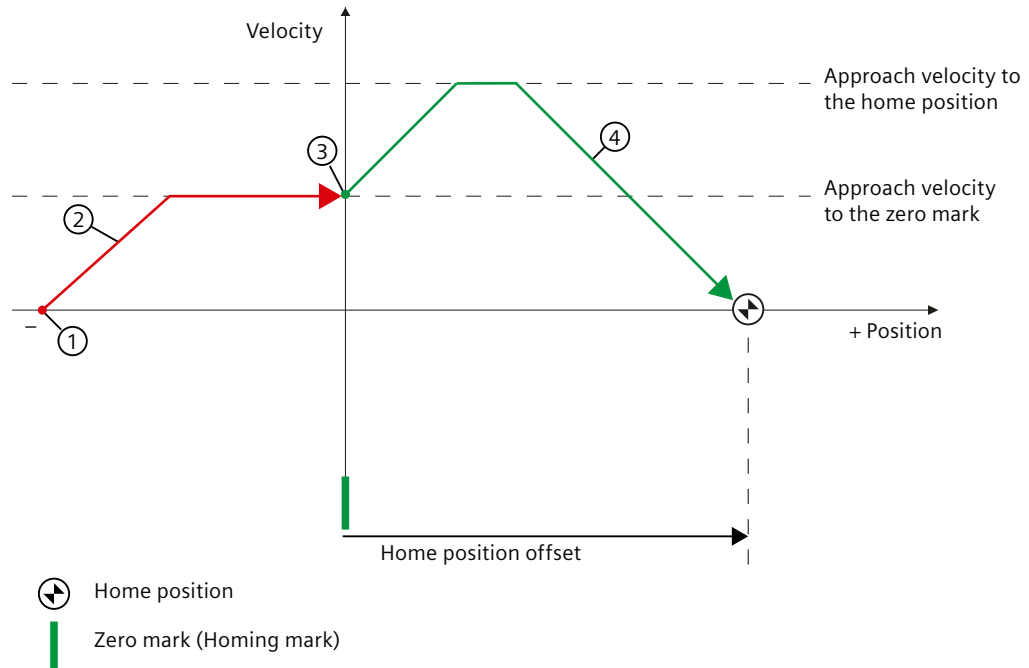- Active homing with encoder zero mark
- Homing in the positive direction
- Positive home position offset



#### Motion sequence

- ① Start of active homing
- ② Approach to the homing mark in the homing direction with the corresponding approach velocity to the zero mark
- ③ Detection of the homing mark
- ④ Approach to the home position with the corresponding approach velocity to the home position


Figure 10-12 Example: active homing in positive direction by using encoder zero mark

### Active homing by using external zero mark via digital input

The following figure shows an example of the homing motion with the following settings:

- Active homing with digital input
- Approach in the positive direction

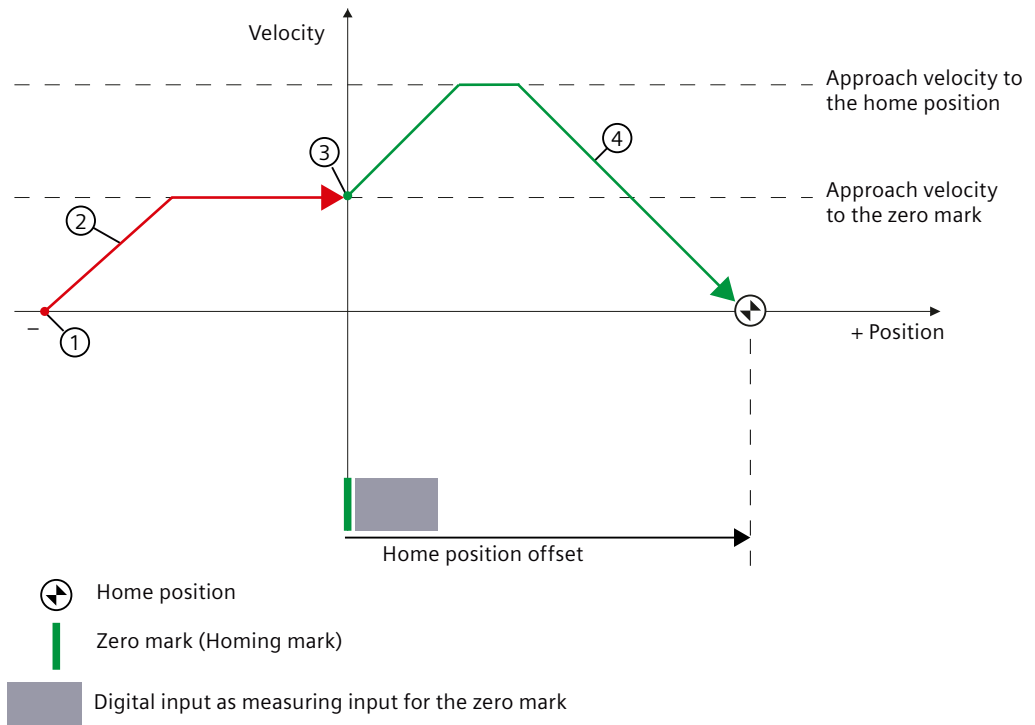- Homing mark on the negative side of the digital input
- Positive home position offset



**Motion sequence**

- ① Start of active homing
- ② Approach to the homing mark in the homing direction with the corresponding approach velocity to the zero mark
- ③ Detection of the homing mark via digital input
- ④ Approach to the home position with the corresponding approach velocity to the home position

Figure 10-13 Example: active homing in positive direction by using external zero mark via digital input

**10.6.4.3 Passive homing**

**Overview**

Passive homing is used to dynamically modify the current position value to zero when the axis is working in any positioning state. With the "Passive homing" function, the loadside position accuracy is increased because inaccuracies in actual value acquisition are compensated for. The function can be used in every mode (jog, traversing block, direct setpoint specification for positioning / setup) and is superimposed over the active operating mode.

## Description of function

The function is selected by a "1" signal of c2597 (Homing type selection) and is activated by a 0/1 edge of c2595 (Homing start). The signal of c2595 must be set during the entire homing process; otherwise, the process is aborted.

Status bit r2684.1 (passive homing active) is linked with activate measuring probe evaluation. It activates measuring probe evaluation. c2510 (measuring probe evaluation selection) and c2511 (measuring probe evaluation edge) can be used to check which measuring probe (1 or 2) and which measuring edge (0/1 or 1/0) is used.

The probe pulse is used to supply the measured value determined by the function "homing mark search" and "measuring probe evaluation" via parameter r2523. The validity of the measurement is reported via r2526.2.

---

### Note

The "Passive homing" function is superimposed on an active operating mode, it is therefore not an active mode. In contrast to the home position approach, the function can be carried out superimposed by the machine process.

As standard, for passive homing, measuring probe evaluation is used; when enabled, the measuring probe is selected and the measuring probe edge evaluation is active. (In the default settings, measuring probe 1 is always the measuring probe and the measuring probe evaluation is always the 0/1 edge.)

---

## 10.6.4.4 Absolute encoder adjustment

### Overview

The function is only available when using a motor with the absolute encoder. When commissioning the absolute encoder for the first time, a mechanical axis position is aligned with the encoder absolute position and then the system is synchronized.

After the drive has been switched off the encoder position information is retained. This means that the axis does not have to be readjusted when the drive powers up.

---

### Note

It is crucial that absolute encoders are adjusted the first time that they are commissioned.

---

## Description of function

For the absolute encoder adjustment, the machine axis must be moved to the desired position first, this can be done in jog mode or manually. A position marking, a fixed stop, or measuring the distance between the axis and the fixed home position can be used as a reference. Once the desired position of the axis is reached, the home position coordinate can be set accordingly. You must save the settings in the device.

The absolute encoder adjustment can also be used with the active homing. For this purpose, you must select the option during active homing.



When using the telegram 112, the absolute encoder adjustment can be initiated via the position control word 2, bit 3 (POS\_STW2.3).

---

**Note**

After being commissioned for the first time, carefully ensure that the drive train and its configuration cannot be mechanically changed or modified. When mechanical changes are made, the synchronization between the encoder actual value and the machine zero is lost. In this particular case, it is crucial that the axis is readjusted.

---

### 10.6.4.5 Setting the home position

#### Description of function

##### Setting the home position

---

**Note**

The function is only available when the converter is online in Startdrive.

---

You can set the home position (p2507 = 2) and the status "Home position set" (r2684.11) is updated. When the adjustment is correct, "Absolute encoder adjusted" is displayed.

##### Resetting the home position

You can also reset the home position (p2507 = 1) and the status display for the absolute encoder adjustment is then updated. The adjustment is deactivated. After the reset, "Absolute encoder not adjusted" is displayed.

## 10.6.5 Traversing blocks

### 10.6.5.1 Traversing block tasks

#### Overview

A traversing block describes a positioning instruction for the drive. Up to 32 different traversing tasks can be saved in the converter. All parameters which describe a traversing task are effective during a block change.

## Description of function

### Activating the traversing block function

When telegrams 111 and 112 is used, the traversing block function can be configured with the PROFINET control word POS\_STW1.15:

Control word	Signal	Description
POS_STW1.15	1	MDI selection.
	0	Traversing block selection.

When telegrams 7 and 9 are used, the traversing block function can be configured with the PROFINET control word SATZANW.15:

Control word	Signal	Description
SATZANW.15	1	MDI selection.
	0	Traversing block selection.

Traversing blocks are parameterized using parameter sets that have a fixed structure:

- **Traversing block number (p2616[0...31])**  
Each traversing block must have a traversing block number assigned to it. The traversing blocks are executed in the sequence of the traversing block numbers. Numbers containing the value "-1" are ignored so that the space can be reserved for subsequent traversing blocks, for example.
- **Task (p2621[0...31])**  
1: POSITIONING  
2: FIXED ENDSTOP  
3: ENDLESS\_POS  
4: ENDLESS\_NEG  
5: WAIT  
6: GOTO  
7: SET\_O  
8: RESET\_O  
9: JERK
- **Motion parameters**
  - Target position or traversing distance (p2617[0...31])
  - Velocity (p2618[0...31])
  - Acceleration override (p2619[0...31])
  - Deceleration override (p2620[0...31])

- **Task mode (p2623[0...31])**

Processing a traversing task can be affected by the parameter p2623 (task mode).

Value = 0000 cccc bbbb aaaa

- aaaa: Identifiers  
000x → hide/show block (x = 0: show, x = 1: hide)
- bbbb: Continuation condition  
0000, END: 0/1 edge at STW1.6  
0001, CONTINUE\_WITH\_STOP:  
The exact position parameterized in the block is approached (brake to standstill and positioning window monitoring) before block processing can continue.  
0010, CONTINUE\_ON-THE-FLY:  
The system switches to the next traversing block "on the fly" when the braking point for the current block is reached (if the direction needs to be changed, this does not occur until the drive stops within the positioning window).  
0011, CONTINUE\_EXTERNAL:  
Same as "CONTINUE\_ON-THE-FLY", except that an instant block change can be triggered up to the braking point by a 0/1 edge. If an external block change is not triggered, a block change is triggered at the braking point.  
0100, CONTINUE\_EXTERNAL\_WAIT:  
Control signal "External block change" can be used to trigger a flying changeover to the next task at any time during the traveling phase. If "External block change" is not triggered, the axis remains in the parameterized target position until the signal is issued. The difference here is that with CONTINUE\_EXTERNAL, a flying changeover is carried out at the braking point if "External block change" has not been triggered, while here the drive waits for the signal in the target position.  
0101, CONTINUE\_EXTERNAL\_ALARM:  
This is the same as CONTINUE\_EXTERNAL\_WAIT, except that alarm A07463 "External traversing block change in traversing block x not requested" is output when "External block change" is not triggered by the time the drive comes to a standstill. The alarm can be converted to a fault with a stop response so that block processing can be canceled if the control signal is not issued.
- cccc: positioning mode  
The POSITIONING task (p2621 = 1) defines how the position specified in the traversing task is to be approached.  
0000, ABSOLUTE:  
The position specified in p2617 is approached.  
0001, RELATIVE:  
The axis is traveled along the value specified in p2617  
0010, ABS\_POS:  
For rotary axes with modulo offset only. The position specified in p2617 is approached in a positive direction.  
0011, ABS\_NEG:  
For rotary axes with modulo offset only. The position specified in p2617 is approached in a negative direction.

- **Task parameter (command-dependent significance) (p2622[0...31])**

**Traversing block tasks****• POSITIONING**

The POSITIONING task initiates motion. The following parameters are evaluated:

- p2616[x] Block number
- p2617[x] Position
- p2618[x] Velocity
- p2619[x] Acceleration override
- p2620[x] Deceleration override
- p2623[x] Task mode

The task is executed until the target position is reached. When the task is activated, the converter is already located at the target position, then for the block change enable (CONTINUE\_ON-THE-FLY or CONTINUE\_EXTERNAL), the next task is selected in the same interpolation cycle. For CONTINUE\_WITH\_STOP, the next block is activated in the next interpolation cycle. CONTINUE\_EXTERNAL\_ALARM causes a message to be output immediately.

**• FIXED STOP**

The FIXED STOP task triggers a traversing movement with reduced torque to fixed stop. The following parameters are relevant:

- p2616[x] Block number
- p2617[x] Position
- p2618[x] Velocity
- p2619[x] Acceleration override
- p2620[x] Deceleration override
- p2623[x] Task mode
- p2622[x] Task parameter clamping torque [0.01 Nm] with rotary motors.

Possible continuation conditions include END, CONTINUE\_WITH\_STOP, CONTINUE\_EXTERNAL, CONTINUE\_EXTERNAL\_WAIT.

- **ENDLESS POS, ENDLESS NEG**

Using these tasks, the axis is accelerated to the specified velocity and is moved until:

- A software limit switch is reached.
- A hardware limit switch signal has been issued.
- The traversing range limit is reached.
- Motion is interrupted by the control signal "no intermediate stop / intermediate stop" (STW1.5).
- Motion is interrupted by the control signal "do not reject traversing task / reject traversing task" (STW1.4).
- An external block change is triggered (with the appropriate continuation condition).

The following parameters are relevant:

- p2618[x] Velocity
- p2619[x] Acceleration override
- p2623[x] Task mode

All continuation conditions are possible.

- **JERK**

Jerk limitation can be activated (command parameter = 1) or deactivated (task parameter = 0) by means of the JERK task. p2575 "Active jerk limitation" must be set to zero. The value parameterized in "jerk limit" p2574 is the jerk limit.

A precise stop is always carried out here regardless of the parameterized continuation condition of the task preceding the JERK task.

The following parameters are relevant:

- p2622[x] Task parameter = 0 or 1

All continuation conditions are possible.

- **WAIT**

The WAIT task can be used to set a waiting period which should expire before the following task is processed.

The following parameters are relevant:

- p2622[x] Task parameter = delay time in milliseconds  $\geq 0$  ms, but is rounded-off to a multiple of numeral 8
- p2623[x] Task mode

Regardless of the parameterized continuation condition which is parameterized for the task that precedes the WAIT task, an exact stop is always executed before the waiting time expires. The WAIT task can be executed by an external block change.

Possible continuation conditions include END, CONTINUE\_WITH\_STOP, CONTINUE\_EXTERNAL, CONTINUE\_EXTERNAL\_WAIT, and CONTINUE\_EXTERNAL\_ALARM.

The fault message is triggered when "External block change" has still not been issued after the waiting time has elapsed.

10.6 Basic positioner (EPOS)

- **GOTO**  
 Using the GOTO task, jumps can be executed within a sequence of traversing tasks. The block number which is to be jumped to must be specified as task parameter. A continuation condition is not permissible. If there is no block with this number, then alarm A07468 (jump destination does not exist in traversing block x) is output and the block is designated as being inconsistent.  
 The following parameters are relevant:
  - p2622[x] Task parameter = Next traversing block number
 Any two of the SET\_O, RESET\_O and GOTO tasks can be processed in an interpolation cycle and a subsequent POSITION and WAIT task can be started.
  
- **SET\_O, RESET\_O**  
 The tasks SET\_O and RESET\_O allow up to two binary signals (output 1 or 2) to be simultaneously set or reset. The number of the output (1 or 2) is specified bit-coded in the task parameter.  
 The following parameters are relevant:
  - p2616[x] Block number
  - p2622[x] Task parameter = bit-coded output:
    - 0x1: Output 1
    - 0x2: Output 2
    - 0x3: Output 1 and output 2
 Possible continuation conditions are END, CONTINUE\_ON-THE-FLY and CONTINUE\_WITH\_STOP, and CONTINUE\_EXTERNAL\_WAIT.  
 Any two of the SET\_O, RESET\_O and GOTO tasks can be processed in an interpolation cycle and a subsequent POSITIONING and WAIT task can be started.

**Intermediate stop and reject a traversing task**

When telegrams 7, 9, 111, and 112 are used, perform an intermediate stop with the PROFINET control word STW1.5:

Control word	Signal	Description
STW1.5	1	No intermediate stop.
	0	Intermediate stop.

When telegrams 7, 9, 111, and 112 are used, reject a traversing task with the PROFINET control word STW1.4:

Control word	Signal	Description
STW1.4	1	Do not reject a traversing task.
	0	Reject a traversing task (ramp-down with the maximum deceleration).

**Parameters**

The following list includes the parameters of the "Traversing block" function. The parameters displayed twice indicate that they may have different properties and descriptions depending on the selected axis type. For more information, see Section "Parameter list (Page 695)".

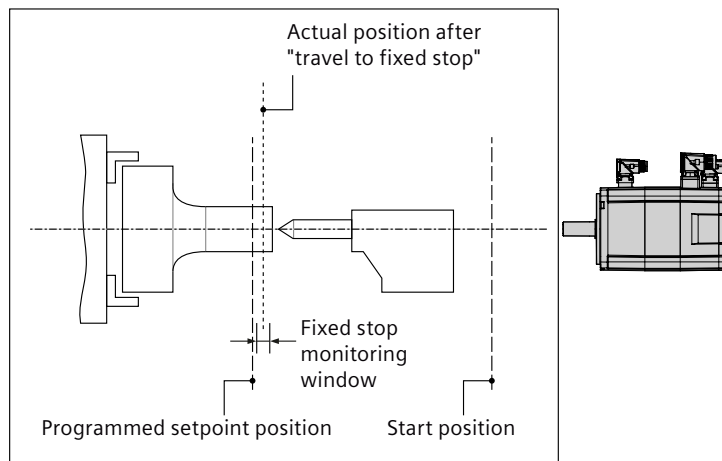
Number	Name	Unit
--------	------	------

p2615	EPOS maximum number of traversing blocks	
p2616[0...n]	EPOS traversing block block number	
p2617[0...n]	EPOS traversing block position	[mm]
p2617[0...n]	EPOS traversing block position	[°]
p2618[0...n]	EPOS traversing block velocity	[mm/s]
p2618[0...n]	EPOS traversing block velocity	[°/s]
p2619[0...n]	EPOS traversing block acceleration override	[%]
p2620[0...n]	EPOS traversing deceleration override	[%]
p2621[0...n]	EPOS traversing block task	
p2622[0...n]	EPOS traversing block task parameter	
p2623[0...n]	EPOS traversing block task mode	

### 10.6.5.2 Travel to fixed stop

#### Overview

The "Travel to fixed stop" function can be used, for example, to traverse sleeves to a fixed stop against the workpiece with a predefined torque. In this way, the workpiece can be securely clamped. The clamping torque can be parameterized in the traversing task (p2622). An adjustable monitoring window for travel to fixed stop prevents the drive from traveling beyond the window if the fixed stop should break away.




#### Description of function

In positioning mode, travel to fixed stop is started when a traversing block is processed with the FIXED STOP command. In this traversing block, in addition to the specification of the dynamic parameterized position, speed, acceleration override and delay override, the required clamping torque can be specified as task parameter p2622. From the start position onwards, the target position is approached with the parameterized speed. The fixed stop (the workpiece) must be between the start position and the braking point of the axis; that is, the target position is placed inside the workpiece.

The preset torque limit is effective from the start, i.e. travel to fixed stop also occurs with a reduced torque. The preset acceleration and delay overrides and the current speed override

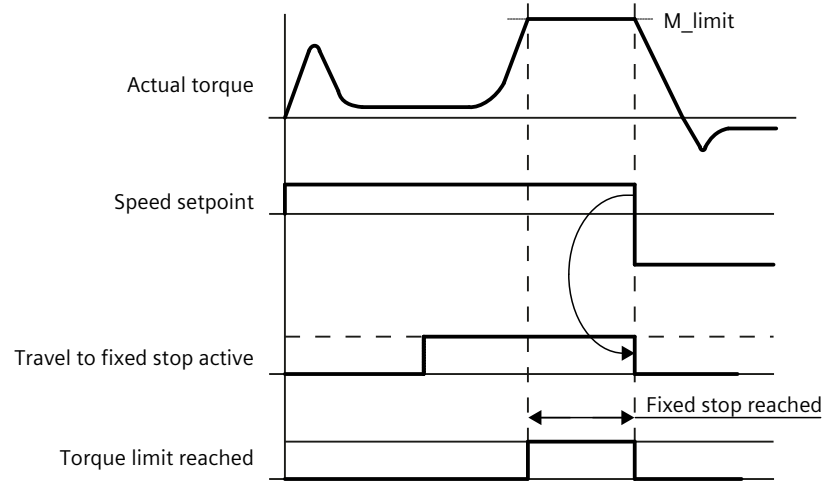are also effective. Dynamic following error monitoring (p2546) in the position controller is not effective when traveling to the fixed stop. As long as the drive travels to the fixed stop or is in fixed stop, the "Travel to fixed stop active" status bit r2683.14 is set.



### 10.6.6 Direct setpoint input (MDI)

#### Overview

The "direct setpoint input (MDI, Manual Data Input)" function allows for positioning (absolute, relative) and setting-up (endless position-controlled) by means of direct setpoint inputs (e.g. via the PLC using process data). A higher-level control provides the converter with the position setpoint and traversing profile.

#### Description of function

During traversing, the motion parameters can also be influenced (on-the-fly setpoint acceptance) and an on-the-fly change can be undertaken between the "setting-up" and "positioning" modes. The "direct setpoint specification" mode (MDI) can also be used if the axis is not homed in the "setting-up" or "relative positioning" modes.

#### "Setting-up" mode

The higher-level control selects the mode "Set-up":



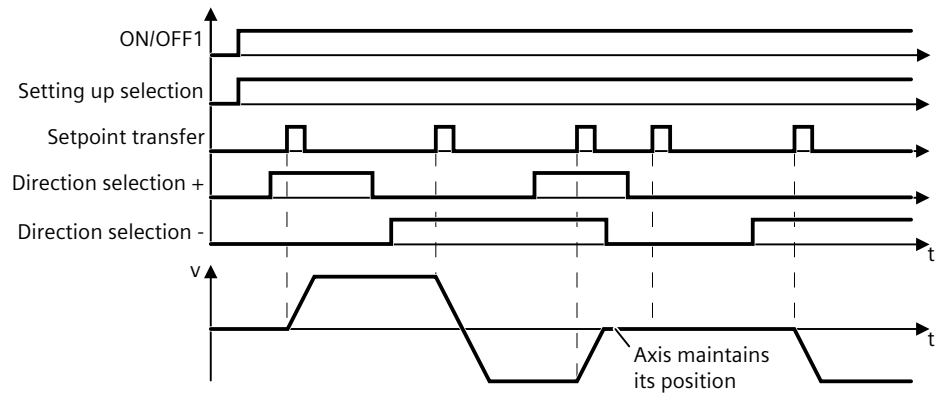


Figure 10-14 Set up axis with direct setpoint input (MDI)

**"Positioning" mode**

The higher-level control specifies the value of the setpoint either as a relative or an absolute position setpoint:

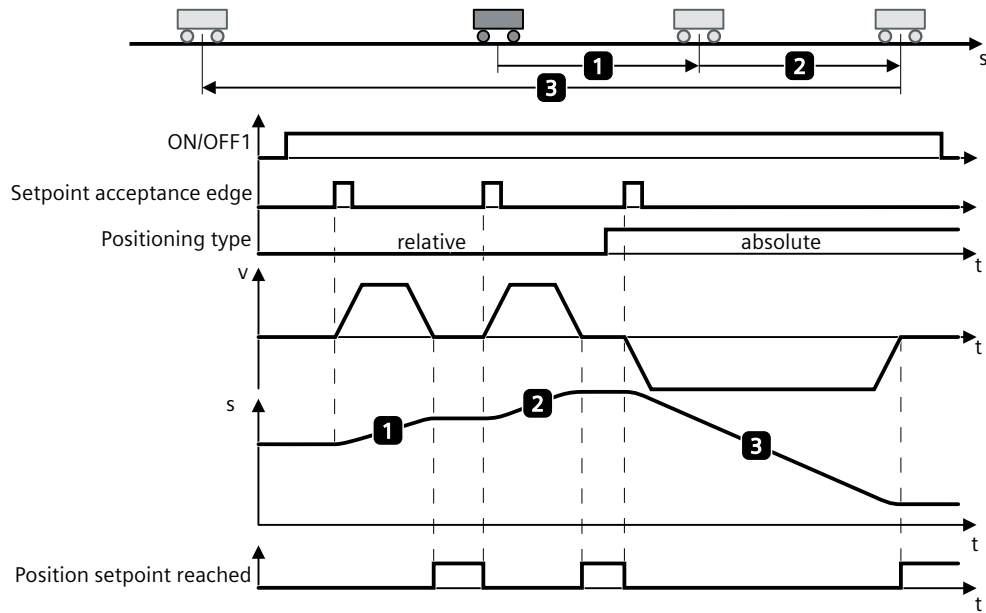


Figure 10-15 Position axis with direct setpoint input (MDI)

**Activating the direct setpoint input function**

When telegrams 111 and 112 are used, the direct setpoint input function can be configured with the PROFINET control word POS\_STW1.15:

Control word	Signal	Description
POS_STW1.15	1	MDI selection.
	0	Traversing block selection.

10.6 Basic positioner (EPOS)

When telegrams 7 and 9 are used, the direct setpoint input function can be configured with the PROFINET control word SATZANW.15:

Control word	Signal	Description
SATZANW.15	1	MDI selection.
	0	Traversing block selection.

**Selecting a working mode**

In "Positioning" mode, the parameters (position, velocity, acceleration and deceleration) can be used to carry out absolute or relative positioning.

In "Setting-up" mode, using parameters (velocity, acceleration and deceleration) endless closed-loop position control behavior can be carried out.

When telegrams 111 and 112 are used, select a working mode with the PROFINET control word POS\_STW1.14:

Control word	Signal	Description
POS_STW1.14	1	Signal setting-up selected.
	0	Signal positioning selected. <sup>1)</sup>

<sup>1)</sup> Telegrams 7 and 9 can only work in signal positioning mode.

**Selecting a positioning type in signal positioning mode**

When telegrams 111 and 112 are used, select a positioning type with the PROFINET control word POS\_STW1.8:

Control word	Signal	Description
POS_STW1.8	1	Absolute positioning is selected.
	0	Relative positioning is selected.

When telegram 9 is used, select a positioning type with the PROFINET control word MDI\_MOD.0:

Control word	Signal	Description
MDI_MOD.0	1	Absolute positioning is selected.
	0	Relative positioning is selected.

**Selecting an absolute positioning direction in signal positioning mode**

When telegrams 111 and 112 are used, select an absolute positioning direction with the PROFINET control words POS\_STW1.9 and POS\_STW1.10:

Control word	Signal	Description
POS_STW1.9 POS_STW1.10	0	Absolute positioning through the shortest distance.
	1	Absolute positioning/MDI direction selection, positive.
	2	Absolute positioning/MDI direction selection, negative.
	3	Absolute positioning through the shortest distance.

When telegram 9 is used, select an absolute positioning direction with the PROFINET control words MDI\_MOD.1 and MDI\_MOD.2:

Control word	Signal	Description
MDI_MOD.1	0	Absolute positioning through the shortest distance.
MDI_MOD.2	1	Absolute positioning/MDI direction selection, positive.
	2	Absolute positioning/MDI direction selection, negative.
	3	Absolute positioning through the shortest distance.

#### Selecting a direction in signal setting-up mode

When telegrams 111 and 112 are used, select a direction with the PROFINET control words POS\_STW1.9 and POS\_STW1.10

Control word	Signal	Description
POS_STW1.9	1	MDI direction selection, positive.
POS_STW1.10	2	MDI direction selection, negative.

#### Selecting an MDI transfer type

When telegrams 111 and 112 are used, select an MDI transfer type with the PROFINET control word POS\_STW1.12:

Control word	Signal	Description
POS_STW1.12	1	Continuous transfer.
	0	Activate MDI block change with of a traversing task (STW1.6).

#### Setting MDI setpoints

When telegrams 9, 111, and 112 are used, set MDI setpoints with the following PROFINET control words:

- Position setpoint (MDI\_TARPOS): 1 hex = 1 LU
- Velocity setpoint (MDI\_VELOCITY): 1 hex = 1000 LU/min
- Acceleration override (MDI\_ACC): 4000 hex = 100%
- Deceleration override (MDI\_DEC): 4000 hex = 100%

#### Intermediate stop and reject an MDI task

When telegrams 7, 9, 111, and 112 are used, perform an intermediate stop with the PROFINET control word STW1.5:

Control word	Signal	Description
STW1.5	1	No intermediate stop.
	0	Intermediate stop with parameterized deceleration MDI_DEC (telegrams 9, 111, and 112).

When telegrams 7, 9, 111, and 112 are used, reject an MDI task with the PROFINET control word STW1.4:

Control word	Signal	Description
STW1.4	1	Do not reject a traversing task.
	0	Reject a traversing task (ramp-down with the maximum deceleration).

### 10.6.7 Jog

#### Overview

It is possible to change over between jog incremental and jog velocity. The traversing distances p2587 and p2588 and velocities p2585 and p2586 are entered according to the jog signals c2589 and c2590. The traversing distances are only effective for a "1" signal at p2591 (jog incremental). For p2591 = "0", the axis moves to the start of the traversing range or to the end of the traversing range with the specified velocity.

#### Description of function

##### Jog incremental

In the case of incremental jogging, input a relative traversing distance and a velocity setpoint into the converter. With the signals "Jogging 1" or "Jogging 2" the converter positions the axis by the respective travel path.

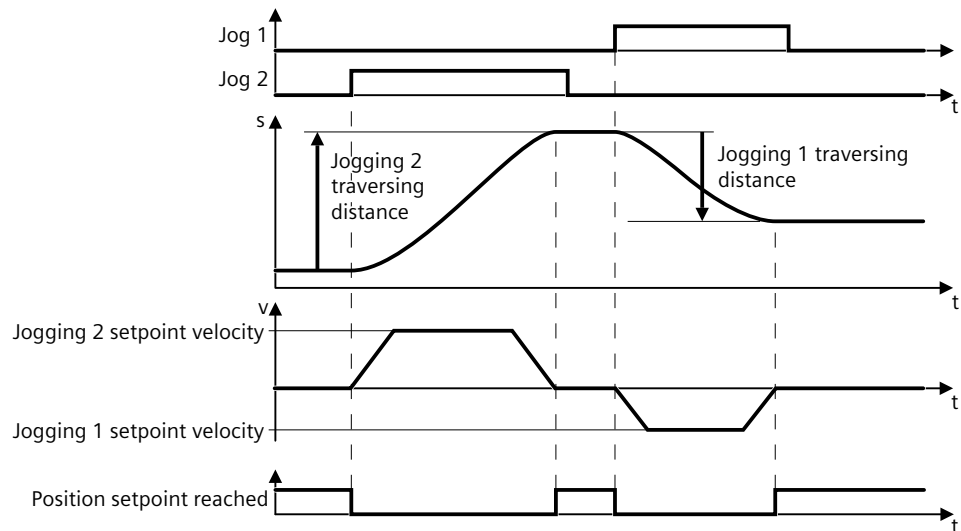


Figure 10-16 Jog incremental

### Jog velocity

Only input a setpoint velocity for the converter for velocity jog. With the signal "Jogging 1" or "Jogging 2", the converter accelerates the axis to the relevant setpoint velocity. The converter stops the axis when the respective "Jog" signal returns to zero.

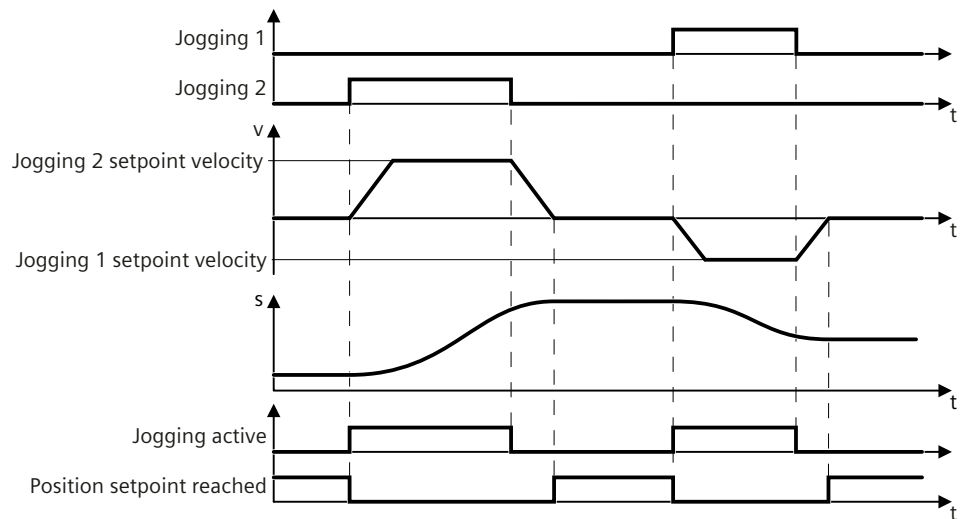


Figure 10-17 Jog velocity

### Selecting a jogging mode

When telegrams 7, 9, 111 and 112 are used, select a jogging channel with the PROFINET control words STW1.8 and STW1.9:

Control word	Signal	Description
STW1.8	0	No jogging channel activated.
STW1.9	1	Jog 1 signal source rising edge activated.
	2	Jog 2 signal source rising edge activated.
	3	Reserved.

When telegrams 111 and 112 are used, select a jogging mode with the PROFINET control word POS\_STW2.5:

Control word	Signal	Description
POS_STW2.5	1	Jogging, incremental active.
	0	Jogging, velocity active.

### Note

When telegrams 7 and 9 are used, endless jogging is fixed.

### Setting jogging setpoints

When telegrams 7 and 9 are used, set the following jogging setpoint with the appropriate parameters:

- Velocity (p2585, p2586)

When telegrams 111 and 112 are used, set the following jogging setpoints with the appropriate parameters:

- Velocity (p2585, p2586)
- Incremental (p2587, p2588)

## Parameters

The following list includes the parameters of the "Jog" function. The parameters displayed twice indicate that they may have different properties and descriptions depending on the selected axis type. For more information, see Section "Parameter list (Page 695)".

Number	Name	Unit
p2585	EPOS jog 1 setpoint velocity	[mm/s]
p2585	EPOS jog 1 setpoint velocity	[°/s]
p2586	EPOS jog 2 setpoint velocity	[mm/s]
p2586	EPOS jog 2 setpoint velocity	[°/s]
p2587	EPOS jog 1 traversing distance	[mm]
p2587	EPOS jog 1 traversing distance	[°]
p2588	EPOS jog 2 traversing distance	[mm]
p2588	EPOS jog 2 traversing distance	[°]
c2589	EPOS jog 1	
c2590	EPOS jog 2	
c2591	EPOS jogging incremental	

## 10.6.8 Measuring probe evaluation and homing mark search

### Overview

The converter supports the "homing mark search" and the "measuring probe evaluation" in position control.

### Description of function

The "homing mark search" and the "measuring probe evaluation" functions mode can be defined via c2510 (measuring probe evaluation selection) and c2511 (measuring probe evaluation edge). In the default settings, measuring probe 1 is always the measuring probe and the measuring probe evaluation is always the 0/1 edge.

The probe signals are recorded via the encoder status and control word. To speed up signal processing, direct measuring probe evaluation can be activated by selecting the input terminals for probes 1 or 2.

The system outputs a message if the same probe input is already being used (see also p0488, p0489).

The appropriate function is started using a 0/1 edge via the encoder control word. Status bit r2526.1 (homing active) signals that the function is active (feedback from the encoder

status word). Status bit r2526.2 (measured value valid) shows the presence of the required measurement r2523.

Once the function is completed (position determined for homing mark or measuring probe), r2526.1 (homing active) and r2526.2 (measured value valid) remain active and the measurement is provided by r2523 until the corresponding encoder control word is reset (0 signal).

If the function (homing mark search or measuring probe evaluation) has not been completed yet, while the encoder control word is reset, then the function is interrupted and the status bit r2526.1 (homing active) is reset via the encoder status word.

If the homing mark search and the measuring probe evaluation functions are simultaneously set, this causes the active function to be interrupted or no function is enabled. Alarm A07495 "homing function interrupted" occurs and remains until the signals at the inputs are reset. The alarm is also generated if a fault is signaled using the encoder status word during an activated function (homing mark search or measuring probe evaluation).


If the "position control" function module is selected, these parameters (c2510 to c2511) are preassigned with "0". If the "basic positioner" function module is selected, the "homing mark search" (for the homing position searching) and "measuring probe evaluation" (for the passive homing function) functions are initiated by the "basic positioner" function module and feedback (r2526, r2523) returned to this.


## Parameters

The following list includes the parameters of the "Homing mark search" and "Measuring probe evaluation" functions.

Number	Name	Unit
p0488[0...2]	Measuring probe 1 input terminal	
p0489[0...2]	Measuring probe 2 input terminal	
c2510[0...3]	LR selecting measuring probe evaluation	
c2511[0...3]	LR measuring probe evaluation edge	
r2523[0...3]	LR measured value	[mm]
r2523[0...3]	LR measured value	[°]
r2526.0...12	LR status word	

## 10.7 Safety Integrated (for S200 PN only)

 <b>DANGER</b>
<p><b>Risk minimization through Safety Integrated</b></p> <p>Safety Integrated can be used to minimize the level of risk associated with machines and plants. Machines and plants can only be operated safely in conjunction with Safety Integrated, however, when the machine manufacturer:</p> <ul style="list-style-type: none"> <li>• Precisely knows and observes this technical user documentation - including the documented limitations, safety information and residual risks.</li> <li>• Carefully constructs and configures the machine/plant. A careful and thorough acceptance test must then be performed by qualified personnel and the results documented.</li> <li>• Implements and validates all the measures required in accordance with the machine/plant risk analysis by means of the programmed and configured Safety Integrated Functions or by other means.</li> </ul> <p>The use of Safety Integrated does not replace the machine/plant risk assessment carried out by the machine manufacturer as required by the EC machinery directive.</p> <p>In addition to using Safety Integrated Functions, further risk reduction measures must be implemented.</p>

 <b>WARNING</b>
<p><b>Unexpected motor movements due to manipulated connecting cables</b></p> <p>The manipulation of the connecting cables can cause unexpected motor movements in a machine or plant. Particularly in machines or plants in which Safety Integrated Functions are used to minimize risks, manipulation can result in serious personal injury or death.</p> <ul style="list-style-type: none"> <li>• Prevent unauthorized access to the converter, for example by using a lockable control cabinet.</li> <li>• Protect the cables inside and outside the control cabinet against manipulation by taking one of the following measures:             <ul style="list-style-type: none"> <li>– Sheathe the cables to the motors, encoders and sensors.</li> <li>– Lay the cables in empty conduits.</li> </ul> </li> </ul>

<b>NOTICE</b>
<p><b>Danger to life as a result of inactive Safety Integrated Functions after powering up</b></p> <p>The Safety Integrated Functions are only activated after the system has completely powered up. System startup is a critical operating state with increased risk. When accidents occur, this can result in death or severe injury.</p> <ul style="list-style-type: none"> <li>• Make sure that the machine is safe during the system start-up.</li> </ul>



** WARNING****Unexpected machine movement caused by inactive Safety Integrated Functions**

Inactive Safety Integrated Functions or Safety Integrated Functions that have not been adapted can trigger unexpected machine movements that may result in serious injury or death.

- Prevent unauthorized persons accessing the drive.
- Protect configurations with active Safety Integrated Functions against changes by assigning roles using user management (UMAC).

**Note**

Safety Integrated Functions should be protected with UMAC (User Management and Access Control).

The "Drive Safety Engineer" role must be assigned to a named user and must not be assigned to Anonymous.

If the role is not assigned, alarm A01637 is displayed.

**Note****Fault of Safety Integrated Functions in the case of non-EMC-compliant installation**

A non-EMC-compliant installation of your machine/system can result in sporadic Safety Integrated function faults.

- Install the drive so that it is EMC-compliant.

## 10.7.1 Safety Integrated Functions

### Overview

Safety Integrated Functions are used to reduce risk in safety-related applications.

### Description of function

In comparison to standard converter functions, Safety Integrated Functions have especially high fail-safety. The Performance Level (PL) and Safety Integrity Level (SIL) of the corresponding standards are a measure of fail-safety.

Safety Integrated Functions are accordingly suitable for reducing risk in safety-related applications. If the risk analysis of the machine or the system indicates a special hazard potential in the application, an application is safety-related.

Safety Integrated means that the functions are integrated into the converter and can be executed without need of external components.

## 10.7 Safety Integrated (for S200 PN only)

The converter performs a self-test of the shutdown paths (Safe Torque Off), functions as well as interfaces (fail-safe digital inputs and outputs) cyclically and in compliance with the standards. A test stop (forced checking procedure) by the operator is not required.

---

### Note

#### Protection against manipulation by unauthorized third parties

Safety Integrated Functions protect against hardware faults and software errors, but not against manipulation by unauthorized third parties.

Protective measures against unauthorized manipulation are described in the Startdrive Operating Instructions and online help. The measures address the following issues:

- Parameter configuration of the safety functions
  - Connection
  - Hardware components
- 

## 10.7.2 Certification

### Description

The Safety Integrated Functions comply with:

- Safety Integrity Level (SIL) 3 according to IEC 61800-5-2
- Performance Level (PL) e according to ISO 13849-1
- Category 4 according to ISO 13849-1

The Safety Integrated Functions correspond to functions according to IEC 61800-5-2.

## 10.7.3 PFH values

### Description

The probability of failure for Safety Integrated Functions must be specified in the form of a PFH value (Probability of Failure per Hour) according to IEC 61800-5-2, IEC 62061, and ISO 13849-1. The PFH value of a Safety Integrated Function depends on the safety concept of the converter and its hardware configuration, as well as on the PFH values of other components used for this Safety Integrated Function.

### More information

The PFH values can be found under: PFH values (<https://support.industry.siemens.com/cs/ww/en/view/76254308>)

You can map the PFH values of all Safety Integrated components from Siemens using the "Safety evaluation" function in the TIA selection tool: Safety evaluation (<http://www.siemens.com/safety-evaluation-tool>)

## 10.7.4 Usage time

### Description

You may not operate converters with Safety Integrated Functions for longer than 20 years. The 20 years starts when the device is delivered. The mission time cannot be extended. This is the case even if a service department checks the converter – or in the meantime, the converter was decommissioned.

## 10.7.5 Stop functions

### 10.7.5.1 Safe Torque Off (STO)

#### Overview

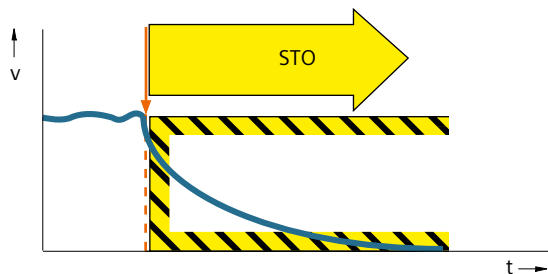


Figure 10-18 Overview STO

The Safe Torque Off (STO) function prevents the torque-generating supply of energy to the motor and prevents the motor from unexpectedly starting.

**Requirement**

**⚠ WARNING**

**Unexpected motor movement through active Safe Torque Off**

There may be unexpected motor movements if the Safe Torque Off (STO) function is active. For instance, the motor can coast down to a standstill or a hanging load may accelerate the motor. Unexpected movements can lead to damage to property, risk to persons, severe injury and death.

- Take account of the way the Safe Torque Off (STO) function works when you perform risk assessments of the machine or system.
- Prevent movements of the motor, for example by using a holding brake.

The STO function is enabled.

**Description of function**

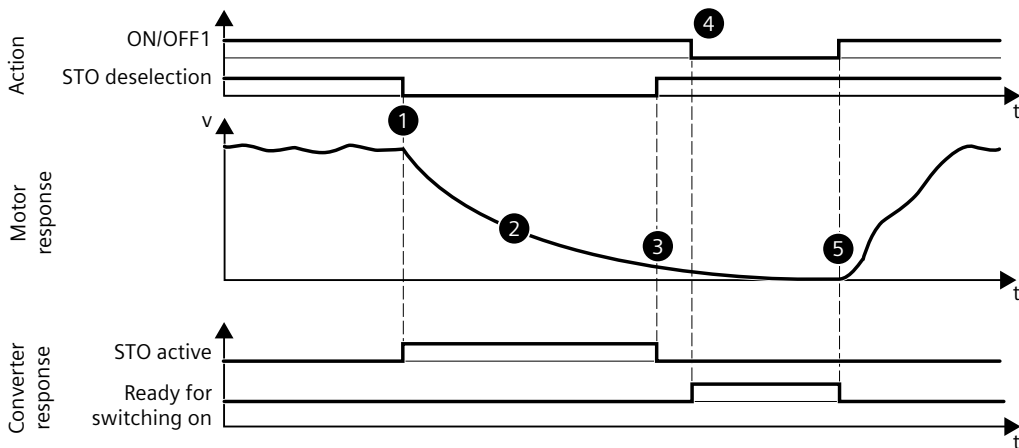


Figure 10-19 Flow diagram STO

Action		Motor/converter response
①	Selection of STO	<ul style="list-style-type: none"> <li>• The converter detects selection of STO and signals the status "STO active" (r9722.0).</li> <li>• The converter interrupts the torque-generating energy feed to the motor.</li> <li>• If you use a line contactor, the converter opens the line contactor.</li> <li>• The "switching on inhibited" status prevents the motor from restarting automatically.</li> </ul>
②		<ul style="list-style-type: none"> <li>• The motor coasts down to a standstill.</li> </ul>
③	Deselection of STO	<ul style="list-style-type: none"> <li>• The converter detects deselection of STO.</li> </ul>

④	Signal change at ON/OFF1 from 1 to 0	<ul style="list-style-type: none"> <li>The converter is ready to start again.</li> </ul>
⑤	Signal change at ON/OFF1 from 0 to 1	<ul style="list-style-type: none"> <li>The motor starts again.</li> </ul>

### Example

Applications include all machines and systems with moving axes (for example, conveyor technology, handling).

With STO, maintenance work on the machine with an open protective door is possible, for example. An EMERGENCY STOP with electromechanical disconnection is not required. The drive remains connected to the line power supply and can be fully diagnosed.

### Parameters

The following list includes the parameters of the "Safe Torque Off (STO)" function.

Number	Name	Unit
r9722.0...7	SI status signals	

### 10.7.5.2 Functional features of STO

#### Overview

The STO function is enabled by default and it is active with specified default settings. No additional settings are required.

#### Description of function

A stop function for Emergency Stop via X131 terminal is defined and is permanently assigned.

You can use the provided STO plug to connect the external safety device, for example, an EMERGENCY STOP button .

If you do not want to use the STO function, insert the provided STO disable plug into the X131 socket to disable the STO function.

#### More information

For more information about the terminal description and terminal wiring, see Section "Connecting STO (for S200 PN only) (Page 157)".

### 10.7.5.3 Discrepancy time

#### Overview

During the discrepancy time, the converter tolerates inconsistent input signals.

#### Description of function

The converter monitors at the two input terminals of the F-DI whether the input signals attain the same logical signal state within the discrepancy time. For electromechanical sensors, for example, EMERGENCY STOP buttons or position switches, the two sensor contacts never switch at precisely the same time. The input signals of the F-DI are inconsistent (discrepancy).

During the discrepancy time, the converter tolerates inconsistent input signals. The discrepancy time does not extend the converter response time.

A permanent discrepancy signifies an error in the F-DI interconnection. In this case, the converter responds with a safety message.

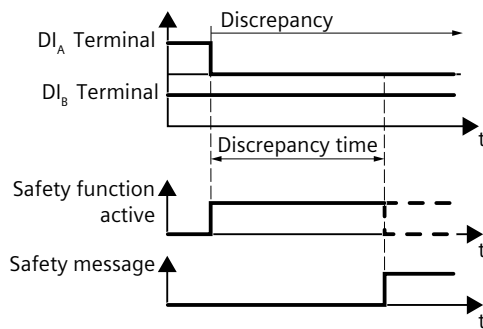


Figure 10-20 Permanent discrepancy

The discrepancy time must be set so that it is always less than the smallest expected switching interval of the signal at this F-DI, see the illustration below.

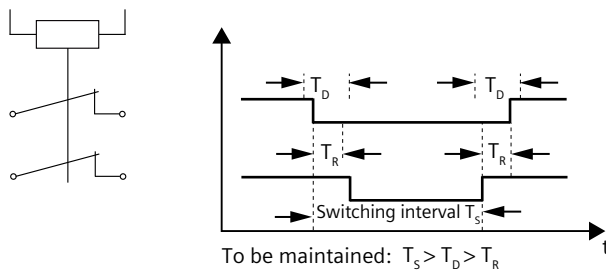


Figure 10-21 Discrepancy time

#### Note


For S200 PN, the discrepancy time is fixed to 500 ms.

#### 10.7.5.4 Input filter

##### Overview

The input filter suppresses unwanted brief signal changes at a fail-safe digital input (F-DI).

##### Requirement

 <b>WARNING</b>
<b>Unexpected movements due to long connecting cables</b>
If a cable at a fail-safe digital input is too long, the fail-safe digital input might not reliably detect a short-circuit of the connecting cable to 24 V or to ground. An undetected short-circuit may mean that the connected sensor is no longer working. This may impair the functional safety of the machine or the system and therefore endanger people or lead to material damage.
<ul style="list-style-type: none"><li>• Only connect cables with a length of <math>\leq 30</math> m to a fail-safe digital input.</li></ul>

##### Description of function

If a fail-safe digital input (F-DI) is connected to an electromechanical sensor, for example, then contact bounce leads to brief signal changes. In this case, an immediate response of the converter to signal changes is not desirable. Too many signal changes within a specific time result in a converter fault.

During the filter time (p10017) of the input filter, the converter ignores signal changes. The input filter time is fixed to 4 ms.

The set input filter impacts the response time of the safety function connected to the F-DI.

#### 10.7.5.5 Self-test of the fail-safe digital input (F-DI)

##### Overview

To detect faults at an early stage, the converter tests its shutdown paths, functions and interfaces using the online self-test.

Self-test with internal test signals is available to test a fail-safe digital input (F-DI).

##### Description of function

The self-test checks with test signals at the input terminals of the F-DI whether the F-DI can be switched to the fail-safe state (to "low"). If the converter does not detect a feedback signal, then it triggers a fault response.

The converter internally generates test signals for the input circuit of the F-DI (p10041 = 0).

The test signal length and the test cycle cannot be changed.

The self-test with internal test signals complies with:

- Safety Integrity Level (SIL) 3 according to IEC 61800-5-2
- Performance Level (PL) e according to EN ISO 13849-1
- Category 4 according to EN ISO 138491

## 10.7.6 Safety Integrated function status/diagnostics

### Overview

Function status/diagnostics shows information about the Safety Integrated settings and states of the converter.

### Description of function

Function status/diagnostics shows the status of STO. If STO is active, then the status indicates "active" (r9722). When STO is active, then Emergency Stop is initiated.

In addition to the function status, the following data can be viewed:

- Status of the converter  
Provides information as to whether internal events (e.g. software errors in the converter or a discrepancy in the monitoring channels) have been signaled and whether the communication functions.
- Version  
The version shows the software versions of the corresponding components relevant for Safety Integrated. This data is predominantly provided as information for service and update.
  - SINAMICS Safety Integrated firmware version
  - I/O processor firmware version

## 10.7.7 Responses to safety messages

### 10.7.7.1 Stop responses

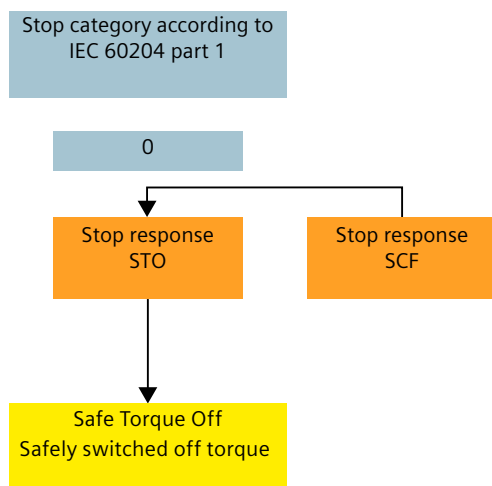
#### Description of function

The converter triggers a fault reaction in response to certain events:

- Stop response SCF  
The converter detects a discrepancy in the Safety Integrated monitoring channels, for example, an error in the result and data comparison.

It is not possible to select a stop response externally. All stop responses bring the motor to a standstill.





STO Safe Torque Off  
 SCF Safety Channel Failure  
 Figure 10-22 Stop responses

### 10.7.7.2 Fail-safe acknowledgement of safety messages

#### Overview

In the event of safety messages, the converter detects an internal event.  
 A safety message requires a fail-safe acknowledgement.

#### Requirement

You have checked and eliminated the cause of the internal event.

#### Procedure

You must acknowledge safety messages with a fail-safe signal. You have the following options for fail-safe acknowledgement:

##### Via selection and deselection of STO

By selecting and then deselecting STO, the safety messages are automatically withdrawn.

##### By switching the supply voltage off and on

Temporarily switch the power supply of the converter off and on again.

## 10.7.8 Response time

### Technical data

The following response time is applicable to the stop function control via the STO terminal. The response time of the stop function is the time between the selection of the stop function and the initiation of a stop response. The monitoring cycle (p9500) is 4 ms.

The specified response time is applicable to a fault-free drive system as well as when a fault is active in the system.

Table 10-16 Technical data - response time

Function	Unit	Worst case delay time
STO	[ms]	20 ms

## 10.7.9 Functional safety

### Overview

A system or machine is considered functionally safe if the safety-relevant parts of the protection and control equipment function correctly.

### Description of function

Safety, from the perspective of the object to be protected, cannot be split-up. The causes of danger and therefore also the technical measures to prevent them can vary widely. This is the reason that a distinction is made between various safety types (e.g. by specifying the cause of potential hazards). "Functional safety" is involved if safety depends on the correct function.

To ensure the functional safety of a system or machine, the safety-related parts of the protection and control devices must function correctly. In the case of a fault, systems must respond in such a way that either the plant remains in a safe state or it is brought into a safe state. In this case, it is necessary to use specially qualified technology that fulfills the requirements described in the associated Standards. The requirements to implement functional safety are based on the following basic objectives:

- Avoiding systematic faults
- Controlling random faults or failures

Benchmarks for establishing whether or not a sufficient level of functional safety has been achieved include the probability of hazardous failures, the fault tolerance and the quality that is to be guaranteed by avoiding systematic faults. This is expressed in the standards using specific classification. In EN 61508, IEC 62061 "Safety Integrity Level" (SIL) and EN ISO 13849-1 "Category" and "Performance Level" (PL).

## 10.7.10 Machinery Directive

### Overview

The basic safety and health requirements specified in Annex I of the Directive must be fulfilled for the safety of machines.

### Description of function

The protective goals must be implemented responsibly to ensure compliance with the Directive.

Manufacturers of a machine must verify that their machine complies with the basic requirements. This verification is facilitated by means of harmonized standards.

IEC 61800-5-2 Adjustable-speed electrical power drive systems Part 5-2 is relevant for the Machinery Directive: Safety requirements - Functional safety

Within the context of IEC 61508, IEC 61800-5-2 considers adjustable speed electric power drive systems (PDS), which are suitable for use in safety-related applications (PDS(SR)).

IEC 61800-5-2 places requirements on PDS(SR) as subsystems of a safety-related system. This therefore permits the implementation of the electrical/electronic/programmable electronic elements of a PDS(SR) taking into account the safety-relevant performance of the safety function(s) of a PDS.

Manufacturers and suppliers of PDS(SR) can prove to users (e.g. integrators of control systems, developers of machines and plants etc.) the safety-relevant performance of their equipment by implementing the specifications stipulated in standard IEC 61800-5-2.



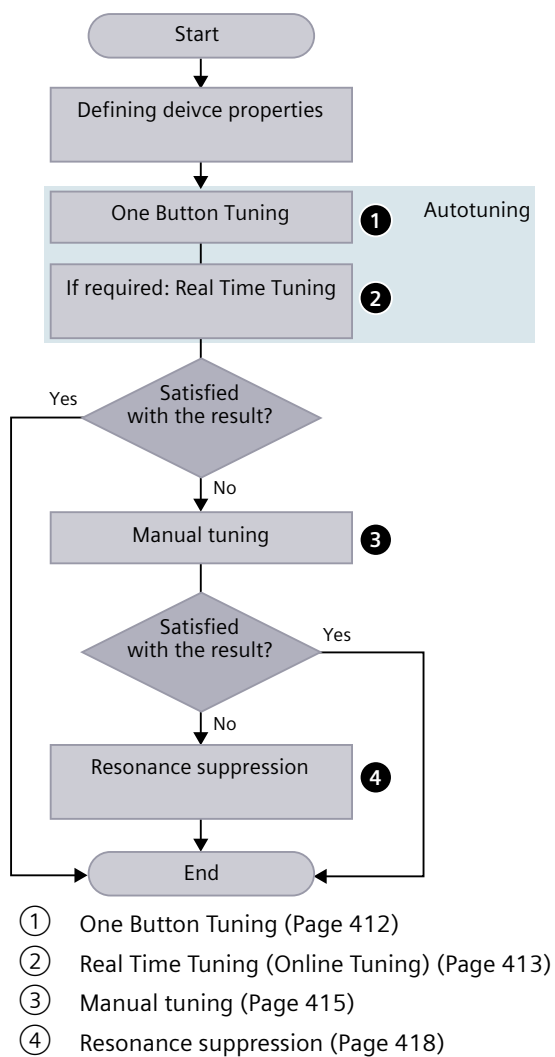
## Tuning

### 11.1 Tuning workflow

#### Overview

Tuning is a process of adjusting servo gains in the control loops of the converter to achieve desired performance.

#### Description of function



## 11.2 Autotuning

### Overview

The term "Autotuning" comprises all converter-internal functions that adapt controller parameters during operation based on internal measured variables. The settings are written to the parameters, but are not saved permanently.

### Description of function

#### Applications

The autotuning function is applicable to the following scenarios:

- Support of the commissioning
- Adaptation of the controller to major changes in the mechanical system

#### Available modes

The autotuning function is activated/deactivated with parameter p5300. The following autotuning modes are available for the converter:

- **One Button Tuning**  
With this procedure, the speed controller and position controller can be automatically tuned (optimized). In this regard, the servo drive system is measured once and the controller is then set.
- **Real Time Tuning**  
With this procedure, controller parameters are determined from the constantly estimated or parameterized moments of inertia.  
Deactivate Real Time Tuning as soon as the controller data has been calculated and the established values for controller optimization, as well as the filter settings have been saved in a non-volatile memory.

### 11.2.1 One Button Tuning

#### Requirement

<b>NOTICE</b>
<b>Changing the controller parameters manually</b>
Manually changing controller parameters that were set automatically by One Button Tuning can result in an unstable controller and therefore material damage.
<ul style="list-style-type: none"><li>• Do not change the following parameters during One Button Tuning: p0430, p1160, p1400, p1413 to p1426, p1428, p1429, p1433 to p1435, p1441, p1460 to p1465, p1498, p1513, p1656 to p1676, p2533 to p2539, p2567, p2572, p2573, p5280</li></ul>

## Procedure

Proceed as follows to perform One Button Tuning with your operating unit:

1. Configure the dynamic response setting (p5292).  
The higher the dynamic factor, the faster and more unstable the control. You should find a desired dynamic factor within a resonance-free range.
2. Set the traversing distance for the motor (p5308).  
Generally, longer traversing distances result in better tuning results.
3. Configure the One Button Tuning function (p5301).
4. Activate the One Button Tuning function (p5300 = 1).

## More information

For the detailed One Button Tuning procedures in the web server, see Section "Optimization (Page 183)".

## Parameters

The following list includes the parameters of the "One Button Tuning" function.

Number	Name	Unit
p5271[0].0...7	Online / One Button Tuning configuration	
p5292	FFT tuning dynamic factor	[%]
p5300[0]	Autotuning selection	
p5301[0].0...8	One Button Tuning configuration 2	
p5308[0]	One Button Tuning distance limiting	[°]

## 11.2.2 Real Time Tuning (Online Tuning)

### Requirement

#### NOTICE

#### Changing the controller parameters manually

Manually changing controller parameters that were set automatically by Real Time Tuning can result in an unstable controller and therefore material damage.

- Do not change the following parameters during Real Time Tuning:  
p0430, p1160, p1400, p1413 to p1426, p1428, p1429, p1433 to p1435, p1441, p1460 to p1465, p1498, p1513, p1656 to p1676, p2533 to p2539, p2567, p2572, p2573, p5280

**Procedure**

Proceed as follows to perform Real Time Tuning with your operating unit:

1. Configure the Real Time Tuning function (p5302).
2. Set the controllers via p5271.
3. Activate Real Time Tuning (p5300 = 2).
4. To save the determined values for speed and position controllers, save the parameters in a non-volatile memory (RAM to ROM or p0977 = 1).  
In this way, the start values for Real Time Tuning are retained, for example, after POWER ON. Through deactivation and reactivation of Real Time Tuning, the estimated load moment of inertia and the load torques are reset.

**Parameters**

The following list includes the parameters of the "Real Time Tuning" function.

---

<b>Number</b>	<b>Name</b>	<b>Unit</b>
p5271[0].0...7	Online / One Button Tuning configuration	
p5300[0]	Autotuning selection	
p5302[0].2...8	Online tuning configuration	



## 11.3 Manual tuning

### Overview

When the autotuning function cannot achieve your expected tuning results, you can manually perform tuning.

### Description of function

To perform tuning manually, you can disable the autotuning function by setting the parameter p5300:

- p5300 = -1: The autotuning function is disabled and the default values for the speed and position controller are restored.
- p5300 = 0: The autotuning function is disabled and the existing controller parameters are not changed.

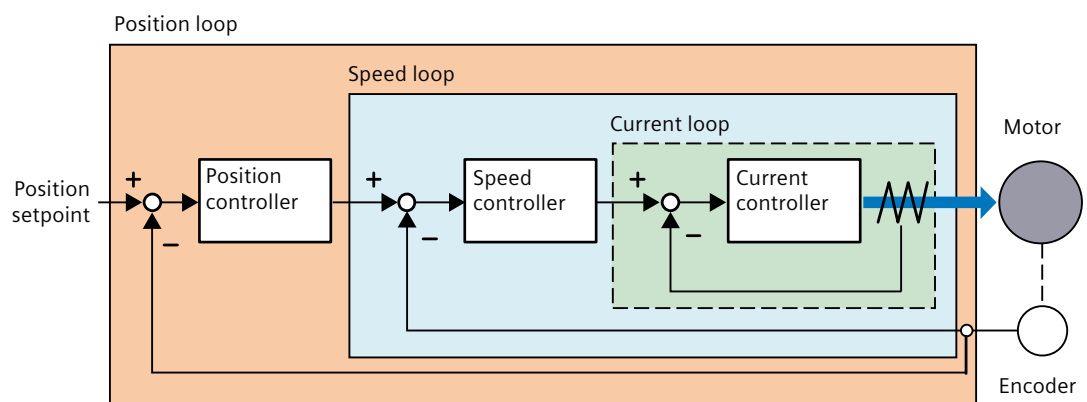
To store the determined values for the speed and position controller retentively, set p0977 = 1 or execute the "Copy RAM to ROM" command.

### 11.3.1 Control loops

#### Description

The converter consists of three control loops:

- Current control loop
- Speed control loop
- Position control loop



The control loops monitor the feedback of the controlled machines and correct the commands given to the converter.

In theory, frequency width of the inside control loop must be wider than that of the outer control loop; otherwise, the whole control system might vibrate or show low responsiveness. The relationship between the frequency widths of these three control loops is as follows:

Current loop > speed loop > position loop

## 11.3.2 Servo gain adjustment

### Overview

You can set the loop servo gains in the control loops to optimize the responsiveness of a machine.

The servo gains are set through a combination of parameters. These parameters influence each other so you must consider the balance between the set values when tuning.

### Description of function

Generally, the responsiveness of a machine with high rigidity can be improved by increasing the servo gains; however, if the servo gains of a machine with low rigidity are increased, the machine may vibrate and the responsiveness cannot be improved.

Since the current loop gain is automatically set by the system according to the detected motor data, you can adjust the following control parameters for servo gain adjustment:

- **Position loop gain**  
The position loop gain directly influences the responsiveness of the position loop. If the mechanical system does not vibrate or produce noises, you can increase the position loop gain to increase the responsiveness of the position loop and shorten the positioning time.
- **Position loop feed forward gain**  
You can slowly increase the position loop feed forward gain to increase the responsiveness and reduce the position deviation.  
An inappropriately high position loop feed forward gain may lead to overshoots in the motor speed and a repeated ON/OFF switch of the digital output signal INP.
- **Speed loop gain**  
The speed loop gain directly influences the responsiveness of the speed loop. If the mechanical system does not vibrate or produce noises, you can increase the speed loop gain to increase the responsiveness of the speed loop.
- **Speed loop integral time**  
With the integral component added to the speed loop, the converter can eliminate the steady-state error of speed and respond to small speed changes.  
If the mechanical system does not vibrate or produce noises, you can decrease speed loop integral time to increase the system rigidity.  
For mechanical systems with a resonance factor or a high load inertia ratio, you can increase the speed loop integral time to suppress resonance.

### Parameters

The following list includes the parameters of the "Servo gain adjustment" function.

---

<b>Number</b>	<b>Name</b>	<b>Unit</b>
p1460[0]	Speed controller P gain	[Nms/rad]
p1462[0]	Speed controller integral time	[ms]
p2534[0]	LR speed precontrol factor	[%]
p2538[0]	LR proportional gain	[1000 rpm]

## 11.4 Resonance suppression

### Overview

The resonance suppression functions suppresses mechanical resonance at a frequency higher than 100 Hz.

The function is achieved by setting the current setpoint filters as bandstop filters. Four current setpoint filters are available for the converter.

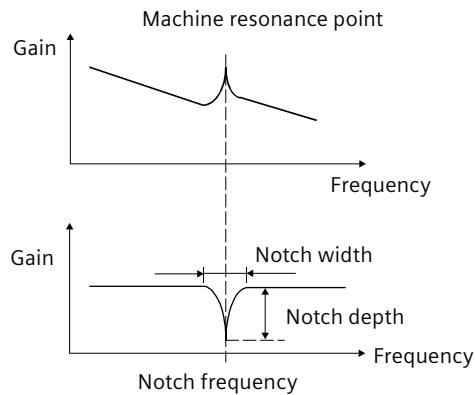


Figure 11-1 Working principle of a bandstop filter

### Description of function

#### Resonance suppression with autotuning

During the autotuning process, resonance suppression is activated by default.

- Resonance suppression with One Button Tuning (p5300 = 1, p5291.1 = 1)  
The current setpoint filters are automatically determined and set once with the aid of a noise signal. Four current setpoint filters can be activated at most after One Button Tuning is completed.
- Resonance suppression with Real Time Tuning (p5300 = 2, p5302.6 = 1)  
Filter 4 is automatically parameterized as a bandstop filter and activated as an adaptive resonance filter. To use the other three current setpoint filters in this case, you must manually configure their settings.  
When there is no resonance in the machine, Siemens recommends that the resonance suppression function is deactivated (p5302.6 = 0) in Real Time Tuning to get a high dynamic performance.

### Resonance suppression with manual tuning

When resonance suppression with autotuning cannot reach the suppression effect, you can proceed as follows to suppress the resonance manually:

1. Activate the current setpoint filters that you want to use (p1656[0].0...3).
2. For the activated current setpoint filters, parameterize the following values:
  - Type: general 2nd order filter
  - Denominator natural frequency
  - Denominator damping
  - Numerator natural frequency
  - Numerator damping

---

#### Note

Assume the notch frequency is  $f_{sp}$ , notch width is  $f_{BB}$ , and notch depth is  $K$ , then the filter parameters can be calculated as follows:

- Denominator natural frequency = Numerator natural frequency =  $f_{sp}$
  - Denominator damping =  $f_{BB}/(2 \times f_{sp})$
  - Numerator damping =  $(f_{BB} \times 10^{(k/20)})/(2 \times f_{sp})$
- 

## Parameters

The following list includes the parameters of the "Resonance suppression" function.

Number	Name	Unit
p1656[0].0...3	Activates current setpoint filter	
p1657[0]	Current setpoint filter 1 type	
p1658[0]	Current setpoint filter 1 denominator natural frequency	[Hz]
p1659[0]	Current setpoint filter 1 denominator damping	
p1660[0]	Current setpoint filter 1 numerator natural frequency	[Hz]
p1661[0]	Current setpoint filter 1 numerator damping	
p1662[0]	Current setpoint filter 2 type	
p1663[0]	Current setpoint filter 2 denominator natural frequency	[Hz]
p1664[0]	Current setpoint filter 2 denominator damping	
p1665[0]	Current setpoint filter 2 numerator natural frequency	[Hz]
p1666[0]	Current setpoint filter 2 numerator damping	
p1667[0]	Current setpoint filter 3 type	
p1668[0]	Current setpoint filter 3 denominator natural frequency	[Hz]
p1669[0]	Current setpoint filter 3 denominator damping	
p1670[0]	Current setpoint filter 3 numerator natural frequency	[Hz]
p1671[0]	Current setpoint filter 3 numerator damping	
p1672[0]	Current setpoint filter 4 type	
p1673[0]	Current setpoint filter 4 denominator natural frequency	[Hz]
p1674[0]	Current setpoint filter 4 denominator damping	
p1675[0]	Current setpoint filter 4 numerator natural frequency	[Hz]
p1676[0]	Current setpoint filter 4 numerator damping	

11.4 Resonance suppression

p5291.0...16	FFT tuning configuration
p5302[0].2...8	Online tuning configuration

## System messages

### 12.1 SDI Status

#### 12.1.1 SDI Status overview

##### Description

The SINAMICS S200 converter product line is designed with a SINAMICS SDI (Smart Drive Interface) Status panel on the front of the converter.



- ① Cover\*
- ② 6-digit 7-segment display
- ③ LED display
- ④ Function buttons

\* Open the cover gently from the lower right corner.

Figure 12-1 SDI Status layout

12.1 SDI Status

You can use the SDI Status panel for the following operations:






- **Monitoring**  
The SINAMICS SDI Status enters the monitoring mode when the servo state changes from OFF to ON. In this mode, it displays the actual speed, actual torque, actual position, actual DC link voltage, and position following error. You can press the DOWN button to navigate to the next item.
- **Diagnosis**  
The SINAMICS SDI Status enters the diagnosis mode when a new fault, alarm, or safety message appears. You can press the OK button to acknowledge the faults after eliminating the causes.  
You can press the M button to switch between the monitoring mode and the diagnosis mode.
- **Converter restart**  
You can press the key combination of the M button and the OK button for four seconds to restart the converter.

12.1.2 Status display via LEDs

Description

The following tables explain the LED icons and states:

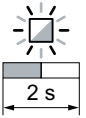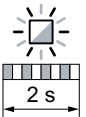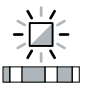Table 12-1 Explanation of LED icons

LED	Explanation
	LED is ON.
	LED is OFF.
	LED flashes slowly.
	LED flashes quickly.
	LED flashes with variable frequency.




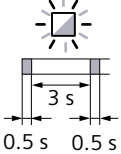












LED	Explanation
	LED flashes in alternating order 3 times quickly - 2 s pause - ...
	LED flashes briefly every 3 s

Table 12-2 Signal states of RDY and COM LEDs during converter ramp-up and operation

RDY	COM	Description	Remedy
 Orange	 Orange	<ul style="list-style-type: none"> <li>Temporary state after the supply voltage is switched on</li> <li>Restart</li> </ul>	-
 Green	 Green	Temporary state after the supply voltage is switched on: firmware being loaded and initialized.	-
-	 Green	Cyclic communication in progress	-
	 Red	No fieldbus link: <ul style="list-style-type: none"> <li>No data exchange or configuration error</li> <li>Data exchange lost</li> <li>Data exchange in progress, but there are no setpoints (controller in stop state)</li> </ul>	<ul style="list-style-type: none"> <li>Check message display and rectify cause of fault.</li> <li>Check operating mode of controller (PLC).</li> </ul>
 Red		<ul style="list-style-type: none"> <li>Converter signals a fault.</li> <li>Firmware error</li> </ul>	Check message display, rectify cause of fault.
 Green	-	Converter is ready for operation and error-free.	-
	 Red	<ul style="list-style-type: none"> <li>BIOS error:               <ul style="list-style-type: none"> <li>General error</li> <li>Loading error</li> </ul> </li> <li>File error:               <ul style="list-style-type: none"> <li>SD card is not available or is faulty.</li> <li>File corrupt</li> </ul> </li> <li>CRC error</li> </ul>	<ul style="list-style-type: none"> <li>Switch the converter supply voltage off and on.</li> <li>Check SD card if available.</li> <li>Reload firmware.</li> <li>Contact Hotline/Support.</li> </ul>

12.1 SDI Status







RDY	COM	Description	Remedy
 Orange	<input type="checkbox"/>	Converter detection via DCP flashing	-
 Orange	<input type="checkbox"/>	Commissioning or restore factory settings via commissioning tool	-





Table 12-3 Signal states of RDY and COM LEDs during firmware update

RDY	COM	Description	Remedy
 Green	 Green	Firmware update in progress	-
<input type="checkbox"/>	 Red	Firmware update signals an error.	<ul style="list-style-type: none"> <li>Switch the converter supply voltage off and on, and repeat the firmware update.</li> <li>Firmware update via memory card: Replace memory card and repeat firmware update.</li> <li>Contact Support/Hotline.</li> </ul>
 Green	<input type="checkbox"/>	Firmware update is completed. The converter is waiting.	Switch the converter supply voltage off and on.

Please contact Technical Support for LED states that are not described above.

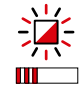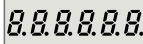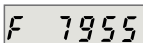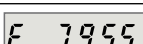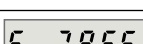12.1.3 SDI Status display





Description

Display	Example	Description	Remarks
8.8.8.8.8.8.		Converter is in startup state	-
Fxxxxx		Fault code	In the case of a single fault
F.xxxxx.		Fault code of the first fault	In the case of multiple faults
Fxxxxx.		Fault code	In the case of multiple faults

Display	Example	Description	Remarks
Axxxxx		Alarm code	In the case of a single alarm
A.xxxxx.		Alarm code of the first alarm	In the case of multiple alarms
Axxxxx.		Alarm code	In the case of multiple alarms
Cxxxxx		Safety message code	In the case of a single safety message
C.xxxxx.		Safety message code of the first safety message	In the case of multiple safety messages
Cxxxxx.		Safety message code	In the case of multiple safety messages
S Off		Operating display: servo-off	-
r xxx		Actual speed (positive direction)	-
r -xxx		Actual speed (negative direction)	-
T x.x		Actual torque (positive direction)	-
T -x.x		Actual torque (negative direction)	-
P.xxxxx		Actual position (positive direction)	The digits are not fully displayed. Press the DOWN button to scroll to the next page.
Px.xxxx		Actual position (positive direction)	The remaining digits have been fully displayed.
P.-xxxx		Actual position (negative direction)	The digits are not fully displayed. Press the DOWN button to scroll to the next page.
Px.xxxx		Actual position (negative direction)	The remaining digits have been fully displayed.
DCxxx.x		Actual DC link voltage	-
E.xxxxx		Position following error (positive direction)	The digits are not fully displayed. Press the DOWN button to scroll to the next page.
Ex.xxxx		Position following error (positive direction)	The remaining digits have been fully displayed.
E.-xxxx		Position following error (negative direction)	The digits are not fully displayed. Press the DOWN button to scroll to the next page.
Ex.xxxx		Position following error (negative direction)	The remaining digits have been fully displayed.
Restart		Restart the converter	-
P-----		The parameter does not exist.	The symbol "P" could be other parameter symbols, like "T", "E", etc.

### 12.1.4 Function buttons

#### Description

Button	Description	Functions
	M button	Switch between the diagnosis mode and the monitoring mode
	OK button	Acknowledge faults in the diagnosis mode
	DOWN button	Navigate to the next item
	Press the key combination for four seconds to restart the converter <sup>1)</sup>	

<sup>1)</sup> The converter cannot be restarted with this key combination when it is in the “servo-on” state.

## 12.2 System runtime

### Overview

By evaluating the system runtime of the converter, you can decide when you should replace components (such as fans and motors) subject to wear in time before they fail.

### Description of function

The system runtime starts once the power supply of the converter is switched on. The system runtime stops when the power supply is switched off.

The system runtime includes r2114[0] (milliseconds) and r2114[1] (days). It is calculated as follows:

System runtime = r2114[1] × days + r2114[0] × milliseconds

If r2114[0] has reached a value of 86400000 ms (24 hours), r2114[0] is set to the value 0 and the value of r2114[1] is increased by 1.

You cannot reset the system runtime.

### Parameters

The following list includes the parameters of the "System runtime" function.

Number	Name	Unit
r2114[0...1]	System runtime total	

## 12.3 Faults and alarms

### 12.3.1 Overview of faults and alarms

#### Description

##### Definitions

A message includes a letter and a relevant number.

The letters have the following meaning:

- A means "Alarm"
- F means "Fault"
- N means "No message" or "Internal message"
- C means "Safety message"  
 In the delivery state (p3117 = 0), safety messages correspond to message type "C" and the safety message buffer is active. With p3117 = 1, safety messages correspond to the message types "A" or "F" and are stored in the fault buffer or the alarm buffer.

##### Differences between faults and alarms

An alarm reports an operating state which is non-critical at present. A fault means that it is normally no longer possible to run the motor. The converter therefore responds to alarms and faults differently.

Table 12-4 Differences between faults and alarms

Type	Description
Faults	<p>How does a converter respond when a fault occurs?</p> <ul style="list-style-type: none"> <li>• Initiate the appropriate fault reaction.</li> <li>• Set the status signal ZSW1.3.</li> <li>• Enter the fault into the fault buffer.</li> </ul> <p>How are faults eliminated?</p> <ul style="list-style-type: none"> <li>• Remove the cause of the fault.</li> <li>• Acknowledge the fault.</li> </ul> <p>What happens when the converter is switched off and switched on?</p> <ul style="list-style-type: none"> <li>• Faults are saved retentively.</li> </ul>
Alarms	<p>How does a converter respond when an alarm occurs?</p> <ul style="list-style-type: none"> <li>• Set the status signal ZSW1.7.</li> <li>• Enter the alarm into the alarm buffer.</li> </ul> <p>How are alarms eliminated?</p> <ul style="list-style-type: none"> <li>• Alarms are self-acknowledging.                      If the cause of the alarm is no longer present, the converter resets the alarm.</li> </ul> <p>What happens when the converter is switched off and switched on?</p> <ul style="list-style-type: none"> <li>• The alarm buffer is lost when the supply voltage is switched off.</li> </ul>

**Note:**

Messages from encoders whose signal is not used for control purposes are output by the converter as a warning.

## 12.3.2 Faults

### Overview

A fault indicates that the reliable operation of the motor by the converter is at risk.

### Description of function

#### Properties of faults

Faults have the following properties:

- Faults may cause the motor to be switched off.
- Faults must be acknowledged.
- Faults are displayed as follows:
  - On the converter via the LEDs
  - On the SINAMICS SDI Status panel via the 6-digit 7-segment display
  - In the web server  
You can find more information on the display of faults in Section "Messages"
  - In Startdrive  
You can find more information on the display of faults in Section "Display messages (Page 294)"

#### Acknowledge faults

You need to resolve the cause of the fault before you can acknowledge a fault.

To acknowledge a fault, you have the following options:

- Acknowledging via the OK button on the SINAMICS SDI Status panel
- Switching off the converter power supply and switch on again
- Acknowledging via the web server or Startdrive
- The Safety Integrated fault is acknowledged by selecting and then deselecting the STO function.

You can only acknowledge faults detected by the internal converter monitoring of hardware and firmware by switching the supply voltage off and on again. In the list of faults, you will find the information on limitations when acknowledging at the corresponding fault codes.

### More information

You can find more information on faults in Section "Overview of faults and alarms (Page 428)".

### 12.3.3 Alarms

#### Overview

An alarm indicates that the reliable operation of the motor by the converter is at risk.

#### Description of function

##### Properties of alarms

Alarms have the following properties:

- Incoming alarms have no direct influence on the drive system.
- When the cause is eliminated, the alarm is no longer displayed.
- Alarms do not have to be acknowledged.
- Alarms are displayed as follows:
  - On the converter via the LEDs
  - On the SINAMICS SDI Status panel via the 6-digit 7-segment display
  - In the web server  
You can find more information on the display of alarms in Section "Messages".
  - In Startdrive  
You can find more information on the display of alarms in Section "Display messages (Page 294)".

Alarm code or alarm value describe the cause of the alarm.

#### More information

You can find more information on alarms in Section "Overview of faults and alarms (Page 428)".

### 12.3.4 Explanation of the list of faults and alarms

#### Overview

The representation of a message includes as a maximum the information listed below. Depending on the message, some information can be omitted.

The messages are displayed according to the following pattern:



<b>Fxxxxx</b>	<b>Fault location (optional): Name</b>	
<b>Message class:</b>	Text of the message class (number according to PROFIdrive)	
<b>Message value:</b>	Component number: %1, fault cause: %2	
<b>Variant:</b>	Product variant	
<b>Component:</b>	Hardware component	
<b>Response:</b>	NONE	
<b>Acknowledgment:</b>	POWER ON	
<b>Explanation of the message value:</b>	For %2	
	<b>Value Cause</b>	<b>Remedy</b>
	11    Fault cause for value = 11	Remedy for value = 11
	15    Fault cause for value = 15	Remedy for value = 15
<b>Cause:</b>	Description of possible causes. Fault value (r0949, interpret <format>): or alarm value (r2124, interpret <format>): (optional) Information about fault and alarm values (optional).	
<b>Remedy:</b>	Description of possible remedies.	

## Description of function

### Fault location (optional): Name

The fault location (optional), the name of the fault or alarm and the message number are all used to identify the message (e.g. with the commissioning software).

### Message class

Every message is assigned a message class using the following structure:

Text of the message class (number according to PROFIdrive)

The message classes are transferred at different interfaces to higher-level control systems and their associated display and operating units.

The message classes that are available are listed in the following table. In addition to the text of the message class and its number according to PROFIdrive – as well as a brief help text regarding the cause and remedy – they also include information about the various diagnostic interfaces:

- PN (hex)  
Specifies the "Channel error type" of the PROFINET channel diagnostics.  
When activating the channel diagnostics, using the GSDML file, the texts listed in the table can be displayed.
- DS1 (dec)  
Specifies the bit number in data set DS1 of the diagnostic alarm for SIMATIC S7.  
When the diagnostic alarms are activated, the texts listed in the table can be displayed.

Table 12-5 Message classes and coding of various diagnostic interfaces

Text of the message class	Number according to PROFIdrive	Diagnostics interface	
		PN (hex)	DS1 (dec)
<b>Cause and remedy</b>			
<b>Hardware/software fault</b> A hardware or software malfunction was detected. <ul style="list-style-type: none"> <li>• Carry out a POWER ON for the relevant component.</li> <li>• If it occurs again, contact the hotline.</li> <li>• Replace device.</li> </ul>	(1)	9000	0
<b>Line fault</b> A line supply fault has occurred (phase failure, voltage level...). <ul style="list-style-type: none"> <li>• Check the line supply/fuses.</li> <li>• Check the supply voltage.</li> <li>• Check the wiring.</li> </ul>	(2)	9001	1
<b>Supply voltage fault</b> An electronics supply voltage fault (48 V, 24 V, 5 V...) was detected. <ul style="list-style-type: none"> <li>• Check the wiring.</li> <li>• Check the voltage level.</li> </ul>	(3)	9002	2
<b>DC link overvoltage</b> The DC link voltage has assumed an inadmissibly high value. <ul style="list-style-type: none"> <li>• Check the dimensioning of the system (line supply, reactor, voltages).</li> <li>• Check the infeed settings.</li> </ul>	(4)	9003	3
<b>Power electronics fault</b> An inadmissible operating state of the power electronics has been identified (overcurrent, overtemperature, IGBT failure...). <ul style="list-style-type: none"> <li>• Check that the permissible duty cycles are complied with.</li> <li>• Check the ambient temperatures (fan).</li> </ul>	(5)	9004	4
<b>Electronic component overload</b> The temperature in the component has exceeded the highest permissible limit. <ul style="list-style-type: none"> <li>• Check the ambient temperature /control cabinet cooling.</li> </ul>	(6)	9005	5
<b>Ground fault/inter-phase short-circuit detected</b> A ground fault/interphase short-circuit was detected in the power cables or in the motor windings. <ul style="list-style-type: none"> <li>• Check the power cables (connection).</li> <li>• Check the motor.</li> </ul>	(7)	9006	6
<b>Motor overload</b> The motor was operated outside the permissible limits (temperature, current, torque...). <ul style="list-style-type: none"> <li>• Check the duty cycles and set limits.</li> <li>• Check the ambient temperature/motor cooling.</li> </ul>	(8)	9007	7

Text of the message class	Number according to PROFIdrive	Diagnostics interface	
		PN (hex)	DS1 (dec)
<b>Cause and remedy</b>			
<b>Communication error to the higher-level controller</b> The communication to the higher-level controller (internal coupling, PROFIBUS, PROFINET...) is faulted or interrupted. <ul style="list-style-type: none"> <li>• Check the state of the higher-level control system.</li> <li>• Check the communication connection/wiring.</li> <li>• Check the bus configuration/clock cycles.</li> </ul>	(9)	9008	8
<b>Safety monitoring channel has identified an error</b> A safe operation monitoring function (Safety) has detected an error.	(10)	9009	9
<b>Actual position value/actual speed value incorrect or not available</b> An illegal signal state was detected while evaluating the encoder signals (track signals, zero marks, absolute values...). <ul style="list-style-type: none"> <li>• Check the encoder/status of the encoder signals.</li> <li>• Observe the maximum permissible frequencies.</li> </ul>	(11)	900A	10
<b>Internal (DRIVE-CLiQ) communication error</b> The internal communication between the SINAMICS components is faulted or interrupted. <ul style="list-style-type: none"> <li>• Check the DRIVE-CLiQ wiring.</li> <li>• Ensure an EMC-compliant design.</li> <li>• Observe the maximum quantity structure/cycles.</li> </ul>	(12)	900B	11
<b>Infeed fault</b> The infeed is faulted or has failed. <ul style="list-style-type: none"> <li>• Check the infeed and its environment (line supply, filters, reactors, fuses...).</li> <li>• Check the infeed control.</li> </ul>	(13)	900C	12
<b>Braking controller/Braking Module faulted</b> The internal or external Braking Module is faulted or overloaded (temperature). <ul style="list-style-type: none"> <li>• Check the connection/state of the Braking Module.</li> <li>• Comply with the permissible number of braking operations and their duration.</li> </ul>	(14)	900D	13
<b>Line filter faulted</b> The line filter monitoring has identified an excessively high temperature or other inadmissible state. <ul style="list-style-type: none"> <li>• Check the temperature/temperature monitoring.</li> <li>• Check the configuration to ensure that it is permissible (filter type, infeed, thresholds).</li> </ul>	(15)	900E	14

Text of the message class	Number according to PROFIdrive	Diagnostics interface	
		PN (hex)	DS1 (dec)
<p><b>Cause and remedy</b></p>			
<p><b>External measured value/signal state outside of the permissible range</b>                      A measured value/signal state read in via the input area (digital/analog/temperature) has assumed an inadmissible value/state.</p> <ul style="list-style-type: none"> <li>• Determine and check the relevant signal.</li> <li>• Check the set thresholds.</li> </ul>	(16)	900F	15
<p><b>Application/technology function faulted</b>                      The application/technological function has exceeded a (set) limit (position, speed, torque...).</p> <ul style="list-style-type: none"> <li>• Determine and check the relevant limit.</li> <li>• Check the setpoint specified by the higher-level controller.</li> </ul>	(17)	9010	16
<p><b>Error in the parameterization/configuration/commissioning sequence</b>                      An error has been identified in the parameterization or in a commissioning procedure, or the parameterization does not match the actual device configuration.</p> <ul style="list-style-type: none"> <li>• Determine the precise cause of the fault using the commissioning tool.</li> <li>• Adapt the parameterization or device configuration.</li> </ul>	(18)	9011	17
<p><b>General drive fault</b>                      Group fault.</p> <ul style="list-style-type: none"> <li>• Determine the precise cause of the fault using the commissioning tool.</li> </ul>	(19)	9012	18
<p><b>Auxiliary unit faulted</b>                      The monitoring of an auxiliary unit (incoming transformer, cooling unit...) has identified an inadmissible state.</p> <ul style="list-style-type: none"> <li>• Determine the exact cause of the fault and check the device involved.</li> </ul>	(20)	9013	19

**Message value**

Provides information about the composition of the fault/alarm value.

Example:

Message value: Component number: %1, fault cause: %2

In this example, the message value contains information about the component number and cause of the fault. Entries %1 and %2 are placeholders. If the commissioning software is connected to the converter, then these placeholders are populated with the appropriate values.

**Variant**

Specifies the product variant in which the message exists. This information is not applicable if an alarm is the same for all product variants.

### Component

Type of hardware component that has triggered the fault or alarm. For "None", it is not possible to assign the message to a hardware component.

### Explanation of the message value

Explains the possible values of the placeholders (%n) in the message value. In this case, detailed information can be specified regarding the cause and remedy for specific values.

### Response

Specifies the response in the event of a fault.

The following table lists all fault responses and their meanings used for the entire SINAMICS drive family.

Table 12-6 Fault responses

List	PROFIdrive	Response	Description
NONE	–	None	No response when a fault occurs.
OFF1	ON/OFF	Brake along the ramp-function generator deceleration ramp followed by pulse inhibit	<p><b>Closed-loop speed control</b></p> <ul style="list-style-type: none"> <li>The motor is braked by immediately specifying <math>n\_set = 0</math> at the ramp-function generator deceleration ramp (p1121).</li> <li>The pulses are suppressed when standstill has been identified.</li> <li>"Switching on inhibited" is activated.</li> </ul> <p><b>Torque control</b></p> <ul style="list-style-type: none"> <li>The following applies for torque control: Response as for OFF2.</li> <li>When switching into torque control, the following applies: There is no dedicated braking response. The pulses are suppressed when standstill has been identified.</li> <li>"Switching on inhibited" is activated.</li> </ul>
OFF2	COASTSTOP	Internal/external pulse inhibit	<p><b>Closed-loop speed and torque control</b></p> <ul style="list-style-type: none"> <li>Immediate pulse cancellation, the motor "coasts down" to a standstill.</li> <li>"Switching on inhibited" is activated.</li> </ul>
OFF3	QUICKSTOP	Braking along the OFF3 deceleration ramp followed by pulse inhibit	<p><b>Closed-loop speed control</b></p> <ul style="list-style-type: none"> <li>The motor is braked along the OFF3 deceleration ramp (p1135) by immediately entering <math>n\_set = 0</math>.</li> <li>The pulses are suppressed when standstill has been identified.</li> <li>"Switching on inhibited" is activated.</li> </ul> <p><b>Torque control</b></p> <ul style="list-style-type: none"> <li>Switchover to closed-loop speed control and other responses as described for closed-loop speed control.</li> </ul>
STOP2	–	STOP2	<ul style="list-style-type: none"> <li>The motor is braked along the OFF3 deceleration ramp (p1135) by immediately entering <math>n\_set = 0</math>.</li> <li>The drive remains in closed-loop speed control.</li> </ul>
ENCODER	–	Internal/external pulse inhibit	The ENCODER fault response occurs because of a sensor error and results in OFF2.

**Acknowledgment**

A fault can only be acknowledged if the cause has been resolved.

The acknowledgment specifies when the fault can be acknowledged.

An alarm is self-acknowledging.

Table 12-7 Acknowledging faults

Acknowledgment	Description
IMMEDIATELY	Acknowledgment can be immediately realized after the cause has been resolved.
PULSE INHIBIT	Once the cause has been resolved, the fault can only be acknowledged when the pulses are inhibited (r0899.11 = 0).
POWER ON	The fault can only be acknowledged using POWER ON (the converter is switched-off/switched-on).
NONE	For alarms (type "A"), an acknowledgment is not required.

**Cause**

Describes the possible causes of the fault or alarm. Optionally, a message value, fault value or alarm value can be additionally specified.

**Remedy**

Generally explains possible procedures to resolve the cause of this active fault or alarm.

**12.3.5 List of fault codes and alarm codes**

Product: SINAMICS S200, Version: 603021000, Language: eng  
 Objects: S200 Basic PN, S200 PN

---

**F01000 Internal software error**

**Message class:** Hardware/software error (1)

**Message value:** Module: %1, line: %2

**Component:** Control Unit (CU)

**Response:** OFF2

**Acknowledgment:** POWER ON

**Cause:** An internal software error has occurred.  
 Fault value (r0949, interpret hexadecimal):  
 Only for internal Siemens troubleshooting.

- Remedy:**
- Evaluate fault buffer (r0945).
  - Carry out a POWER ON (switch-off/switch-on) for all components.
  - If required, check the data on the non-volatile memory (e.g. memory card).
  - Upgrade firmware to later version.
  - Contact Technical Support.
  - Replace the converter.

---

**F01001 FloatingPoint exception**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Control Unit (CU)  
**Response:** OFF2  
**Acknowledgment:** POWER ON  
**Cause:** An exception occurred for an operation with the FloatingPoint data type.  
The error can be caused by the basic system or a technology function.  
Fault value (r0949, interpret hexadecimal):  
Only for internal Siemens troubleshooting.  
**Remedy:** - Carry out a POWER ON (switch-off/switch-on) for all components.  
- Check configuration and signals of the blocks in FBLOCKS.  
- Check configuration and signals of DCC charts.  
- Check configuration and signals of TEC charts.  
- Upgrade firmware to later version.  
- Contact Technical Support.

---

**F01002 Internal software error**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** An internal software error has occurred.  
Fault value (r0949, interpret hexadecimal):  
Only for internal Siemens troubleshooting.  
**Remedy:** - Carry out a POWER ON (switch-off/switch-on) for all components.  
- Upgrade firmware to later version.  
- Contact Technical Support.

---

**F01003 Acknowledgment delay when accessing the memory**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** A memory area was accessed that does not return a "READY".  
Fault value (r0949, interpret hexadecimal):  
Only for internal Siemens troubleshooting.  
**Remedy:** - Carry out a POWER ON (switch-off/switch-on) for all components.  
- Contact Technical Support.

---

**N01004 Internal software error**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** An internal software error has occurred.  
Fault value (r0949, hexadecimal):  
Only for internal Siemens troubleshooting.  
**Remedy:** - Contact Technical Support.

**A01007 POWER ON for DRIVE-CLiQ component required****Message class:** General drive fault (19)**Message value:** Component number: %1**Component:** None**Response:** NONE**Acknowledgment:** NONE**Explanation of the message value:** For %1

Component in target topology

**Cause:** A DRIVE-CLiQ component must be switched on again (POWER ON) (e.g. due to a firmware update).

Alarm value (r2124, interpret decimal):

Component number of the DRIVE-CLiQ component.

Note:

For a component number = 1, a POWER ON of the Control Unit is required.

**Remedy:** - Switch off the power supply of the specified DRIVE-CLiQ component and switch it on again.

- For SINUMERIK, auto commissioning is prevented. In this case, a POWER ON is required for all components and the auto commissioning must be restarted.

**A01009 Control Unit overtemperature****Message class:** Overtemperature of the electronic components (6)**Message value:** -**Component:** Control Unit (CU)**Response:** NONE**Acknowledgment:** NONE**Cause:** The temperature (r0037[0]) of the converter has exceeded the specified limit value.**Remedy:** - Check the converter air intake.

- Check the converter fan.

Note:

The alarm is automatically withdrawn once the limit value has been fallen below.

**F01011 Download interrupted****Message class:** Error in the parameterization / configuration / commissioning procedure (18)**Message value:** %1**Component:** None**Response:** NONE**Acknowledgment:** IMMEDIATELY**Cause:** The project download was interrupted.

Fault value (r0949, interpret decimal):

1: The user prematurely interrupted the project download.

2: The communication cable was interrupted (e.g. cable breakage, cable withdrawn).

3: The project download was prematurely exited by the commissioning tool.

100: Different versions between the firmware version and project files which were loaded by loading into the file system "Download from memory card".

Note:

The response to an interrupted download is the state "first commissioning".

**Remedy:** - Check the communication cable.

- Download the project again.

- Boot from previously saved files (switch-off/switch-on or p0976).

- When loading into the file system (download from memory card), use the matching version.



---

**F01014      Topology: Component property changed**

**Message class:** Hardware/software error (1)  
**Message value:** Component number: %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The properties of the component have fundamentally changed.  
Fault value (r0949, interpret hexadecimal):  
Component number.  
**Remedy:** - Carry out a restart, reload parameters.

---

**F01015      Internal software error**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** OFF2  
**Acknowledgment:** POWER ON  
**Cause:** An internal software error has occurred.  
Fault value (r0949, interpret decimal):  
Only for internal Siemens troubleshooting.  
**Remedy:** - Carry out a POWER ON (switch-off/switch-on) for all components.  
- Upgrade firmware to later version.  
- Contact Technical Support.

---

**A01016      Firmware changed**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** At least one firmware file in the directory was illegally changed on the non-volatile memory (memory card/device memory) with respect to the version when shipped from the factory.  
Alarm value (r2124, interpret decimal):  
0: Checksum of one file is incorrect.  
1: File missing.  
2: File too many.  
3: Incorrect firmware version.  
4: Incorrect checksum of the backup file.  
**Remedy:** Restore the delivery condition of the non-volatile memory for the firmware (memory card/device memory).

---

**A01017      Component lists changed**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE

12.3 Faults and alarms

---

**Cause:** The memory card has a defective file.  
Alarm value (r2124, interpret decimal):  
xyz dec: x = problem, y = file name  
x = 1: file checksum is incorrect.  
x = 2: error when parsing the file.  
y = 1: file MOTARM.ACX  
y = 2: file MOTARMLD.ACX  
y = 3: file MOTSRM.ACX  
y = 4: file MOTSLM.ACX  
y = 5: file MOTRESM.ACX  
y = 6: file BEARING.ACX  
y = 7: file CFG\_BEAR.ACX  
y = 8: file BEARINGTYPE.ACX  
y = 9: file BRAKE.ACX  
y = 10: file CFG\_BRAKE.ACX  
y = 11: file ENCODER.ACX  
y = 12: file CFG\_ENCODER.ACX  
y = 13: file ENCODERGEAR.ACX  
y = 14: file CFG\_ENC\_GEAR.ACX  
y = 15: file LOADGEAR.ACX  
y = 16: file THERMMOTMOD3.ACX  
y = 17: file CFG\_THERMMOTMOD3.ACX  
y = 30: file WHITELIST.ACX

**Remedy:** Correct the file involved.

---

**F01018 Runup has been interrupted several times**

**Message class:** Hardware/software error (1)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** POWER ON

**Cause:** Module booting was interrupted several times. As a consequence, the module boots with the factory setting.  
Possible reasons for booting being interrupted:  
- Power supply interrupted.  
- CPU crashed.  
- Parameterization invalid.

**Remedy:** - Carry out a POWER ON (switch-off/switch-on). After switching on, the module reboots from the valid parameterization (if available).  
- Restore the valid parameterization.  
Examples:  
a) Carry out a first commissioning, save, carry out a POWER ON (switch-off/switch-on).  
b) Load another valid parameter backup (e.g. from the memory card), save, carry out a POWER ON (switch-off/switch-on).  
Note:  
If the fault situation is repeated, then this fault is again output after several interrupted boots.

---

**A01019 Writing to the removable data medium unsuccessful**

**Message class:** Hardware/software error (1)  
**Message value:** -  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE

**Cause:** The write access to the removable data medium was unsuccessful.  
**Remedy:** - Check the removable data medium and if required replace.  
- Repeat the data backup.

---

**A01020 Writing to RAM disk unsuccessful**

**Message class:** Hardware/software error (1)  
**Message value:** -  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** A write access to the internal RAM disk was unsuccessful.  
**Remedy:** Adapt the file size for the system logbook to the internal RAM disk (p9930).

---

**F01023 Software timeout (internal)**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY  
**Cause:** An internal software timeout has occurred.  
Fault value (r0949, interpret decimal):  
Only for internal Siemens troubleshooting.  
**Remedy:** - Carry out a POWER ON (switch-off/switch-on) for all components.  
- Upgrade firmware to later version.  
- Contact Technical Support.

---

**F01030 Sign-of-life failure for master control**

**Message class:** Communication error to the higher-level control system (9)  
**Message value:** -  
**Component:** None  
**Response:** OFF3  
**Acknowledgment:** IMMEDIATELY  
**Cause:** For active PC master control of the PC, no sign-of-life was received within the monitoring time.  
The master control was returned to the drive.  
**Remedy:** Set the monitoring time higher at the PC or, if required, completely disable the monitoring function.  
The monitoring time is set as follows using the commissioning tool:  
<Drive> -> Commissioning -> Control panel -> Button "Fetch master control" -> A window is displayed to set the monitoring time in milliseconds.  
**Notice:**  
The monitoring time should be set as short as possible. A long monitoring time means a late response when the communication fails!

---

**A01032 All parameters must be saved**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE

### 12.3 Faults and alarms

**Cause:** Data backup is incomplete  
The partially saved parameters are not loaded the next time the system runs up.  
For the system to successfully power up, all of the parameters must have been completely backed up.  
Alarm value (r2124, interpret decimal):  
Only for internal Siemens troubleshooting.

**Remedy:** Save all parameters.  
See also: p0977 (Save all parameters)

---

#### **F01033 Units changeover: Reference parameter value invalid**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Parameter: %1

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** When changing over the units to the referred representation type, it is not permissible for any of the required reference parameters to be equal to 0.0  
Fault value (r0949, parameter):  
Reference parameter whose value is 0.0.

**Remedy:** Set the value of the reference parameter to a number different than 0.0.  
See also: p0304, p0305, p2000, p2002, p2003

---

#### **F01034 Units changeover: Calculation parameter values after reference value change unsuccessful**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Parameter: %1

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** The change of a reference parameter meant that for an involved parameter the selected value was not able to be re-calculated in the per unit representation. The change was rejected and the original parameter value restored.  
Fault value (r0949, parameter):  
Parameter whose value was not able to be re-calculated.

See also: p0304, p0305, p2000, p2002, p2003

**Remedy:** - Select the value of the reference parameter such that the parameter involved can be calculated in the per unit representation.

---

#### **A01035 ACX: Parameter backup file corrupted**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** When the converter runs up, no complete data set was found from the parameter backup files. The last time that the parameterization was saved, it was not completely carried out.  
It is possible that the backup was interrupted by switching off or withdrawing the memory card.  
Alarm value (r2124, interpret hexadecimal):  
ddccbbaa hex:  
aa = 01 hex:  
Power up was realized without data backup. The drive is in the factory setting.  
aa = 02 hex:  
The last available backup data record was loaded. The parameterization must be checked. It is recommended that the parameterization is downloaded again.  
dd, cc, bb:  
Only for internal Siemens troubleshooting.  
See also: p0977 (Save all parameters)

**Remedy:**

- Download the project again using the commissioning tool.
- Retentively save parameters (save all parameters p0977 = 1)

See also: p0977 (Save all parameters)

---

### **F01036 Parameter backup file missing**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** When loading the device parameterization, a parameter backup file cannot be found.

**Remedy:** If the project data are backed up using the commissioning tool, then the project must be downloaded again.  
Retentively save parameters (save all parameters, p0977 = 1), as a consequence, parameter files are completely written back to the non-volatile memory.  
Note:  
If the project data have not been backed up, then a new first commissioning is required.

---

### **F01038 Loading the parameter backup file unsuccessful**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** An error has occurred when loading parameter backup files from the non-volatile memory.

**Remedy:**

- If you have saved the project data using the commissioning tool, then download the project again. Retentively save the data or set p0977 = 1. This means that the parameter files are again completely written to the non-volatile memory.
- Replace the memory card or the converter.

---

### **F01039 Writing to the parameter back-up file unsuccessful**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** Writing to at least one parameter backup file in the non-volatile memory was unsuccessful.

- A parameter backup file has the "read only" file attribute and cannot be overwritten.
- There is not sufficient free memory space available.
- The non-volatile memory is defective and cannot be written to.

### 12.3 Faults and alarms

**Remedy:**

- Check the free memory space in the non-volatile memory.
- Replace the memory card or the converter.

---

#### **F01040 Save parameter settings and carry out a POWER ON**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -

**Component:** None

**Response:** OFF2

**Acknowledgment:** POWER ON

**Cause:** A parameter was changed, which means that it is necessary to save the parameters and reboot.

**Remedy:**

- Back up parameters.
- Carry out a POWER ON (switch-off/switch-on) for all components.

Then:

- Upload the drive unit (commissioning tool).

---

#### **F01041 Parameter save necessary**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** Defective or missing files were detected on the memory card when booting.

Fault value (r0949, interpret decimal):

- 1: Source file cannot be opened.
- 2: Source file cannot be read.
- 3: Target directory cannot be set up.
- 4: Target file cannot be set up/opened.
- 5: Target file cannot be written to.

Additional values:

Only for internal Siemens troubleshooting.

**Remedy:**

- Save the parameters.
- Download the project again to the drive unit.
- Update the firmware
- If required, replace the converter and/or memory card.

---

#### **F01042 Parameter error during project download**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Parameter: %1, index: %2, fault cause: %3

**Component:** None

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** An error was detected when downloading a project using the commissioning software (e.g. incorrect parameter value). It is possible that the parameter limits are dependent on other parameters.  
The detailed cause of the fault can be determined using the fault value.  
Fault value (r0949, interpret hexadecimal):  
ccbbaaaa hex  
aaaa = Parameter  
bb = Index  
cc = fault cause  
0: Parameter number illegal.  
1: Parameter value cannot be changed.  
2: Lower or upper value limit exceeded.  
3: Sub-index incorrect.  
4: No array, no sub-index.  
5: Data type incorrect.  
6: Setting not permitted (only resetting).  
7: Descriptive element cannot be changed.  
9: Descriptive data not available.  
11: No master control.  
15: No text array available.  
17: Task cannot be executed due to operating state.  
20: Illegal value.  
21: Response too long.  
22: Parameter address illegal.  
23: Format illegal.  
24: Number of values not consistent.  
25: Drive object does not exist.  
101: Presently deactivated.  
104: Illegal value.  
107: Write access not permitted when controller enabled.  
108: Unit unknown.  
109: Write access only in the commissioning status, encoder.  
110: Write access only in the commissioning status, motor.  
111: Write access only in the commissioning status, power unit.  
112: Write access only in the quick commissioning mode.  
113: Write access only in the ready mode.  
114: Write access only in the commissioning status, parameter reset.  
115: Write access only in the Safety Integrated commissioning status.  
116: Write access only in the commissioning status, technological application/units.  
117: Write access only in the commissioning status.  
118: Write access only in the commissioning status, download.  
119: Parameter may not be written in download.  
120: Write access only in the commissioning status, drive basis configuration.  
121: Write access only in the commissioning status, define drive type.  
122: Write access only in the commissioning status, data set basis configuration.  
123: Write access only in the commissioning status, device configuration.  
124: Write access only in the commissioning status, device download.  
125: Write access only in the commissioning status, device parameter reset.  
126: Write access only in the commissioning status, device ready.  
127: Write access only in the commissioning status, device.  
129: Parameter may not be written in download.  
131: Requested signal interconnection not possible as the signal source does not supply float value.  
132: Free signal interconnection via PROFIdrive telegram setting inhibited.

- 133: Access method not defined.
- 200: Below the valid values.
- 201: Above the valid values.
- 202: Cannot be accessed from the Basic Operator Panel (BOP).
- 203: Cannot be read from the Basic Operator Panel (BOP).
- 204: Write access not permitted.

- Remedy:**
- Correct the parameterization in the commissioning tool and download the project again.
  - Enter the correct value in the specified parameter.
  - Identify the parameter that restricts the limits of the specified parameter.

---

**F01043 Fatal error at project download**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Fault cause: %1

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** A fatal error was detected when downloading a project using the commissioning tool.

Fault value (r0949, interpret decimal):

- 1: Device status cannot be changed to device download (drive object ON?).
  - 2: Drive object number incorrect.
  - 3: A drive object that has already been deleted is deleted again.
  - 4: A drive object that has already been registered for generation is deleted.
  - 5: A drive object that does not exist is deleted.
  - 6: An undeleted drive object that already existed is generated.
  - 7: A drive object already registered for generation is generated again.
  - 8: Maximum number of drive objects that can be generated is exceeded.
  - 9: Error when generating the device drive object.
  - 10: Error when generating the target topology parameter.
  - 11: Error when generating a drive object (global component).
  - 12: Error when generating a drive object (drive component).
  - 13: Drive object type unknown.
  - 14: Drive status cannot be changed to "ready for operation" (r0947 and r0949).
  - 15: Drive status cannot be changed to drive download.
  - 16: Device status cannot be changed to "ready for operation".
  - 17: It is not possible to download the topology. The component wiring should be checked, taking into account the various messages/signals.
  - 18: A new download is only possible if the factory settings are restored for the drive unit.
  - 19: The slot for the option module has been configured several times (e.g. CAN and COMM BOARD).
  - 20: The configuration is inconsistent.
  - 21: Error when accepting the download parameters.
  - 22: Software-internal download error.
  - 24: Download not possible during a partial run-up after inserting a component.
- Additional values:

Only for internal Siemens troubleshooting.

- Remedy:**
- Use the current version of the commissioning tool.
  - Modify the offline project and carry out a new download (e.g. compare the number of drive objects, motors, encoders, power units in the offline project and at the drive).
  - Change the drive state (is a drive rotating or is there a message/signal?).
  - Observe additional active messages/signals and remove their cause (e.g. correct any incorrectly set parameters).
  - Automatically calculate the control parameters.
  - Boot from previously saved files (switch-off/switch-on or p0976).
  - Before a new download, restore the factory setting.



---

**F01044 Descriptive data error**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** OFF2  
**Acknowledgment:** POWER ON  
**Cause:** An error was detected when loading the descriptive data saved in the non-volatile memory.  
**Remedy:** Replace the memory card or the converter.

---

**A01045 CU: Configuring data invalid**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** An error was detected when evaluating the parameter files PSxxxxxyy.ACX, PTxxxxxyy.ACX, CAxxxxxyy.ACX, or CCxxxxxyy.ACX saved in the non-volatile memory. Under certain circumstances, several of the saved parameter values were not able to be accepted.  
Alarm value (r2124, interpret hexadecimal):  
Only for internal Siemens troubleshooting.  
**Remedy:** - Restore the factory setting (p0976 = 1) and reload the project into the converter.  
Then retentively save the parameterization or set p0977 = 1. This overwrites the incorrect parameter files in the non-volatile memory – and this alarm is withdrawn.

---

**A01049 CU: It is not possible to write to file**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** It is not possible to write to a write-protected parameter backup file. The write request was interrupted.  
Alarm value (r2124, interpret decimal):  
Number drive object  
**Remedy:** Check whether the "write protected" attribute has been set for the files in the non-volatile memory.  
When required, remove write protection and repeat the save operation (e.g. set p0977 = 1).

---

**F01050 Memory card and device incompatible**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** Control Unit (CU)  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The memory card and the device type do not match (e.g. a memory card for SINAMICS S is inserted in SINAMICS G).  
**Remedy:** - Insert the matching memory card.  
- Use the matching converter or power unit.

---

**F01054 CU: System limit exceeded**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1

### 12.3 Faults and alarms

**Component:** Control Unit (CU)  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** At least one system overload has been identified.  
Fault value (r0949, interpret decimal):  
1: Computing time load too high.  
5: Peak load too high.  
Note:  
As long as this fault is present, it is not possible to save the parameters (p0977).  
**Remedy:**  
- Reduce the computing time load of the drive unit to below 100 %.  
- Deactivate functions.  
- Deactivate drive objects.  
- Remove drive objects from the target topology.  
- Note the DRIVE-CLiQ topology rules and if required, change the DRIVE-CLiQ topology.

---

**F01068 CU: Data memory memory overflow**  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The utilization for a data memory area is too large.  
Fault value (r0949, interpret binary):  
Bit 0 = 1: High-speed data memory 1 overloaded  
Bit 1 = 1: High-speed data memory 2 overloaded  
Bit 2 = 1: High-speed data memory 3 overloaded  
Bit 3 = 1: High-speed data memory 4 overloaded  
**Remedy:**  
- Deactivate function.  
- Deactivate drive object.  
- Remove drive object from the target topology.

---

**A01069 Parameter backup and device incompatible**  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The parameter backup on the memory card and the drive unit do not match.  
The module boots with the factory settings.  
Example:  
Devices A and B. are not compatible and a memory card with the parameter backup for device A is inserted in device B.  
**Remedy:**  
- Insert a memory card with compatible parameter backup and carry out a POWER ON.  
- Insert a memory card without parameter backup and carry out a POWER ON.  
- Save the parameters (p0977 = 1).

---

**F01070 Project/firmware is being downloaded to the memory card**  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** An upgrade (project/firmware download) was initiated on the memory card.  
While this fault is active, the corresponding update takes place with plausibility and consistency checks. After this, depending on the command option, a new boot (reset) for the converter is initiated.  
Caution:  
While upgrading and while this fault is active, it is not permissible to switch off the converter.  
If the operation is interrupted, this can destroy the file system on the memory card. The memory card will then no longer work properly and must be repaired.

**Remedy:** Not necessary.  
The fault is automatically withdrawn after the upgrade has been completed.

---

**F01072 Memory card restored from the backup copy**

**Message class:** General drive fault (19)

**Message value:** -

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** The converter was switched-off while writing to the memory card. This is why the visible partition became defective.  
After switching on, the data from the non-visible partition (backup copy) were written to the visible partition.

**Remedy:** Check that the firmware and parameterization is up-to-date.

---

**A01073 POWER ON required for backup copy on memory card**

**Message class:** General drive fault (19)

**Message value:** -

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The parameter assignment on the visible partition of the memory card has changed.  
In order that the backup copy on the memory card is updated on the non-visible partition, it is necessary to carry out a POWER ON or hardware reset (p0972) of the Control Unit.

Note:

It is possible that a new POWER ON is requested via this alarm (e.g. after saving with p0971 = 1).

**Remedy:** - Carry out a POWER ON (switch-off/switch-on) for the Control Unit.  
- Carry out a hardware reset (RESET button, p0972).

---

**F01082 Parameter error when running up from data backup**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Parameter: %1, index: %2, fault cause: %3

**Component:** None

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

### 12.3 Faults and alarms

---

- Cause:** Parameterizing errors have been detected (e.g. incorrect parameter value). It is possible that the parameter limits are dependent on other parameters.
- The detailed cause of the fault can be determined using the fault value.
- Fault value (r0949, interpret hexadecimal):  
ccbbaaaa hex  
aaaa = Parameter  
bb = Index  
cc = fault cause
- 0: Parameter number illegal.
  - 1: Parameter value cannot be changed.
  - 2: Lower or upper value limit exceeded.
  - 3: Sub-index incorrect.
  - 4: No array, no sub-index.
  - 5: Data type incorrect.
  - 6: Setting not permitted (only resetting).
  - 7: Descriptive element cannot be changed.
  - 9: Descriptive data not available.
  - 11: No master control.
  - 15: No text array available.
  - 17: Task cannot be executed due to operating state.
  - 20: Illegal value.
  - 21: Response too long.
  - 22: Parameter address illegal.
  - 23: Format illegal.
  - 24: Number of values not consistent.
  - 25: Drive object does not exist.
  - 101: Presently deactivated.
  - 104: Illegal value.
  - 107: Write access not permitted when controller enabled.
  - 108: Unit unknown.
  - 109: Write access only in the commissioning status, encoder.
  - 110: Write access only in the commissioning status, motor.
  - 111: Write access only in the commissioning status, power unit.
  - 112: Write access only in the quick commissioning mode.
  - 113: Write access only in the ready mode.
  - 114: Write access only in the commissioning status, parameter reset.
  - 115: Write access only in the Safety Integrated commissioning status.
  - 116: Write access only in the commissioning status, technological application/units.
  - 117: Write access only in the commissioning status.
  - 118: Write access only in the commissioning status, download.
  - 119: Parameter may not be written in download.
  - 120: Write access only in the commissioning status, drive basis configuration.
  - 121: Write access only in the commissioning status, define drive type.
  - 122: Write access only in the commissioning status, data set basis configuration.
  - 123: Write access only in the commissioning status, device configuration.
  - 124: Write access only in the commissioning status, device download.
  - 125: Write access only in the commissioning status, device parameter reset.
  - 126: Write access only in the commissioning status, device ready.
  - 127: Write access only in the commissioning status, device.
  - 129: Parameter may not be written in download.
  - 131: Requested signal interconnection not possible as the signal source supplies non-float value.
  - 132: Free signal interconnection via PROFIdrive telegram setting inhibited.

- 133: Access method not defined.
- 200: Below the valid values.
- 201: Above the valid values.
- 202: Cannot be accessed from the Basic Operator Panel (BOP).
- 203: Cannot be read from the Basic Operator Panel (BOP).
- 204: Write access not permitted.

**Remedy:**

- Correct the parameterization in the commissioning tool and download the project again.
- Enter the correct value in the specified parameter.
- Identify the parameter that restricts the limits of the specified parameter.

---

**A01100 CU: Memory card withdrawn**

**Message class:** General drive fault (19)

**Message value:** -

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The memory card (non-volatile memory) was withdrawn during operation.

Notice:

It is not permissible for the memory card to be withdrawn or inserted under voltage.

**Remedy:**

- Switch off the drive system.
- Re-insert the memory card that was withdrawn - This card must match the drive system.
- Switch on the drive system again.

---

**F01105 CU: Insufficient memory**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** Control Unit (CU)

**Response:** OFF1

**Acknowledgment:** POWER ON

**Cause:** The functionality on this Control Unit is too extensive (e.g. too many drives, functions, data sets, Technology Extensions, blocks, etc).

Fault value (r0949, interpret decimal):

Only for internal Siemens troubleshooting.

**Remedy:**

- Change the configuration on this Control Unit, e.g.
  - Use fewer axes
  - Reduce the number of configurable functions
  - Use fewer data sets
  - Reduce Technology Extensions and blocks
- Use an additional Control Unit.

---

**F01107 CU: Save to memory card unsuccessful**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

12.3 Faults and alarms

---

**Cause:** A data save in the non-volatile memory was not able to be successfully carried out.  
- Non-volatile memory is defective.  
- Insufficient space in the non-volatile memory.  
Fault value (r0949, interpret decimal):  
Only for internal Siemens troubleshooting.

**Remedy:** - Try to save again.  
- Replace the memory card or Control Unit.

---

**F01110 CU: More than one SINAMICS G on one Control Unit**  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY

**Cause:** More than one SINAMICS G type power unit is being operated from the Control Unit.  
Fault value (r0949, interpret decimal):  
Number of the second drive with a SINAMICS G type power unit.

**Remedy:** Only one SINAMICS G drive type is permitted.

---

**F01111 CU: Mixed operation of drive units illegal**  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY

**Cause:** Illegal operation of various drive units on one Control Unit:  
- SINAMICS S together with SINAMICS G  
- SINAMICS S together with SINAMICS S Value or Combi  
Fault value (r0949, interpret decimal):  
Number of the first drive object with a different power unit type.

**Remedy:** Only power units of one particular drive type may be operated with one Control Unit.

---

**F01122 Frequency at the measuring probe input too high**  
**Message class:** Application/technological function faulted (17)  
**Message value:** %1  
**Component:** None  
**Response:** OFF1  
**Acknowledgment:** IMMEDIATELY

**Cause:** The frequency of the pulses at the measuring probe input is too high.  
Fault value (r0949, interpret decimal):  
1: DI/DO 9 (X122.8)  
2: DI/DO 10 (X122.10)  
4: DI/DO 11 (X122.11)  
8: DI/DO 13 (X132.8)  
16: DI/DO 14 (X132.10)  
32: DI/DO 15 (X132.11)  
64: DI/DO 8 (X122.7)  
128: DI/DO 12 (X132.7)

**Remedy:** Reduce the frequency of the pulses at the measuring probe input.

---

---

**F01123 Power unit does not support digital inputs/outputs**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** Power Unit  
**Response:** OFF1  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The power unit does not support the activated "Digital inputs/outputs" function.  
**Remedy:** Deactivate function.

---

**F01150 CU: Number of instances of a drive object type exceeded**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** Drive object type: %1, number permitted: %2, actual number: %3  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The maximum permissible number of instances of a drive object type was exceeded.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
ddccbbaa hex:  
aa = drive object type:  
- Drive object type (p0107), for which the maximum permissible number of instances was exceeded.  
bb = number permitted:  
- Maximum permissible number of instances for this drive object type.  
cc = actual number:  
- Actual number of instances for this drive object type.  
dd = no significance  
**Remedy:**  
- Switch off the unit.  
- Suitably restrict the number of instances of a drive object type by reducing the number of inserted components.  
- Re-commission the unit.

---

**F01151 CU: Number of drive objects of a category exceeded**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** Drive object category: %1, number permitted: %2, actual number: %3  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The maximum permissible number of drive objects of a category was exceeded.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
ddccbbaa hex:  
aa = drive object category:  
- Drive object category, for which the maximum permissible number of drive objects was exceeded.  
bb = number permitted:  
- Maximum permissible number for this drive object category.  
cc = actual number:  
- Actual number for this drive object category.  
dd = no significance  
**Remedy:**  
- Switch off the unit.  
- Suitably restrict the number of drive objects of the specified category by reducing the number of inserted components.  
- Re-commission the unit.

---

**F01152 CU: Invalid constellation of drive object types**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** POWER ON

**Cause:** It is not possible to simultaneously operate drive object types SERVO, VECTOR and HLA.  
A maximum of 2 of these drive object types can be operated on a Control Unit.

**Remedy:** - Switch off the unit.  
- Restrict the use of drive object types SERVO, VECTOR, HLA to a maximum of 2.  
- Re-commission the unit.

---

**F01200 CU: Time slice management internal software error**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Control Unit (CU)

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** A time slice management error has occurred.  
It is possible that the sampling times have been inadmissibly set.  
Fault value (r0949, interpret hexadecimal):  
998:  
Too many time slices occupied by technology functions (e.g. DCC).  
999:  
Too many time slices occupied by the basic system. Too many different sampling times may have been set.  
Additional values:  
Only for internal Siemens troubleshooting.

**Remedy:** - Contact Technical Support.

---

**F01205 CU: Time slice overflow**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Control Unit (CU)

**Response:** OFF2

**Acknowledgment:** POWER ON

**Cause:** Insufficient processing time is available for the existing topology.  
Fault value (r0949, interpret hexadecimal):  
Only for internal Siemens troubleshooting.

**Remedy:** - Reduce the number of drives.

---

**F01250 EEPROM incorrect read-only data**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** POWER ON

**Cause:** Error when reading the read-only data of the EEPROM in the converter.  
Fault value (r0949, interpret decimal):  
Only for internal Siemens troubleshooting.



**Remedy:**

- Carry out a POWER ON (switch-off/switch-on).
- Replace the converter.

---

**A01251 CU: CU-EEPROM incorrect read-write data**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** Error when reading the read-write data of the EEPROM in the converter.  
Alarm value (r2124, interpret decimal):  
Only for internal Siemens troubleshooting.

**Remedy:** For alarm value r2124 < 256, the following applies:  

- Carry out a POWER ON (switch-off/switch-on).
- Replace the converter.

For alarm value r2124 >= 256, the following applies:  

- For the converter with this alarm, clear the fault memory (p0952 = 0).
- Replace the converter.

---

**F01255 CU: Option Board EEPROM read-only data error**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** POWER ON

**Cause:** Error when reading the read-only data of the EEPROM in the Option Board.  
Fault value (r0949, interpret decimal):  
Only for internal Siemens troubleshooting.

**Remedy:**

- Carry out a POWER ON (switch-off/switch-on).
- Replace the Control Unit.

---

**A01256 CU: Option Board EEPROM read-write data error**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** Error when reading the read-write data of the EEPROM in the Option Board.  
Alarm value (r2124, interpret decimal):  
Only for internal Siemens troubleshooting.

**Remedy:**

- Carry out a POWER ON (switch-off/switch-on).
- Replace the Control Unit.

---

**A01314 Topology: Component must not be present**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1, to %2, %3, connection: %4

**Component:** None

**Response:** NONE

12.3 Faults and alarms

**Acknowledgment:** NONE

**Explanation of the message value:** For %1, %2

Value	Cause	Remedy
0	Component unknown	
1	Control Unit	
2	Motor Module	
3	Line Module	
4	Sensor Module	
5	Voltage Sensing Module	
6	Terminal Module	
7	DRIVE-CLiQ Hub Module	
8	Controller Extension	
9	Filter module	
10	Hydraulic Module	
49	DRIVE-CLiQ component	
50	Option slot	
60	Encoder	
70	DRIVE-CLiQ motor	
71	Hydraulic cylinder	
72	Hydraulic valve	
80	Motor	

**Explanation of the message value:** For %3

Component in target topology

**Explanation of the message value:** For %4

Value	Cause	Remedy
0	Port 0	
1	Port 1	
2	Port 2	
3	Port 3	
4	Port 4	
5	Port 5	
6	Port 6	
7	Port 7	
8	Port 8	
9	Port 9	
10	X100	
11	X101	
12	X102	
13	X103	
14	X104	
15	X105	
20	X200	
21	X201	
22	X202	
23	X203	
24	X204	

25 X205  
40 X400  
41 X401  
42 X402  
50 X500  
51 X501  
52 X502  
53 X503  
54 X504  
55 X505  
56 X506  
57 X507

**Cause:** For a component, "deactivate and not present" is set but this component is still in the topology.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex:

aa = component number

bb = component class of the component

cc = connection number

Note:

Component class and connection number are described in F01375.

**Remedy:** - Remove the corresponding component.

- Change the setting "deactivate and not present".

Note:

Under "Topology --> Topology view", the commissioning tool where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

### A01317 Deactivated component again present

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** If a component of the target topology for an active drive object is inserted and the associated parameter of the component is set to "deactivate" (p0125, p0145, p0155, p0165).

Note:

This is the only message that is displayed for a deactivated component.

**Remedy:** The alarm is automatically withdrawn for the following actions:

- Activate the components involved (p0125 = 1, p0145 = 1, p0155 = 1, p0165 = 1).

- Again withdraw the component involved.

---

### A01319 Inserted component not initialized

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** Initialization is required for at least one inserted component.

This is only possible if the pulse inhibit is active on all drive objects.

**Remedy:** Activate pulse inhibit for all drive objects.

**F01325 Topology: Component number not included in target topology****Message class:** Error in the parameterization / configuration / commissioning procedure (18)**Message value:** Component number: %1**Component:** None**Response:** NONE**Acknowledgment:** IMMEDIATELY**Cause:** The component referenced in a data set (e.g. PDS, MDS or EDS) is not contained in the target topology.  
Fault value (r0949, interpret decimal)**Remedy:** Establish consistency between the topology and data set configuration.**A01330 Topology: Quick commissioning not possible****Message class:** Error in the parameterization / configuration / commissioning procedure (18)**Message value:** Fault cause: %1, supplementary information: %2, preliminary component number: %3**Component:** None**Response:** NONE**Acknowledgment:** NONE**Cause:** Unable to carry out a quick commissioning. The existing actual topology does not fulfill the requirements.**Remedy:**  
- Check the motor connection.  
- Carry out a POWER ON (switch-off/switch-on).**F01356 Topology: There is a defective component****Message class:** Hardware/software error (1)**Message value:** Fault cause: %1, Component number: %2, Connection number: %3**Component:** None**Response:** NONE**Acknowledgment:** IMMEDIATELY**Cause:** The actual topology indicates at least one defective component.  
Note:

Pulse enable is withdrawn and prevented.

**Remedy:** Replace the defective component and restart the system.**F01380 Topology: Actual topology EEPROM defective****Message class:** Hardware/software error (1)**Message value:** Preliminary component number: %1**Component:** None**Response:** NONE**Acknowledgment:** POWER ON**Cause:** When detecting the actual topology, a component with a defective EEPROM was detected.  
Fault value (r0949, interpret hexadecimal):

bbbbaaaa hex:

bbbb = reserved

aaaa = preliminary component number of the defective components

**Remedy:** Output the fault value and remove the defected component.**A01382 Topology: Sensor Module incorrectly inserted****Message class:** Error in the parameterization / configuration / commissioning procedure (18)**Message value:** Component: %1, to %2, %3, connection: %4**Component:** None**Response:** NONE

**Acknowledgment:** NONE

**Explanation of the message value:** For %1

Component in target topology

**Explanation of the message value:** For %2

Value	Cause	Remedy
0	Component unknown	
1	Control Unit	
2	Motor Module	
3	Line Module	
4	Sensor Module	
5	Voltage Sensing Module	
6	Terminal Module	
7	DRIVE-CLiQ Hub Module	
8	Controller Extension	
9	Filter module	
10	Hydraulic Module	
49	DRIVE-CLiQ component	
50	Option slot	
60	Encoder	
70	DRIVE-CLiQ motor	
71	Hydraulic cylinder	
72	Hydraulic valve	
80	Motor	

**Explanation of the message value:** For %3

Component in actual topology

**Explanation of the message value:** For %4

Value	Cause	Remedy
0	Port 0	
1	Port 1	
2	Port 2	
3	Port 3	
4	Port 4	
5	Port 5	
6	Port 6	
7	Port 7	
8	Port 8	
9	Port 9	
10	X100	
11	X101	
12	X102	
13	X103	
14	X104	
15	X105	
20	X200	
21	X201	

### 12.3 Faults and alarms

22	X202
23	X203
24	X204
25	X205
40	X400
41	X401
42	X402
50	X500
51	X501
52	X502
53	X503
54	X504
55	X505
56	X506
57	X507

**Cause:** The topology comparison has detected a Sensor Module in the actual topology that has been incorrectly inserted with respect to the target topology.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex:

dd = connection number (%4)

cc = component number (%3)

bb = component class (%2)

aa = component number of the incorrectly inserted component (%1)

Note:

The component is described in dd, cc and bb, where the component involved is incorrectly inserted.

Component class and connection number are described in F01375.

The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.

**Remedy:** Adapting topologies:

- Insert the components involved at the right connection (correct the actual topology).
- Adapt the project/parameterizing in the commissioning tool (correct the target topology).
- Automatically resolve the topology error.

Note:

Under "Topology --> Topology view" the commissioning tool where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

#### **A01388**      **Topology: Encoder incorrectly inserted**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Component: %1, to %2, %3, connection: %4

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Explanation of the message value:** For %1

Component in target topology

**Explanation of the message value:** For %2

Value	Cause	Remedy
0	Component unknown	
1	Control Unit	
2	Motor Module	
3	Line Module	
4	Sensor Module	
5	Voltage Sensing Module	
6	Terminal Module	
7	DRIVE-CLiQ Hub Module	
8	Controller Extension	
9	Filter module	
10	Hydraulic Module	
49	DRIVE-CLiQ component	
50	Option slot	
60	Encoder	
70	DRIVE-CLiQ motor	
71	Hydraulic cylinder	
72	Hydraulic valve	
80	Motor	

**Explanation of the message value:** For %3

Component in actual topology

**Explanation of the message value:** For %4

Value	Cause	Remedy
0	Port 0	
1	Port 1	
2	Port 2	
3	Port 3	
4	Port 4	
5	Port 5	
6	Port 6	
7	Port 7	
8	Port 8	
9	Port 9	
10	X100	
11	X101	
12	X102	
13	X103	
14	X104	
15	X105	
20	X200	
21	X201	

### 12.3 Faults and alarms

22	X202
23	X203
24	X204
25	X205
40	X400
41	X401
42	X402
50	X500
51	X501
52	X502
53	X503
54	X504
55	X505
56	X506
57	X507

**Cause:** The topology comparison has detected an EnDat encoder in the actual topology that has been incorrectly inserted with respect to the target topology.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex:

dd = connection number (%4)

cc = component number (%3)

bb = component class (%2)

aa = component number of the incorrectly inserted component (%1)

Note:

The component is described in dd, cc and bb, where the component involved is incorrectly inserted.

Component class and connection number are described in F01375.

The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.

**Remedy:** Adapting topologies:

- Insert the components involved at the right connection (correct the actual topology).
- Adapt the project/parameterizing in the commissioning tool (correct the target topology).
- Automatically resolve the topology error.

Note:

Under "Topology --> Topology view" the commissioning tool where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

#### **A01416 Topology: Component additionally inserted**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1, to %2, %3, connection: %4

**Component:** None

**Response:** NONE



**Acknowledgment:** NONE

**Explanation of the message value:** For %1, %2

Value	Cause	Remedy
0	Component unknown	
1	Control Unit	
2	Motor Module	
3	Line Module	
4	Sensor Module	
5	Voltage Sensing Module	
6	Terminal Module	
7	DRIVE-CLiQ Hub Module	
8	Controller Extension	
9	Filter module	
10	Hydraulic Module	
49	DRIVE-CLiQ component	
50	Option slot	
60	Encoder	
70	DRIVE-CLiQ motor	
71	Hydraulic cylinder	
72	Hydraulic valve	
80	Motor	

**Explanation of the message value:** For %3

Component in target topology

**Explanation of the message value:** For %4

Value	Cause	Remedy
0	Port 0	
1	Port 1	
2	Port 2	
3	Port 3	
4	Port 4	
5	Port 5	
6	Port 6	
7	Port 7	
8	Port 8	
9	Port 9	
10	X100	
11	X101	
12	X102	
13	X103	
14	X104	
15	X105	
20	X200	
21	X201	
22	X202	
23	X203	
24	X204	

### 12.3 Faults and alarms

25	X205
40	X400
41	X401
42	X402
50	X500
51	X501
52	X502
53	X503
54	X504
55	X505
56	X506
57	X507

**Cause:** The topology comparison has found a component in the actual topology which is not specified in the target topology.  
Alarm value (r2124, interpret hexadecimal):  
ddccbbaa hex:  
dd = component class (%2)  
cc = connection number (%4)  
bb = component class of the additional component (%1)  
aa = component number (%3)  
Note:  
The component class of the additional component is contained in bb.  
The component is described in dd, cc and aa, where the additional component is inserted.  
Component class and connection number are described in F01375.

**Remedy:** Adapting topologies:  
- Remove the additional component (correct the actual topology).  
- Adapt the project/parameterizing in the commissioning tool (correct the target topology).  
Note:  
Under "Topology --> Topology view" the commissioning tool where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

**A01420**      **Topology: Component different**  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** Component: %1, target: %2, actual: %3, difference: %4  
**Component:** None  
**Response:** NONE

**Acknowledgment:** NONE

**Explanation of the message value:** For %1

Component in target topology

**Explanation of the message value:** For %2, %3

Value	Cause	Remedy
0	Component unknown	
1	Control Unit	
2	Motor Module	
3	Line Module	
4	Sensor Module	
5	Voltage Sensing Module	
6	Terminal Module	
7	DRIVE-CLiQ Hub Module	
8	Controller Extension	
9	Filter module	
10	Hydraulic Module	
49	DRIVE-CLiQ component	
50	Option slot	
60	Encoder	
70	DRIVE-CLiQ motor	
71	Hydraulic cylinder	
72	Hydraulic valve	
80	Motor	

**Explanation of the message value:** For %4

Value	Cause	Remedy
1	Different component type	
2	Different article number	
3	Different manufacturer	
4	Incorrect subcomponent connected	
5	NX10 or NX15 used instead of CX32.	
6	CX32 used instead of NX10 or NX15.	
7	Different number of connections	

**Cause:** The topology comparison has detected differences in the actual and target topologies in the electronic nameplate component.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex:

aa = component number (%1),

bb = component class of the target topology (%2),

cc = component class of the actual topology (%3),

dd = difference (%4)

Note:

The component class is described in F01375.

The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.

12.3 Faults and alarms

Remedy: Adapting topologies:
- Connect the expected component (correct the actual topology).
- Adapt the project/parameterizing in the commissioning tool (correct the target topology).

Note: Under "Topology --> Topology view" the commissioning tool where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

A01425 Topology: Serial number different

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: Component: %1, %2, differences: %3

Component: None

Response: NONE

Acknowledgment: NONE

Explanation of the message value: For %1

Component in target topology

Explanation of the message value: For %2

message value:

Table with 3 columns: Value, Cause, Remedy. Lists component types like Control Unit, Motor Module, etc.

Cause: The topology comparison has detected differences in the actual and target topologies in relation to one component. The serial number is different.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex:

dd = reserved

cc = number of differences (%3)

bb = component class (%2)

aa = component number (%1)

Note:

The component class is described in F01375.

The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.

**Remedy:** Adapting topologies:  
- Change over the actual topology to match the target topology.  
- Load the target topology that matches the actual topology (commissioning tool).  
**Note:**  
Under "Topology --> Topology view" the commissioning tool where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

**F01451 Topology: Target topology is invalid**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** An error was detected in the target topology.  
The target topology is invalid.  
Fault value (r0949, interpret hexadecimal):  
ccccbaa hex: cccc = index error, bb = component number, aa = fault cause  
aa = 1B hex = 27 dec: Error not specified.  
aa = 1C hex = 28 dec: Value illegal.  
aa = 1D hex = 29 dec: Incorrect ID.  
aa = 1E hex = 30 dec: Incorrect ID length.  
aa = 1F hex = 31 dec: Too few indices left.  
aa = 20 hex = 32 dec: component is not connected to the converter.

**Remedy:** Download the target topology again using the commissioning tool.

---

**A01481 Topology: Internal communications faulted**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Component: %1, to %2, %3, connection: %4

**Component:** None

**Response:** NONE

12.3 Faults and alarms

**Acknowledgment:** NONE

**Explanation of the message value:** For %1, %3

Component in target topology

**Explanation of the message value:** For %2

Value	Cause	Remedy
0	Component unknown	
1	Control Unit	
2	Motor Module	
3	Line Module	
4	Sensor Module	
5	Voltage Sensing Module	
6	Terminal Module	
7	DRIVE-CLiQ Hub Module	
8	Controller Extension	
9	Filter module	
10	Hydraulic Module	
49	DRIVE-CLiQ component	
50	Option slot	
60	Encoder	
70	DRIVE-CLiQ motor	
71	Hydraulic cylinder	
72	Hydraulic valve	
80	Motor	

**Explanation of the message value:** For %4

Value	Cause	Remedy
0	Port 0	
1	Port 1	
2	Port 2	
3	Port 3	
4	Port 4	
5	Port 5	
6	Port 6	
7	Port 7	
8	Port 8	
9	Port 9	
10	X100	
11	X101	
12	X102	
13	X103	
14	X104	
15	X105	
20	X200	
21	X201	
22	X202	
23	X203	
24	X204	

25 X205  
40 X400  
41 X401  
42 X402  
50 X500  
51 X501  
52 X502  
53 X503  
54 X504  
55 X505  
56 X506  
57 X507

**Cause:** Internal communications faulted.  
**Remedy:** - Carry out a POWER ON (switch-off/switch-on).  
- Replace the device.

---

**A01486 Topology: Component not connected**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** Component: %1, to %2, %3, connection: %4  
**Component:** None  
**Response:** NONE

12.3 Faults and alarms

**Acknowledgment:** NONE

**Explanation of the message value:** For %1, %3

Component in target topology

**Explanation of the message value:** For %2

Value	Cause	Remedy
0	Component unknown	
1	Control Unit	
2	Motor Module	
3	Line Module	
4	Sensor Module	
5	Voltage Sensing Module	
6	Terminal Module	
7	DRIVE-CLiQ Hub Module	
8	Controller Extension	
9	Filter module	
10	Hydraulic Module	
49	DRIVE-CLiQ component	
50	Option slot	
60	Encoder	
70	DRIVE-CLiQ motor	
71	Hydraulic cylinder	
72	Hydraulic valve	
80	Motor	

**Explanation of the message value:** For %4

Value	Cause	Remedy
0	Port 0	
1	Port 1	
2	Port 2	
3	Port 3	
4	Port 4	
5	Port 5	
6	Port 6	
7	Port 7	
8	Port 8	
9	Port 9	
10	X100	
11	X101	
12	X102	
13	X103	
14	X104	
15	X105	
20	X200	
21	X201	
22	X202	
23	X203	
24	X204	



25 X205  
40 X400  
41 X401  
42 X402  
50 X500  
51 X501  
52 X502  
53 X503  
54 X504  
55 X505  
56 X506  
57 X507

**Cause:** The topology comparison has detected a component that is missing in the actual topology with respect to the target topology.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex:

dd = connection number (%4)

cc = component number (%3)

bb = component class (%2)

aa = component number of the component that has not been inserted (%1)

Note:

The component is described in dd, cc and bb, where the component has not been inserted.

Component class and connection number are described in F01375.

**Remedy:** Adapting topologies:

- Insert the components involved at the right connection (correct the actual topology).

- Adapt the project/parameterizing in the commissioning tool (correct the target topology).

Check the hardware:

- Check the 24 V supply voltage.

- Check cables for interruption and contact problems.

- Check that the component is working properly.

Note:

Under "Topology --> Topology view" the commissioning tool where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

### **A01488 Topology: Encoder not connected**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Component: %1, to %2, %3, connection: %4

**Component:** None

**Response:** NONE

12.3 Faults and alarms

**Acknowledgment:** NONE

**Explanation of the message value:** For %1, %3

Component in target topology

**Explanation of the message value:** For %2

Value	Cause	Remedy
0	Component unknown	
1	Control Unit	
2	Motor Module	
3	Line Module	
4	Sensor Module	
5	Voltage Sensing Module	
6	Terminal Module	
7	DRIVE-CLiQ Hub Module	
8	Controller Extension	
9	Filter module	
10	Hydraulic Module	
49	DRIVE-CLiQ component	
50	Option slot	
60	Encoder	
70	DRIVE-CLiQ motor	
71	Hydraulic cylinder	
72	Hydraulic valve	
80	Motor	

**Explanation of the message value:** For %4

Value	Cause	Remedy
0	Port 0	
1	Port 1	
2	Port 2	
3	Port 3	
4	Port 4	
5	Port 5	
6	Port 6	
7	Port 7	
8	Port 8	
9	Port 9	
10	X100	
11	X101	
12	X102	
13	X103	
14	X104	
15	X105	
20	X200	
21	X201	
22	X202	
23	X203	
24	X204	

25 X205  
40 X400  
41 X401  
42 X402  
50 X500  
51 X501  
52 X502  
53 X503  
54 X504  
55 X505  
56 X506  
57 X507

**Cause:** The topology comparison has detected an encoder that is missing in the actual topology with respect to the target topology.  
Alarm value (r2124, interpret hexadecimal):  
ddccbbaa hex:  
dd = connection number (%4)  
cc = component number (%3)  
bb = component class (%2)  
aa = component number of the component that has not been inserted (%1)  
Note:  
The component is described in dd, cc and bb, where the component has not been inserted.  
Component class and connection number are described in F01375.

**Remedy:** Adapting topologies:  
- Insert the components involved at the right connection (correct the actual topology).  
- Adapt the project/parameterizing in the commissioning tool (correct the target topology).  
Check the hardware:  
- Check the 24 V supply voltage.  
- Check cables for interruption and contact problems.  
- Check that the component is working properly.  
Note:  
Under "Topology --> Topology view" the commissioning tool where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

**A01489 Topology: Motor not connected**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Component: %1, to %2, %3, connection: %4

**Component:** None

**Response:** NONE

12.3 Faults and alarms

**Acknowledgment:** NONE

**Explanation of the message value:** For %1, %3

Component in target topology

**Explanation of the message value:** For %2

Value	Cause	Remedy
0	Component unknown	
1	Control Unit	
2	Motor Module	
3	Line Module	
4	Sensor Module	
5	Voltage Sensing Module	
6	Terminal Module	
7	DRIVE-CLiQ Hub Module	
8	Controller Extension	
9	Filter module	
10	Hydraulic Module	
49	DRIVE-CLiQ component	
50	Option slot	
60	Encoder	
70	DRIVE-CLiQ motor	
71	Hydraulic cylinder	
72	Hydraulic valve	
80	Motor	

**Explanation of the message value:** For %4

Value	Cause	Remedy
0	Port 0	
1	Port 1	
2	Port 2	
3	Port 3	
4	Port 4	
5	Port 5	
6	Port 6	
7	Port 7	
8	Port 8	
9	Port 9	
10	X100	
11	X101	
12	X102	
13	X103	
14	X104	
15	X105	
20	X200	
21	X201	
22	X202	
23	X203	
24	X204	

25 X205  
40 X400  
41 X401  
42 X402  
50 X500  
51 X501  
52 X502  
53 X503  
54 X504  
55 X505  
56 X506  
57 X507

**Cause:** The topology comparison has detected a motor that is missing in the actual topology with respect to the target topology.  
Alarm value (r2124, interpret hexadecimal):  
ddccbbaa hex:  
dd = connection number (%4)  
cc = component number (%3)  
bb = component class (%2)  
aa = component number of the component that has not been inserted (%1)  
Note:  
The component is described in dd, cc and bb, where the component has not been inserted.  
Component class and connection number are described in F01375.

**Remedy:** Adapting topologies:  
- Insert the components involved at the right connection (correct the actual topology).  
- Adapt the project/parameterizing in the commissioning tool (correct the target topology).  
Check the hardware:  
- Check the 24 V supply voltage.  
- Check cables for interruption and contact problems.  
- Check that the component is working properly.  
Note:  
Under "Topology --> Topology view" the commissioning tool where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

### F01512 No scaling available

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** None

**Response:** OFF2

**Acknowledgment:** POWER ON

**Cause:** An attempt was made to determine a conversion factor for a scaling that does not exist.  
Fault value (r0949, interpret decimal):  
Unit (e.g. corresponding to SPEED) for which an attempt was made to determine a factor.

**Remedy:** Apply scaling or check the transfer value.

---

### A01514 Error when writing during a reconnect

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Parameter: %1

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

12.3 Faults and alarms

---

**Cause:** During a reconnect operation (e.g. while booting or downloading - but can also occur in normal operation) a parameter was not able to be written to.  
The parameter is then reset to the factory setting.

Alarm value (r2124, interpret decimal):  
Parameter number

**Remedy:** Not necessary.

---

**A01550 Security: Drive data encryption invalid**

**Message class:** Hardware/software error (1)

**Message value:** -

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The password for drive data encryption (DDE) does not match the password configured in the converter or no password was configured.

The DDE password protects sensitive data on the SD card.  
It is not possible to transfer the data backup from the SD card.

**Remedy:** To be able to restore the data backup on the SD card, the DDE password must correspond to the password that was originally configured for the data backup in the original converter:

- With the SD card inserted, enter the correct DDE password in the Security Wizard of the web server and restart the converter.

- In Startdrive, with the SD card inserted, under Online & Diagnostics, enter the correct DDE password in screen form "Specify password for encryption of the drive data" and restart the converter.

If the data backup on the SD card is not be used:

- Remove the SD card from the converter and restart the converter.

Notice: Not observing this and continuing to work at the converter can lead to the data backup on the SD card being lost.

---

**A01590 Drive: Motor maintenance interval expired**

**Message class:** General drive fault (19)

**Message value:** Fault cause: %1 bin

**Component:** Motor

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The selected service/maintenance interval for this motor was reached.

Alarm value (r2124, interpret decimal):

Motor data set number.

**Remedy:** carry out service/maintenance and reset the service/maintenance interval (p0651).

---

**C01600 SI: STO self test failed**

**Message class:** Safety monitoring channel has identified an error (10)

**Message value:** %1

**Variant:** S200 PN

**Component:** None

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

---

**Cause:** The "Safety Integrated" function integrated in the drive has identified a fault in the self test of the switch-off signal path, and has initiated an STO (Safe Torque Off).  
Fault value (r60049, interpret decimal):  
1005: STO active, although STO not selected and there is no internal STO active.  
1010: STO inactive, although STO is selected or an internal STO is active.  
1015: The self test was unsuccessful in operation.  
1016: Error in the communication path for brake/F-DI/F-DO/STO

**Remedy:**

- Select STO and then deselect again.
- Carry out a POWER ON (switch-off/switch-on) for all components.
- Upgrade software to a later version.
- Contact Technical Support.

---

**C01603 SI: Module temperature - limit value exceeded**

**Message class:** Safety monitoring channel has identified an error (10)

**Message value:** -

**Variant:** S200 PN

**Component:** None

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** A safe monitoring function has detected that the module temperature has exceeded a limit value. STO (Safe Torque Off) was initiated to maintain the safe state.

**Remedy:**

- Check the ambient temperature.
- Check the module fan.
- Operate the module in the permissible range.

---

**F01604 SI: Safety EEPROM data error**

**Message class:** Safety monitoring channel has identified an error (10)

**Message value:** %1

**Variant:** S200 PN

**Component:** Control Unit (CU)

**Response:** OFF2

**Acknowledgment:** POWER ON

**Cause:** Safety relevant EEPROM data are not correct.  
This message results in an STO (Safe Torque Off).

Message value (r0949, interpret decimal): Only for internal Siemens fault diagnostics.

**Remedy:** Replace the module.

---

**A01605 SI: Checksum error has occurred**

**Message class:** Safety monitoring channel has identified an error (10)

**Message value:** %1

**Variant:** S200 PN

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** A checksum error (CRC error) has occurred in the converter program memory.  
Alarm value (r2124, interpret decimal):  
Only for internal Siemens troubleshooting.

- Remedy:**
- Carry out a POWER ON (switch-off/switch-on).
  - Upgrade firmware to later version.
  - Contact Technical Support.

---

**C01630 SI: Brake control error**

**Message class:** Safety monitoring channel has identified an error (10)

**Message value:** %1

**Variant:** S200 PN

**Component:** None

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The "Safety Integrated" function integrated in the drive has identified a brake control fault, and has initiated an STO.  
Fault value (r0949, interpret decimal):

1:

Fault in the "Open brake" state.

- Parameter p1278 incorrectly set.
- Brake not connected or interrupted cable (check whether for p1278 = 1 and p9604 bit 1 = 0 (SBC deactivated) the brake opens).
- Ground fault in brake cable.

2:

Fault in the "Close brake" state.

- Brake not connected or interrupted cable (check whether for p1278 = 1 and p9604 bit 1 = 0 (SBC deactivated) the brake opens).
- Short-circuit in brake winding.

3:

Hardware is defective or does not support the brake control.

- Communication with the brake control has failed.
- SBC is enabled on a module that does not support brake control.

4:

- Brake is not connected or interrupted cable.

**Remedy:**

- Check the motor holding brake connection.
- Check the function of the motor holding brake.
- Check whether the brake control is supported.
- Check whether there are disturbances in the communications from the self-identifying brake, and if required carry out a diagnostics routine for the faults involved.
- Check that the electrical cabinet design and cable routing are in compliance with EMC regulations (e.g. shield of the motor cable and brake conductors are connected with the shield connecting plate and the motor connectors are tightly screwed to the housing).
- Replace the hardware.

Note:

SBC: Safe Brake Control

SI: Safety Integrated

---

**A01637 SI: Safety configuration not protected**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -

**Variant:** S200 PN

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE



**Cause:** Safety configuration is not protected using UMAC (User Management and Access Control).  
**Remedy:** Activate UMAC and assign the rights for changing the "Edit Safety Integrated application" safety configuration to a specific user that is saved with user name and password.

**A01641 SI: Component exchange identified and save necessary**

**Message class:** General drive fault (19)

**Message value:** Fault cause: %1

**Variant:** S200 PN

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** NONE

**Explanation of the message value:** For %1

Bit	Cause	Remedy
0	It was identified that the drive has been replaced	
4	It was identified that the Sensor Module has been replaced	
5	It was identified that the sensor has been replaced	

**Cause:** "Safety Integrated" has identified that a component has been replaced.  
 No additional stop response is initiated, and therefore the operation of the specific drive is not restricted.  
 When safety functions are active, after a component has been replaced it is necessary to carry out a partial acceptance test.  
 Alarm value (r2124, interpret binary).

**Remedy:** - Save all parameters (p0977 = 1 or retentively save).  
 - Acknowledge fault.  
 See also: r9776 (SI diagnostics)

**F01646 SI: Change logbook**

**Message class:** Safety monitoring channel has identified an error (10)

**Message value:** %1

**Variant:** S200 PN

**Component:** Control Unit (CU)

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The saved functional safety checksum (r9780[0]) or hardware-related safety checksum (r9780[1]) differs from the safety checksum calculated when running up or a previously calculated safety checksum was not found.  
 An acceptance test is required as changes have been made to a safety parameter or the safety hardware.  
 Fault value (r0949, interpret decimal):  
 1: The safety logbook has identified that a functional safety checksum has changed. An acceptance test is required.  
 2: The safety logbook has identified that a hardware-related safety checksum has changed. An acceptance test is required.

**Remedy:** For fault value = 1:  
 - Carry out an acceptance test and generate an acceptance report.  
 For fault value = 2:  
 - Carry out the function checks for the modified hardware and generate an acceptance report.  
 Note:  
 The procedure when carrying out an acceptance test as well as an example of the acceptance report are provided in the following literature:  
 SINAMICS Function Manual Safety Integrated

**C01649 SI: Internal software error**

**Message class:** Hardware/software error (1)

12.3 Faults and alarms

---

**Message value:** Module: %1, line: %2  
**Variant:** S200 PN  
**Component:** Control Unit (CU)  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** An internal error has occurred in the Safety Integrated software.  
Note:  
This message results in an STO (Safe Torque Off) that cannot be acknowledged.  
Message value (r60049, interpret hexadecimal): Only for internal Siemens fault diagnostics.  
**Remedy:**  
- Carry out a POWER ON (switch-off/switch-on) for all components.  
- Re-commission the "Safety Integrated" function and carry out a POWER ON.  
- Upgrade firmware to later version.  
- Contact Technical Support.  
- Replace hardware component.

---

**F01650 SI: Acceptance test required**

**Message class:** Safety monitoring channel has identified an error (10)  
**Message value:** %1  
**Variant:** S200 PN  
**Component:** Control Unit (CU)  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The drive-integrated "Safety Integrated" function requires an acceptance test.  
Message value (r0949, interpret decimal):  
2003: Acceptance test is required as a safety parameter has been changed.  
**Remedy:** For message value = 2003:  
- Carry out an acceptance test and generate an acceptance report.  
The procedure when carrying out an acceptance test as well as an example of the acceptance report are provided in the product operating instructions.

---

**F01661 SI: Simulation of the safety inputs active**

**Message class:** General drive fault (19)  
**Message value:** Fault cause: %1 bin  
**Variant:** S200 PN  
**Component:** Control Unit (CU)  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The simulation of the digital inputs is active (p0795).  
It is not permissible that safety inputs are simulated.  
Fault value (r0949, interpret binary):  
The displayed bits indicate which digital inputs must not be simulated.  
**Remedy:**  
- Deactivate the simulation of the digital inputs for the safety inputs (p0795).  
- Acknowledge fault.

---

**C01668 SI: Checksum error safety monitoring functions**

**Message class:** Safety monitoring channel has identified an error (10)  
**Message value:** %1  
**Variant:** S200 PN  
**Component:** Control Unit (CU)  
**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The actual checksum calculated by the drive and entered in r10098 via the safety-relevant parameters does not match the reference checksum saved in p10099 at the last machine acceptance.  
Safety-relevant parameters have been changed or a fault is present.

**Note:**

This message results in an STO (Safe Torque Off).

Message value (r60049, only for internal Siemens diagnostics)

**Remedy:** - Carry out safety commissioning.  
- Carry out an acceptance test.

---

### **C01677 SI: Incorrect onboard F-I/O parameter value**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Parameter: %1, supplementary information: %2

**Variant:** S200 PN

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** The parameter cannot be parameterized with this value.

**Note:**

This message does not result in a safety stop response.

Message value (r60049, interpret decimal): yyyyxxxx dec:

yyyy = supplementary information

xxxx = parameter

yyyy = 0:

No additional information available.

xxxx = 10000 and

yyyy = F-DI number:

A non-existent F-DI was enabled.

xxxx = 10002:

The F-DI discrepancy time (p10002) is less than or equal to the SI monitoring clock cycle.

xxxx = 10017 and

yyyy = F-DI number:

The input filter (p10017) is less than or equal to (p10018 + 2ms) when simultaneously selecting "Self test using specified dark pulses" (p10041[y] = 1).

xxxx = 10018 and

yyyy = F-DI number:

Setting "F-DI self test length dark pulses" (p10018) is zero when simultaneously selecting "Self test using specified dark pulses" (p10041[y] = 1).

xxxx = 10041 and

yyyy = F-DI number:

An invalid value was set in "F-DI self test mode selection" (p10041[y]).

xxxx = 10071 and

yyyy = F-DI number:

An F-DI status r10071[y], which was not enabled in p10000, was set.

12.3 Faults and alarms

- Remedy:**
- Correct the parameter value.
  - For xxxx = 10000 and yyyy = F-DI number:
    - Correct "SI F-DI enable" (p10000).
  - For xxxx = 10002:
    - Set "SI F-DI switchover discrepancy time" (p10002) greater than the "SI monitoring clock cycle".
  - For xxxx = 10017 and yyyy = F-DI number:
    - Set "SI digital inputs input filter" (p10017) greater than (p10018 + 2 ms)
    - Change "SI F-DI self test mode selection" (p10041[y])
  - For xxxx = 10018 and yyyy = F-DI number:
    - Set "SI F-DI self test length dark pulses" (p10018) greater than zero.
    - Change p10041 [y] "SI F-DI self test mode selection".
  - For xxxx = 10041 and yyyy = F-DI number:
    - Change "SI F-DI self test mode selection" (p10041[y])
  - For xxxx = 10071 and yyyy = F-DI number:
    - Correct "SI F-DI enable" (p10000).

---

**C01680 SI: Checksum error safety monitoring functions**

- Message class:** Safety monitoring channel has identified an error (10)
- Message value:** %1
- Variant:** S200 PN
- Component:** Control Unit (CU)
- Response:** OFF2
- Acknowledgment:** IMMEDIATELY
- Cause:** The actual checksum over the safety-relevant parameters, calculated by the drive, does not match the reference checksum last saved for the last machine acceptance test.  
Safety-relevant parameters have been changed or a fault is present.  
Note:  
This message results in an STO (Safe Torque Off).  
Message value (r60049, only for internal Siemens diagnostics)
- Remedy:**
- Check the safety-relevant parameters and if required, correct.
  - Retentively save parameters.
  - Perform a POWER ON if safety parameters requiring a POWER ON have been modified.
  - Carry out an acceptance test.

---

**C01681 SI: Incorrect parameter value**

- Message class:** Error in the parameterization / configuration / commissioning procedure (18)
- Message value:** Parameter: %1, supplementary information: %2
- Variant:** S200 PN
- Component:** None
- Response:** OFF2
- Acknowledgment:** IMMEDIATELY
- Cause:** The parameter cannot be parameterized with this value.  
Note:  
This fault results in STO.  
Fault value (r60049, interpret decimal):  
yyyyxxxx dec: yyyy = supplementary information, xxxx = parameter  
yyyy = 0:  
No additional information available.  
xxxx = 10006 or 10022:  
An inadmissible signal source for the control via F-DI was set.

**Remedy:** Correct parameters:  
For xxxx = 10006 or 10022:  
- Set a valid signal source in pxxxx.

---

**C01682 SI: Monitoring function not supported**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Variant:** S200 PN

**Component:** None

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** At least one of the monitoring functions enabled in p9604 is not supported with this firmware version on this device.

Note:

The message value (r60049, interpret binary) indicates the bits of the monitoring functions, which form this firmware version on this device, are not supported. If several, non-supported monitoring functions are simultaneously enabled, then these are all displayed in the message value.

This message results in an STO (Safe Torque Off).

See also: p9604 (SI enable)

**Remedy:** Correct parameter p9604 so that monitoring functions only permitted for this firmware version and for this device are enabled.

See also: p9604 (SI enable)

---

**C01690 SI: Data backup problem for the NVRAM**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Variant:** S200 PN

**Component:** Control Unit (CU)

**Response:** OFF2

**Acknowledgment:** POWER ON

**Cause:** When saving parameters r9780, r9781 and r9782 (Safety logbook) says, an error has occurred in conjunction with the NVRAM.

Note:

This fault does not result in a safety stop response.

Fault value (r60049, interpret decimal):

1: There is no physical NVRAM in the drive.

2: There is no longer any free memory space in the NVRAM.

**Remedy:** For fault value = 1:

- Replace the hardware.

For fault value = 2:

- De-select functions that are not required and that take up memory space in the NVRAM.

- Contact Technical Support.

Note:

NVRAM: Non-Volatile Random Access Memory (non-volatile read and write memory)

---

**C01700 SI: STO (Safe Torque Off) initiated**

**Message class:** Safety monitoring channel has identified an error (10)

**Message value:** -

**Variant:** S200 PN

**Component:** None

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The drive is stopped using STO (Safe Torque Off).

Possible causes:

Subsequent response, following messages: C01706, C01714, C01715, C01716.

**Remedy:** Carry out diagnostics for the active messages (C01706, C01714, C01715, C01716).

---

**C01711 SI: SCF (Safety Channel Failure) initiated**

**Message class:** Safety monitoring channel has identified an error (10)

**Message value:** -

**Variant:** S200 PN

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** The drive has detected an error in a safe monitoring function and has initiated SCF (Safety Channel Failure).

Monitoring functions are no longer reliable. Safe operation not possible.

Possible causes:

Subsequent response, following messages: C01648, C01750, C01751, C01753, C01754, C01769.

Note:

This fault results in an SS1 (Safe Stop 1) and as a consequence STO (Safe Torque Off) is initiated.

**Remedy:** Carry out diagnostics for the active messages (C01648, C01750, C01751, C01753, C01754, C01769).

---

**C01717 SI: SLA limit exceeded**

**Message class:** Safety monitoring channel has identified an error (10)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** The acceleration limit for function SLA was exceeded. The drive is stopped as a result of the configured stop response (p9579).

Message value (r60049, interpret decimal):

0: The monitoring of the coarsely resolved acceleration has violated the acceleration limit.

1: The monitoring of the finely resolved acceleration and possibly filtered acceleration has violated the acceleration limit.

**Remedy:** - Check the traversing/motion program in the control.

- Check the acceleration limit for the SLA function and if required, adapt (p9578).

- Carry out a safe acknowledgment.

For message value = 0:

Analyze the causes using r9714[0] and r9714[3].

For message value = 1:

Analyze the causes using r9789[0], r9789[1] and r9789[2].

Note:

SI: Safety Integrated

SLA: Safely-Limited Acceleration

---

**C01770 SI: Fault of the failsafe inputs**

**Message class:** Safety monitoring channel has identified an error (10)

**Message value:** Fault cause: %1, F-DI number: %2

**Variant:** S200 PN

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Explanation of the message value:** For %1

Value	Cause	Remedy
1	Discrepancy error (state between two monitoring channels different for too long)	Check the F-DI wiring
2	Too many switching operations	Reduce the switching frequency
3	Test pulse error	Check the F-DI wiring
4	Internal software error	

**Cause:** The failsafe digital inputs (F-DI) have a fault condition.  
 Message value (r60049, interpret hexadecimal):  
 yyyyxxxx hex  
 xxxx: number of the failsafe digital input (F-DI).  
 yyyy: fault cause

Note:

If several faults occur consecutively, then this message is only signaled for the first fault that occurs.

**Remedy:**

- Check the wiring of the F-DI (contact problems).
- If the wiring is correct, and for example there is no wire breakage, then a check must be made as to whether the switching frequency at F-DI is too high and must therefore be reduced (switching pulses must have a longer time between them). The time interval between each signal edge at an F-DI must be at least equal to the discrepancy time before the input is switched again.

Note:

This message can be acknowledged via F-DI (safe acknowledgment).

Discrepancy errors of an F-DI can only be acknowledged if safe acknowledgment was carried out after the cause of the error was resolved (extended message acknowledgment, self acknowledgment). As long as safety acknowledgment was not carried out, the corresponding F-DI stays in the safe state internally.

A self acknowledgment for an F-DI can be realized using a positive edge at the corresponding F-DI.

Sets the discrepancy time for fast switching operations at the F-DIs:

For fast switching operations at the failsafe digital inputs (F-DI), it may be necessary to adapt the discrepancy time to the switching frequency:

- The period of a cyclic switching pulse must be less than half of the discrepancy time (if necessary, round down).
- The time between two fast switching pulses should be longer than the discrepancy time (if necessary, round up).
- The discrepancy time must be greater or equal to the SI monitoring clock cycle (it must always be rounded up or down to be an integer multiple of the SI monitoring clock cycle).

If an input filter has been parameterized (p10017 > 0), then the shortest possible discrepancy time is directly specified by the input filter.

- The period of a cyclic switching pulse must be less than half of the discrepancy time p10017 (if necessary, round down).
- The time between two fast switching pulses should be longer than the discrepancy time+p10017 (if necessary, round up).
- The discrepancy time must be greater or equal to the SI monitoring clock cycle. The input filter must always be set less than the discrepancy time.

Self test with specified dark pulses (p10041 > 0) for long cable lengths:

- Increase the dark pulse length (p10018 or p10019).
- Increase the input filter (p10017).

Note:

F-DI: Failsafe Digital Input

---

**C01793 SI: Internal safety message buffer is full**

**Message class:** Safety monitoring channel has identified an error (10)

**Message value:** %1

**Variant:** S200 PN

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** Too many safety messages have occurred within a short time so that some have not been able to be displayed.

**Remedy:** No remedy required

---

**F01800 Internal communications faulted**

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:**

**Remedy:** Replace the component involved.

---

**A01900 PN: Configuration telegram error**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** A controller attempts to establish a connection using an incorrect configuring telegram.

Alarm value (r2124, interpret decimal):

2:

Too many PZD data words for output or input. The number of possible PZD is specified by the number of indices in r2050/r2053.

3:

Uneven number of bytes for input or output.

4:

Setting data for synchronization not accepted. For more information, see A01902.

211:

Unknown parameterizing block.

Additional values:

Only for internal Siemens troubleshooting.

**Remedy:** Check the bus configuration on the controller and device sides.

---

**A01902 PN: Isochronous operation parameterization not permissible**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE



**Cause:** Parameterization for isochronous operation is not permissible.  
Alarm value (r2124, interpret decimal):  
0: Bus cycle time  $T_{dp} < 0.5$  ms.  
1: Bus cycle time  $T_{dp} > 32$  ms.  
2: Bus cycle time  $T_{dp}$  is not an integer multiple of the current controller sampling time.  
3: Instant of the actual value sensing  $T_i > \text{Bus cycle time } T_{dp}$  or  $T_i = 0$ .  
4: Instant of the actual value sensing  $T_i$  is not an integer multiple of the current controller sampling time.  
5: Instant of the setpoint acceptance  $T_o \geq \text{Bus cycle time } T_{dp}$  or  $T_o = 0$ .  
6: Instant of the setpoint acceptance  $T_o$  is not an integer multiple of the current controller sampling time.  
7: Controller application cycle time  $T_{mapc}$  is not an integer multiple of the speed controller sampling time.  
8: Bus reserve bus cycle time  $T_{dp}$  - Data exchange time  $T_{dx}$  less than two current controller sampling times.  
10: Instant of the setpoint acceptance  $T_o \leq \text{data exchange time } T_{dx} + \text{current controller sampling time}$   
11: Controller application cycle time  $T_{mapc} > 14 \times T_{dp}$  or  $T_{mapc} = 0$ .  
12: PLL tolerance window  $T_{pll\_w} > T_{pll\_w\_max}$ .  
13: Bus cycle time  $T_{dp}$  is not a multiple of the speed controller clock cycle.

**Remedy:** - Adapt the bus parameterization  $T_{dp}$ ,  $T_i$ ,  $T_o$ .  
- Adapt the sampling time for the current controller or speed controller.  
For alarm value = 10:  
- Reduce  $T_{dx}$  by using fewer bus participants or shorter telegrams.  
Note:  
PB: PROFIBUS  
PN: PROFINET

---

**A01904 PN: Controller setting of the PZD telegram rejected**

**Message class:** Communication error to the higher-level control system (9)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE

**Cause:** A controller attempts to set a PZD telegram. The setting is not applied.  
Alarm value (r2124, interpret decimal):  
3: Controllers have no function rights for making changes.  
4: Telegram cannot be set as a result of the drive configuration.  
See also: r0922 (PROFIdrive PZD telegram selection)

**Remedy:** Check and align the telegram settings in the drive project and in the controller.

---

**A01905 PN: Controller setting to activate the channel diagnostics rejected**

**Message class:** Communication error to the higher-level control system (9)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE

**Cause:** A controller attempted to change the activation of the channel diagnostics. The setting is not applied as the controller does not have the function rights to make a change.  
Alarm value (r2124, interpret decimal):  
1: Channel diagnostics are activated. Controller attempts to deactivate them.  
2: Channel diagnostics are not activated. Controller attempts to activate them.

**Remedy:** Activate channel diagnostics in the bus configuration and check and align function rights in the drive.

**F01910      Fieldbus: setpoint timeout****Message class:** Communication error to the higher-level control system (9)**Message value:** -**Component:** None**Response:** OFF3**Acknowledgment:** IMMEDIATELY

**Cause:** The reception of setpoints from the fieldbus interface (PROFINET) is interrupted.

- Bus connection interrupted.
- Controller switched off.
- Controller set into the STOP state.

**Remedy:** Restore the bus connection and set the controller to RUN.**F01911      PN: Isochronous operation, clock cycle failure****Message class:** Communication error to the higher-level control system (9)**Message value:** -**Component:** None**Response:** OFF1**Acknowledgment:** IMMEDIATELY

**Cause:** The telegram to synchronize the clock cycles has failed for several bus clock cycles or in several bus clock cycles has consecutively violated the specified time grid (see bus cycle time, Tdp and Tplw).

**Remedy:**

- Check the physical bus configuration (cable, connector, terminating resistor, shielding, etc.).
- Check whether communication was briefly or permanently interrupted.
- Check the utilization level of the bus and controller (e.g. bus cycle time Tdp was set too short).

Note:

PN: PROFINET

**F01912      PN: Isochronous operation sign-of-life missing****Message class:** Communication error to the higher-level control system (9)**Message value:** -**Component:** None**Response:** OFF1**Acknowledgment:** IMMEDIATELY

**Cause:** The maximum permissible number of errors in the controller sign-of-life (isochronous operation) has been exceeded in cyclic operation.

**Remedy:**

- Check the physical bus configuration (cables, connectors, etc.).
- Check whether the controller correctly sends the sign-of-life (e.g. create a trace with STW2.12 ... STW2.15 and trigger signal ZSW1.3).
- Check the permissible telegram failure rate (p0925).
- Check the utilization level of the bus and controller (e.g. bus cycle time Tdp was set too short).

Note:

PN: PROFINET

**F01916      Internal communications error****Message class:** Communication error to the higher-level control system (9)**Message value:** -**Component:** None**Response:** OFF1**Acknowledgment:** IMMEDIATELY**Cause:** An internal Ethernet communications error has occurred.

**Remedy:**

- Carry out a POWER ON (switch-off/switch-on) for all components.
- Upgrade firmware to later version.
- Contact Technical Support.

---

**A01932 PN: Clock cycle synchronization missing for DSC**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** There is no clock synchronization or clock synchronous sign of life and DSC is selected.

Note:

DSC: Dynamic Servo Control

See also: r0922 (PROFIdrive PZD telegram selection)

**Remedy:** Set clock synchronization across the bus configuration and transfer clock synchronous sign-of-life.

---

**A01940 PB/PN: clock cycle synchronism not reached**

**Message class:** Communication error to the higher-level control system (9)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The bus is in the data exchange state and clock synchronous operation has been selected using the parameterizing telegram. Synchronization with the clock cycle specified by the controller was still not able to be performed.

- The controller does not send an isochronous telegram, although isochronous operation was selected when configuring the bus.

- The controller uses another isochronous bus clock cycle than was transferred to the device in the parameterizing telegram.

**Remedy:** - Check the controller application and bus configuration.

- Check the consistency between the clock cycle input when configuring the device and clock cycle setting at the controller.

Note:

PB: PROFIBUS

PN: PROFINET

---

**A01941 PN: Clock cycle signal missing when the bus is being established**

**Message class:** Communication error to the higher-level control system (9)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The bus is in the data exchange state and clock synchronous operation has been selected using the parameterizing telegram. The synchronization telegram is not received.

**Remedy:** Check the controller application and bus configuration.

Note:

PN: PROFINET

---

**A01943 PN: Clock cycle signal error when the bus is being established**

**Message class:** Communication error to the higher-level control system (9)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The bus is in the data exchange state and clock synchronous operation has been selected using the parameterizing telegram.  
The synchronization telegram is irregularly received.  
- The controller sends an irregular synchronization telegram.  
- The controller uses another isochronous bus clock cycle than was transferred to the device in the parameterizing telegram.

**Remedy:** - Check the controller application and bus configuration.  
- Check the consistency between the clock cycle input when configuring the device and clock cycle setting at the controller.

**Note:**  
PN: PROFINET

---

**A01944 PN: Sign-of-life synchronism not reached**

**Message class:** Communication error to the higher-level control system (9)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The bus is in the data exchange state and clock synchronous operation has been selected using the parameterizing telegram.  
Synchronization with the controller sign-of-life (STW2.12 ... STW2.15) could not be completed because the sign-of-life changes differently to how it was configured in the Tmapc time grid.

**Remedy:** - Ensure that the controller correctly increments the sign-of-life in the controller application clock cycle Tmapc.

**Note:**  
PN: PROFINET

---

**F01950 PN: Isochronous operation, synchronization unsuccessful**

**Message class:** Communication error to the higher-level control system (9)

**Message value:** -

**Component:** None

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** Synchronization of the internal clock cycle to the controller clock cycle has failed. The internal clock cycle exhibits an unexpected shift.

**Remedy:** Only for internal Siemens troubleshooting.

**Note:**  
PN: PROFINET

---

**A01980 PN: cyclic connection interrupted**

**Message class:** Communication error to the higher-level control system (9)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The cyclic connection to the PROFINET controller is interrupted.  
See also: r8936 (PN cyclic connection state)

**Remedy:** Establish the PROFINET connection and activate the PROFINET controller in the cyclic mode.  
Check parameters "Name of Station" and "IP of Station".

---

**A01981 PN: Maximum number of controllers exceeded**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Info 1: %1, Info 2: %2  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** A controller attempts to establish a connection to the drive, and as a consequence exceeds the permitted number of PROFINET connections.  
The alarm is automatically withdrawn after approx. 30 seconds.  
Alarm value (r2124, interpret hexadecimal):  
yyyyxxxx hex: yyyy = info. 1, xxxx = info. 2  
Info 1 = 0: number of RT connections exceeded  
Info 1 > 0: number of IRT connections exceeded  
Info 2: permitted number of connections  
**Remedy:** Check the configuration of the PROFINET controllers.

---

**A01989 PN: internal cyclic data transfer error**

**Message class:** Communication error to the higher-level control system (9)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The cyclic actual values and/or setpoints were not transferred within the specified times.  
Alarm value (r2124, interpret hexadecimal):  
Only for internal Siemens troubleshooting.  
**Remedy:** Correctly set T\_io\_input or T\_io\_output.

---

**A02000 Function generator: Start not possible**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The function generator has already been started.  
**Remedy:** Stop the function generator and restart again if necessary.  
Note:  
The alarm is reset as follows:  
- Remove the cause of this alarm.  
- Restart the function generator.

---

**A02006 Function generator: No drive specified for connection**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** No drive specified for connection was specified.  
**Remedy:** At least one drive to be connected must be specified.  
Note:  
The alarm is reset as follows:  
- Remove the cause of this alarm.  
- Restart the function generator.

---

**A02010      Function generator: Speed setpoint from the drive is not zero**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The speed setpoint of a drive selected for connection is greater than the value for the standstill detection set using p1226.

**Remedy:** For all of the drives specified for connection, set the speed setpoints to zero.

Note:

The alarm is reset as follows:

- Remove the cause of this alarm.

- Restart the function generator.

---

**A02020      Function generator: Parameter cannot be changed**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** This parameter setting cannot be changed when the function generator is active.

**Remedy:** - Stop the function generator before parameterizing.

- Possibly start the function generator.

Note:

The alarm is reset as follows:

- Remove the cause of this alarm.

- Restart the function generator.

---

**A02026      Function generator: Pulse width too high**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The selected pulse width is too high.

The pulse width must be less than the period duration.

**Remedy:** Reduce pulse width.

Note:

The alarm is reset as follows:

- Remove the cause of this alarm.

- Restart the function generator.

---

**A02030      Function generator: Physical address equals zero**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The specified physical address is zero.

**Remedy:** Set a physical address with a value other than zero.  
Note:  
The alarm is reset as follows:  
- Remove the cause of this alarm.  
- Restart the function generator.

---

**A02040 Function generator: Illegal value for offset**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The value for the offset is higher than the value for the upper limit or lower than the value for the lower limit.  
**Remedy:** Adjust the offset value accordingly.  
Note:  
The alarm is reset as follows:  
- Remove the cause of this alarm.  
- Restart the function generator.

---

**A02041 Function generator: Illegal value for bandwidth**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The bandwidth referred to the time slice clock cycle of the function generator has either been set too low or too high. Depending on the time slice clock cycle, the bandwidth is defined as follows:  
 $\text{Bandwidth\_max} = 1 / (2 \times \text{time slice clock cycle})$   
 $\text{Bandwidth\_min} = \text{Bandwidth\_max} / 100000$   
Example:  
Assumption: Time slice clock cycle = 125  $\mu\text{s}$   
-->  $\text{Bandwidth\_max} = 1 / (2 \times 125 \mu\text{s}) = 4000 \text{ Hz}$   
-->  $\text{Bandwidth\_min} = 4000 \text{ Hz} / 100000 = 0.04 \text{ Hz}$   
**Remedy:** Check the value for the bandwidth and adapt accordingly.  
Note:  
The alarm is reset as follows:  
- Remove the cause of this alarm.  
- Restart the function generator.

---

**A02047 Function generator: Time slice clock cycle invalid**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The time slice clock cycle selected does not match any of the existing time slices.

12.3 Faults and alarms

**Remedy:** Enter an existing time slice clock cycle. The fastest cycle time can be read out using the commissioning tool.  
**Note:**  
 The alarm is reset as follows:  
 - Remove the cause of this alarm.  
 - Restart the function generator.

**A02050 Trace: Start not possible**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The trace has already been started.  
**Remedy:** Stop the trace and, if necessary, start again.

**A02051 Trace: recording not possible as a result of know-how protection**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** initiating recorder: %1, parameter %2  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Explanation of the message value:** For %1

Value	Cause	Remedy
1	Recorder 0	
2	Recorder 1	
3	Recorders 0 and 1	

**Cause:** TRACE recording is not possible as at least one signal or trigger signal being used is under know-how protection.  
 Alarm value (r2124, interpret hexadecimal):  
 bbbbaaaa hex:  
 aaaa = 1: recorder 0  
 aaaa = 2: recorder 1  
 aaaa = 3: recorders 0 and 1  
 bbbb = parameter number (hexadecimal), that was not able to be written to.  
**Remedy:**  
 - Temporarily activate or deactivate know-how protection (p7766).  
 - Include the signal in the OEM exception list (p7763, p7764).  
 - Where relevant do not record the signal.

**A02055 Trace: Recording time too short**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The trace duration is too short.  
 The minimum is twice the value of the trace clock cycle.  
**Remedy:** Check the selected recording time and, if necessary, adjust.



---

**A02056 Trace: Recording cycle too short**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The selected recording clock cycle is shorter than the selected basic clock cycle 0.  
**Remedy:** Increase the value for the trace cycle. The fastest cycle time can be read out using the commissioning tool.

---

**A02057 Trace: Time slice clock cycle invalid**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The time slice clock cycle selected does not match any of the existing time slices.  
**Remedy:** Enter an existing time slice clock cycle. The fastest cycle time can be read out using the commissioning tool.

---

**A02059 Trace: Time slice clock cycle for 2 x 8 recording channels not valid**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The selected time slice clock cycle cannot be used for more than 4 recording channels.  
**Remedy:** Enter the clock cycle of an existing time slice with a cycle time  $\geq 4$  ms or reduce the number of recording channels to 4 per trace.  
The fastest cycle time can be read out using the commissioning tool.

---

**A02060 Trace: Signal to be traced missing**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** - A signal to be traced was not specified.  
- The specified signals are not valid.  
**Remedy:** - Specify the signal to be traced.  
- Check whether the relevant signal can be traced.

---

**A02062 Trace: Invalid trigger signal**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE

12.3 Faults and alarms

**Cause:** - A trigger signal was not specified.  
- The specified signal does not exist.  
- The specified signal is not a fixed-point signal.  
- The specified signal cannot be used as a trigger signal for the trace.

**Remedy:** Specify a valid trigger signal.

---

**A02063 Trace: Invalid data type**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The specified data type to select a signal using a physical address is invalid.  
**Remedy:** Use a valid data type.

---

**A02070 Trace: Parameter cannot be changed**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The trace parameter settings cannot be changed when the trace is active.  
**Remedy:** - Stop the trace before parameterization.  
- If required, start the trace.

---

**A02075 Trace: Pretrigger time too long**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The selected pretrigger time must be shorter than the trace time.  
**Remedy:** Check the pretrigger time setting and change if necessary.

---

**F02080 Trace: Parameterization deleted due to unit changeover**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The trace parameterization in the drive unit was deleted due to a unit changeover or a change in the reference parameters.  
**Remedy:** Restart trace.

---

**A02085 Message function: Parameterization error**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** Parameter: %1, index:%2  
**Component:** Power Unit  
**Response:** NONE

**Acknowledgment:** NONE

**Cause:** A parameterization error was identified when starting the variable message function.  
Alarm value (r2124, interpret decimal):  
yyxxxx dec: yy = index, xxxx = parameter

**Remedy:** Correct the parameter and restart.

Note:

The alarm is automatically withdrawn when stopping, or when successfully starting the variable message function.

---

**A02096 MTrace 0: cannot be saved**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** It is not possible to save the measurement results of a multiple trace on the memory card (trace recorder 0).  
A multiple trace is not started or is canceled.  
Alarm value (r2124, interpret decimal):  
1: Memory card cannot be accessed.  
- Card is not inserted or is blocked by a mounted USB drive.  
3: Data save operation too slow.  
- A second trace has been completed before the measurement results of the first trace were able to be saved.  
- Writing the measurement result files to the card is blocked by the parameter save.  
4: Data save operation canceled.  
- For instance, the file required for the data save operation was not able to be found.

**Remedy:** - Insert or remove the memory card.  
- Use a larger memory card.  
- Configure a longer trace time or use an endless trace.  
- Avoid saving parameters while a multiple trace is running.  
- Check whether other functions are presently accessing measurement result files.

---

**A02098 MTrace 1: cannot be saved**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** It is not possible to save the measurement results of a multiple trace on the memory card (trace recorder 1).  
A multiple trace is not started or is canceled.  
Alarm value (r2124, interpret decimal):  
1: Memory card cannot be accessed.  
- Card is not inserted or is blocked by a mounted USB drive.  
3: Data save operation too slow.  
- A second trace has been completed before the measurement results of the first trace were able to be saved.  
- Writing the measurement result files to the card is blocked by the parameter save.  
4: Data save operation canceled.  
- For instance, the file required for the data save operation was not able to be found.

**Remedy:** - Insert or remove the memory card.  
- Use a larger memory card.  
- Configure a longer trace time or use an endless trace.  
- Avoid saving parameters while a multiple trace is running.  
- Check whether other functions are presently accessing measurement result files.

**A02099 Trace: Insufficient Control Unit memory****Message class:** Error in the parameterization / configuration / commissioning procedure (18)**Message value:** -**Component:** None**Response:** NONE**Acknowledgment:** NONE**Cause:** The memory space still available on the Control Unit is no longer sufficient for the trace function.**Remedy:** Reduce the memory required, e.g. as follows:

- Reduce the trace time.
- Increase the trace clock cycle.
- Reduce the number of signals to be traced.

**A02150 TEC: Technology Extension cannot be loaded****Message class:** Hardware/software error (1)**Message value:** %1**Component:** None**Response:** NONE**Acknowledgment:** NONE**Cause:** The system was not able to load a Technology Extension.

Alarm value (r2124, interpret hexadecimal):

10 hex (16 dec):

The interface version in the DCB user library is not compatible to the DCC standard library that has been loaded.

12 hex (18 dec):

A technology package was not able to be downloaded to a Control Unit because the warm restart necessary was not able to be performed.

Only for internal Siemens troubleshooting.

**Remedy:** - Carry out a POWER ON (switch-off/switch-on) for all components.

- Upgrade firmware to later version.

- Contact Technical Support.

For alarm value = 10 hex (16 dec):

Load a compatible DCB user library (compatible to the interface of the DCC standard library).

For alarm value = 12 hex (18 dec):

Carry out a POWER ON (switch-off/switch-on) for all components.

Note:

DCB: Drive Control Block

DCC: Drive Control Chart

TEC: Technology Extension

**F02151 TEC: internal software error****Message class:** Hardware/software error (1)**Message value:** %1**Component:** None**Response:** OFF2**Acknowledgment:** IMMEDIATELY**Cause:** An internal software error has occurred within a Technology Extension.

Fault value (r0949, interpret hexadecimal):

Only for internal Siemens troubleshooting.

**Remedy:**

- Carry out a POWER ON (switch-off/switch-on) for all components.
- Upgrade firmware to later version.
- Contact Technical Support.
- Replace the Control Unit.

Note:  
TEC: Technology Extension

---

**F02152 TEC: insufficient memory**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** None

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** The functionality on this Control Unit is too extensive (e.g. too many drives, functions, data sets, Technology Extensions, blocks, etc).

Fault value (r0949, interpret decimal):

Only for internal Siemens troubleshooting.

**Remedy:**

- Change the configuration on this Control Unit, e.g.
  - Use fewer axes
  - Reduce the number of configurable functions
  - Use fewer data sets
  - Reduce Technology Extensions and blocks
- Use an additional Control Unit.

---

**F02153 TEC: technology function does not exist**

**Message class:** Hardware/software error (1)

**Message value:** -

**Component:** None

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** A technology function (e.g. Technology Extension, DCB library) does not exist on the drive device.

When configuring, a technology function is activated, which does not exist on the drive device. This can occur when downloading a project or when powering up.

**Remedy:**

- Load the required technology function to the drive device.
- If required, deactivate the technology function not required in the configuration.

Note:

DCB: Drive Control Block

TEC: Technology Extension

---

**F03001 NVRAM checksum incorrect**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** A checksum error occurred when evaluating the non-volatile data (NVRAM) on the converter. The NVRAM data affected was deleted.

**Remedy:** Carry out a POWER ON (switch-off/switch-on) for all components.

---

**A03506      24 V power supply missing**

**Message class:** Supply voltage fault (undervoltage) (3)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The 24 V power supply for the digital outputs (X124) is missing.  
**Remedy:** Check the terminals for the power supply voltage (X124, L1+, M).

---

**F03590      TM: Module not ready**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** Terminal Module (TM)  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The Terminal Module involved does not send a ready signal and no valid cyclic data.  
Fault value (r0949, interpret decimal):  
Drive object number of the Terminal Module involved.  
**Remedy:** - Check the 24 V power supply.  
- Check the DRIVE-CLiQ wiring.

---

**F05055      Parallel connection: Power units with illegal code numbers**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** Parameter: %1  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The code numbers of the power units do not match.  
Fault value (r0949, interpret decimal):  
Parameter in which the first different power unit code number was detected.  
**Remedy:** Use power units with the same code number.  
For parallel circuit configurations, only power units with identical power unit data may be used.

---

**F05056      Parallel circuit: Power unit EEPROM versions differ**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** Parameter: %1  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The EEPROM versions of the power units do not match.  
Fault value (r0949, interpret decimal):  
Parameter in which the first different version number was detected.  
**Remedy:** Use power units with the same EEPROM version.  
Note:  
For parallel circuit configurations, only power units with identical EEPROM versions may be used.

---

**F05057      Parallel circuit: Power unit firmware versions differ**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** Parameter: %1

**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The firmware versions of the power units connected in parallel do not match.  
Fault value (r0949, interpret decimal):  
Parameter in which the first different version number was detected.  
**Remedy:** Use power units with the same firmware version.  
For parallel circuit configurations, only power units with identical firmware versions may be used.

---

**F05058 Parallel circuit: VSM EEPROM versions differ**

**Message class:** General drive fault (19)  
**Message value:** Parameter: %1  
**Component:** Voltage Sensing Module (VSM)  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The EEPROM versions of the Voltage Sensing Modules (VSM) do not match.  
Fault value (r0949, interpret decimal):  
Parameter in which the first different version number was detected.  
**Remedy:** For parallel circuit configurations, only Voltage Sensing Modules (VSM) with identical EEPROM versions may be used.

---

**F05059 Parallel circuit: VSM firmware versions differ**

**Message class:** General drive fault (19)  
**Message value:** Parameter: %1  
**Component:** Voltage Sensing Module (VSM)  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The firmware versions of the Voltage Sensing Module (VSM) do not match.  
Fault value (r0949, interpret decimal):  
Parameter in which the first different version number was detected.  
**Remedy:** For parallel circuit configurations, only Voltage Sensing Modules (VSM) with identical firmware versions may be used.

---

**F05060 Parallel circuit: Power unit firmware version does not match**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** Parameter: %1  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** Firmware from version V02.30.01.00 is required when connecting the power units in parallel.  
**Remedy:** Update the firmware of the power units (at least V02.30.01.00).

---

**F05068 Parallel connection: AIM EEPROM versions different**

**Message class:** General drive fault (19)  
**Message value:** Parameter: %1  
**Component:** -  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The EEPROM versions of the Active Interface Module (AIM) do not match.  
Fault value (r0949, interpret decimal):  
Parameter in which the first different version number was detected.

**Remedy:** For parallel connections, only Active Interface Modules (AIM) with identical EEPROM versions may be used.

---

**F05069 Parallel connection: AIM firmware versions different**

**Message class:** General drive fault (19)

**Message value:** Parameter: %1

**Component:** -

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** The firmware versions of the Active Interface Module (AIM) do not match.  
Fault value (r0949, interpret decimal):  
Parameter in which the first different version number was detected.

**Remedy:** For parallel connections, only Active Interface Modules (AIM) with identical firmware versions may be used.

---

**F06310 Supply voltage (p0210) incorrectly parameterized**

**Message class:** Network fault (2)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** For AC/AC drive units, the measured DC link voltage lies outside the tolerance range after precharging has been completed.  
The following applies for the tolerance range:  $1.16 * p0210 < r0070 < 1.6 * p0210$   
Note:  
The fault can only be acknowledged when the drive is switched off.  
See also: p0210 (Device supply voltage)

**Remedy:** - Check the parameterized supply voltage and if required change (p0210).  
- Check the line voltage.  
See also: p0210 (Device supply voltage)

---

**F07011 Drive: Motor overtemperature**

**Message class:** Motor overload (8)

**Message value:** %1

**Component:** Motor

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The calculated motor temperature is too high.

Possible causes:

- Motor overloaded.
- Motor ambient temperature too high.
- Sensor wire breakage.

Fault value (r0949, interpret decimal):

200:

Motor temperature model 1 (I2t): temperature too high.

300:

Motor temperature model 3: after the monitoring time has expired, the temperature is still higher than the alarm threshold.

301:

Motor temperature model 3: temperature is too high, or the model has not been parameterized.

302:

Motor temperature model 3: Encoder temperature is not within the valid range.

400:

Additional motor overload protection: the load is too high.

---



- Remedy:**
- Reduce the motor load.
  - Check the ambient temperature and the motor ventilation.
  - Check the wiring and temperature sensor connection.
  - Check monitoring limits.
  - Check activation of the additional motor overload protection (5375).

---

**A07012 Drive: Motor temperature model overtemperature**

**Message class:** Motor overload (8)

**Message value:** %1

**Component:** Motor

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** Motor temperature model 1/3 or the additional motor overload protection identified that the alarm threshold was exceeded.  
Hysteresis:2K  
Alarm value (r2124, interpret decimal):  
200:  
Motor temperature model 1 (I2t): temperature too high.  
300:  
Motor temperature model 3: temperature too high.  
400:  
Additional motor overload protection: the load is too high. If the load remains at this level, the drive is shut down with fault F07011.  
See also: r0034, p0613

- Remedy:**
- Check the motor load and if required, reduce.
  - Check the motor ambient temperature.
  - Check activation of the additional motor overload protection (p5375).
- See also: r0034 (Motor utilization thermal)

---

**F07082 Macro: Execution not possible**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Fault cause: %1, supplementary information: %2, preliminary parameter number: %3

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

12.3 Faults and alarms

---

**Cause:** The macro cannot be executed.  
Fault value (r0949, interpret hexadecimal):  
ccccbbaa hex:  
cccc = preliminary parameter number, bb = supplementary information, aa = fault cause  
Fault causes for the trigger parameter itself:  
19: Called file is not valid for the trigger parameter.  
20: Called file is not valid for parameter 15.  
21: Called file is not valid for parameter 700.  
22: Called file is not valid for parameter 1000.  
23: Called file is not valid for parameter 1500.  
24: Data type of a TAG is incorrect (e.g. Index, number or bit is not U16).  
Fault causes for the parameters to be set:  
25: Error level has an undefined value.  
26: Mode has an undefined value.  
27: A value was entered as string in the tag value that is not "DEFAULT".  
31: Entered drive object type unknown.  
32: A device was not able to be found for the determined drive object number.  
34: A trigger parameter was recursively called.  
35: It is not permissible to write to the parameter via macro.  
36: Check, writing to a parameter unsuccessful, parameter can only be read, not available, incorrect data type, value range or assignment incorrect.  
37: Source parameter for a signal interconnection was not able to be determined.  
38: An index was set for a non-indexed (or CDS-dependent) parameter.  
39: No index was set for an indexed parameter.  
41: A bit operation is only permissible for parameters with the parameter format DISPLAY\_BIN.  
42: A value not equal to 0 or 1 was set for a bit operation.  
43: Reading the parameter to be changed by the bit operation was unsuccessful.  
51: Factory setting for DEVICE may only be executed on the DEVICE.  
61: The setting of a value was unsuccessful.

**Remedy:** - Check the parameter involved.  
- Check the macro file and signal interconnection.

---

**F07083      Template: ACX file not found**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** Parameter: %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The template to be executed was not able to be found.  
Fault value (r0949, interpret decimal):  
Parameter number with which the execution was started.  
**Remedy:** - Check whether the corresponding template number is available.

---

**F07084      Macro: Condition for WaitUntil not fulfilled**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** Parameter: %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY

**Cause:** The WaitUntil condition set in the macro was not fulfilled in a certain number of attempts.  
Fault value (r0949, interpret decimal):  
Parameter number for which the condition was set.

**Remedy:** Check and correct the conditions for the WaitUntil loop.

---

**F07085 Drive: Open-loop/closed-loop control parameters changed**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Parameter: %1

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** Open-loop/closed-loop control parameters have had to be changed.

Possible causes:

1. As a result of other parameters, they have exceeded the dynamic limits.
2. They cannot be used due to the fact that the hardware detected not having certain features.
3. The value is estimated as the thermal time constant is missing.
4. Motor temperature model 1 is activated as thermal motor protection is missing.

See also: p1082 (Maximum speed)

**Remedy:** Not necessary.

It is not necessary to change the parameters as they have already been correctly limited.

---

**F07086 Units changeover: Parameter limit violation due to reference value change**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Parameter: %1

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** A reference parameter was changed in the system. This resulted in the fact that for the parameters involved, the selected value was not able to be written in the per unit notation.

The values of the parameters were set to the corresponding violated minimum limit/maximum limit or to the factory setting.  
Possible causes:

- The steady-state minimum limit/maximum limit or that defined in the application was violated.

Fault value (r0949, parameter):

Diagnostics parameter to display the parameters that were not able to be re-calculated.

See also: p0304, p0305, p2000, p2002, p2003

**Remedy:** Check the adapted parameter value and if required correct.

---

**F07088 Units changeover: Parameter limit violation due to units changeover**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Parameter: %1

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

12.3 Faults and alarms

---

**Cause:** A changeover of units was initiated. This resulted in a violation of a parameter limit  
Possible causes for the violation of a parameter limit:  
- When rounding off a parameter corresponding to its decimal places, the steady-state minimum limit or maximum limit was violated.  
- Inaccuracies for the data type "FloatingPoint".  
In these cases, when the minimum limit is violated then the parameter value is rounded up and when the maximum limited is violated the parameter value is rounded down.  
Fault value (r0949, interpret decimal).

**Remedy:** Check the adapted parameter values and if required correct.

---

**A07089 Unit switchover: Function activation is blocked because the units have been switched over**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** An attempt was made to activate a function. This is not permissible if the units have already been changed over.  
**Remedy:** Restore units that have been changed over to the factory setting.

---

**F07090 Drive: Upper torque limit less than the lower torque limit**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The upper torque limit is lower than the lower torque limit.  
**Remedy:** When setting the torque limits via telegram 750, the positive torque limit must be  $\geq$  the negative torque.

---

**A07091 Drive: determined current controller dynamic response invalid**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** When One Button Tuning is activated (p5300 = 1), the current controller is measured after the pulses have been enabled. Evaluation has indicated that the current control loop was not appropriately set.  
Possible causes:  
- Incorrectly set current controller.  
- PRBS amplitude set too high (p5296).  
Alarm value (r2124, interpret hexadecimal):  
1: Dynamic response too low.  
2: Current controller unstable.  
Note:  
PRBS: Pseudo Random Binary Signal (binary noise)  
**Remedy:** - The measurement can be repeated with a smaller excitation amplitude (p5296).

---

**A07092 Drive: moment of inertia estimator still not ready**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** Control Unit (CU)

**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The moment of inertia estimator has still not determined any valid values.  
The acceleration cannot be calculated.  
The moment of inertia estimator has stabilized, if the frictional values as well as the moment of inertia were determined and the corresponding status signal is set.  
**Remedy:** Traverse the axis until the moment of inertia estimator has stabilized.  
This alarm is automatically withdrawn after the moment of inertia estimator has stabilized.

---

### F07093 Drive: Test signal error

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** Control Unit (CU)

**Response:** OFF3

**Acknowledgment:** IMMEDIATELY

**Cause:** An error was identified when executing the "Test signal" function.  
The function was not executed or was canceled.  
Fault value (r0949, interpret decimal):  
1: No distance limit has been defined (p5308 = 0).  
2: The moment of inertia estimator has not stabilized in the parameterized time (p5309).  
3: The parameterized distance (p5308) was exceeded.  
4: No motor encoder parameterized (closed-loop speed control without encoder).  
6: Pulse enable was withdrawn while traversing.  
7: speed setpoint not equal to zero.  
See also: p5308, p5309

**Remedy:** For fault value = 1:  
- Define distance limiting (p5308).  
For fault value = 2:  
- Increase the duration, distance limit or speed limit (p5309, p5308, p1082, p1083, p1086).  
For fault value = 3:  
- Check distance limiting (p5308).  
For fault value = 4:  
- Configure speed control with encoder.  
For fault value = 6:  
- Keep the drive switched on until the "Test signal" function has been completely exited.  
For fault value = 7:  
- Set the speed setpoint to zero. It is possible that the setpoint was specified from the control panel.

---

### F07094 General parameter limit violation

**Message class:** Hardware/software error (1)

**Message value:** Parameter: %1

**Component:** None

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** As a result of the violation of a parameter limit, the parameter value was automatically corrected.  
Minimum limit violated --> parameter is set to the minimum value.  
Maximum limit violated --> parameter is set to the maximum value.  
Alarm value (r2124, interpret decimal):  
Parameter number, whose value had to be adapted.

**Remedy:** Check the adapted parameter values and if required correct.

**A07095 Drive: One Button Tuning activated****Message class:** Error in the parameterization / configuration / commissioning procedure (18)**Message value:** -**Component:** None**Response:** NONE**Acknowledgment:** NONE

**Cause:** The One Button Tuning function is active.  
 One Button Tuning is performed at the next switch-on command.  
 See also: p5300 (Autotuning selection)

**Remedy:** Not necessary.  
 The alarm is automatically withdrawn after One Button Tuning has been exited (p5300 = 0).

**F07097 Drive: Test signal error distance limiting****Message class:** Error in the parameterization / configuration / commissioning procedure (18)**Message value:** Fault cause: %1, traversing distance: %2**Component:** Control Unit (CU)**Response:** OFF3**Acknowledgment:** IMMEDIATELY

**Cause:** An error was identified when executing function "Test signal" or One Button Tuning selection (p5300 = 1).  
 The function was not executed or was canceled.  
 Fault value (r0949, interpret decimal):  
 yyyyxxxx hex: yyyy = fault cause, xxxx = traversing distance.  
 See also: p5308, p5309

**Remedy:**

- Enter the traversing path in parameter p5308 - or deselect the function involved in p5301.
- For fault cause = 1, 2, shorter traversing paths may be possible.
- For fault cause = 1:
  - Deselect bit 0 and bit 1 in parameter p5301.
- For fault cause = 2:
  - Deselect bit 2 in parameter p5301.
- For fault cause = 3:
  - Deselect bit 4 and bit 5 in parameter p5301.

**A07200 Drive: Master control ON command present****Message class:** Error in the parameterization / configuration / commissioning procedure (18)**Message value:** -**Component:** None**Response:** NONE**Acknowledgment:** NONE

**Cause:** The ON/OFF1 command is present (no 0 signal).  
 The command is either influenced via binary signal sink c0840 (actual CDS) or control word bit 0 via the master control.

**Remedy:** Switch the signal to 0 via binary signal sink c0840 (actual CDS) or control word bit 0 via the master control.

**F07220 Drive: Master control by PLC missing****Message class:** Communication error to the higher-level control system (9)**Message value:** -**Component:** None**Response:** OFF1**Acknowledgment:** IMMEDIATELY

- Cause:** The "master control by PLC" signal was missing in operation.
- The higher-level control has withdrawn the "master control by PLC" signal.
  - Data transfer via the fieldbus (controller/drive) was interrupted.
- Remedy:**
- Check the "master control by PLC" signal and, if required, switch in.
  - Check data transfer via the fieldbus (controller/drive).
- Note:**
- If the drive should continue to operate after withdrawing "master control by PLC", then the fault response must be parameterized to NONE or the message type should be parameterized as alarm.

---

**F07300 Drive: Line contactor feedback signal missing**

**Message class:** Auxiliary unit faulted (20)

**Message value:** -

**Component:** None

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

- Cause:**
- The line contactor was not able to be closed within the time in p0861.
  - The line contactor was not able to be opened within the time in p0861.
  - The line contactor dropped out during operation
  - The line contactor has closed although the drive converter is switched off.

- Remedy:**
- Check the setting of p0860.
  - Check the feedback circuit from the line contactor.
  - Increase the monitoring time in p0861.

---

**A07350 Drive: Measuring probe parameterized to a digital output**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The measuring probe is connected to a bidirectional digital input/output and the terminal is set as output.

Alarm value (r2124, interpret decimal):

8: DI/DO 8 (X122.9/X132.1)

9: DI/DO 9 (X122.10/X132.2)

10: DI/DO 10 (X122.12/X132.3)

11: DI/DO 11 (X122.13/X132.4)

12: DI/DO 12 (X132.9)

13: DI/DO 13 (X132.10)

14: DI/DO 14 (X132.12)

15: DI/DO 15 (X132.13)

Regarding the terminal designation:

The first designation is valid for CU320, the second for CU305.

- Remedy:**
- Deselect measuring probe (p0488, p0489).

---

**F07410 Drive: Current controller output limited**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

12.3 Faults and alarms

---

- Cause:** The condition " $I_{act} = 0$  and  $U_q\_set\_1$  longer than 16 ms at its limit" is present and can be caused by the following:
- Motor not connected or motor contactor open.
  - No DC link voltage present.
  - Power unit defective.
- Remedy:**
- Connect the motor or check the motor contactor.
  - Check the DC link voltage (r0070).
  - Check the power unit.
- 

**F07412 Drive: Commutation angle incorrect (motor model)**

**Message class:** Position/speed actual value incorrect or not available (11)

**Message value:** %1

**Component:** None

**Response:** ENCODER

**Acknowledgment:** IMMEDIATELY

**Cause:** An incorrect commutation angle was detected, which can result in a positive coupling in the speed controller.

Possible causes:

- The phase sequence of the output phases for the motor is incorrect (e.g. the phases are interchanged).
- The motor encoder is incorrectly adjusted with respect to the magnet position.
- The motor encoder is damaged.
- The motor encoder speed signal is faulted.
- The control loop is instable due to incorrect parameterization.

**Remedy:**

- Check the phase sequence for the motor, and if required, correct.
- If the encoder mounting was changed, re-adjust the encoder.
- Replace the defective motor and/or motor encoder.

---

**F07419 Drive: Current setpoint filter adaptation error**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** None

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** An error has occurred when configuring or when using the "Current setpoint filter adaptation" function.

Fault value (r0949, interpret binary):

Bit 2: the assigned filter is a type or has a characteristic, which is unsuitable for adaptation.

Bit 3: the assigned filter has not been activated (p1656).

Bits 0, 1, 4 ... 31: internal fault occurred.

**Remedy:** The remedy should be applied depending on the fault value.

For bit 2:

Set the filter type "General filter 2nd order" and set the characteristic of a bandstop filter.

For bit 3:

Activate filter (p1656).

For bits 0, 1, 4 ... 15:

- Carry out a POWER ON (switch-off/switch-on) for all components.

- Upgrade firmware to later version.

---

**F07420 Drive: Current setpoint filter natural frequency > Shannon frequency**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** None

**Response:** NONE

---



**Acknowledgment:** IMMEDIATELY

**Cause:** One of the filter natural frequencies is greater than the Shannon frequency.  
The Shannon frequency is calculated according to the following formula:  $0.5 / \text{current controller sampling time}$   
Fault value (r0949, interpret binary):  
Bit 0: Filter 1 (p1658, p1660)  
Bit 1: Filter 2 (p1663, p1665)  
Bit 2: Filter 3 (p1668, p1670)  
Bit 3: Filter 4 (p1673, p1675)

**Remedy:** - Reduce the numerator or denominator natural frequency of the current setpoint filter involved.  
- Deactivate the filter involved (p1656).

---

**F07421 Drive: Speed filter natural frequency > Shannon frequency**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY

**Cause:** One of the filter natural frequencies is greater than the Shannon frequency.  
The Shannon frequency is calculated according to the following formula:  $0.5 / \text{speed controller sampling time}$ .  
Fault value (r0949, interpret binary):  
Bit 0: Filter 1 (p1417, p1419)  
Bit 1: Filter 2 (p1423, p1425)

**Remedy:** - Reduce the numerator or denominator natural frequency of the speed setpoint filter involved.  
- Deactivate the filter involved (p1414).

---

**F07422 Drive: Reference model natural frequency > Shannon frequency**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY

**Cause:** The natural filter frequency of the PT2 element for the reference model (p1433) is greater than the Shannon frequency.  
The Shannon frequency is calculated according to the following formula:  $0.5 / \text{speed controller sampling time}$ .

**Remedy:** - Reduce the natural frequency of PT2 element for reference model (p1433).

---

**F07432 Drive: Motor without overvoltage protection**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** None  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY

**Cause:** In the case of a fault at maximum speed, the motor can generate an overvoltage that can destroy the converter.

**Remedy:** Limit the maximum speed (p1082) without any additional protection.  
Note:  
The maximum speed is calculated as follows:  
 $p1082 \leq 11.695 * \text{DC link voltage overvoltage threshold} / r0316$   
DC link voltage overvoltage threshold:  
- Line connection 1 AC: 410 V  
- Line connection 3 AC: 820 V  
See also: r0316, p1082

---

**F07434 Drive: It is not possible to change the direction of rotation with the pulses enabled****Message class:** Application/technological function faulted (17)**Message value:** -**Component:** None**Response:** OFF2**Acknowledgment:** IMMEDIATELY**Cause:** With the pulses enabled, a drive data set that has a different parameterized direction of rotation was selected (p1821). It is only possible to change the motor direction of rotation using p1821 when the pulses are inhibited.**Remedy:** - Change over the drive data set with the pulses inhibited.  
- Ensure that the changeover to a drive data set does not result in the motor direction of rotation being changed (i.e. for these drive data sets, the same value must be in p1821).  
See also: p1821 (Direction of rotation)

---

**A07440 EPOS: Jerk time is limited****Message class:** Error in the parameterization / configuration / commissioning procedure (18)**Message value:** -**Component:** None**Response:** NONE**Acknowledgment:** NONE**Cause:** The calculation of the jerk time  $T_r = \max(p2572, p2573) / p2574$  resulted in an excessively high value so that the jerk time is internally limited to 1000 ms.**Note:**

The alarm is also output if jerk limiting is not active.

**Remedy:** - Increase the jerk limiting (p2574).  
- Reduce maximum acceleration or maximum deceleration (p2572, p2573).  
See also: p2572 (EPOS maximum acceleration), p2573 (EPOS maximum deceleration), p2574 (EPOS jerk limiting)

---

**A07441 LR: Save the position offset of the absolute encoder adjustment****Message class:** Error in the parameterization / configuration / commissioning procedure (18)**Message value:** -**Component:** None**Response:** NONE**Acknowledgment:** NONE**Cause:** The status of the absolute encoder adjustment has changed.

To permanently accept the determined position offset, it must be retentively saved (p0977).

**Possible causes:**

- Motor or encoder were replaced (applies to EQN and DQI).
- Position-relevant parameters were changed.
- A non-adjusted encoder was adjusted (retentively save the project).

**Note:**

This message is not output when switching-on the axis after having first moved it in the switched-off state, as long as the parameterizable monitoring window was not exited.

**Remedy:** Readjust the encoder.  
See also: p2507 (LR absolute encoder adjustment status)

---

**F07442 LR: Multiturn does not match the modulo range****Message class:** Error in the parameterization / configuration / commissioning procedure (18)**Message value:** -**Component:** None**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** The ratio between the multturn resolution and the modulo range (p2576) is not an integer number.  
This results in the adjustment being set back, as the position actual value cannot be reproduced after switch-off/switch-on.

**Remedy:** Make the ratio between the multturn resolution and the modulo range an integer number.  
The ratio  $v$  is calculated as follows:  
$$v = (p0421 * p2506 * p2505) / (p2504 * p2576)$$
  
See also: p2504 (LR motor/load revolutions), p2505 (LR motor/load revolutions), p2506, p2576 (EPOS modulo correction modulo range)

---

**F07443 LR: Home position not in the permissible range**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** None

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** The home position received when adjusting the encoder via numerical signal sink r2599 lies outside the half of the encoder range and cannot be set as actual axis position.  
Fault value (r0949, interpret decimal):  
Maximum permissible value for the home position

**Remedy:** Set the home position to a lower value than specified in the fault value.  
See also: c2598 (EPOS home position signal), p2599 (EPOS home position value)

---

**F07446 Load gearbox: Position tracking cannot be reset**

**Message class:** Application/technological function faulted (17)

**Message value:** %1

**Component:** None

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** The position tracking cannot be reset.

**Remedy:** Reset the position tracking as follows:  
- Select encoder commissioning.  
- Reset position tracking, position (p2720.2 = 1).  
- Deselect encoder commissioning.  
Then acknowledge the fault and, if necessary, re-adjust the absolute encoder (p2507).

---

**F07450 LR: Standstill monitoring has responded**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** After the standstill monitoring time (p2543) expired, the drive left the standstill window (p2542).  
- Standstill window set too small (p2542).  
- Standstill monitoring time set too low (p2543).  
- Position loop gain too low (p2538).  
- Position loop gain too high (instability/oscillation, p2538).  
- Mechanical overload.  
- Connecting cable, motor/drive converter incorrect (phase missing, interchanged).

**Remedy:** Check the causes and resolve.

---

**F07451 LR: Position monitoring has responded**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** When the position monitoring time (p2545) expired, the drive had still not reached the positioning window (p2544).  
- Positioning window parameterized too small (p2544).  
- Position monitoring time parameterized too short (p2545).  
- Position loop gain too low (p2538).  
- Position loop gain too high (instability/oscillation, p2538).  
- Drive mechanically locked.

**Remedy:** Check the causes and resolve.

---

**F07452 LR: Following error too high**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** The difference between the position setpoint position actual value (following error dynamic model, r2563) is higher than the tolerance (p2546).  
- The drive torque or accelerating capacity exceeded.  
- Position measuring system fault.  
- Encoder cable interrupted.  
- Position control sense incorrect.  
- Mechanical system locked.  
- Excessively high traversing velocity or excessively high position reference value (setpoint) differences.

**Remedy:** Check the causes and resolve.

---

**F07453 LR: Position actual value preprocessing error**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** A position measuring system fault has occurred (F31110, F31111).  
An error has occurred during the position actual value preprocessing.

**Remedy:** Resolve the cause of the position measuring position fault.  
Check the encoder for the position actual value preprocessing.  
See also: p2502 (LR encoder assignment)

---

**A07454 LR: Position actual value preprocessing does not have a valid encoder**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** One of the following problems has occurred with the position actual value preprocessing:

- An encoder is not assigned for the position actual value preprocessing (p2502 = 0).
- An encoder is assigned, but no encoder data set (p0187 = 99 or p0188 = 99 or p0189 = 99).
- An encoder and an encoder data set have been assigned, however, the encoder data set does not contain any encoder data (p0400 = 0) or invalid data (e.g. p0408 = 0).

**Remedy:** Check the drive data sets, encoder data sets and encoder assignment.  
See also: p0400 (Encoder type selection), p2502 (LR encoder assignment)

---

**A07455 EPOS: Maximum velocity limited**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The maximum velocity (p2571) is too high to correctly calculate the modulo correction.  
Within the sampling time for positioning, at the maximum velocity, a maximum of the half modulo length must be moved through. p2571 was limited to this value.

**Remedy:** - Reduce the maximum velocity (p2571).

---

**A07456 EPOS: Setpoint velocity limited**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The actual setpoint velocity is greater than the parameterized maximum velocity (p2571) and is therefore limited.

**Remedy:** - Check the specified setpoint velocity.  
- Reduce the velocity override (c2646).  
- Increase the maximum velocity (p2571).

---

**A07457 EPOS: Combination of input signals illegal**

**Message class:** Application/technological function faulted (17)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** An illegal combination of input signals that are simultaneously set was identified.  
Alarm value (r2124, interpret decimal):  
0: Jog 1 and jog 2 (c2589, c2590).  
1: Jog 1 or jog 2 and direct setpoint input/MDI (c2589, c2590, c2647).  
2: Jog 1 or jog 2 and start homing (c2589, c2590, c2595).  
3: Jog 1 or jog 2 and activate traversing task (c2589, c2590, c2631).  
4: Direct setpoint input/MDI and starting homing (c2647, c2595).  
5: Direct setpoint input/MDI and activate traversing task (c2647, c2631).  
6: Start homing and activate traversing task (c2595, c2631).

**Remedy:** Check the appropriate input signals and correct.

---

**F07458 EPOS: Reference cam not found**

**Message class:** Application/technological function faulted (17)

**Message value:** -

12.3 Faults and alarms

---

**Component:** None  
**Response:** OFF1  
**Acknowledgment:** IMMEDIATELY  
**Cause:** After the active homing starts, the axis moved through the maximum permissible distance to search for the reference cam without actually finding the reference cam.  
**Remedy:** - Check signal "Reference cam" (c2612).  
- Check the maximum permissible distance to the reference cam (p2606).  
- If axis does not have any reference cam, then set p2607 to 0.  
See also: p2606 (EPOS active homing reference cam maximum distance), p2607 (EPOS active homing reference cam available), c2612 (EPOS active homing reference cam)

---

**F07459 EPOS: No zero mark**  
**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** None  
**Response:** OFF1  
**Acknowledgment:** IMMEDIATELY  
**Cause:** After leaving the reference cam, the axis has traversed the maximum permissible distance between the reference cam and zero mark without finding the zero mark.  
**Remedy:** - Check the encoder regarding the zero mark.  
- Check the maximum permissible distance between the reference cam and zero mark (p2609).  
- use an external encoder zero mark (equivalent zero mark) (p0494).  
See also: p2609 (EPOS active homing max distance reference cam and zero mark)

---

**F07460 EPOS: End of reference cam not found**  
**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** None  
**Response:** OFF1  
**Acknowledgment:** IMMEDIATELY  
**Cause:** In the "active homing" mode, when approaching the zero mark, the axis reached the end of the traversing range without detecting an edge at binary signal "Reference cam" (c2612).  
Maximum traversing range: -2147483648 [LU] ... -2147483647 [LU]  
**Remedy:** - Check signal "reference cam" (c2612).  
- Repeat active homing.  
See also: c2612 (EPOS active homing reference cam)

---

**A07461 EPOS: Home position not set**  
**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** When starting a traversing block/direct setpoint input, a home position is not set (r2684.11 = 0).  
**Remedy:** Carry out homing (active homing, passive homing, set home position).

---

**A07462 EPOS: Selected traversing block number does not exist**  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** None

**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** A traversing block selected via binector input c2625 ... c2629 was started via binary signal c2631 = 0/1 edge "Activate traversing task".  
- The number of the started traversing block is not contained in p2616[0...n].  
- The started traversing block is suppressed.  
Alarm value (r2124, interpret decimal):  
Number of the selected traversing block that is also not available.  
**Remedy:** - Correct the traversing program.  
- Select an available traversing block number.

---

**A07463 EPOS: External block change not requested in the traversing block**

**Message class:** Application/technological function faulted (17)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** For a traversing block with the block change enable CONTINUE\_EXTERNAL\_ALARM, the external block change was not requested.  
Alarm value (r2124, interpret decimal):  
Number of the traversing block.  
**Remedy:** Resolve the reason why the signal edge at the measuring probe is missing.

---

**F07464 EPOS: Traversing block is inconsistent**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** None  
**Response:** OFF1  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The traversing block does not contain valid information.  
Alarm value (r2124, interpret decimal):  
Number of the traversing block with invalid information.  
**Remedy:** Check the traversing block and where relevant, take into consideration alarms that are present.

---

**A07465 EPOS: Traversing block does not have a subsequent block**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** There is no subsequent block in the traversing block.  
Alarm value (r2124, interpret decimal):  
Number of the traversing block with the missing subsequent block.  
**Remedy:** - Parameterize this traversing block with the block change enable END.  
- Parameterize additional traversing blocks with a higher block number and for the last block, using the block change enable END.

---

**A07466 EPOS: Traversing block number assigned a multiple number of times**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1

12.3 Faults and alarms

---

**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The same traversing block number was assigned a multiple number of times.  
Alarm value (r2124, interpret decimal):  
Number of the traversing block that was assigned a multiple number of times.  
**Remedy:** Correct the traversing blocks.

---

**A07467 EPOS: Traversing block has illegal task parameters**  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The task parameter in the traversing block contains an illegal value.  
Alarm value (r2124, interpret decimal):  
Number of the traversing block with an illegal task parameter.  
**Remedy:** Correct the task parameter in the traversing block.

---

**A07468 EPOS: Traversing block jump destination does not exist**  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** In a traversing block, a jump was programmed to a non-existent block.  
Alarm value (r2124, interpret decimal):  
Number of the traversing block with a jump destination that does not exist.  
**Remedy:** - Correct the traversing block.  
- Add the missing traversing block.

---

**A07469 EPOS: Traversing block target position < negative software limit switch**  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** In the traversing block the specified absolute target position lies outside the range limited by the negative software limit switch.  
Alarm value (r2124, interpret decimal):  
Number of the traversing block with illegal target position.  
**Remedy:** - Correct the traversing block.  
- Change the negative software limit switch (c2578, p2580).

---

**A07470 EPOS: Traversing block target position > positive software limit switch**  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** None  
**Response:** NONE



**Acknowledgment:** NONE  
**Cause:** In the traversing block the specified absolute target position lies outside the range limited by the positive software limit switch.  
Alarm value (r2124, interpret decimal):  
Number of the traversing block with illegal target position.  
**Remedy:** - Correct the traversing block.  
- Change the positive software limit switch (c2579, p2581).

---

**A07471 EPOS: Traversing block target position outside the modulo range**

**Message class:** Application/technological function faulted (17)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** In the traversing block the target position lies outside the modulo range.  
Alarm value (r2124, interpret decimal):  
Number of the traversing block with illegal target position.  
**Remedy:** - In the traversing block, correct the target position.  
- Change the modulo range (p2576).

---

**A07472 EPOS: Traversing block ABS\_POS/ABS\_NEG not possible**

**Message class:** Application/technological function faulted (17)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** In the traversing block the positioning mode ABS\_POS or ABS\_NEG were parameterized with the modulo correction not activated.  
Alarm value (r2124, interpret decimal):  
Number of the traversing block with the illegal positioning mode.  
**Remedy:** Correct the traversing block.

---

**A07473 EPOS: Beginning of traversing range reached**

**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** When traversing, the axis has moved to the traversing range limit.  
**Remedy:** Move away in the positive direction.

---

**A07474 EPOS: End of traversing range reached**

**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** When traversing, the axis has moved to the traversing range limit.  
**Remedy:** Move away in the negative direction.

**F07475 EPOS: Target position < start of traversing range**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** OFF1  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The target position for relative traversing lies outside the traversing range.  
**Remedy:** Correct the target position.

---

**F07476 EPOS: Target position > end of the traversing range**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** OFF1  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The target position for relative traversing lies outside the traversing range.  
**Remedy:** Correct the target position.

---

**A07477 EPOS: Target position < negative software limit switch**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** In the actual traversing operation, the target position is less than the negative software limit switch.  
**Remedy:** - Correct the target position.  
- Change the negative software limit switch (c2578, p2580).  
See also: c2578 (EPOS negative software limit switch), p2580 (EPOS negative software limit switch), c2582 (EPOS software limit switch activation)

---

**A07478 EPOS: Target position > positive software limit switch**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** In the actual traversing operation, the target position is greater than the positive software limit switch.  
**Remedy:** - Correct the target position.  
- Change the positive software limit switch (c2579, p2581).  
See also: c2579 (EPOS positive software limit switch), p2581 (EPOS positive software limit switch), c2582 (EPOS software limit switch activation)

---

**A07479 EPOS: Negative software limit switch reached**

**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The axis is at the position of the negative software limit switch. An active traversing block was interrupted.

**Remedy:**

- Correct the target position.
- Change the negative software limit switch (c2578, p2580).

See also: c2578 (EPOS negative software limit switch), p2580 (EPOS negative software limit switch), c2582 (EPOS software limit switch activation)

---

**A07480 EPOS: Positive software limit switch reached**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The axis is at the position of the positive software limit switch. An active traversing block was interrupted.

**Remedy:**

- Correct the target position.
- Change the positive software limit switch (c2579, p2581).

See also: c2579 (EPOS positive software limit switch), p2581 (EPOS positive software limit switch), c2582 (EPOS software limit switch activation)

---

**F07481 EPOS: Axis position < negative software limit switch**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** The actual position of the axis is less than the position of the negative software limit switch.

**Remedy:**

- Correct the target position.
- Change the negative software limit switch (c2578, p2580).

See also: c2578 (EPOS negative software limit switch), p2580 (EPOS negative software limit switch), c2582 (EPOS software limit switch activation)

---

**F07482 EPOS: Axis position > positive software limit switch**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** The actual position of the axis is greater than the position of the positive software limit switch.

**Remedy:**

- Correct the target position.
- Change the positive software limit switch (c2579, p2581).

See also: c2579 (EPOS positive software limit switch), p2581 (EPOS positive software limit switch), c2582 (EPOS software limit switch activation)

---

**A07483 EPOS: Travel to fixed stop clamping torque not reached**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The fixed stop in the traversing block was reached without the clamping torque/clamping force having been achieved.

**Remedy:**

- Check the torque limits (p1520, p1521).

---

**F07484 EPOS: Fixed stop outside the monitoring window**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** OFF3

**Acknowledgment:** IMMEDIATELY

**Cause:** In the "fixed stop reached" state, the axis has moved outside the defined monitoring window (p2635).

**Remedy:** - Check the monitoring window (p2635).  
- Check the mechanical system.

---

**F07485 EPOS: Fixed stop not reached**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** In a traversing block with the task FIXED STOP, the end position was reached without detecting a fixed stop.

**Remedy:** - Check the traversing block and locate the target position further into the workpiece.  
- If required, reduce the maximum following error window to detect the fixed stop (p2634).

---

**A07486 EPOS: Intermediate stop missing**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** In operating mode "traversing blocks" or "direct setpoint input/MDI", at the start of motion, c2640 is set to an intermediate stop, i.e. to a 0 signal.

**Remedy:** Set c2640 to "No intermediate stop" (1 signal) and restart motion.  
See also: c2640 (EPOS intermediate stop (0 signal))

---

**A07487 EPOS: Reject traversing task missing**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** In the modes "Traversing blocks" or "Direct setpoint input/MDI" at the start of motion, the binary signal sink "Do not reject traversing task/reject traversing task" (c2641) does not have a 1 signal.

**Remedy:** Connect a 1 signal to the binary signal sink "Do not reject traversing task/reject traversing task" (c2641) and restart motion.  
See also: c2641 (EPOS reject traversing task (0 signal))

---

**F07488 EPOS: Relative positioning not possible**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

---

**Cause:** In the mode "direct setpoint input/MDI", for continuous transfer (c2649 = 1) relative positioning was selected (c2648 = 0 signal).  
**Remedy:** Check the control.

---

**F07490 EPOS: Enable signal withdrawn while traversing**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** - For a standard assignment, another fault may have occurred as a result of withdrawing the enable signals.  
- The drive is in the "switching on inhibited" state (for a standard assignment).

**Remedy:** - Set the enable signals or check the cause of the fault that first occurred and then result (for a standard assignment).  
- Check the assignment to enable the basic positioning function.

---

**F07491 EPOS: Negative hardware limit switch reached**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** OFF3

**Acknowledgment:** IMMEDIATELY

**Cause:** A 0 signal was detected at c2569, i.e. the negative hardware limit switch was reached.  
For a positive traversing direction, the negative hardware limit switch was reached - i.e. the hardware limit switch wiring is incorrect.  
See also: c2569 (EPOS negative hardware limit switch)

**Remedy:** - Leave the negative hardware limit switch in the positive traversing direction and return the axis to the valid traversing range.  
- Check the wiring of the hardware limit switch.

---

**F07492 EPOS: Positive hardware limit switch reached**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** OFF3

**Acknowledgment:** IMMEDIATELY

**Cause:** A 0 signal was detected at c2570, i.e. the positive hardware limit switch was reached.  
For a negative traversing direction, the positive hardware limit switch was reached - i.e. the hardware limit switch wiring is incorrect.  
See also: c2570 (EPOS positive hardware limit switch)

**Remedy:** - Leave the positive hardware limit switch in the negative traversing direction and return the axis to the valid traversing range.  
- Check the wiring of the hardware limit switch.

---

**F07493 LR: Overflow of the value range for position actual value**

**Message class:** Application/technological function faulted (17)

**Message value:** %1

**Component:** None

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

12.3 Faults and alarms

---

**Cause:** The value range (-2147483648 ... 2147483647) for the position actual value representation was exceeded.  
When the overflow occurs, the "homed" or "adjustment absolute measuring system" status is reset.  
Fault value (r0949, interpret decimal):  
1: The position actual value (r2521) has exceeded the value range.  
2: The encoder position actual value Gn\_XIST2 has exceeded the value range.  
3: The maximum encoder value times the factor to convert the absolute position Gn\_XIST2 from increments to length units (LU) has exceeded the value range for displaying the position actual value.

**Remedy:** If required, reduce the traversing range or position resolution (p2506).  
Note for fault value = 3:  
If the value for the maximum possible absolute position (LU) is greater than 4294967296, then it is not possible to make an adjustment due to an overflow.  
For rotary encoders, the maximum possible absolute position (LU) is calculated as follows:  
 $p2506 * p2505 / p2504$   
 $p2506 * p2505 * p0421 / p2504$  for multiturn encoders

---

**F07494 LR: Drive Data Set changeover in operation**

**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** None  
**Response:** OFF1  
**Acknowledgment:** IMMEDIATELY  
**Cause:** A Drive Data Set changeover (DDS) with a change of the mechanical relationships (p2503 ... 2506), direction of rotation (p1821) or the encoder assignment (p2502) was requested in operation.  
Note:  
DDS: Drive Data Set

**Remedy:** To changeover the drive data set, initially, exit the "operation" mode.

---

**A07495 LR: Homing function interrupted**

**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** An activated homing function (homing mark search or measuring probe evaluation) was canceled.  
Possible causes:  
- An encoder fault has occurred (Gn\_ZSW.15 = 1).  
- Position actual value was set during an activated homing function.  
- Homing mark search and measuring probe evaluation simultaneously activated.  
- Activated homing function (homing mark search or measuring probe evaluation) was de-activated.

**Remedy:** - Check the causes and resolve.  
- Reset the control and activate the required function.

---

**A07496 EPOS: Enable not possible**

**Message class:** Application/technological function faulted (17)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE

**Cause:** It is not possible to enable the basic positioner because at least one condition is missing.  
Alarm value (r2124, interpret decimal):  
1: EPOS enable missing.  
2: Position actual value, valid feedback signal missing.

**Remedy:** Check the corresponding missing condition.

---

**A07498 LR: Measuring probe evaluation not possible**

**Message class:** Application/technological function faulted (17)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** When evaluating the measuring probe, an error occurred.

Alarm value (r2124, interpret decimal):

6:

The input terminal for the measuring probe is not set.

4098:

Error when initializing the measuring probe.

4100:

The measuring pulse frequency is too high.

> 50000:

The measuring clock cycle is not a multiple integer of the position controller clock cycle.

**Remedy:** Deactivate measuring probe evaluation (c2509 = 0 signal).

For alarm value = 6:

Set the input terminal for the measuring probe (p0488, p0489 or p2517, p2518).

For alarm value = 4098:

Check the Control Unit hardware.

For alarm value = 4100:

Reduce the frequency of the measuring pulses at the measuring probe.

For alarm value > 50000:

Set the clock cycle ratio of the measuring clock cycle to the position controller clock cycle to an integer multiple.

To do this, the currently effective measuring clock cycle can be determined from the alarm value as follows:

$T_{\text{meas}} [125 \mu\text{s}] = \text{alarm value} - 50000$

With PROFIBUS, the measuring clock cycle corresponds to the bus clock cycle (r2064[1]).

Without PROFIBUS, the measuring clock cycle is an internal cycle time that cannot be influenced.

---

**F07499 EPOS: Reversing cam approached with the incorrect traversing direction**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** OFF3

**Acknowledgment:** IMMEDIATELY

**Cause:** The negative reversing cam was approached in the positive traversing direction, or the positive reversing cam was approached in the negative traversing direction.

See also: c2613 (EPOS active homing negative reversing cam), c2614 (EPOS active homing positive reversing cam)

**Remedy:** - Check the wiring of the reversing cam (c2613, c2614).

- Check the traversing direction to approach the reversing cam.

---

**F07503 EPOS: Hardware limit switch approached with the incorrect traversing direction**

**Message class:** Application/technological function faulted (17)

12.3 Faults and alarms

---

**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The negative hardware limit switch was approached in the positive traversing direction, or the positive hardware limit switch was approached in the negative traversing direction.  
**Remedy:**  
- Check the wiring of the hardware limit switch (c2569, c2570).  
- Check the traversing direction when approaching the hardware limit switch.

---

**A07507 EPOS: Home position cannot be set**

**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** Motor  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** After the home position correction, the position setpoint lies outside the traversing range limits.  
**Remedy:**  
- Optimize the position controller.  
- Due to a possible position controller deviation, home position p2599 should not be directly placed at the traversing range limits.

---

**A07520 Drive: Motor cannot be changed over**

**Message class:** Application/technological function faulted (17)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** A motor data set switchover was requested via PROFINET that the converter does not support.  
**Remedy:**  
- Check the PROFINET telegram

---

**A07530 Drive: Drive Data Set DDS not present**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** A data set switchover was requested via PROFINET that the converter does not support.  
**Remedy:**  
- Check the PROFINET telegram

---

**A07531 Drive: Command Data Set CDS not present**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The selected command data set is not available (r0836 > p0170). The command data set was not changed over.  
**Remedy:**  
- Select the existing command data set.  
- Set up additional command data sets.



---

**A07550 Drive: Not possible to reset encoder parameters**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** When restoring a factory setting, it was not possible to reset the encoder parameters. The encoder parameters are directly read out of the encoder.

Alarm value (r2124, interpret decimal):

Component number of the encoder involved.

**Remedy:** - Repeat the operation.

- Check the encoder connection.

---

**F07555 Drive encoder: Configuration position tracking**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Component number: %1, encoder data set: %2, drive data set: %3, fault cause: %4

**Component:** Encoder 1

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** For position tracking, the configuration is not supported.

Position tracking can only be activated for absolute encoders.

For linear axes, it is not possible to simultaneously activate the position tracking for load and measuring gears.

Fault value (r0949, interpret hexadecimal):

ddccbbaa hex

aa = encoder data set

bb = component number

cc = drive data set

dd = fault cause

dd = 00 hex = 0 dec

An absolute encoder is not being used.

dd = 01 hex = 1 dec

Position tracking cannot be activated because the memory of the internal NVRAM is not sufficient or a Control Unit does not have an NVRAM.

dd = 02 hex = 2 dec

For a linear axis, the position tracking was activated for the load and measuring gearbox.

dd = 03 hex = 3 dec

Position tracking cannot be activated because position tracking with another gear ratio, axis type or tolerance window has already been detected for this encoder data set.

dd = 04 hex = 4 dec

A linear encoder is being used.

See also: p0404 (Encoder configuration effective)

**Remedy:** For fault value 0:

- Use an absolute encoder.

For fault value 1:

- Use a Control Unit with sufficient NVRAM.

For fault value = 2, 4:

- If necessary, deselect the position tracking (p0411 for the measuring gearbox, p2720 for the load gearbox).

For fault value 3:

- Only activate position tracking of the load gearbox in the same encoder data set if the gear ratio (p2504, p2505), axis type (p2720.1) and tolerance window (p2722) are also the same. These parameters must be the same in all drive data sets, which use the same motor encoder.

**F07556 Measuring gearbox: Position tracking, maximum actual value exceeded****Message class:** Position/speed actual value incorrect or not available (11)**Message value:** Component number: %1, encoder data set: %2**Component:** None**Response:** NONE**Acknowledgment:** IMMEDIATELY**Cause:** When the position tracking of the measuring gearbox is configured, the drive/encoder identifies a maximum possible absolute position actual value (r0483) that cannot be represented within 32 bits.Maximum value:  $p0408 * p0412 * 2^{p0419}$ 

Fault value (r0949, interpret decimal):

aaaayyxx hex: yy = component number, xx = encoder data set

See also: p0408 (Rotary encoder pulse number)

**Remedy:**  
- Reduce the fine resolution (p0419).  
- Reduce the multiturn resolution (p0412).**A07557 Motor encoder: Home position not in the permissible range****Message class:** Application/technological function faulted (17)**Message value:** %1**Component:** None**Response:** NONE**Acknowledgment:** NONE**Cause:** The home position received via p2599 when adjusting the encoder lies outside half of the encoder range and cannot be set as actual axis position.

The maximum permissible value is displayed in the supplementary information.

**Remedy:**  
Set the home position less than the value from the supplementary information.  
See also: c2598 (EPOS home position signal)**F07562 Drive, encoder: Position tracking, incremental encoder not possible****Message class:** Error in the parameterization / configuration / commissioning procedure (18)**Message value:** Fault cause: %1, component number: %2, encoder data set: %3**Component:** None**Response:** OFF2**Acknowledgment:** IMMEDIATELY**Cause:** The requested position tracking for incremental encoders is not supported.

Fault value (r0949, interpret hexadecimal):

ccccbbaa hex

aa = encoder data set

bb = component number

cccc = fault cause

cccc = 00 hex = 0 dec

The encoder type does not support the "Position tracking incremental encoder" function.

cccc = 01 hex = 1 dec

Position tracking cannot be activated because the memory of the internal NVRAM is not sufficient or a Control Unit does not have an NVRAM.

cccc = 04 hex = 4 dec

A linear encoder is used that does not support the "position tracking" function.

See also: p0404 (Encoder configuration effective)

**Remedy:**  
- Check the encoder parameterization (p0400, p0404).  
- Use a Control Unit with sufficient NVRAM.  
- If required, deselect position tracking for the incremental encoder (p0411.3 = 0).

---

**A07565 Drive: Encoder error in PROFIdrive encoder interface 1**

**Message class:** Position/speed actual value incorrect or not available (11)  
**Message value:** %1  
**Component:** Sensor Module Encoder 1  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** An encoder error was signaled for encoder 1 via the PROFIdrive encoder interface (G1\_ZSW.15).  
Alarm value (r2124, interpret decimal):  
Error code from G1\_XIST2.  
**Remedy:** Acknowledge the encoder error using the encoder control word (G1\_STW.15 = 1).

---

**A07569 Enc identification active**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** During encoder identification (waiting) with p0400 = 10100, the encoder could still not be identified.  
There is possibly an incorrect encoder or no encoder available, an incorrect encoder cable inserted or no encoder cable inserted.  
**Remedy:**  
- Check the encoder cable and if necessary connect it.  
- Enter the corresponding encoder type in p0400.

---

**F07575 Drive: Motor encoder not ready**

**Message class:** Position/speed actual value incorrect or not available (11)  
**Message value:** -  
**Component:** Sensor Module Encoder 1  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The motor encoder signals that it is not ready.  
- Initialization of encoder 1 (motor encoder) was unsuccessful.  
- The function "parking encoder" is active (encoder control word G1\_STW.14 = 1).  
- The Sensor Module is defective.  
**Remedy:** Evaluate other active faults via the motor encoder.

---

**A07577 Motor encoder: Measuring probe evaluation not possible**

**Message class:** Application/technological function faulted (17)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** When evaluating the measuring probe, an error occurred.  
Alarm value (r2124, interpret decimal):  
6: The input terminal for the measuring probe is not set.  
4098: Error when initializing the probe.  
4100: The measuring pulse frequency is too high.  
4200: The bus cycle time is not a multiple integer of the position controller clock cycle.

**Remedy:** Deactivate measuring probe evaluation (c2509 = 0 signal).  
 For alarm value = 6:  
 Set the input terminal for the measuring probe (p0488, p0489 or p2517, p2518).  
 For alarm value = 4098:  
 Check the Control Unit hardware.  
 For alarm value = 4100:  
 Reduce the frequency of the measuring pulses at the measuring probe.  
 For alarm value = 4200:  
 Set the clock cycle ratio between the bus cycle time and the position controller clock cycle to an integer multiple.

**A07580 Drive: No Sensor Module with matching component number**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** Encoder data set: %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** A Sensor Module with the specified component number was not found.  
 Alarm value (r2124, interpret decimal):  
 Encoder data set involved.  
**Remedy:** Correct the component number of the Sensor Module.

**A07581 Motor encoder: Position actual value preprocessing error**

**Message class:** Position/speed actual value incorrect or not available (11)  
**Message value:** -  
**Component:** Encoder 1  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** An error has occurred during the position actual value preprocessing.  
**Remedy:** Check the encoder for the position actual value preprocessing.  
 See also: p2502 (LR encoder assignment)

**A07587 Motor encoder: Position actual value preprocessing has no valid encoder**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** Encoder 1  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The following problem has occurred during the position actual value preprocessing:  
 - An encoder data set has been assigned, however, the encoder data set does not contain any encoder data (p0400 = 0) or invalid data (e.g. p0408 = 0).  
**Remedy:** Check the drive data sets, encoder data sets.  
 See also: p0400 (Encoder type selection), p2502 (LR encoder assignment)

**A07593 Motor encoder: Value range for position actual value exceeded**

**Message class:** Application/technological function faulted (17)  
**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE

**Cause:** The value range (-2147483648 ... 2147483647) for the position actual value representation was exceeded.  
When the overflow occurs, the "homed" or "absolute encoder adjusted" status is reset.  
Alarm value (r2124, interpret decimal):  
1: The position actual value (r2521) has exceeded the value range.  
2: The encoder position actual value Gn\_XIST2 has exceeded the value range.  
3: The maximum encoder value multiplied by the factor to convert the absolute position Gn\_XIST2 from increments to length units (LU) has exceeded the value range for displaying the position actual value.

**Remedy:** If required, reduce the traversing range or position resolution.  
For alarm value = 3:  
Reducing the position resolution and conversion factor:  
- Reduce the length unit (LU) per load revolution for rotary encoders (p2506).

---

**A07596 Motor encoder: Homing function interrupted**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** An activated homing function (homing mark search or measuring probe evaluation) was canceled.  
- An encoder fault has occurred (Gn\_ZSW.15 = 1).  
- Position actual value was set during an activated homing function.  
- Homing mark search and measuring probe evaluation simultaneously activated.  
- Activated homing function (homing mark search or measuring probe evaluation) was de-activated.

**Remedy:** - Check the causes and resolve.  
- Reset the control and activate the required function.

---

**F07801 Drive: Motor overcurrent**

**Message class:** Motor overload (8)

**Message value:** -

**Component:** Motor

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The permissible motor limit current was exceeded.  
- Active current limit too low.  
- Current controller not correctly set.  
- Load is too high.  
- Short-circuit in the motor cable or ground fault.  
- Motor current does not match the drive current.

**Remedy:** - Reduce the load.  
- Check the motor and motor cables for short-circuit and ground fault.  
- Check the drive and motor combination.

---

**F07802 Drive: Infeed not ready**

**Message class:** Infeed faulted (13)

**Message value:** -

**Component:** None

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

12.3 Faults and alarms

---

- Cause:** The drive does not signal a ready state after an internal switch-on command.
- DC link voltage is not present.
  - Defective drive.
  - Supply voltage incorrectly set.
- Remedy:**
- Check the enable signals for the drive.
  - Replace the drive.
  - Check the supply voltage setting (p0210).
- 

**F07808 HF Damping Module: damping not ready**

**Message class:** Power electronics faulted (5)

**Message value:** %1

**Component:** None

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

- Cause:** When switching on or in the switched-on state, the HF Damping Module does not return a ready signal.
- Fault value (r0949, interpret hexadecimal):
- 1: Fault at switch-on identified.
  - 2: Fault during operation identified.

- Remedy:**
- Check the DRIVE-CLiQ wiring to the HF Damping Module.
  - Check the 24 V supply voltage.
  - If required, replace the HF Damping Module.
- Note:  
HF Damping Module
- 

**F07810 Drive: Power unit EEPROM without rated data**

**Message class:** Hardware/software error (1)

**Message value:** -

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** No rated data are stored in the power unit EEPROM.

**Remedy:** Replace the power unit or inform Siemens Customer Service.

---

**F07815 Drive: Power unit has been changed**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Parameter: %1

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

- Cause:** The code number of the actual power unit does not match the saved number. This occurs if a saved configuration (SD card, backup file) of a converter with another power rating is used.
- Fault value only for internal Siemens diagnostics.  
See also: p0201 (Power unit code number)

- Remedy:**
- Reset to the factory settings, which corresponds to recommissioning the converter.
  - Use an SD card or backup file with the configuration correct for the drive being used and switch-off/switch-on the drive.
  - In case of doubt, before using an SD card, delete the existing configuration of the USER folder.
  - For a series commissioning, only use the same converter types (order number, power class).
- 

**F07860 External fault 1**

**Message class:** External measured value / signal state outside the permissible range (16)

---

**Message value:** -  
**Component:** None  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The condition for "External fault 1" is active.  
Note:  
"External fault 1" is initiated by a I/O edge via c2106.  
See also: c2106 (External fault 1)  
**Remedy:** - Eliminate the causes of this fault.  
- Acknowledge fault.

---

**F07900 Drive: Motor blocked/speed controller at its limit**

**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** Motor  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The motor operates longer than 0.2 seconds at the torque limit and below the speed threshold in p2175.  
This signal can also be initiated if the speed actual value is oscillating and the speed controller output repeatedly goes to its limit.  
See also: p2175, p2177  
**Remedy:** - Check that the motor can freely move.  
- Check the effective torque limit (r1538, r1539).  
- Check the parameter of the "Motor blocked" signal and possibly correct (p2175).

---

**F07901 Drive: Motor overspeed**

**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** Motor  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The maximum permissible speed was either positively or negatively exceeded (p1082).  
**Remedy:** - Check the speed controller (p1460, p1462).  
- Check the moment of inertia (p1498).  
- Check the maximum speed (p1082).

---

**A07920 Drive: Torque/speed too low**

**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** Motor  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The torque deviates from the torque/speed envelope characteristic (too low).  
**Remedy:** - Check the connection between the motor and load.  
- Adapt the parameterization corresponding to the load.

---

**A07921 Drive: Torque/speed too high**

**Message class:** Application/technological function faulted (17)  
**Message value:** -

### 12.3 Faults and alarms

**Component:** Motor  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The torque deviates from the torque/speed envelope characteristic (too high).  
**Remedy:**  
- Check the connection between the motor and load.  
- Adapt the parameterization corresponding to the load.

---

#### **A07922 Drive: Torque/speed out of tolerance**

**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** Motor  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The torque deviates from the torque/speed envelope characteristic.  
**Remedy:**  
- Check the connection between the motor and load.  
- Adapt the parameterization corresponding to the load.

---

#### **F07923 Drive: Torque/speed too low**

**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** Motor  
**Response:** OFF1  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The torque deviates from the torque/speed envelope characteristic (too low).  
**Remedy:**  
- Check the connection between the motor and load.  
- Adapt the parameterization corresponding to the load.

---

#### **F07924 Drive: Torque/speed too high**

**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** Motor  
**Response:** OFF1  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The torque deviates from the torque/speed envelope characteristic (too high).  
**Remedy:**  
- Check the connection between the motor and load.  
- Adapt the parameterization corresponding to the load.

---

#### **F07925 Drive: Torque/speed out of tolerance**

**Message class:** Application/technological function faulted (17)  
**Message value:** -  
**Component:** Motor  
**Response:** OFF1  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The torque deviates from the torque/speed envelope characteristic.  
**Remedy:**  
- Check the connection between the motor and load.  
- Adapt the parameterization corresponding to the load.



---

**F07955 Drive: Motor has been changed**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** Motor  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The code number of the actual self-identifying motor does not match the saved number.  
If available:  
The code numbers of the bearings, gearbox and brake do not match the saved numbers.  
**Remedy:** Connect the original motor and switch on the converter again (POWER ON) - or restore the factory settings.  
Note:  
The data for bearings, gearbox and brake are reloaded.

---

**F07956 Drive: Motor code does not match the list (catalog) motor**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** Motor  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The motor code of the connected self-identifying motor does not match the possible list motor types (see selection in p0300).  
It is possible that this firmware version does not support the connected motor.  
Fault value (r0949, interpret decimal):  
Motor code of the connected motor.  
Note:  
The first three digits of the motor code generally correspond to the list motor type.  
**Remedy:** Use a self-identifying motor with the matching motor code.

---

**F08000 TB: +/-15 V power supply faulted**

**Message class:** Supply voltage fault (undervoltage) (3)  
**Message value:** %1  
**Component:** Controller Extension (CX)  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY  
**Cause:** Terminal Board 30 detects an incorrect internal power supply voltage.  
Fault value (r0949, interpret decimal):  
0: Error when testing the monitoring circuit.  
1: Fault in normal operation.  
**Remedy:** - Replace Terminal Board 30.  
- Replace Control Unit.

---

**F08010 TB: Analog-digital converter**

**Message class:** Hardware/software error (1)  
**Message value:** -  
**Component:** Controller Extension (CX)  
**Response:** NONE  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The analog/digital converter on Terminal Board 30 has not supplied any converted data.

12.3 Faults and alarms

---

**Remedy:** - Check the power supply.  
- Replace Terminal Board 30.

---

**A08560 IE: Syntax error in configuration file**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** A syntax error has been detected in the configuration file for the Industrial Ethernet interface (X127). The saved configuration file has not been loaded.

**Note:**

IE: Industrial Ethernet

**Remedy:** Reinitialize the station using the "Edit Ethernet node" screen form (e.g. with Startdrive commissioning tool).

---

**A08561 IE: Consistency error affecting adjustable parameters**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** A consistency error was detected when activating the configuration for the Industrial Ethernet interface (X127). Alarm value (r2124, interpret decimal):

0: General consistency error

1: Error in the IP configuration (IP address, subnet mask or standard gateway).

2: Error in the station names.

5: Standard gateway is also set at the PROFINET interface.

6: The station name is also set at the PROFINET interface.

7: The IP address is located in the same subnet as the IP address of the PROFINET interface.

**Note:**

For alarm value = 0, 1, 2, 5, 7 the following applies: the configuration was not changed.

For alarm value = 6 the following applies: The new configuration was however activated.

IE: Industrial Ethernet

**Remedy:** Reinitialize the station using the "Edit Ethernet node" screen form (e.g. with Startdrive commissioning tool).

---

**A08562 PROFINET: Syntax error in configuration file**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** A syntax error has been detected in the configuration file for the PROFINET interface (X150). The saved configuration file has not been loaded.

**Remedy:** Reinitialize the station using the "Edit Ethernet node" screen form (e.g. with Startdrive commissioning tool).

---

**A08563 PROFINET: Consistency error affecting adjustable parameters**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** A consistency error was detected when activating the configuration for the PROFINET interface (X150).

Alarm value (r2124, interpret decimal):

0: General consistency error

1: Error in the IP configuration (IP address, subnet mask or standard gateway).

2: Error in the station names.

3: DHCP was not able to be activated, as a cyclic PROFINET connection already exists.

5: Standard gateway is also set at the Industrial Ethernet interface (X127).

6: Standard station name is also set at the Industrial Ethernet interface (X127).

7: IP address is located in the same subnet as the IP address of the Industrial Ethernet interface (X127).

Note:

For alarm value = 0, 1, 2, 3, 4, 5, 7, the following applies: the configuration was not changed.

For alarm value = 6 the following applies: The new configuration was however activated.

DHCP: Dynamic Host Configuration Protocol

**Remedy:** Reinitialize the station using the "Edit Ethernet node" screen form (e.g. with Startdrive commissioning tool).

---

### **A08566 IIoT: Syntax error in configuration file**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** A syntax error has been detected in the configuration file for the IIoT interface (X128). The saved configuration file has not been loaded.

Note:

IIoT: Industrial Internet of Things

**Remedy:** Reinitialize the station using the "Edit Ethernet node" screen form (e.g. with Startdrive commissioning tool).

---

### **A08567 IIoT: Consistency error for adjustable parameters**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** %1

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** A consistency error was detected when activating the configuration for the IIoT interface (X128).

Alarm value (r2124, interpret decimal):

0: General consistency error

1: Error in the IP configuration (IP address, subnet mask or standard gateway).

2: Error in the station names.

5: Standard gateway is also set at the PROFINET interface.

6: The station name is also set at the PROFINET interface.

7: The IP address is located in the same subnet as the IP address of the PROFINET interface.

Note:

For alarm value = 0, 1, 2, 5, 7 the following applies: the configuration was not changed.

For alarm value = 6 the following applies: The new configuration was however activated.

IE: Industrial Ethernet

**Remedy:** Reinitialize the station using the "Edit Ethernet node" screen form (e.g. with Startdrive commissioning tool).

---

### **A08800 PROFIenergy energy-saving mode active**

**Message class:** Communication error to the higher-level control system (9)

**Message value:** %1  
**Component:** None  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The PROFIenergy energy-saving mode is active  
Alarm value (r2124, interpret decimal):  
Mode ID of the active PROFIenergy energy-saving mode.  
**Remedy:** The alarm is automatically withdrawn when the energy-saving mode is exited.  
Note:  
The energy-saving mode is exited after the following events:  
- The PROFIenergy command end\_pause is received from the higher-level control.  
- The higher-level control has changed into the STOP operating state.  
- The PROFINET connection to the higher-level control has been disconnected.

---

**F13000 License not adequate**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** Control Unit (CU)  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** - The converter uses options that require a license and the licenses are not sufficient.  
- An error has occurred when checking the licensing.  
Fault value (r0949, interpret decimal):  
0: Adequate licensing was not able to be determined as there is no licensing data available on the memory card.  
1: Adequate licensing was not able to be determined as the memory card with the required licensing data was withdrawn in operation or the memory card is defective.  
2: Adequate licensing was not able to be determined as there is no licensing data available on the memory card.  
3: Adequate licensing was not able to be determined as the licensing data does not match the serial number of the memory card being used.  
4, 5, 6, 7: Adequate licensing was not able to be determined as the licensing data were manipulated and are therefore invalid.  
8, 9: An internal error occurred when checking the license.  
**Remedy:** For fault value = 0:  
Transfer a license file with the required licenses to the converter.  
For fault value = 1:  
Reinsert the memory card into the converter. If you have to replace a defective memory card, contact Technical Support.  
For fault value = 2:  
Transfer a license file with the required licenses to the converter.  
For fault value = 3:  
Compare the license file name (after "LK\_" to ".ZIP") with the serial number of the memory card.  
Transfer the appropriate license file to the converter.  
For fault value = 4, 5, 6, 7, 8, 9:  
- Carry out a POWER ON.  
- Upgrade firmware to later version.  
- Contact Technical Support.  
Note:  
An overview of the converter functions requiring a license can be displayed using a commissioning tool in the online mode. Depending on the commissioning tool, you can also obtain the necessary licensing (serial number, license file, Trial License Mode).

---

**A13002 Licensing not sufficient in operation**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** -  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** - For the converter, the options that require a license are being used but the licenses are not sufficient.  
- An error occurred when checking the existing licenses.  
Alarm value (r2124, interpret decimal):  
0: The existing license is not sufficient.  
1: An adequate license was not able to be determined as the memory card with the required licensing data was withdrawn in operation or the memory card has developed a defect.  
2: An adequate license was not able to be determined as there is no licensing data available on the memory card.  
3: An adequate license was not able to be determined as there is no licensing data available on the memory card.  
4, 5, 6, 7: An adequate license was not able to be determined as the licensing data were manipulated and are therefore invalid.  
8,9: An internal error occurred when checking the license.  
**Remedy:** For alarm value = 0:  
Additional licenses are required and must be activated.  
For alarm value = 1:  
Reinsert or replace the memory card that matches the system.  
For alarm value = 2:  
Transfer the license file to the converter.  
For alarm value = 3:  
Compare the license file name (after "LK\_" to ".ZIP") with the serial number of the memory card.  
Transfer the appropriate license file to the converter.  
For alarm value = 4, 5, 6, 7, 8, 9:  
- Carry out a POWER ON.  
- Upgrade firmware to later version.  
- Contact Technical Support.  
Note:  
An overview of the converter functions requiring a license can be displayed using a commissioning tool in the online mode. Depending on the commissioning tool, you can also obtain the necessary licensing (serial number, license file, Trial License Mode).

---

### A13030 Trial License activated

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The "Trial License" function was activated. One of the available periods is expiring.  
**Remedy:** Not necessary.  
The alarm is automatically withdrawn after the periods have expired.

---

### A13031 Trial License period expired

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** One of the available periods of the "Trial License" function has expired.

12.3 Faults and alarms

---

**Remedy:**

- If required, start an additional period.
- Deactivate functions requiring a license.
- Appropriately license the drive unit.

**Note:**  
A license that is not adequate will only become evident after the next time the system runs up.

---

**A13032 Trial License last period activated**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The "Trial License" function was activated. The last of the available periods is expiring.  
**Remedy:** Not necessary.  
The alarm is automatically withdrawn after the last period has expired.

---

**A13033 Trial License last period expired**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** -  
**Component:** Control Unit (CU)  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The last period of the "Trial License" function has expired. No additional periods available.  
**Remedy:**

- Deactivate functions requiring a license.
- Appropriately license the drive unit.

**Note:**  
A license that is not adequate will only become evident after the next time the system runs up.

---

**F30001 Drive: overcurrent**

**Message class:** Power electronics faulted (5)  
**Message value:** Fault cause: %1 bin  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:**

- The drive has detected an overcurrent condition.
- Closed-loop control is incorrectly parameterized.
- Motor has a short-circuit or fault to ground (frame).
- The rated motor current is significantly higher than that of the drive.
- Infeed: High discharge and post-charging currents for line voltage dip.
- Infeed: High post-charging currents for overload when motoring and DC link voltage dip.
- Infeed: Short-circuit currents at switch-on as there is no line reactor.
- Power cables are not correctly connected.
- The power cables exceed the maximum permissible length.
- Defective drive.
- Line phase interrupted.

Fault value (r0949, interpret bit-serial):  
Bit 0: Phase U.  
Bit 1: Phase V.  
Bit 2: Phase W.

- Remedy:**
- Check the motor data - If required, carry out commissioning.
  - Check the assignment of the rated currents of the motor and converter.
  - Infeed: Check the line quality.
  - Infeed: Reduce the motor load.
  - Infeed: Check that the line filter and line reactor are correctly connected.
  - Check the power cable connections.
  - Check the power cables for short-circuit or ground fault.
  - Check the length of the power cables.
  - Replace drive.
  - Check the line phases.

---

**F30002 Drive: DC link overvoltage**

**Message class:** DC link overvoltage (4)

**Message value:** %1

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The drive has detected an overvoltage condition in the DC link.

- Motor regenerates too much energy.
- Device supply voltage too high.
- Line phase interrupted.

Fault value only for internal Siemens diagnostics.

- Remedy:**
- Increase the ramp-down time.
  - Use a braking resistor.
  - Use a drive with a higher power rating.
  - Check the device supply voltage (p0210).
  - Check the line phases.
- See also: p0210 (Device supply voltage)

---

**F30003 Power unit: DC link voltage undervoltage**

**Message class:** Infeed faulted (13)

**Message value:** -

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The power unit has detected an undervoltage condition in the DC link.

- Line supply failure.
- Line voltage below the permissible value.
- Line infeed failed or interrupted.
- Line phase interrupted.

Note:

The monitoring threshold for undervoltage in the DC link is indicated in r0296.

- Remedy:**
- Check the line voltage.
  - Check the line infeed and observe the fault messages relating to it (if there are any).
  - Check the line phases.
  - Check the supply voltage setting (p0210).
- See also: p0210 (Device supply voltage)

---

**F30004 Power unit: Overtemperature heat sink inverter**

**Message class:** Power electronics faulted (5)

12.3 Faults and alarms

---

**Message value:** %1  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The temperature of the power unit heat sink has exceeded the permissible limit value.  
- Insufficient cooling, fan failure.  
- Overload.  
- Ambient temperature too high.  
- Pulse frequency too high.  
Fault value (r0949, interpret decimal):  
Temperature [0.01 °C].  
**Remedy:**  
- Check whether the fan is running.  
- Check the fan elements.  
- Check whether the ambient temperature is in the permissible range.  
- Check the motor load.  
- Reduce the pulse frequency if this is higher than the rated pulse frequency.  
Notice:  
This fault can only be acknowledged after the alarm threshold for alarm A30250 has been fallen below.

---

**F30005 Power unit: Overload I2t (AC)**

**Message class:** Power electronics faulted (5)  
**Message value:** %1  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The fault threshold for the I2t overload on the AC side of the power unit has been exceeded. The permissible load duty cycle or the continuous load was not maintained.  
Fault value (r0949, interpret decimal):  
I2t (AC) [100 % = 16384]  
See also: r0036 (Power unit overload)  
**Remedy:**  
- Reduce the continuous load.  
- Adapt the load duty cycle.  
- Check the rated currents of the motor and power unit.  
See also: p0307 (Rated motor power)

---

**F30011 Power unit: Line phase failure in main circuit**

**Message class:** Network fault (2)  
**Message value:** %1  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** At the power unit, the DC link voltage ripple has exceeded the permissible limit value.  
Possible causes:  
- A line phase has failed.  
- The 3 line phases are inadmissibly asymmetrical.  
- The capacitance of the DC link capacitor forms a resonance frequency with the line inductance and the reactor integrated in the power unit.  
- The fuse of a phase of a main circuit has ruptured.  
- A motor phase has failed.  
- For power units operated on a single phase, the permissible active power was exceeded.  
Only for internal Siemens troubleshooting.



- Remedy:**
- Check the main circuit fuses.
  - Check whether a single-phase load is distorting the line voltages.
  - Detune the resonant frequency with the line inductance by using an upstream line reactor.
  - Dampen the resonant frequency with the line inductance by switching over the DC link voltage compensation in the software or increase the smoothing. However, this can have a negative impact on the torque ripple at the motor output.
  - Check the motor feeder cables.

---

**F30012 Power unit: Temperature sensor wire breakage**

**Message class:** Power electronics faulted (5)

**Message value:** %1

**Component:** Power Unit

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** The connection to a temperature sensor in the power unit is interrupted.

Fault value (r0949, interpret binary):

Bit 1: Air intake

Bit 2: Inverter 1

Bit 3: Inverter 2

Bit 4: Inverter 3

Bit 5: Inverter 4

Bit 6: Inverter 5

Bit 7: Inverter 6

Bit 8: Rectifier

Bit 10: Moisture ext. moisture sensor

Bit 11: Temperature ext. moisture sensor

Bit 13: Balance resistor

Bit 14: Capacitor air discharge

Bit 15: Liquid intake

**Remedy:** Contact Technical Support.

---

**F30013 Power unit: Temperature sensor short-circuit**

**Message class:** Power electronics faulted (5)

**Message value:** %1

**Component:** Power Unit

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** A temperature sensor in the power unit is short-circuited.

Fault value (r0949, interpret binary):

Bit 1: Air intake

Bit 2: Inverter 1

Bit 3: Inverter 2

Bit 4: Inverter 3

Bit 5: Inverter 4

Bit 6: Inverter 5

Bit 7: Inverter 6

Bit 8: Rectifier

Bit 10: Moisture ext. moisture sensor

Bit 11: Temperature ext. moisture sensor

Bit 14: Capacitor air discharge

Bit 15: Liquid intake

**Remedy:** Contact Technical Support.

---

**F30015 Power unit: Phase failure motor cable**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** Motor

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** A phase failure in the motor feeder cable was detected.

The signal can also be output in the following case:

- The motor is correctly connected, however the closed-speed control is instable and therefore an oscillating torque is generated.

Note:

Chassis power units do not feature phase failure monitoring.

**Remedy:** - Check the motor feeder cables.

- Check the speed controller settings.

---

**A30016 Power unit: Load supply switched off**

**Message class:** Network fault (2)

**Message value:** %1

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The DC link voltage is too low.

Alarm value (r2124, interpret decimal):

DC link voltage at the time of the trip [V].

**Remedy:** - Switch on load supply.

- Check the line supply if necessary.

---

**F30017 Power unit: Hardware current limit has responded too often**

**Message class:** Power electronics faulted (5)

**Message value:** Fault cause: %1 bin

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The hardware current limitation in the relevant phase (see A30031, A30032, A30033) has responded too often. The number of times the limit has been exceeded depends on the design and type of power unit.

- Closed-loop control is incorrectly parameterized.

- Fault in the motor or in the power cables.

- The power cables exceed the maximum permissible length.

- Motor load too high

- Power unit defective.

Fault value (r0949, interpret binary):

Bit 0: Phase U

Bit 1: Phase V

Bit 2: Phase W

Additional bits:

Only for internal Siemens troubleshooting.

Note:

Fault value = 0 means that the phase with current limiting is not recognized (e.g. for blocksize device).

---

- Remedy:**
- Check the motor data.
  - Check the motor circuit configuration (star-delta).
  - Check the motor load.
  - Check the power cable connections.
  - Check the power cables for short-circuit or ground fault.
  - Check the length of the power cables.
  - Replace power unit.

---

**F30020 Power unit: Configuration not supported**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Fault cause: %1, additional information: %2

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** A configuration is requested that is not supported by the power unit.  
Fault value (r0949, interpret hexadecimal):  
yyyyxxxx hex: xxxx = fault cause, yyyy = additional information (internal Siemens)  
xxxx = 1: The requested DRIVE-CLiQ timing is not permissible.  
xxxx = 3: Initialization was not able to be successfully completed. It is possible that the converter was switched-off before or while running up.  
xxxx = 4: The combination of power unit and converters is not supported.  
xxxx = 8: The version of the ASIC installed in the power unit is no longer supported.

**Remedy:** For fault cause = 1:  
Update the converter firmware or change the DRIVE-CLiQ topology.  
For fault cause = 3, 4:  
Use a converter with the appropriate power unit and carry out a POWER ON for the converter.  
For fault cause = 8:  
Replace the power unit by one which has a newer ASIC version.

---

**F30021 Drive: Ground fault**

**Message class:** Ground fault / inter-phase short-circuit detected (7)

**Message value:** %1

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The drive has detected a ground fault.  
Possible causes:  
- Ground fault in the power cables.  
- Ground fault at the motor.  
- When the brake closes, this causes the hardware DC current monitoring to respond.  
- Short-circuit at the braking resistor.  
Fault value (r0949, interpret decimal):  
0:  
- The hardware DC current monitoring has responded.  
- Short-circuit at the braking resistor.  
> 0:  
Absolute value summation current amplitude.

**Remedy:**

- Check the power cable connections.
- Check the motor.
- Check the cables and contacts of the brake connection (a wire is possibly broken).
- Check the braking resistor.

---

**F30022 Power unit: Monitoring U<sub>ce</sub>**

**Message class:** Ground fault / inter-phase short-circuit detected (7)

**Message value:** Fault cause: %1 bin

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** POWER ON

**Cause:** In the power unit, the monitoring of the collector-emitter voltage (U<sub>ce</sub>) of the semiconductor has responded.

Possible causes:

- Fiber-optic cable interrupted.
- The power supply for power semiconductor gating missing.
- Short-circuit at the power unit output.
- Defective semiconductor in the power unit.

Fault value (r0949, interpret binary):

Bit 0: Short-circuit in phase U

Bit 1: Short-circuit in phase V

Bit 2: Short-circuit in phase W

Bit 3: Short-circuit in phase N

See also: r0949 (Fault value)

- Remedy:**
- Check the fiber-optic cable and if required, replace.
  - Check the power supply for the power semiconductor gating (24 V).
  - Check the power cable connections.
  - Select the defective semiconductor and replace.

---

**F30024 Power unit: Overtemperature thermal model**

**Message class:** Power electronics faulted (5)

**Message value:** Power semiconductor: %1, temperature: [0.01 degrees C] %2

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The temperature difference between the power semiconductor involved and the heat sink has exceeded the permissible fault threshold.

- The permissible load duty cycle was not maintained.
- Insufficient cooling, fan failure.
- Overload.
- Ambient temperature too high.
- Pulse frequency too high.

Fault value (r0949, interpret hexadecimal):

yyyyxxxx hex: yyyy= Power semiconductor, xxxx = Temperature in 0.01°C

See also: r0037 (Power unit temperatures)

- Remedy:**
- Adapt the load duty cycle.
  - Check whether the fan is running.
  - Check the fan elements.
  - Check whether the ambient temperature is in the permissible range.
  - Check the motor load.
  - Reduce the pulse frequency if this is higher than the rated pulse frequency.

---

**F30025 Power unit: Chip overtemperature**

**Message class:** Power electronics faulted (5)

**Message value:** Power semiconductor: %1, temperature: [0.01 degrees C] %2

**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The chip temperature of the power semiconductor involved has exceeded the permissible fault threshold.  
- The permissible load duty cycle was not maintained.  
- Insufficient cooling, fan failure.  
- Overload.  
- Ambient temperature too high.  
- Pulse frequency too high.

Fault value (r0949, interpret hexadecimal):  
yyyyxxxx hex: yyyy= Power semiconductor, xxxx = Temperature in 0.01°C

**Remedy:**

- Adapt the load duty cycle.
- Check whether the fan is running.
- Check the fan elements.
- Check whether the ambient temperature is in the permissible range.
- Check the motor load.
- Reduce the pulse frequency if this is higher than the rated pulse frequency.

Note:  
This fault can only be acknowledged after the alarm threshold for alarm A030252 has been fallen below.  
See also: r0037 (Power unit temperatures)

---

**F30027**      **Power unit: Precharging DC link time monitoring**  
**Message class:** Infeed faulted (13)  
**Message value:** Enable signals: %1, Status: %2  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY

- Cause:** The power unit DC link was not able to be precharged within the expected time.
- 1) There is no line voltage connected.
  - 2) The line contactor/line side switch has not been closed.
  - 3) The line voltage is too low.
  - 4) Line voltage incorrectly set (p0210).
  - 5) The precharging resistors are overheated as there were too many precharging operations per time unit.
  - 6) The precharging resistors are overheated as the DC link capacitance is too high.
  - 7) The precharging resistors are overheated because when there is no "ready for operation" (r0863.0) of the infeed unit, power is taken from the DC link.
  - 8) The precharging resistors are overheated as the line contactor was closed during the DC link fast discharge through the Braking Module.
  - 9) The DC link has either a ground fault or a short-circuit.
  - 10) The precharging circuit is possibly defective (only for chassis units).
  - 11) Infeed defective and/or fuse ruptured

Fault value (r0949, interpret binary):

yyyyxxxx hex:

yyyy = power unit state

0: Fault status (wait for OFF and fault acknowledgment).

1: Restart inhibit (wait for OFF).

2: Overvoltage condition detected -> change into the fault state.

3: Undervoltage condition detected -> change into the fault state.

4: Wait for bridging contactor to open -> change into the fault state.

5: Wait for bridging contactor to open -> change into restart inhibit.

6: Wait for bypass contactor to open

7: Commissioning.

8: Ready for precharging.

9: Precharging started, DC link voltage lower than the minimum switch-on voltage.

10: Precharging, DC link voltage end of precharging still not detected.

11: Wait for the end of the de-bounce time of the main contactor after precharging has been completed.

12: Precharging completed, ready for pulse enable.

13: It was detected that the STO terminal was energized at the power unit.

xxxx = Missing internal enable signals, power unit (inverted bit-coded, FFFF hex -> all internal enable signals available)

Bit 0: Power supply for the power semiconductor gating shut down.

Bit 1: Ground fault detected.

Bit 2: Peak current intervention.

Bit 3: I2t exceeded.

Bit 4: Thermal model overtemperature calculated.

Bit 5: (heat sink, gating module, power unit) overtemperature measured.

Bit 6: Reserved.

Bit 7: Overvoltage detected.

Bit 8: Power unit has completed precharging, ready for pulse enable.

Bit 9: STO terminal missing.

Bit 10: Overcurrent detected.

Bit 11: Armature short-circuit active.

Bit 12: DRIVE-CLiQ fault active.

Bit 13: Vce fault detected, transistor de-saturated due to overcurrent/short-circuit.

Bit 14: Undervoltage detected.

See also: p0210 (Device supply voltage)

**Remedy:**

In general:

- Check the line voltage at the input terminals.
- Check the line voltage setting (p0210).

For booksize drive units, the following applies:

- Wait (approx. 8 minutes) until the precharging resistors have cooled down. For this purpose, preferably disconnect the infeed unit from the line supply.

For 5):

- Carefully observe the permissible precharging frequency (refer to the product documentation).

For 6):

- Check the total capacitance of the DC link and reduce in accordance with the maximum permissible DC link capacitance if necessary (refer to the product documentation).

For 7):

- Interconnect the ready-for-operation signal from the infeed unit (r0863.0) in the enable logic of the drives connected to this DC link.

For 8):

- Check the connections of the external line contactor. The line contactor must be open during DC link fast discharge.

For 9):

- Check the DC link for ground faults or short-circuits.

For 11):

- Check the DC link voltage of the infeed (r0070) and Motor Modules (r0070).

If the DC link voltage generated by the infeed (or external) is not displayed for the Motor Modules (r0070), then a fuse has ruptured in the Motor Module.

See also: p0210 (Device supply voltage)

---

**A30030 Power unit: Internal overtemperature alarm**

**Message class:** Power electronics faulted (5)

**Message value:** %1

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The temperature inside the drive converter has exceeded the permissible temperature limit.

- Insufficient cooling, fan failure.
- Overload.
- Ambient temperature too high.

Alarm value (r2124, interpret decimal):

Only for internal Siemens troubleshooting.

**Remedy:**

- Possibly use an additional fan.
- Check whether the ambient temperature is in the permissible range.

Notice:

This alarm is automatically withdrawn once the permissible temperature limit value has been fallen below minus 5 K.

---

**A30031 Power unit: Hardware current limiting in phase U**

**Message class:** Power electronics faulted (5)

**Message value:** -

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

12.3 Faults and alarms

---

- Cause:** Hardware current limit for phase U responded. The pulsing in this phase is inhibited for one pulse period.
- Closed-loop control is incorrectly parameterized.
  - Fault in the motor or in the power cables.
  - The power cables exceed the maximum permissible length.
  - Motor load too high
  - Power unit defective.
- Remedy:**
- Check the motor data.
  - Check the motor circuit configuration (star/delta).
  - Check the motor load.
  - Check the power cable connections.
  - Check the power cables for short-circuit or ground fault.
  - Check the length of the power cables.

---

**A30032 Power unit: Hardware current limiting in phase V**

- Message class:** Power electronics faulted (5)
- Message value:** -
- Component:** Power Unit
- Response:** NONE
- Acknowledgment:** NONE
- Cause:** Hardware current limit for phase V responded. The pulsing in this phase is inhibited for one pulse period.
- Closed-loop control is incorrectly parameterized.
  - Fault in the motor or in the power cables.
  - The power cables exceed the maximum permissible length.
  - Motor load too high
  - Power unit defective.
- Remedy:**
- Check the motor data.
  - Check the motor circuit configuration (star/delta).
  - Check the motor load.
  - Check the power cable connections.
  - Check the power cables for short-circuit or ground fault.
  - Check the length of the power cables.

---

**A30033 Power unit: Hardware current limiting in phase W**

- Message class:** Power electronics faulted (5)
- Message value:** -
- Component:** Power Unit
- Response:** NONE
- Acknowledgment:** NONE
- Cause:** Hardware current limit for phase W responded. The pulsing in this phase is inhibited for one pulse period.
- Closed-loop control is incorrectly parameterized.
  - Fault in the motor or in the power cables.
  - The power cables exceed the maximum permissible length.
  - Motor load too high
  - Power unit defective.
- Remedy:**
- Check the motor data.
  - Check the motor circuit configuration (star/delta).
  - Check the motor load.
  - Check the power cable connections.
  - Check the power cables for short-circuit or ground fault.
  - Check the length of the power cables.



---

**A30034 Power unit: Internal overtemperature**

**Message class:** Power electronics faulted (5)

**Message value:** %1

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The alarm threshold for internal overtemperature has been reached.  
If the temperature inside the power unit increases up to the fault threshold, then fault F30036 is triggered.

- Ambient temperature might be too high.
- Insufficient cooling, fan failure.

Alarm value (r2124, interpret binary):

- Bit 0 = 1: Overtemperature in the control electronics area.
- Bit 1 = 1: Overtemperature in the power electronics area.
- Bit 2 = 1: Overtemperature in the processor area.
- Bit 3 = 1: Overtemperature in the processor area.
- Bit 4 = 1: Overtemperature when the internal fan is defective.
- Bit 5 = 1: Intake air overtemperature.

**Remedy:**

- Check the ambient temperature.
- Check the fan for the inside of the unit.

---

**F30036 Power unit: Internal overtemperature**

**Message class:** Power electronics faulted (5)

**Message value:** %1

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The temperature inside the converter has exceeded the permissible limit value.

- Insufficient cooling, fan failure.
- Overload.
- Ambient temperature too high.

Fault value (r0949, interpret binary):

- Bit 0 = 1: Overtemperature in the control electronics area.
- Bit 1 = 1: Overtemperature in the power electronics area.
- Bit 2 = 1: Overtemperature in the processor area.
- Bit 3 = 1: Overtemperature in the processor area.
- Bit 4 = 1: Overtemperature when the internal fan is defective.
- Bit 5 = 1: Intake air overtemperature.

**Remedy:**

- Check the internal fan.
- Check the fan elements.
- Check whether the ambient temperature is in the permissible range.

Notice:  
This fault can only be acknowledged once the permissible temperature limit minus 5 K has been fallen below.

---

**F30037 Power unit: Rectifier overtemperature**

**Message class:** Power electronics faulted (5)

**Message value:** %1

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

12.3 Faults and alarms

---

**Cause:** The temperature in the rectifier of the power unit has exceeded the permissible temperature limit.  
- Insufficient cooling, fan failure.  
- Overload.  
- Ambient temperature too high.  
- Line phase failure.

Fault value (r0949, interpret decimal):  
Temperature [0.01 °C].

**Remedy:** - Check whether the fan is running.  
- Check the fan elements.  
- Check whether the ambient temperature is in the permissible range.  
- Check the motor load.  
- Check the line phases.

Notice:

This fault can only be acknowledged after the alarm threshold for alarm A05004 has been undershot.

---

**F30040 Power unit: 24/48 V undervoltage**

**Message class:** Supply voltage fault (undervoltage) (3)

**Message value:** Channel: %1, voltage: %2 [0.1 V]

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The undervoltage threshold of the 24 V power supply for the power unit was fallen below for longer than 3 ms.  
Note:

- For booksize power units, the undervoltage threshold is 15 V.
- For CU310-2, CUA31 and CUA32 the undervoltage threshold is 16 V.
- for all other power units (e.g. S120M), the undervoltage threshold depends on the power unit, and is not displayed.

Fault value (r0949, interpret hexadecimal):  
yyxxxx hex: yy = channel, xxxx = voltage [0.1 V]  
yy = 0: 24 V power supply  
yy = 1: 48 V power supply

**Remedy:** - Check the power supply of the power unit.  
- Carry out a POWER ON (switch-off/switch-on) for the component.

---

**A30041 Power unit: Undervolt 24/48 V alarm**

**Message class:** Supply voltage fault (undervoltage) (3)

**Message value:** Channel: %1, voltage: %2 [0.1 V]

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** For the power unit power supply, the lower threshold has been violated.  
Alarm value (r2124, interpret hexadecimal):

yyxxxx hex: yy = channel, xxxx = voltage [0.1 V]  
yy = 0: 24 V power supply  
yy = 1: 48 V power supply

**Remedy:** - Check the power supply of the power unit.  
- Carry out a POWER ON (switch-off/switch-on) for the component.

---

**A30042 Power unit: Fan has reached the maximum operating hours**

**Message class:** Power electronics faulted (5)

**Message value:** %1

**Component:** Power Unit  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The maximum operating time of at least one fan will soon be reached, or has already been exceeded.  
Alarm value (r2124, interpret binary):  
Bit 0 = 1:  
The wear counter of the heat sink fan has reached 99 %. The remaining service life is 1 %. After this 1 % has elapsed, bit 0 is cleared and bit 2 is set in the alarm value.  
Bit 2 = 1:  
The wear counter of the heat sink fan has exceeded 100 %.  
Bit 8 = 1:  
The wear counter of the 1st internal fan has reached 99 %. The remaining service life is 1 %. After this 1 % has elapsed, bit 8 is cleared and bit 10 is set in the alarm value.  
Bit 10 = 1:  
The wear counter of the 1st internal fan has exceeded 100 %.  
Bit 16 = 1:  
The wear counter of the 2nd internal fan has reached 99 %. The remaining service life is 1 %. After this 1 % has elapsed, bit 16 is cleared and bit 18 is set in the alarm value.  
Bit 18 = 1:  
The wear counter of the 2nd internal fan has exceeded 100 %.  
**Remedy:** For the fan involved, carry out the following:  
1. Replace the fan.  
2. Reset the wear counter using the appropriate button in Startdrive or the web server.  
See also: r0277 (Power unit heat sink fan wear counter)

---

**F30043**      **Power unit: Overvolt 24/48 V**  
**Message class:** Supply voltage fault (overvoltage) (3)  
**Message value:** Channel: %1, voltage: %2 [0.1 V]  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** POWER ON  
**Cause:** For the power unit power supply, the upper threshold has been violated.  
Fault value (r0949, interpret hexadecimal):  
yyxxxx hex: yy = channel, xxxx = voltage [0.1 V]  
yy = 0: 24 V power supply  
yy = 1: 48 V power supply  
**Remedy:** Check the power supply of the power unit.

---

**A30044**      **Power unit: Overvolt 24/48 V alarm**  
**Message class:** Supply voltage fault (overvoltage) (3)  
**Message value:** Channel: %1, voltage: %2 [0.1 V]  
**Component:** Power Unit  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** For the power unit power supply, the upper threshold has been violated.  
Alarm value (r2124, interpret hexadecimal):  
yyxxxx hex: yy = channel, xxxx = voltage [0.1 V]  
yy = 0: 24 V power supply  
yy = 1: 48 V power supply  
**Remedy:** Check the power supply of the power unit.

---

**F30045 Power unit: Supply undervoltage**

**Message class:** Supply voltage fault (undervoltage) (3)

**Message value:** %1

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** Power supply fault in the power unit.

- The voltage monitor signals an undervoltage fault on the module.

The following applies for CU31x:

- The voltage monitoring on the DAC board signals an undervoltage fault on the module.

For S120M, the following applies:

- This message is displayed for undervoltage or overvoltage.

**Remedy:** - Check the power supply of the power unit.

- Carry out a POWER ON (switch-off/switch-on) for the component.

- Replace the module if necessary.

---

**A30046 Power unit: Undervoltage alarm**

**Message class:** Power electronics faulted (5)

**Message value:** %1

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** Before the last restart, a problem occurred at the power unit power supply.

The voltage monitor in the internal FPGA of the PSA signals an undervoltage fault on the module.

Alarm value (r2124, interpret decimal):

Register value of the voltage fault register.

**Remedy:** - Check the 24 V DC voltage supply to power unit.

- Carry out a POWER ON (switch-off/switch-on) for the component.

- Replace the module if necessary.

---

**A30048 Power unit: fan defective**

**Message class:** External measured value / signal state outside the permissible range (16)

**Message value:** Fault cause: %1 bin

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The feedback signal of a fan signals a fault, or there is a communication error with one or several fans.

- Fan defective.

- Fan blocked.

- Feedback signal error.

Alarm value (r2124, interpret binary):

Bit 0 = 1: heat sink fan

Bit 1 = 1: fan 1 inside the device

Bit 2 = 1: fan 2 inside the device

Bit 4 = 1: Internal communication error to one or several fans

Bits 16 to 31 are only for internal Siemens diagnostics.

**Remedy:**

- Check the fan involved.
- If required, replace the fan.
- For communication errors, update the software or replace the power unit.

Note:

If the alarm has been withdrawn, this does not necessarily mean that the cause of the fault has been resolved. It is also possible that the software switched off the fan, and therefore can no longer evaluate the feedback signal.

---

**F30050 Power unit: 24 V supply overvoltage**

**Message class:** Supply voltage fault (overvoltage) (3)

**Message value:** -

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** POWER ON

**Cause:** The voltage monitor signals an overvoltage fault on the module.

**Remedy:**

- Check the 24 V power supply.
- Replace the module if necessary.

---

**F30051 Power unit: Motor holding brake short-circuit detected**

**Message class:** External measured value / signal state outside the permissible range (16)

**Message value:** %1

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** A short-circuit at the motor holding brake terminals has been detected.  
Fault value (r0949, interpret decimal):  
Only for internal Siemens troubleshooting.

**Remedy:**

- Check the motor holding brake for a short-circuit.
- Check the connection and cable for the motor holding brake.

---

**F30052 EEPROM data error**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** POWER ON

**Cause:** The EEPROM data of the power unit module are incorrect.  
Fault value (r0949, interpret hexadecimal):  
Only for internal Siemens troubleshooting.

**Remedy:** Replace the power unit module or update the EEPROM data.

---

**F30053 FPGA data faulty**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** POWER ON

**Cause:** The FPGA data of the power unit are faulty. This can be caused, for example, if a firmware update is interrupted.

**Remedy:** Replace the power unit or update of the FPGA data by updating the firmware.  
**Note:**  
If this fault occurs after a firmware update, then update the firmware again.

---

**F30055 Power unit: Braking chopper overcurrent**

**Message class:** Braking Module faulted (14)

**Message value:** -

**Component:** None

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** An overcurrent condition has occurred in the braking chopper.

**Remedy:** - Check whether the braking resistor has a short-circuit.  
- For an external braking resistor, check whether the resistor may have been dimensioned too small.  
**Note:**  
The braking chopper is only enabled again at pulse enable after the fault has been acknowledged.

---

**A30057 Power unit: Line asymmetry**

**Message class:** Network fault (2)

**Message value:** %1

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** Frequencies have been detected on the DC link voltage that would suggest line asymmetry or failure of a line phase. It is also possible that a motor phase has failed.  
If these frequencies occur with the same or even higher amplitudes, then after a device-specific time elapses, fault F30011 is output  
Alarm value, only for internal Siemens troubleshooting.

**Remedy:** - Check the line phase connection.  
- Check the motor feeder cable connections.  
If there is no phase failure of the line or motor, then line asymmetry is involved.  
- Reduce the power in order to avoid fault F30011.

---

**F30058 Power unit: heat sink fan defective**

**Message class:** External measured value / signal state outside the permissible range (16)

**Message value:** Fault cause: %1 bin

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The feedback signal of the heat sink fan signals a fault, or there is a communication error with the fan.  
- Fan defective.  
- Fan blocked.  
- Feedback signal error.  
Fault value (r0949, interpret binary):  
Value in bits 0 to 15:  
0: Feedback signal of the fan signals a fault  
1: Internal communication error to the fan  
Bits 16 to 31 are only for internal Siemens diagnostics.

**Remedy:**

- Check the heat sink fan and replace if necessary.
- For communication errors, update the software or replace the power unit.

**Note:**

- If the fault can be acknowledged, this does not necessarily mean that the cause of the fault has been resolved. It is also possible that the software switched off the fan, and therefore can no longer evaluate the feedback signal.

---

**F30059 Power unit: Internal fan 1 defective**

**Message class:** Auxiliary unit faulted (20)

**Message value:** %1

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The feedback signal of internal fan 1 signals a fault, or there is a communication error with the fan.

Fault value (r0949, interpret decimal):

0: Feedback signal of the fan signals a fault

1: Internal communication error to the fan

**Remedy:**

- Check internal fan 1 and replace if necessary.
- For communication errors, update the software or replace the power unit.

**Note:**

If the fault can be acknowledged, this does not necessarily mean that the cause of the fault has been resolved. It is also possible that the software switched off the fan, and therefore can no longer evaluate the feedback signal.

---

**F30062 Bypass contactor opened under current**

**Message class:** Infeed faulted (13)

**Message value:** -

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The bypass contactor of the precharging unit has been opened under current.

Possible causes:

- A defect at the bypass contactor

**Remedy:** It is urgently recommended that the components involved are replaced to prevent serious damage to the entire converter line-up.

---

**F30068 Power unit: undertemperature inverter heat sink**

**Message class:** Power electronics faulted (5)

**Message value:** %1

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The actual inverter heat sink temperature is below the permissible minimum value.

Possible causes:

- The power unit is being operated at an ambient temperature that lies below the permissible range.

- The temperature sensor evaluation is defective.

Fault value (r0949, interpret decimal):

Inverter heat sink temperature [0.1 °C].

**Remedy:**

- Ensure that higher ambient temperatures prevail.

- Replace the power unit.

**A30076 Power unit: Thermal overload braking resistor alarm****Message class:** Braking Module faulted (14)**Message value:** %1**Component:** Power Unit**Response:** NONE**Acknowledgment:** NONE

**Cause:** The energy absorbed by the braking resistor has exceeded the alarm threshold of 80 %. If the power unit is still operated in the generator mode, then this can reach the shutdown threshold. To avoid overheating of the braking resistor, use of the braking resistor is inhibited and alarm A30077 is output.

Alarm value (r2124, interpret decimal):

Energy absorbed by the braking resistor [Ws].

**Remedy:** Reduce the power when generating.

Note:

For a DC link coupling, the generating power of all of the coupled power units must be taken into consideration.

**A30077 Power unit: Thermal overload braking resistor****Message class:** Braking Module faulted (14)**Message value:** %1**Component:** Power Unit**Response:** NONE**Acknowledgment:** NONE

**Cause:** The braking resistor is thermally overloaded. This is the reason that its use was inhibited.

Alarm value (r2124, interpret decimal):

Energy absorbed by the braking resistor [Ws].

**Remedy:** Reduce the power when generating.

Note:

- Once the braking resistor has thermally recovered, it is enabled for further use.

- For a DC link coupling, the generating power of all the coupled power units must be taken into consideration.

**F30078 Power unit: Line reactor overheated****Message class:** Overtemperature of the electronic components (6)**Message value:** -**Component:** Power Unit**Response:** OFF2**Acknowledgment:** IMMEDIATELY

**Cause:** The temperature monitoring of the line reactor has responded. In addition to the OFF2 response, the use of the braking resistor was inhibited.

Note:

- An overtemperature condition of the line reactor can occur when a DC link coupling is used – and if the power when motoring, which is fed into the DC link - Is not evenly distributed across the rectifiers of the power units.

**Remedy:** - Check the converter fan and replace if necessary.

- Reduce the motoring power.

**F30081 Power unit: Switching operations too frequent****Message class:** Power electronics faulted (5)**Message value:** Fault cause: %1 bin**Component:** Power Unit**Response:** OFF2**Acknowledgment:** IMMEDIATELY



- Cause:** The power unit has executed too many switching operations for current limitation.
- Closed-loop control is incorrectly parameterized.
  - Motor has a short-circuit or fault to ground (frame).
  - *U/f* operation: Up ramp set too low.
  - *U/f* operation: Rated motor current is significantly higher than that of the power section.
  - Infeed: High discharge and post-charging currents for line voltage dip.
  - Infeed: High post-charging currents for overload when motoring and DC link voltage dip.
  - Infeed: Short-circuit currents at switch-on as there is no line reactor.
  - Power cables are not correctly connected.
  - Power cables exceed the maximum permissible length.
  - Power unit defective.
- Additional causes for a parallel switching device (r0108.15 = 1):
- A power unit has tripped (switched off) due to a ground fault.
  - The closed-loop circulating current control is either too slow or has been set too fast.
- Fault value (r0949, interpret bit-serial):
- Bit 0: Phase U.  
Bit 1: Phase V.  
Bit 2: Phase W.
- Remedy:**
- Check the motor data - If required, carry out commissioning.
  - Check the motor circuit configuration (star-delta)
  - *U/f* operation: Increase up ramp.
  - *U/f* operation: Check the rated currents of the motor and power unit.
  - Infeed: Check the line quality.
  - Infeed: Reduce the motor load.
  - Infeed: Correct connection of the line reactor.
  - Check the power cable connections.
  - Check the power cables for short-circuit or ground fault.
  - Check the length of the power cables.
  - Replace power unit.
- For a parallel switching device (r0108.15 = 1) the following additionally applies:
- Check the ground fault monitoring thresholds (p0287).
  - Check the setting of the closed-loop circulating current control (p7036, p7037).

---

**A30082 Power unit: cooling medium flow rate too low alarm threshold**

**Message class:** Power electronics faulted (5)

**Message value:** -

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The flow rate is too low, and has fallen below the specified alarm threshold. If the flow rate is still too low after the specified time has expired, then fault F30083 is output.

- Remedy:**
- Check the coolant flow rate.
  - Check the thermal conductivity of the coolant.
  - Check the coolant concentration.

---

**F30083 Power unit: cooling medium flow rate too low fault threshold**

**Message class:** Power electronics faulted (5)

**Message value:** -

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

12.3 Faults and alarms

---

**Cause:** The flow rate is too low, and has fallen below the specified fault threshold.

**Remedy:**

- Check the coolant flow rate.
- Check the thermal conductivity of the coolant.
- Check the coolant concentration.

---

**A30086 Power unit: coolant temperature has exceeded the alarm threshold**

**Message class:** Power electronics faulted (5)

**Message value:** %1

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The coolant temperature has exceeded the specified alarm threshold.  
If the coolant temperature increases up to the specified fault threshold, then fault F30087 is output.  
Alarm value (r2124, interpret decimal):  
Coolant temperature.

**Remedy:** Check the cooling system and the ambient conditions.

---

**F30087 Power unit: coolant temperature has exceeded the fault threshold**

**Message class:** Power electronics faulted (5)

**Message value:** %1

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The coolant temperature has exceeded the specified fault threshold.  
Fault value (r0949, interpret decimal):  
Coolant temperature.

**Remedy:** Check the cooling system and the ambient conditions.

---

**F30105 PU: Actual value sensing fault**

**Message class:** Power electronics faulted (5)

**Message value:** -

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** At least one incorrect actual value channel was detected on the Power Stack Adapter (PSA).  
The incorrect actual value channels are displayed in the following diagnostic parameters.

**Remedy:** Evaluate the diagnostic parameters.  
If the actual value channel is incorrect, check the components and if required, replace.

---

**A30250 Power unit: Overtemperature heat sink inverter**

**Message class:** Power electronics faulted (5)

**Message value:** -

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The alarm threshold for overtemperature at the inverter heat sink has been reached.  
Fault F30004 is initiated if the temperature of the heat sink increases by 5 K.

**Remedy:** Check the following:

- Is the ambient temperature within the defined limit values?
- Have the load conditions and the load duty cycle been appropriately dimensioned?
- Has the cooling failed?

---

**A30251 Power unit: Rectifier overtemperature**

**Message class:** Power electronics faulted (5)

**Message value:** -

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The alarm threshold for the overtemperature of the rectifier has been reached. The response is set using p0290. If the temperature of the rectifier increases by an additional 5 K, then fault F30037 is triggered.

**Remedy:** Check the following:

- Is the ambient temperature within the defined limit values?
- Have the load conditions and the load duty cycle been appropriately dimensioned?
- Has the fan failed? Check the direction of rotation.
- Has a phase of the line supply failed?
- Is an arm of the supply (incoming) rectifier defective?

---

**A30252 Power unit: Chip overtemperature alarm**

**Message class:** Power electronics faulted (5)

**Message value:** Power semiconductor: %1, temperature: [0.01 degrees C] %2

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The chip temperature of the power semiconductor involved has exceeded the permissible alarm threshold.

Note:

- If the chip temperature of the power semiconductor involved increases by 5K, then fault F30025 is initiated.

Alarm value (r2124, interpret hexadecimal):

yyyyxxx hex: yyyy= Power semiconductor, xxxx = Temperature in 0.01°C

**Remedy:** Check the following:

- Is the ambient temperature within the defined limit values?
- Have the load conditions and the load duty cycle been appropriately dimensioned?
- Has the cooling failed?
- Pulse frequency too high?

---

**A30253 Power unit: Overtemperature thermal model alarm**

**Message class:** Power electronics faulted (5)

**Message value:** Power semiconductor: %1, temperature: [0.01 degrees C] %2

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The temperature difference between the power semiconductor involved and the heat sink has exceeded the permissible alarm threshold.

The maximum output current is reduced as overload response.

Alarm value (r2124, interpret hexadecimal):

yyyyxxx hex: yyyy= Power semiconductor, xxxx = Temperature in 0.01°C

12.3 Faults and alarms

---

**Remedy:** Not necessary.  
The alarm is automatically withdrawn once the alarm threshold has been fallen below.  
**Note:**  
If the temperature continues to increase, this can result in fault F30024.

---

**A30256 Power unit: Overload I2t (AC)**

**Message class:** Power electronics faulted (5)  
**Message value:** -  
**Component:** Power Unit  
**Response:** NONE  
**Acknowledgment:** NONE

**Cause:** The alarm threshold for the I2t overload on the AC side of the power unit has been exceeded. Depending on the selected overload response, the output current and therefore the output frequency can be reduced. If the current reduction is not sufficient to thermally relieve the power unit, then when the fault threshold for overload is reached the drive switches off the power unit and outputs fault F30005.  
See also: r0036 (Power unit overload)

**Remedy:** - Reduce the continuous load.  
- Adapt the load duty cycle.  
- Check the rated currents of the motor and power unit.  
See also: p0290 (Power unit overload response)

---

**A30257 Power unit: Overload I2t (DC)**

**Message class:** Power electronics faulted (5)  
**Message value:** -  
**Component:** Power Unit  
**Response:** NONE  
**Acknowledgment:** NONE

**Cause:** The alarm threshold for the I2t overload on the DC side of the power unit has been exceeded.  
Depending on the selected overload response, the output current and therefore the output frequency can be reduced. If the current reduction is not sufficient to thermally relieve the power unit, then when the fault threshold for overload is reached the drive switches off the power unit and outputs fault F30258.  
See also: r0036 (Power unit overload)

**Remedy:** - Reduce the continuous load.  
- Adapt the load duty cycle.  
See also: p0290 (Power unit overload response)

---

**F30258 Power unit: Overload I2t (DC)**

**Message class:** Power electronics faulted (5)  
**Message value:** %1  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY

**Cause:** The fault threshold for the I2t overload on the DC side of the power unit has been exceeded.  
The permissible load duty cycle or the continuous load was not maintained.  
Fault value (r0949, interpret decimal):  
I2t (DC) [100 % = 16384]  
See also: r0036 (Power unit overload)

**Remedy:** - Reduce the continuous load.  
- Adapt the load duty cycle.  
See also: p0307 (Rated motor power)

---

---

**A30259      Braking resistor value too low**

**Message class:** Braking Module faulted (14)

**Message value:** %1

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The braking resistor value used in p0216 is too low.  
This can result in an excessively high braking current.

Alarm value (r2124, interpret decimal):  
Minimum limit value of the braking resistor [0.1 Ohm]  
See also: p0216 (Braking resistance value)

**Remedy:** - Use a braking resistor with the appropriate resistance value  
- Observe the product documentation

---

**F30260      Power unit: Fault in the driver supply for the power semiconductor**

**Message class:** Hardware/software error (1)

**Message value:** -

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** A fault has occurred in the driver supply of the power semiconductor.

**Remedy:** There is a hardware defect. The device must be replaced.

---

**F30262      Power unit: Braking chopper defective**

**Message class:** Power electronics faulted (5)

**Message value:** -

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The braking chopper is defective.

**Remedy:** Replace the converter.

---

**F30263      Power unit: Braking chopper upper defective**

**Message class:** Power electronics faulted (5)

**Message value:** -

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The upper braking chopper is defective.

**Remedy:** Replace the converter.

---

**F30264      Power unit: Braking chopper inhibited due to implausible DC link voltage**

**Message class:** Braking Module faulted (14)

**Message value:** %1

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

12.3 Faults and alarms

---

**Cause:** The braking chopper was inhibited because the unloaded DC link voltage continuously reaches or exceeds the chopper activation threshold. This prevents the braking chopper from being permanently active and possibly damaged.

Possible causes:

The value of parameter p0210 does not match the line voltage.

Fault value (r0949, interpret decimal): DC link voltage [V]

**Remedy:** Replace the converter.

---

**F30265 Power unit: Line voltage failure detected**

**Message class:** Power electronics faulted (5)

**Message value:** -

**Component:** Power Unit

**Response:** OFF3

**Acknowledgment:** IMMEDIATELY

**Cause:** Line voltage failure was detected

**Remedy:** - Switch on the line voltage.  
- To increase the degree of ruggedness, the delay time in p3234 can be increased.  
- If necessary, line voltage failure detection can be deactivated using p2149.16.  
See also: p2149, p3234

---

**A30266 Power unit: Required modulator setting cannot be implemented**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The required modulator setting was not able to be implemented. This can involve some undesirable effects; for example, unexpectedly high switching losses can occur or the current controller bandwidth can be reduced.

Alarm value (r2124, interpret hexadecimal):

Only for internal Siemens troubleshooting.

**Remedy:** - Carry out a POWER ON (switch-off/switch-on).

---

**A30267 Power unit: Active power overload**

**Message class:** Power electronics faulted (5)

**Message value:** -

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The alarm threshold for the active power overload of the power unit has been exceeded. Depending on the selected overload response, the output current and therefore the output frequency can be reduced. If the current reduction is not sufficient to thermally relieve the power unit, then when the fault threshold for overload is reached the drive switches off the power unit and outputs fault F30268.

See also: r0036 (Power unit overload)

**Remedy:** - Reduce the continuous load.  
- Adapt the load duty cycle.  
See also: p0290 (Power unit overload response)

---

---

**F30268 Power unit: Active power overload**

**Message class:** Power electronics faulted (5)

**Message value:** %1

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The fault threshold for the active power overload of the power unit has been exceeded.  
The permissible load duty cycle or the continuous load was not maintained.

Fault value (r0949, interpret decimal):

Active power [100 % = 16384]

See also: r0036 (Power unit overload)

**Remedy:** - Reduce the continuous load.  
- Adapt the load duty cycle.  
See also: p0307 (Rated motor power)

---

**F30314 Power unit: 24 V power supply overloaded by PM**

**Message class:** Supply voltage fault (undervoltage) (3)

**Message value:** -

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** The 24 V power supply through the Power Module (PM) is overloaded.  
An external 24 V power supply via X124 on the Control Unit is not connected.

**Remedy:** Connect an external 24 V power supply via X124 at the Control Unit.

---

**A30315 Power unit: 24 V power supply overloaded by PM**

**Message class:** Supply voltage fault (undervoltage) (3)

**Message value:** -

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The 24 V power supply through the Power Module (PM) is overloaded.  
An external 24 V power supply via X124 on the Control Unit is not connected.

**Remedy:** Connect an external 24 V power supply via X124 at the Control Unit.

---

**A30502 Power unit: DC link overvoltage**

**Message class:** DC link overvoltage (4)

**Message value:** %1

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The power unit has detected overvoltage in the DC link on a pulse inhibit.  
- Device supply voltage too high.  
- Line reactor incorrectly dimensioned.

Alarm value (r2124, interpret decimal):

DC link voltage [1 bit = 100 mV].

See also: r0070 (Actual DC link voltage)

### 12.3 Faults and alarms

**Remedy:**

- Check the device supply voltage (p0210).
- Check the dimensioning of the line reactor.

See also: p0210 (Device supply voltage)

---

#### **C30603 SI: Module temperature - limit value exceeded**

**Message class:** Safety monitoring channel has identified an error (10)

**Message value:** -

**Variant:** S200 PN

**Component:** None

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** A safe monitoring function has detected that the module temperature has exceeded a limit value. STO (Safe Torque Off) was initiated to maintain the safe state.

**Remedy:**

- Check the ambient temperature.
- Check the module fan.
- Operate the module in the permissible range.

---

#### **F30604 SI: Safety EEPROM data error**

**Message class:** Safety monitoring channel has identified an error (10)

**Message value:** %1

**Variant:** S200 PN

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** POWER ON

**Cause:** Safety relevant EEPROM data are not correct.  
This message results in an STO (Safe Torque Off).

Message value (r60049, interpret decimal): Only for internal Siemens fault diagnostics.

**Remedy:** Replace the module

---

#### **A30605 SI: Checksum error has occurred**

**Message class:** Safety monitoring channel has identified an error (10)

**Message value:** %1

**Variant:** S200 PN

**Component:** None

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** A checksum error (CRC error) has occurred in the converter program memory.

**Remedy:**

- Carry out a POWER ON (switch-off/switch-on).
- Upgrade firmware to later version.
- Contact Technical Support.

---

#### **C30649 SI: Internal software error**

**Message class:** Hardware/software error (1)

**Message value:** Module: %1, line: %2

**Variant:** S200 PN

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY



**Cause:** An internal error has occurred in the Safety Integrated software.  
Note:  
This message results in an STO (Safe Torque Off) that cannot be acknowledged.  
Message value (r60049, interpret hexadecimal):  
Only for internal Siemens troubleshooting.

**Remedy:**

- Carry out a POWER ON (switch-off/switch-on) for all components.
- Re-commission the "Safety Integrated" function and carry out a POWER ON.
- Upgrade firmware to later version.
- Contact Technical Support.
- Replace hardware component.

---

**N30800 Power unit: Group signal**

**Message class:** Power electronics faulted (5)  
**Message value:** -  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** NONE  
**Cause:** The power unit has detected at least one fault.  
**Remedy:** Evaluate the other messages that are presently available.

---

**F30801 Power unit: Sign-of-life missing**

**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Message value:** Component number: %1, fault cause: %2  
**Component:** Control Unit (CU)  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** Internal communications error.  
The computing time load might be too high.  
Message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause  
xx = 0A hex (10 dec):  
The sign-of-life bit in the receive telegram is not set.  
**Remedy:**

- Deselect functions that are not required.

---

**F30802 Power unit: Time slice overflow**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** A time slice overflow has occurred.  
Fault value (r0949, interpret decimal):  
xx: time slice number  
**Remedy:**

- Carry out a POWER ON (switch-off/switch-on) for all components.
- Upgrade firmware to later version.
- Contact Technical Support.

---

**F30804 Power unit: Checksum error occurred**

**Message class:** Hardware/software error (1)

### 12.3 Faults and alarms

**Message value:** %1  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** A checksum error (CRC error) has occurred for the power unit.  
**Remedy:**  
- Carry out a POWER ON (switch-off/switch-on) for all components.  
- Upgrade firmware to later version.  
- Contact Technical Support.

---

#### **F30805 Power unit: EEPROM checksum error**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** Internal parameter data is corrupted.  
Fault value (r0949, interpret hexadecimal):  
01: EEPROM access error.  
02: Too many blocks in the EEPROM.  
**Remedy:** Replace the module.

---

#### **F30809 Power unit: Switching information not valid**

**Message class:** Hardware/software error (1)  
**Message value:** -  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** For 3P gating unit, the following applies:  
The last switching status word in the setpoint telegram is identified by the end ID. Such an end ID was not found.  
**Remedy:**  
- Carry out a POWER ON (switch-off/switch-on) for all components.  
- Upgrade firmware to later version.  
- Contact Technical Support.

---

#### **F30810 Power unit: Watchdog timer expired**

**Message class:** Hardware/software error (1)  
**Message value:** -  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The watchdog timer has expired. This can only be caused by a fatal software error.  
**Remedy:**  
- Carry out a POWER ON (switch-off/switch-on) for all components.  
- Upgrade firmware to later version.  
- Contact Technical Support.

---

#### **F30815 Power unit: Processor clock signal error**

**Message class:** Hardware/software error (1)  
**Message value:** -  
**Component:** Power Unit  
**Response:** OFF2

**Acknowledgment:** POWER ON

**Cause:** The processor clock signal monitoring has signaled an error. This can involve the signal itself or its PLL.

**Remedy:**  
- Replace the hardware.  
- Contact Technical Support.

---

**F30820 Power unit: Telegram error**

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Message value:** Component number: %1, fault cause: %2

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** Internal communications error.  
Error cause:  
1 (= 01 hex):  
Checksum error (CRC error).  
2 (= 02 hex):  
Telegram is shorter than specified in the length byte or in the receive list.  
3 (= 03 hex):  
Telegram is longer than specified in the length byte or in the receive list.  
4 (= 04 hex):  
The length of the receive telegram does not match the receive list.  
5 (= 05 hex):  
The type of the receive telegram does not match the receive list.  
6 (= 06 hex):  
The address of the component in the telegram and in the receive list do not match.  
7 (= 07 hex):  
A SYNC telegram is expected - but the received telegram is not a SYNC telegram.  
8 (= 08 hex):  
No SYNC telegram is expected - but the received telegram is one.  
9 (= 09 hex):  
The error bit in the receive telegram is set.  
16 (= 10 hex):  
The receive telegram is too early.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause

**Remedy:**  
- Carry out a POWER ON (switch-off/switch-on).  
- Check the electrical cabinet design and cable routing for EMC compliance.

---

**F30835 Power unit: Cyclic data transfer error**

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Message value:** Component number: %1, fault cause: %2

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

### 12.3 Faults and alarms

**Cause:** Internal communications error. The nodes do not send and receive in synchronism.  
Error cause:  
33 (= 21 hex):  
The cyclic telegram has not been received.  
34 (= 22 hex):  
Timeout in the telegram receive list.  
64 (= 40 hex):  
Timeout in the telegram send list.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- Carry out a POWER ON.
- Replace the component involved.

---

#### **F30836 Power unit: Send error**

**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Message value:** Component number: %1, fault cause: %2  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY

**Cause:** Internal communications error. Data were not able to be sent.  
Error cause:  
65 (= 41 hex):  
Telegram type does not match send list.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause

**Remedy:** Carry out a POWER ON.

---

#### **F30845 Power unit: Cyclic data transfer error**

**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Message value:** Component number: %1, fault cause: %2  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY

**Cause:** Internal communications error.  
Error cause:  
11 (= 0B hex):  
Synchronization error during alternating cyclic data transfer.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause

**Remedy:** Carry out a POWER ON (switch-off/switch-on).

---

#### **F30850 Power unit: Internal software error**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Power Unit  
**Response:** OFF1  
**Acknowledgment:** POWER ON

**Cause:** An internal software error has occurred in the power unit.  
Fault value (r0949, interpret decimal):  
Only for internal Siemens troubleshooting.

**Remedy:**

- Replace power unit.
- If required, upgrade the firmware in the power unit.
- Contact Technical Support.

---

**F30851 Power unit (CU): Sign-of-life missing**

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Message value:** Component number: %1, fault cause: %2

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** Internal communications error.  
The component did not set the sign-of-life.  
Message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause  
xx = 0A hex (10 dec):  
The sign-of-life bit in the receive telegram is not set.

**Remedy:**

- Deselect functions that are not required.
- Replace the component involved.

---

**A30853 Power unit: Sign-of-life error cyclic data**

**Message class:** General drive fault (19)

**Message value:** -

**Component:** Control Unit (CU)

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The cyclic setpoint telegrams of the power unit were not refreshed on time.

**Remedy:** - Check the power unit and if required replace.

---

**F30860 Power unit (CU): Telegram error**

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Message value:** Component number: %1, fault cause: %2

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

12.3 Faults and alarms

---

**Cause:** Internal communications error.  
Error cause:  
1 (= 01 hex):  
Checksum error (CRC error).  
2 (= 02 hex):  
Telegram is shorter than specified in the length byte or in the receive list.  
3 (= 03 hex):  
Telegram is longer than specified in the length byte or in the receive list.  
4 (= 04 hex):  
The length of the receive telegram does not match the receive list.  
5 (= 05 hex):  
The type of the receive telegram does not match the receive list.  
6 (= 06 hex):  
The address of the power unit in the telegram and in the receive list do not match.  
9 (= 09 hex):  
The internal communications from the component involved signals a failure of the supply voltage.  
16 (= 10 hex):  
The receive telegram is too early.  
17 (= 11 hex):  
CRC error and the receive telegram is too early.  
18 (= 12 hex):  
The telegram is shorter than that specified in the length byte or in the receive list and the receive telegram is too early.  
19 (= 13 hex):  
The telegram is longer than that specified in the length byte or in the receive list and the receive telegram is too early.  
20 (= 14 hex):  
The length of the receive telegram does not match the receive list and the receive telegram is too early.  
21 (= 15 hex):  
The type of the receive telegram does not match the receive list and the receive telegram is too early.  
22 (= 16 hex):  
The address of the power unit in the telegram and in the receive list does not match and the receive telegram is too early.  
25 (= 19 hex):  
The error bit in the receive telegram is set and the receive telegram is too early.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- Carry out a POWER ON (switch-off/switch-on).
- Check the electrical cabinet design and cable routing for EMC compliance.

---

**F30875 Power unit: power supply voltage failed**

**Message class:** Supply voltage fault (undervoltage) (3)  
**Message value:** Component number: %1, fault cause: %2  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The component involved has signaled that the 24 V supply has failed.  
Error cause:  
9 (= 09 hex):  
The power supply voltage for the components has failed.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- Check the supply voltage wiring (interrupted cable, contacts, ...).
- Check the dimensioning of the 24 V supply, check cable lengths.

---

**F30885 Power unit CU (CU): Cyclic data transfer error**

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Message value:** Component number: %1, fault cause: %2

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** Internal communications error.  
The nodes do not send and receive in synchronism.  
Error cause:  
26 (= 1A hex):  
Sign-of-life bit in the receive telegram not set and the receive telegram is too early.  
33 (= 21 hex):  
The cyclic telegram has not been received.  
34 (= 22 hex):  
Timeout in the telegram receive list.  
64 (= 40 hex):  
Timeout in the telegram send list.  
98 (= 62 hex):  
Error at the transition to cyclic operation.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- Check the power supply voltage of the component involved.
- Carry out a POWER ON.
- Replace the component involved.

---

**F30886 Power unit (CU): Error when sending**

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Message value:** Component number: %1, fault cause: %2

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Cause:** Internal communications error.  
Data were not able to be sent.  
Error cause:  
65 (= 41 hex):  
Telegram type does not match send list.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause

**Remedy:** Carry out a POWER ON.

---

**F30895 Power unit (CU): Alternating cyclic data transfer error**

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Message value:** Component number: %1, fault cause: %2

**Component:** Power Unit

**Response:** OFF2

12.3 Faults and alarms

---

**Acknowledgment:** IMMEDIATELY

**Cause:** Communications error.  
Error cause:  
11 (= 0B hex):  
Synchronization error during alternating cyclic data transfer.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause

**Remedy:** Carry out a POWER ON (switch-off/switch-on).

---

**F30896 Power unit (CU): Inconsistent component properties**

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Message value:** Component number: %1

**Component:** Power Unit

**Response:** OFF2

**Acknowledgment:** IMMEDIATELY

**Explanation of the message value:** For %1

Component in target topology

**Cause:** The properties of the component (power unit), specified by the fault value, have changed in an incompatible fashion with respect to the properties when running up.

Fault value (r0949, interpret decimal):

Component number.

**Remedy:** - Carry out a POWER ON.

---

**F30899 Power unit: Unknown fault**

**Message class:** Power electronics faulted (5)

**Message value:** New message: %1

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** IMMEDIATELY

**Cause:** A fault occurred on the power unit, which cannot be interpreted by the converter firmware.

This can occur if the firmware on this component is more recent than the converter firmware.

Fault value (r0949, interpret decimal):

Fault number.

Note:

If required, the significance of this new fault can be read about in a more recent description of the converter.

**Remedy:** - Replace the firmware on the power unit by an older firmware version.

- Upgrade the converter firmware.

---

**F30903 Power unit: I2C bus error occurred**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** IMMEDIATELY



**Cause:** Communications error with an EEPROM or an analog/digital converter.  
Fault value (r0949, interpret hexadecimal):  
80000000 hex:  
- Internal software error.  
00000001 hex ... 0000FFFF hex:  
- Module fault.

**Remedy:** For fault value = 80000000 hex:  
- Upgrade firmware to later version.  
For fault value = 00000001 hex ... 0000FFFF hex:  
- Replace the module.

---

**F30907 Power unit: FPGA configuration unsuccessful**

**Message class:** Hardware/software error (1)  
**Message value:** -  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** IMMEDIATELY  
**Cause:** During initialization within the power unit, an internal software error has occurred.  
**Remedy:** - If required, upgrade the firmware in the power unit.  
- Replace power unit.  
- Contact Technical Support.

---

**A30919 Power unit: Temperature monitoring failed**

**Message class:** Overtemperature of the electronic components (6)  
**Message value:** %1  
**Component:** Power Unit  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** The temperature monitoring in the power unit has failed.  
Fault-free operation of the drive system is no longer guaranteed.  
Alarm value (r2124, interpret binary):  
Bit 0: Sensor 1 for the internal temperature can no longer be evaluated.  
Bit 1: Sensor 2 for the internal temperature can no longer be evaluated.  
**Remedy:** Replace the power unit immediately.

---

**F30950 Power unit: Internal software error**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Power Unit  
**Response:** OFF2  
**Acknowledgment:** POWER ON  
**Cause:** An internal software error has occurred.  
Fault value (r0949, interpret decimal):  
Information about the fault source.  
Only for internal Siemens troubleshooting.  
**Remedy:** - If necessary, upgrade the firmware in the power unit to a later version.  
- Contact Technical Support.

---

**A30999 Power unit: Unknown alarm**

**Message class:** Power electronics faulted (5)

**Message value:** New message: %1

**Component:** Power Unit

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** An alarm has occurred on the power unit, which cannot be interpreted by the converter firmware. This can occur if the firmware on this component is more recent than the firmware on the converter. Alarm value (r2124, interpret decimal): Alarm number.

Note:

If required, the significance of this new alarm can be read about in a more recent description of the converter.

**Remedy:** - Replace the firmware on the power unit by an older firmware version.  
- Upgrade the converter firmware.

---

**F31110 Motor encoder: Serial communication faulted**

**Message class:** Position/speed actual value incorrect or not available (11)

**Message value:** Fault cause: %1 bin

**Component:** Encoder 1

**Response:** ENCODER

**Acknowledgment:** PULSE INHIBIT

**Cause:** There is an error in the transfer of the serial communication protocol between the encoder and internal or external evaluation module.

Fault value (r0949, interpret binary):

Bit 0: Alarm bit in the position protocol.

Bit 2: Encoder does not respond (does not supply a start bit within 50 ms).

Bit 3: CRC error: The checksum in the protocol from the encoder does not match the data.

Bit 6: Timeout when cyclically reading.

Bit 7: Timeout for the register communication.

Bit 14: Register communication error.

**Remedy:** For fault value, bit 0 = 1:  
- Encoder defect F31111 may provide further details.  
For fault value, bit 2 = 1:  
- Incorrect encoder type / replace the encoder or encoder cable.  
For fault value, bit 3 = 1:  
- EMC / connect the cable shield, replace the encoder or encoder cable.  
For fault value, bit 6 = 1:  
- Update the firmware  
For fault value, bit 7 = 1:  
- Incorrect encoder type / replace the encoder or encoder cable.  
For fault value, bit 14 = 1:  
- Incorrect encoder type / replace the encoder or encoder cable.

---

**F31111 Motor encoder: Encoder signals an internal error (detailed information)**

**Message class:** Position/speed actual value incorrect or not available (11)

**Message value:** Fault cause: %1 bin, additional information: %2

**Component:** Encoder 1

**Response:** ENCODER

**Acknowledgment:** PULSE INHIBIT

**Cause:** The encoder error word provides detailed information (error bit).  
Fault value (r0949, interpret binary):  
yyyyxxxx hex: yyyy = supplementary information, xxxx = fault cause  
Bit 0: Error in the multiturn block.  
Bit 1: EEPROM error.  
Bit 2: Singleturn position incorrect.  
Bit 3: Multiturn position incorrect.  
Bit 4: MLS generation error.  
Bit 5: Reserved.  
Bit 6: Overtemperature.  
Bit 7: Internal fault.

**Remedy:** Encoder is defective. Replace the encoder or motor.

---

**F31112 Motor encoder: Encoder signals an internal error**

**Message class:** Position/speed actual value incorrect or not available (11)  
**Message value:** %1  
**Component:** Encoder 1  
**Response:** ENCODER  
**Acknowledgment:** PULSE INHIBIT  
**Cause:** The encoder signals an internal error via serial protocol.  
Fault value (r0949, interpret binary):  
Bit 0: Fault bit in the position protocol.

**Remedy:** For fault value, bit 0 = 1:  
In the case of an EnDat encoder, F31111 may provide further details.

---

**F31150 Motor encoder: Initialization error**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Message value:** %1  
**Component:** Sensor Module Encoder 1  
**Response:** ENCODER  
**Acknowledgment:** PULSE INHIBIT  
**Cause:** Encoder functionality selected in p0404 cannot be executed.  
Fault value (r0949, interpret hexadecimal):  
Encoder malfunction.  
The bit assignment corresponds to that of p0404 (e.g. bit 5 set: Error track C/D).  
See also: p0404 (Encoder configuration effective)

**Remedy:**

- Check that p0404 is correctly set.
- Check the encoder type used (incremental/absolute) and for SMCxx, the encoder cable.
- If relevant, note additional fault messages that describe the fault in detail.

---

**A31407 Motor encoder: Function limit reached**

**Message class:** Position/speed actual value incorrect or not available (11)  
**Message value:** %1  
**Component:** Encoder 1  
**Response:** NONE  
**Acknowledgment:** NONE

12.3 Faults and alarms

---

**Cause:** The encoder has reached one of its function limits. A service is recommended.

Alarm value (r2124, interpret decimal):

1: Incremental signals

3: Absolute track

4: Code connection

**Remedy:** Perform service. Replace the encoder if necessary.

---

**A31410 Motor encoder: Communication error (encoder and Sensor Module)**

**Message class:** Position/speed actual value incorrect or not available (11)

**Message value:** Fault cause: %1 bin

**Component:** Encoder 1

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** There is an error in the transfer of the serial communication protocol between the encoder and internal or external evaluation module.

Fault value (r0949, interpret binary):

Bit 0: Alarm bit in the position protocol.

Bit 2: Encoder does not respond (does not supply a start bit within 50 ms).

Bit 3: CRC error: The checksum in the protocol from the encoder does not match the data.

Bit 6: Timeout when cyclically reading.

Bit 7: Timeout for the register communication.

Bit 14: Register communication error.

**Remedy:** - Check that the encoder cables are routed in compliance with EMC.

- Check the plug connections.

- Replace encoder.

---

**A31411 Motor encoder: Encoder signals an internal alarm (detailed information)**

**Message class:** Position/speed actual value incorrect or not available (11)

**Message value:** Fault cause: %1 bin, additional information: %2

**Component:** Encoder 1

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The encoder error word provides detailed information (alarm bit).

Alarm value (r2124, interpret binary):

yyyyxxxx hex: yyyy = supplementary information, xxxx = fault cause

Bit 0: LED current incorrect.

Bit 1: Signal amplitude outside the control range.

Bit 2: Overtemperature.

**Remedy:** Replace encoder.

---

**A31412 Motor encoder: Encoder signals an internal alarm**

**Message class:** Position/speed actual value incorrect or not available (11)

**Message value:** %1

**Component:** Encoder 1

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** The encoder signals an internal alarm via serial protocol.

Alarm value (r2124, interpret binary):

Bit 0: Fault bit in the position protocol.

Bit 1: Alarm bit in the position protocol.

**Remedy:**

- Carry out a POWER ON (switch-off/switch-on) for all components.
- Check that the encoder cables are routed in compliance with EMC.
- Check the plug connections.
- Replace encoder.

---

**F31502 Motor encoder: Encoder with measuring gearbox without valid signals**

**Message class:** Position/speed actual value incorrect or not available (11)  
**Message value:** -  
**Component:** Sensor Module Encoder 1  
**Response:** OFF1  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The encoder with measuring gearbox no longer provides any valid signals.  
**Remedy:** It must be ensured that all of the encoders, with mounted measuring gearbox, provide valid actual values in operation.

---

**F31503 Motor encoder: Position tracking cannot be reset**

**Message class:** Position/speed actual value incorrect or not available (11)  
**Message value:** -  
**Component:** None  
**Response:** OFF1  
**Acknowledgment:** IMMEDIATELY  
**Cause:** The position tracking for the measuring gearbox cannot be reset.  
**Remedy:** The fault should be resolved as follows:

- Select commissioning.
- Reset the position tracking as follows (p0411.2 = 1).
- Deselect commissioning.

The fault should then be acknowledged and the absolute encoder adjusted.

---

**A31700 Motor encoder: Functional safety monitoring initiated**

**Message class:** Safety monitoring channel has identified an error (10)  
**Message value:** Fault cause: %1 bin  
**Component:** Sensor Module Encoder 1  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** Functional safety was activated. Self test of the DRIVE-CLiQ encoder has detected a fault.  
Alarm value (r2124, interpret binary):  
Bit x = 1: Effectivity test x unsuccessful.  
**Remedy:** Replace encoder.

---

**F31802 Motor encoder: Time slice overflow**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Sensor Module Encoder 1  
**Response:** ENCODER  
**Acknowledgment:** IMMEDIATELY

12.3 Faults and alarms

**Cause:** A time slice overflow for the motor encoder has occurred.  
Fault value (r0949, interpret hexadecimal):  
yx hex: y = function involved (Siemens-internal fault diagnostics), x = time slice involved  
x = 9:  
Time slice overflow of the fast (current controller clock cycle) time slice.  
x = A:  
Time slice overflow of the average time slice.  
x = C:  
Time slice overflow of the slow time slice.  
yx = 3E7:  
Timeout when waiting for SYNO (e.g. unexpected return to non-cyclic operation).

**Remedy:** Increase the current controller sampling time  
Note:  
For a current controller sampling time = 31.25 µs, use an SMx20 with Article No. 6SL3055-0AA00-5xA3.

---

**F31804 Motor encoder: Sensor Module checksum error**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Sensor Module Encoder 1  
**Response:** ENCODER  
**Acknowledgment:** POWER ON  
**Cause:** A checksum error has occurred when reading-out the program memory on the Sensor Module.  
Fault value (r0949, interpret hexadecimal):  
yyyyxxxx hex  
yyyy: Memory area involved.  
xxxx: Difference between the checksum at POWER ON and the actual checksum.

**Remedy:** - Carry out a POWER ON (switch-off/switch-on).  
- Upgrade firmware to later version.  
- Check whether the permissible ambient temperature for the component is maintained.

---

**F31805 Motor encoder: EEPROM checksum error**

**Message class:** Hardware/software error (1)  
**Message value:** %1  
**Component:** Sensor Module Encoder 1  
**Response:** ENCODER  
**Acknowledgment:** IMMEDIATELY  
**Cause:** Data in the EEPROM corrupted .  
Fault value (r0949, interpret hexadecimal):  
01: EEPROM access error.  
02: Too many blocks in the EEPROM.

**Remedy:** Replace the module.

---

**F31813 Motor encoder: Hardware logic unit failed**

**Message class:** Hardware/software error (1)  
**Message value:** Fault cause: %1 bin  
**Component:** Sensor Module Encoder 1  
**Response:** ENCODER  
**Acknowledgment:** PULSE INHIBIT

**Cause:** The logic unit of the DRIVE-CLiQ encoder has failed.  
Fault value (r0949, interpret binary):  
Bit 0: ALU watchdog has responded.  
Bit 1: ALU has detected a sign-of-life error.

**Remedy:** When the error reoccurs, replace the encoder.

---

**F31850 Motor encoder: Encoder evaluation internal software error**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Sensor Module Encoder 1

**Response:** ENCODER

**Acknowledgment:** POWER ON

**Cause:** An internal software error has occurred in the Sensor Module of the motor encoder.  
Fault value (r0949, interpret decimal):  
1: Background time slice is blocked.  
2: Checksum over the code memory is not correct.  
10000: OEM memory of the EnDat encoder contains data that cannot be interpreted.  
11000 ... 11499: Descriptive data from EEPROM incorrect.  
11500 ... 11899: Calibration data from EEPROM incorrect.  
11900 ... 11999: Configuration data from EEPROM incorrect.  
12000 ... 12008: communication with analog/digital converter faulted.  
16000: DRIVE-CLiQ encoder initialization application error.  
16001: DRIVE-CLiQ encoder initialization ALU error.  
16002: DRIVE-CLiQ encoder HISI / SISI initialization error.  
16003: DRIVE-CLiQ encoder safety initialization error.  
16004: DRIVE-CLiQ encoder internal system error.

**Remedy:** - Replace the Sensor Module.  
- If required, upgrade the firmware.  
- Contact Technical Support.

---

**F31899 Motor encoder: Unknown fault**

**Message class:** Position/speed actual value incorrect or not available (11)

**Message value:** New message: %1

**Component:** Sensor Module Encoder 1

**Response:** ENCODER

**Acknowledgment:** IMMEDIATELY

**Cause:** A fault has occurred on the Sensor Module for the motor encoder, which cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit.  
Fault value (r0949, interpret decimal):  
Fault number.  
Note:  
If required, the significance of this new fault can be read about in a more recent description of the Control Unit.

**Remedy:** - Replace the firmware on the Sensor Module by an older firmware version (r0148).  
- Upgrade the firmware on the Control Unit (r0018).

---

**A31902 Motor encoder: SPI-BUS error occurred**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Sensor Module Encoder 1

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** Error when operating the internal SPI bus.  
Alarm value (r2124, interpret hexadecimal):  
Only for internal Siemens troubleshooting.

**Remedy:** - Replace the Sensor Module.  
- If required, upgrade the firmware in the Sensor Module.  
- Contact Technical Support.

---

**A31903 Motor encoder: I2C-BUS error occurred**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Sensor Module Encoder 1

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** Error when operating the internal I2C bus.  
Alarm value (r2124, interpret hexadecimal):  
Only for internal Siemens troubleshooting.

**Remedy:** - Replace the Sensor Module.  
- If required, upgrade the firmware in the Sensor Module.  
- Contact Technical Support.

---

**F31905 Motor encoder: Encoder parameterization error**

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Message value:** Parameter: %1, supplementary information: %2

**Component:** Sensor Module Encoder 1

**Response:** ENCODER

**Acknowledgment:** IMMEDIATELY

**Cause:** An error was identified in the encoder parameterization.  
It is possible that the parameterized encoder type does not match the connected encoder.  
Determine the parameter number using the fault value (r0949).

Fault value (r0949, interpret decimal):  
yyyyxxx dec: yyyy = supplementary information, xxxx = parameter  
yyyy = 0:  
No additional information available.  
yyyy = 10:  
The connected encoder is not supported.

**Remedy:** - Check whether the connected encoder type matches the encoder that has been parameterized.  
- Correct the parameter specified by the fault value (r0949).

---

**F31950 Motor encoder: Internal software error**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Sensor Module Encoder 1

**Response:** ENCODER

**Acknowledgment:** POWER ON

**Cause:** An internal software error has occurred.  
Fault value (r0949, interpret decimal):  
The fault value contains information regarding the fault source.  
Only for internal Siemens troubleshooting.



**Remedy:**

- If necessary, upgrade the firmware in the Sensor Module to a later version.
- Contact Technical Support.

---

**A31999 Motor encoder: Unknown alarm**

**Message class:** Position/speed actual value incorrect or not available (11)

**Message value:** New message: %1

**Component:** Sensor Module Encoder 1

**Response:** NONE

**Acknowledgment:** NONE

**Cause:** An alarm has occurred on the Sensor Module for encoder 1, which cannot be interpreted by the converter firmware. This can occur if the firmware on this component is more recent than the converter firmware.

Alarm value (r2124, interpret decimal):

Alarm number.

Note:

If required, the significance of this new alarm can be read about in a more recent description of the converter.

**Remedy:**

- Replace the firmware on the Sensor Module by an older firmware version.
- Upgrade the converter firmware.

---

**F32805 Encoder 2: EEPROM checksum error**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Sensor Module Encoder 2

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** Data in the EEPROM corrupted .

Fault value (r0949, interpret hexadecimal):

01: EEPROM access error.

02: Too many blocks in the EEPROM.

**Remedy:** Replace the module.

---

**F32899 Encoder 2: Unknown fault**

**Message class:** Position/speed actual value incorrect or not available (11)

**Message value:** New message: %1

**Component:** Sensor Module Encoder 2

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** A fault occurred on the Sensor Module for encoder 2, which cannot be interpreted by the converter firmware. This can occur if the firmware on this component is more recent than the converter firmware.

Fault value (r0949, interpret decimal):

Fault number.

Note:

If required, the significance of this new fault can be read about in a more recent description of the converter.

**Remedy:**

- Replace the firmware on the Sensor Module by an older firmware version.
- Upgrade the converter firmware.

---

**F32950 Encoder 2: Internal software error**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Sensor Module Encoder 2

12.3 Faults and alarms

---

**Response:** OFF1  
**Acknowledgment:** POWER ON  
**Cause:** An internal software error has occurred.  
Fault value (r0949, interpret decimal):  
Information about the fault source.  
Only for internal Siemens troubleshooting.  
**Remedy:** - If necessary, upgrade the firmware in the Sensor Module to a later version.  
- Contact Technical Support.

---

**A32999 Encoder 2: Unknown alarm**

**Message class:** Position/speed actual value incorrect or not available (11)  
**Message value:** New message: %1  
**Component:** Sensor Module Encoder 2  
**Response:** NONE  
**Acknowledgment:** NONE  
**Cause:** An alarm has occurred on the Sensor Module for encoder 2, which cannot be interpreted by the converter firmware.  
This can occur if the firmware on this component is more recent than the converter firmware.  
Alarm value (r2124, interpret decimal):  
Alarm number.  
Note:  
If required, the significance of this new alarm can be read about in a more recent description of the converter.  
**Remedy:** - Replace the firmware on the Sensor Module by an older firmware version.  
- Upgrade the converter firmware.

---

**F33899 Encoder 3: Unknown fault**

**Message class:** Position/speed actual value incorrect or not available (11)  
**Message value:** New message: %1  
**Component:** Sensor Module Encoder 3  
**Response:** OFF1  
**Acknowledgment:** IMMEDIATELY  
**Cause:** A fault occurred on the Sensor Module for encoder 3, which cannot be interpreted by the converter firmware.  
This can occur if the firmware on this component is more recent than the converter firmware.  
Fault value (r0949, interpret decimal):  
Fault number.  
Note:  
If required, the significance of this new fault can be read about in a more recent description of the converter.  
**Remedy:** - Replace the firmware on the Sensor Module by an older firmware version.  
- Upgrade the converter firmware.

---

**A33999 Encoder 3: Unknown alarm**

**Message class:** Position/speed actual value incorrect or not available (11)  
**Message value:** New message: %1  
**Component:** Sensor Module Encoder 3  
**Response:** NONE  
**Acknowledgment:** NONE

**Cause:** An alarm has occurred on the Sensor Module for encoder 3, which cannot be interpreted by the converter firmware. This can occur if the firmware on this component is more recent than the converter firmware.  
Alarm value (r2124, interpret decimal):  
Alarm number.  
Note:  
If required, the significance of this new alarm can be read about in a more recent description of the converter.

**Remedy:**

- Replace the firmware on the Sensor Module by an older firmware version.
- Upgrade the converter firmware.

---

**F34950 VSM: Internal software error**

**Message class:** Hardware/software error (1)

**Message value:** %1

**Component:** Voltage Sensing Module (VSM)

**Response:** OFF2

**Acknowledgment:** POWER ON

**Cause:** An internal software error in the Voltage Sensing Module (VSM) has occurred.

Fault value (r0949, interpret decimal):

Information about the fault source.

Only for internal Siemens troubleshooting.

**Remedy:**

- If necessary, upgrade the firmware in the Voltage Sensing Module to a later version.
- Contact Technical Support.

---

**F35220 TM: Frequency limit reached for signal output**

**Message class:** Application/technological function faulted (17)

**Message value:** -

**Component:** Terminal Module (TM)

**Response:** OFF1

**Acknowledgment:** IMMEDIATELY

**Cause:** The signals output from the Terminal Module 41 (TM41) for tracks A/B have reached the limit frequency. The output signals are no longer in synchronism with the specified setpoint.

SIMOTION (p4400 = 0) operating mode:

- If the TM41 has been configured as the technology project, this fault is also output in response to short-circuited A/B signals in X520.

SINAMICS (p4400 = 1) operating mode:

- The fine resolution of TM41 in p0418 does not match that of the encoder that was interconnected at connector input p4420.
- The encoder position actual value r0479 interconnected at connector input p4420 has an excessively high actual speed.
- The output signals correspond to a speed, which is greater than the maximum speed (r1082 of TM41).

**Remedy:** SIMOTION (p4400 = 0) operating mode:

- Enter a lower speed setpoint (p1155).
- Reduce the encoder pulse number (p0408).
- Check track A/B for short-circuits.

SINAMICS (p4400 = 1) operating mode:

- Enter a lower speed setpoint (p1155).
- Reduce the encoder pulse number (p0408).

Notice:

The output signal is no longer monitored after changing the message type to "Alarm" (A).

---

**F35950 TM: Internal software error**

**Message class:** Hardware/software error (1)

**Message value:** %1

### 12.3 Faults and alarms

**Component:** Terminal Module (TM)

**Response:** OFF2

**Acknowledgment:** POWER ON

**Cause:** An internal software error has occurred.

Fault value (r0949, interpret decimal):

Information about the fault source.

Only for internal Siemens troubleshooting.

**Remedy:** - If necessary, upgrade the firmware in the Terminal Module to a later version.

- Contact Technical Support.

## Corrective maintenance

### 13.1 Service and maintenance for the converter

#### 13.1.1 Restoring the converter to factory settings

##### 13.1.1.1 Restoring factory settings via a commissioning tool

#### Description

The restoring to factory settings with a commissioning tool (web server, Startdrive) only deletes the user-specific parameterization of the converter, for example motor data.

The following settings are retained with the restoring:

- Activation and settings of User Management & Access Control
- The "IP configuration" and "Device name" communication settings of the service interface (X127) and PROFINET interface (X150)
- Installed firmware on the converter

The restoring to factory settings with the commissioning tool is described in the following sections:

- Web server: Restore factory settings (Page 207)
- Startdrive: Restore factory settings (Page 306)

##### 13.1.1.2 Reset of all user-defined settings to the factory setting via an SD card

#### Overview

The following user-defined settings are stored in the converter:

- Parameterization of the converter
- Activation and settings of User Management & Access Control
- "IP configuration" and "Device name" communication settings of the service interface (X127) and PROFINET interface (X150)
- Self-generated certificates
- User-defined parameter lists in the web server

### 13.1 Service and maintenance for the converter

In the following cases it may be necessary to reset all user-defined converter settings to the factory setting:

- The available credentials do not allow the necessary configuration of the converter (no password for example).
- Before recommissioning of the converter, for example if the application use of the converter changes.
- Before the converter is sold or disposed of, in order to erase all user-defined settings.

#### Requirement

- You can access the converter manually.
- All electrical connections from the converter to the motor are disconnected.
- The PROFINET connection to the control system and other devices is disconnected.
- You have an empty writable SD card with a maximum of 32 GB; e.g. 6SL5970-0AA00-0AA0.

#### Procedure

Proceed as follows to reset all user-defined converter settings to the factory setting:

1. Create an empty file called RESET.TXT in the root directory of the SD card.
2. Switch off the supply voltage to the converter.
3. Wait until all the LEDs on the converter have gone out.
4. Insert the SD card into the converter.
5. Switch on the supply voltage to the converter.
6. The converter deletes the user-defined settings.
7. The user-defined settings are deleted.
8. Remove the SD card.

#### Result

All user-defined converter settings are deleted.

The converter firmware is unchanged.

After the manual reset to factory settings, access to the web server is possible via the service interface (X127) and via the PROFINET interface (X150). For access via the service interface (X127), use the secure transmission protocol HTTPS.

## 13.1.2 Converter firmware update

### 13.1.2.1 Overview of firmware update

#### Requirement

<b>NOTICE</b>
<b>Damage to equipment during firmware update due to voltage supply interruption</b>
When the firmware is being updated, interrupting the power supply or disconnecting the motor can result in defects or cause the devices to malfunction.
<ul style="list-style-type: none"><li>• Do not switch off the converter's supply voltage during firmware update.</li></ul>

#### Description of function

Firmware updates change the settings in the converter according to the relative firmware version:

- If the converter is upgraded to a more recent firmware version, the converter settings are retained.
- Downgrading to an older firmware version resets all user-defined settings to factory settings, including:
  - Parameterization of the converter
  - Activation and settings of User Management & Access Control
  - "IP configuration" and "Device name" communication settings of the service interface (X127) and PROFINET interface (X150)
  - Self-generated certificates
  - User-defined parameter lists in the web server

The following options are available for a firmware update:

- Firmware update via an SD card (Page 589)
- Firmware update via web server (Page 215)
- Firmware update via Startdrive (Page 309)

### 13.1.2.2 Firmware update via an SD card

#### Overview

If you have physical access to your converter, you can update the firmware directly on the converter by using an SD card.

13.1 Service and maintenance for the converter

**Requirement**




You have an SD card with the appropriate firmware, or you have an empty SD card with a maximum capacity of 32 GB onto which you can load the firmware.

You can download the available firmware versions at the following link (<https://support.industry.siemens.com/cs/ww/en/ps/29596/dl>).

**Procedure**

Proceed as follows to update the firmware using an SD card:

1. Switch off the converter.
2. Insert the SD card into the converter and switch on the converter.  
The new firmware is installed. This process takes approximately two minutes.

RDY	COM	Explanation of LED displays
		Firmware update is active: <ul style="list-style-type: none"><li>• Do not switch off the power supply.</li><li>• Do not disconnect the motor from the converter.</li></ul>
	-	Firmware update is completed

3. Switch the converter off and remove the SD card.
4. Switch on the converter again. Check whether the new version is installed. The firmware version of the converter is displayed on the home page of the web server.

**More information**

You can find more information about the SD card in Section "SD card (Page 72)".

**13.1.3 Replacing the converter**

**Overview**

You may only replace a converter with another converter if certain requirements are adhered to.



## Requirement

The following requirements apply to a replacement:

- The new converter has the same or more recent firmware version than that of the converter being replaced.
- The two converters must also satisfy one of the following conditions:
  - The new and replaced converters have the same power rating.
  - The new converter has a different power rating to the converter it replaced but the same frame size.  
In this case, the rated power of the converter and motor power must not differ too much. The following values are permissible for the quotients (rated motor power)/(rated converter power): 0.25 ... 1.5



### WARNING

#### **Fire or electric shock after tripping of overcurrent protection devices**

If an overcurrent protection device is tripped, the converter may be defective. A defective converter can cause a fire or electric shock.

- Have the converter and the overcurrent protection device checked by a specialist.



### WARNING

#### **Electric shock as a result of a residual charge in power components**

After the power supply has been switched off, it takes up to five minutes for the capacitors in the converter to discharge enough that the residual charge is safe.


- Check the voltage at the converter connections before removing the connecting cables.

### WARNING

#### **Unexpected machine movement caused by incorrect converter type**

If a replacement is made with a converter of a different type, this can result in incomplete or unsuitable converter settings. This can result in unexpected machine movements, e.g. speed oscillation, overspeed or incorrect direction of rotation. Unexpected machine movements can result in death, injury or property damage.

- In all cases not permitted according to the above requirements, you must recommission the drive after replacing the converter.

 <b>WARNING</b>
<b>Unexpected machine movement caused by unsuitable converter settings</b> Missing or unsuitable converter settings can lead to unexpected operating states or machine movements, e.g. a non-functioning EMERGENCY STOP or an incorrect direction of rotation. This can result in damage to machine components or system sections or in death or bodily injury. <ul style="list-style-type: none"><li>• Back up the settings of the converter to be replaced by uploading them to an external storage medium, e.g. an SD card.</li><li>• Transfer the settings of the converter to be replaced by downloading them to the new converter.</li><li>• If you do not have a backup of the converter settings, recommission the new converter.</li><li>• Check the new converter for proper functioning.</li></ul>

<b>NOTICE</b>
<b>Damage caused by interchanging the motor cables</b> The direction in which the motor rotates switches if the two phases of the motor cable are interchanged. An incorrect direction of rotation can lead to damage in the machine or system. <ul style="list-style-type: none"><li>• Connect the three phases of the motor cables in the correct sequence.</li></ul>

## Procedure

Proceed as follows to replace a converter:

1. Disconnect the line voltage to the converter.
2. Remove the connecting cables of the converter.
3. Remove the defective converter.
4. Install the new converter.
5. Connect all of the cables to the converter.
6. Switch on the line voltage of the converter.
7. Set the new converter to suit the application:
  - You have backed up the settings of the converter that was replaced to an external storage medium, e.g. an SD card:  
If the new converter has the same power rating as the converter replaced, transfer the settings to the new converter.
  - If there is no backup of the data for the converter replaced or if the new converter has a different power rating, commission the converter as a new converter.

### 13.1.3.1 Restoring the drive data via the web server

#### Requirement

- The converter is operated without an SD card.
- You have a backup file of the source converter on your operating unit.  
In the description below, a distinction is made between restoring drive data from an encrypted backup file or from an unencrypted backup file.
- The rated power of the target converter is the same as the rated power of the converter from which the backed-up data and settings originate.
- Ideally, the target converter is in the factory setting.  
It either involves a brand-new target converter or a target converter where all user-defined settings have been restored to the factory setting. You can find more information in Section "Reset of all user-defined settings to the factory setting via an SD card (Page 587)".

#### Procedure

1. Switch off the supply voltage of the source converter.
2. Release all of the connections at the source converter, replace the converter and re-establish the connections at the target converter.
3. Switch on the supply voltage of the target converter.
4. Enter the IP address of the target converter, e.g. <https://169.254.11.22>, in the web browser.  
The web server is started. The "Basic settings" page is displayed.
5. Make the basic settings for the converter.  
You can find more information in Section "Basic settings (Page 173)".
6. Click "Next".  
The "Welcome to the Security Wizard" page is displayed.
7. Select the option "Exit the Security Wizard and continue with low security settings".
8. Call the "Backup and restore" menu.
9. Click the "Click to select file, or drag and drop file here" button to select the backup file.
10. To restore the drive data, proceed as described below depending on the specific application.

### 13.1 Service and maintenance for the converter

- **Scenario 1:** The target converter has the same or a higher firmware version.
  - If the drive data are restored from an encrypted backup file, then proceed as follows, see Section "Restoring data from an encrypted backup file (Page 596)".
  - If the drive data are restored from an unencrypted backup file, then proceed as follows, see Section "Restoring data from an unencrypted backup file (Page 594)".
- **Scenario 2:** The target converter has an older firmware version.
  - The operation is canceled.
  - Restore the firmware to the version of the source converter. The firmware version can be  $\geq$  firmware version of the source converter.

---

#### Note

##### Determining the firmware version of the source converter

Review the machine documentation. Alternatively: Check which firmware version is installed on the other converters of the same type in the machine.

---

- Proceed as described in scenario 1.

#### Result

When running up, the converter retrieves the settings from the backup file. Commissioning has been completed once the converter has run up.

#### More information

- Update the connected components:  
When the converter runs up after being restored, the connected components are updated. The converter must then be switched off and switched on.

### 13.1.3.2 Restoring data from an unencrypted backup file

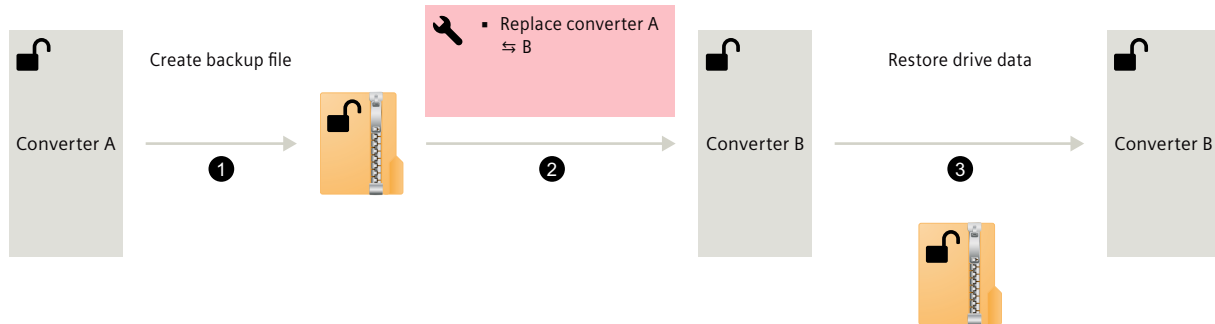
#### Requirement

- You have an unencrypted backup file of the source converter on your operating unit.
- Rights required for active user management (UMAC):
  - "Create backup or load drive data to Startdrive"

#### Procedure


1. Call menu "Backup and restore" in the web server.
2. Navigate to the "Restore drive data from backup file" area.
3. Use the "Click to select file, or drag and drop file here" button to select the backup file.
4. To restore the drive data, proceed as described below depending on the specific application. This step is included in the following diagrams as step 3.

- **Scenario 1:** No drive password is configured in the source and target converters.



- Click on "Restore".  
The drive data are loaded into the converter from the backup file.  
As a consequence, the status of the settings at the instant of the backup are restored.

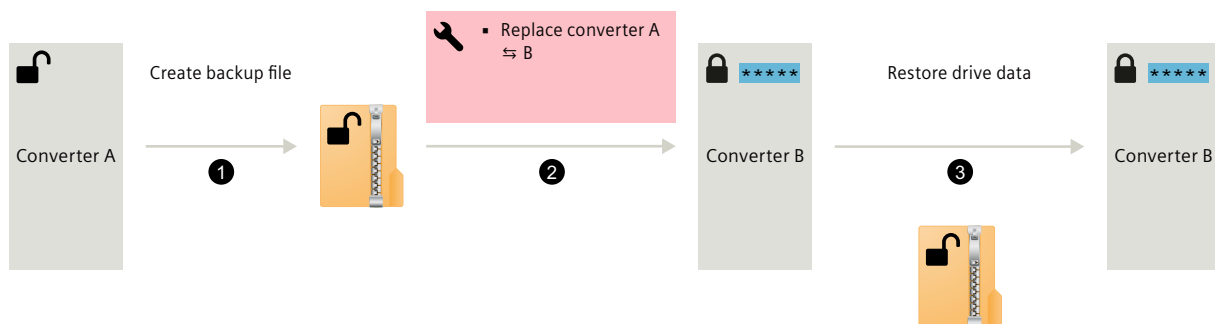- **Scenario 2:** No drive password is configured in the source converter. On the other hand, in the target converter function "Drive data encryption" had been previously activated and a drive password configured.



\*\*\*\*\*: Drive password for converter B

- Click on "Restore".  
A dialog to enter the password opens.
- Enter the drive password of the target converter.  
The drive data are loaded into the converter from the backup file.  
As a consequence, the status of the settings at the instant of the backup are restored.  
Function "Drive data encryption" is activated. The configured drive password is still effective in the target converter after data has been restored.

### 13.1.3.3 Restoring data from an encrypted backup file

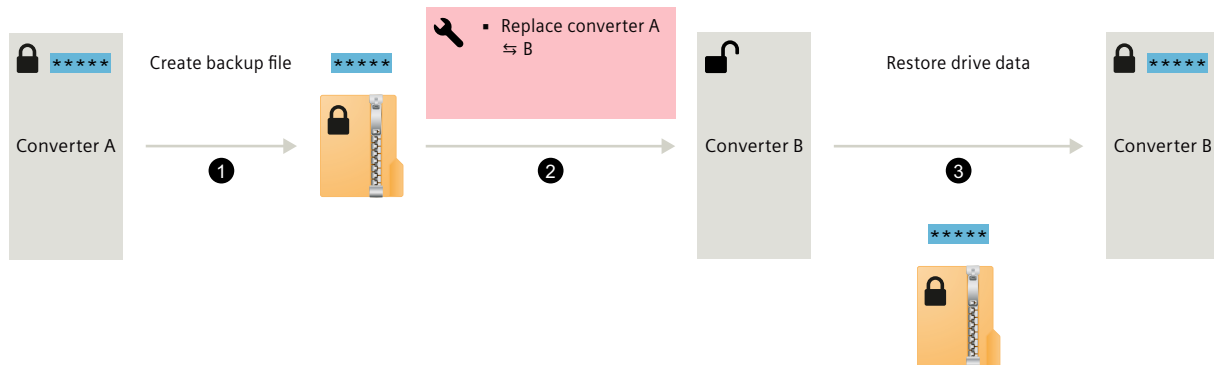
#### Requirement

- You have an encrypted backup file of the source converter on your operating unit.
- Configured drive password:
  - You know the drive password of the source converter with which the drive data in the backup file were encrypted.
  - You know the drive password of the target converter.  
Only applicable if the drive password of the target converter deviates from the drive password of the source converter.
- Rights required for active user management (UMAC):
  - "Create backup or load drive data to Startdrive"

#### Procedure

1. Call menu "Backup and restore" in the web server.
2. Navigate to the "Restore drive data from backup file" area.
3. Use the "Click to select file, or drag and drop file here" button to select the backup file.
4. To restore the drive data, proceed as described below depending on the specific application. This step is included in the following diagrams as step 3.


- **Scenario 1:** A drive password is configured in the source converter. On the other hand, function "Drive data encryption" had been previously de-activated in the target converter.



\*\*\*\*\*: Drive password for converter A

- Click on "Restore".  
A dialog to enter the password opens.
- Enter the drive password of the source converter.  
The drive data are loaded into the converter from the backup file.  
As a consequence, the status of the settings at the instant of the backup are restored.  
Function "Drive data encryption" is activated. The drive password of the source converter is transferred to the target converter.

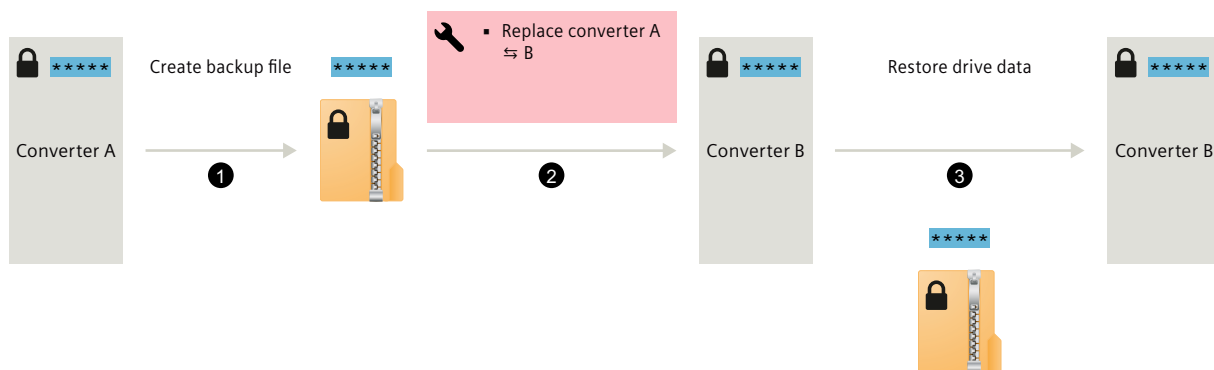- **Scenario 2:** The same drive password is configured in the source and target converters.




\*\*\*\*\*: Drive password for converters A and B

- Click on "Restore".  
A dialog to enter the password opens.
- Enter the drive password of the target converter.  
A dialog to enter the password opens.

13.1 Service and maintenance for the converter

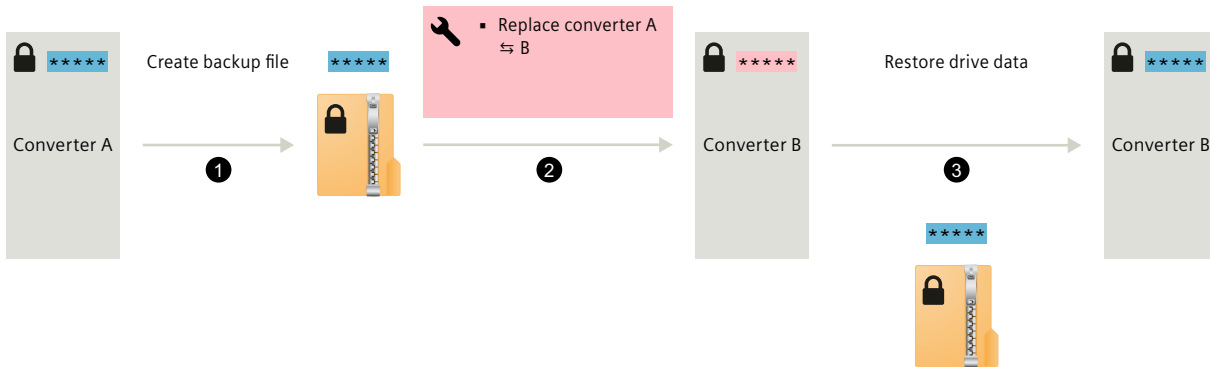- Enter the drive password of the source converter.  
The drive data are loaded into the converter from the backup file.  
As a consequence, the status of the settings at the instant of the backup are restored.  
Function "Drive data encryption" is activated. The drive password of the source converter is transferred to the target converter.
- **Scenario 3:** A different drive password is configured in the target converter and the source converter.



\*\*\*\*\*: Drive password for converter A  
\*\*\*\*\*: Drive password for converter B

- Click on "Restore".  
A dialog to enter the password opens.
- Enter the drive password of the target converter.  
A dialog to enter the password opens.
- Enter the drive password of the source converter.  
The drive data are loaded into the converter from the backup file.  
As a consequence, the status of the settings at the instant of the backup are restored.  
Function "Drive data encryption" is activated. The drive password of the source converter is transferred to the target converter. When doing this, the drive password of the target converter is overwritten.

### 13.1.4 Forming the DC link capacitors

#### Overview

If the converter has been out of operation for too long, you must form the DC link capacitors before connecting the full line voltage to the converter. Non-formed DC link capacitors can damage the converter in operation.

Forming can be omitted if the line voltage is applied to the converter once a year for one hour.



## Requirement

Form the DC link capacitors in the following cases:

- The converter has been out of operation for more than one year.
  - It has been more than one year since converter production when the converter is commissioned for the first time.
- The production date of the converter is coded in the 3rd and 4th digits of the serial number on the rating plate: S . . ③④...
- Example: Serial number S ZVF1Y54000105 → Production date January 2015

Table 13-1 Production year and production month

Digit ③	Production year	Digit ④	Production month
A	2010, 2030	1 ... 9	January ... September
B	2011, 2031	0	October
C	2012, 2032	N	November
...	...	D	December

## Procedure

Form the DC link capacitors by connecting power to the converters as shown below:

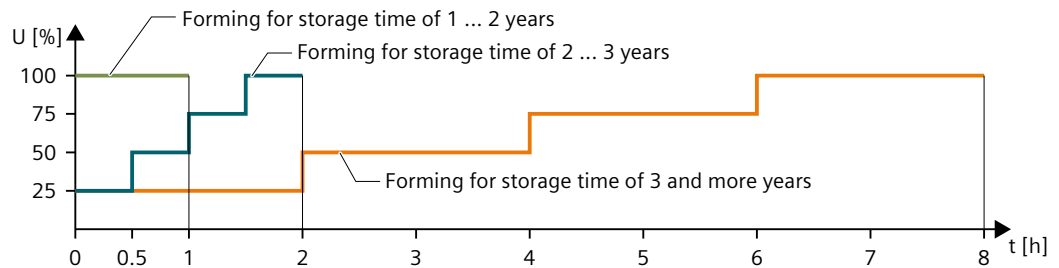



Figure 13-1 Forming the DC link capacitors

## 13.2 Service and maintenance for the motor

### Requirement

 <b>WARNING</b>
<b>Risk of injury if protective devices are removed.</b>
Operation without functioning protective devices can cause death or severe injury.
<ul style="list-style-type: none"><li>• Operate the motor, even in test operation, only with functioning protective devices.</li></ul>

## Procedure

If there are deviations from normal operation or if faults occur, proceed as follows.

1. Identify the fault using the following table.  
You should also take account of the messages of the converter.

Fault	Fault cause															
	A	B														
Motor does not start	A	B														
Motor starts slowly	A		C		F											
Humming sound when starting			C		F											
Humming sound in operation	A		C		F											
High temperature rise under no-load operation				D		I										
High temperature rise under load	A		C			I										
High temperature rise of individual winding sections					F											
Uneven running							J	K								
Grinding sound, running noise									L							
Radial vibrations										M	N	O	P			R
Axial vibrations												O		Q		R

2. Rectify the fault using the following table.

No.	Fault cause	Remedial measures
A	Overload	Reduce load
B	Interrupted phase in the converter line supply cable or motor winding	Check the converter and converter line supply cable, measure the winding resistance and insulation resistance, repair after consultation with manufacturer
C	Interrupted phase in the converter line supply cable after switching on	Check the converter, converter line supply cable, and the winding resistance
D	Converter output voltage too high, frequency too low	Check the settings on the converter, perform automatic motor identification
F	Winding short-circuit or phase short-circuit in stator winding	Measure the winding resistances and insulation resistances, repair after consultation with the manufacturer, replace the motor if required
I	Heat dissipation impeded by deposits	Clean the surface of the servo drive system and ensure that the cooling air can flow in and out unimpeded
	Cooling air inlet or outlet is blocked by foreign bodies	Remove the things that block the inlet or outlet and ensure that the cooling air can flow in and out unimpeded
J	Insufficient shielding for motor and/or encoder cable	Check the shielding and grounding
K	Excessive drive controller gain	Adjust the controller
L	Rotating parts are grinding	Determine cause and adjust parts
	Foreign bodies inside the motor	Replace the motor
	Bearing damage	For low or medium inertia motors, replace the motor; for high inertia motors, replace the bearings
M	Rotor not balanced	Replace the motor

No.	Fault cause	Remedial measures
N	Rotor out of true, shaft bent	Consult the manufacturer
O	Poor alignment	Align motor set, check coupling
P	Coupled machine not balanced	Re-balance coupled machine
Q	Shocks from coupled machine	Check coupled machine
R	Fault originating from the gear-box	Adjust or repair the gearbox

If the fault still cannot be resolved after taking the measures stated above, contact the manufacturer or the Siemens Service Center.

### 13.2.1 Replacing the motor bearings

#### Description

Motor bearings are wearing parts. They must be replaced after a defined number of operating hours. At medium loads, the motor bearings last approximately 20000 hours.

Especially favorable ambient conditions, such as low average speed, low radial force (transverse force) and vibration load, can prolong the interval until motor replacement.

---

#### Note

##### Premature bearing and motor replacement

Harsh operating conditions (for example, continuous operation at  $n_{max}$ , high vibration or shock loads, frequent reversing duty) reduce the bearing or motor replacement interval by up to 50%.

The procedure for replacing the motor bearing depends on the size of the motor. Replacement of the motor bearings is only intended for high inertia motors. For low or medium inertia motors, it is not possible to replace the motor bearings. Replace the motors in their entirety.

The maintenance and repair of the motor can be performed in authorized Siemens Service Centers all over the world. Contact your personal Siemens representative if you need this service.

## 13.2.2 Replacing the motor

### Requirement

The new motor has the same article number as the motor to be replaced. If you want to replace the motor with another motor with a different article number, you must commission the converter again after replacing the motor.



#### **! WARNING**

##### **Danger to life due to unintentional starting of the drive unit**

Unintentional starting of the drive unit can cause death or severe injury.

- Make sure that the drive unit cannot be started accidentally.
- Post a warning notice at the point where the switch is located.



#### **! CAUTION**

##### **Burns as a result of touching hot surfaces**

In operation, the motor enclosure can reach a high temperature, which can cause burns if touched.

- Do not touch any hot surfaces.
- Allow the motor to cool down before starting any work.
- Use the appropriate personnel protection equipment, for example, gloves.

### Procedure

#### **Replacing the motor with a motor with the same article number**

1. Switch off the converter power supply.
2. Replace the motor.
  - Disconnect the motor from the converter. You can find detailed information in Section "Connecting the motor (Page 135)".
  - Release the motor mounting screws.
  - Remove the motor.
  - Mount and install the new motor. You can find detailed information in Section "Mounting the motor (Page 103)".
3. Switch the converter on.

### **Replacing the motor with a motor with another article number**

If you are using a different motor type, after performing the three steps above, you must also carry out the following steps:

1. Reset the converter to factory settings.  
You can find more information in Section "Restoring the converter to factory settings (Page 587)".
2. Commission the converter. You can find more information in the following sections:  
"Commissioning (web server) (Page 163)"  
"Commissioning (Startdrive) (Page 219)"  
"Series commissioning (Page 315)"

### **Result**

You have now replaced the motor.

## 13.3 Service and maintenance for spare parts

### 13.3.1 Spare parts and spare parts compatibility

#### Overview

Spare parts can be ordered on the Internet via the spare parts service Spares on Web (<https://www.sow.siemens.com/>).

Spares on Web also gives you the option of determining the article numbers of spare parts.

#### Description

Converter components are being continuously developed within the scope of product maintenance.

Product maintenance includes, for example, measures to increase the ruggedness or hardware changes that become necessary as components are discontinued.

These further developments are "spare parts-compatible" and do not change the article number.

In the scope of such spare parts-compatible ongoing development, connectors or connection positions are sometimes slightly modified. This does not cause any problems when the component is used as intended. Take this fact into consideration in special installation situations (for example, allow sufficient reserve regarding the cable length).

### 13.3.2 Replacing the fan unit (400 V converters FSC and FSD only)

#### Overview

The 400 V converters FSC and FSD are integrated with a fan unit.

The service life of the fan can reach 20000 hours at the rated operating temperature and the average 100% operating load; however, the service life may be shorter, especially in a dusty environment.

Parameter r0277 is used to display the fan wear as a percentage of the operating hours.

Alarm A30042 appears if the maximum operating hours will soon be reached or has already been exceeded.

The alarm value is contained in r2124 (interpret as a binary value):


- Bit 0 = 1: The wear counter has reached 99%, and after the remaining 1% has elapsed, bit 0 is cleared and bit 2 is set.
- Bit 2 = 1: The wear counter has exceeded 100%.

Replace the defective fan in time to ensure the proper operation of the converter.


You can find the article number of the replacement fan in Section "Replacement fans (Page 70)"

### Requirement


You have switched off the converter power supply before replacing the fan unit.

 <b>CAUTION</b>
<b>Injury caused by a rotating fan</b> Touching a fan while it is rotating can result in injury. <ul style="list-style-type: none"><li>• Switch off the supply voltage to the converter.</li><li>• Wait until the fan is stationary before working on it.</li></ul>



 <b>WARNING</b>
<b>Electric shock as a result of a residual charge in power components</b> After the power supply has been switched off, it takes up to five minutes until the capacitors in the converter have discharged so that the residual charge is at a non-hazardous level. Therefore, touching the converter immediately after powering off can result in electric shock due to residual charge in the power components. <ul style="list-style-type: none"><li>• Check the voltage at the converter connections before releasing the connections at the converter.</li></ul>



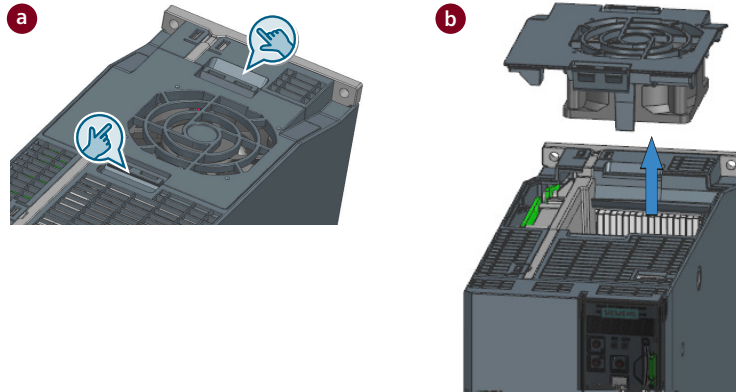
 <b>WARNING</b>
<b>Electric shock when live parts are touched</b> After the fan unit is removed, the live components of the converter are no longer protected from being touched. Contact with live parts can result in death or serious injury. <ul style="list-style-type: none"><li>• Before replacing the fan, switch off the power supply at terminals X1: L1, L2, L3.</li><li>• Check that the fan unit is de-energized before removing it.</li><li>• Wait until the discharge time specified on the warning labels has elapsed.</li></ul>




## Procedure

The fan unit is installed at the top of the converter.

1. Switch off the converter power supply.
2. Press the release clips to remove the fan unit from the converter as shown below. Use a screwdriver if necessary.



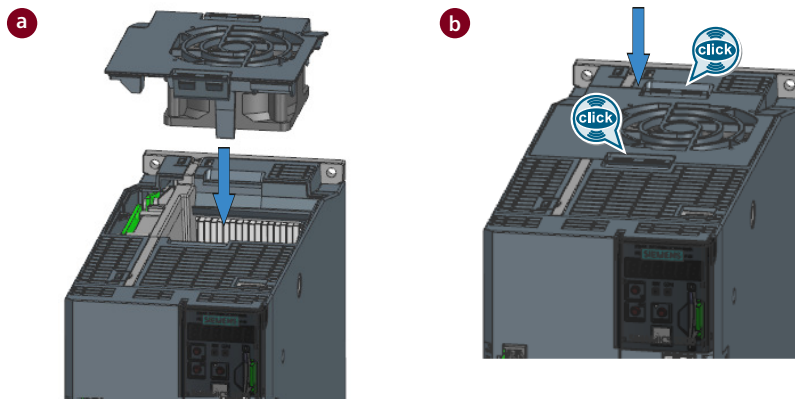3. Install the new fan unit in the inverse sequence as shown below.



## Result

You have now replaced the fan unit.

## 13.4 Device disposal

### Description



For environmentally-friendly recycling and disposal of your old device, contact a company certified for the disposal of waste electrical and electronic equipment, and dispose of the old device as prescribed in the respective country of use.

## Technical data

### 14.1 Technical data of the converter

#### 14.1.1 Permissible environmental conditions for the converter

##### Technical data

Table 14-1 Environmental conditions

Property	Description
<b>Environmental conditions for transport in the transport packaging</b>	
Climatic environmental conditions	<ul style="list-style-type: none"> <li>Surrounding air temperature: -40 °C ... +70 °C Suitable according to Class 2K4 to IEC 60721-3-2</li> <li>Humidity: Max. 95% at 45 °C according to IEC 60721-3-2</li> </ul>
Mechanical environmental conditions	Vibration: <ul style="list-style-type: none"> <li>2 Hz ... 9 Hz: 7.5 mm deflection</li> <li>9 Hz ... 200 Hz: 2 g vibration</li> </ul> Vibrations permissible according to Class 2M3 to IEC 60721-3-2
Protection against chemical substances	Protected according to Class 2C2 to IEC 60721-3-2
Biological environmental conditions	Suitable according to Class 2B2 to IEC 60721-3-2
<b>Environmental conditions for long-term storage in the product packaging</b>	
Climatic environmental conditions	<ul style="list-style-type: none"> <li>Surrounding air temperature: -40 °C ... +70 °C</li> <li>Relative humidity: Max. 95%, condensation not permissible</li> </ul>
Mechanical environmental conditions	Vibrations permissible according to Class 1M2 to IEC 60721-3-1
Protection against chemical substances	Protected according to Class 1C2 to IEC 60721-3-1
Biological environmental conditions	Suitable according to Class 1B2 to IEC 60721-3-1
<b>Environmental conditions in operation</b>	
Installation altitude	<ul style="list-style-type: none"> <li>Up to 2000 m above sea level without power derating</li> <li>Up to 4000 m with power derating</li> </ul>
Climatic environmental conditions	<ul style="list-style-type: none"> <li>Surrounding air temperature: 0 °C ... 55 °C, &gt; 45 °C with power derating</li> <li>Relative humidity: Max. 95%, condensation not permissible</li> </ul>

14.1 Technical data of the converter

Property	Description
Mechanical environmental conditions	<ul style="list-style-type: none"> <li>• Shock:                             <ul style="list-style-type: none"> <li>– Peak acceleration: 5 g</li> <li>– Duration of shock: 30 ms</li> </ul> </li> <li>• Vibration:                             <ul style="list-style-type: none"> <li>– 10 Hz ... 58 Hz: 0.075 mm deflection</li> <li>– 58 Hz ... 200 Hz: 1 g vibration</li> </ul> </li> </ul> <p>Shocks and vibrations permissible according to Class 3M1 to IEC 60721-3-3</p>
Protection against chemical substances	Protected according to Class 3C2 to IEC 60721-3-3
Biological environmental conditions	Suitable according to Class 3B1 to IEC 60721-3-3
Pollution	Suitable for environments with degree of pollution 2 according to IEC 61800-5-1

### 14.1.2 General technical data

#### Technical data

Table 14-2 General technical data of the converter

Parameter	Description
Overload capability	<p>350% overload: for 200 V and 400 V variants with a power rating of 0.1 kW to 0.75 kW</p> <p>300% overload: for 200 V and 400 V variants with a power rating of 1 kW to 7 kW</p>
Output frequency (Hz)	0 ... 550
IGBT pulse frequency without derating (kHz)	8
Control system	Servo control
Dynamic brake	Integrated
Protective functions	Grounding fault protection, output short-circuit protection <sup>1)</sup> , overvoltage/undervoltage protection <sup>2)</sup> , converter I <sup>2</sup> t protection, motor overtemperature protection <sup>3)</sup> , IGBT overtemperature protection
Surge voltage	Fulfill the requirement of the standard IEC 61800-3
Overvoltage category	Category III according to IEC 61800-5-1
Minimum prospective short-circuit current	To prevent fire in the event of a fault, a minimum value must be ensured for the prospective short-circuit current so that the upstream protective device trips quickly enough. A typical value when dimensioning is 20 to 25 times <sup>4)</sup> the rated current of the protection device used.
Maximum permissible short-circuit current (SCCR, kA rms)	<ul style="list-style-type: none"> <li>• For 200 V variants: 100<sup>5)</sup></li> <li>• For 400 V variants: 65</li> </ul>

Parameter	Description
Cooling type	<ul style="list-style-type: none"> <li>For 200 V variants: Natural cooling</li> <li>For 400 V variants:                             <ul style="list-style-type: none"> <li>FSA and FSB: Natural cooling</li> <li>FSC and FSD: Fan cooling</li> </ul> </li> </ul>
Degree of protection according to IEC 60529	IP20
<b>Mains supply</b>	
Permissible mains supply network	TN, TT, IT
Line voltage	1 AC/3 AC 200 V ... 240 V 3 AC 380 V ... 480 V
Line frequency (Hz)	50/60
Permissible line voltage fluctuation	-15% ... +10%
Permissible line frequency fluctuation	-10% ... +10%
<b>24 V DC power supply</b>	
Voltage (V)	24 (-15% ... +20%) <sup>6)</sup>
Permissible voltage fluctuation (V)	When using a motor without brake: 20.4 ... 28.8 When using a motor with brake: 22.8 ... 28.8
Maximum current (A)	<ul style="list-style-type: none"> <li>For 200 V variants:                             <ul style="list-style-type: none"> <li>When using a motor without a brake: 1.2</li> <li>When using a motor with a brake: 2.2</li> </ul> </li> <li>For 400 V variants:                             <ul style="list-style-type: none"> <li>When using a motor without a brake: 1.2</li> <li>When using a motor with a brake: 3.2</li> </ul> </li> </ul>
Safety insulation class	SELV
<b>Inputs and outputs</b>	
Digital inputs	<ul style="list-style-type: none"> <li>Maximum input current: 4 mA (for "1" signal: &gt; 1.5 mA)</li> <li>General delay time:                             <ul style="list-style-type: none"> <li>DI 0 → 1: &lt; 10 μs</li> <li>DI 1 → 0: &lt; 150 μs</li> </ul> </li> <li>Fast digital input delay time:                             <ul style="list-style-type: none"> <li>F-DI 0 → 1: &lt; 5 μs</li> <li>F-DI 1 → 0: &lt; 5 μs</li> </ul> </li> </ul>
Digital outputs	<ul style="list-style-type: none"> <li>Maximum output current: 100 mA</li> <li>Delay time: &lt; 2 ms</li> </ul>
Pulse train output (for S200 PN only)	Output voltage: line driver (5 V differential) Output frequency: ≤ 4 MHz
<b>Safety Integrated (for S200 PN only)</b>	
Safety function	STO, SIL 3 / PL e / Category 4

14.1 Technical data of the converter

Parameter	Description
	<p>STO fulfills the requirements of the following standards:</p> <ul style="list-style-type: none"> <li>• SIL 3 according to IEC 61800-5-2</li> <li>• PL e according to ISO 13849-1</li> <li>• Category 4 according to ISO 13849-1</li> </ul>
	<p>Response time: <math>\leq 20</math> ms</p> <p>The response time of the Safe Torque Off function is the time between selecting the function and the function becoming active.</p>
	<p>Probability of Failure per Hour (PFH): <math>&lt; 10^{-7}</math></p> <p>Failure probabilities must be specified for Safety Integrated Functions in the form of a PFH value according to IEC 61800-5-2, IEC 62061 and EN ISO 13849-1. The PFH value of a Safety Integrated Function depends on the safety concept of the converter, its hardware configuration and the PFH values of the other components used for the Safety Integrated Function.</p>
	<p>Mission time: 20 years</p> <p>You may not operate converters with integrated safety functions for longer than the mission time. The mission time starts when the device is delivered. The mission time cannot be extended. This is the case even if a service department checks the converter – or in the meantime, the converter was decommissioned.</p>

- 1) Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electrical Code and any additional local codes.
- 2) The 200 V converter has an overvoltage threshold of 410 V DC and an undervoltage threshold of 155 V DC; the 400 V converter has an overvoltage threshold of 820 V DC and undervoltage threshold of 320 V DC.
- 3) Motor temperature is calculated by motor thermal model and protected by the output current from the converter.
- 4) To comply with permissible line harmonics, depending on the line connection conditions, different values may be required.
- 5) The maximum permissible short-circuit current for 200 V variants with Type E Combination Motor Controllers is 65 kA.
- 6) When the converter works with a motor with a brake, the voltage tolerance of 24 V DC power supply must be -5% to +20% to meet the voltage requirement of the brake.

### 14.1.3 Specific data of the 200 V converters

#### Technical data

Table 14-3 Specific technical data of the 200 V converters frame size A

Article No. 6SL5□10-1BB	10-1AF0	10-2AF0
<b>Frame size</b>	<b>FSA</b>	<b>FSA</b>
Rated input current (A)		
1 AC	1.2	2.0
3 AC	0.6	1.1
Rated output current (A)	0.81	1.33
Maximum output current (A)	3.3	5.1
Maximum supported motor power (kW)	0.1	0.2
Power loss (W)	12	15

14.1 Technical data of the converter

Article No. 6SL5□10-1BB	10-1AF0	10-2AF0
Inrush current (A)	10.5	10.5
Fuse according to IEC	3NA3804 (4 A) 3NW6304-1 (4 A)	3NA3804 (4 A) 3NW6304-1 (4 A)
Fuse according to UL, Class J	3 A	3 A
Leakage current (mA)		
1 AC	19	19
3 AC	24	24
Outline dimensions (W x H x D, mm)	40 x 170 x 135	40 x 170 x 135
Weight (g)		
S200 PN	763	809.6
S200 Basic PN	763	763

Table 14-4 Specific technical data of the 200 V converters frame size B

Article No. 6SL5□10-1BB	10-4AF0
Frame size	FSB
Rated input current (A)	
1 AC	3.0
3 AC	1.8
Rated output current (A)	2.4
Maximum output current (A)	9.2
Maximum supported motor power (kW)	0.4
Power loss (W)	24
Inrush current (A)	8.5
Fuse according to IEC	3NA3801 (6 A) 3NW6301-1 (6 A)
Fuse according to UL, Class J	6 A
Leakage current (mA)	
1 AC	21
3 AC	24
Outline dimensions (W x H x D, mm)	40 x 170 x 170
Weight (g)	
S200 PN	1028.9
S200 Basic PN	960

Table 14-5 Specific technical data of the 200 V converters frame size C

Article No. 6SL5□10-1BB	10-8AF0	11-0AF0
Frame size	FSC	FSC
Rated input current (A)		
1 AC	7.0	8.0
3 AC	3.5	4.0
Rated output current (A)	4.4	4.4
Maximum output current (A)	16.8	16.8
Maximum supported motor power (kW)	0.75	1.0
Power loss (W)	45	46
Inrush current (A)	7.6	7.6

## Technical data

### 14.1 Technical data of the converter

Article No. 6SL5□10-1BB	10-8AF0	11-0AF0
Fuse according to IEC	3NA3805 (16 A)	3NA3805 (16 A)
	3NW6006-1 (12 A)	3NW6006-1 (12 A)
Fuse according to UL, Class J	15 A	15 A
Leakage current (mA)	1 AC	20
	3 AC	23
Outline dimensions (W x H x D, mm)	60 x 170 x 195	60 x 170 x 195
Weight (g)	S200 PN	1741.4
	S200 Basic PN	1741.4

### 14.1.4 Specific data of the 400 V converters

#### Technical data

Table 14-6 Specific technical data of the 400 V converters frame size A

Article No. 6SL5510-1BE	10-2AF0	10-4AF0
Frame size	FSA	FSA
Rated input current (A)	1.3	1.3
Rated output current (A)	1.3	1.3
Maximum output current (A)	5.1	6.0
Maximum supported motor power (kW)	0.2	0.4
Power loss (W)	31	32
Inrush current (A)	7.5	7.5
Fuse according to IEC	3NA3804 (4 A)	3NA3804 (4 A)
	3NW6304-1 (4 A)	3NW6304-1 (4 A)
Fuse according to UL, Class J	3 A	3 A
Leakage current (mA)	36	36
Outline dimensions (W x H x D, mm)	50 x 180 x 200	50 x 180 x 200
Weight (g)	1517.5	1517.5

Table 14-7 Specific technical data of the 400 V converters frame size B

Article No. 6SL5510-1BE	10-8AF0	11-0AF0
Frame size	FSB	FSB
Rated input current (A)	2.5	3.0
Rated output current (A)	2.5	3.0
Maximum output current (A)	9.3	11.5
Maximum supported motor power (kW)	0.75	1.0
Power loss (W)	46	54
Inrush current (A)	7.5	7.5



14.1 Technical data of the converter

Article No. 6SL5510-1BE	10-8AF0	11-0AF0
Fuse according to IEC	3NA3803 (10 A) 3NW6303-1 (10 A)	3NA3803 (10 A) 3NW6303-1 (10 A)
Fuse according to UL, Class J	10 A	10 A
Leakage current (mA)	39	39
Outline dimensions (W x H x D, mm)	60 x 180 x 200	60 x 180 x 200
Weight (g)	1912.4	1912.4

Table 14-8 Specific technical data of the 400 V converters frame size C

Article No. 6SL5510-1BE	11-5AF0	12-5AF0
Frame size	FSC	FSC
Rated input current (A)	5.5	8.0
Rated output current (A)	5.3	7.8
Maximum output current (A)	20	26.5
Maximum supported motor power (kW)	1.75	2.5
Power loss (W)	84	123
Inrush current (A)	15	15
Fuse according to IEC	3NA3805 (16 A) 3NW6006-1 (12 A)	3NA3805 (16 A) 3NW6305-1 (16 A)
Fuse according to UL, Class J	15 A	20 A
Leakage current (mA)	46	46
Outline dimensions (W x H x D, mm)	70 x 180 x 200	70 x 180 x 200
Weight (g)	2008.4	2008.4

Table 14-9 Specific technical data of the 400 V converters frame size D

Article No. 6SL5510-1BE	13-5AF0	15-0AF0	17-0AF0
Frame size	FSD	FSD	FSD
Rated input current (A)	11.0	13.0	14.2
Rated output current (A)	11.0	12.6	13.2
Maximum output current (A)	38.1	38.8	37.4
Maximum supported motor power (kW)	3.5	5.0	7.0
Power loss (W)	171	194	205
Inrush current (A)	3	3	3
Fuse according to IEC	3NA3807 (20 A) 3NW6307-1 (20 A)	3NA3807 (20 A) 3NW6007-1 (20 A)	3NA3810 (25 A) 3NW6010-1 (25 A)
Fuse according to UL, Class J	25 A	25 A	25 A
Leakage current (mA)	60	60	60
Outline dimensions (W x H x D, mm)	95 x 260 x 230	95 x 260 x 230	95 x 260 x 230
Weight (g)	4517.5	4517.5	4517.5

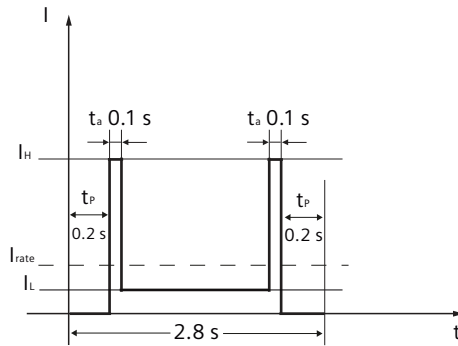
### 14.1.5 Overload capacity

#### Description

SINAMICS S200 converter product line can work with a certain overload capacity for a specific time period.

- 350% overload capacity: for 200 V and 400 V variants with a power rating of 0.1 kW to 0.75 kW
- 300% overload capacity: for 200 V and 400 V variants with a power rating of 1 kW to 7 kW

The typical load cycle can be repeated without limitation.



$I_H$	Maximum current	$t_a$	Acceleration time
$I_{rate}$	Rated current	$t_p$	Preset time
$I_L$	Minimum current	$T$	Total cycle period
$I_0$	Stall current		

Figure 14-1 Typical load cycle

The other duty cycle can be calculated by the following formula:

$$I_{rate}^2 \times T = I_0^2 \times t_p \times 2 + I_H^2 \times t_a \times 2 + I_L^2 \times (T - t_p \times 2 - t_a \times 2)$$

$$I_H = n \times I_{rate} \quad (3 < n < 4.2)$$


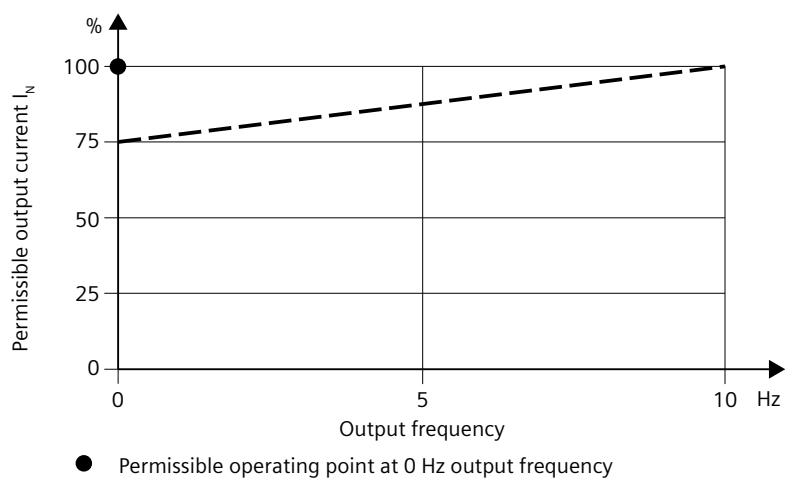


Figure 14-2 Permitted output current at low frequency

### 14.1.6 Power derating as a function of the installation altitude and ambient temperature
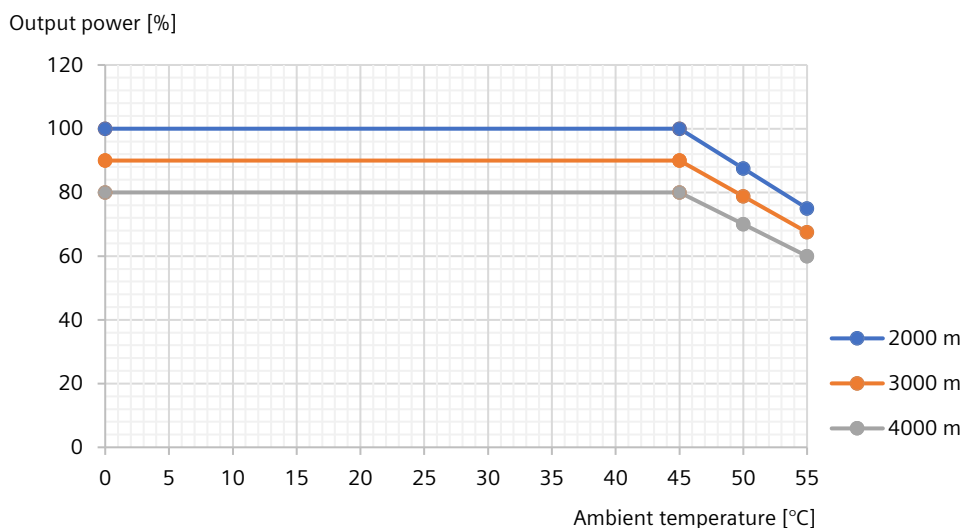
#### Description

#### Power derating as a function of the installation altitude and ambient temperature



#### Note

A maximum of 2000 m is permissible for CSA compliance.

## 14.1.7 Braking resistor

### 14.1.7.1 Internal braking resistor

#### Description

An internal braking resistor is designed in the converter (excluding S200 Basic PN FSA and FSB and S200 PN FSA (0.1 kW)) to absorb regenerative energy from the motor. The table below shows the information of the internal braking resistor:

Table 14-10 Internal braking resistor of the SINAMICS S200 converter product line (PN version)

Frame size	Resistance ( $\Omega$ )	Maximum continuous power ( $P_{\text{cont\_int}}$ ) (W)	Maximum peak power ( $P_{\text{max\_int}}$ ) (W)	Maximum braking energy ( $E_{\text{max\_int}}$ ) (J)
<b>1 AC/3 AC, 200 V ... 240 V</b>				
FSA (0.2 kW)	200	8	373	63
FSB (0.4 kW)	100	16	742	123
FSC (0.75 kW, 1 kW)	50	30	1884	292
<b>3 AC, 380 V ... 480 V</b>				
FSA (0.2 kW, 0.4 kW)	500	14	754	210
FSB (0.75 kW ... 1.0 kW)	160	15	2312	637
FSC (1.75 kW ... 2.5 kW)	70	30	5086	1137
FSD (3.5 kW ... 7.0 kW)	27	65	9896	1948

#### More information

For more information about connecting the braking resistor, see Section "Connecting the braking resistor (Page 148)".

### 14.1.7.2 External braking resistor

#### Description

If the motor feeds back more energy than can be dissipated by the internal braking resistor, or when you use a converter without the internal braking resistor, you will require an external braking resistor. You can select a suitable external braking resistor according to your calculation result for the specific application.

When selecting a braking resistor, you must take into account the factors such as load inertia, deceleration time, speed variation, and braking period according to your specific application and technology.

For more information about selecting a motor, see Section "Motor selection (Page 900)".

** WARNING****Risk of fire caused by continuous overload**

An explosion or a fire could occur if the external braking resistor is continuously overloaded (for example as the result of a defective Braking Module). This can result in severe injury or death and/or the enclosure could melt.

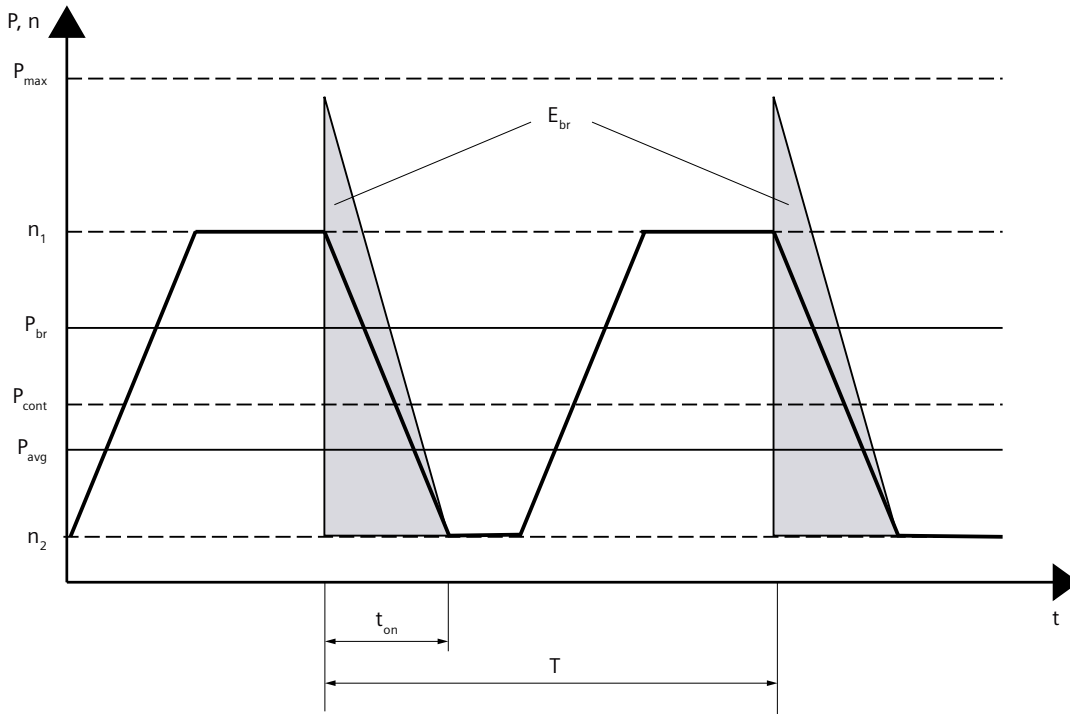
- Use only braking resistors that are intrinsically safe.

**NOTICE****Damage to the converter due to its maximum load being exceeded**

If the maximum permissible continuous power, peak power or braking energy is exceeded, the converter may be damaged.

- Only ever operate the converter within its maximum permissible working range.

Load cycles for braking resistors



$P_{max}$  [W]: Maximum peak power  
 $P_{cont}$  [W]: Maximum continuous power  
 $P_{br}$  [W]: Application-specific braking power  
 $P_{avg}$  [W]: Application-specific average braking power  
 $E_{max}$  [J]: Maximum braking energy  
 $E_{br}$  [J]: Application-specific braking energy  
 $t_{on}$  [s]: Braking duration  
 $T$  [s]: Cycle duration  
 $n_1$  [r/min]: Initial speed  
 $n_2$  [r/min]: Speed after braking

$P_{max\_int}$  [W]: Maximum peak power of internal braking resistor  
 $P_{max\_ext}$  [W]: Maximum peak power of external braking resistor  
 $P_{cont\_int}$  [W]: Maximum continuous power of internal braking resistor  
 $P_{cont\_ext}$  [W]: Maximum continuous power of external braking resistor  
 $E_{max\_int}$  [J]: Maximum braking energy of internal braking resistor  
 $E_{max\_ext}$  [J]: Maximum braking energy of external braking resistor

Figure 14-3 Peak power, continuous power and duty cycle of the braking resistor

The following conditions must be met simultaneously when selecting the braking resistor:

- The calculated braking energy required in the application  $E_{br}$  must not exceed the maximum braking energy  $E_{max}$ . If  $E_{br} < E_{max\_intr}$ , you don't require an external braking resistor. If  $E_{br} > E_{max\_intr}$ , you must use the external braking resistor. Select the external braking resistor with  $E_{max\_ext} > E_{br}$ .
- The braking power required in the application  $P_{br}$  must not exceed the maximum peak power  $P_{max}$ . When using the internal braking resistor, if  $P_{br} > P_{max\_intr}$ , you can adjust the braking duration  $t_{on}$ . If the requirement ( $P_{br} < P_{max\_intr}$ ) of the specific application still can not be satisfied, you must use the external braking resistor. Select the external braking resistor with  $P_{max\_ext} > P_{br}$ .
- The average braking power required in the application  $P_{avg}$  (arithmetic mean of the braking cycle) must not exceed the maximum continuous power  $P_{cont}$ . When using the internal braking resistor, if  $P_{avg} > P_{cont\_intr}$ , you can adjust the braking cycle duration  $T$ . If the requirement ( $P_{avg} < P_{cont\_intr}$ ) of the specific application still can not be satisfied, you must use the external braking resistor. Select the external braking resistor with  $P_{cont\_ext} > P_{avg}$ .

You can find the resistance data of the internal braking resistor for each frame size in the table "Internal braking resistor of the SINAMICS S200 converter product line (PN version)" in Section "Internal braking resistor (Page 618)".

#### Calculating the braking energy, the braking power, and the average braking power

- Calculate the braking energy according to the following formula:

$$E_{br} = \frac{1}{2} (J_{mot} + J) \frac{4\pi^2}{3600} (n_1^2 - n_2^2)$$

---

#### Note

As the friction is not taken into account in the above formula, less energy is fed back to the servo drive system in practice than that calculated in the formula.

---

- Calculate the braking power according to the following formula:  
 $P_{br} = E_{br} / t_{on}$
- Calculate the average braking power according to the following formula:  
 $P_{avg} = E_{br} / T$

$E_{br} / J$	Application-specific braking energy
$J_{mot} / \text{kgm}^2$	Moment of inertia of the servo motor
$J / \text{kgm}^2$	Moment of inertia of the driven mechanical system in relation to the shaft of the servomotor
$n_1 / \text{r/min}$	Initial speed
$n_2 / \text{r/min}$	Speed after braking
$P_{br} / W$	Application-specific braking power
$P_{avg} / W$	Application-specific average braking power

14.1 Technical data of the converter

$t_{on}$  / s      Braking duration  
 $T$  / s          Cycle duration

**Example for internal braking resistor application**

A 1FL2104-4AG... servomotor with low moment of inertia (with integrated holding brake) with a mechanical system is fed from a SINAMICS S200 6SL5510-1BB11-0A□0. It is to be braked from 3000 r/min to 600 r/min with a braking duty cycle as  $t_{on} = 0.05$  s,  $T = 2$  s.

Moment of inertia of the servomotor 1FL2104-4AG...       $J_{mot} = 0.71 \times 10^{-4}$  kgm<sup>2</sup>  
 Moment of inertia of the driven mechanical system       $J = 4 \times 10^{-4}$  kgm<sup>2</sup>  
 $n_1 = 3000$  r/min       $n_2 = 600$  r/min  
 $\Rightarrow E_{br} = 22.31$  J <  $E_{max\_int} = 292$  J (1 J = 1 Ws)  
 $\Rightarrow P_{br} = 446.26$  W <  $P_{max\_int} = 1884$  W  
 $\Rightarrow P_{avg} = 11.16$  W <  $P_{cont\_int} = 30$  W

In this case, therefore, no external braking resistor is required.

**Example for external braking resistor application**

A 1FL2104-4AG... servomotor with low moment of inertia (with integrated holding brake) with a mechanical system is fed from a SINAMICS S200 6SL5510-1BB11-0A□0. It is to be braked from 6000 r/min to 600 r/min with a braking duty cycle as  $t_{on} = 0.05$  s,  $T = 2$  s.

Moment of inertia of the servomotor 1FL2104-4AG...       $J_{mot} = 0.71 \times 10^{-4}$  kgm<sup>2</sup>  
 Moment of inertia of the driven mechanical system       $J = 8 \times 10^{-4}$  kgm<sup>2</sup>  
 $n_1 = 6000$  r/min       $n_2 = 600$  r/min  
 $\Rightarrow E_{br} = 170.21$  J <  $E_{max\_int} = 292$  J (1 J = 1 Ws)  
 $\Rightarrow P_{br} = 3404.18$  W >  $P_{max\_int} = 1884$  W  
 $\Rightarrow P_{avg} = 85.10$  W >  $P_{cont\_int} = 30$  W

In this case, therefore, an external braking resistor is required. Select the external braking resistor according to the following table.

Frame size	Resistance (Ω)	Continuous power (W)	Peak power (W)	Braking energy (J)
FSC (1 kW)	≥ 50	> 85.10	> 3404.18	> 170.21

**More information**

For more information about connecting the braking resistor, see Section "Connecting the braking resistor (Page 148)".



## 14.2 Technical data of the motor

### 14.2.1 General technical data

#### Technical data

Table 14-11 General technical data of the motor

Property	Description
Type of motor	Servo motor
Rotor inertia	<ul style="list-style-type: none"> <li>1FL21: motor with low rotor inertia</li> <li>1FL22: motor with medium rotor inertia</li> <li>1FL23: motor with high rotor inertia</li> </ul>
Cooling	Natural cooling
Thermal class	<ul style="list-style-type: none"> <li>1FL2102, 1FL2□03, 1FL23□□: B</li> <li>1FL2104, 1FL2204, 1FL2□05: F</li> </ul>
Impulse voltage insulation class (IVIC) according to IEC/EN 60034-18-41	C
Operating temperature	-15 °C ... +40 °C, power derating at higher temperatures
Relative humidity	< 90% at 30 °C, condensation not permissible
Installation altitude according to EN 60034-6	≤ 1000 m above sea level; otherwise power derating
Type of construction according to IEC/EN 60034-7	IM B5 (IM V1, IM V3)
Degree of protection according to IEC/EN 60034-5	<ul style="list-style-type: none"> <li>1FL2102, 1FL2□03, 1FL2104, 1FL2204: IP54 for the shaft extension (without shaft sealing) and IP65 for the motor body, optionally IP65 for the whole motor (with shaft sealing)</li> <li>1FL2□05, 1FL23□□: IP65</li> </ul>
Temperature monitoring	Thermal motor model
Paint finish	Anthracite (614 Anthrazit)
Shaft extension according to DIN 748-3 and IEC 60072-1	Plain shaft, optionally shaft with feather key (half-key balancing)
Radial eccentricity, concentricity, and axial eccentricity according to DIN 42955 and IEC 60072-1	Tolerance N (normal)
Vibration severity grade according to IEC/EN 60034-14	Grade A
Sound pressure level $L_{pA}$ (1 m) according to DIN EN ISO 1680, max. tolerance +3 dB(A)	<ul style="list-style-type: none"> <li>1FL2102, 1FL2□03, 1FL2104, 1FL2204: 60 dB(A)</li> <li>1FL2□05, 1FL2304: 65 dB(A)</li> <li>1FL2306, 1FL2310: 70 dB(A)</li> </ul>
Encoder	<ul style="list-style-type: none"> <li>Absolute encoder single-turn, 17-bit (identification letter: H)</li> <li>Absolute encoder single-turn, 21-bit (identification letter: S)</li> <li>Absolute encoder, 21-bit single-turn + 12-bit multiturn (identification letter: M)</li> </ul>

14.2 Technical data of the motor

Property	Description
Holding brake	Optional integrated holding brake
Connection	<ul style="list-style-type: none"> <li>1FL2102, 1FL2□03, 1FL2104, 1FL2204: dual-cable connections with a hybrid connector</li> <li>1FL2□05: two-cable connections with two angular connectors</li> <li>1FL23□□: three-cable connections with three angular connectors</li> </ul>

## 14.2.2 Permissible environmental conditions for the motor

### Technical data

Table 14-12 Environmental conditions for transport

Environmental conditions for transport in the transport packaging according to Class 2K3 to DIN EN IEC 60721-3-2, except for environmental variables "air temperature" and "condensation"	
Climatic environmental conditions	<ul style="list-style-type: none"> <li>Temperature: -15 °C ... +70 °C</li> <li>Highest relative humidity: &lt; 90% at 30 °C, condensation not permissible</li> </ul>
Mechanical environmental conditions	Single shocks (6 ms), max. 300 m/s <sup>2</sup>
Protection against chemical substances	Protected according to Class 2C2
Biological environmental conditions	Suitable according to Class 2B2

Table 14-13 Environmental conditions for long-term storage

Environmental conditions for long-term storage in the product packaging according to Class 1K3 to DIN EN IEC 60721-3-1, except for environmental variables "air temperature", "highest relative humidity" and "condensation"	
Climatic environmental conditions	<ul style="list-style-type: none"> <li>Temperature: -20 °C ... +65 °C</li> <li>Highest relative humidity: &lt; 90% at 30 °C, condensation not permissible</li> </ul>
Mechanical environmental conditions	Vibration-free storage space, $v_{rms} < 0.2$ mm/s
Protection against chemical substances	Protected according to Class 1C2
Biological environmental conditions	Suitable according to Class 1B2
Duration	<ul style="list-style-type: none"> <li>Six months for the above-mentioned conditions.</li> <li>Special preservation measures are required for storage periods of six months up to a maximum of two years.</li> </ul> <p>For more information, please contact your local sales partner.</p>

Table 14-14 Environmental conditions during operation

<b>Environmental conditions during operation according to 3K4 to DIN EN IEC 60721-3-3, except for environmental variables "low air temperature", "condensation" and "low air pressure"</b>	
Installation altitude	Up to 1000 m above sea level without limitations You can get additional information in Section "Derating factors (Page 627)".
Climatic environmental conditions <sup>1)</sup>	<ul style="list-style-type: none"> <li>• Temperature: -15 °C ... +40 °C, power derating at higher temperatures</li> <li>• Relative humidity: &lt; 90% at 30 °C, condensation not permissible</li> <li>• Absolute air humidity: 1 g/m<sup>3</sup> ... 29 g/m<sup>3</sup></li> <li>• Rate of temperature change<sup>2)</sup>: 0.5°/min</li> <li>• Atmospheric pressure: 89 kPa<sup>1) 3)</sup> ... 106 kPa<sup>4)</sup></li> <li>• Solar radiation: 700 W/m<sup>2</sup> <sup>2)</sup></li> <li>• Movement of the air: 1.0 m/s</li> <li>• Water (other than rain): see Section "Degree of protection (Page 629)"</li> </ul>
Mechanical environmental conditions	<ul style="list-style-type: none"> <li>• Vibration severity grade: A (according to IEC 60034-14:2003)</li> <li>• Shock resistance (m/s<sup>2</sup>):               <ul style="list-style-type: none"> <li>– 1FL2102, 1FL2□03, 1FL2104, 1FL2204, 1FL2□05: 50 (continuous in axial direction), 50 (continuous in radial direction), 300 (in a short time of 11 ms)</li> <li>– 1FL23□□: 25 (continuous in axial direction), 50 (continuous in radial direction), 300 (in a short time of 11 ms)</li> </ul> </li> </ul>
Protection against chemical substances	Protected according to 3C2 to DIN EN IEC 60721-3-3
Biological environmental conditions	Suitable according to 3B2 to DIN EN IEC 60721-3-3
Pollution	Suitable for environments with degree of pollution 2 according to IEC 61800-5-1
Cooling air	Clean and dry air
The motors are not suitable for operation under the following circumstances:	
<ul style="list-style-type: none"> <li>• In a vacuum<sup>5)</sup></li> <li>• In salt-laden or aggressive atmospheres</li> <li>• Outdoors</li> </ul>	

1) Increased ruggedness with regard to low air temperature and low atmospheric pressure better than 3K3 according to DIN EN IEC 60721-3-3

2) Averaged over a period of 5 min


3) The limit value of 89 kPa covers applications at altitudes up to 1000 m.

4) Conditions in mines are not considered.

5) Operation in a vacuum is not permissible because of the low dielectric strength and poor heat dissipation.

### 14.2.3 Protection against electromagnetic fields (motor)

#### Description

 <b>WARNING</b>
<p><b>Malfunction of active implants due to magnetic and electrical fields</b></p> <p>Electric motors pose a danger to people with active medical implants, e.g. heart pacemakers, who come close to these motors.</p> <ul style="list-style-type: none"> <li>If you are affected, stay a minimum distance of 30 cm away from the motors (tripping threshold for static magnetic fields of 0.5 mT according to Directive 2013/35/EU).</li> </ul>

<p><b>NOTICE</b></p>
<p><b>Damage to the absolute encoder due to the magnetic interference from the magnetic field</b></p> <p>The magnetic interference from the magnetic field can cause a damage to the absolute encoder.</p> <ul style="list-style-type: none"> <li>To avoid magnetic interference to the absolute encoder, keep the motor at least 15 mm away from devices that produce a magnetic field stronger than 10 mT.</li> </ul>

### 14.2.4 Cooling

#### Description

The 1FL2 motor is a non-ventilated motor.

To ensure sufficient heat dissipation when installed, the motor requires a minimum clearance of 100 mm from adjacent components on three sides.

Maintain the clearance irrespective of the following mounting variants.

**Non-thermally insulated mounting**

Some of the motor power loss is dissipated through the flange when the motor is connected to the mounting surface.

Table 14-15 Mounting conditions for non-thermally insulated mounting

Motor	Steel plate: width x height x thickness (mm)
1FL2102	200 x 200 x 6
1FL2□03	250 x 250 x 6
1FL2104	
1FL2204	
1FL2□05	300 x 300 x 12
1FL2304	270 x 270 x 10

Motor	Steel plate: width x height x thickness (mm)
1FL2306	390 x 390 x 15
1FL2310	420 x 420 x 20

The data in the table refers to an ambient temperature of +40 °C and an installation altitude up to 1000 m above sea level. If the environmental conditions are different, derating may be required. You can find information on this in Section "Derating factors (Page 627)".

Larger mounting surfaces improve heat dissipation.

#### Thermally insulated mounting without additional mounted components

For naturally cooled motors, you must reduce the S1-characteristic curve as follows:

- Reduce the motor static torque by a range of 20% to 30%.
- Reduce the torque at 3000 r/min by a range of 40% to 50%.

#### Thermal motor protection

The converter monitors the motor temperature based on a thermal motor model and issues the alarm "Motor overtemperature" before the maximum temperature is reached. If the motor exceeds the maximum temperature, the converter switches off the motor with the fault message "Motor overtemperature".

If the ambient temperature exceeds 40 °C, you need to set the ambient temperature at the converter so that the motor is reliably protected.

- To do this, select parameter p0613 at the converter.
- Set the maximum ambient temperature that occurs.

Parameter r0034 indicates the thermal load of the motor as a percentage. The reading is influenced by the ambient temperature selected in parameter p0613.

You can find additional information in Section "Parameter list (Page 695)".

## 14.2.5 Derating factors

### Overview

Due to the decreasing air pressure in higher installation altitudes, the cooling of the motor deteriorates. Therefore, reduce the power of the motor as the installation altitude increases.

Multiply the permissible torques or powers by the factors from the following table.

Reduce the torques and powers according to the values determined.

**Description**

**Factors for power derating depending on the installation altitude and the ambient temperature**

Table 14-16 Power derating factors

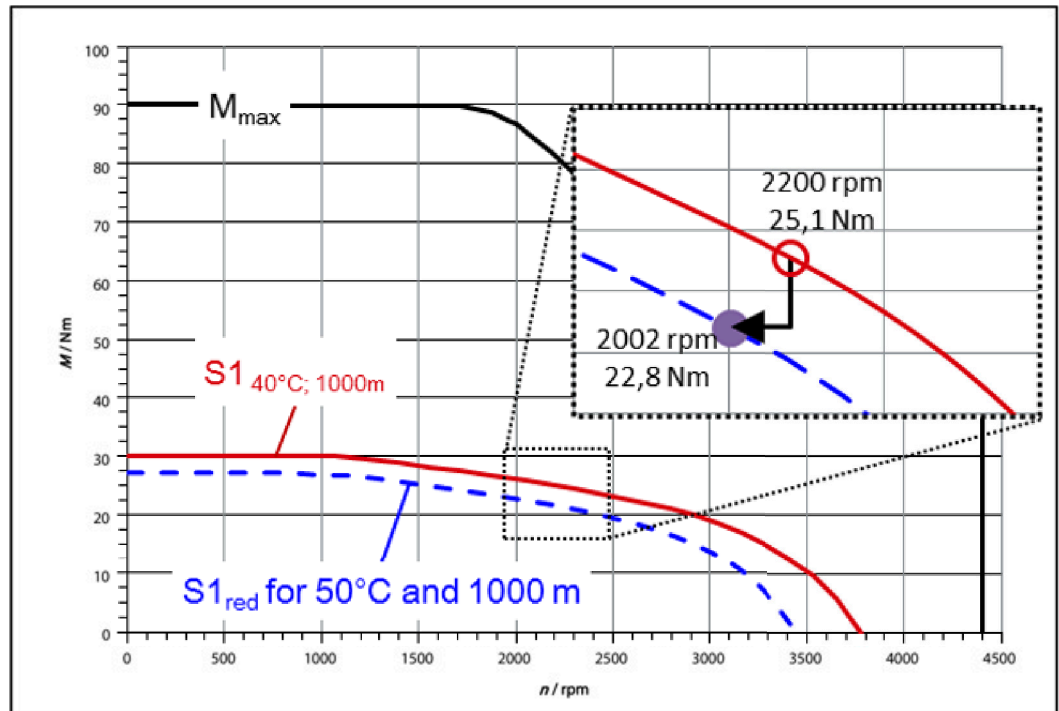
Installation altitude above sea level in m	Ambient temperature in °C			
	30	40	45	50
1000	1.08	1.00	0.96	0.91
2000	1.02	0.93	0.89	0.84
3000	0.95	0.86	0.81	0.75
4000	0.88	0.77	0.72	0.66
5000	0.80	0.68	0.62	0.55

**Calculating the reduced characteristic curve**

$$M_{S1\ red}(n) = x_d \cdot M_{S1}(n / x_d)$$

- $M_{S1\ red}$  Reduced motor torque for S1 operation at the required installation altitude and ambient temperature
- $M_{S1}$  Motor torque for S1 operation at ambient temperature of 40 °C and 1000 m above sea level
- $n$  Motor speed
- $x_d$  Derating factor from the table above

**Graphic display of the derating factors**



### Factors for reducing the DC link voltage depending on the installation altitude

The voltage strength of the motor insulation is reduced for installation altitudes exceeding 2000 m above sea level. Check whether it is necessary to limit the DC link voltage.

Reduce the permissible DC link voltage with increasing installation altitude due to the decreasing air pressure.

Table 14-17 Limit values for the DC link voltage for 1FL2 motors at installation altitudes below 2000 m mean sea level

Motors with the following rated speed in the article number 1FL2□□□-□□X□□..., X =	Max. permissible converter DC link voltage in V
G	375
C, F	720

Table 14-18 Typical DC link voltage of the SINAMICS converters

Network	Infeed	DC link voltage in V
1 AC 200 V	Non-regulated	230
1 AC 240 V	Non-regulated	276
3 AC 200 V	Non-regulated	270
3 AC 240 V	Non-regulated	324
3 AC 380 V	Non-regulated	513
3 AC 480 V	Non-regulated	648

As the DC link voltage is reduced, the converter output voltage also decreases. This reduces the operating range in the M-n diagram.

The M-n diagrams are provided in Section Technical data and characteristics of the 1FL2 (Page 644).

## 14.2.6 Degree of protection

### Overview

The degree of protection of a motor is marked, for example, using "IP65".

The motor degree of protection is classified according to EN 60034-5 (IEC 60034-5).

IP = International Protection

1st digit = protection against the ingress of foreign bodies

2nd digit = protection against water

DIN 60034-5 is valid for water as potentially occurring medium, not for oil or other creeping fluids.


Configure the motor in the required degree of protection.

**Description**


Table 14-19 Degree of protection of 1FL2

Article number	Degree of protection <sup>1)</sup>
1FL2102 1FL2□03 1FL2104 1FL2204	IP54 for the shaft extension (without shaft sealing) and IP65 for the motor body, optionally IP65 for the whole motor (with shaft sealing)
1FL2□05 1FL23□□	IP65

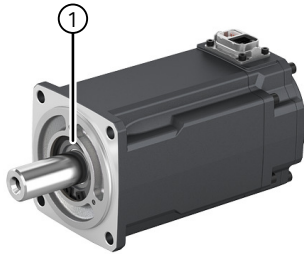
<sup>1)</sup> The degree of protection is specified on the rating plate.



1FL2102  
1FL2□03  
1FL2104  
1FL2204

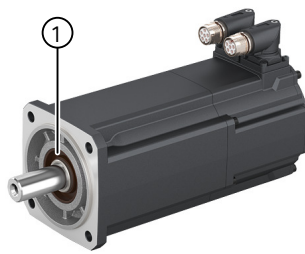

1FL2□05

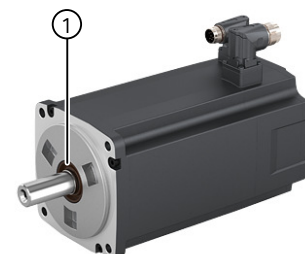

1FL23□□

① Radial shaft sealing ring

The radial shaft sealing ring shortens the length of shaft extension that can be used.

**Note**

The radial shaft sealing ring should be used with sufficient lubricant oil splashed on it. Do not use a motor with a radial shaft sealing ring submerged in oil.

It is permissible that the radial shaft sealing ring runs dry for a short time.

With degrees of protection IP65, it is not permissible for liquid to collect on the flange.

The service life of the radial shaft sealing ring is approximately 5000 operating hours.

**More information**

For more information, see Section "Shaft extension (Page 632)".



## 14.2.7 Balancing

### Description

The motors are balanced according to EN 60034-14.

Motors with feather key in the shaft are half-key balanced.

A mass equalization for the protruding half key must be taken into account for the output elements.

## 14.2.8 Vibrational behavior

### Description

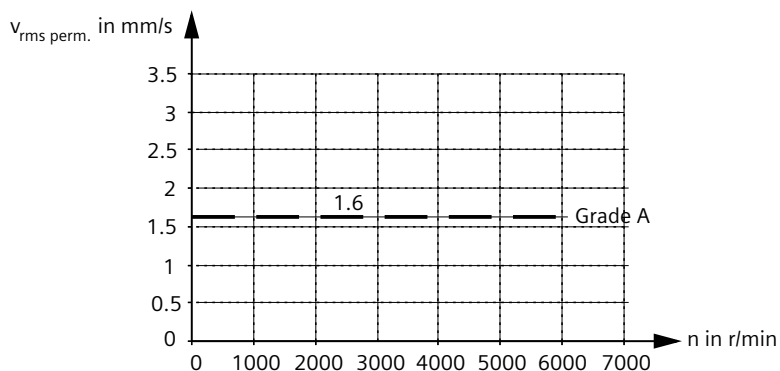
#### Vibration severity grade

The vibration response of the system at the location of use is influenced by output elements, any built-on parts, the alignment, the installation, and external vibrations. This can change the vibration values of the motor.

The motors conform to vibration severity grade A according to IEC/EN 60034-14: 2003.

The specified values refer only to the motor. The conditions at the installation location can influence the system vibration response and increase the vibration values on the motor.

The vibration severity grade is maintained up to the rated speed ( $n_N$ ).



#### Vibration response

Comply with the vibration values in the following tables to ensure perfect functioning of the motor and a long service life.

Table 14-20 Vibration values for motors with low or medium inertia

Vibration velocity $V_{rms}$ to ISO 10816	Vibration acceleration $a_{peak}$ axial	Vibration acceleration $a_{peak}$ radial
Max. 4.5 mm/s	50 m/s <sup>2</sup>	50 m/s <sup>2</sup>


14.2 Technical data of the motor

Table 14-21 Vibration values for motors with high inertia

Vibration velocity $V_{rms}$ to ISO 10816	Vibration acceleration $\alpha_{peak}$ axial	Vibration acceleration $\alpha_{peak}$ radial
Max. 4.5 mm/s	25 m/s <sup>2</sup>	50 m/s <sup>2</sup>

To evaluate the vibration velocity, the measuring equipment must meet the requirements of ISO 2954.

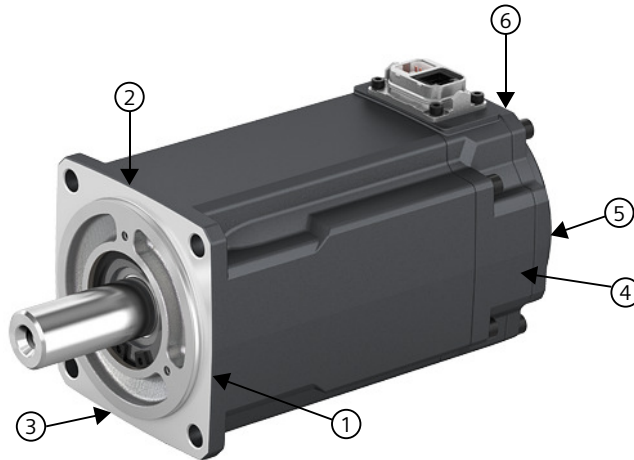Select the measuring locations according to ISO 10816-1, Section 3.2. See the illustration below for more information on the measuring points.



- ① End shield DE radial
- ② End shield DE radial
- ③ End shield DE axial
- ④ End shield NDE radial
- ⑤ End shield NDE axial
- ⑥ End shield NDE radial

The vibration acceleration is evaluated in the frequency range from 10 Hz to 2000 Hz. The maximum peak in the measurement time range is considered.

The vibration values must not exceed the specified limits at any measuring location.

### 14.2.9 Shaft extension

#### Technical data

The motors are supplied with cylindrical shaft extensions. The shaft extension usually has a centering thread according to DIN 332, form DR.

Optionally, a shaft extension with key slot and feather key is available.

With motors 1FL2102, 1FL2□03, 1FL2104, and 1FL2204, the usable shaft extension is reduced by the radial shaft sealing ring with the IP65 degree of protection.

Table 14-22 Dimension values

Motor	Shaft dimensions with IP54 Diameter x length in mm	Shaft dimensions with IP65 Diameter x length in mm	Feather key Width x height x length in mm	Centering thread
1FL2102	8 (h6) × 22.5	8 (h6) × 18.2	3 × 3 × 16	M3
1FL2□03	14 (h6) × 27	14 (h6) × 21	5 × 5 × 16	M5
1FL2104	19 (h6) × 37	19 (h6) × 32	6 × 6 × 25	M6
1FL2204				
1FL2105	-	19 (h6) × 42	6 × 6 × 25	M6
1FL2205	-	19 (h6) × 37	6 × 6 × 25	M6
1FL2304	-	19 (h6) × 30	6 × 6 × 25	M6
1FL2306	-	22 (h6) × 50.5	8 × 7 × 44	M8
1FL2310	-	35 (h6) × 75	10 × 8 × 60	M12

### 14.2.10 Radial eccentricity, concentricity, and axial eccentricity


#### Technical data

The shaft and flange accuracies for the 1FL2 motors are implemented according to DIN 42955 and IEC 60072-1 as standard (Normal class).

Table 14-23 Radial eccentricity tolerance of the shaft to the frame axis (referring to cylindrical shaft extensions)

Motor	Standard (Normal class)
1FL2102	0.03 mm
1FL2□03	0.035 mm
1FL2□04	0.04 mm
1FL2□05	
1FL2306	
1FL2310	0.05 mm

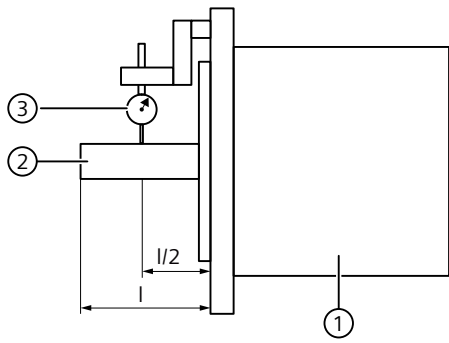14.2 Technical data of the motor




- ① Motor
- ② Motor shaft
- ③ Dial gauge

Figure 14-4 Checking the radial eccentricity

Table 14-24 Concentricity and axial eccentricity tolerance of the flange surface to the shaft axis (referring to the centering diameter of the mounting flange)

Motor	Standard (Normal class)
1FL2102	0.06 mm
1FL2□03	0.08 mm
1FL2□04	
1FL2□05	
1FL2306	0.1 mm
1FL2310	

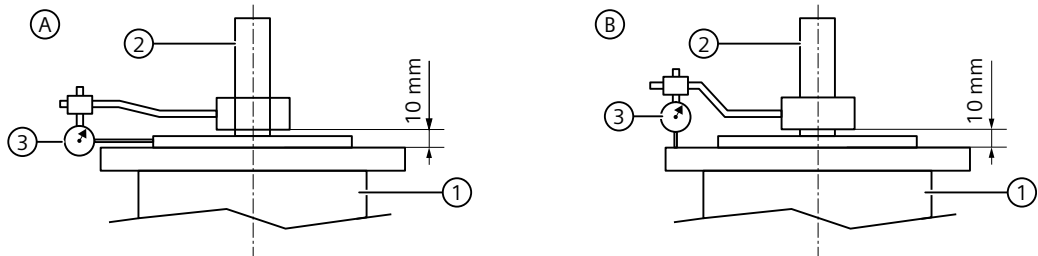

- A Check for concentricity
- B Check for axial eccentricity
- ① Motor
- ② Motor shaft
- ③ Dial gauge

Figure 14-5 Checking the concentricity and axial eccentricity

## 14.2.11 Axial and radial forces

### 14.2.11.1 Permissible axial forces

#### Technical data

Table 14-25 Permissible axial forces

Type	Axial force, static <sup>1)</sup> $F_{A\text{ stat}} / \text{N}$
1FL2102	50
1FL2□03	98
1FL2104 1FL2204	100
1FL2□05	120
1FL2304	140
1FL2306	245
1FL2310	590

<sup>1)</sup> The specified axial forces are determined by the spring loading and therefore also apply to motors with holding brake.

#### Note

Applications with an angular toothed pinion directly on the motor shaft are not permitted if the permissible axial forces are exceeded.

14.2.11.2 Permissible radial forces

Description

As a result of the bearing arrangement, the 1FL2 is designed for aligned forces. Forces such as these occur for belt drives, for example.

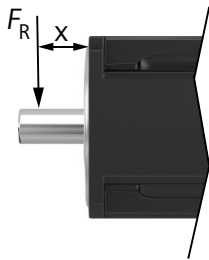
All radial forces always refer to aligned forces.

**NOTICE**

**Motor damage caused by circulating forces**

Circulating forces can cause bearing motion, and therefore damage the motor.

- Avoid rotating forces.



- $F_R$  Point of application of the radial force
- $x$  Distance between where the radial force is applied and the shaft shoulder in mm

Figure 14-6 Point of application of radial forces  $F_R$  at the shaft extension

The following diagrams indicate the maximum permissible radial force for the corresponding motor frame size. It depends on the force application point and the average speed for a nominal bearing service life (L10h) of 20000 h.

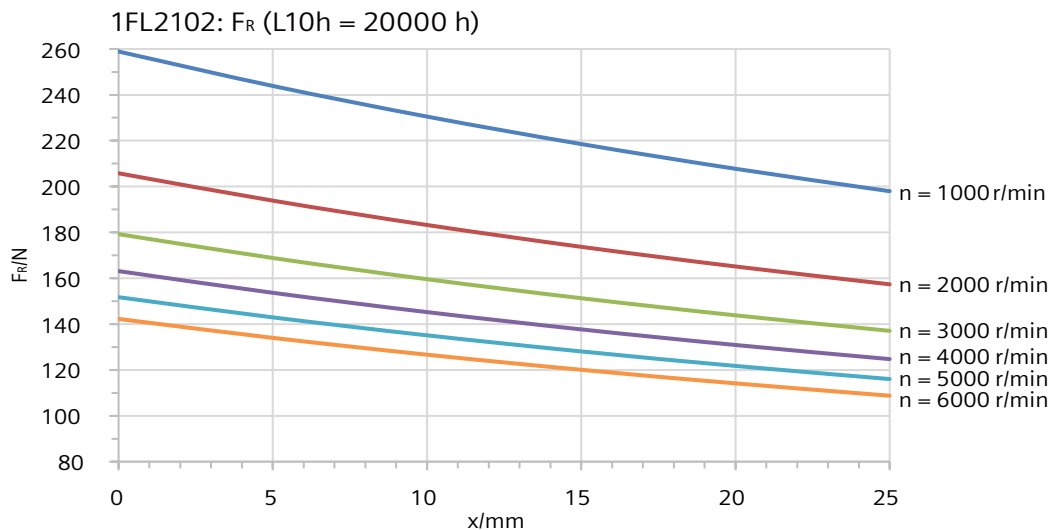


Figure 14-7 Radial force diagram 1FL2102

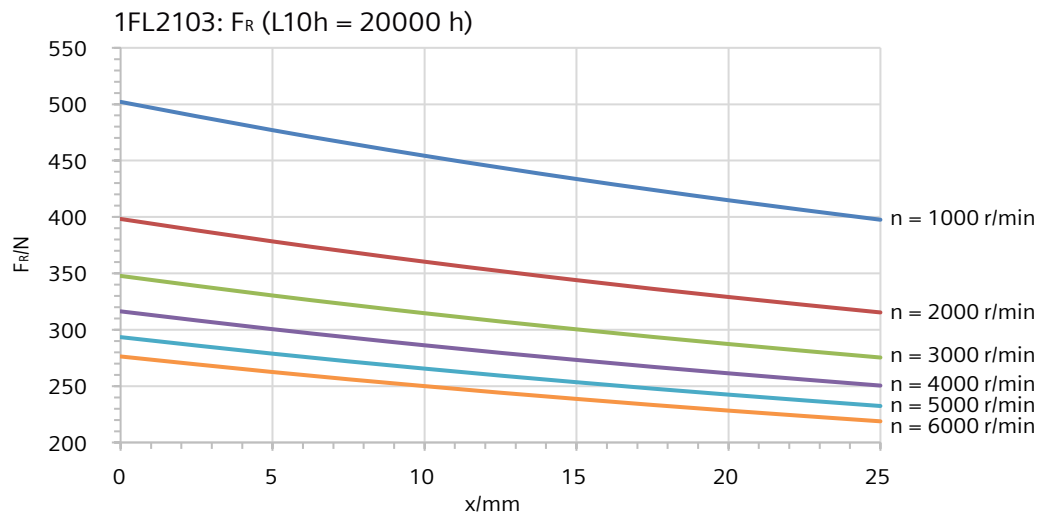


Figure 14-8 Radial force diagram 1FL2103

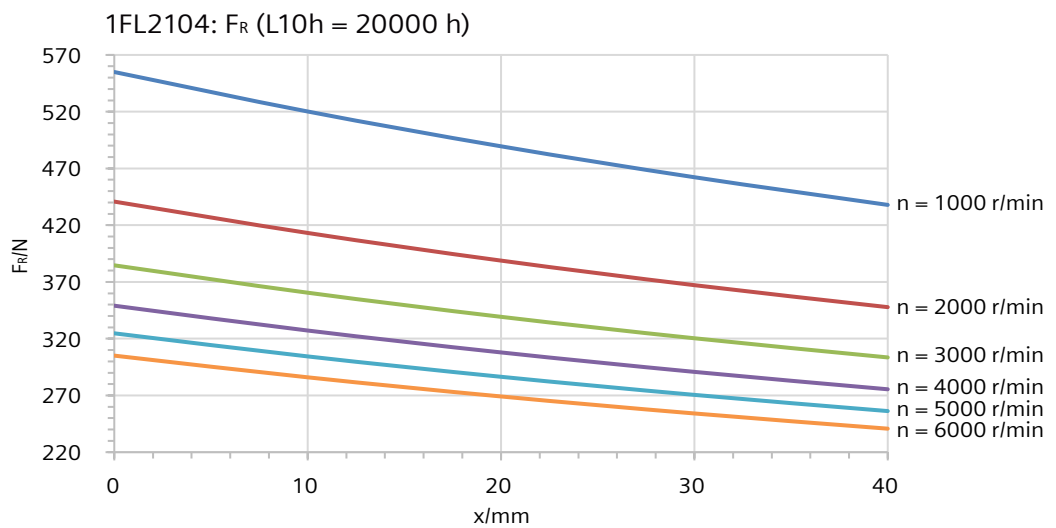


Figure 14-9 Radial force diagram 1FL2104

14.2 Technical data of the motor

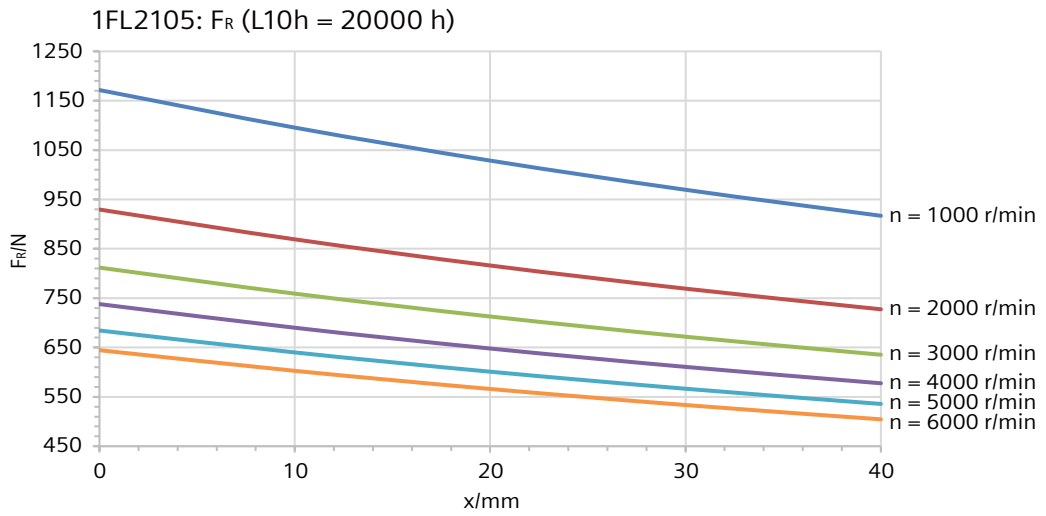


Figure 14-10 Radial force diagram 1FL2105

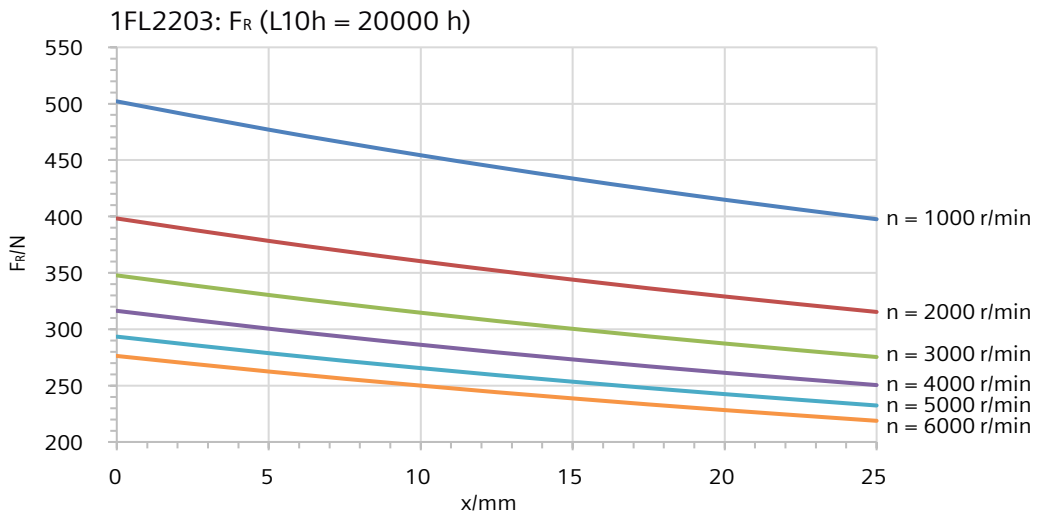


Figure 14-11 Radial force diagram 1FL2203



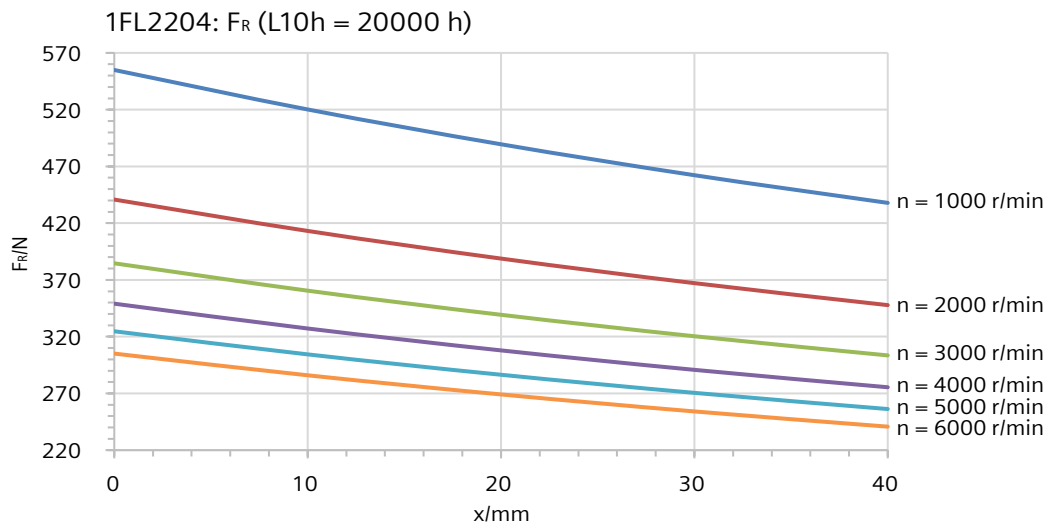


Figure 14-12 Radial force diagram 1FL2204

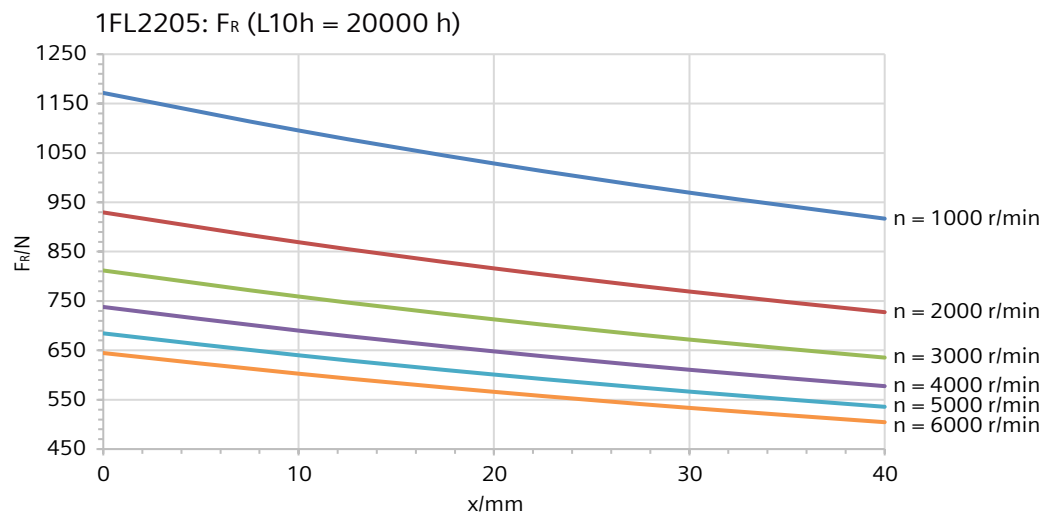


Figure 14-13 Radial force diagram 1FL2205

14.2 Technical data of the motor

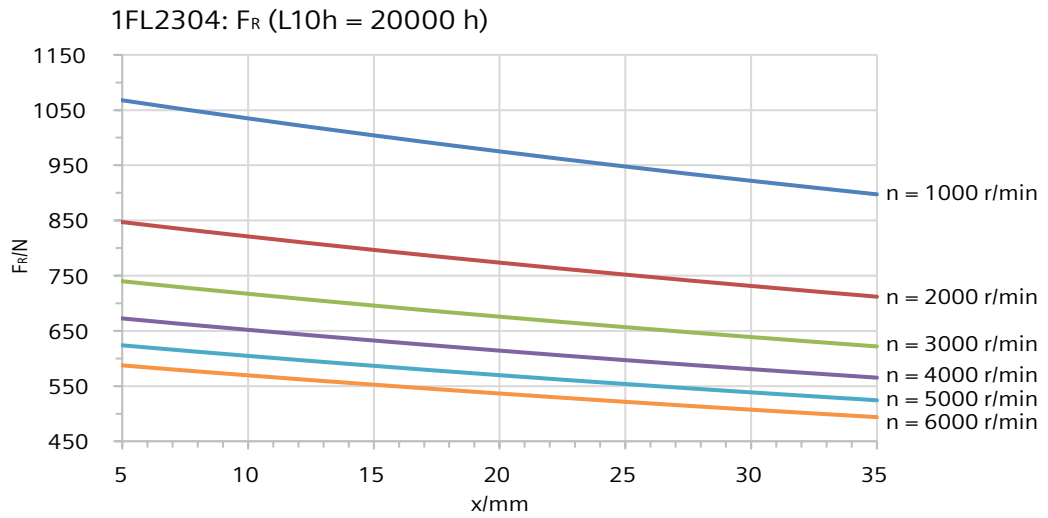


Figure 14-14 Radial force diagram 1FL2304

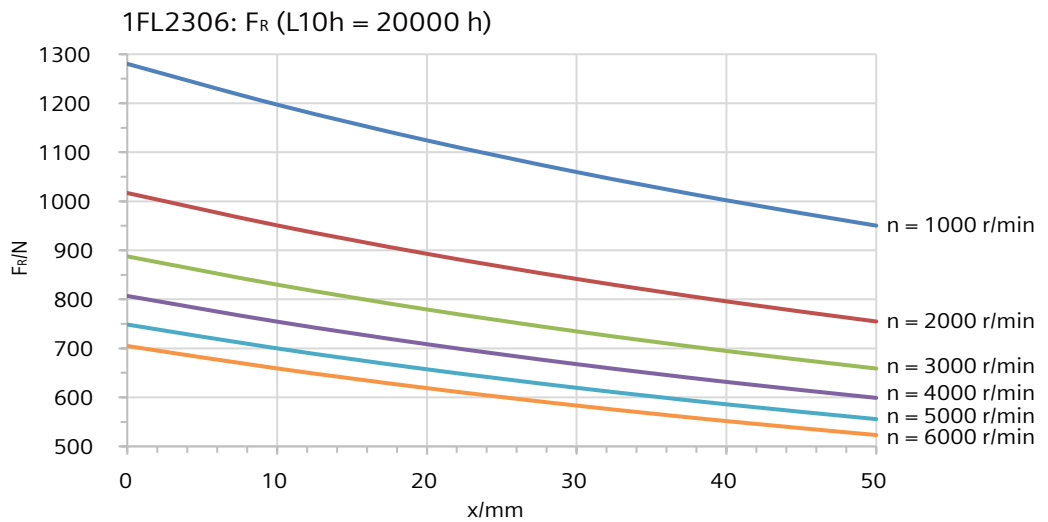


Figure 14-15 Radial force diagram 1FL2306

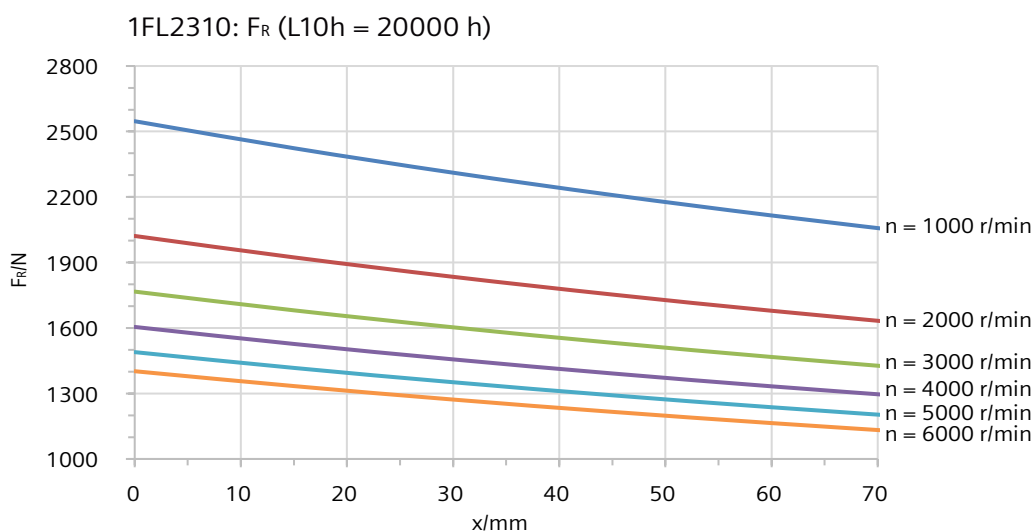


Figure 14-16 Radial force diagram 1FL2310

## 14.2.12 Available encoders

### Technical data

Table 14-26 Encoders that can be ordered for the 1FL2

	Absolute encoder single-turn, 17-bit	Absolute encoder single-turn, 21-bit	Absolute encoder, 21-bit single-turn + 12-bit multiturn
Identification in the article number	H	S	M
Resolution	131072 = 17-bit	2097152 = 21-bit	2097152 = 21-bit
Absolute position	One revolution	One revolution	4096 revolutions (12-bit)
Angle error	$\pm 120''$	$\pm 120''$	$\pm 120''$

## 14.2.13 Brake data

### 14.2.13.1 Overview of the 1FL2 holding brake

#### Description

The holding brake is used to clamp the motor shaft when the motor is at a standstill. The holding brake is not a working brake for braking the rotating motor. When the motor is at a standstill, the holding brake is designed for at least five million switching cycles.

Limited EMERGENCY STOP operation is permissible. Take into account the maximum permissible single operating energy as well as service life, total operating energy of the brake.



**WARNING**

**Unintentional movements through inadequate braking effect**

If you use the holding brake incorrectly, for example, as an operating brake or you ignore the permissible operating energy of the brake, then the brake will be subject to excessive and impermissible wear. As a consequence, there may be no brake effect. Unintentional movements of the machine or system can result in death or serious injury.

- Observe the permissible number of operating cycles and EMERGENCY STOP properties.
- Operate the motor only in conjunction with an intact brake.
- Avoid repeated brief acceleration of the motor against a holding brake that is still closed.

The holding brakes of the 1FL2 have a torsional backlash of less than 1°.

### 14.2.13.2 Technical data of the 1FL2 holding brake

#### Technical data

Table 14-27 Technical data of the holding brake

Motor type	Holding torque	Dynamic braking torque	Opening time	Closing time	Maximum permissible single operating energy <sup>1)</sup>	Total operating energy (service life)	Holding current
	$M_4$ / Nm	$M_{1m}$ / Nm	$t_{open\_f}$ / ms	$t_{close\_f}$ / ms	$W_{max}$ / J	$W_{tot}$ / kJ	$I_h$ / A
<b>Permanent-magnet brake</b>							
1FL2□05	8	5	90	25	142	284	< 1 A
<b>Spring-loaded brake</b>							
1FL2102	0.32	-	35	10	1	2	< 1 A
1FL2□03	1.3	-	60	10	10	20	< 1 A
1FL2104	3.3	-	110	30	43	86	< 1 A
1FL2204							
1FL2304	3.5	-	60	45	140	280	< 2 A
1FL2306	12	-	180	60	600	1200	< 2 A
1FL2310	30	-	220	115	1100	2200	< 2 A

<sup>1)</sup> Maximum of three consecutive EMERGENCY STOP procedures. Maximum 25% of all EMERGENCY STOP procedures as high-energy stops with  $W_{max}$ .

**Holding torque  $M_4$ :** The holding torque  $M_4$  is the highest permissible torque for the closed brake in steady-state operation without slip (holding function when motor is at standstill). The data applies to the state at operating temperature (120 °C).

**Dynamic braking torque  $M_{1m}$ :** The dynamic braking torque  $M_{1m}$  is the smallest mean dynamic braking torque that can occur for an EMERGENCY STOP.

**Opening time  $t_o$  and closing time  $t_{cl}$ :** The delay times that occur when switching the brake  $t_o$  and  $t_{cl}$  are saved in the motor and are automatically taken into consideration. After activation of the holding brake (opening), the speed/velocity setpoint remains at "Zero" during the opening time  $t_o$ . The speed/velocity setpoint is only enabled after the opening time  $t_o$  has elapsed. After OFF1 or OFF3 and activation of the holding brake (closing), the motor still remains in closed-loop control with speed/velocity setpoint "Zero" during closing time  $t_{cl}$ . The pulses are only deleted after this.

**Maximum permissible single operating energy  $W_{max}$ :** The maximum permissible single operating energy of an individual EMERGENCY STOP operation. After an EMERGENCY STOP with the maximum single operating energy, allow a cooling time of at least three minutes before you operate the motor again.

**Total operating energy (service life)  $W_{total}$ :** The total operating energy is the sum of the single operating energy (operating energy for each EMERGENCY STOP procedure). If you exceed the total operating energy, problem-free functioning of the brake can no longer be guaranteed.

14.2 Technical data of the motor

**Holding current  $I_h$ :** The holding current  $I_h$  keeps the holding brake open. The holding current  $I_h$  continues to load the 24 V power supply of the converter after overexcitation until the brake is released.

**Formula to calculate the operating energy per braking operation**

$$W_{br} = (J_{mot\ br} + J_{load}) \cdot n_{mot}^2 / 182.4$$

$W_{br} / J$	Operating energy per braking operation
$n_{mot} / r/min$	Speed at which the brake is engaged
$J_{mot\ br} / kgm^2$	Rotor moment of inertia of the motor with brake (see Technical data and characteristics of the 1FL2 (Page 644))
$J_{load} / kgm^2$	Load moment of inertia of the mounting part on the motor with brake
182.4	Constant for calculating the circular frequency and SI units

14.2.14 Technical data and characteristics of the 1FL2


14.2.14.1 1FL2102-2AG connected to 1 AC 200 V/3 AC 220 V

Technical data

Table 14-28 Technical data of 1FL2102-2AG

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	0.16
Stall current	$I_0$	A	0.81
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	0.56
Maximum current	$I_{max}$	A	3.1
Thermal time constant	$T_{th}$	min	6.2
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.017
Moment of inertia (with brake)	$J_{mot\ br}$	kgcm <sup>2</sup>	0.022
Recommended load to motor inertia ratio	-	-	Maximum 40x
Weight	$m_{mot}$	kg	0.29
Weight (with brake)	$m_{mot\ br}$	kg	0.46
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	0.16
Rated current	$I_{rated}$	A	0.81
Rated power	$P_{rated}$	kW	0.05

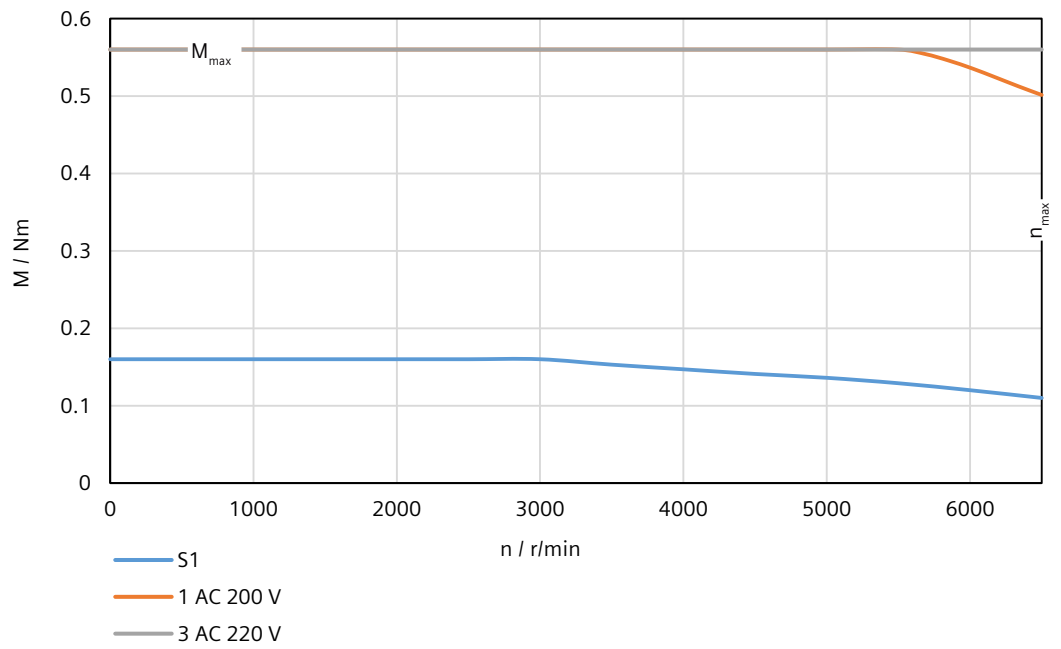14.2 Technical data of the motor




14.2.14.2 1FL2102-4AG connected to 1 AC 200 V/3 AC 220 V

Technical data

Table 14-29 Technical data of 1FL2102-4AG

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	0.32
Stall current	$I_0$	A	0.76
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	1.12
Maximum current	$I_{max}$	A	2.95
Thermal time constant	$T_{th}$	min	6.2
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.029
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	0.034
Recommended load to motor inertia ratio	-	-	Maximum 30x
Weight	$m_{mot}$	kg	0.39
Weight (with brake)	$m_{mot br}$	kg	0.56
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	0.32
Rated current	$I_{rated}$	A	0.76
Rated power	$P_{rated}$	kW	0.1

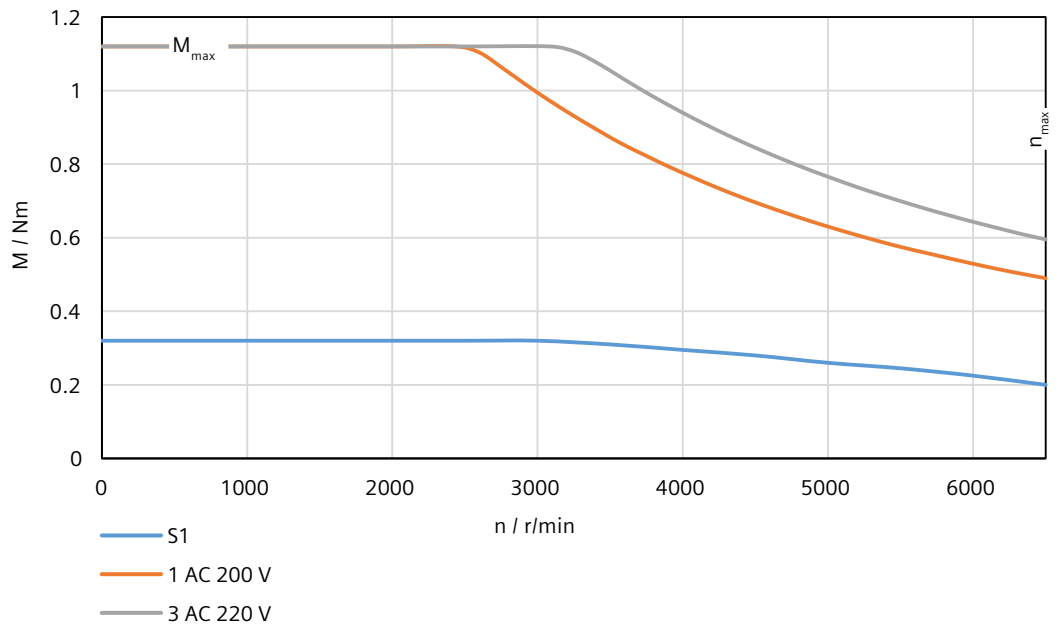




14.2.14.3 1FL2103-2AG connected to 1 AC 200 V/3 AC 220 V

Technical data

Table 14-30 Technical data of 1FL2103-2AG

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	0.64
Stall current	$I_0$	A	1.28
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	2.24
Maximum current	$I_{max}$	A	4.8
Thermal time constant	$T_{th}$	min	10.2
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.080
Moment of inertia (with brake)	$J_{mot\ br}$	kgcm <sup>2</sup>	0.110
Recommended load to motor inertia ratio	-	-	Maximum 30x
Weight	$m_{mot}$	kg	0.79
Weight (with brake)	$m_{mot\ br}$	kg	1.14
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	0.64
Rated current	$I_{rated}$	A	1.28
Rated power	$P_{rated}$	kW	0.2

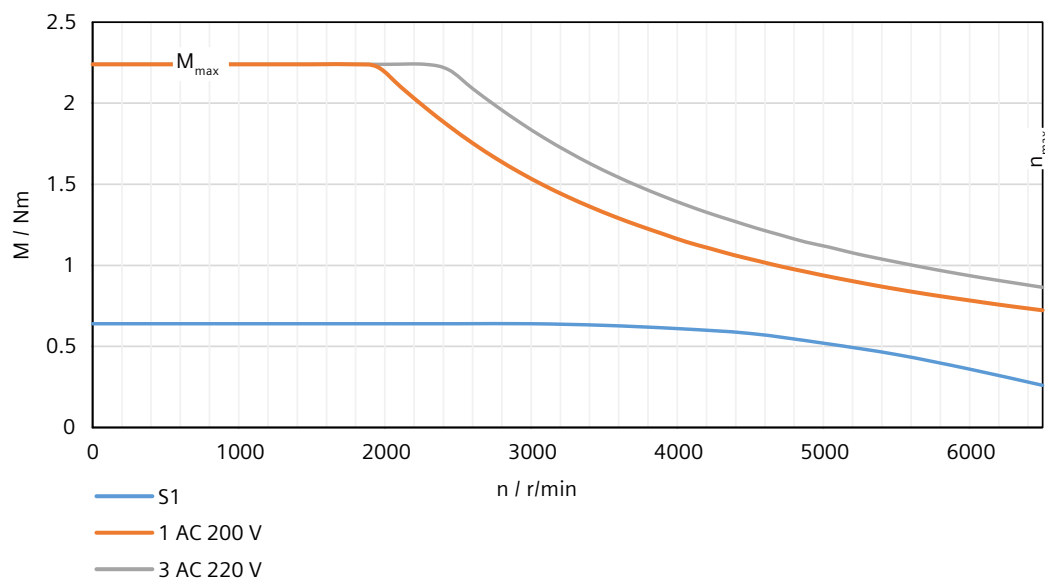


14.2.14.4 1FL2103-4AG connected to 1 AC 200 V/3 AC 220 V

Technical data

Table 14-31 Technical data of 1FL2103-4AG

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	1.27
Stall current	$I_0$	A	2.4
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	4.45
Maximum current	$I_{max}$	A	8.7
Thermal time constant	$T_{th}$	min	13
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.155
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	0.185
Recommended load to motor inertia ratio	-	-	Maximum 30x
Weight	$m_{mot}$	kg	1.16
Weight (with brake)	$m_{mot br}$	kg	1.5
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	1.27
Rated current	$I_{rated}$	A	2.4
Rated power	$P_{rated}$	kW	0.4

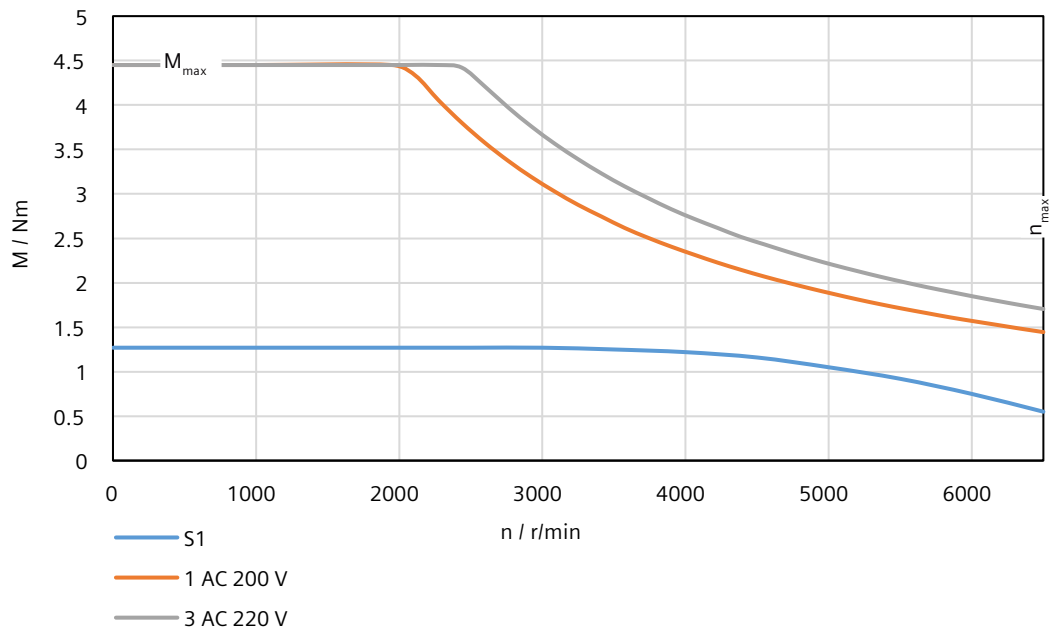


14.2.14.5 1FL2104-2AG connected to 1 AC 200 V/3 AC 220 V

Technical data

Table 14-32 Technical data of 1FL2104-2AG

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	2.4
Stall current	$I_0$	A	4.4
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	8
Maximum current	$I_{max}$	A	16
Thermal time constant	$T_{th}$	min	23.4
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.50
Moment of inertia (with brake)	$J_{mot\ br}$	kgcm <sup>2</sup>	0.58
Recommended load to motor inertia ratio	-	-	Maximum 20x
Weight	$m_{mot}$	kg	2.7
Weight (with brake)	$m_{mot\ br}$	kg	3.5
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	2.4
Rated current	$I_{rated}$	A	4.4
Rated power	$P_{rated}$	kW	0.75

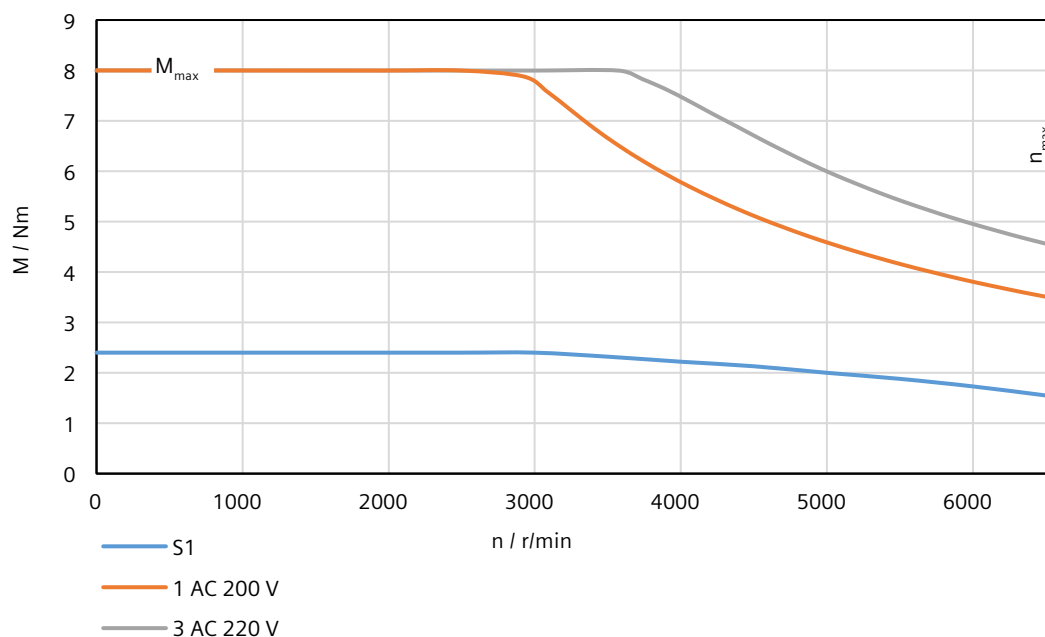


14.2.14.6 1FL2104-4AG connected to 1 AC 200 V/3 AC 220 V

Technical data

Table 14-33 Technical data of 1FL2104-4AG

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	3.2
Stall current	$I_0$	A	4.4
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	10.8
Maximum current	$I_{max}$	A	16
Thermal time constant	$T_{th}$	min	29.6
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.63
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	0.71
Recommended load to motor inertia ratio	-	-	Maximum 20x
Weight	$m_{mot}$	kg	3.3
Weight (with brake)	$m_{mot br}$	kg	4.1
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	3.2
Rated current	$I_{rated}$	A	4.4
Rated power	$P_{rated}$	kW	1

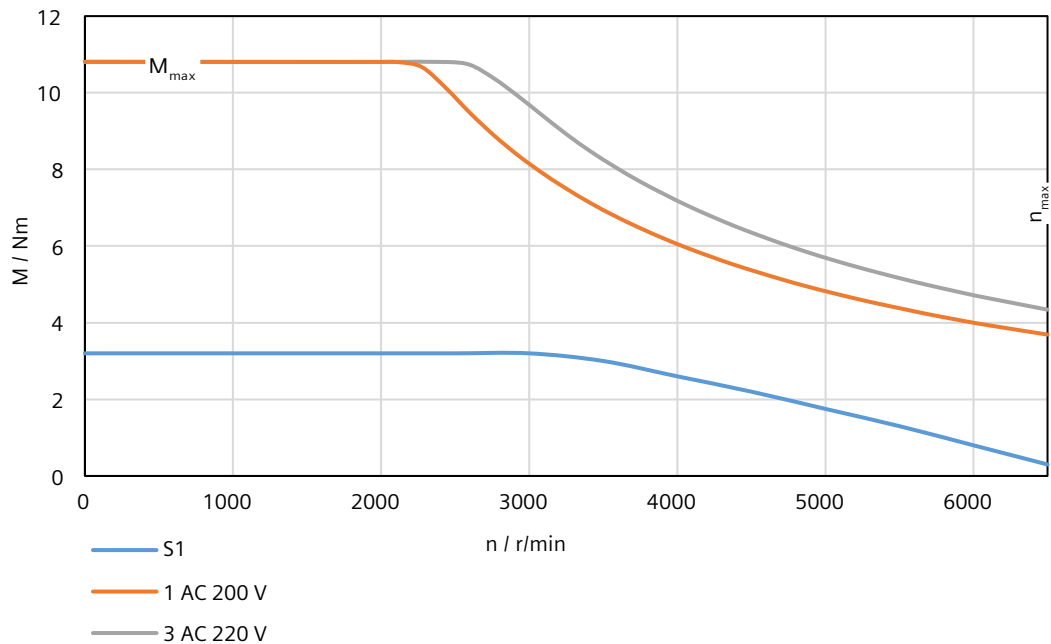


14.2.14.7 1FL2102-2AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-34 Technical data of 1FL2102-2AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	0.16
Stall current	$I_0$	A	0.84
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	0.56
Maximum current	$I_{max}$	A	3.4
Thermal time constant	$T_{th}$	min	4.8
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.017
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	0.022
Recommended load to motor inertia ratio	-	-	Maximum 40x
Weight	$m_{mot}$	kg	0.29
Weight (with brake)	$m_{mot br}$	kg	0.45
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	0.16
Rated current	$I_{rated}$	A	0.84
Rated power	$P_{rated}$	kW	0.05

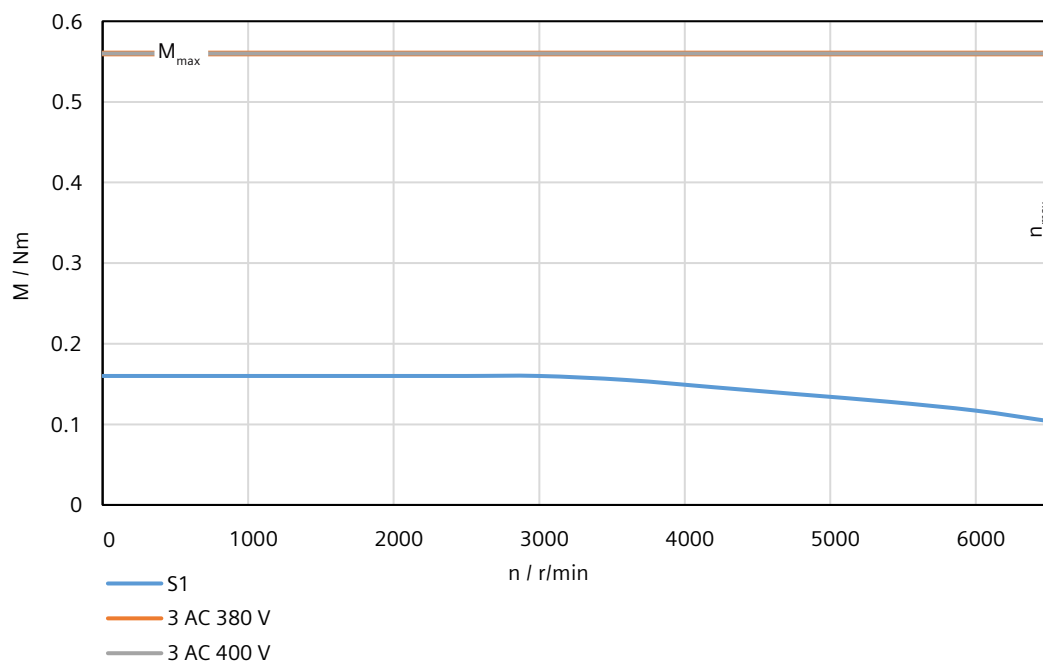


14.2.14.8 1FL2102-4AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-35 Technical data of 1FL2102-4AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	0.32
Stall current	$I_0$	A	0.81
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	1.12
Maximum current	$I_{max}$	A	2.9
Thermal time constant	$T_{th}$	min	4.6
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.029
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	0.034
Recommended load to motor inertia ratio	-	-	Maximum 30x
Weight	$m_{mot}$	kg	0.38
Weight (with brake)	$m_{mot br}$	kg	0.55
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	0.32
Rated current	$I_{rated}$	A	0.81
Rated power	$P_{rated}$	kW	0.1

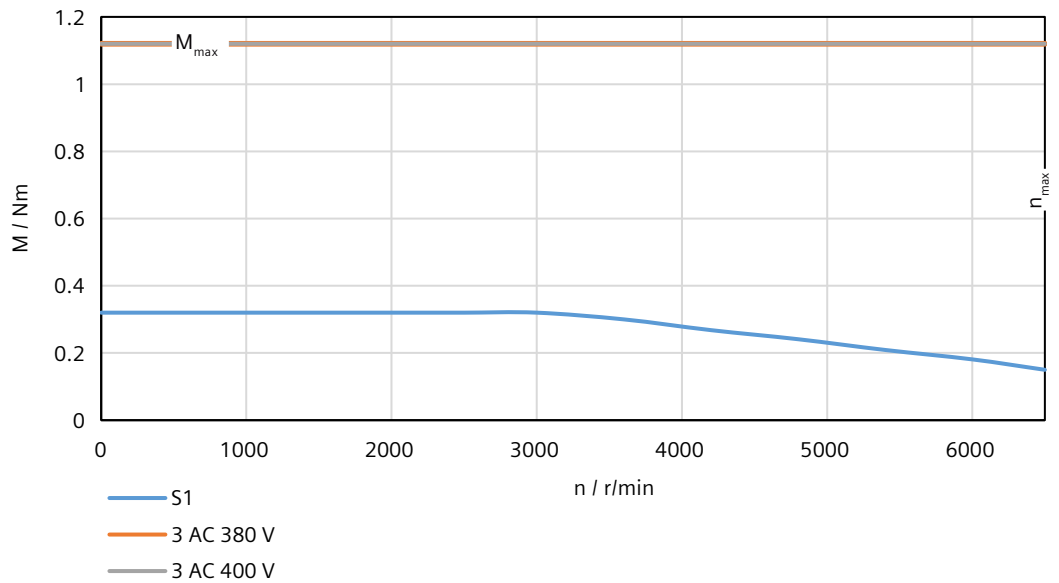


14.2.14.9 1FL2103-2AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-36 Technical data of 1FL2103-2AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	0.64
Stall current	$I_0$	A	1.3
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	2.24
Maximum current	$I_{max}$	A	4.8
Thermal time constant	$T_{th}$	min	8.1
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.080
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	0.110
Recommended load to motor inertia ratio	-	-	Maximum 30x
Weight	$m_{mot}$	kg	0.78
Weight (with brake)	$m_{mot br}$	kg	1.12
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	0.64
Rated current	$I_{rated}$	A	1.3
Rated power	$P_{rated}$	kW	0.2

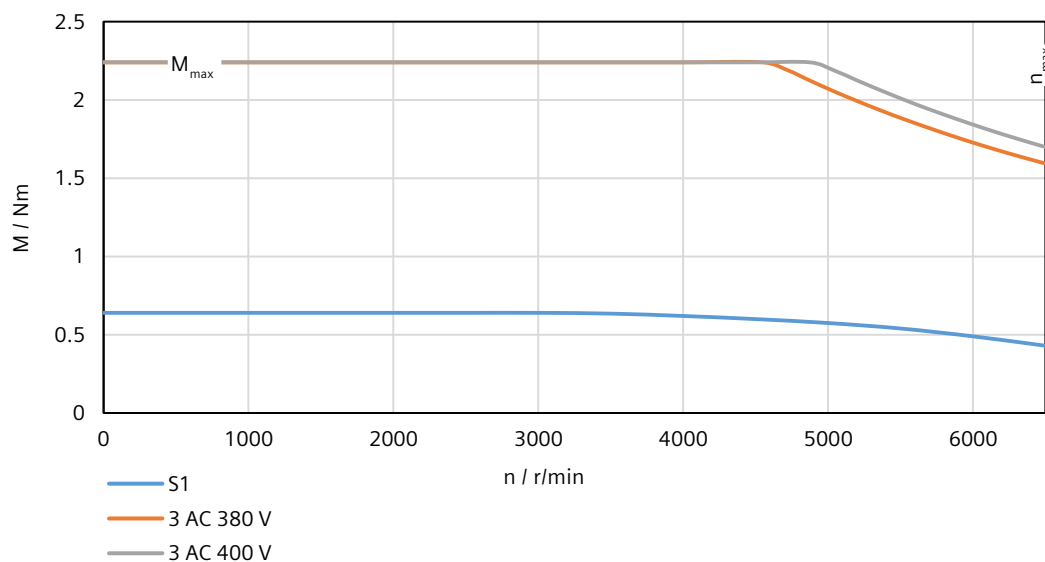


14.2.14.10 1FL2103-4AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-37 Technical data of 1FL2103-4AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	1.27
Stall current	$I_0$	A	1.3
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	4.45
Maximum current	$I_{max}$	A	4.8
Thermal time constant	$T_{th}$	min	9.3
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.155
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	0.185
Recommended load to motor inertia ratio	-	-	Maximum 30x
Weight	$m_{mot}$	kg	1.14
Weight (with brake)	$m_{mot br}$	kg	1.49
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	1.27
Rated current	$I_{rated}$	A	1.3
Rated power	$P_{rated}$	kW	0.4

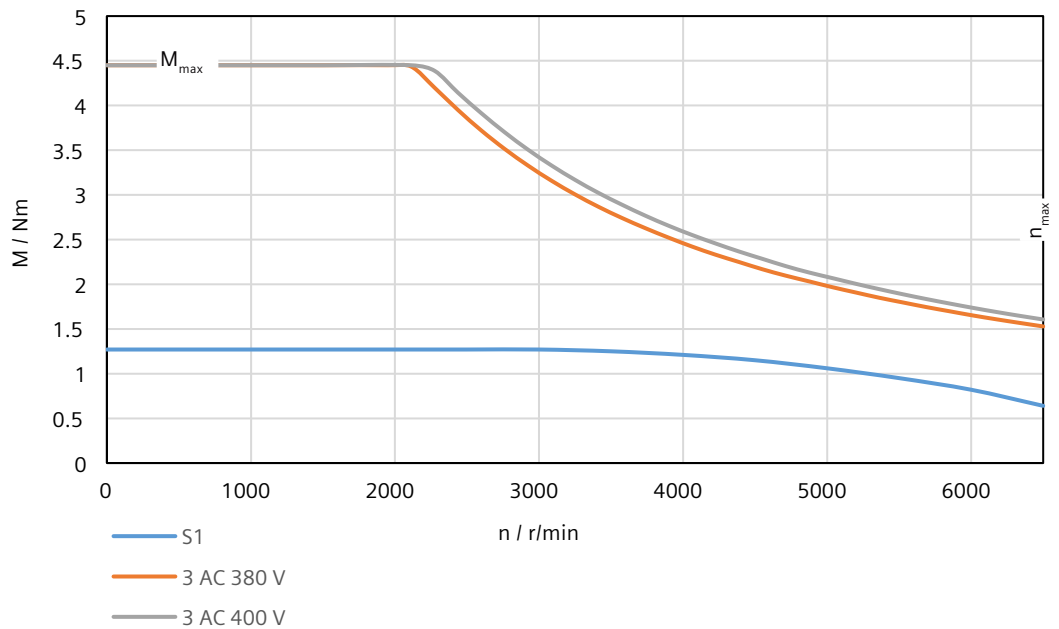




14.2.14.11 1FL2104-2AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-38 Technical data of 1FL2104-2AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	2.4
Stall current	$I_0$	A	2.1
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	8
Maximum current	$I_{max}$	A	7.6
Thermal time constant	$T_{th}$	min	23.3
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.50
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	0.58
Recommended load to motor inertia ratio	-	-	Maximum 20x
Weight	$m_{mot}$	kg	2.7
Weight (with brake)	$m_{mot br}$	kg	3.5
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	2.4
Rated current	$I_{rated}$	A	2.1
Rated power	$P_{rated}$	kW	0.75

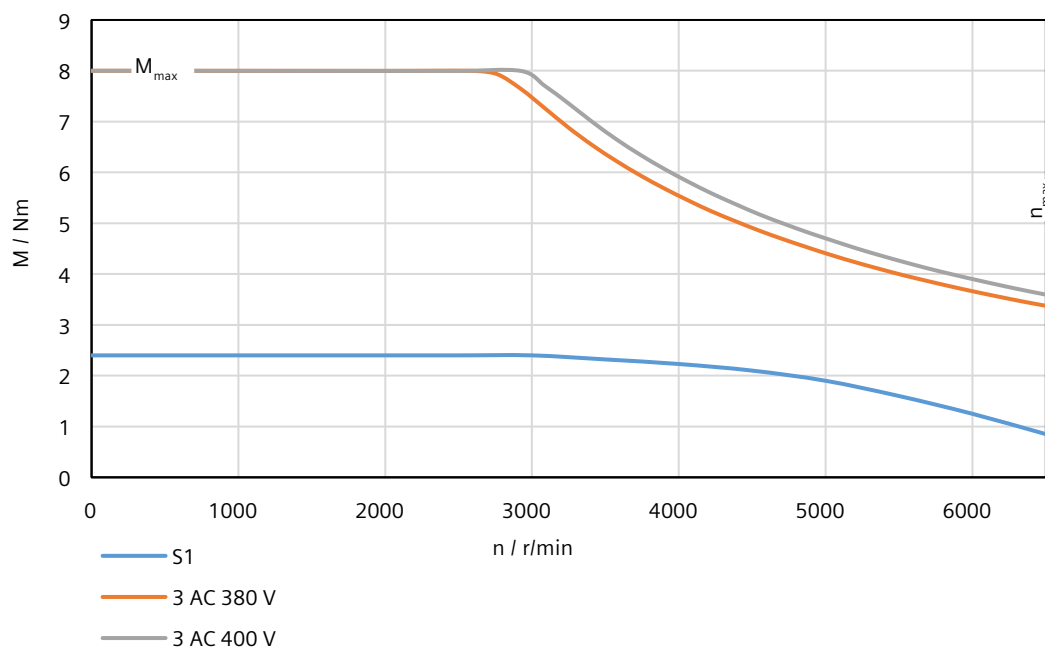


14.2.14.12 1FL2104-4AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-39 Technical data of 1FL2104-4AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	3.2
Stall current	$I_0$	A	3
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	10.8
Maximum current	$I_{max}$	A	10.9
Thermal time constant	$T_{th}$	min	25.4
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.63
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	0.71
Recommended load to motor inertia ratio	-	-	Maximum 20x
Weight	$m_{mot}$	kg	3.3
Weight (with brake)	$m_{mot br}$	kg	4.1
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	3.2
Rated current	$I_{rated}$	A	3
Rated power	$P_{rated}$	kW	1

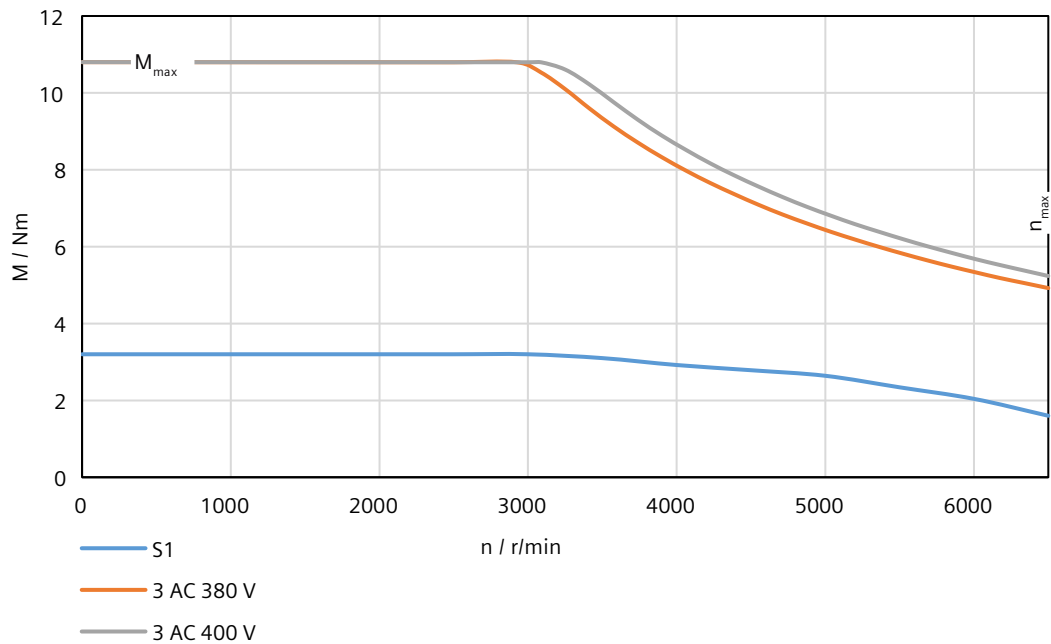


14.2.14.13 1FL2105-2AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-40 Technical data of 1FL2105-2AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	5
Stall current	$I_0$	A	4.65
Maximum permissible speed	$n_{max}$	r/min	6000
Maximum torque	$M_{max}$	Nm	15.9
Maximum current	$I_{max}$	A	18
Thermal time constant	$T_{th}$	min	37
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	1.71
Moment of inertia (with brake)	$J_{mot\ br}$	kgcm <sup>2</sup>	2.54
Recommended load to motor inertia ratio	-	-	Maximum 20x
Weight	$m_{mot}$	kg	5.5
Weight (with brake)	$m_{mot\ br}$	kg	6.4
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	4.6
Rated current	$I_{rated}$	A	4.35
Rated power	$P_{rated}$	kW	1.45

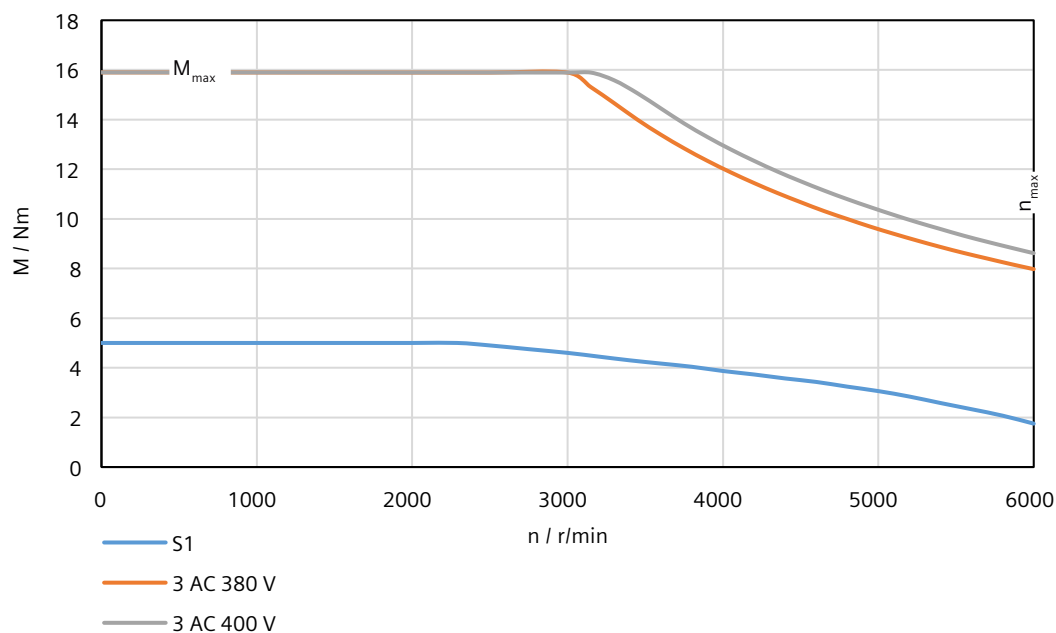


14.2.14.14 1FL2105-4AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-41 Technical data of 1FL2105-4AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	8
Stall current	$I_0$	A	6.7
Maximum permissible speed	$n_{max}$	r/min	6000
Maximum torque	$M_{max}$	Nm	25.3
Maximum current	$I_{max}$	A	24
Thermal time constant	$T_{th}$	min	42.9
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	2.65
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	3.48
Recommended load to motor inertia ratio	-	-	Maximum 15x
Weight	$m_{mot}$	kg	7.8
Weight (with brake)	$m_{mot br}$	kg	8.7
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	6.6
Rated current	$I_{rated}$	A	5.6
Rated power	$P_{rated}$	kW	2.1

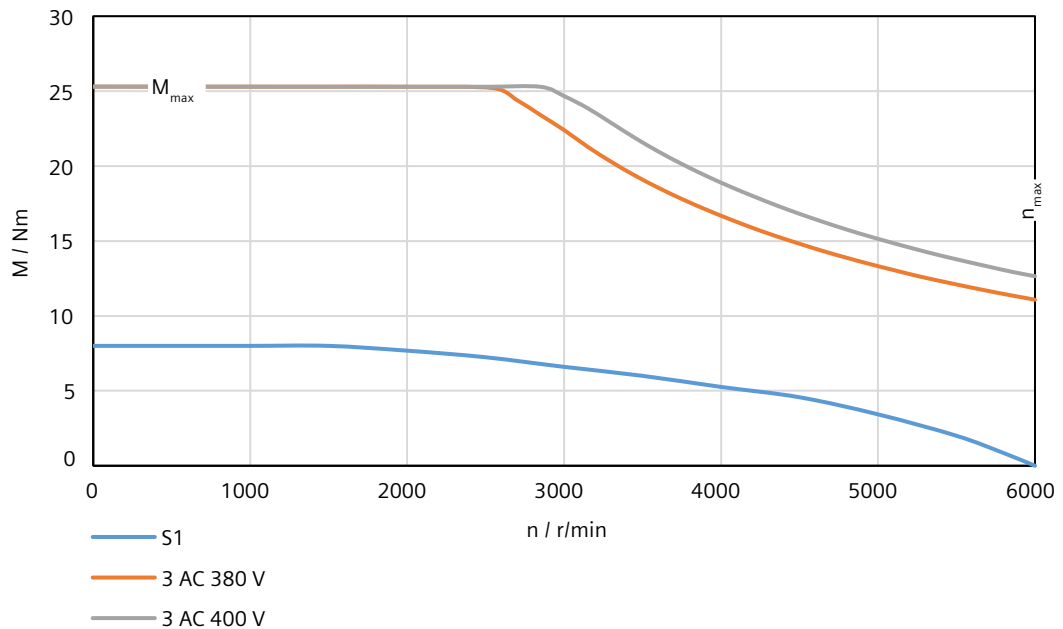


14.2.14.15 1FL2203-2AG connected to 1 AC 200 V/3 AC 220 V

Technical data

Table 14-42 Technical data of 1FL2203-2AG

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	0.64
Stall current	$I_0$	A	1.33
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	2.24
Maximum current	$I_{max}$	A	4.8
Thermal time constant	$T_{th}$	min	11.5
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.180
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	0.210
Recommended load to motor inertia ratio	-	-	Maximum 30x
Weight	$m_{mot}$	kg	0.76
Weight (with brake)	$m_{mot br}$	kg	1.11
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	0.64
Rated current	$I_{rated}$	A	1.33
Rated power	$P_{rated}$	kW	0.2

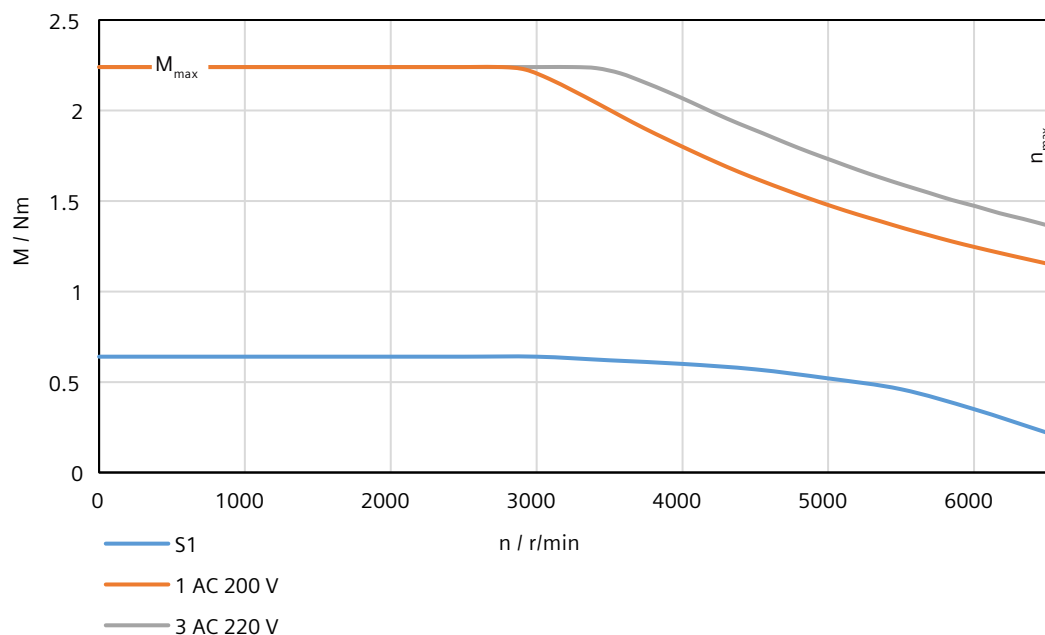


14.2.14.16 1FL2203-4AG connected to 1 AC 200 V/3 AC 220 V

Technical data

Table 14-43 Technical data of 1FL2203-4AG

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	1.27
Stall current	$I_0$	A	2.4
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	4.45
Maximum current	$I_{max}$	A	8.7
Thermal time constant	$T_{th}$	min	12.8
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.350
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	0.380
Recommended load to motor inertia ratio	-	-	Maximum 30x
Weight	$m_{mot}$	kg	1.11
Weight (with brake)	$m_{mot br}$	kg	1.46
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	1.27
Rated current	$I_{rated}$	A	2.4
Rated power	$P_{rated}$	kW	0.4

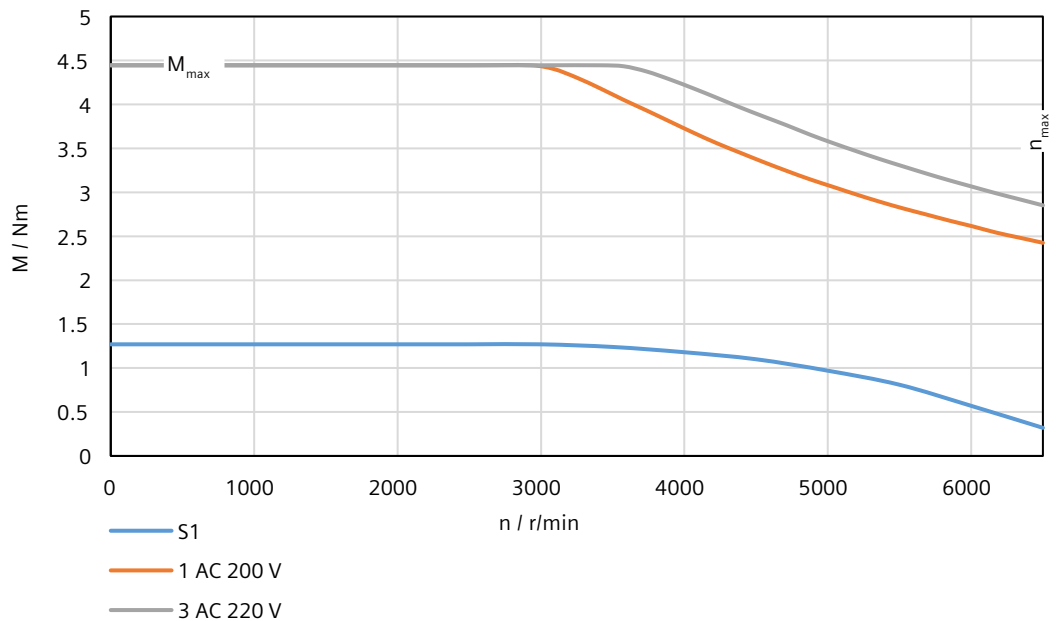


14.2.14.17 1FL2204-2AG connected to 1 AC 200 V/3 AC 220 V

Technical data

Table 14-44 Technical data of 1FL2204-2AG

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	2.4
Stall current	$I_0$	A	4.4
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	7.5
Maximum current	$I_{max}$	A	14.2
Thermal time constant	$T_{th}$	min	25.1
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	1.23
Moment of inertia (with brake)	$J_{mot\ br}$	kgcm <sup>2</sup>	1.31
Recommended load to motor inertia ratio	-	-	Maximum 15x
Weight	$m_{mot}$	kg	2.6
Weight (with brake)	$m_{mot\ br}$	kg	3.4
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	2.4
Rated current	$I_{rated}$	A	4.4
Rated power	$P_{rated}$	kW	0.75

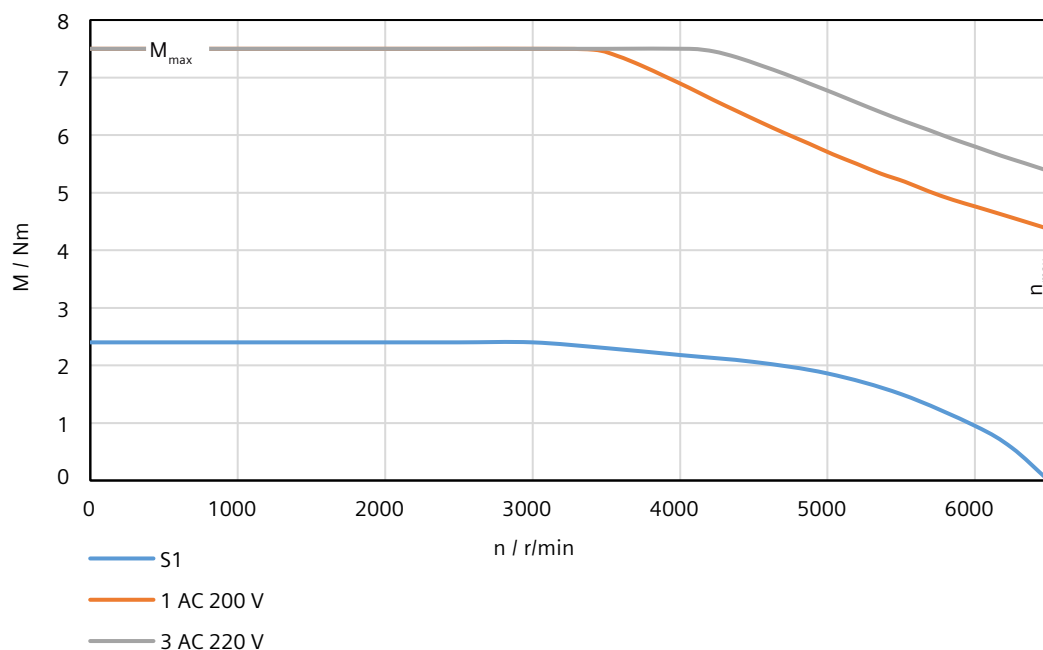


14.2.14.18 1FL2204-4AG connected to 1 AC 200 V/3 AC 220 V

Technical data

Table 14-45 Technical data of 1FL2204-4AG

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	3.2
Stall current	$I_0$	A	4.4
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	11.3
Maximum current	$I_{max}$	A	16
Thermal time constant	$T_{th}$	min	24.1
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	1.61
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	1.69
Recommended load to motor inertia ratio	-	-	Maximum 15x
Weight	$m_{mot}$	kg	3.1
Weight (with brake)	$m_{mot br}$	kg	3.9
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	3.2
Rated current	$I_{rated}$	A	4.4
Rated power	$P_{rated}$	kW	1

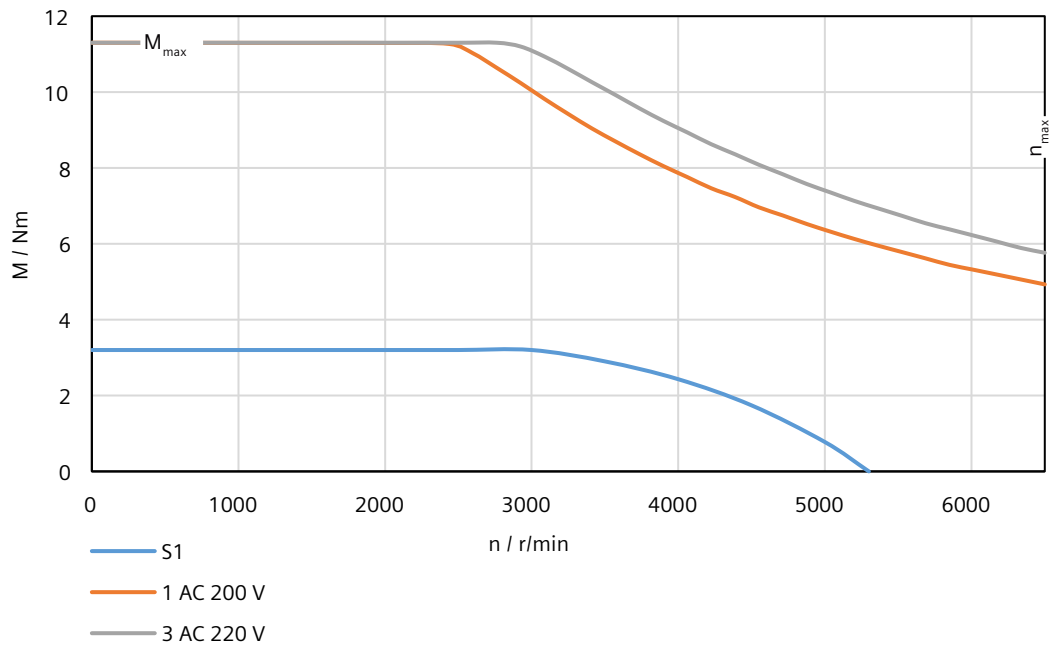




14.2.14.19 1FL2203-2AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-46 Technical data of 1FL2203-2AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	0.64
Stall current	$I_0$	A	1.3
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	2.24
Maximum current	$I_{max}$	A	4.8
Thermal time constant	$T_{th}$	min	8.3
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.180
Moment of inertia (with brake)	$J_{mot\ br}$	kgcm <sup>2</sup>	0.210
Recommended load to motor inertia ratio	-	-	Maximum 30x
Weight	$m_{mot}$	kg	0.77
Weight (with brake)	$m_{mot\ br}$	kg	1.12
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	0.64
Rated current	$I_{rated}$	A	1.3
Rated power	$P_{rated}$	kW	0.2

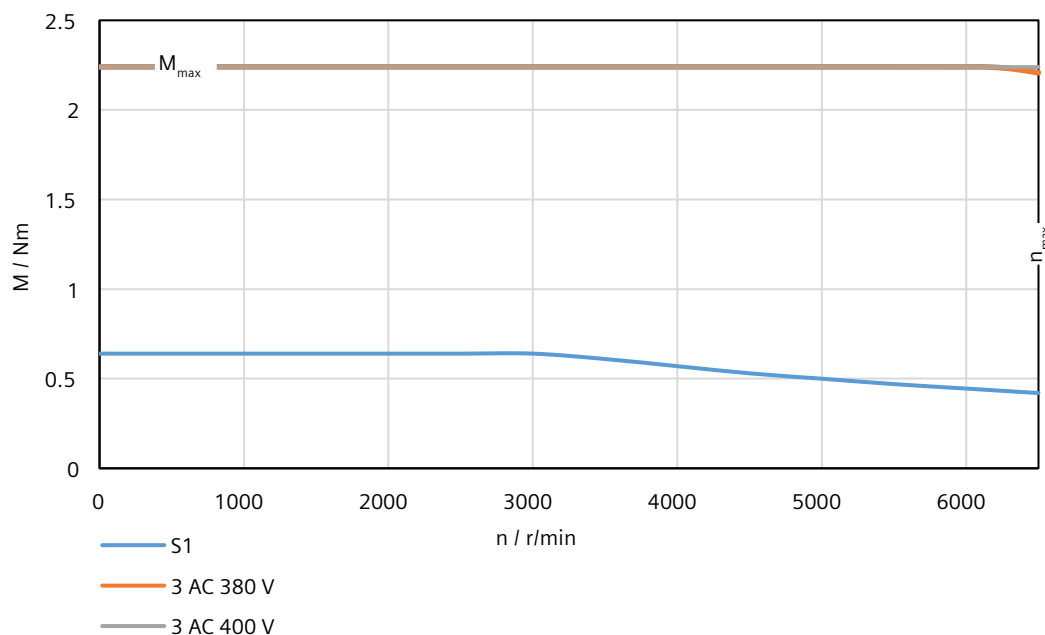


14.2.14.20 1FL2203-4AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-47 Technical data of 1FL2203-4AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	1.27
Stall current	$I_0$	A	1.3
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	4.45
Maximum current	$I_{max}$	A	4.8
Thermal time constant	$T_{th}$	min	9.4
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	0.350
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	0.380
Recommended load to motor inertia ratio	-	-	Maximum 30x
Weight	$m_{mot}$	kg	1.09
Weight (with brake)	$m_{mot br}$	kg	1.44
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	1.27
Rated current	$I_{rated}$	A	1.3
Rated power	$P_{rated}$	kW	0.4

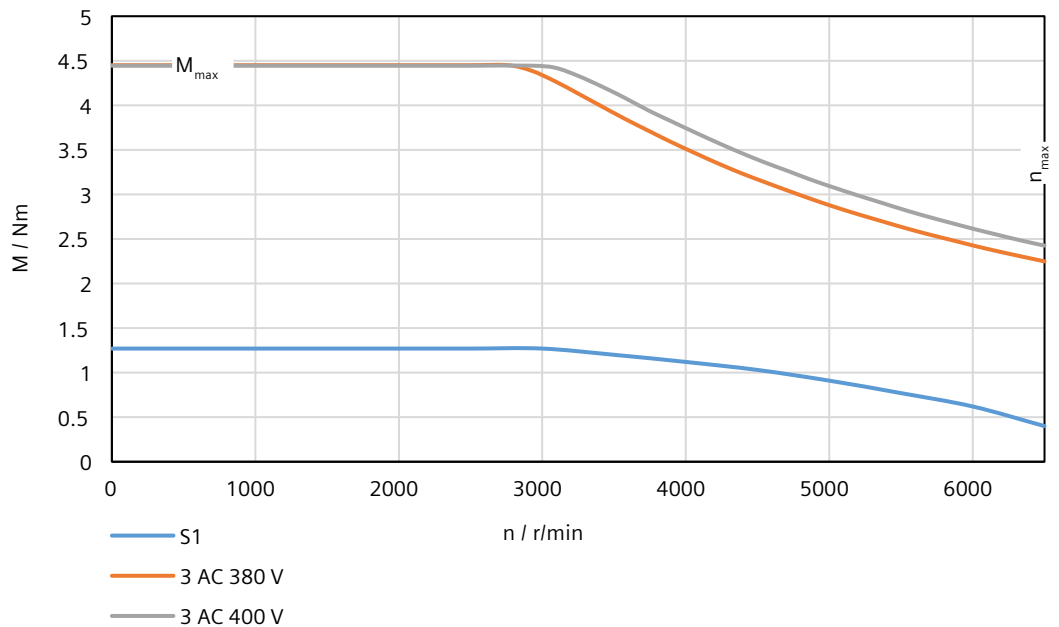


14.2.14.21 1FL2204-2AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-48 Technical data of 1FL2204-2AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	2.4
Stall current	$I_0$	A	2.25
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	7.5
Maximum current	$I_{max}$	A	7.1
Thermal time constant	$T_{th}$	min	22.5
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	1.23
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	1.31
Recommended load to motor inertia ratio	-	-	Maximum 15x
Weight	$m_{mot}$	kg	2.6
Weight (with brake)	$m_{mot br}$	kg	3.4
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	2.4
Rated current	$I_{rated}$	A	2.25
Rated power	$P_{rated}$	kW	0.75

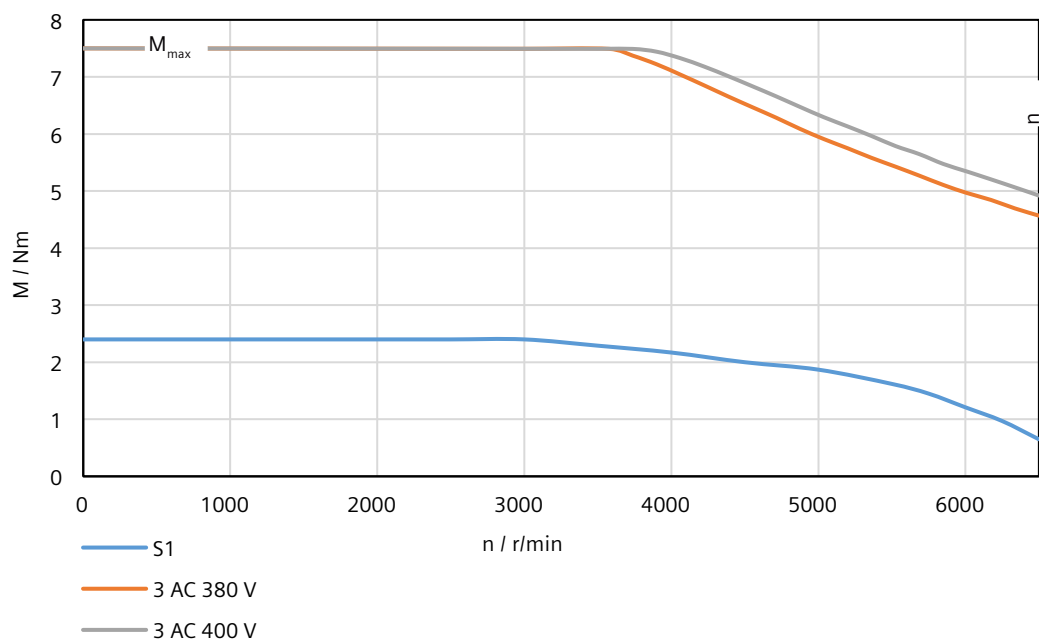


14.2.14.22 1FL2204-4AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-49 Technical data of 1FL2204-4AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	3.2
Stall current	$I_0$	A	3
Maximum permissible speed	$n_{max}$	r/min	6500
Maximum torque	$M_{max}$	Nm	10
Maximum current	$I_{max}$	A	9.9
Thermal time constant	$T_{th}$	min	28.4
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	1.61
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	1.69
Recommended load to motor inertia ratio	-	-	Maximum 15x
Weight	$m_{mot}$	kg	3.1
Weight (with brake)	$m_{mot br}$	kg	3.9
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	3.2
Rated current	$I_{rated}$	A	3
Rated power	$P_{rated}$	kW	1

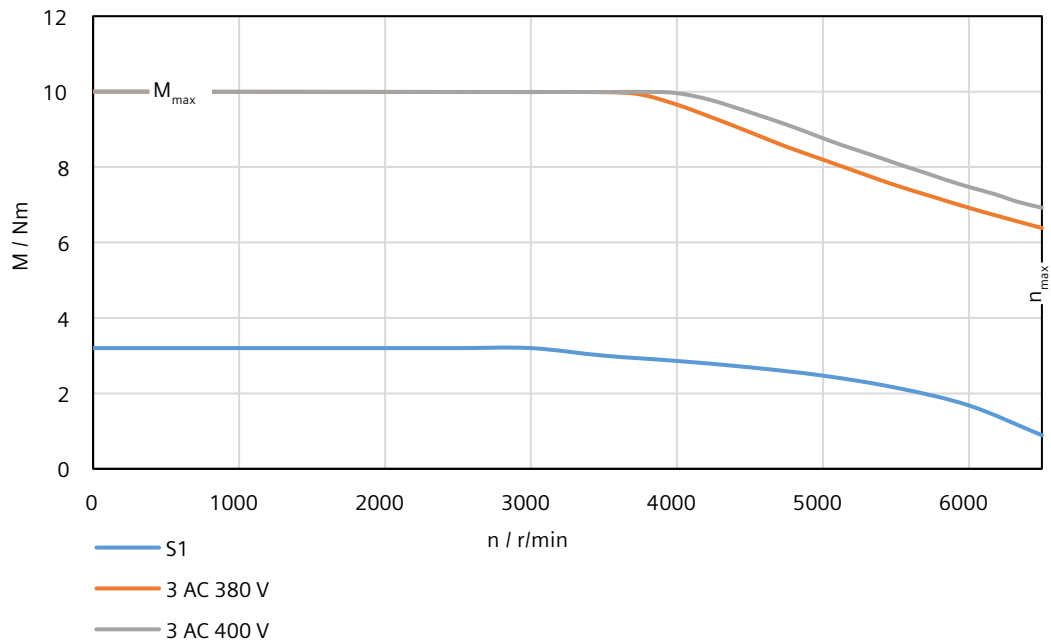


14.2.14.23 1FL2205-2AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-50 Technical data of 1FL2205-2AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	3.6
Stall current	$I_0$	A	2.9
Maximum permissible speed	$n_{max}$	r/min	6000
Maximum torque	$M_{max}$	Nm	11.5
Maximum current	$I_{max}$	A	9.5
Thermal time constant	$T_{th}$	min	24.4
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	3.15
Moment of inertia (with brake)	$J_{mot\ br}$	kgcm <sup>2</sup>	4.03
Recommended load to motor inertia ratio	-	-	Maximum 15x
Weight	$m_{mot}$	kg	3.6
Weight (with brake)	$m_{mot\ br}$	kg	4.7
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	3
Rated current	$I_{rated}$	A	2.5
Rated power	$P_{rated}$	kW	0.94

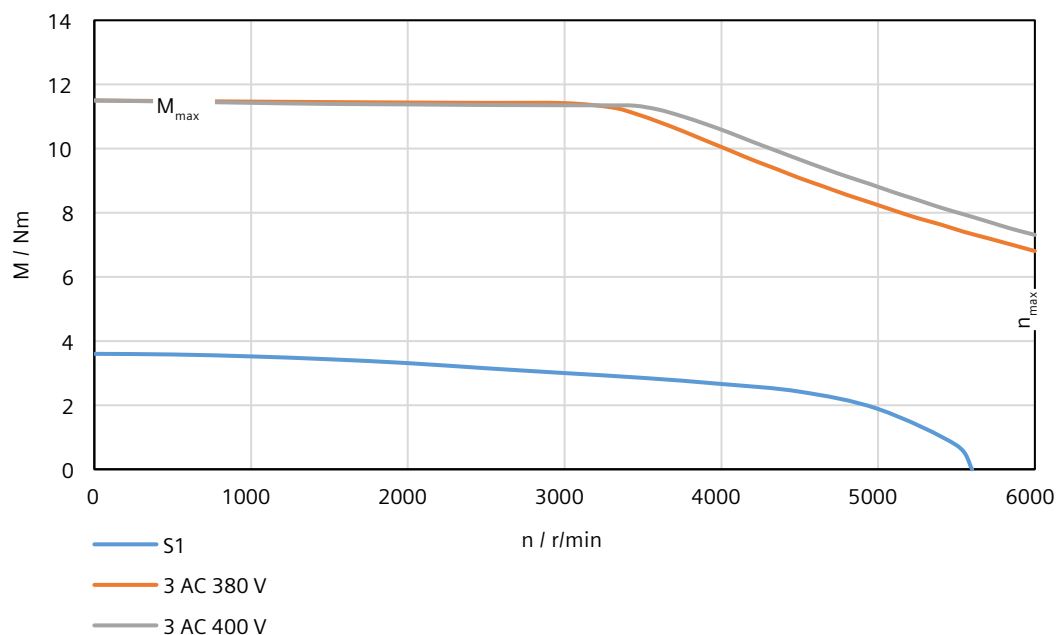


14.2.14.24 1FL2205-4AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-51 Technical data of 1FL2205-4AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	6
Stall current	$I_0$	A	4.7
Maximum permissible speed	$n_{max}$	r/min	6000
Maximum torque	$M_{max}$	Nm	19.3
Maximum current	$I_{max}$	A	15.1
Thermal time constant	$T_{th}$	min	31
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	5.10
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	5.98
Recommended load to motor inertia ratio	-	-	Maximum 15x
Weight	$m_{mot}$	kg	5
Weight (with brake)	$m_{mot br}$	kg	6.1
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	4.6
Rated current	$I_{rated}$	A	3.75
Rated power	$P_{rated}$	kW	1.45

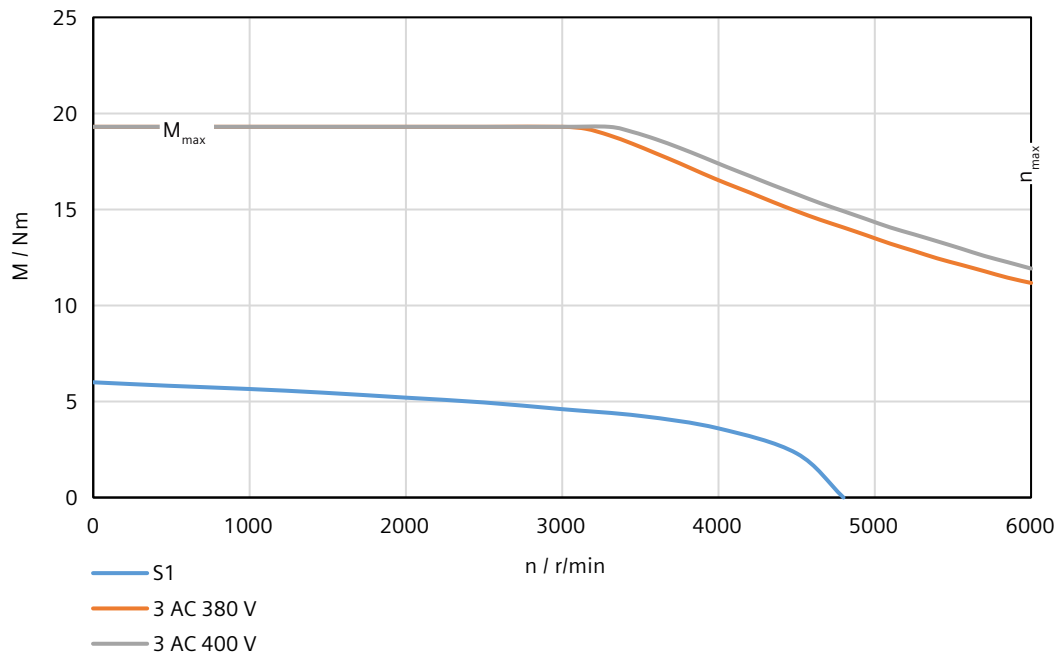


14.2.14.25 1FL2304-2AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-52 Technical data of 1FL2304-2AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	1.45
Stall current	$I_0$	A	1.3
Maximum permissible speed	$n_{max}$	r/min	4000
Maximum torque	$M_{max}$	Nm	4.445
Maximum current	$I_{max}$	A	4.2
Thermal time constant	$T_{th}$	min	18
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	2.69
Moment of inertia (with brake)	$J_{mot\ br}$	kgcm <sup>2</sup>	3.05
Recommended load to motor inertia ratio	-	-	Maximum 10x
Weight	$m_{mot}$	kg	3.5
Weight (with brake)	$m_{mot\ br}$	kg	4.9
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	1.27
Rated current	$I_{rated}$	A	1.2
Rated power	$P_{rated}$	kW	0.4

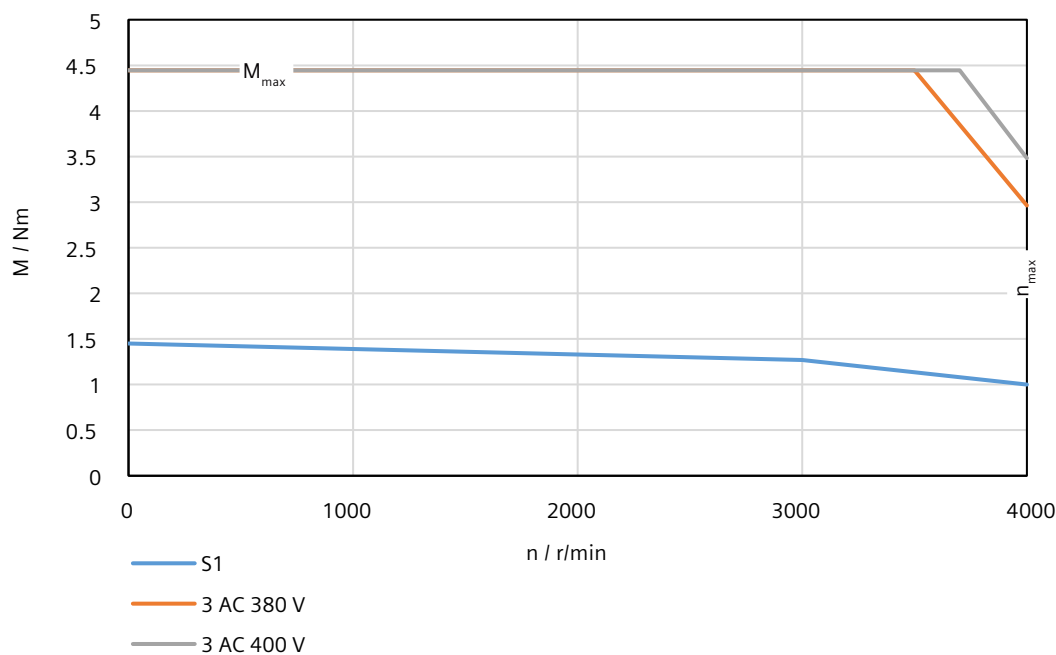


14.2.14.26 1FL2304-4AF connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-53 Technical data of 1FL2304-4AF

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	3.02
Stall current	$I_0$	A	2.5
Maximum permissible speed	$n_{max}$	r/min	4000
Maximum torque	$M_{max}$	Nm	8.365
Maximum current	$I_{max}$	A	7.3
Thermal time constant	$T_{th}$	min	22
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	5.18
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	5.54
Recommended load to motor inertia ratio	-	-	Maximum 10x
Weight	$m_{mot}$	kg	5.4
Weight (with brake)	$m_{mot br}$	kg	6.8
Rated speed	$n_{rated}$	r/min	3000
Rated torque	$M_{rated}$	Nm	2.39
Rated current	$I_{rated}$	A	2.1
Rated power	$P_{rated}$	kW	0.75

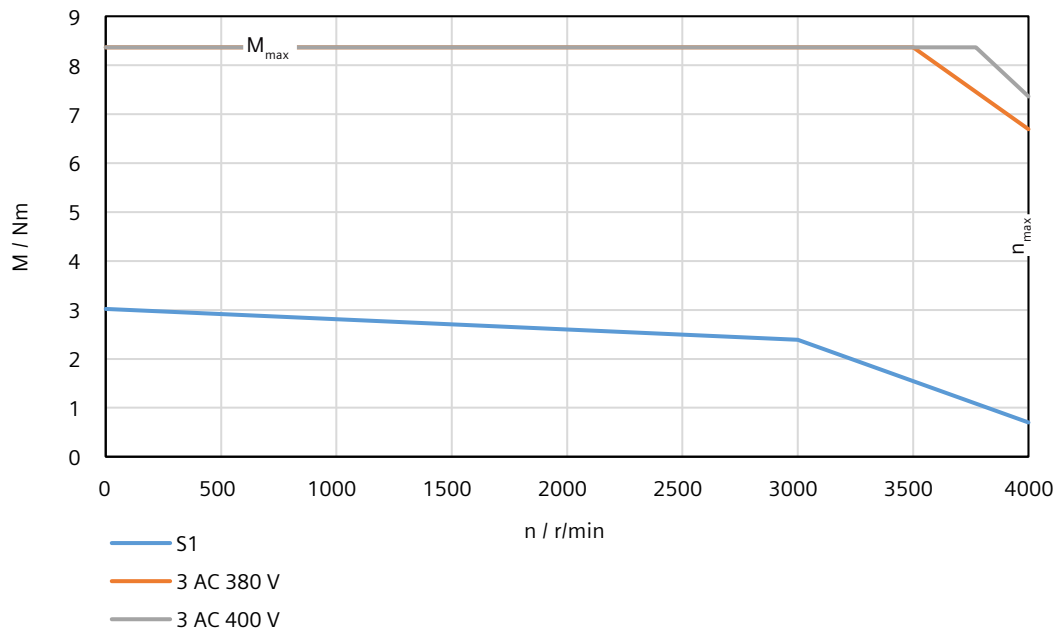




14.2.14.27 1FL2306-1AC connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-54 Technical data of 1FL2306-1AC

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	3.7
Stall current	$I_0$	A	2.5
Maximum permissible speed	$n_{max}$	r/min	3000
Maximum torque	$M_{max}$	Nm	12
Maximum current	$I_{max}$	A	8.4
Thermal time constant	$T_{th}$	min	22
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	7.96
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	9.57
Recommended load to motor inertia ratio	-	-	Maximum 10x
Weight	$m_{mot}$	kg	5.9
Weight (with brake)	$m_{mot br}$	kg	8.9
Rated speed	$n_{rated}$	r/min	2000
Rated torque	$M_{rated}$	Nm	3.58
Rated current	$I_{rated}$	A	2.5
Rated power	$P_{rated}$	kW	0.75

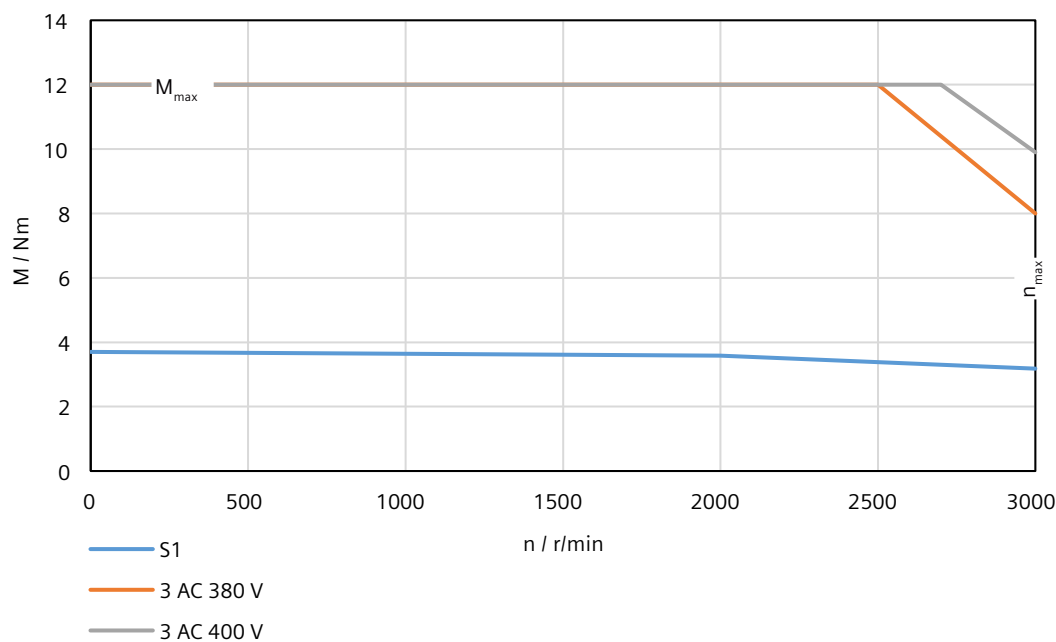


14.2.14.28 1FL2306-2AC connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-55 Technical data of 1FL2306-2AC

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	5
Stall current	$I_0$	A	3
Maximum permissible speed	$n_{max}$	r/min	3000
Maximum torque	$M_{max}$	Nm	17
Maximum current	$I_{max}$	A	10.7
Thermal time constant	$T_{th}$	min	22
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	11.65
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	13.26
Recommended load to motor inertia ratio	-	-	Maximum 5x
Weight	$m_{mot}$	kg	7.3
Weight (with brake)	$m_{mot br}$	kg	10.3
Rated speed	$n_{rated}$	r/min	2000
Rated torque	$M_{rated}$	Nm	4.78
Rated current	$I_{rated}$	A	3
Rated power	$P_{rated}$	kW	1

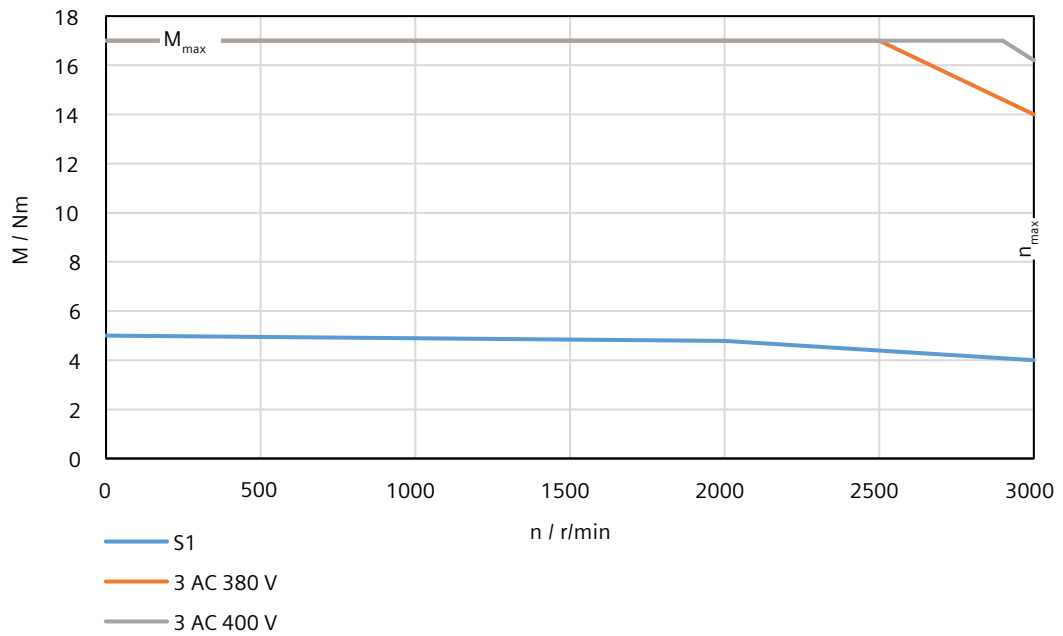


14.2.14.29 1FL2306-4AC connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-56 Technical data of 1FL2306-4AC

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	8
Stall current	$I_0$	A	4.9
Maximum permissible speed	$n_{max}$	r/min	3000
Maximum torque	$M_{max}$	Nm	22
Maximum current	$I_{max}$	A	14.1
Thermal time constant	$T_{th}$	min	30
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	15.29
Moment of inertia (with brake)	$J_{mot\ br}$	kgcm <sup>2</sup>	16.90
Recommended load to motor inertia ratio	-	-	Maximum 5x
Weight	$m_{mot}$	kg	8.6
Weight (with brake)	$m_{mot\ br}$	kg	11.6
Rated speed	$n_{rated}$	r/min	2000
Rated torque	$M_{rated}$	Nm	7.16
Rated current	$I_{rated}$	A	4.6
Rated power	$P_{rated}$	kW	1.5

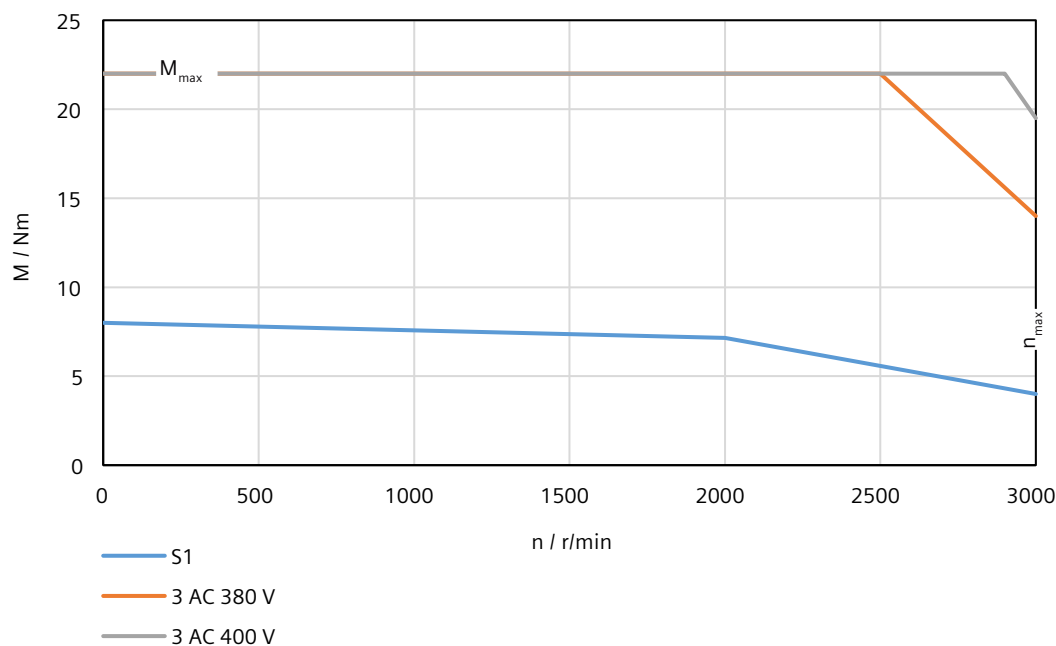


14.2.14.30 1FL2306-6AC connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-57 Technical data of 1FL2306-6AC

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	8.8
Stall current	$I_0$	A	5.3
Maximum permissible speed	$n_{max}$	r/min	3000
Maximum torque	$M_{max}$	Nm	30
Maximum current	$I_{max}$	A	19
Thermal time constant	$T_{th}$	min	30
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	22.61
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	24.22
Recommended load to motor inertia ratio	-	-	Maximum 5x
Weight	$m_{mot}$	kg	11.1
Weight (with brake)	$m_{mot br}$	kg	14.1
Rated speed	$n_{rated}$	r/min	2000
Rated torque	$M_{rated}$	Nm	8.4
Rated current	$I_{rated}$	A	5.3
Rated power	$P_{rated}$	kW	1.75

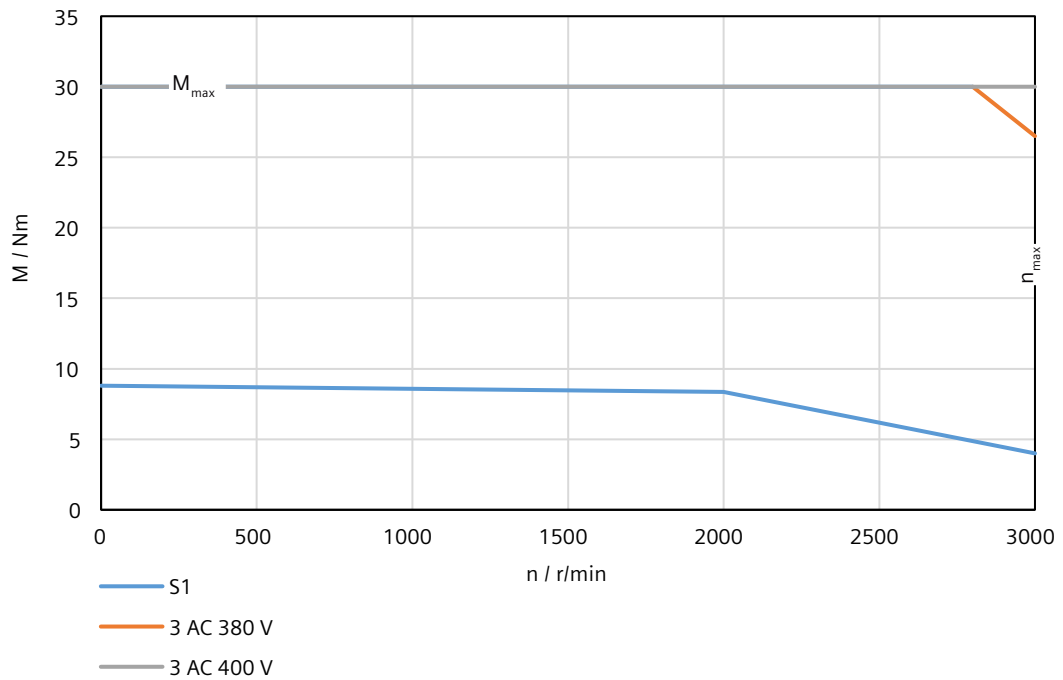


14.2.14.31 1FL2306-7AC connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-58 Technical data of 1FL2306-7AC

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	13.3
Stall current	$I_0$	A	7.8
Maximum permissible speed	$n_{max}$	r/min	3000
Maximum torque	$M_{max}$	Nm	33.425
Maximum current	$I_{max}$	A	20.7
Thermal time constant	$T_{th}$	min	32
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	29.94
Moment of inertia (with brake)	$J_{mot\ br}$	kgcm <sup>2</sup>	31.55
Recommended load to motor inertia ratio	-	-	Maximum 5x
Weight	$m_{mot}$	kg	13.7
Weight (with brake)	$m_{mot\ br}$	kg	16.7
Rated speed	$n_{rated}$	r/min	2000
Rated torque	$M_{rated}$	Nm	9.6
Rated current	$I_{rated}$	A	5.9
Rated power	$P_{rated}$	kW	2

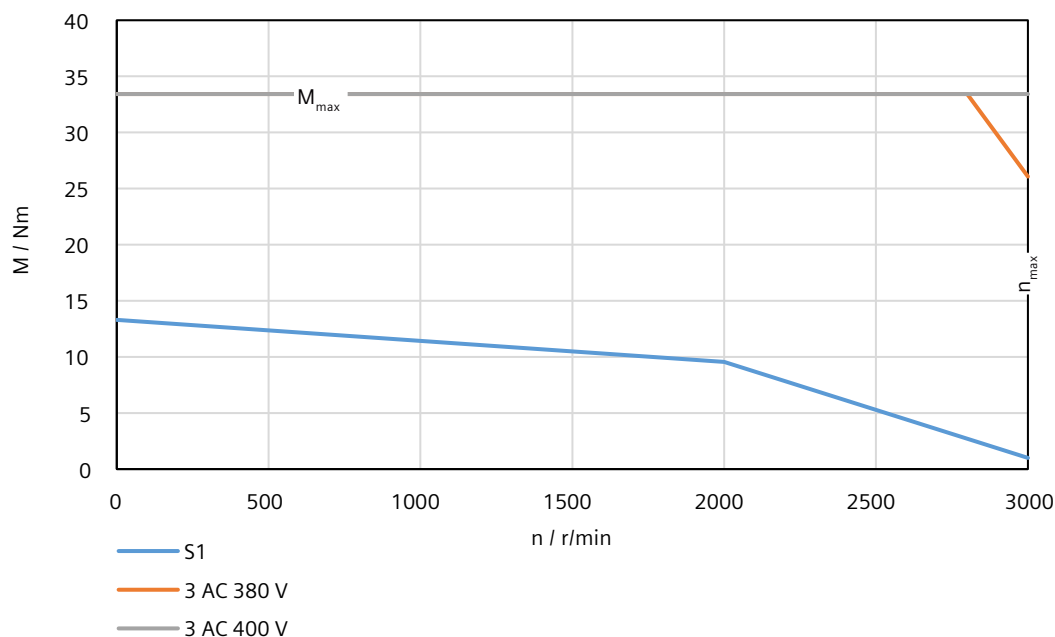


14.2.14.32 1FL2310-0AC connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-59 Technical data of 1FL2310-0AC

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	12.6
Stall current	$I_0$	A	7.8
Maximum permissible speed	$n_{max}$	r/min	3000
Maximum torque	$M_{max}$	Nm	37.5
Maximum current	$I_{max}$	A	25.2
Thermal time constant	$T_{th}$	min	35
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	47.41
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	56.78
Recommended load to motor inertia ratio	-	-	Maximum 5x
Weight	$m_{mot}$	kg	15.4
Weight (with brake)	$m_{mot br}$	kg	21.4
Rated speed	$n_{rated}$	r/min	2000
Rated torque	$M_{rated}$	Nm	11.9
Rated current	$I_{rated}$	A	7.8
Rated power	$P_{rated}$	kW	2.5

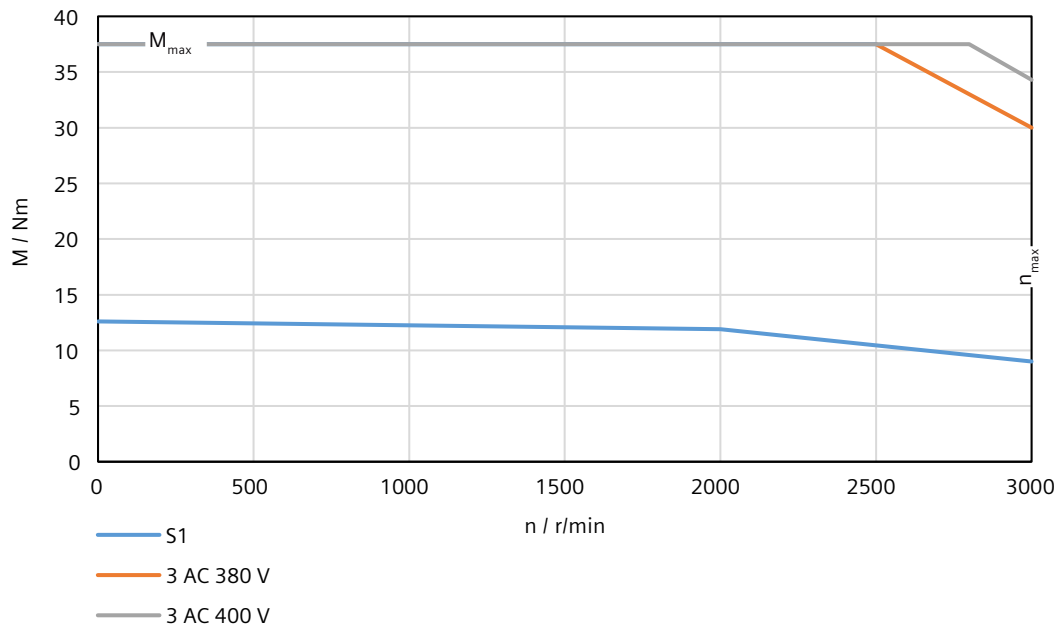


14.2.14.33 1FL2310-2AC connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-60 Technical data of 1FL2310-2AC

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	18.1
Stall current	$I_0$	A	11
Maximum permissible speed	$n_{max}$	r/min	3000
Maximum torque	$M_{max}$	Nm	55
Maximum current	$I_{max}$	A	36.2
Thermal time constant	$T_{th}$	min	38
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	69.10
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	78.47
Recommended load to motor inertia ratio	-	-	Maximum 5x
Weight	$m_{mot}$	kg	19.4
Weight (with brake)	$m_{mot br}$	kg	25.4
Rated speed	$n_{rated}$	r/min	2000
Rated torque	$M_{rated}$	Nm	16.7
Rated current	$I_{rated}$	A	11
Rated power	$P_{rated}$	kW	3.5

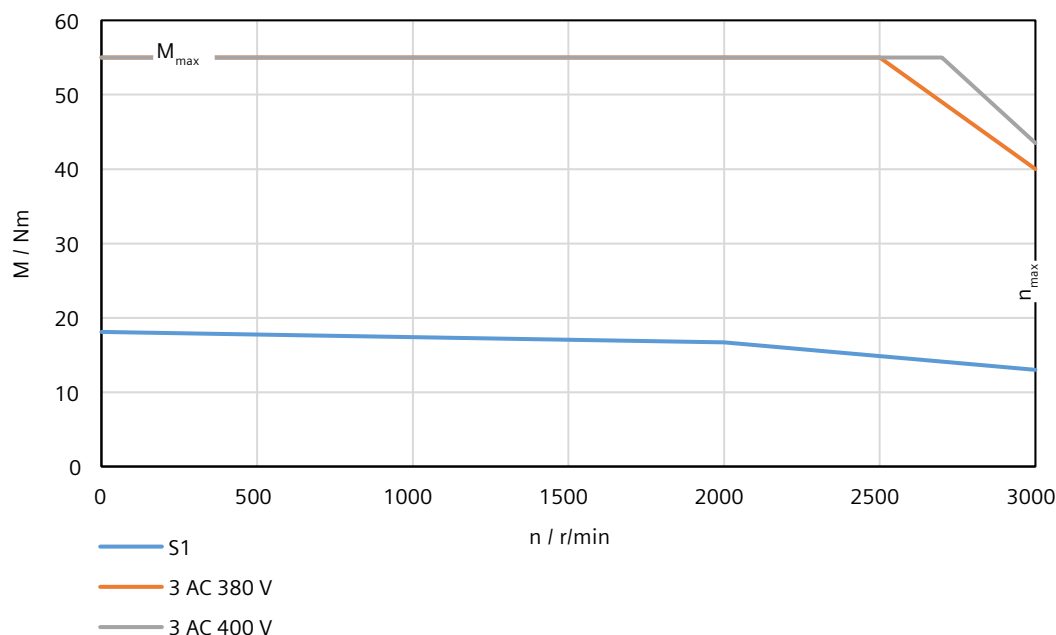


14.2.14.34 1FL2310-4AC connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-61 Technical data of 1FL2310-4AC

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	25.2
Stall current	$I_0$	A	12.6
Maximum permissible speed	$n_{max}$	r/min	2500
Maximum torque	$M_{max}$	Nm	70
Maximum current	$I_{max}$	A	36.9
Thermal time constant	$T_{th}$	min	45
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	90.83
Moment of inertia (with brake)	$J_{mot br}$	kgcm <sup>2</sup>	100.20
Recommended load to motor inertia ratio	-	-	Maximum 5x
Weight	$m_{mot}$	kg	23.7
Weight (with brake)	$m_{mot br}$	kg	29.7
Rated speed	$n_{rated}$	r/min	2000
Rated torque	$M_{rated}$	Nm	23.9
Rated current	$I_{rated}$	A	12.6
Rated power	$P_{rated}$	kW	5

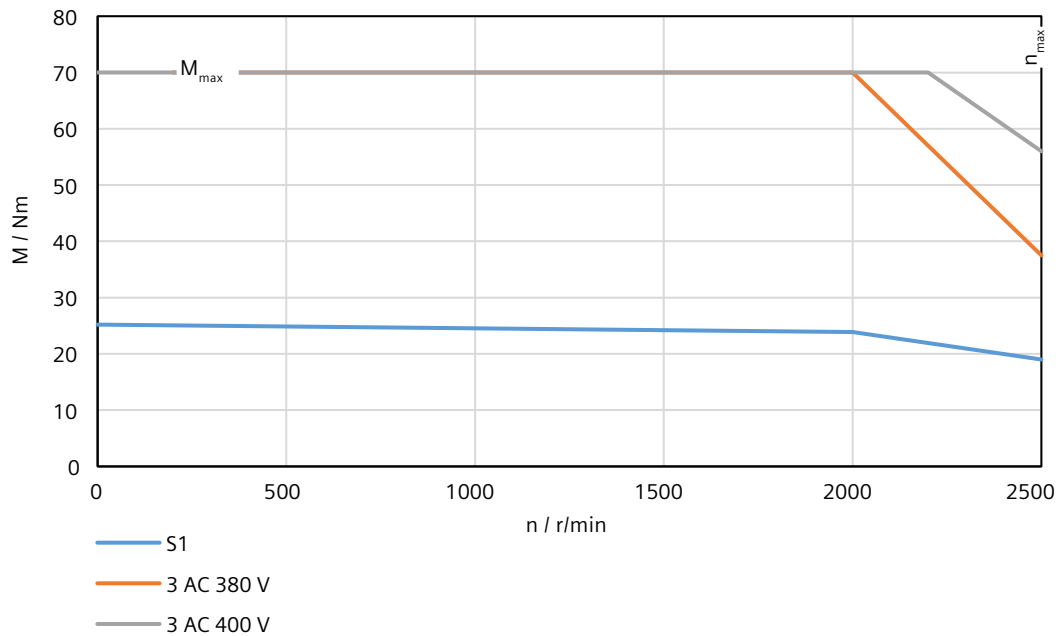




14.2.14.35 1FL2310-6AC connected to 3 AC 380 V/3 AC 400 V

Technical data

Table 14-62 Technical data of 1FL2310-6AC

Feature	Symbol	Unit	Value
Static torque	$M_0$	Nm	35.2
Stall current	$I_0$	A	13.2
Maximum permissible speed	$n_{max}$	r/min	2000
Maximum torque	$M_{max}$	Nm	90
Maximum current	$I_{max}$	A	35.6
Thermal time constant	$T_{th}$	min	55
Moment of inertia	$J_{mot}$	kgcm <sup>2</sup>	134.29
Moment of inertia (with brake)	$J_{mot\ br}$	kgcm <sup>2</sup>	143.66
Recommended load to motor inertia ratio	-	-	Maximum 5x
Weight	$m_{mot}$	kg	31.9
Weight (with brake)	$m_{mot\ br}$	kg	37.9
Rated speed	$n_{rated}$	r/min	2000
Rated torque	$M_{rated}$	Nm	33.4
Rated current	$I_{rated}$	A	13.2
Rated power	$P_{rated}$	kW	7

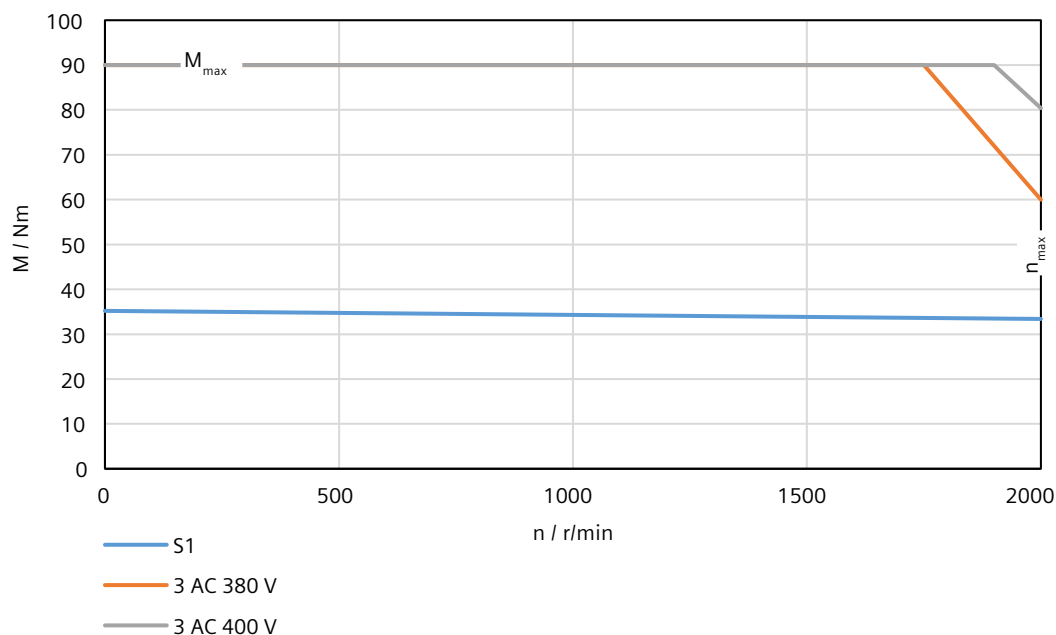

## 14.3 Technical data of MOTION-CONNECT cables

### 14.3.1 Technical data of MOTION-CONNECT 350

#### 14.3.1.1 General technical data

#### Technical data

Table 14-63 General technical data of MOTION-CONNECT 350

Property	MOTION-CONNECT 350 power cable	MOTION-CONNECT 350 encoder cable	MOTION-CONNECT 350 brake cable
Jacket material	PVC	PVC	PVC
Number of conductors	<ul style="list-style-type: none"> <li>• With brake conductors: 6</li> <li>• Without brake conductors: 4</li> </ul>	6	2
Operating temperature (°C)	-20 ... +80	-20 ... +80	-20 ... +80
Shielding	Braided shield; coverage ≥ 85%	Braided shield; coverage ≥ 85%	Braided shield; coverage ≥ 85%
Oil resistance	EN 60811-2-1	EN 60811-2-1	EN 60811-2-1
Flame retardancy	EN 60332-1-1 to 1-3	EN 60332-1-1 to 1-3	EN 60332-1-1 to 1-3
Coolant resistance	EN 60811-2-1	EN 60811-2-1	EN 60811-2-1
Degree of protection (motor-side only)	IP65	IP65	IP65
Bending cycles	1 million	1 million	1 million
Rated voltage $U_0/U$ (V)	<ul style="list-style-type: none"> <li>• 200 V converters: 300/1000</li> <li>• 400 V converters: 600/1000</li> </ul>	30/300	30/300

### 14.3.1.2 Specific technical data

#### Technical data

Table 14-64 Cable used for 1FL2 low or medium inertia motors

Property	MOTION-CONNECT 350 power cable	MOTION-CONNECT 350 encoder cable	MOTION-CONNECT 350 brake cable
Cross-section of conductors (mm <sup>2</sup> )	<ul style="list-style-type: none"> <li>With brake conductors: 4 x 0.75 + 2 x 0.38 (4 x 18 AWG + 2 x 22 AWG)</li> <li>Without brake conductors: 4 x 0.75 (4 x 18 AWG)</li> </ul>	<ul style="list-style-type: none"> <li>Cable length up to 15 m: 3 x 2 x 0.25 (3 x 2 x 24 AWG)</li> <li>Cable length 20 m or 30 m: 2 x 2 x 0.25 + 2 x 0.38 (2 x 2 x 24 AWG + 2 x 22 AWG)</li> </ul>	-
Outer diameter (mm)	∅ (7.5 ± 0.2)	∅ (7 ± 0.2)	-
Minimum bending radius, static (mm)	4 x outer diameter	4 x outer diameter	-
Minimum bending radius, dynamic (mm)	7.5 x outer diameter	7.5 x outer diameter	-
Maximum acceleration (m/s <sup>2</sup> )	3	3	-
Maximum traversing velocity (m/min)	40	40	-

Table 14-65 Cable used for 1FL2 high inertia motors

Property	MOTION-CONNECT 350 power cable	MOTION-CONNECT 350 encoder cable	MOTION-CONNECT 350 brake cable
Cross-section of conductors (mm <sup>2</sup> )	<ul style="list-style-type: none"> <li>1FL2 0.4 kW ... 2 kW: 4 x 0.75 (4 x 18 AWG)</li> <li>1FL2 2.5 kW: 4 x 1.5 (4 x 16 AWG)</li> <li>1FL2 3.5 kW ... 7 kW: 4 x 2.5 (4 x 14 AWG)</li> </ul>	<ul style="list-style-type: none"> <li>Cable length up to 15 m: 3 x 2 x 0.25 (3 x 2 x 24 AWG)</li> <li>Cable length 20 m or 30 m: 2 x 2 x 0.25 + 2 x 0.38 (2 x 2 x 24 AWG + 2 x 22 AWG)</li> </ul>	2 x 0.75 (2 x 18 AWG)
Outer diameter (mm)	<ul style="list-style-type: none"> <li>1FL2 0.4 kW ... 2 kW: ∅ (7.5 ± 0.2)</li> <li>1FL2 2.5 kW: ∅ (7.8 ± 0.3)</li> <li>1FL2 3.5 kW ... 7 kW: ∅ (9 ± 0.3)</li> </ul>	∅ (7 ± 0.2)	∅ (6 ± 0.2)
Minimum bending radius, static (mm)	4 x outer diameter	4 x outer diameter	4 x outer diameter

14.3 Technical data of MOTION-CONNECT cables

Property	MOTION-CONNECT 350 power cable	MOTION-CONNECT 350 encoder cable	MOTION-CONNECT 350 brake cable
Minimum bending radius, dynamic (mm)	7.5 x outer diameter	7.5 x outer diameter	7.5 x outer diameter
Maximum acceleration (m/s <sup>2</sup> )	3	3	3
Maximum traversing velocity (m/min)	<ul style="list-style-type: none"> <li>• 1FL2 0.4 kW ... 2 kW: 40</li> <li>• 1FL2 2.5 kW: 50</li> <li>• 1FL2 3.5 kW ... 7 kW: 50</li> </ul>	40	50

14.3.2 Technical data of MOTION-CONNECT 380

14.3.2.1 General technical data

Technical data

Table 14-66 General technical data of MOTION-CONNECT 380

Property	MOTION-CONNECT 380 power cable	MOTION-CONNECT 380 encoder cable	MOTION-CONNECT 380 brake cable
Jacket material	PUR	PUR	PUR
Number of conductors	<ul style="list-style-type: none"> <li>• With brake conductors: 6</li> <li>• Without brake conductors: 4</li> </ul>	6	2
Operating temperature (°C)	-20 ... +80	-20 ... +80	-20 ... +80
Shielding	Braided shield; coverage ≥ 85%	Braided shield; coverage ≥ 85%	Braided shield; coverage ≥ 85%
Oil resistance	EN 60811-2-1	EN 60811-2-1	EN 60811-2-1
Flame retardancy	EN 60332-1-1 to 1-3	EN 60332-1-1 to 1-3	EN 60332-1-1 to 1-3
Coolant resistance	EN 60811-2-1	EN 60811-2-1	EN 60811-2-1
Degree of protection (motor-side only)	IP65	IP65	IP65
Bending cycles	5 million	5 million	5 million
Rated voltage U <sub>0</sub> /U (V)	<ul style="list-style-type: none"> <li>• 200 V converters: 300/1000</li> <li>• 400 V converters: 600/1000</li> </ul>	30/300	30/300

### 14.3.2.2 Specific technical data

#### Technical data

Table 14-67 Cable used for 1FL2 low or medium inertia motors

Property	MOTION-CONNECT 380 power cable	MOTION-CONNECT 380 encoder cable	MOTION-CONNECT 380 brake cable
Cross-section of conductors (mm <sup>2</sup> )	<ul style="list-style-type: none"> <li>With brake conductors: 4 x 0.75 + 2 x 0.38 (4 x 18 AWG + 2 x 22 AWG)</li> <li>Without brake conductors: 4 x 0.75 (4 x 18 AWG)</li> </ul>	<ul style="list-style-type: none"> <li>Cable length up to 15 m: 3 x 2 x 0.25 (3 x 2 x 24 AWG)</li> <li>Cable length 20 m or 30 m: 2 x 2 x 0.25 + 2 x 0.38 (2 x 2 x 24 AWG + 2 x 22 AWG)</li> </ul>	-
Outer diameter (mm)	ø (7.5 ± 0.2)	ø (7 ± 0.2)	-
Minimum bending radius, static (mm)	4 x outer diameter	4 x outer diameter	-
Minimum bending radius, dynamic (mm)	7.5 x outer diameter	7.5 x outer diameter	-
Maximum acceleration (m/s <sup>2</sup> )	5	5	-
Maximum traversing velocity (m/min)	180	180	-

Table 14-68 Cable used for 1FL2 high inertia motors

Property	MOTION-CONNECT 380 power cable	MOTION-CONNECT 380 encoder cable	MOTION-CONNECT 380 brake cable
Cross-section of conductors (mm <sup>2</sup> )	<ul style="list-style-type: none"> <li>1FL2 0.4 kW ... 2 kW: 4 x 0.75 (4 x 18 AWG)</li> <li>1FL2 2.5 kW: 4 x 1.5 (4 x 16 AWG)</li> <li>1FL2 3.5 kW ... 7 kW: 4 x 2.5 (4 x 14 AWG)</li> </ul>	<ul style="list-style-type: none"> <li>Cable length up to 15 m: 3 x 2 x 0.25 (3 x 2 x 24 AWG)</li> <li>Cable length 20 m or 30 m: 2 x 2 x 0.25 + 2 x 0.38 (2 x 2 x 24 AWG + 2 x 22 AWG)</li> </ul>	2 x 0.75 (2 x 18 AWG)
Outer diameter (mm)	<ul style="list-style-type: none"> <li>1FL2 0.4 kW ... 2 kW: ø (7.5 ± 0.2)</li> <li>1FL2 2.5 kW: ø (9 ± 0.3)</li> <li>1FL2 3.5 kW ... 7 kW: ø (10.5 ± 0.3)</li> </ul>	ø (7 ± 0.2)	ø (6 ± 0.3)
Minimum bending radius, static (mm)	4 x outer diameter	4 x outer diameter	4 x outer diameter

## Technical data

### 14.3 Technical data of MOTION-CONNECT cables

Property	MOTION-CONNECT 380 power cable	MOTION-CONNECT 380 encoder cable	MOTION-CONNECT 380 brake cable
Minimum bending radius, dynamic (mm)	7.5 x outer diameter	7.5 x outer diameter	7.5 x outer diameter
Maximum acceleration (m/s <sup>2</sup> )	5	5	5
Maximum traversing velocity (m/min)	180	180	180

## Examples/applications

### Description

You can find SINAMICS application examples in the Application examples (<https://support.industry.siemens.com/cs/ww/en/view/60733299>).





# Appendix

## A.1 UL Markings

### Description

#### **Converter variant of 1 AC/3 AC 200 V ... 240 V**

For US/Canadian installations (UL/cUL): The products are cULus-listed under File E355661.

- Suitable for use in a circuit that cannot provide more than 100 kA rms (symmetrical), max. 240 V.  
Note: The maximum permissible short-circuit current for 200 V variants with Type E Combination Motor Controllers is 65 kA.
- Protection of the branch circuit for individual drives must be guaranteed using Class J fuses in accordance with the technical data.  
For other protection equipment and SCCRs (Short Circuit Current Rating) for individual drives, see:  
Protective Devices for SINAMICS S200 Product Line (<https://support.industry.siemens.com/cs/ww/en/ps/29596/man>)
- This device must be installed in an enclosure that provides an environment with degree of pollution 2 (controlled).
- Maximum rated temperature 45 °C.
- The device provides overtemperature and overload protection.
- Use copper wires with a permissible temperature of 75 °C for all power cables. You can also use cables with a higher rated temperature value. It is not permissible to reduce the conductor cross-section.

#### **Converter variant of 3 AC 380 V ... 480 V**

For US/Canadian installations (UL/cUL): The products are cULus-listed under File E355661.

- Suitable for use in a circuit that cannot provide more than 65 kA rms (symmetrical), max. 480 V.
- Protection of the branch circuit for individual drives must be guaranteed using Class J fuses in accordance with the technical data.
- For other protection equipment and SCCRs (Short Circuit Current Rating) for individual drives, see:  
Protective Devices for SINAMICS S200 Product Line (<https://support.industry.siemens.com/cs/ww/en/ps/29596/man>)
- This device must be installed in an enclosure that provides an environment with degree of pollution 2 (controlled).
- Maximum rated temperature 45 °C. Maximum height 4000 m.

- The device provides overtemperature and overload protection.
- Use copper wires with a permissible temperature of 75 °C for all power cables. You can also use cables with a higher rated temperature value. It is not permissible to reduce the conductor cross-section.

**Additional requirements relating to CSA compliance:**

Maximum height for CSA: 2000 m.

**Motor overload protection according to UL 61800-5-1 Ed.2**

For the settings required to activate the motor overload protection according to UL 61800-5-1 Ed.2, see Section "Setting motor overload protection in accordance with UL 61800-5-1 Ed.2 (Page 367)".

**MOTION-CONNECT connection system**

The recommended assignment of motors and cables can be found in Section "Device combinations (Page 56)".

Other assignments are not possible.

The technical parameters of the cables are tailored to the requirements of the motors and verified by system tests. For detailed information, see Section "Technical data of MOTION-CONNECT cables (Page 680)".

## A.2 EMERGENCY OFF and EMERGENCY STOP

### Overview

In plants, systems and machines a distinction must be made between "EMERGENCY OFF" and "EMERGENCY STOP".





The Safe Torque Off (STO) Safety Integrated function is suitable for implementing an "EMERGENCY STOP" but is not suitable for implementing an "EMERGENCY OFF".

### Description of function


IEC 60204-1 defines "EMERGENCY OFF" and "EMERGENCY STOP":

- "EMERGENCY OFF" and "EMERGENCY STOP" are actions taken in an emergency.
- "EMERGENCY OFF" and "EMERGENCY STOP" reduce different risks in the machine or system:
  - "EMERGENCY OFF" reduces the risk from electric shock.
  - "EMERGENCY STOP" reduces the risk from unexpected movement.

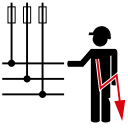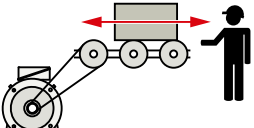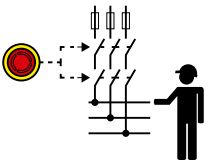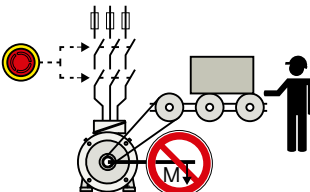Table A-1 The distinction between "EMERGENCY OFF" and "EMERGENCY STOP"

Action:	EMERGENCY OFF	EMERGENCY STOP
		Stop category 0 according to IEC 60204-1
Risk:	 <p>Electric shock</p>	 <p>Unexpected motion</p>
Measure to minimize risk:	<p><b>Switch off voltage</b> Switch off hazardous voltages completely or in part</p>	<p><b>Prevent movement</b> Prevent any hazardous movement</p>
Classic solution:	<p>Switch off the voltage:</p> 	<p>Switch off the power supply of the drive:</p> 

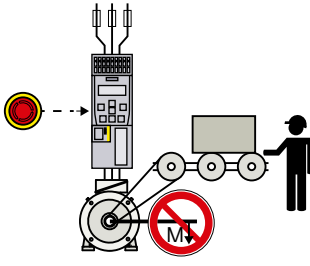A.2 EMERGENCY OFF and EMERGENCY STOP

Action:	EMERGENCY OFF	EMERGENCY STOP Stop category 0 according to IEC 60204-1
<p>Solution with the STO Safety Integrated function integrated into the drive:</p>	<p>STO is not suitable for switching off an electrical voltage.</p>	<p>Select STO:</p>  <p>It is permissible that you also switch off the converter supply voltage. However, switching off the voltage is not required as a risk reduction measure.</p>

## A.3 Parameters

### A.3.1 Explanation of the list of parameters

#### Overview

The representation of a parameter includes as a maximum the information listed below. Depending on the specific parameter, some of the listed information is not applicable.

The parameters are displayed according to the following example:

<b>rxxxx</b>	<b>Parameter name</b>		
Variant	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Ready for operation	
	<b>Parameter group:</b>	Name of the group(s)	
	<b>Unit:</b> -		
	<b>Min:</b> -	<b>Max:</b> -	<b>Factory setting:</b> -
<b>Description:</b>	Text		
<b>Value:</b>	0: Name of value 0 10: Name of value 10		
<b>Recommendation:</b>	Text		
<b>Index:</b>	[0] = Name and meaning of index 0 [1] = Name and meaning of index 1		
<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b> <b>0 signal</b>
	00	Name of bit 0	Yes      No
	01	Name of bit 1	Yes      No
<b>Dependency:</b>	Text		
	See also:      pxxx, rxxx		
	See also:      Fxxxxx, Axxxxx, Cxxxxx		
<b>Danger/ Caution/ Warning/ Notice:</b>	Safety-related note corresponding to the warning note concept		
<b>Note:</b>	Text		

#### Note

Some parameters may have different properties and descriptions depending on the selected axis type. And those parameters are displayed twice in the parameter list with additional labels. You need to refer to the specific parameters according to your actual axis type.

#### Description of function

##### Parameter number

The parameter number is made up of a "p", "r" or "c", followed by several numbers and optionally an index and bit array.

The parameter number has the following syntax: pxxxx[0...n], rxxxx[0...n], cxxxx[0...n], pxxxx.0...15 or rxxxx.0...15, cxxxx.0...15, pxxxx[0...n].0...15 or rxxxx[0...n].0...15, cxxxx[0...n].0...15.

Examples of representation in the parameter list:

- p... Adjustable parameters (read and write)
- r... Display parameters (read-only)
- c... Display parameters (read-only)
- p0972 Adjustable parameter 972
- p0489[0...2] Adjustable parameter 489, index 0 to 2
- r0945 Display parameter 945
- r0196[0...255].0...15 Display parameter with index 0 to 255 and bit array from bit 0 to bit 15
- r5613.0...1 Display parameter 5613 with bit array from bit 0 to bit 1
- c8997[0...2] Display parameter 8997, index 0 to 2

Other examples of the notation in the documentation:

- p9563[1] Adjustable parameter 9563, index 1
- r0196[1].5 Display parameter 196, index 1, bit 5
- r0964[2] Display parameter 964, index 2
- p5611.1 Adjustable parameter 5611, bit 1

### Parameter name

Shows the parameter name in the long form.

### Variant

Specifies the product variant for which the parameter is valid. This information is not applicable if a parameter is the same for all product variants used in the parameter list.

- For parameters that displayed only once
  - S200 PN: The parameter applies to the S200 PN converter only.
  - S200 Basic PN: The parameter applies to the S200 Basic PN converter only.
- For parameters that displayed twice
  - S200 Basic PN (EPOS load side, rotating), S200 PN (EPOS load side, rotating): The parameter is used in the "rotary" axis type application only and applies to both the S200 PN converter and the S200 Basic PN converter.
  - blank: The parameter is used in the "linear" axis type application only and applies to both the S200 PN converter and the S200 Basic PN converter.

### Data type

Each parameter is assigned one of the following data types:

- Integer8 I8 8-bit integer
- Integer16 I16 16-bit integer
- Integer32 I32 32-bit integer
- Unsigned8 U8 8-bit without sign

- Unsigned16 U16 16-bit without sign
- Unsigned32 U32 32-bit without sign
- FloatingPoint32 Float 32-bit floating-point number

### Visible in

You change the number of parameters displayed in the commissioning tool via:

- Standard display  
Only the basic parameters are displayed.
- Extended display  
The full scope of parameters is displayed.

### Permission

The user and rights management (UMAC) controls access to the parameters.

You require runtime function rights to read and set parameters.

The following read permissions are available:

- Read drive data or acknowledge messages

The following write permissions are available:

- Control drive in manual mode
- Perform drive diagnostics
- Perform firmware update
- Create backup or load drive data to the commissioning tool
- Edit device configuration or drive applications
- Edit web server configuration
- Manage users and roles

Runtime function rights depend on user roles, which are assigned in the commissioning tool being used. As a consequence, setting parameters can be write-protected.

The commissioning tool provides additional support.

### Can be changed in the operating state

A parameter can only be changed in this operating state. The change only becomes active after exiting the state.

The following states exist:

- Operation  
The pulses have been enabled.
- Ready for operation  
The pulses are not enabled and state "Commissioning" is not active.
- Commissioning  
Commissioning takes place.  
The pulses cannot be enabled.

**Parameter group**

A parameter group contains parameters that are functionally associated with one another.

**Unit**

Shows the default unit of the parameter. For adjustable parameters, the unit is additionally specified according to the values (Min, Max, Factory setting) in square brackets.

**Min, Max, Factory setting**

The parameter value "when shipped" is specified under "Factory setting" with the relevant unit in square parentheses.

The value can be adjusted within the range defined by "Min" and "Max".

This information is not applicable for display parameters.

Min	Minimum value of the parameter [unit]
Max	Maximum value of the parameter [unit]
Factory setting	Value when delivered [unit]

**Description**

Explanation of the function of a parameter.

**Value**

List of the possible values of a parameter.

**Recommendation**

Information about recommended settings.

**Index**

Indexed parameters represent the name and its significance for each individual index.

The following applies to the values (Min, Max, Factory setting) of indexed adjustable parameters:

- Min, Max:  
The adjustment range and the unit apply to all indices.
- Factory setting:  
When all indices have the same factory setting, index 0 is specified with the unit to represent all indices.  
When the indices have different factory settings, they are all listed individually with the unit.

**Bit array**

For parameters with bit fields, the following information is provided about each bit:

- Bit number and signal name
- Meaning for signal states 0 and 1
- Function diagram (optional)  
The signal is shown in the function diagram.



### Dependency

Specification of interactions that this parameter can potentially have:

- Effect on other parameters
- Dependent on other parameter settings (dependent on the selected functions)
- List of other parameters to be considered
- List of faults and alarms to be considered

### Danger/Caution/Warning/Notice

The safety-relevant notes correspond to the warning note concept and contain the following information:

- Important information that must be observed to avoid the risk of physical injury or material damage.
- Information that must be observed to avoid any problems.
- Information that the user may find useful.

### Note

Additional explanations about parameters

## A.3.2 Parameter list

Product: SINAMICS S200, Version: 603021000, Language: eng  
Objects: S200 Basic PN, S200 PN

---

<b>r0002</b>	<b>Drive operating display</b>																												
	<table style="width: 100%; border: none;"> <tr> <td style="width: 35%;"><b>Data type:</b> Integer16</td> <td><b>Visible in:</b> Standard display</td> </tr> <tr> <td><b>Read permission:</b></td> <td>Read drive data or acknowledge messages</td> </tr> <tr> <td><b>Write permission:</b></td> <td>Edit device configuration or drive applications</td> </tr> <tr> <td><b>Parameter group:</b></td> <td>Status parameters, Diagnostics general, Drive enable signals</td> </tr> <tr> <td><b>Unit:</b> -</td> <td></td> </tr> </table>	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	<b>Read permission:</b>	Read drive data or acknowledge messages	<b>Write permission:</b>	Edit device configuration or drive applications	<b>Parameter group:</b>	Status parameters, Diagnostics general, Drive enable signals	<b>Unit:</b> -																			
<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display																												
<b>Read permission:</b>	Read drive data or acknowledge messages																												
<b>Write permission:</b>	Edit device configuration or drive applications																												
<b>Parameter group:</b>	Status parameters, Diagnostics general, Drive enable signals																												
<b>Unit:</b> -																													
<b>Description:</b>	Operating display for the drive.																												
<b>Value:</b>	<table style="width: 100%; border: none;"> <tr><td>0:</td><td>Operation - Everything enabled</td></tr> <tr><td>10:</td><td>Operation - Set "Enable setpoint" = "1"</td></tr> <tr><td>11:</td><td>Operation - Set "Enable speed controller" = "1"</td></tr> <tr><td>12:</td><td>Operation - RFG frozen, set "RFG start" = "1"</td></tr> <tr><td>13:</td><td>Operation - Set "Enable ramp-function generator" = "1"</td></tr> <tr><td>14:</td><td>Operation - MotID, excitation running or brake opens, SS2</td></tr> <tr><td>15:</td><td>Operation - Open brake (p1215)</td></tr> <tr><td>16:</td><td>Operation - Withdraw braking with OFF1 using "ON/OFF1" = "1"</td></tr> <tr><td>17:</td><td>Operation - Braking with OFF3 can only be interrupted with OFF2</td></tr> <tr><td>18:</td><td>Operation - Brake on fault, remove fault, acknowledge</td></tr> <tr><td>21:</td><td>Ready for operation - Set "Enable operation" = "1"</td></tr> <tr><td>22:</td><td>Ready for operation - De-magnetizing running</td></tr> <tr><td>23:</td><td>Ready for operation - Set "Infeed operation" = "1"</td></tr> <tr><td>31:</td><td>Ready for switching on - Set "ON/OFF1" = "0/1"</td></tr> </table>	0:	Operation - Everything enabled	10:	Operation - Set "Enable setpoint" = "1"	11:	Operation - Set "Enable speed controller" = "1"	12:	Operation - RFG frozen, set "RFG start" = "1"	13:	Operation - Set "Enable ramp-function generator" = "1"	14:	Operation - MotID, excitation running or brake opens, SS2	15:	Operation - Open brake (p1215)	16:	Operation - Withdraw braking with OFF1 using "ON/OFF1" = "1"	17:	Operation - Braking with OFF3 can only be interrupted with OFF2	18:	Operation - Brake on fault, remove fault, acknowledge	21:	Ready for operation - Set "Enable operation" = "1"	22:	Ready for operation - De-magnetizing running	23:	Ready for operation - Set "Infeed operation" = "1"	31:	Ready for switching on - Set "ON/OFF1" = "0/1"
0:	Operation - Everything enabled																												
10:	Operation - Set "Enable setpoint" = "1"																												
11:	Operation - Set "Enable speed controller" = "1"																												
12:	Operation - RFG frozen, set "RFG start" = "1"																												
13:	Operation - Set "Enable ramp-function generator" = "1"																												
14:	Operation - MotID, excitation running or brake opens, SS2																												
15:	Operation - Open brake (p1215)																												
16:	Operation - Withdraw braking with OFF1 using "ON/OFF1" = "1"																												
17:	Operation - Braking with OFF3 can only be interrupted with OFF2																												
18:	Operation - Brake on fault, remove fault, acknowledge																												
21:	Ready for operation - Set "Enable operation" = "1"																												
22:	Ready for operation - De-magnetizing running																												
23:	Ready for operation - Set "Infeed operation" = "1"																												
31:	Ready for switching on - Set "ON/OFF1" = "0/1"																												

35:	Switching on inhibited - Carry out first commissioning
41:	Switching on inhibited - Set "ON/OFF1" = "0"
42:	Switching on inhibited - Set "Operating condition/OFF2" = "1"
43:	Switching on inhibited - Set "Operating condition/OFF3" = "1"
44:	Switching on inhibited - Supply STO terminal w/ 24 V (hardware)
45:	Switching on inhibited - Rectify fault, acknowledge fault, STO
46:	Switching on inhibited - Exit commissioning mode
60:	Drive deactivated/not operational
70:	Initialization
200:	Wait for run-up/partial run-up
250:	Device signals a topology error

**Dependency:** See also: r0046

<b>NOTICE</b>
For several missing enable signals, the corresponding value with the highest number is displayed.

**Note**

OC: Operating condition  
 EP: Enable Pulses (pulse enable)  
 RFG: Ramp-function generator  
 COM: Commissioning  
 MotID: Motor data identification

**r0020****Speed setpoint smoothed**

**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:**                Read drive data or acknowledge messages  
**Write permission:**                Edit device configuration or drive applications  
**Parameter group:**                Mode signals / displays  
**Unit:** rpm

**Description:** Displays the currently smoothed speed setpoint at the input of the speed controller or U/f characteristic (after the interpolator).

**Dependency:** See also: r1438

**Note**

Smoothing time constant = 100 ms  
 The signal is not suitable as a process quantity and may only be used as a display quantity.  
 The speed setpoint is available smoothed (r0020) and unsmoothed (r1438).

**r0021****Speed actual value smoothed**

**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:**                Read drive data or acknowledge messages  
**Write permission:**                Edit device configuration or drive applications  
**Parameter group:**                Diagnostics, Mode signals / displays  
**Unit:** rpm

**Description:** Display for the smoothed actual value of the motor speed.

**Dependency:** See also: r0063

**Note**

Smoothing time constant = 100 ms  
 The speed actual value is available smoothed (r0021) and unsmoothed (r0063).

**r0026**      **DC link voltage smoothed**  
**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Brake control, Mode signals / displays  
**Unit:** V  
**Description:**      Displays the smoothed actual value of the DC link voltage.  
**Dependency:**      See also: r0070

**NOTICE**  
This smoothed signal is not suitable for diagnostics or evaluation of dynamic operations. In this case, the unsmoothed value should be used.

**Note**  
Smoothing time constant = 100 ms  
The signal is not suitable as a process quantity and may only be used as a display quantity.  
The DC link voltage is available smoothed (r0026) and unsmoothed (r0070).

**r0027**      **Absolute actual current smoothed**  
**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Mode signals / displays, Power unit  
**Unit:** Arms  
**Description:**      Displays the smoothed absolute current actual value.  
**Dependency:**      See also: r0068

**NOTICE**  
This smoothed signal is not suitable for diagnostics or evaluation of dynamic operations. In this case, the unsmoothed value should be used.

**Note**  
A\_INF, S\_INF, VECTOR: Smoothing time constant = 300 ms  
SERVO: Smoothing time constant = 100 ms  
The signal is not suitable as a process quantity and may only be used as a display quantity.  
The absolute current actual value is available smoothed (r0027) and unsmoothed (r0068).

**r0031**      **Actual torque smoothed**  
**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Brake control, Mode signals / displays  
**Unit:** Nm  
**Description:**      Displays the smoothed torque actual value.  
**Dependency:**      See also: r0080

**Note**  
Smoothing time constant = 100 ms  
The signal is not suitable as a process quantity and may only be used as a display quantity.  
The torque actual value is available smoothed (r0031) and unsmoothed (r0080).

---

<b>r0032</b>	<b>Active power actual value smoothed</b>
<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Mode signals / displays
<b>Unit:</b> kW	
<b>Description:</b>	Display for the smoothed actual value of the active power.
<b>Dependency:</b>	See also: r0082
<hr/>	
<b>Note</b>	
The active power is available smoothed (r0032 with 100 ms, r0082[1] with 1 ms) and unsmoothed (r0082[0]).	

---

<b>r0034</b>	<b>Motor utilization thermal</b>
<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Motor temperature, Mode signals / displays
<b>Unit:</b> %	
<b>Description:</b>	Displays the thermal motor utilization taking into account the ambient temperature set in p0613.
<b>Dependency:</b>	See also: p0613 See also: F07011, A07012

**NOTICE**

After the drive is switched on, the system starts to determine the motor temperature with an assumed model value. This means that the value for the motor utilization is only valid after a stabilization time.

---

<b>r0036[0...2]</b>	<b>Power unit overload</b>
<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Mode signals / displays, Power unit
<b>Unit:</b> %	
<b>Description:</b>	Display when the power unit is overloaded. A reference value is defined for the monitoring functions. An overload (0 %) is not displayed if the reference value is not exceeded. The display value increases if the reference value is exceeded. An alarm is output if an overload is active over a certain time period; a fault is output when 100% is reached.
<b>Index:</b>	[0] = I2t (AC) [1] = Reserved [2] = Reserved
<b>Dependency:</b>	See also: p0290 See also: F30005, A30256, A30257, F30258, A30267, F30268

**Note**

For index [0]:

This index shows the actual state of the I2t monitoring on the AC side.

The reference value represents the AC current that the power unit can permanently provide, without the influence of switching losses (e.g. the continuously permissible current of capacitors, inductances, busbars, etc.).

For index [1]:

This index shows the actual state of the active power monitoring.

The reference value represents the active power that the power unit can continuously provide.

For index [2]:

This index shows the actual state of the I2t monitoring on the DC side.

The reference value represents the DC current that can continuously flow in the DC link.

**r0037[0...10]**

**Power unit temperatures**

**Data type:** FloatingPoint32

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Mode signals / displays, Power unit

**Unit:** °C

**Description:**

Display for the temperatures in the power unit.

**Index:**

[0] = Inverter maximum value

[1] = Depletion layer maximum value

[2] = Rectifier maximum value

[3] = Air intake

[4] = Interior of power unit

[5] = Cooling unit liquid intake

[6] = Capacitor air discharge

[7] = Depletion layer maximum value 1

[8] = Depletion layer maximum value 2

[9] = Depletion layer maximum value 3

[10] = Depletion layer maximum value 4

**Note**

The value of -200 indicates that there is no measuring signal.

r0037[0]: Maximum value of the inverter temperatures.

r0037[1]: Maximum value of the depletion layer temperatures.

In the case of a fault, the particular shutdown threshold depends on the power unit, and cannot be read out.

**r0039[0...2]**

**Energy display**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Mode signals / displays, Power loss optimization

**Unit:** kWh

**Description:**

Display for the energy values at the drive output terminals.

**Index:**

[0] = Energy balance (sum)

[1] = Energy drawn

[2] = Energy fed back

**Note**

For index [0]:

Difference between the energy drawn and energy that is fed back.

---

<b>r0044</b>	<b>Thermal converter utilization</b>
<b>Data type:</b>	FloatingPoint32
<b>Visible in:</b>	Standard display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Mode signals / displays, Power unit
<b>Unit:</b>	%
<b>Description:</b>	Displays the thermal converter utilization as a percentage. With this value, various thermal monitoring functions are taken into account.
<b>Dependency:</b>	See also: r0034
<hr/>	
<b>Note</b>	
The thermal motor utilization is displayed in parameter r0034.	

---

<b>r0046.0...30</b>	<b>Missing enable signals</b>																																																																
<b>Data type:</b>	Unsigned32																																																																
<b>Visible in:</b>	Standard display																																																																
<b>Read permission:</b>	Read drive data or acknowledge messages																																																																
<b>Write permission:</b>	Edit device configuration or drive applications																																																																
<b>Parameter group:</b>	Control/status words, Drive enable signals																																																																
<b>Unit:</b>	-																																																																
<b>Description:</b>	Displays the missing enable signals. All enable signals are required to operate the drive. The enable signals are set by the control.																																																																
<b>Bit array:</b>	<table> <thead> <tr> <th>Bit</th> <th>Signal name</th> <th>1 signal</th> <th>0 signal</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>OFF1 enable missing</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>01</td> <td>OFF2 enable missing</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>02</td> <td>OFF3 enable missing</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>03</td> <td>Operation enable missing</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>08</td> <td>Safety enable missing</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>10</td> <td>Ramp-function generator enable missing</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>12</td> <td>Speed setpoint enable missing</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>16</td> <td>OFF1 enable internal missing</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>17</td> <td>OFF2 enable internal missing</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>18</td> <td>OFF3 enable internal missing</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>19</td> <td>Pulse enable internal missing</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>21</td> <td>STOP2 enable internal missing</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>26</td> <td>Drive inactive or not operational</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>28</td> <td>Brake open missing</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>30</td> <td>Speed controller enable missing</td> <td>Yes</td> <td>No</td> </tr> </tbody> </table>	Bit	Signal name	1 signal	0 signal	00	OFF1 enable missing	Yes	No	01	OFF2 enable missing	Yes	No	02	OFF3 enable missing	Yes	No	03	Operation enable missing	Yes	No	08	Safety enable missing	Yes	No	10	Ramp-function generator enable missing	Yes	No	12	Speed setpoint enable missing	Yes	No	16	OFF1 enable internal missing	Yes	No	17	OFF2 enable internal missing	Yes	No	18	OFF3 enable internal missing	Yes	No	19	Pulse enable internal missing	Yes	No	21	STOP2 enable internal missing	Yes	No	26	Drive inactive or not operational	Yes	No	28	Brake open missing	Yes	No	30	Speed controller enable missing	Yes	No
Bit	Signal name	1 signal	0 signal																																																														
00	OFF1 enable missing	Yes	No																																																														
01	OFF2 enable missing	Yes	No																																																														
02	OFF3 enable missing	Yes	No																																																														
03	Operation enable missing	Yes	No																																																														
08	Safety enable missing	Yes	No																																																														
10	Ramp-function generator enable missing	Yes	No																																																														
12	Speed setpoint enable missing	Yes	No																																																														
16	OFF1 enable internal missing	Yes	No																																																														
17	OFF2 enable internal missing	Yes	No																																																														
18	OFF3 enable internal missing	Yes	No																																																														
19	Pulse enable internal missing	Yes	No																																																														
21	STOP2 enable internal missing	Yes	No																																																														
26	Drive inactive or not operational	Yes	No																																																														
28	Brake open missing	Yes	No																																																														
30	Speed controller enable missing	Yes	No																																																														
<b>Dependency:</b>	See also: r0002																																																																

---

**Note**

The value r0046 = 0 indicates that all enable signals for this drive are present.

Bit 00 = 1 (enable signal missing), if:

- OFF1 from the PROFINET interface missing.
- Switching on inhibited is active.

Bit 01 = 1 (enable signal missing), if:

- OFF2 from the PROFINET interface missing.

Bit 02 = 1 (enable signal missing), if:

- OFF3 from the PROFINET interface missing.

Bit 03 = 1 (enable signal missing), if:

- "Enable operation" from the PROFINET interface missing.

Bit 08 = 1 (enable signal missing), if:

- Safety functions have been enabled and STO is active.
- A safety-relevant message with STO as response is active.

STO enabled via terminals:

- Pulse enable via the STO terminals has a 0 signal.
- Additional details relating to the reason that STO was selected, see parameter r10352.

Bit 10 = 1 (enable signal missing), if:

- "Enable ramp-function generator" from the PROFINET interface missing.

Bit 12 = 1 (enable signal missing), if:

- "Enable setpoint" from the PROFINET interface missing.

Bit 16 = 1 (enable signal missing), if:

- There is an OFF1 fault response. The system is only enabled if the fault is removed and was acknowledged and the "switching on inhibited" withdrawn with OFF1 = 0.

Bit 17 = 1 (enable signal missing), if:

- The commissioning mode is selected.
- There is an OFF2 fault response.
- The drive is inactive or not capable of operation.

Bit 18 = 1 (enable signal missing), if:

- OFF3 has still not been completed or an OFF3 fault response is present.

Bit 19 = 1 (internal pulse enable missing), if:

- Synchronization still not completed.

Bit 21 = 1 (enable signal missing), if:

The pulses have been enabled and the speed setpoint has still not been enabled, because:

- The holding brake opening time has still not elapsed.
- The encoder has not been calibrated (synchronous motor).

Bit 26 = 1 (enable signal missing), if:

- The drive is inactive or not capable of operation.
- The drive device is in the "PROFenergy energy-saving mode".

Bit 28 = 1 (enable signal missing), if:

- The holding brake is closed or has still not been opened.

Bit 30 = 1 (speed controller inhibited), if one of the following applies:

- Pulse enable missing

- The function generator with current input is active.
- The measuring function "current controller reference frequency characteristic" is active.
- The pole position identification is active.
- Motor data identification is active (only certain steps).

---

<b>r0060</b>	<b>Speed setpoint before the setpoint filter</b>
	<b>Data type:</b> FloatingPoint32 <b>Visible in:</b> Extended display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Mode signals / displays, Speed setpoint filter
	<b>Unit:</b> rpm
<b>Description:</b>	Displays the currently unsmoothed speed setpoint at the input of the speed controller or U/f characteristic (after the interpolator).

---

<b>r0061[0...1]</b>	<b>Actual speed unsmoothed</b>
	<b>Data type:</b> FloatingPoint32 <b>Visible in:</b> Extended display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Motor encoder, Mode signals / displays
	<b>Unit:</b> rpm
<b>Description:</b>	Displays the unsmoothed speed actual values sensed by the encoders.
<b>Index:</b>	[0] = Motor encoder [1] = Reserved

---

<b>r0062</b>	<b>Speed setpoint after the filter</b>
	<b>Data type:</b> FloatingPoint32 <b>Visible in:</b> Extended display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> U/f control, Speed controller, Mode signals / displays, Speed setpoint filter
	<b>Unit:</b> rpm
<b>Description:</b>	Display and numerical signal source for the speed setpoint after the setpoint filters.

---

<b>r0063</b>	<b>Speed actual value smoothed</b>
	<b>Data type:</b> FloatingPoint32 <b>Visible in:</b> Extended display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> U/f control, Speed controller, Speed actual value filter, Mode signals / displays
	<b>Unit:</b> rpm
<b>Description:</b>	Display for the smoothed speed actual value.
<b>Dependency:</b>	See also: r0021, r0061, p1441

**Note**

The smoothing time is set in p1441.

The speed actual value is available strongly smoothed (r0021) and unsmoothed (r0061).



---

<b>r0068</b>	<p><b>Absolute current actual value</b></p> <p><b>Data type:</b> FloatingPoint32      <b>Visible in:</b> Extended display</p> <p><b>Read permission:</b>                      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>                      Edit device configuration or drive applications</p> <p><b>Parameter group:</b>                      Mode signals / displays</p> <p><b>Unit:</b> Arms</p>
<b>Description:</b>	Displays actual absolute current.
<b>Dependency:</b>	See also: r0027

<p><b>NOTICE</b></p> <p>For A_INF, S_INF the following applies: The value is updated with the current controller sampling time.</p> <p>The following applies for SERVO: The value is updated with a sampling time of 1 ms.</p>
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**Note**  
 Absolute current value =  $\sqrt{I_q^2 + I_d^2}$   
 The absolute current actual value is available smoothed (r0027) and unsmoothed (r0068).

---



---

<b>r0070</b>	<p><b>Actual DC link voltage</b></p> <p><b>Data type:</b> FloatingPoint32      <b>Visible in:</b> Extended display</p> <p><b>Read permission:</b>                      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>                      Edit device configuration or drive applications</p> <p><b>Parameter group:</b>                      Vdc-min/max controller, Mode signals / displays, Power unit, Vdc controller</p> <p><b>Unit:</b> V</p>
<b>Description:</b>	Display and numerical signal source for the measured actual value of the DC link voltage.
<b>Dependency:</b>	See also: r0026

**Note**  
 The DC link voltage is available smoothed (r0026) and unsmoothed (r0070).

---



---

<b>r0072</b>	<p><b>Output voltage</b></p> <p><b>Data type:</b> FloatingPoint32      <b>Visible in:</b> Extended display</p> <p><b>Read permission:</b>                      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>                      Edit device configuration or drive applications</p> <p><b>Parameter group:</b>                      U/f control, Current controller, Mode signals / displays, Power unit</p> <p><b>Unit:</b> Vrms</p>
<b>Description:</b>	Display for the actual output voltage of the power unit.

---

<b>r0076</b>	<p><b>Current actual value field-generating</b></p> <p><b>Data type:</b> FloatingPoint32      <b>Visible in:</b> Extended display</p> <p><b>Read permission:</b>                      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>                      Edit device configuration or drive applications</p> <p><b>Parameter group:</b>                      U/f control, Current controller, Mode signals / displays</p> <p><b>Unit:</b> Arms</p>
<b>Description:</b>	Display for the field-generating current actual value.

---

<b>r0077</b>	<b>Current setpoint torque-generating</b>
<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Current controller, Mode signals / displays
<b>Unit:</b> Arms	
<b>Description:</b>	Display and numerical signal source for the torque/force-generating current setpoint.
	<b>Note</b>
	This value is irrelevant for the U/f control mode.

---

<b>r0078[0...1]</b>	<b>Current actual value torque-generating</b>
<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Mode signals / displays
<b>Unit:</b> Arms	
<b>Description:</b>	Display for the actual value of the torque-generating current Iq.
<b>Index:</b>	[0] = Unsmoothed [1] = Smoothed with 1 ms

---

<b>r0079[0...1]</b>	<b>Torque setpoint total</b>
<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Torque limiting, Mode signals / displays
<b>Unit:</b> Nm	
<b>Description:</b>	Display for the torque setpoint at the output of the speed controller.
<b>Index:</b>	[0] = Unsmoothed [1] = Smoothed with 1 ms

---

<b>r0080</b>	<b>Torque actual value</b>
<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Motor model, Mode signals / displays
<b>Unit:</b> Nm	
<b>Description:</b>	Display and numerical signal source for the torque actual value.
<b>Dependency:</b>	See also: r0031
	<b>Note</b>
	The value is available smoothed (r0031) and unsmoothed (r0080).

---

<b>r0081</b>	<b>Torque utilization</b>
<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Torque limiting, Mode signals / displays
<b>Unit:</b> %	

**Description:** Displays the torque utilization as a percentage.  
The torque utilization is obtained from the required smoothed torque referred to the torque limit.

**Note**

The torque utilization is obtained from the required torque referred to the torque limit as follows:  
 - Positive torque:  $r0081 = ((r0079 + p1532) / (r1538 - p1532)) * 100 \%$   
 - Negative torque:  $r0081 = ((-r0079 + p1532) / (-r1539 + p1532)) * 100 \%$   
 The calculation of the torque utilization depends on the selected smoothing time constant (1 ms).

**r0082[0...3] Active power actual value**

**Data type:** FloatingPoint32      **Visible in:** Extended display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Parameter group:** Mode signals / displays  
**Unit:** kW

**Description:** Displays the actual active power.

**Index:** [0] = Unsmoothed  
 [1] = Smoothed with 1 ms  
 [2] = Power drawn  
 [3] = Power drawn smoothed

**Dependency:** See also: r0032

**Note**

The mechanical active power is available smoothed (r0032 with 100 ms, r0082[1] with 1 ms) and unsmoothed (r0082[0]).  
 For index [3]:  
 Smoothing time constant = 0.25 ms

**r0196[0...255].0...15 Topology component status**

**Data type:** Unsigned32      **Visible in:** Extended display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Parameter group:** Diagnostics general  
**Unit:** -

**Description:** Displays the status of the components.  
 r0196[0]: Group status of all components  
 r0196[1]: Status of component with component number 1  
 ...  
 r0196[255]: Status of component with component number 255

Bit array:	Bit	Signal name	1 signal	0 signal
	00	Component status bit 0	High	Low
	01	Component status bit 1	High	Low
	02	Component status bit 2	High	Low
	03	Component status bit 3	High	Low
	04	Component state	Active	Inactive/parking
	06	Topology problem active	Yes	No
	07	Part of the target topology	Yes	No only act topo
	08	Alarm present	Yes	No
	09	Safety message present	Yes	No
	10	Fault present	Yes	No
	11	Alarm class bit 0	High	Low
	12	Alarm class bit 1	High	Low

A.3 Parameters

13	Maintenance required	Yes	No
14	Maintenance urgently required	Yes	No
15	Fault gone/can be acknowledged	Yes	No

**Note**

For bit 03 ... 00:

Bit 3, 2, 1, 0 = 0, 0, 0, 0 --> component not available.

Bit 3, 2, 1, 0 = 0, 0, 0, 1 --> run up, acyclic communications (LED = orange).

Bit 3, 2, 1, 0 = 0, 0, 1, 0 --> operating mode, cyclic communications (LED = green).

Bit 3, 2, 1, 0 = 0, 0, 1, 1 --> alarm (LED = green).

Bit 3, 2, 1, 0 = 0, 1, 0, 0 --> fault (LED = red).

Bit 3, 2, 1, 0 = 0, 1, 0, 1 --> detection via LED and operating mode (LED = green/orange).

Bit 3, 2, 1, 0 = 0, 1, 1, 0 --> detection via LED and alarm (LED = green/orange).

Bit 3, 2, 1, 0 = 0, 1, 1, 1 --> detection via LED and fault (LED = red/orange).

Bit 3, 2, 1, 0 = 1, 0, 0, 0 --> firmware being downloaded (LED = green/red with 0.5 Hz).

Bit 3, 2, 1, 0 = 1, 0, 0, 1 --> firmware download completed, wait for POWER ON (LED = green/red with 2.0 Hz).

For bits 12 ... 11:

These status bits are used for the classification of internal alarm classes and are intended for diagnostic purposes only on certain automation systems with integrated SINAMICS functionality.

**p0201[0]**

**Power unit code number**

<b>Data type:</b> Unsigned16	<b>Visible in:</b> Extended display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Commissioning	
<b>Parameter group:</b>	Power unit	
<b>Unit:</b> -		
<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0	65535	0

**Description:** Sets the actual code number of the power unit being used.

**p0210**

**Device supply voltage**

<b>Data type:</b> Unsigned16	<b>Visible in:</b> Standard display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Ready for operation	
<b>Parameter group:</b>	Power unit, Quick commissioning	
<b>Unit:</b> V		
<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
1 [V]	63000 [V]	400 [V]

**Description:** Sets the device supply voltage.  
 The voltage between two phases should be entered as the device supply voltage.  
 This setting is important for operating with voltages that are less than the voltage range for which the drive is designed.

**Note**

Setting ranges for p0210 as a function of the rated power unit voltage:

U<sub>rated</sub> = 230 V:

- p0210 = 200 ... 240 V

U<sub>rated</sub> = 400 V:

- p0210 = 380 ... 480 V (wide voltage range, in addition to 200 ... 240 V)

---

<b>p0215</b>	<b>Braking resistor selection</b>		
	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Dynamic braking, Quick commissioning	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	3	10	10
<b>Description:</b>	Sets the external braking resistor.		
<b>Value:</b>	3: Third-party braking resistor (with monitoring)		
	10: No monitoring (external braking resistor)		
<b>Dependency:</b>	See also: p0216, p0218, p0219		
	<b>Note</b>		
	p0215 = 3: An externally connected braking resistor is controlled and also thermally monitored per software. Parameters p0216, p0218 and p0219[0] and p0219[1] must be set in order that the monitoring functions. Chopper operation is not possible if the values are not set.		
	p0215 = 10: The externally connected braking resistor is not monitored. The internal braking resistor is monitored.		

---

<b>p0216</b>	<b>Braking resistance value</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Dynamic braking, Quick commissioning	
	<b>Unit:</b> ohm		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.0 [ohm]	1000.0 [ohm]	0.0 [ohm]
<b>Description:</b>	Sets the resistance value of a connected external braking resistor.		
<b>Dependency:</b>	The parameter is only relevant for p0215 = 2, 3.		

---

<b>p0218</b>	<b>Braking resistor maximum power duration</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Dynamic braking, Quick commissioning	
	<b>Unit:</b> s		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.00 [s]	2000.00 [s]	0.00 [s]
<b>Description:</b>	Sets the maximum duration when operating the braking resistor at its maximum power level.		
<b>Dependency:</b>	The parameter is only relevant for p0215 = 2, 3.		

---

<b>p0219[0...1]</b>	<b>Braking resistor braking power</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Dynamic braking, Quick commissioning	
	<b>Unit:</b> kW		
	<b>Min:</b> 0.00 [kW]	<b>Max:</b> 20000.00 [kW]	<b>Factory setting:</b> 0.00 [kW]
<b>Description:</b>	Sets the braking power of the connected braking resistor.		
<b>Index:</b>	[0] = Maximum power [1] = Rated power		

---

<b>r0277[0]</b>	<b>Power unit heat sink fan wear counter</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Power unit	
	<b>Unit:</b> %		
<b>Description:</b>	Displays the wear counter of the heat sink fan in the power unit. After a fan has been replaced, using an appropriate button, the value can be reset in the commissioning tool to 0.		
<b>Dependency:</b>	See also: A30042		

---

<b>p0290</b>	<b>Power unit overload response</b>		
	<b>Data type:</b> Integer16	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Ready for operation	
	<b>Parameter group:</b>	Power unit	
	<b>Unit:</b> -		
	<b>Min:</b> 0	<b>Max:</b> 1	<b>Factory setting:</b> 0

<b>Description:</b>	<p>Sets the response to a thermal overload condition of the power unit. The following quantities can result in a response to thermal overload:</p> <ul style="list-style-type: none"> <li>- Heat sink temperature (r0037[0]).</li> <li>- Chip temperature (r0037[1]).</li> <li>- Power unit overload I2t (r0036).</li> </ul> <p>Possible measures to avoid thermal overload:</p> <ul style="list-style-type: none"> <li>- Reduce the output current limit r0289 and r0067 (for closed-loop speed/velocity or torque/force control) or the output frequency (for U/f control indirectly via the output current limit and the intervention of the current limiting controller).</li> <li>- Reduce the pulse frequency.</li> </ul> <p>A reduction, if parameterized, is always realized after an appropriate alarm is output. For p0290 = 0:</p> <p>When a temperature alarm threshold is exceeded, the output current is reduced, and in turn, the output frequency. If the current reduction is not sufficient to thermally relieve the power unit, when the drive reaches the temperature fault threshold it switches off.</p> <p>This setting is not suitable for drives requiring a constant torque.</p> <p>Application: pumps, fans</p> <p>For p0290 = 1:</p> <p>The power unit operates at the required operating point. When the fault threshold is reached, the drive switches off and an appropriate fault is output.</p> <p>Application: Drive applications where, as a result of the underlying process, no setpoint deviations of individual drives in the group are permitted - or where the pulse frequency must be strictly maintained.</p> <p>For p0290 = 2:</p> <p>The pulse frequency is reduced to a permissible minimum when a temperature alarm threshold is exceeded. If the pulse frequency reduction is not sufficient to thermally relieve the power unit, then the output current is also reduced.</p> <p>Application: Drives with a low dynamic performance and occasional overload where speed deviations are permissible.</p> <p>For p0290 = 3:</p> <p>Only the pulse frequency is reduced to a permissible minimum when a temperature alarm threshold is exceeded.</p> <p>Application: Drives with a low dynamic performance and occasional overload where a speed deviation is not permissible.</p> <p>For p0290 = 10:</p> <p>For Booksize devices, in addition to the heat sink and chip temperatures, the difference between the two temperatures is monitored as an additional variable. When a temperature threshold is exceeded, the output current is reduced - and in turn, the output frequency.</p> <p>This overload response is activated as default setting for Booksize devices with a pulse frequency higher than or equal to 16 kHz.</p> <p>For p0290 = 12:</p> <p>In this particular case, the chip temperature is evaluated based on the actual load. If the temperature exceeds this alarm threshold, then the pulse frequency is reduced to a permissible minimum. The output current is only reduced if the actual chip temperature increases above a certain temperature threshold.</p> <p>Application: Drives that are frequently started and accelerated - and which manifest a significantly fluctuating torque profile (e.g. centrifuges, flywheel presses, cranes).</p> <p>For p0290 = 13:</p> <p>In this particular case, the chip temperature is evaluated based on the actual load. If the temperature exceeds this alarm threshold, then the pulse frequency is reduced to a permissible minimum.</p> <p>Application: Drives that are frequently started and accelerated - and which manifest a significantly fluctuating torque profile, and where the output current is not to be reduced (e.g. centrifuges, flywheel presses, cranes).</p>
<b>Value:</b>	<p>0:           Reduce output current</p> <p>1:           No reduction shutdown when overload threshold is reached</p>

**Dependency:** For a thermal power unit overload, an appropriate alarm or fault is output and r2135.15 or r2135.13 set. Settings, where the pulse frequency is reduced, are not possible if the "Extended torque control" function module (r0108.1) is activated.

For p0290 = 2, 3:  
These responses are only applicable for blocksize power units.

For p0290 = 10:  
This response is only applicable for booksize power units.

See also: r0036, r0037

**NOTICE**

If the thermal overload of the power unit is not sufficiently reduced by the actions taken, the drive is always shut down. This means that the power unit is always protected irrespective of the setting of this parameter.

**Note**

Under overload conditions, the current and torque limit are reduced, and therefore the motor is braked and forbidden speed ranges (e.g. minimum speed p1080 and suppression [skip] speeds p1091 ... p1094) can be passed through. When the motor data identification routine is selected, parameter p0290 cannot be changed.

For p0290 = 0, 2, 12:

This setting is only practical if the load decreases with decreasing speed (e.g. for applications with variable torque such as for pumps and fans).

For p0290 = 2, 3, 12, 13:

The I2t overload detection of the power unit does not influence the response "Reduce pulse frequency".

For p0290 = 10, 12, 13:

The possible load duty cycles, calculated based on the previous model (p0290 = 0, 1, 2, 3) for booksize power units cannot be transferred in every case. This is the reason that we recommend that you contact our application support department if you are uncertain about dimensioning the device.

**r0296****DC link voltage undervoltage threshold**

**Data type:** Unsigned16

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Power unit

**Unit:** V

**Description:**

Threshold to detect a DC link undervoltage.

If the DC link voltage falls below this threshold, the drive unit is tripped due to a DC link undervoltage condition.

**Dependency:**

See also: F30003

**Note**

The actual threshold value depends on the device type and the selected device supply voltage (p0210).

**r0297****DC link voltage overvoltage threshold**

**Data type:** Unsigned16

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Power unit

**Unit:** V

**Description:**

Threshold to detect a DC link overvoltage.

If the DC link voltage exceeds the threshold specified here, the drive device is tripped due to DC link overvoltage.

**Dependency:**

See also: F30002



<b>p0300[0]</b>	<b>Motor type selection</b>		
	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Motor data, Quick commissioning	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0	10000	0
<b>Description:</b>	Selects the motor type or start to read in the motor parameters for a motor with self-identifying data (p0300 = 10000). For p0300 < 10000 the following applies: The first digit of the parameter value always defines the general motor type and corresponds to the third-party motor belonging to a motor list: 2 = rotating synchronous motor		
<b>Value:</b>	0: No motor 2: Synchronous motor 2120: 1FL2 synchronous motor 10000: Motor with data set		
<b>Dependency:</b>	See also: p0301		

<b>p0301[0]</b>	<b>Motor code number selection</b>		
	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Motor data, Quick commissioning	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0	99999999	0
<b>Description:</b>	Code number of the connected motor, whose data was accepted when commissioning.		
<b>Dependency:</b>	Code numbers are only possible for motor types that correspond to the motor type selected in p0300. See also: p0300		
	<b>Note</b>		
	For a motor with self-identifying data, p0301 cannot be changed. p0301 is automatically written to the code number of the motor parameter read in (r0302) if p0300 is set to 10000. For other values, the commissioning routine cannot be exited.		

<b>r0302[0]</b>	<b>Motor code (identified)</b>		
	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Motor data, Quick commissioning	
	<b>Unit:</b> -		
<b>Description:</b>	Displays the identified motor code number. When the drive powers up, the motor code is read out the motor. For r0302 = 0, the motor data were not identified.		

---

<b>p0304[0]</b>	<b>Rated motor voltage</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Motor data, Quick commissioning	
	<b>Unit:</b> Vrms		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0 [Vrms]	20000 [Vrms]	0 [Vrms]
<b>Description:</b>	Displays the rated motor voltage.		

---

<b>p0305[0]</b>	<b>Rated motor current</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Motor data, Quick commissioning	
	<b>Unit:</b> Arms		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.00 [Arms]	10000.00 [Arms]	0.00 [Arms]
<b>Description:</b>	Displays the rated motor current.		

---

<b>p0307[0]</b>	<b>Rated motor power</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Motor data, Quick commissioning	
	<b>Unit:</b> kW		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.00 [kW]	100000.00 [kW]	0.00 [kW]
<b>Description:</b>	Displays the rated motor power.		

---

<b>p0311[0]</b>	<b>Rated motor speed</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Motor data, Quick commissioning	
	<b>Unit:</b> rpm		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.0 [rpm]	210000.0 [rpm]	0.0 [rpm]
<b>Description:</b>	Displays the rated motor speed.		

<b>p0312[0]</b>	<b>Rated motor torque</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Motor data	
	<b>Unit:</b> Nm		
<b>Description:</b>	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.00 [Nm]	1000000.00 [Nm]	0.00 [Nm]
	Displays the rated motor torque.		
<b>r0316[0]</b>	<b>Motor torque constant</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Motor data, Quick commissioning	
	<b>Unit:</b> Nm/A		
	<b>Description:</b>	Sets the torque constant of the synchronous motor.	
r0316 = 0:			
The torque constant is calculated from the motor data.			
r0316 > 0: The selected value is used as torque constant.			
<b>p0318[0]</b>	<b>Motor stall current</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Motor data	
	<b>Unit:</b> Arms		
<b>Description:</b>	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.00 [Arms]	10000.00 [Arms]	0.00 [Arms]
	Displays the rated motor stall current.		
<b>p0319[0]</b>	<b>Motor static torque</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Motor data	
	<b>Unit:</b> Nm		
<b>Description:</b>	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.00 [Nm]	100000.00 [Nm]	0.00 [Nm]
	Displays the motor standstill/static torque.		

---

<b>p0322[0]</b>	<b>Maximum motor speed</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Motor data, Quick commissioning	
	<b>Unit:</b> rpm		
	<b>Min:</b> 0.0 [rpm]	<b>Max:</b> 210000.0 [rpm]	<b>Factory setting:</b> 0.0 [rpm]
<b>Description:</b>	Displays the maximum motor speed.		
<b>Dependency:</b>	See also: p1082		

---

<b>p0323[0]</b>	<b>Maximum motor current</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Motor data, Quick commissioning	
	<b>Unit:</b> Arms		
	<b>Min:</b> 0.00 [Arms]	<b>Max:</b> 20000.00 [Arms]	<b>Factory setting:</b> 0.00 [Arms]
<b>Description:</b>	Displays the maximum permissible motor current.		

---

<b>r0341[0]</b>	<b>Motor moment of inertia</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Motor data, Speed controller	
	<b>Unit:</b> kgm <sup>2</sup>		
<b>Description:</b>	Displays the motor moment of inertia (without load).		

---

<b>p0400[0]</b>	<b>Encoder type selection</b>		
	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Motor encoder, Quick commissioning	
	<b>Unit:</b> -		
	<b>Min:</b> 0	<b>Max:</b> 10100	<b>Factory setting:</b> 0
<b>Description:</b>	Selects the encoder from the list of encoder types supported.		
<b>Value:</b>	0: No encoder 801: Digital encoder interface AS17, singleturn 802: Digital encoder interface AS21, singleturn 803: Digital encoder interface AM21, multiturn 4096 9999: User defined		

10100: Identify encoder (waiting)

**NOTICE**  
An encoder type with p0400 < 9999 defines an encoder for which there is an encoder parameter list. When selecting a catalog encoder (p0400 < 9999) the parameters from the encoder parameter list cannot be changed (write protection).

**Note**

The connected encoder can be identified using p0400 = 10100. This means that the encoder must support this.

For p0400 = 10100 the following applies:

The connected encoder is identified. If identification is not possible, then p0400 remains set = 10100, and the system waits until identification is possible.

### p0404[0].1...20 Encoder configuration effective

<b>Data type:</b> Unsigned32	<b>Visible in:</b> Standard display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Commissioning	
<b>Parameter group:</b>	Motor encoder	
<b>Unit:</b> -		
<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
-	-	0000 0000 0000 0000 0000 0000 0000 0000 bin

**Description:** Settings for the basic encoder properties.

Bit array:	Bit	Signal name	1 signal	0 signal
	01	Absolute encoder	Yes	No
	02	Multiturn encoder	Yes	No
	03	Track A/B square-wave	Yes	No
	07	Digital Encoder Interface	Yes	No
	20	Voltage level 5 V	Yes	No

**NOTICE**  
This parameter is automatically pre-assigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.

**Note**

For bit 01, 02 (absolute encoder, multiturn encoder):  
These bits can only be selected for a DEI encoder.

### p0408[0] Rotary encoder pulse number

<b>Data type:</b> Unsigned32	<b>Visible in:</b> Standard display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Commissioning	
<b>Parameter group:</b>	Motor encoder	
<b>Unit:</b> -		
<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0	16777215	1024

**Description:** Sets the number of pulses for a rotary encoder.  
In conjunction with the fine resolution, the pulse number defines the transfer format for position actual values Gn\_XIST1 (r0479).

**NOTICE**

This parameter is automatically pre-assigned for encoders from the encoder list and for identify encoder (p0400).  
When selecting a catalog encoder, this parameter cannot be changed (write protection).

**Note**

The smallest permissible value is 1 pulse.

This value does not always correspond to the pulse number of the measuring device. For a DEI encoder, a value is entered here that facilitates optimum transfer of the resolution (p0423).

**p0421[0]****Absolute encoder rotary multiturn resolution**

**Data type:** Unsigned32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Commissioning

**Parameter group:**

Motor encoder

**Unit:** -

**Min:**

0

**Max:**

4294967295

**Factory setting:**

4096

**Description:** Sets the number of revolutions that can be resolved for a rotary absolute encoder.

**NOTICE**

This parameter is automatically pre-assigned for encoders from the encoder list and for identify encoder (p0400).  
When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.

**p0423[0]****Absolute encoder rotary singleturn resolution**

**Data type:** Unsigned32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Commissioning

**Parameter group:**

Motor encoder

**Unit:** -

**Min:**

0

**Max:**

1073741823

**Factory setting:**

8192

**Description:** Sets the number of measuring steps per revolution for a rotary absolute encoder.  
The resolution refers to the absolute position.

**NOTICE**

This parameter is automatically preset for encoders from the encoder list and for "Encoder type selection" (p0400).  
When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.

<b>r0479[0...2]</b>	<p><b>Diagnostics encoder position actual value Gn_XIST1</b></p> <p><b>Data type:</b> Integer32                      <b>Visible in:</b> Standard display</p> <p><b>Read permission:</b>                      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>                      Edit device configuration or drive applications</p> <p><b>Parameter group:</b>                      Motor encoder</p> <p><b>Unit:</b> -</p>
<b>Description:</b>	Display for the encoder position actual value Gn_XIST1 according to PROFIdrive for diagnostics. The value is displayed with sign.
<b>Index:</b>	[0] = Motor encoder [1] = Reserved [2] = Reserved

<b>p0488[0...2]</b>	<p><b>Measuring probe 1 input terminal</b></p> <p><b>Data type:</b> Integer16                      <b>Visible in:</b> Standard display</p> <p><b>Read permission:</b>                      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>                      Edit device configuration or drive applications</p> <p><b>Can be changed in the operating state:</b>                      Operation</p> <p><b>Parameter group:</b>                      Measuring probe, Traversing blocks</p> <p><b>Unit:</b> -</p> <table border="0" style="width: 100%;"> <tr> <td style="width: 33%;"><b>Min:</b></td> <td style="width: 33%;"><b>Max:</b></td> <td style="width: 33%;"><b>Factory setting:</b></td> </tr> <tr> <td>0</td> <td>210</td> <td>[0] 210 [1] 0 [2] 0</td> </tr> </table>	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>	0	210	[0] 210 [1] 0 [2] 0
<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>					
0	210	[0] 210 [1] 0 [2] 0					
<b>Description:</b>	Sets the input terminal to connect probe 1.						
<b>Value:</b>	0:            No measuring probe 210:        DI 0 (X130.1)						
<b>Index:</b>	[0] = Motor encoder [1] = Reserved [2] = Reserved						
<b>Dependency:</b>	See also: p0489, p0490						

**CAUTION**  
In order to prevent incorrect measurement values, these parameters may not be written during an active measurement.

<b>p0489[0...2]</b>	<p><b>Measuring probe 2 input terminal</b></p> <p><b>Data type:</b> Integer16                      <b>Visible in:</b> Standard display</p> <p><b>Read permission:</b>                      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>                      Edit device configuration or drive applications</p> <p><b>Can be changed in the operating state:</b>                      Operation</p> <p><b>Parameter group:</b>                      Measuring probe, Traversing blocks</p> <p><b>Unit:</b> -</p>
---------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0	211	[0] 211 [1] 0 [2] 0
<b>Description:</b>	Sets the input terminal to connect probe 2.		
<b>Value:</b>	0: No measuring probe 211: DI 1 (X130.2)		
<b>Index:</b>	[0] = Motor encoder [1] = Reserved [2] = Reserved		
<b>Dependency:</b>	See also: p0488, p0490		

**CAUTION**

In order to prevent incorrect measurement values, these parameters may not be written during an active measurement.

**Note**

DI: Digital Input

Refer to the encoder interface for PROFIdrive.

If parameterization is rejected, check whether the terminal is already being used in p2517 or p2518.

**p0490.0...1 Invert measuring probe or equivalent zero mark**

	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Standard display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Can be changed in the operating state:</b>	Operation
	<b>Parameter group:</b>	Measuring probe
	<b>Unit:</b> -	
	<b>Min:</b>	<b>Max:</b>
	-	-
		<b>Factory setting:</b>
		0000 bin
<b>Description:</b>	Setting to invert the digital input signals to connect a measuring probe or an equivalent zero mark.	
<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>
	00	DI 0 (X130.1)
	01	DI 1 (X130.2)
		<b>1 signal</b>
		Inverted
		<b>0 signal</b>
		Not inverted
<b>Dependency:</b>	See also: p0488, p0489, p0494	

**Note**

The terminal must be set as input.

When the measuring probe or the equivalent zero mark is inverted, this has no effect on the status displays of the digital inputs (r0721, r0722).


DI: Digital Input

**p0494[0] Equivalent zero mark input terminal**

	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Can be changed in the operating state:</b>	Operation
	<b>Parameter group:</b>	Motor encoder, Homing
	<b>Unit:</b> -	
	<b>Min:</b>	<b>Max:</b>
	0	211
		<b>Factory setting:</b>
		0



**Description:** Selects the input terminal for connecting an equivalent zero mark (external encoder zero mark).  
**Value:** 0: No equivalent zero mark (evaluation of the encoder zero mark)  
 210: DI 0 (X130.1)  
 211: DI 1 (X130.2)  
**Dependency:** See also: p0490

 **CAUTION**  
 In order to prevent incorrect measurement values, these parameters may not be written during an active measurement.

**Note**  
 Refer to the encoder interface for PROFIdrive.

**p0550[0] Brake version**

<b>Data type:</b> Integer16	<b>Visible in:</b> Extended display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Commissioning	
<b>Parameter group:</b>	Motor holding brake, Quick commissioning	
<b>Unit:</b> -		
<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0	2	0

**Description:** Sets the brake version.  
**Value:** 0: No data  
 1: Holding brake  
 2: High performance holding brake

**NOTICE**  
 After entering a corresponding code number (p0551), this parameter is automatically pre-assigned and write protected. The information in p0551 should be observed when removing write protection.

**Note**  
 For p0550 = 1:  
 The default value for opening time/closing time applies.  
 For p0550 = 2:  
 A shorter opening time/closing time is realized if the power unit supports the function.

**p0551[0] Brake code number**

<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Commissioning	
<b>Parameter group:</b>	Motor holding brake, Quick commissioning	
<b>Unit:</b> -		
<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0	4294967295	1

**Description:** Setting the code number for the brake.  
 0 = No data  
 1 = Manual entry  
 > 1 = valid code number  
 For value = 0:  
 - Parameters listed under Dependent are set to a value of zero and are write protected.  
 - Parameters p1216, p1217 are set to a value of zero.  
 For value = 1:  
 - Write protection for the parameters listed under Dependent is withdrawn.  
 For value > 1:  
 - Parameters listed under Dependent are automatically pre-assigned and are write protected.  
 - Parameters p1216, p1217 are automatically appropriately pre-assigned.

**Dependency:** See also: p0550

---

**Note**  
 Only code numbers can be set that are permitted for the selected motor code (p0301).

---

**p0613[0] Mot\_temp\_mod 1/3 ambient temperature**

**Data type:** FloatingPoint32      **Visible in:** Extended display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Can be changed in the operating state:** Operation  
**Parameter group:** Motor temperature  
**Unit:** °C  
**Min:** -40 [°C]      **Max:** 100 [°C]      **Factory setting:** 20 [°C]

**Description:** If the thermal motor model is activated for permanent-magnet synchronous motors, then the parameter is incorporated in the model calculation if a temperature sensor is not being used.

**Dependency:** See also: F07011, A07012

---

**Note**  
 If the thermal motor model is activated for permanent-magnet synchronous motors, then the parameter is incorporated in the model calculation if a temperature sensor is not being used.

---

**r0721.0...3 CU digital inputs terminal actual value**

**Data type:** Unsigned32      **Visible in:** Standard display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Parameter group:** Digital inputs  
**Unit:** -

**Description:** Displays the actual value at the digital inputs.  
 This means that the actual input signal can be checked at terminal DI x prior to switching from the simulation mode (p0795.x = 1) to the terminal mode (p0795.x = 0).

**Bit array:**

Bit	Signal name	1 signal	0 signal
00	DI 0 (X130.1)	High	Low
01	DI 1 (X130.2)	High	Low
02	DI 2 (X130.3)	High	Low
03	DI 3 (X130.4)	High	Low

---

**Note**  
 DI: Digital Input

---

### r0722.0...3

#### Digital inputs status

**Data type:** Unsigned32      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Digital inputs  
**Unit:** -

**Description:** Display and signal source for the status of the digital inputs.

Bit array:	Bit	Signal name	1 signal	0 signal
	00	DI 0 (X130.1)	High	Low
	01	DI 1 (X130.2)	High	Low
	02	DI 2 (X130.3)	High	Low
	03	DI 3 (X130.4)	High	Low

**Dependency:** See also: p0488, p0489

**Note**  
 DI: Digital Input  
 For bits 00, 01: DI 0 and DI 1 are fast digital inputs and can be used as measuring probe (p0488, p0489).

### c0730

#### Signal for terminal DO 0

**Data type:** Unsigned8      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Relay outputs, Digital outputs  
**Unit:** -

**Description:** Signal for terminal DO 0 (X130.11/12).

**Note**  
 DO: Digital Output

### c0731

#### Signal for terminal DO 1

S200 PN      **Data type:** Unsigned8      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Relay outputs, Digital outputs  
**Unit:** -

**Description:** Signal for terminal DO 1 (X130.13/14).

**Note**  
 DO: Digital Output

### r0747.0

#### Digital outputs status

S200 Basic PN      **Data type:** Unsigned32      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Relay outputs, Digital outputs  
**Unit:** -

**Description:** Displays the status of digital outputs.

Bit array:	Bit	Signal name	1 signal	0 signal
	00	DO 0 (DO+: X130.11 / DO-: X130.12)	High	Low

**Note**  
 DO: Digital Output

**p0747.0...1****Digital outputs status**

S200 PN

**Data type:** Unsigned32**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Relay outputs, Digital outputs

**Unit:** -**Description:**

Displays the status of digital outputs.

**Bit array:**

Bit	Signal name	1 signal	0 signal
00	DO 0 (DO+: X130.11 / DO-: X130.12)	High	Low
01	DO 1 (DO+: X130.13 / DO-: X130.14)	High	Low

**Note**

DO: Digital Output

**p0795.0...3****Digital inputs simulation mode****Data type:** Unsigned32**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation**Parameter group:**

Digital inputs

**Unit:** -**Min:****Max:****Factory setting:**

-

-

0000 bin

**Description:**

Sets the simulation mode for digital inputs.

**Bit array:**

Bit	Signal name	1 signal	0 signal
00	DI 0 (X130.1)	Simulation	Terminal eval
01	DI 1 (X130.2)	Simulation	Terminal eval
02	DI 2 (X130.3)	Simulation	Terminal eval
03	DI 3 (X130.4)	Simulation	Terminal eval

**Dependency:**

The setpoint for the input signals is specified using p0796.

See also: p0796

**Note**

This parameter is not saved when backing up data (p0977).

DI: Digital Input

**p0796.0...3****Digital inputs simulation mode setpoint****Data type:** Unsigned32**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation**Parameter group:**

Digital inputs

**Unit:** -**Min:****Max:****Factory setting:**

-

-

0000 bin

**Description:**

Sets the setpoint for the input signals in the digital input simulation mode.

**Bit array:**

Bit	Signal name	1 signal	0 signal
00	DI 0 (X130.1)	High	Low
01	DI 1 (X130.2)	High	Low

	02	DI 2 (X130.3)	High	Low
	03	DI 3 (X130.4)	High	Low

**Dependency:** The simulation of a digital input is selected using p0795.  
See also: p0795

**Note**

This parameter is not saved when backing up data (p0977).  
DI: Digital Input

**c0849[0] No Quick Stop / Quick Stop (OFF3)**

**Data type:** Unsigned8      **Visible in:** Extended display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Shutdown functions, Drive enable signals  
**Unit:** -

**Description:** Second signal for command "No Quick Stop / Quick Stop (OFF3)"  
The following signals are AND'ed:  
- c0848 "No Quick Stop / Quick Stop (OFF3) signal 1"  
- c0849 "No Quick Stop / Quick Stop (OFF3) signal 2"  
For the PROFIdrive profile, the result of the AND logic operation corresponds to control word 1 bit 2 (STW1.2).  
c0848 = 0 signal or c0849 = 0 signal  
- OFF3 (braking along the OFF3 ramp (p1135), then pulse cancellation and switching on inhibited)  
c0848 = 1 signal or c0849 = 1 signal  
- No OFF3 (enable is possible)

**CAUTION**  
When "master control from PC" is activated, then this binary signal sink is effective.

**Note**

For drives with closed-loop torque control (activated using c1501), the following applies:  
0 signal:  
- No dedicated braking response, but pulse cancellation when standstill is detected (p1226, p1227).

**r0898.0...14 Control word sequence control**

**Data type:** Unsigned16      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Control/status words  
**Unit:** -

**Description:** Display and numerical signal source for the control word of the sequence control.

<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	ON/OFF1	Yes	No
	01	Operating condition / OFF2	Yes	No
	02	Operating condition / OFF3	Yes	No
	03	Enable operation	Yes	No
	04	Enable ramp-function generator	Yes	No
	05	Continue ramp-function generator	Yes	No
	06	Enable speed setpoint	Yes	No
	07	Command open brake	Yes	No
	10	Master control by PLC	Yes	No
	12	Enable speed controller	Yes	No
	14	Command close brake	Yes	No

**Note**

OC: Operating condition

**r0899.0...13****Status word sequence control****Data type:** Unsigned16**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Control/status words

**Unit:** -**Description:**

Display for the status word of the sequence control.

The status word is cyclically sent from the drive to the higher-level control.

**Bit array:**

Bit	Signal name	1 signal	0 signal
00	Ready for switching on	Yes	No
01	Ready	Yes	No
02	Operation enabled	Yes	No
03	Jog active	Yes	No
04	No coasting active	OFF2 inactive	OFF2 active
05	No Quick Stop active	OFF3 inactive	OFF3 active
06	Switching on inhibited active	Yes	No
07	Drive ready	Yes	No
08	Controller enable	Yes	No
09	Control requested	Yes	No
11	Pulses enabled	Yes	No
12	Motor holding brake control	Yes	No
13	Motor holding brake status	Yes	No

**Note**

For bits 00, 01, 02, 04, 05, 06, 09:

For PROFIdrive, these signals are used for status word 1.

For bit 13:

When function "SBC (Safe Brake Control)" is activated and selected, the brake is no longer controlled using this signal.

**r0922****PROFIdrive PZD telegram selection****Data type:** Unsigned16**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Quick commissioning, Configuration

**Unit:** -**Description:**

Displays the PROFIdrive telegram.

**Value:**

1:	Standard telegram 1, PZD-2/2
2:	Standard telegram 2, PZD-4/4
3:	Standard telegram 3, PZD-5/9
5:	Standard telegram 5, PZD-9/9
102:	SIEMENS telegram 102, PZD-6/10
105:	SIEMENS telegram 105, PZD-10/10

**Note**

The telegram is set in the commissioning tool or by the control.

<b>r0922</b>	<b>PROFIdrive PZD telegram selection</b>	
S200 Basic PN (Interpolator für EPOS), S200 PN (Interpolator für EPOS)	<b>Data type:</b> Unsigned16	<b>Visible in:</b> Standard display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Parameter group:</b>	Quick commissioning, Configuration
	<b>Unit:</b> -	
<b>Description:</b>	Displays the PROFIdrive telegram.	
<b>Value:</b>	7: Standard telegram 7, PZD-2/2	
	9: Standard telegram 9, PZD-10/5	
	111: SIEMENS telegram 111, PZD-12/12	
	112: SIEMENS telegram 112, PZD-17/12	
	<b>Note</b>	
	The telegram is set in the commissioning tool or by the control.	

<b>r0924[0...1]</b>	<b>ZSW bit pulses enabled</b>	
	<b>Data type:</b> Unsigned16	<b>Visible in:</b> Extended display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Parameter group:</b>	Configuration
	<b>Unit:</b> -	
<b>Description:</b>	Displays the position of the "Pulses enabled" status signal in the PROFIdrive telegram.	
<b>Index:</b>	[0] = Signal number	
	[1] = Bit position	

<b>p0925</b>	<b>PROFIdrive clock synchronous sign-of-life tolerance</b>		
	<b>Data type:</b> Unsigned16	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Configuration	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0	65535	1
<b>Description:</b>	Sets the number of tolerated consecutive sign-of-life errors of the isochronous controller. The sign-of-life signal is normally received in PZD4 (control word 2) from the controller.		
<b>Dependency:</b>	See also: F01912		
	<b>Note</b>		
	The sign-of-life monitoring is disabled for p0925 = 65535.		

<b>r0930</b>	<b>PROFIdrive operating mode</b>	
	<b>Data type:</b> Unsigned16	<b>Visible in:</b> Extended display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Parameter group:</b>	Configuration
	<b>Unit:</b> -	

**Description:** Displays the operating mode.  
 1: Closed-loop speed controlled operation with ramp-function generator  
 2: Closed-loop position controlled operation  
 3: Closed-loop speed controlled operation without ramp-function generator

---

#### r0944 Counter for fault buffer changes

**Data type:** Unsigned16                      **Visible in:** Extended display  
**Read permission:**                              Read drive data or acknowledge messages  
**Write permission:**                              Edit device configuration or drive applications  
**Parameter group:**                              Faults / alarms  
**Unit:** -

**Description:** Display and numerical signal source for the counter for changes of the fault buffer.  
 This counter is incremented every time the fault buffer changes.

**Recommendation:** Used to check whether the fault buffer has been read out consistently.

**Dependency:** See also: r0945, r0947, r0948, r0949, r2109

---

#### r0945[0...63] Fault code

**Data type:** Unsigned16                      **Visible in:** Extended display  
**Read permission:**                              Read drive data or acknowledge messages  
**Write permission:**                              Edit device configuration or drive applications  
**Parameter group:**                              Faults / alarms  
**Unit:** -

**Description:** Displays the codes of faults that have occurred.

**Dependency:** See also: r0947, r0948, r0949, r2109, r2130, r2133, r2136, r3122

<b>NOTICE</b>
---------------

The properties of the fault buffer should be taken from the corresponding product documentation.
--------------------------------------------------------------------------------------------------



**Note**

The buffer parameters are cyclically updated (states are indicated in r2139).

Fault buffer structure (general principle):

r0945[0], r0949[0] or r2133[0], r2130[0], r0948[0], r2136[0], r2109[0]

--> Fault 1 (oldest active fault) of the active incident

...

r0945[7], r0949[7] or r2133[7], r2130[7], r0948[7], r2136[7], r2109[7]

--> fault 8 (oldest active fault) of the active incident

For more than 8 active faults, only the entries are overwritten at the eighth position (index 7).

History of acknowledged faults:

If a fault incident is acknowledged, then all alarms of the 1st fault incident are transferred into the 2nd fault incident, this becomes the 1st acknowledged fault incident.

The 2nd incident is transferred into the 3rd, the 3rd into the 4th etc. The last incident is rejected.

r0945[8], r0949[8] or r2133[8], r2130[0], r0948[8], r2136[8], r2109[8]

--> fault 1 of the 1st acknowledged incident

...

r0945[16], r0949[16] or r2133[16], r2130[16], r0948[16], r2136[16], r2109[16]

--> fault 1 of the 2nd acknowledged incident

...

r0945[56], r0949[56] or r2133[56], r2130[56], r0948[56], r2136[56], r2109[56]

--> fault 1 of the 7th acknowledged incident

...

r0945[63], r0949[63] or r2133[63], r2130[63], r0948[63], r2136[63], r2109[63]

--> fault 8 (oldest fault that has gone) of the 7th acknowledged incident

**r0947[0...63]**

**Fault number**

**Data type:** Unsigned16

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Faults / alarms

**Unit:** -

**Description:**

Displays the numbers of faults that have occurred.

**Dependency:**

See also: r0945

<b>NOTICE</b>
The properties of the fault buffer should be taken from the corresponding product documentation.

**Note**

The buffer parameters are cyclically updated (states are indicated in r2139).

Fault buffer structure (general principle):

r0945[0], r0949[0] or r2133[0], r2130[0], r0948[0], r2136[0], r2109[0] --> fault 1 (oldest active fault) of the active incident

...

r0945[7], r0949[7] or r2133[7], r2130[7], r0948[7], r2136[7], r2109[7] --> fault 8 (latest active fault) of the active incident

For more than 8 active faults, only the entries are overwritten at the eighth position (index 7).

History of acknowledged faults:

If a fault incident is acknowledged, then all alarms of the 1st fault incident are transferred into the 2nd fault incident, this becomes the 1st acknowledged fault incident.

The 2nd incident is transferred into the 3rd, the 3rd into the 4th etc. The last incident is rejected.

r0945[8], r0949[8] or r2133[8], r2130[0], r0948[8], r2136[8], r2109[8] --> fault 1 of the 1st acknowledged incident

...

r0945[16], r0949[16] or r2133[16], r2130[16], r0948[16], r2136[16], r2109[16] --> fault 1 of the 2nd acknowledged incident

...

r0945[56], r0949[56] or r2133[56], r2130[56], r0948[56], r2136[56], r2109[56] --> fault 1 of the 7th acknowledged incident

...

r0945[63], r0949[63] or r2133[63], r2130[63], r0948[63], r2136[63], r2109[63] --> fault 8 (oldest fault that has gone) of the 7th acknowledged incident

**r0948[0...63]****Fault time received in milliseconds**

**Data type:** Unsigned32

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Faults / alarms

**Unit:** ms

**Description:**

Displays the system runtime in milliseconds when the fault occurred.

**Dependency:**

See also: r0945, r0947, r0949, r2109, r2114, r2130, r2133, r2136, r3122

**NOTICE**

The time comprises r2130 (days) and r0948 (milliseconds).

**Note**

The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

The structure of the fault buffer and the assignment of the indices is shown in r0945.

When the parameter is read via PROFIdrive, the TimeDifference data type applies.

**r0949[0...63]****Fault value**

**Data type:** Integer32

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Faults / alarms

**Unit:** -

**Description:**

Displays additional information about the fault that occurred (as integer number).

**Dependency:**

See also: r0945, r0947, r0948, r2109, r2130, r2133, r2136, r3122

**Note**

The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

The structure of the fault buffer and the assignment of the indices is shown in r0945.

<b>p0952</b>	<b>Fault cases counter</b>		
	<b>Data type:</b> Unsigned16	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Faults / alarms	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0	65535	0
<b>Description:</b>	Number of fault situations that have occurred since the last reset.		
<b>Dependency:</b>	The fault buffer is deleted (cleared) by setting p0952 to 0. In order that faults with "POWER ON" acknowledgment can also be cleared from the fault buffer, POWER ON must first be carried out. See also: r0945, r0947, r0948, r0949, r2109, r2130, r2133, r2136		

<b>r0964[0...6]</b>	<b>Device identification</b>		
	<b>Data type:</b> Unsigned16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	System identification	
	<b>Unit:</b> -		
<b>Description:</b>	Displays the device identification.		
<b>Index:</b>	[0] = Company (Siemens = 42) [1] = Device type [2] = Firmware version [3] = Firmware date (year) [4] = Firmware date (day/month) [5] = Reserved [6] = Firmware patch/hot fix		

**Note**

Example:  
r0964[0] = 42 --> SIEMENS  
r0964[1] = device type, see below  
r0964[2] = 602 --> first part firmware version V06.02 (second part, refer to index 6)  
r0964[3] = 2023 --> year 2023  
r0964[4] = 1706 --> June 17  
r0964[5] = 1 --> 1 (fixed value)  
r0964[6] = 0 --> second part firmware version (complete version: V06.02.00.00)  
Device type:  
r0964[1] = 11200 --> SINAMICS S200 PN  
r0964[1] = 11202 --> SINAMICS S200 PTI  
r0964[1] = 11210 --> SINAMICS S200 Basic PN  
r0964[1] = 11212 --> SINAMICS S200 Basic PTI

<b>r0965</b>	<b>PROFIdrive profile number profile version</b>		
	<b>Data type:</b> Unsigned16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Configuration	
	<b>Unit:</b> -		

**Description:** Displays the PROFIdrive profile number and profile version.  
 Constant value = 032A hex.  
 Byte 1: Profile number = 03 hex = PROFIdrive profile  
 Byte 2: profile version = 2A hex = 42 dec = version 4.2

**Note**

When the parameter is read via PROFIdrive, the Octet String 2 data type applies.

**p0972****Drive unit reset**

**Data type:** Unsigned16      **Visible in:** Extended display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Can be changed in the operating state:** Ready for operation  
**Parameter group:**      Save & reset  
**Unit:** -

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0	3	0

**Description:** Sets the required procedure to execute a hardware reset for the drive unit.

**Value:**

0:	Inactive
1:	Hardware-Reset immediate
2:	Hardware reset preparation
3:	Hardware reset after cyclic communication has failed

** DANGER**

It must be absolutely ensured that the system is in a safe condition.  
 The memory card/device memory of the converter must not be accessed.

**Note**

For value = 1:  
 Reset is immediately executed and communications interrupted.  
 After communications have been established, check the reset operation (refer below).  
 This value cannot be set in operation.

For value = 2:  
 Help to check the reset operation.  
 Firstly, set p0972 = 2 and then read back. Secondly, set p0972 = 1 (it is possible that this request is possibly no longer acknowledged). The communication is then interrupted.  
 After communications have been established, check the reset operation (refer below).

For value = 3:  
 The reset is executed after interrupting cyclic communication. This setting is used to implement a synchronized reset by a control for several drive units.  
 If cyclic communication is not active, then the reset is immediately executed.  
 After communications have been established, check the reset operation (refer below).  
 To check the reset operation:  
 After the drive unit has been restarted and communications have been established, read p0972 and check the following:  
 p0972 = 0 --> the reset was successfully executed.  
 p0972 > 0 --> the reset was not executed.

**r0975[0...10]****Converter identification**

**Data type:** Unsigned16      **Visible in:** Extended display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      System identification  
**Unit:** -

**Description:** Displays the identification of the converter. The drive internally comprises components, device and converter. Both components require their own identification parameters according to PROFIdrive.

**Index:** [0] = Company (Siemens = 42)  
 [1] = Converter type  
 [2] = Firmware version  
 [3] = Firmware date (year)  
 [4] = Firmware date (day/month)  
 [5] = PROFIdrive converter type class  
 [6] = PROFIdrive converter subtype class  
 [7] = Reserved  
 [8] = Reserved  
 [9] = Reserved  
 [10] = Firmware patch/hot fix

**Dependency:** See also: r0964

**Note**

Example:

r0975[0] = 42 --> SIEMENS  
 r0975[1] = 311 --> SERVO converter type  
 r0975[2] = 602 --> first part firmware version V06.02 (second part refer to index 10)  
 r0975[3] = 2023 --> year 2023  
 r0975[4] = 1706 --> 17th of June  
 r0975[5] = 1 --> PROFIdrive type class = 1 (axis)  
 r0975[6] = 8 --> PROFIdrive subtype class = 4 (application class)  
 r0975[7] = 1 --> 1 (fixed value)  
 r0975[8] = 0 (reserved)  
 r0975[9] = 0 (reserved)  
 r0975[10] = 0 --> second part firmware version (complete version: V06.02.00.00)

**p0976**

**Reset all parameters**

**Data type:** Unsigned16                      **Visible in:** Extended display  
**Read permission:**                      Read drive data or acknowledge messages  
**Write permission:**                      Edit device configuration or drive applications  
**Can be changed in the operating state:** Ready for operation  
**Parameter group:**                      Save & reset  
**Unit:** -  
**Min:**                                              **Max:**                                              **Factory setting:**  
 0                                                      1                                                      0

**Description:** Resets all drive system parameters to the factory settings.

**Value:** 0:            Inactive  
 1:            Start to reset all parameters

**NOTICE**  
 Writing to parameters is inhibited during the reset operation.

**p0977****Save all parameters****Data type:** Unsigned16**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation**Parameter group:** Save & reset**Unit:** -**Min:****Max:****Factory setting:**

0

1

0

**Description:**

Retentively saves all parameters of the drive system to the non-volatile memory. When saving, only the adjustable parameters intended to be saved are taken into account.

**Value:**

0: Inactive

1: Save in non-volatile memory - Loaded at POWER ON

**Dependency:**

See also: p0976

**NOTICE**

The converter power supply may only be switched off after saving has been completed (i.e. after saving has started, wait until the parameter again has a value of 0).  
Writing to parameters is inhibited while saving.

**r0979[0...30]****PROFIdrive encoder format****Data type:** Unsigned32**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

System identification, Configuration

**Unit:** -**Description:**

Displays the actual position encoder used according to PROFIdrive.

**Index:**

[0] = Header

[1] = Motor encoder type

[2] = Motor encoder resolution

[3] = Shift factor G1\_XIST1

[4] = Shift factor G1\_XIST2

[5] = Distinguishable revolutions motor encoder

[6...30] = Reserved

**Note**

Information about the individual indices can be taken from the following literature:  
PROFIdrive Profile Drive Technology

**r0980[0...299]****List of existing parameters 1****Data type:** Unsigned16**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

System identification

**Unit:** -**Description:**

Displays the parameters that exist for this drive.

**Note**

Modified parameters are displayed in indices 0 to 298. If an index contains the value 0, then the list ends here. In a long list, index 299 contains the parameter number at which position the list continues.

This list consists solely of the following parameters:

r0980[0...299], r0981[0...299] ... r0989[0...299]

The parameters in this list are not displayed in the parameter lists of the commissioning tool. However, they can be read from a higher-level control system (e.g. PROFIBUS master).

**p1082[0]**

**Maximum speed**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:**

Ready for operation

**Parameter group:**

Motorized potentiometer, Speed limiting, U/f control, Speed controller, Quick commissioning

**Unit:** rpm

**Min:**

0.000 [rpm]

**Max:**

210000.000 [rpm]

**Factory setting:**

1500.000 [rpm]

**Description:**

Sets the maximum motor speed to a value less than or equal to the maximum motor speed (p0322). The set value is valid for both directions of rotation.

**Dependency:**

See also: p0322

**p1083[0]**

**Speed limit in positive direction of rotation**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:**

Operation

**Parameter group:**

Speed limiting, U/f control, Speed controller

**Unit:** rpm

**Min:**

0.000 [rpm]

**Max:**

210000.000 [rpm]

**Factory setting:**

210000.000 [rpm]

**Description:**

Sets the maximum speed for the positive direction.

**p1086[0]**

**Speed limit in negative direction of rotation**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:**

Operation

**Parameter group:**

Speed limiting, U/f control, Speed controller

**Unit:** rpm

**Min:**

-210000.000 [rpm]

**Max:**

0.000 [rpm]

**Factory setting:**

-210000.000 [rpm]

**Description:**

Sets the speed limit for the negative direction.

<b>p1115</b>	<b>Ramp-function generator selection</b>		
	<b>Data type:</b> Integer16	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Ready for operation	
	<b>Parameter group:</b>	Ramp-function generator	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0	1	0
<b>Description:</b>	Sets the ramp-function generator type.		
<b>Value:</b>	0: Basic ramp-function generator		
	1: Extended ramp-function generator		
	<b>Note</b>		
	Another ramp-function generator type can only be selected when the motor is at a standstill.		
<b>p1120[0]</b>	<b>Ramp-function generator ramp-up time</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Ramp-function generator, Quick commissioning	
	<b>Unit:</b> s		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.000 [s]	999999.000 [s]	10.000 [s]
<b>Description:</b>	The ramp-function generator ramps-up the speed setpoint from standstill (setpoint = 0) up to the maximum speed (p1082) in this time.		
<b>Dependency:</b>	See also: p1082		
<b>p1121[0]</b>	<b>OFF1 ramp-down time</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Quick commissioning	
	<b>Unit:</b> s		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.000 [s]	999999.000 [s]	1.000 [s]
<b>Description:</b>	Sets the ramp-down time after an OFF1 command.		
	The value is referred to the maximum speed (p1082).		
	After an OFF1 command, within this time, the speed setpoint is ramped down from the maximum speed (p1082) to standstill.		
<b>Dependency:</b>	See also: p1082		



<b>p1130[0]</b>	<b>Ramp-function generator initial rounding-off time</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Ramp-function generator	
	<b>Unit:</b> s		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.000 [s]	30.000 [s]	0.000 [s]
<b>Description:</b>	Sets the initial rounding-off time for the extended ramp-function generator. The value applies to ramp-up and ramp-down.		
	<b>Note</b> Rounding-off times avoid an abrupt response and prevent damage to the mechanical system.		
<b>p1131[0]</b>	<b>Ramp-function generator final rounding-off time</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Ramp-function generator	
	<b>Unit:</b> s		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.000 [s]	30.000 [s]	0.000 [s]
<b>Description:</b>	Sets the final rounding-off time for the extended ramp generator. The value applies to ramp-up and ramp-down.		
	<b>Note</b> Rounding-off times avoid an abrupt response and prevent damage to the mechanical system.		
<b>p1135[0]</b>	<b>OFF3 ramp-down time</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Ramp-function generator, Shutdown functions, Setpoint addition, Quick commissioning	
	<b>Unit:</b> s		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.000 [s]	600.000 [s]	0.000 [s]
<b>Description:</b>	Sets the ramp-down time from the maximum speed down to zero speed for the OFF3 command.		
	<b>Note</b> This time can be exceeded if the DC link voltage reaches its maximum value.		

---

<b>r1196</b>	<b>DSC position setpoint</b>
<b>Data type:</b> Integer32	<b>Visible in:</b> Standard display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Speed precontrol
<b>Unit:</b> -	
<b>Description:</b>	Display and numerical signal source of the position setpoint of DSC in fine pulses.

**Note**

DSC: Dynamic Servo Control

---

<b>p1215[0]</b>	<b>Motor holding brake configuration</b>
S200 Basic PN	<b>Data type:</b> Integer16
	<b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Can be changed in the operating state:</b> Ready for operation
	<b>Parameter group:</b> Motor holding brake
	<b>Unit:</b> -
	<b>Min:</b> 0
	<b>Max:</b> 3
	<b>Factory setting:</b> 0
<b>Description:</b>	Sets the configuration for the motor holding brake.
<b>Value:</b>	0: No motor holding brake available 3: Motor holding brake like seq control, conn via interconnection
<b>Dependency:</b>	See also: p1216, p1217, p1226, p1227, p1228

**CAUTION**

For the setting p1215 = 0, if a brake is used, it remains closed. If the motor moves, this will destroy the brake.

**NOTICE**

If p1215 was set to 3, then when the pulses are canceled, the brake is closed even if the motor is still rotating. Pulses can be canceled as a result of an OFF2 or "Enable operation" via fieldbus or a fault with OFF2 response.

**Note**

If an external motor holding brake is being used, then p1215 should be set to 3 and r0899.12 should be used as brake control signal.

The parameter can only be set to zero when the pulses are inhibited.

---

<b>p1215[0]</b>	<b>Motor holding brake configuration</b>
S200 PN	<b>Data type:</b> Integer16
	<b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Can be changed in the operating state:</b> Ready for operation
	<b>Parameter group:</b> Motor holding brake
	<b>Unit:</b> -
	<b>Min:</b> 0
	<b>Max:</b> 2
	<b>Factory setting:</b> 0
<b>Description:</b>	Sets the configuration for the motor holding brake. For value 2: This setting allows the motor shaft to be rotated for installation purposes.
<b>Value:</b>	0: No motor holding brake available

- 1: Motor holding brake acc. to sequence control
- 2: Motor holding brake always open

**Dependency:** See also: p1216, p1217, p1226, p1227, p1228

<p><b>⚠ CAUTION</b></p> <p>For the setting p1215 = 0, if a brake is used, it remains closed. If the motor moves, this will destroy the brake. Setting p1215 = 2 is not permissible if the brake is used to hold loads.</p>
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

### p1216[0]

#### Motor holding brake opening time

<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Operation	
<b>Parameter group:</b>	Motor holding brake	
<b>Unit:</b> ms		
<b>Min:</b> 0 [ms]	<b>Max:</b> 10000 [ms]	<b>Factory setting:</b> 100 [ms]

**Description:** Displays the opening time for the motor holding brake. The speed setpoint is kept at 0 for this time. The speed setpoint is then enabled.

**Dependency:** See also: p1215, p1217

### p1217[0]

#### Motor holding brake closing time

<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Operation	
<b>Parameter group:</b>	Motor holding brake	
<b>Unit:</b> ms		
<b>Min:</b> 0 [ms]	<b>Max:</b> 10000 [ms]	<b>Factory setting:</b> 100 [ms]

**Description:** Sets the time to apply the motor holding brake. After OFF1 or OFF3 and the holding brake is controlled (the brake closes), then the drive remains closed-loop controlled for this time stationary with a speed setpoint/velocity setpoint of zero. The pulses are canceled when the time expires.

**Recommendation:** This time should be set longer than the actual closing time of the brake. This ensures that the pulses are only canceled after the brake has closed.

**Dependency:** See also: p1215, p1216

<p><b>NOTICE</b></p> <p>If the selected closing time is too short with respect to the actual closing time of the brake, then the load can sag. If the closing time is selected to be too long with respect to the actual closing time of the brake, the control works against the brake and therefore reduces its lifetime.</p>
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**Note**  
The time is preassigned with the value saved in the motor.

<b>p1226[0]</b>	<b>Threshold for zero speed detection</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Motor holding brake, Shutdown functions	
	<b>Unit:</b> rpm		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.00 [rpm]	210000.00 [rpm]	20.00 [rpm]
<b>Description:</b>	Sets the speed threshold for the standstill identification. Acts on the actual value and setpoint monitoring. When braking with OFF1 or OFF3, when the threshold is undershot, standstill is identified. The following applies when the brake control is activated: When the threshold is undershot, the brake control is started and the system waits for the brake closing time in p1217. The pulses are then canceled. if the brake control is not activated, the following applies: When the threshold is undershot, the pulses are canceled and the drive coasts down.		
<b>Dependency:</b>	See also: p1215, p1216, p1217, p1227		
	<b>NOTICE</b> For reasons relating to the compatibility to earlier firmware versions, a parameter value of zero in indices 1 to 31 is overwritten with the parameter value in index 0 when the Control Unit boots.		
	<b>Note</b> Standstill is identified in the following cases: - The speed actual value falls below the speed threshold in p1226 and the time started after this in p1228 has expired. - The speed setpoint falls below the speed threshold in p1226 and the time started after this in p1227 has expired. The actual value sensing is subject to measuring noise. For this reason, standstill cannot be detected if the speed threshold is too low.		
<b>p1227[0]</b>	<b>Zero speed detection monitoring time</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Motor holding brake, Shutdown functions	
	<b>Unit:</b> s		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.000 [s]	300.000 [s]	4.000 [s]
<b>Description:</b>	Sets the monitoring time for the standstill identification. When braking with OFF1 or OFF3, standstill is identified after the time set here has expired, after the setpoint speed has fallen below p1226. After this, the brake control is started, the system waits for the closing time in p1217 and then the pulses are canceled.		
<b>Dependency:</b>	See also: p1215, p1216, p1217, p1226		

**Note**

Standstill is detected if at least one of the following conditions is satisfied:

- The speed actual value falls below the speed threshold in p1226 and the time started after this in p1228 has expired.
- The speed setpoint falls below the speed threshold in p1226 and the time started after this in p1227 has expired.

For p1227 = 300.000 s the following applies:

Monitoring is deactivated.

For p1227 = 0.000 s, the following applies:

With OFF1 or OFF3 and a ramp-down time = 0, the pulses are immediately canceled and the motor "coasts" down.

**p1228[0]****Pulse cancellation delay time**

**Data type:** FloatingPoint32

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:**

Motor holding brake, Shutdown functions

**Unit:** s

**Min:**

0.000 [s]

**Max:**

299.000 [s]

**Factory setting:**

0.000 [s]

**Description:**

Sets the delay time for pulse cancellation.

After OFF1 or OFF3, the pulses are canceled, if at least one of the following conditions is fulfilled:

- The speed actual value falls below the threshold in p1226 and the time started after this in p1228 has expired.
- The speed setpoint falls below the threshold in p1226 and the time started after this in p1227 has expired.

**Dependency:**

See also: p1226, p1227

**NOTICE**

When the motor holding brake is activated, pulse cancellation is additionally delayed by the brake closing time (p1217).

**r1407.0...28****Status word speed controller**

**Data type:** Unsigned32

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Torque setpoints, U/f control, Torque limiting, Speed actual value filter, Control/status words, Acceleration model, Setpoint addition, Speed precontrol, Speed setpoint filter

**Unit:** -

**Description:**

Displays the status word of the speed controller.

**Bit array:**

Bit	Signal name	1 signal	0 signal
00	Reserved	Yes	No
01	Reserved	Yes	No
02	Torque control active	Yes	No
04	Speed setpoint from DSC	Yes	No
05	Speed controller I component frozen	Yes	No
06	Speed controller I component set	Yes	No
07	Torque limit reached	Yes	No
08	Upper torque limit active	Yes	No
09	Lower torque limit active	Yes	No
11	Speed setpoint limited	Yes	No
13	Encoderless operation due to a fault	Yes	No
19	Reserved	Yes	No

20	Reserved	Yes	No
21	Reserved	Yes	No
22	Reserved	Yes	No
23	Torque-speed precontrol with encoder on	Yes	No
24	Moment of inertia estimator active	Yes	No
25	Load estimate active	Yes	No
26	Moment of inertia estimator stabilized	Yes	No
28	Speed precontrol	For symmetrizing	For setp_filter 2

**Note**

For bit 01, 13:

If, after a fault, the encoder still provides a valid commutation position (p1992.10 = 1), then a switch is not immediately made into encoderless operation. Both bits remain at 0 for this time.

For bit 04:

The following conditions must be fulfilled to set to 1:

- Connector input p1190 and p1191 must be interconnected with a signal source that is not equal to zero.
- OFF1, OFF3 or STOP2 must not be active.
- It is not permissible that the motor data identification is active.
- Master control must not be active.

The following conditions can mean that the DSC function is not active in spite of the fact that the bit is set:

- Isochronous operation is not selected (r2054 not equal to 4).
- The PROFIBUS is not isochronous (r2064[0] not equal to 1).
- DSC is not activated on the control side, therefore KPC = 0 is transferred as value to connector input p1191.

**p1414[0].0...1**

**Speed setpoint filter activation**

**Data type:** Unsigned16

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:** Speed setpoint filter

**Unit:** -

**Min:**

**Max:**

**Factory setting:**

-

-

0000 bin

**Description:** Setting for activating/deactivating the speed setpoint filter.

**Recommendation:** If only one filter is required, filter 1 should be activated and filter 2 deactivated, to avoid excessive processing time.

**Bit array:**

Bit	Signal name	1 signal	0 signal
00	Activate filter 1	Yes	No
01	Activate filter 2	Yes	No

**Dependency:** The individual speed setpoint filters are parameterized from p1415.

**p1415[0]**

**Speed setpoint filter 1 type**

**Data type:** Integer16

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:** Speed setpoint filter

**Unit:** -

**Min:**

**Max:**

**Factory setting:**

0

2

0

**Description:** Sets the type for speed setpoint filter 1.

**Value:** 0: Low pass: PT1  
1: Low pass: PT2  
2: General 2nd order filter

**Dependency:** PT1 low pass: p1416  
PT2 low pass: p1417, p1418  
General filter: p1417 ... p1420

### p1416[0]

#### Speed setpoint filter 1 time constant

**Data type:** FloatingPoint32      **Visible in:** Extended display

**Read permission:** Read drive data or acknowledge messages

**Write permission:** Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:** Speed setpoint filter

**Unit:** ms

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0.00 [ms]	5000.00 [ms]	0.00 [ms]

**Description:** Sets the time constant for the speed setpoint filter 1 (PT1).

**Dependency:** See also: p1414, p1415

**Note**

This parameter is only effective if the filter is set as a PT1 low pass.

### p1417[0]

#### Speed setpoint filter 1 denominator natural frequency

**Data type:** FloatingPoint32      **Visible in:** Extended display

**Read permission:** Read drive data or acknowledge messages

**Write permission:** Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:** Speed setpoint filter

**Unit:** Hz

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0.5 [Hz]	16000.0 [Hz]	2000.0 [Hz]

**Description:** Sets the denominator natural frequency for speed setpoint filter 1 (PT2, general filter).

**Dependency:** See also: p1414, p1415

**Note**

This parameter is only effective if the speed filter is parameterized as a PT2 low pass or as general filter. The filter is only effective if the natural frequency is less than half of the sampling frequency.

### p1418[0]

#### Speed setpoint filter 1 denominator damping

**Data type:** FloatingPoint32      **Visible in:** Extended display

**Read permission:** Read drive data or acknowledge messages

**Write permission:** Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:** Speed setpoint filter

**Unit:** -

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0.001	10.000	0.700

**Description:** Sets the denominator damping for speed setpoint filter 1 (PT2, general filter).

**Dependency:** See also: p1414, p1415

**Note**

This parameter is only effective if the speed filter is parameterized as a PT2 low pass or as general filter.

**p1419[0] Speed setpoint filter 1 numerator natural frequency**

**Data type:** FloatingPoint32

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:** Speed setpoint filter

**Unit:** Hz

**Min:**

0.5 [Hz]

**Max:**

16000.0 [Hz]

**Factory setting:**

2000.0 [Hz]

**Description:** Sets the numerator natural frequency for speed setpoint filter 1 (general filter).

**Dependency:** See also: p1414, p1415

**Note**

This parameter is only effective if the speed filter is set as a general filter.

The filter is only effective if the natural frequency is less than half of the sampling frequency.

**p1420[0] Speed setpoint filter 1 numerator damping**

**Data type:** FloatingPoint32

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:** Speed setpoint filter

**Unit:** -

**Min:**

0.000

**Max:**

10.000

**Factory setting:**

0.700

**Description:** Sets the numerator damping for speed setpoint filter 1 (general filter).

**Dependency:** See also: p1414, p1415

**Note**

This parameter is only effective if the speed filter is set as a general filter.

**p1421[0] Speed setpoint filter 2 type**

**Data type:** Integer16

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:** Speed setpoint filter

**Unit:** -

**Min:**

0

**Max:**

2

**Factory setting:**

0

**Description:** Sets the type for speed setpoint filter 2.

**Value:**

0: Low pass: PT1

1: Low pass: PT2

2: General 2nd order filter



**Dependency:** PT1 low pass: p1422  
PT2 low pass: p1423, p1424  
General filter: p1423 ... p1426

**p1422[0] Speed setpoint filter 2 time constant**

<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Operation	
<b>Parameter group:</b>	Speed setpoint filter	
<b>Unit:</b> ms		
<b>Min:</b> 0.00 [ms]	<b>Max:</b> 5000.00 [ms]	<b>Factory setting:</b> 0.00 [ms]

**Description:** Sets the time constant for the speed setpoint filter 2 (PT1).

**Dependency:** See also: p1414, p1421

**Note**

This parameter is only effective if the speed filter is set as a PT1 low pass.

**p1423[0] Speed setpoint filter 2 denominator natural frequency**

<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Operation	
<b>Parameter group:</b>	Speed setpoint filter	
<b>Unit:</b> Hz		
<b>Min:</b> 0.5 [Hz]	<b>Max:</b> 16000.0 [Hz]	<b>Factory setting:</b> 2000.0 [Hz]

**Description:** Sets the denominator natural frequency for speed setpoint filter 2 (PT2, general filter).

**Dependency:** See also: p1414, p1421

**Note**

This parameter is only effective if the speed filter is parameterized as a PT2 low pass or as general filter.  
The filter is only effective if the natural frequency is less than half of the sampling frequency.

**p1424[0] Speed setpoint filter 2 denominator damping**

<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Operation	
<b>Parameter group:</b>	Speed setpoint filter	
<b>Unit:</b> -		
<b>Min:</b> 0.001	<b>Max:</b> 10.000	<b>Factory setting:</b> 0.700

**Description:** Sets the denominator damping for speed setpoint filter 2 (PT2, general filter).

**Dependency:** See also: p1414, p1421

**Note**

This parameter is only effective if the speed filter is parameterized as a PT2 low pass or as general filter.

---

<b>p1425[0]</b>	<b>Speed setpoint filter 2 numerator natural frequency</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Speed setpoint filter	
	<b>Unit:</b> Hz		
	<b>Min:</b> 0.5 [Hz]	<b>Max:</b> 16000.0 [Hz]	<b>Factory setting:</b> 2000.0 [Hz]
<b>Description:</b>	Sets the numerator natural frequency for speed setpoint filter 2 (general filter).		
<b>Dependency:</b>	See also: p1414, p1421		
	<b>Note</b>		
	This parameter is only effective if the speed filter is set as a general filter.		
	The filter is only effective if the natural frequency is less than half of the sampling frequency.		

---

<b>p1426[0]</b>	<b>Speed setpoint filter 2 numerator damping</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Speed setpoint filter	
	<b>Unit:</b> -		
	<b>Min:</b> 0.000	<b>Max:</b> 10.000	<b>Factory setting:</b> 0.700
<b>Description:</b>	Sets the numerator damping for speed setpoint filter 2 (general filter).		
<b>Dependency:</b>	See also: p1414, p1421		
	<b>Note</b>		
	This parameter is only effective if the speed filter is set as a general filter.		

---

<b>p1433[0]</b>	<b>Speed controller reference model natural frequency</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Speed controller	
	<b>Unit:</b> Hz		
	<b>Min:</b> 0.00 [Hz]	<b>Max:</b> 8000.00 [Hz]	<b>Factory setting:</b> 0.00 [Hz]
<b>Description:</b>	Sets the natural frequency of a PT2 element for the reference model of the speed controller.		
<b>Recommendation:</b>	The reference model is finely set using p1433.		

<b>r1438</b>	<p><b>Speed controller speed setpoint</b></p> <p><b>Data type:</b> FloatingPoint32      <b>Visible in:</b> Standard display</p> <p><b>Read permission:</b>                      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>                      Edit device configuration or drive applications</p> <p><b>Parameter group:</b>                      U/f control, Speed controller</p> <p><b>Unit:</b> rpm</p>
<b>Description:</b>	Displays the speed setpoint after setpoint limiting for the P component of the speed controller.

<b>p1441[0]</b>	<p><b>Actual speed smoothing time</b></p> <p><b>Data type:</b> FloatingPoint32      <b>Visible in:</b> Extended display</p> <p><b>Read permission:</b>                      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>                      Edit device configuration or drive applications</p> <p><b>Can be changed in the operating state:</b> Operation</p> <p><b>Parameter group:</b>                      Speed controller, Speed actual value filter</p> <p><b>Unit:</b> ms</p> <p><b>Min:</b>                                              <b>Max:</b>                                              <b>Factory setting:</b></p> <p>0.00 [ms]                                              50.00 [ms]                                              0.00 [ms]</p>
<b>Description:</b>	Sets the smoothing time constant (PT1) for the speed actual value.
<b>Dependency:</b>	See also: r0063
	<p><b>Note</b></p> <p>The speed actual value should be smoothed for encoders with a low pulse number or for resolvers. After this parameter has been changed, we recommend that the speed controller is adapted and/or the speed controller settings checked Kp (p1460) and Tn (p1462).</p>

<b>p1460[0]</b>	<p><b>Speed controller P gain</b></p> <p><b>Data type:</b> FloatingPoint32      <b>Visible in:</b> Standard display</p> <p><b>Read permission:</b>                      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>                      Edit device configuration or drive applications</p> <p><b>Can be changed in the operating state:</b> Operation</p> <p><b>Parameter group:</b>                      Speed controller</p> <p><b>Unit:</b> Nms/rad</p> <p><b>Min:</b>                                              <b>Max:</b>                                              <b>Factory setting:</b></p> <p>0.0000 [Nms/rad]                                              5e+08 [Nms/rad]                                              0.3000 [Nms/rad]</p>
<b>Description:</b>	Sets the P gain of the speed controller. The drive determines the P gain for One Button Tuning and writes the value to p1460. The value can be changed.
<b>Dependency:</b>	See also: p1462
	<p><b>Note</b></p> <p>The higher the set P gain, the faster and more unstable the control.</p>

---

<b>p1462[0]</b>	<b>Speed controller integral time</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Speed controller	
	<b>Unit:</b> ms		
	<b>Min:</b> 0.00 [ms]	<b>Max:</b> 100000.00 [ms]	<b>Factory setting:</b> 10.00 [ms]
<b>Description:</b>	Sets the integral time for the speed controller		
	The drive determines the integral time for One Button Tuning - and writes the value to p1462.		
<b>Dependency:</b>	See also: p1460		
	<b>Note</b>		
	The shorter the integral time, the faster and more unstable the control.		

---


<b>p1498[0]</b>	<b>Load moment of inertia</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Speed controller	
	<b>Unit:</b> kgm <sup>2</sup>		
	<b>Min:</b> 0.000000 [kgm <sup>2</sup> ]	<b>Max:</b> 100000.000000 [kgm <sup>2</sup> ]	<b>Factory setting:</b> 0.000000 [kgm <sup>2</sup> ]
<b>Description:</b>	Sets the load moment of inertia.		
	The setting is made during commissioning while the One Button Tuning is being performed.		

---

<b>p1520[0]</b>	<b>Torque limit upper</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Torque limiting	
	<b>Unit:</b> Nm		
	<b>Min:</b> -1000000.00 [Nm]	<b>Max:</b> 2e+07 [Nm]	<b>Factory setting:</b> 0.00 [Nm]
<b>Description:</b>	Setting the upper torque limit.		
	This setting is made as part of the basic commissioning.		
<b>Dependency:</b>	See also: p1521, p1532, r1538, r1539		

<b>p1521[0]</b>	<b>Torque limit lower</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Torque limiting	
	<b>Unit:</b> Nm		
	<b>Min:</b> -2e+07 [Nm]	<b>Max:</b> 1000000.00 [Nm]	<b>Factory setting:</b> 0.00 [Nm]
<b>Description:</b>	Sets the lower torque limit This setting is made as part of the basic commissioning.		
<b>Dependency:</b>	See also: p1520, p1532, r1538, r1539		

<b>p1532[0]</b>	<b>Torque limit offset</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Torque limiting	
	<b>Unit:</b> Nm		
	<b>Min:</b> -100000.00 [Nm]	<b>Max:</b> 100000.00 [Nm]	<b>Factory setting:</b> 0.00 [Nm]
<b>Description:</b>	Sets the torque offset for the torque limit. The setting allows electronic weight equalization to be used for vertical axes.		
<b>Recommendation:</b>	The torque offset can also be used for torque precontrol or as integrator setting value for the speed controller.		
<b>Dependency:</b>	See also: p1520, p1521		

 **DANGER**  
If the offset is set higher/lower than the lower/upper torque limit, then the unloaded drive can accelerate up to the maximum speed.

<b>r1538</b>	<b>Upper effective torque limit</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Torque limiting	
	<b>Unit:</b> Nm		
<b>Description:</b>	Displays the currently effective upper torque limit.		

**Note**  
The value in r1538 may not exceed the value in p1520.

<b>r1539</b>	<b>Lower effective torque limit</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Torque limiting	
	<b>Unit:</b> Nm		
<b>Description:</b>	Displays the currently effective lower torque limit.		

**Note**

The value in r1539 may not exceed the value in p1521.

**p1558****Measure/precontrol hanging/suspended axis force due to weight****Data type:** Integer16**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation**Parameter group:**

Motor data identification routine

**Unit:** -**Min:**

-1

**Max:**

1

**Factory setting:**

0

**Description:**

Setting to start/reset the measurement of the force due to weight for a hanging/suspended axis.

The measurement can be started when the pulses are inhibited or the pulses are enabled (p1558 = 1). If it was started when the pulses were inhibited, then it is only executed after the pulses have been enabled.

For the measurement, the torque to hold the axis is determined and entered into p1532.

Further, this value is used internally for the precontrol.

**Value:**

-1: Reset values

0: Inactive

1: Start measurement and activate precontrol

**Dependency:**

The pulse enable is withdrawn at the end of the measurement.

See also: p1532

**Note**

For master control with speed setpoint input from the commissioning tool, the torque precontrol channels are deactivated, so that the weight equalization entered here is not active.

**r1651****Torque setpoint function generator****Data type:** FloatingPoint32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Current setpoint filter

**Unit:** Nm**Description:**

Displays the torque setpoint of the function generator.

**p1656[0].0...3****Activates current setpoint filter****Data type:** Unsigned16**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation**Parameter group:**

Current setpoint filter

**Unit:** -**Min:**

-

**Max:**

-

**Factory setting:**

0001 bin

**Description:**

Setting for activating/de-activating the current setpoint filter.

**Bit array:****Bit** **Signal name**

00 Filter 1

01 Filter 2

**1 signal**

Active

Active

**0 signal**

Inactive

Inactive

	02 Filter 3	Active	Inactive
	03 Filter 4	Active	Inactive

**Dependency:** The individual current setpoint filters are parameterized as of p1657.

**Note**

If not all of the filters are required, then the filters should be used consecutively starting from filter 1.

**p1657[0]**

**Current setpoint filter 1 type**

<b>Data type:</b> Integer16	<b>Visible in:</b> Extended display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Operation	
<b>Parameter group:</b>	Current setpoint filter	
<b>Unit:</b> -		
<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
1	2	1

**Description:** Sets the current setpoint filter 1 as low pass (PT2) or general 2nd-order filter.

**Value:**  
1: PT2 low pass  
2: General 2nd order filter

**Dependency:** The current setpoint filter 1 is activated via p1656.0 and parameterized via p1657 ... p1661.

**Note**

For a general 2nd order filter, by inserting the same natural frequency in both the numerator and in the denominator, i.e. bandstop frequency, a bandstop filter is implemented. If the numerator damping of zero is selected, the bandstop frequency is completely suppressed.

The denominator damping can be determined from the equation for the 3 dB bandwidth:

$$f_{3dB \text{ bandwidth}} = 2 * D_{\text{denominator}} * f_{\text{bandstop frequency}}$$

**p1658[0]**

**Current setpoint filter 1 denominator natural frequency**

<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Operation	
<b>Parameter group:</b>	Current setpoint filter	
<b>Unit:</b> Hz		
<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0.5 [Hz]	16000.0 [Hz]	1999.0 [Hz]

**Description:** Sets the denominator natural frequency for current setpoint filter 1 (PT2, general filter).

**Dependency:** The current setpoint filter 1 is activated via p1656.0 and parameterized via p1657 ... p1661.

**p1659[0]**

**Current setpoint filter 1 denominator damping**

<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Operation	
<b>Parameter group:</b>	Current setpoint filter	
<b>Unit:</b> -		
<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0.001	10.000	0.700

**Description:** Sets the denominator damping for current setpoint filter 1.  
**Dependency:** The current setpoint filter 1 is activated via p1656.0 and parameterized via p1657 ... p1661.

**p1660[0] Current setpoint filter 1 numerator natural frequency**

**Data type:** FloatingPoint32      **Visible in:** Extended display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Can be changed in the operating state:** Operation  
**Parameter group:** Current setpoint filter  
**Unit:** Hz

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0.5 [Hz]	16000.0 [Hz]	1999.0 [Hz]

**Description:** Sets the numerator natural frequency for current setpoint filter 1 (general filter).  
**Dependency:** The current setpoint filter 1 is activated via p1656.0 and parameterized via p1657 ... p1661.

**p1661[0] Current setpoint filter 1 numerator damping**

**Data type:** FloatingPoint32      **Visible in:** Extended display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Can be changed in the operating state:** Operation  
**Parameter group:** Current setpoint filter  
**Unit:** -

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0.000	10.000	0.700

**Description:** Sets the numerator damping for current setpoint filter 1.  
**Dependency:** The current setpoint filter 1 is activated via p1656.0 and parameterized via p1657 ... p1661.

**p1662[0] Current setpoint filter 2 type**

**Data type:** Integer16      **Visible in:** Extended display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Can be changed in the operating state:** Operation  
**Parameter group:** Current setpoint filter  
**Unit:** -

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
1	2	1

**Description:** Sets current setpoint filter 2 as lowpass filter (PT2) or general 2nd order filter.  
**Value:**  
1: PT2 low pass  
2: General 2nd order filter

**Dependency:** Current setpoint filter 2 is activated via p1656.1 and parameterized via p1662 ... p1666.

**Note**

For a general 2nd order filter, by inserting the same natural frequency in both the numerator and in the denominator, i.e. bandstop frequency, a bandstop filter is implemented. If the numerator damping of zero is selected, the bandstop frequency is completely suppressed.

The denominator damping can be determined from the equation for the 3 dB bandwidth:

$$f_{3dB \text{ bandwidth}} = 2 * D_{denominator} * f_{bandstop \text{ frequency}}$$



<b>p1663[0]</b>	<b>Current setpoint filter 2 denominator natural frequency</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Current setpoint filter	
	<b>Unit:</b> Hz		
	<b>Min:</b> 0.5 [Hz]	<b>Max:</b> 16000.0 [Hz]	<b>Factory setting:</b> 1999.0 [Hz]
<b>Description:</b>	Sets the denominator natural frequency for current setpoint filter 2 (PT2, general filter).		
<b>Dependency:</b>	Current setpoint filter 2 is activated via p1656.1 and parameterized via p1662 ... p1666.		

<b>p1664[0]</b>	<b>Current setpoint filter 2 denominator damping</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Current setpoint filter	
	<b>Unit:</b> -		
	<b>Min:</b> 0.001	<b>Max:</b> 10.000	<b>Factory setting:</b> 0.700
<b>Description:</b>	Sets the denominator damping for current setpoint filter 2.		
<b>Dependency:</b>	Current setpoint filter 2 is activated via p1656.1 and parameterized via p1662 ... p1666.		

<b>p1665[0]</b>	<b>Current setpoint filter 2 numerator natural frequency</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Current setpoint filter	
	<b>Unit:</b> Hz		
	<b>Min:</b> 0.5 [Hz]	<b>Max:</b> 16000.0 [Hz]	<b>Factory setting:</b> 1999.0 [Hz]
<b>Description:</b>	Sets the numerator natural frequency for current setpoint filter 2 (general filter).		
<b>Dependency:</b>	Current setpoint filter 2 is activated via p1656.1 and parameterized via p1662 ... p1666.		

<b>p1666[0]</b>	<b>Current setpoint filter 2 numerator damping</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Current setpoint filter	
	<b>Unit:</b> -		
	<b>Min:</b> 0.000	<b>Max:</b> 10.000	<b>Factory setting:</b> 0.700

**Description:** Sets the numerator damping for current setpoint filter 2.  
**Dependency:** Current setpoint filter 2 is activated via p1656.1 and parameterized via p1662 ... p1666.

**p1667[0]****Current setpoint filter 3 type**

**Data type:** Integer16      **Visible in:** Extended display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Can be changed in the operating state:** Operation  
**Parameter group:** Current setpoint filter  
**Unit:** -  
**Min:** 1      **Max:** 2      **Factory setting:** 1

**Description:** Sets current setpoint filter 3 as lowpass filter (PT2) or general 2nd order filter.  
**Value:** 1: PT2 low pass  
 2: General 2nd order filter  
**Dependency:** Current setpoint filter 3 is activated via p1656.2 and parameterized via p1667 ... p1671.

**p1668[0]****Current setpoint filter 3 denominator natural frequency**

**Data type:** FloatingPoint32      **Visible in:** Extended display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Can be changed in the operating state:** Operation  
**Parameter group:** Current setpoint filter  
**Unit:** Hz  
**Min:** 0.5 [Hz]      **Max:** 16000.0 [Hz]      **Factory setting:** 1999.0 [Hz]

**Description:** Sets the denominator natural frequency for current setpoint filter 3 (PT2, general filter).  
**Dependency:** Current setpoint filter 3 is activated via p1656.2 and parameterized via p1667 ... p1671.

**p1669[0]****Current setpoint filter 3 denominator damping**

**Data type:** FloatingPoint32      **Visible in:** Extended display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Can be changed in the operating state:** Operation  
**Parameter group:** Current setpoint filter  
**Unit:** -  
**Min:** 0.001      **Max:** 10.000      **Factory setting:** 0.700

**Description:** Sets the denominator damping for current setpoint filter 3.  
**Dependency:** Current setpoint filter 3 is activated via p1656.2 and parameterized via p1667 ... p1671.

**p1670[0]      Current setpoint filter 3 numerator natural frequency**

**Data type:** FloatingPoint32      **Visible in:** Extended display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Can be changed in the operating state:**      Operation

**Parameter group:**      Current setpoint filter

**Unit:** Hz

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0.5 [Hz]	16000.0 [Hz]	1999.0 [Hz]

**Description:**      Sets the numerator natural frequency for current setpoint filter 3 (general filter).

**Dependency:**      Current setpoint filter 3 is activated via p1656.2 and parameterized via p1667 ... p1671.

**p1671[0]      Current setpoint filter 3 numerator damping**

**Data type:** FloatingPoint32      **Visible in:** Extended display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Can be changed in the operating state:**      Operation

**Parameter group:**      Current setpoint filter

**Unit:** -

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0.000	10.000	0.700

**Description:**      Sets the numerator damping for current setpoint filter 3.

**Dependency:**      Current setpoint filter 3 is activated via p1656.2 and parameterized via p1667 ... p1671.

**p1672[0]      Current setpoint filter 4 type**

**Data type:** Integer16      **Visible in:** Extended display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Can be changed in the operating state:**      Operation

**Parameter group:**      Current setpoint filter

**Unit:** -

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
1	2	1

**Description:**      Sets current setpoint filter 4 as lowpass filter (PT2) or general 2nd order filter.

**Value:**

1:      PT2 low pass

2:      General 2nd order filter

**Dependency:**      Current setpoint filter 4 is activated via p1656.3 and parameterized via p1672 ... p1676.

**p1673[0]      Current setpoint filter 4 denominator natural frequency**

**Data type:** FloatingPoint32      **Visible in:** Extended display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Can be changed in the operating state:**      Operation

**Parameter group:**      Current setpoint filter

**Unit:** Hz

	<b>Min:</b> 0.5 [Hz]	<b>Max:</b> 16000.0 [Hz]	<b>Factory setting:</b> 1999.0 [Hz]
<b>Description:</b>	Sets the denominator natural frequency for current setpoint filter 4 (PT2, general filter).		
<b>Dependency:</b>	Current setpoint filter 4 is activated via p1656.3 and parameterized via p1672 ... p1676.		

---

<b>p1674[0]</b>	<b>Current setpoint filter 4 denominator damping</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Current setpoint filter	
	<b>Unit:</b> -		
	<b>Min:</b> 0.001	<b>Max:</b> 10.000	<b>Factory setting:</b> 0.700
<b>Description:</b>	Sets the denominator damping for current setpoint filter 4.		
<b>Dependency:</b>	Current setpoint filter 4 is activated via p1656.3 and parameterized via p1672 ... p1676.		

---

<b>p1675[0]</b>	<b>Current setpoint filter 4 numerator natural frequency</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Current setpoint filter	
	<b>Unit:</b> Hz		
	<b>Min:</b> 0.5 [Hz]	<b>Max:</b> 16000.0 [Hz]	<b>Factory setting:</b> 1999.0 [Hz]
<b>Description:</b>	Sets the numerator natural frequency for current setpoint filter 4 (general filter).		
<b>Dependency:</b>	Current setpoint filter 4 is activated via p1656.3 and parameterized via p1672 ... p1676.		

---

<b>p1676[0]</b>	<b>Current setpoint filter 4 numerator damping</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Current setpoint filter	
	<b>Unit:</b> -		
	<b>Min:</b> 0.000	<b>Max:</b> 10.000	<b>Factory setting:</b> 0.700
<b>Description:</b>	Sets the numerator damping for current setpoint filter 4.		
<b>Dependency:</b>	Current setpoint filter 4 is activated via p1656.3 and parameterized via p1672 ... p1676.		

<b>p1703[0]</b>	<b>Isq current controller precontrol scaling</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Current controller	
	<b>Unit:</b> %		
	<b>Min:</b> 0.0 [%]	<b>Max:</b> 200.0 [%]	<b>Factory setting:</b> 0.0 [%]
<b>Description:</b>	Sets the scaling of the dynamic current controller precontrol for the torque/force-generating current component Isq.		

<b>p1821[0]</b>	<b>Direction of rotation</b>		
	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Motor data	
	<b>Unit:</b> -		
	<b>Min:</b> 0	<b>Max:</b> 1	<b>Factory setting:</b> 0
<b>Description:</b>	Setting to change the direction of rotation. If the parameter is changed, it reverses the direction of rotation of the motor and the encoder actual value without changing the setpoint.		
<b>Value:</b>	0: Clockwise 1: Counterclockwise		
<b>Dependency:</b>	See also: F07434		

<b>NOTICE</b>
After changing parameter p1821, the direction of rotation is not automatically adapted in the safety area.

<b>p2000</b>	<b>Reference speed</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Ready for operation	
	<b>Parameter group:</b>	Reference variables	
	<b>Unit:</b> rpm		
	<b>Min:</b> 6.00 [rpm]	<b>Max:</b> 210000.00 [rpm]	<b>Factory setting:</b> 3000.00 [rpm]
<b>Description:</b>	Sets the reference quantity for the speed values. All speeds specified as relative values refer to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
<b>Dependency:</b>	See also: p2003		

<b>p2002</b>	<b>Reference current</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Ready for operation	
	<b>Parameter group:</b>	Reference variables	
	<b>Unit:</b> Arms		
	<b>Min:</b> 0.10 [Arms]	<b>Max:</b> 100000.00 [Arms]	<b>Factory setting:</b> 100.00 [Arms]
<b>Description:</b>	Sets the reference quantity for currents. All currents specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
	<b>Note</b> Default value is 2 * p0305 or the motor current limit.		
<b>p2003</b>	<b>Reference torque</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Ready for operation	
	<b>Parameter group:</b>	Reference variables	
	<b>Unit:</b> Nm		
	<b>Min:</b> 0.01 [Nm]	<b>Max:</b> 2e+07 [Nm]	<b>Factory setting:</b> 1.00 [Nm]
<b>Description:</b>	Sets the reference quantity for the torque values. All torques specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
<b>r2043.0...2</b>	<b>PROFIdrive PZD state</b>		
	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Configuration	
	<b>Unit:</b> -		
<b>Description:</b>	Displays the PROFIdrive PZD state.		
<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b> <b>0 signal</b>
	00	Setpoint failure	Yes      No
	01	Isochronous operation active	Yes      No
	02	Fieldbus running	Yes      No
	<b>Note</b> When using the "setpoint failure" signal, the bus can be monitored and an application-specific response triggered when the setpoint fails.		

### r2050[0...21].0...15 PROFIdrive PZD receive word

**Data type:** Unsigned16      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Receive direction  
**Unit:** -

**Description:** Displays the PZD (setpoints) in the word format received from the fieldbus controller.

**Index:** [0] = PZD 1  
[1] = PZD 2  
[2] = PZD 3  
[3] = PZD 4  
[4] = PZD 5  
[5] = PZD 6  
[6] = PZD 7  
[7] = PZD 8  
[8] = PZD 9  
[9] = PZD 10  
[10] = PZD 11  
[11] = PZD 12  
[12] = PZD 13  
[13] = PZD 14  
[14] = PZD 15  
[15] = PZD 16  
[16] = PZD 17  
[17] = PZD 18  
[18] = PZD 19  
[19] = PZD 20  
[20] = PZD 21  
[21] = PZD 22

<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Bit 0	On	Off
	01	Bit 1	On	Off
	02	Bit 2	On	Off
	03	Bit 3	On	Off
	04	Bit 4	On	Off
	05	Bit 5	On	Off
	06	Bit 6	On	Off
	07	Bit 7	On	Off
	08	Bit 8	On	Off
	09	Bit 9	On	Off
	10	Bit 10	On	Off
	11	Bit 11	On	Off
	12	Bit 12	On	Off
	13	Bit 13	On	Off
	14	Bit 14	On	Off
	15	Bit 15	On	Off

**Dependency:** See also: r2060

<b>c2053[0...27]</b>	<b>PROFIdrive PZD send word</b>
	<b>Data type:</b> Unsigned16 <b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Send direction
	<b>Unit:</b> -
<b>Description:</b>	Displays the PZD (actual values) in the word format that are sent to the fieldbus controller.
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18 [18] = PZD 19 [19] = PZD 20 [20] = PZD 21 [21] = PZD 22 [22] = PZD 23 [23] = PZD 24 [24] = PZD 25 [25] = PZD 26 [26] = PZD 27 [27] = PZD 28
<b>Dependency:</b>	See also: c2063

---

<b>r2060[0...20]</b>	<b>PROFIdrive PZD receive double word</b>
	<b>Data type:</b> Integer32 <b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Receive direction
	<b>Unit:</b> -
<b>Description:</b>	Displays the PZD (setpoints) in the double word format received from the fieldbus controller.



**Index:**

- [0] = PZD 1 + 2
- [1] = PZD 2 + 3
- [2] = PZD 3 + 4
- [3] = PZD 4 + 5
- [4] = PZD 5 + 6
- [5] = PZD 6 + 7
- [6] = PZD 7 + 8
- [7] = PZD 8 + 9
- [8] = PZD 9 + 10
- [9] = PZD 10 + 11
- [10] = PZD 11 + 12
- [11] = PZD 12 + 13
- [12] = PZD 13 + 14
- [13] = PZD 14 + 15
- [14] = PZD 15 + 16
- [15] = PZD 16 + 17
- [16] = PZD 17 + 18
- [17] = PZD 18 + 19
- [18] = PZD 19 + 20
- [19] = PZD 20 + 21
- [20] = PZD 21 + 22

**Dependency:** See also: r2050

---

**c2063[0...26]**

**PROFIdrive PZD send double word**

**Data type:** Unsigned32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Send direction

**Unit:** -

**Description:**

Displays the PZD (actual values) in the double word format that are sent to the fieldbus controller.

<b>Index:</b>	[0] = PZD 1 + 2
	[1] = PZD 2 + 3
	[2] = PZD 3 + 4
	[3] = PZD 4 + 5
	[4] = PZD 5 + 6
	[5] = PZD 6 + 7
	[6] = PZD 7 + 8
	[7] = PZD 8 + 9
	[8] = PZD 9 + 10
	[9] = PZD 10 + 11
	[10] = PZD 11 + 12
	[11] = PZD 12 + 13
	[12] = PZD 13 + 14
	[13] = PZD 14 + 15
	[14] = PZD 15 + 16
	[15] = PZD 16 + 17
	[16] = PZD 17 + 18
	[17] = PZD 18 + 19
	[18] = PZD 19 + 20
	[19] = PZD 20 + 21
	[20] = PZD 21 + 22
	[21] = PZD 22 + 23
	[22] = PZD 23 + 24
	[23] = PZD 24 + 25
	[24] = PZD 25 + 26
	[25] = PZD 26 + 27
	[26] = PZD 27 + 28

**Dependency:** See also: c2053

<b>NOTICE</b>
---------------

A maximum of 4 indices of the "trace" function can be used.
-------------------------------------------------------------

---

### c2104[0]      2nd acknowledge faults

<b>Data type:</b> Unsigned8	<b>Visible in:</b> Extended display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Faults / alarms
<b>Unit:</b> -	

**Description:** Signal 2 to acknowledge faults.

---

**Note**

A fault acknowledgment is triggered with a 0/1 signal.

---



---

### c2106[0]      External fault 1

<b>Data type:</b> Unsigned8	<b>Visible in:</b> Extended display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Faults / alarms
<b>Unit:</b> -	

**Description:** Signal for external fault 1.

**Dependency:** See also: F07860

**Note**

An external fault is initiated with a 1->0 edge.  
If this fault is initiated at the Control Unit, then it is transferred to all of the drive objects available.

**r2109[0...63]**

**Fault time removed in milliseconds**

**Data type:** Unsigned32                      **Visible in:** Extended display  
**Read permission:**                              Read drive data or acknowledge messages  
**Write permission:**                              Edit device configuration or drive applications  
**Parameter group:**                              Faults / alarms  
**Unit:** ms

**Description:** Displays the system runtime in milliseconds when the fault was removed.

**Dependency:** See also: r0945, r0947, r0948, r0949, r2114, r2130, r2133, r2136, r3122

<b>NOTICE</b>
The time comprises r2136 (days) and r2109 (milliseconds).

**Note**

The buffer parameters are cyclically updated in the background (refer to status signal in r2139).  
The structure of the fault buffer and the assignment of the indices is shown in r0945.

**r2111**

**Alarm counter**

**Data type:** Unsigned16                      **Visible in:** Extended display  
**Read permission:**                              Read drive data or acknowledge messages  
**Write permission:**                              Edit device configuration or drive applications  
**Parameter group:**                              Faults / alarms  
**Unit:** -

**Description:** Number of alarms that have occurred.

**Dependency:** See also: r2122, r2123, r2124, r2125

**Note**

The parameter is reset to 0 at POWER ON.

**r2114[0...1]**

**System runtime total**

**Data type:** Unsigned32                      **Visible in:** Standard display  
**Read permission:**                              Read drive data or acknowledge messages  
**Write permission:**                              Edit device configuration or drive applications  
**Parameter group:**                              Diagnostics general  
**Unit:** -

**Description:** Displays the total system runtime of the converter.  
The time comprises r2114[0] (milliseconds) and r2114[1] (days).  
After r2114[0] has reached a value of 86.400.000 ms (24 hours) this value is reset and r2114[1] is incremented.

**Index:** [0] = Milliseconds  
[1] = Days

**Note**

The counter values are saved when the power supply is switched off.  
After the converter is switched on, the counter continues to run with the last value that was saved.

---

<b>r2121</b>	<b>Counter alarm buffer changes</b>
<b>Data type:</b> Unsigned16	<b>Visible in:</b> Extended display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Faults / alarms
<b>Unit:</b> -	
<b>Description:</b>	This counter is incremented every time the alarm buffer changes.
<b>Dependency:</b>	See also: r2122, r2123, r2124, r2125

---

<b>r2122[0...63]</b>	<b>Alarm number</b>
<b>Data type:</b> Unsigned16	<b>Visible in:</b> Extended display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Faults / alarms
<b>Unit:</b> -	
<b>Description:</b>	Displays the numbers of the last 64 alarms.
<b>Dependency:</b>	See also: r2123, r2124, r2125, r2134, r2145, r2146, r3123

**NOTICE**

The properties of the alarm buffer should be taken from the corresponding product documentation.

**Note**

The buffer parameters are cyclically updated in the background.

Alarm buffer structure (general principle):

Currently active alarms (not gone):

r2122[0], r2124[0], r2123[0], r2125[0] --> alarm 1 (the oldest)

...

r2122[7], r2124[7], r2123[7], r2125[7] --> Alarm 8 (the latest)

History of alarms that have gone:

r2122[8], r2124[8], r2123[8], r2125[8] --> Alarm 1 (the latest)

...

r2122[63], r2124[63], r2123[63], r2125[63] --> alarm 56 (the oldest)

---

<b>r2123[0...63]</b>	<b>Alarm time received in milliseconds</b>
<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Faults / alarms
<b>Unit:</b> ms	
<b>Description:</b>	Displays the system runtime in milliseconds when the alarm occurred.
<b>Dependency:</b>	See also: r2114, r2122, r2124, r2125, r2134, r2145, r2146, r3123

**NOTICE**

The time comprises r2145 (days) and r2123 (milliseconds).

**Note**

The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

The structure of the alarm buffer and the assignment of the indices is shown in r2122.

---

<b>r2124[0...63]</b>	<b>Alarm value</b>									
	<table border="0"> <tr> <td><b>Data type:</b> Integer32</td> <td><b>Visible in:</b> Extended display</td> </tr> <tr> <td><b>Read permission:</b></td> <td>Read drive data or acknowledge messages</td> </tr> <tr> <td><b>Write permission:</b></td> <td>Edit device configuration or drive applications</td> </tr> <tr> <td><b>Parameter group:</b></td> <td>Faults / alarms</td> </tr> <tr> <td><b>Unit:</b> -</td> <td></td> </tr> </table>	<b>Data type:</b> Integer32	<b>Visible in:</b> Extended display	<b>Read permission:</b>	Read drive data or acknowledge messages	<b>Write permission:</b>	Edit device configuration or drive applications	<b>Parameter group:</b>	Faults / alarms	<b>Unit:</b> -
<b>Data type:</b> Integer32	<b>Visible in:</b> Extended display									
<b>Read permission:</b>	Read drive data or acknowledge messages									
<b>Write permission:</b>	Edit device configuration or drive applications									
<b>Parameter group:</b>	Faults / alarms									
<b>Unit:</b> -										
<b>Description:</b>	Displays additional information about the active alarm (as integer number).									
<b>Dependency:</b>	See also: r2122, r2123, r2125, r2134, r2145, r2146, r3123									
	<b>Note</b> The buffer parameters are cyclically updated in the background (refer to status signal in r2139). The structure of the alarm buffer and the assignment of the indices is shown in r2122.									

<b>r2125[0...63]</b>	<b>Alarm time removed in milliseconds</b>									
	<table border="0"> <tr> <td><b>Data type:</b> Unsigned32</td> <td><b>Visible in:</b> Extended display</td> </tr> <tr> <td><b>Read permission:</b></td> <td>Read drive data or acknowledge messages</td> </tr> <tr> <td><b>Write permission:</b></td> <td>Edit device configuration or drive applications</td> </tr> <tr> <td><b>Parameter group:</b></td> <td>Faults / alarms</td> </tr> <tr> <td><b>Unit:</b> ms</td> <td></td> </tr> </table>	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	<b>Read permission:</b>	Read drive data or acknowledge messages	<b>Write permission:</b>	Edit device configuration or drive applications	<b>Parameter group:</b>	Faults / alarms	<b>Unit:</b> ms
<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display									
<b>Read permission:</b>	Read drive data or acknowledge messages									
<b>Write permission:</b>	Edit device configuration or drive applications									
<b>Parameter group:</b>	Faults / alarms									
<b>Unit:</b> ms										
<b>Description:</b>	Displays the system runtime in milliseconds when the alarm was removed.									
<b>Dependency:</b>	See also: r2114, r2122, r2123, r2124, r2134, r2145, r2146, r3123									
	<b>NOTICE</b> The time comprises r2146 (days) and r2125 (milliseconds).									
	<b>Note</b> The buffer parameters are cyclically updated in the background (refer to status signal in r2139). The structure of the alarm buffer and the assignment of the indices is shown in r2122.									

<b>r2130[0...63]</b>	<b>Fault time received in days</b>									
	<table border="0"> <tr> <td><b>Data type:</b> Unsigned16</td> <td><b>Visible in:</b> Extended display</td> </tr> <tr> <td><b>Read permission:</b></td> <td>Read drive data or acknowledge messages</td> </tr> <tr> <td><b>Write permission:</b></td> <td>Edit device configuration or drive applications</td> </tr> <tr> <td><b>Parameter group:</b></td> <td>Faults / alarms</td> </tr> <tr> <td><b>Unit:</b> -</td> <td></td> </tr> </table>	<b>Data type:</b> Unsigned16	<b>Visible in:</b> Extended display	<b>Read permission:</b>	Read drive data or acknowledge messages	<b>Write permission:</b>	Edit device configuration or drive applications	<b>Parameter group:</b>	Faults / alarms	<b>Unit:</b> -
<b>Data type:</b> Unsigned16	<b>Visible in:</b> Extended display									
<b>Read permission:</b>	Read drive data or acknowledge messages									
<b>Write permission:</b>	Edit device configuration or drive applications									
<b>Parameter group:</b>	Faults / alarms									
<b>Unit:</b> -										
<b>Description:</b>	Displays the system runtime in days when the fault occurred.									
<b>Dependency:</b>	See also: r0945, r0947, r0948, r0949, r2109, r2114, r2133, r2136, r3122									
	<b>NOTICE</b> The time comprises r2130 (days) and r0948 (milliseconds).									
	<b>Note</b> The buffer parameters are cyclically updated in the background (refer to status signal in r2139).									

<b>r2131</b>	<b>Actual fault code</b>									
	<table border="0"> <tr> <td><b>Data type:</b> Unsigned16</td> <td><b>Visible in:</b> Standard display</td> </tr> <tr> <td><b>Read permission:</b></td> <td>Read drive data or acknowledge messages</td> </tr> <tr> <td><b>Write permission:</b></td> <td>Edit device configuration or drive applications</td> </tr> <tr> <td><b>Parameter group:</b></td> <td>Faults / alarms</td> </tr> <tr> <td><b>Unit:</b> -</td> <td></td> </tr> </table>	<b>Data type:</b> Unsigned16	<b>Visible in:</b> Standard display	<b>Read permission:</b>	Read drive data or acknowledge messages	<b>Write permission:</b>	Edit device configuration or drive applications	<b>Parameter group:</b>	Faults / alarms	<b>Unit:</b> -
<b>Data type:</b> Unsigned16	<b>Visible in:</b> Standard display									
<b>Read permission:</b>	Read drive data or acknowledge messages									
<b>Write permission:</b>	Edit device configuration or drive applications									
<b>Parameter group:</b>	Faults / alarms									
<b>Unit:</b> -										
<b>Description:</b>	Displays the code of the oldest active fault.									

**Note**

0: No fault present.

**r2132****Actual alarm code****Data type:** Unsigned16**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Faults / alarms

**Unit:** -**Description:**

Displays the code of the last alarm that occurred.

**Note**

0: No alarm present.

**r2133[0...63]****Fault value for float values****Data type:** FloatingPoint32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Faults / alarms

**Unit:** -**Description:**

Displays additional information about the fault that occurred for float values.

**Dependency:**

See also: r0945, r0947, r0948, r0949, r2109, r2130, r2136

**Note**

The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

**r2134[0...63]****Alarm value for float values****Data type:** FloatingPoint32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Faults / alarms

**Unit:** -**Description:**

Displays additional information about the active alarm for float values.

**Dependency:**

See also: r2122, r2123, r2124, r2125, r2145, r2146, r3123

**Note**

The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

**r2136[0...63]****Fault time removed in days****Data type:** Unsigned16**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Faults / alarms

**Unit:** -**Description:**

Displays the system runtime in days when the fault was removed.

**Dependency:**

See also: r0945, r0947, r0948, r0949, r2109, r2114, r2130, r2133, r3122

**NOTICE**

The time comprises r2136 (days) and r2109 (milliseconds).

**Note**

The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

**r2139.0...15**

**Status word faults/alarms 1**

**Data type:** Unsigned16      **Visible in:** Extended display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Faults / alarms  
**Unit:** -

**Description:** Displays status word 1 of faults and alarms.

Bit array:	Bit	Signal name	1 signal	0 signal
	00	Being acknowledged	Yes	No
	01	Acknowledgment required	Yes	No
	03	Fault present	Yes	No
	05	Safety message present	Yes	No
	07	Alarm present	Yes	No
	11	Alarm class bit 0	High	Low
	12	Alarm class bit 1	High	Low
	13	Maintenance required	Yes	No
	14	Maintenance urgently required	Yes	No
	15	Fault gone/can be acknowledged	Yes	No

**Note**

For bit 03, 05, 07:

These bits are set if at least one fault/alarm or safety message occurs. The entry in the fault/alarm buffer or safety message buffer is delayed. This is the reason that the fault/alarm buffer or safety message buffer should only be read if, after "Fault active", "Alarm active" or "Safety message active" occurs, a change is also identified in the buffer (r0944, r2121, r60044).

For bits 11, 12:

These status bits are used for the classification of internal alarm classes and are intended for diagnostic purposes only on certain automation systems with integrated SINAMICS functionality.

**r2145[0...63]**

**Alarm time received in days**

**Data type:** Unsigned16      **Visible in:** Extended display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Faults / alarms  
**Unit:** -

**Description:** Displays the system runtime in days when the alarm occurred.

**Dependency:** See also: r2114, r2122, r2123, r2124, r2125, r2134, r2146, r3123

<b>NOTICE</b>
The time comprises r2145 (days) and r2123 (milliseconds).

**Note**

The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

**r2146[0...63]**

**Alarm time cleared in days**

**Data type:** Unsigned16      **Visible in:** Extended display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Faults / alarms  
**Unit:** -

**Description:** Displays the system runtime in days when the alarm was cleared.

**Dependency:** See also: r2114, r2122, r2123, r2124, r2125, r2134, r2145, r3123

<b>NOTICE</b>
The time comprises r2146 (days) and r2125 (milliseconds).

**Note**

The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

**p2149[0].16****Monitoring configuration****Data type:** Unsigned32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation**Parameter group:**

Speed messages, Load torque monitoring

**Unit:** -**Min:****Max:****Factory setting:**

-

-

0000 0000 0000 0001 0000 0000 0000  
0000 bin**Description:**

Sets the configuration for messages and monitoring functions.

**Bit array:**

Bit	Signal name	1 signal	0 signal
16	Line voltage failure detection	Yes	No

**Note**

For bit 16:

When the bit is set, the line voltage failure detection function is activated

**p2153[0]****Speed actual value filter time constant****Data type:** FloatingPoint32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation**Parameter group:**

Speed messages

**Unit:** ms**Min:****Max:****Factory setting:**

0 [ms]

1000000 [ms]

0 [ms]

**Description:**

Sets the time constant of the PT1 element to smooth the speed / velocity actual value.

The smoothed actual speed/velocity is compared with the threshold values and is only used for messages and signals.

**p2161[0]****Speed threshold 3****Data type:** FloatingPoint32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation**Parameter group:**

Speed messages

**Unit:** rpm**Min:****Max:****Factory setting:**

0.00 [rpm]

210000.00 [rpm]

5.00 [rpm]

**Description:**

Sets the speed threshold value for signal "|n\_act| &lt; speed threshold 3".

**Dependency:**

See also: r2199



**p2162[0]**      **Hysteresis speed  $n_{act} > n_{max}$**

**Data type:** FloatingPoint32      **Visible in:** Extended display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Can be changed in the operating state:**      Operation

**Parameter group:**      Speed messages

**Unit:** rpm

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0.00 [rpm]	60000.00 [rpm]	0.00 [rpm]

**Description:**      Sets the hysteresis speed (bandwidth) for signal " $n_{act} > n_{max}$ ".

**NOTICE**

For  $p0322 = 0$ , the following applies:  $p2162 \leq 0.1 * p0311$   
 For  $p0322 > 0$ , the following applies:  $p2162 \leq 1.02 * p0322 - p1082$   
 If one of the conditions is violated, p2162 is appropriately and automatically reduced when exiting the commissioning mode.

**Note**

For a negative speed limit, the hysteresis is effective below the limit value and for a positive speed limit, above the limit value.

If significant overshoot occurs in the maximum speed range (e.g. due to load shedding), you are advised to increase the dynamic response of the speed controller (if possible). If this is insufficient, the hysteresis p2162 can only be increased by more than 10% of the rated speed when the maximum speed (p0322) of the motor is sufficiently greater than the speed limit p1082.

**p2175[0]**      **Motor blocked speed threshold**

**Data type:** FloatingPoint32      **Visible in:** Extended display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Can be changed in the operating state:**      Operation

**Parameter group:**      Speed messages

**Unit:** rpm

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0.00 [rpm]	210000.00 [rpm]	120.00 [rpm]

**Description:**      Sets the speed threshold for message "Motor blocked".  
Monitoring is deactivated with  $p2175 = 0$ .

**Dependency:**      See also: p2177  
See also: F07900

**Note**

If the motor speed is less than the threshold value set in p2175 - and the motor is operated for longer than 200 ms at the torque limit - then the motor is shut down and a fault is output.

**p2177[0]**      **Motor blocked delay time**

**Data type:** FloatingPoint32      **Visible in:** Extended display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Can be changed in the operating state:**      Operation

**Parameter group:**      Speed messages

**Unit:** s

	<b>Min:</b> 0.000 [s]	<b>Max:</b> 65.000 [s]	<b>Factory setting:</b> 1.000 [s]
<b>Description:</b>	Sets the delay time for the message "Motor blocked".		
<b>Dependency:</b>	See also: p2175 See also: F07900		

**r2199.0...11****Status word monitoring 3**

<b>Data type:</b>	Unsigned16	<b>Visible in:</b>	Extended display
<b>Read permission:</b>			Read drive data or acknowledge messages
<b>Write permission:</b>			Edit device configuration or drive applications
<b>Parameter group:</b>			Speed messages, Control/status words

**Unit:** -

**Description:** Displays the third status word of the monitoring functions.

<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	n_act  < p2161	Yes	No
	01	f or n comparison value reached or exceeded	Yes	No
	04	Speed setpoint - actual value deviation in tolerance t_on	Yes	No
	05	Ramp-up/ramp-down completed	Yes	No
	11	Torque utilization < torque threshold value 2	Yes	No

**Note**

For bit 00:

The speed threshold 3 is set in p2161.

For bit 01:

The comparison value is set in p2141. We recommend setting the hysteresis (p2142) for canceling the bit to a value lower than that in p2141. Otherwise, the bit is not reset.

For bit 11:

The torque threshold value 2 is set in p2194.

**p2496****LR dimension system physical length units**

<b>Data type:</b>	Integer16	<b>Visible in:</b>	Standard display
<b>Read permission:</b>			Read drive data or acknowledge messages
<b>Write permission:</b>			Edit device configuration or drive applications
<b>Can be changed in the operating state:</b>			Commissioning
<b>Parameter group:</b>			Position control

**Unit:** -

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0	8	3

**Description:** Sets the physical length units.

<b>Value:</b>	0:	LU (no dimension)
	1:	km
	2:	m
	3:	mm
	4:	µm
	5:	nm
	6:	in
	7:	ft
	8:	mi

**Note**

This parameter is only of significance for visualization (e.g. using the commissioning tool). Internally in the drive, the neutral length unit (LU) without dimensions is used for calculations.

**p2496**

**LR dimension system physical length units**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Commissioning	
<b>Parameter group:</b>	Position control	
<b>Unit:</b> -		
<b>Min:</b> 0	<b>Max:</b> 10	<b>Factory setting:</b> 10

**Description:** Sets the physical length units.

**Value:**  
0: LU (no dimension)  
10: °

**Note**

This parameter is only of significance for visualization (e.g. using the commissioning tool). Internally in the drive, the neutral length unit (LU) without dimensions is used for calculations.

**p2497**

**LR dimension system physical velocity**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Commissioning	
<b>Parameter group:</b>	Position control, Mechanics	
<b>Unit:</b> -		
<b>Min:</b> 0	<b>Max:</b> 15	<b>Factory setting:</b> 8

**Description:** Sets the physical unit for the velocities.

**Value:**  
0: 1000LU/min (no dimension)  
1: km/h  
2: km/min  
3: m/h  
4: m/min  
5: m/s  
6: mm/h  
7: mm/min  
8: mm/s  
11: in/min  
12: in/s  
13: ft/min  
14: ft/s  
15: mi/h

---

<b>p2497</b>	<b>LR dimension system physical velocity</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Position control, Mechanics	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0	18	18
<b>Description:</b>	Sets the physical unit for the velocities.		
<b>Value:</b>	0: 1000LU/min (no dimension)		
	18: °/s		

---

<b>p2498</b>	<b>LR dimension system physical acceleration</b>		
	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Position control, Mechanics	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0	11	7
<b>Description:</b>	Sets the physical unit for the accelerations.		
<b>Value:</b>	0: 1000LU/s <sup>2</sup> (no dimension)		
	6: m/s <sup>2</sup>		
	7: mm/s <sup>2</sup>		
	10: in/s <sup>2</sup>		
	11: ft/s <sup>2</sup>		

---

<b>p2498</b>	<b>LR dimension system physical acceleration</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Position control, Mechanics	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0	18	18
<b>Description:</b>	Sets the physical unit for the accelerations.		
<b>Value:</b>	0: 1000LU/s <sup>2</sup> (no dimension)		
	18: °/s <sup>2</sup>		

<b>p2499</b>	<b>LR dimension system physical jerk</b>		
	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Position control, Mechanics	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0	11	7
<b>Description:</b>	Sets the physical unit für jerk.		
<b>Value:</b>	0: 1000LU/s <sup>3</sup> (no dimension)		
	7: mm/s <sup>3</sup>		
	10: in/s <sup>3</sup>		
	11: ft/s <sup>3</sup>		

<b>p2499</b>	<b>LR dimension system physical jerk</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Position control, Mechanics	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0	18	18
<b>Description:</b>	Sets the physical unit für jerk.		
<b>Value:</b>	0: 1000LU/s <sup>3</sup> (no dimension)		
	18: °/s <sup>3</sup>		

<b>p2502[0]</b>	<b>LR encoder assignment</b>		
	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Mechanics, Actual position value preprocessing	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0	1	1
<b>Description:</b>	Setting to assign the encoder. The actual value preprocessing and the closed-loop position control are carried out using the assigned encoder.		
<b>Value:</b>	0: No encoder		
	1: Motor encoder		

**NOTICE**

For the setting p2502 = 0 (no encoder), closed-loop position control is not possible. This setting is only practical as supportive measure to implement encoderless closed-loop speed control (e.g. if the motor encoder is defective).

**Note**

An encoder data set must be assigned to the assigned encoder (p2502 = 1, 2, 3).

---

<b>p2503[0]</b>	<b>LR length unit MU per 10 mm</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Position control	
	<b>Unit:</b> mm		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.000001 [mm]	2.1474837e+09 [mm]	10.000000 [mm]
<b>Description:</b>	Sets the length unit MU per 10 mm set by the user. For a linear scale, this establishes a reference between the physical arrangement and the neutral length units LU used in the drive. Example, linear scale: p2503 = 10000 means: 10 mm should be resolved to $\mu\text{m}$ (this means that 1 LU = 1 $\mu\text{m}$ ).		
	<b>Note</b> When selecting a physical length unit, the drive automatically preassigns the parameter and it cannot be changed. The assignment to the grid spacing can be achieved using this for a rotary axis with linear encoder. MU: measurement unit		

---

<b>p2503[0]</b>	<b>LR length unit MU per 10 mm</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Position control	
	<b>Unit:</b> °		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.000001 [°]	2.1474837e+09 [°]	10.000000 [°]
<b>Description:</b>	Sets the length unit MU per 10 mm set by the user. For a linear scale, this establishes a reference between the physical arrangement and the neutral length units LU used in the drive. Example, linear scale: p2503 = 10000 means: 10 mm should be resolved to $\mu\text{m}$ (this means that 1 LU = 1 $\mu\text{m}$ ).		
	<b>Note</b> When selecting a physical length unit, the drive automatically preassigns the parameter and it cannot be changed. The assignment to the grid spacing can be achieved using this for a rotary axis with linear encoder. MU: measurement unit		

---

<b>p2504[0]</b>	<b>LR motor/load motor revolutions</b>		
	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Position control, Mechanics	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	1	1048576	1

**Description:** Sets the motor revolutions for the gearbox factor between the motor shaft and load shaft.  
Gearbox factor = motor revolutions (p2504) / load revolutions (p2505)

**Dependency:** See also: p2505

**p2505[0] LR motor/load load revolutions**

**Data type:** Integer32      **Visible in:** Standard display

**Read permission:** Read drive data or acknowledge messages

**Write permission:** Edit device configuration or drive applications

**Can be changed in the operating state:** Commissioning

**Parameter group:** Position control, Mechanics

**Unit:** -

**Min:** -1048576      **Max:** 1048576      **Factory setting:** 1

**Description:** Sets the load revolutions for the gearbox factor between the motor shaft and load shaft.  
Gearbox factor = motor revolutions (p2504) / load revolutions (p2505)

**Dependency:** See also: p2504

**p2506[0] LR length unit MU per load distance**

**Data type:** FloatingPoint32      **Visible in:** Extended display

**Read permission:** Read drive data or acknowledge messages

**Write permission:** Edit device configuration or drive applications

**Can be changed in the operating state:** Commissioning

**Parameter group:** Position control, Mechanics

**Unit:** mm

**Min:** 0.000001 [mm]      **Max:** 2.1474837e+09 [mm]      **Factory setting:** 10.000000 [mm]

**Description:** Sets the length unit MU per load distance set by the user.  
For a rotary encoder, this establishes a reference between the actual physical situation and the user-specific length unit MU.  
Example:  
Rotary encoder, ballscrew with 10 mm/revolution, 10 mm should be broken down to units of  $\mu\text{m}$ .  
Length unit LU (p2496 = 0)  
--> One load distance corresponds to 10000 LU (i.e. 1 LU = 1  $\mu\text{m}$ )  
--> p2506 = 10000

Physical unit  $\mu\text{m}$  (2496) = 4  
--> One load distance corresponds to 10000  $\mu\text{m}$   
--> p2506 = 10000

**Dependency:** See also: p2496

**p2506[0] LR length unit MU per load revolution**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32      **Visible in:** Extended display

**Read permission:** Read drive data or acknowledge messages

**Write permission:** Edit device configuration or drive applications

**Can be changed in the operating state:** Commissioning

**Parameter group:** Position control, Mechanics

**Unit:** °

	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.000001 [°]	2.1474837e+09 [°]	360.000000 [°]
<b>Description:</b>	Sets the rotary unit MU per load revolution set by the user. For a rotary encoder, this establishes a reference between the physical arrangement and the user-specific rotating unit MU. Example: Rotating unit LU (p2496 = 0) Rotary encoder, 1 revolution should be broken down into mdegrees, (i.e. 1 LU = 1 mdegrees). --> One load revolution corresponds to 360000 LU --> p2506 = 360000		
<b>Dependency:</b>	See also: p2496		
<b>Note</b> When selecting a physical length unit, the drive automatically preassigns the parameter and it cannot be changed.			

**p2507[0]****LR absolute encoder adjustment status**

	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Position control	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0	3	1
<b>Description:</b>	Activates the adjustment and display of the status of the adjustment for absolute encoders. For p2507 = 2: This initiates encoder adjustment. The status is displayed using the other values.		
<b>Value:</b>	0: Error occurred while adjusting 1: Absolute encoder not adjusted 2: Absolute encoder not adjusted and encoder adjustment initiated 3: Absolute encoder adjusted		
<b>Dependency:</b>	See also: c2598, p2599, c11500		

**⚠ CAUTION**

For rotating absolute encoders, when adjusting, a range is set up symmetrically around zero with half of the encoder range, within which the position must be re-established after switch-off/switch-on. In this range, it is only permissible that the encoder overflows.

After the adjustment has been completed, it must be guaranteed that the range is not exited. The reason for this is that outside the range, there is no clear reference any longer between the encoder actual value and mechanical system. If the home position (c2598) lies in this range, then the position actual value is set when adjusting to the home position. Otherwise, adjustment is canceled with F07443.

There is no overflow for linear absolute encoders. This means that after the adjustment, the position can be re-established in the complete traversing range after switch-off/switch-on. When adjusting, the position actual value is set to the home position.

**Note**

To permanently accept the determined position offset, it must be retentively saved (p0977).

This adjustment can only be initiated for an absolute encoder.



<b>c2510[0...3]</b>	<p><b>LR selecting measuring probe evaluation</b></p> <p><b>Data type:</b> Unsigned8      <b>Visible in:</b> Standard display</p> <p><b>Read permission:</b>      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>      Edit device configuration or drive applications</p> <p><b>Parameter group:</b>      Homing, Traversing blocks, Position control</p> <p><b>Unit:</b> -</p> <p><b>Description:</b>      Signal to select the measuring probe. 0 signal, measuring probe 1 is used. 1 signal, measuring probe 2 is used.</p> <p><b>Index:</b>      [0] = Position control [1] = Motor encoder [2] = Reserved [3] = Reserved</p> <p><b>Dependency:</b>      See also: p2502, c2511</p> <hr/> <p><b>Note</b> When function "Basic positioner" is activated, the measuring probe is selected at the 0/1 edge at r2684.1 (passive homing active).</p>
---------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

<b>c2511[0...3]</b>	<p><b>LR measuring probe evaluation edge</b></p> <p><b>Data type:</b> Unsigned8      <b>Visible in:</b> Standard display</p> <p><b>Read permission:</b>      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>      Edit device configuration or drive applications</p> <p><b>Parameter group:</b>      Homing, Traversing blocks, Position control</p> <p><b>Unit:</b> -</p> <p><b>Description:</b>      Signal to evaluate the measuring probe edge. 1 signal: The falling edge of the measuring probe (c2510) is used. 0 signal: The rising edge of the measuring probe (c2510) is used.</p> <p><b>Index:</b>      [0] = Position control [1] = Motor encoder [2] = Reserved [3] = Reserved</p> <p><b>Dependency:</b>      See also: p2502, c2510</p>
---------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

<b>r2521[0...3]</b>	<p><b>LR position actual value</b></p> <p><b>Data type:</b> FloatingPoint32      <b>Visible in:</b> Standard display</p> <p><b>Read permission:</b>      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>      Edit device configuration or drive applications</p> <p><b>Parameter group:</b>      Jog, Homing, Traversing blocks, Direct setpoint input (MDI), Actual position value preprocessing</p> <p><b>Unit:</b> mm</p> <p><b>Description:</b>      Display for the position actual value determined by the position actual value processing.</p> <p><b>Index:</b>      [0] = Position control [1] = Motor encoder [2] = Reserved [3] = Reserved</p> <p><b>Dependency:</b>      See also: p2502, r2526</p>
---------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**Note**

r2526.0 = 1 --> The position actual value in r2521[0] for the position control is valid.

**r2521[0...3]****LR position actual value**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Jog, Homing, Traversing blocks, Direct setpoint input (MDI), Actual position value preprocessing

**Unit:** °

**Description:**

Display for the position actual value determined by the position actual value processing.

**Index:**

[0] = Position control

[1] = Motor encoder

[2] = Reserved

[3] = Reserved

**Dependency:**

See also: p2502, r2526

**Note**

r2526.0 = 1 --> The position actual value in r2521[0] for the position control is valid.

**r2522[0...3]****LR velocity actual value**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Jog, Homing, Traversing blocks, Direct setpoint input (MDI), Actual position value preprocessing

**Unit:** mm/s

**Description:**

Display for the velocity actual value determined by the position actual value processing.

**Index:**

[0] = Position control

[1] = Motor encoder

[2] = Reserved

[3] = Reserved

**Dependency:**

See also: p2502, r2526

**Note**

r2526.0 = 1 --> The velocity actual value in r2522[0] for the position control is valid.

**r2522[0...3]****LR velocity actual value**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Jog, Homing, Traversing blocks, Direct setpoint input (MDI), Actual position value preprocessing

**Unit:** °/s

**Description:**

Display for the velocity actual value determined by the position actual value processing.

**Index:**

[0] = Position control

[1] = Motor encoder

[2] = Reserved

[3] = Reserved

**Dependency:**

See also: p2502, r2526

**Note**

r2526.0 = 1 --> The velocity actual value in r2522[0] for the position control is valid.

<b>r2523[0...3]</b>	<b>LR measured value</b>
	<b>Data type:</b> FloatingPoint32 <b>Visible in:</b> Extended display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Position control
	<b>Unit:</b> mm
<b>Description:</b>	Displays the measured values that were determined using functions "Homing mark search" and "Measuring probe evaluation".
<b>Index:</b>	[0] = Position control [1] = Motor encoder [2] = Reserved [3] = Reserved
<b>Dependency:</b>	See also: p2502, r2526

**Note**

r2526.2 = 1 --> The measured value in r2523[0] for the position control is valid.

<b>r2523[0...3]</b>	<b>LR measured value</b>
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32 <b>Visible in:</b> Extended display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Position control
	<b>Unit:</b> °
<b>Description:</b>	Displays the measured values that were determined using functions "Homing mark search" and "Measuring probe evaluation".
<b>Index:</b>	[0] = Position control [1] = Motor encoder [2] = Reserved [3] = Reserved
<b>Dependency:</b>	See also: p2502, r2526

**Note**

r2526.2 = 1 --> The measured value in r2523[0] for the position control is valid.

<b>r2526.0...12</b>	<b>LR status word</b>																												
	<b>Data type:</b> Unsigned16 <b>Visible in:</b> Standard display																												
	<b>Read permission:</b> Read drive data or acknowledge messages																												
	<b>Write permission:</b> Edit device configuration or drive applications																												
	<b>Parameter group:</b> Actual position value preprocessing																												
	<b>Unit:</b> -																												
<b>Description:</b>	Displays the status word of the position controller.																												
<b>Bit array:</b>	<table border="0" style="width: 100%;"> <thead> <tr> <th style="text-align: left;">Bit</th> <th style="text-align: left;">Signal name</th> <th style="text-align: left;">1 signal</th> <th style="text-align: left;">0 signal</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>Position actual value valid</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>01</td> <td>Homing active</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>02</td> <td>Measured value valid</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>03</td> <td>Position control active</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>04</td> <td>Fixed stop reached</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>05</td> <td>Fixed stop outside window</td> <td>Yes</td> <td>No</td> </tr> </tbody> </table>	Bit	Signal name	1 signal	0 signal	00	Position actual value valid	Yes	No	01	Homing active	Yes	No	02	Measured value valid	Yes	No	03	Position control active	Yes	No	04	Fixed stop reached	Yes	No	05	Fixed stop outside window	Yes	No
Bit	Signal name	1 signal	0 signal																										
00	Position actual value valid	Yes	No																										
01	Homing active	Yes	No																										
02	Measured value valid	Yes	No																										
03	Position control active	Yes	No																										
04	Fixed stop reached	Yes	No																										
05	Fixed stop outside window	Yes	No																										

## A.3 Parameters

06	Position controller output limited	Yes	No
07	Request tracking mode	Yes	No
08	Clamping active when traveling to fixed stop	Yes	No
09	Setting value for adjustment valid	Yes	No
10	Absolute encoder adjusted	Yes	No
11	Absolute encoder adjustment unsuccessful	Yes	No
12	Absolute encoder being adjusted	Yes	No

**Dependency:** See also: r2521, r2522, r2523

**Note**

For bit 04:

The signal is influenced via p2634.

For bit 05:

The signal is influenced via p2635.

**c2530****LR position setpoint**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Position controller

**Unit:** mm

**Description:** Signal for the position setpoint of the position controller.

**Dependency:** See also: r2665

**c2530****LR position setpoint**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Position controller

**Unit:** °

**Description:** Signal for the position setpoint of the position controller.

**Dependency:** See also: r2665

**c2531****LR velocity setpoint**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Position controller

**Unit:** mm/s

**Description:** Signal for the velocity setpoint of the position controller.

**Dependency:** See also: r2666

**c2531****LR velocity setpoint**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Position controller

**Unit:** °/s

**Description:** Signal for the velocity setpoint of the position controller.

**Dependency:** See also: r2666

<b>p2533[0]</b>	<b>LR position setpoint filter time constant</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Position controller	
	<b>Unit:</b> ms		
	<b>Min:</b> 0.00 [ms]	<b>Max:</b> 1000.00 [ms]	<b>Factory setting:</b> 0.00 [ms]
<b>Description:</b>	Sets the time constant for the position setpoint filter (PT1).		
	<b>Note</b>		
	The effective Kv factor (position loop gain) is reduced with the filter. This allows a softer control behavior with improved tolerance with respect to noise/disturbances.		
	Applications:		
	- reduces the precontrol dynamic response.		
	- jerk limiting.		

<b>p2534[0]</b>	<b>LR speed precontrol factor</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Position controller	
	<b>Unit:</b> %		
	<b>Min:</b> 0.00 [%]	<b>Max:</b> 200.00 [%]	<b>Factory setting:</b> 0.00 [%]
<b>Description:</b>	Setting for activation and weighting of the speed precontrol value. Value = 0 % --> The precontrol is deactivated.		
<b>Dependency:</b>	See also: p2535, p2536, r2563		
	<b>Note</b>		
	When the axis control loop is optimally set as well as a precisely determined equivalent time constant of the speed control loop, the precontrol factor is 100%.		

<b>p2535[0]</b>	<b>LR speed precontrol symmetrizing filter dead time</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Position controller	
	<b>Unit:</b> -		
	<b>Min:</b> 0.00	<b>Max:</b> 2.00	<b>Factory setting:</b> 0.00
<b>Description:</b>	Sets the "fractional" dead time to emulate the timing behavior of the speed control loop. The selected multiplier refers to the position controller sampling time (dead time= p2535 * position controller clock cycle).		
<b>Dependency:</b>	See also: p2536		

**NOTICE**

When speed precontrol is active (p2534 > 0 %), the following applies:  
 In addition to the set dead time (p2535), internally two position controller sampling times are effective.  
 When speed precontrol is inactive (p2534 = 0 %), the following applies:  
 No dead time is effective (p2535 and internal).

**Note**

Together with p2536, the time response of the closed speed control loop can be emulated.

**p2536[0]****LR speed precontrol symmetrizing filter PT1****Data type:** FloatingPoint32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation**Parameter group:**

Position controller

**Unit:** ms**Min:**

0.00 [ms]

**Max:**

100.00 [ms]

**Factory setting:**

0.00 [ms]

**Description:**

Sets a PT1 filter to emulate the time response of the closed speed control loop.

**Dependency:**

See also: p2535

**NOTICE**

When speed precontrol is inactive (p2534 = 0 %), the following applies:  
 If a PT1 filter has been set, it is not effective.

**Note**

Together with p2535, the time response of the closed speed control loop can be emulated.

**p2538[0]****LR proportional gain****Data type:** FloatingPoint32**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation**Parameter group:**

Position controller

**Unit:** 1000 rpm**Min:**

0.000 [1000 rpm]

**Max:**

300.000 [1000 rpm]

**Factory setting:**

1.000 [1000 rpm]

**Description:**

Sets the proportional gain (P gain, position loop gain, Kv factor) of the position controller.

**Dependency:**

See also: p2539, r2557, r2558

**Note**

The proportional gain is used define at which traversing velocity which following error is obtained (without precontrol)

Low proportional gain:

Slow response to a setpoint - actual value difference, the following error becomes large.

High proportional gain:

Fast response to the setpoint - actual value difference, the following error becomes small.

<b>p2539[0]</b>	<b>LR integral time</b>			
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display		
	<b>Read permission:</b>	Read drive data or acknowledge messages		
	<b>Write permission:</b>	Edit device configuration or drive applications		
	<b>Can be changed in the operating state:</b>	Operation		
	<b>Parameter group:</b>	Position controller		
	<b>Unit:</b> ms			
	<b>Min:</b> 0.00 [ms]	<b>Max:</b> 100000.00 [ms]	<b>Factory setting:</b> 0.00 [ms]	
	<b>Description:</b>	Setting to activate the integral time of the position controller. Value = 0 ms --> The I component of the position controller is deactivated.		
	<b>Dependency:</b>	See also: p2538, r2559		
<b>p2540</b>	<b>LR position controller output speed limit</b>			
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display		
	<b>Read permission:</b>	Read drive data or acknowledge messages		
	<b>Write permission:</b>	Edit device configuration or drive applications		
	<b>Can be changed in the operating state:</b>	Operation		
	<b>Parameter group:</b>	Position controller		
	<b>Unit:</b> rpm			
	<b>Min:</b> 0.000 [rpm]	<b>Max:</b> 210000.000 [rpm]	<b>Factory setting:</b> 210000.000 [rpm]	
	<b>Description:</b>	Sets the speed limit of the position controller output.		
	<b>Dependency:</b>	See also: c2541		
<b>c2541</b>	<b>LR position controller output speed limit signal</b>			
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display		
	<b>Read permission:</b>	Read drive data or acknowledge messages		
	<b>Write permission:</b>	Edit device configuration or drive applications		
	<b>Parameter group:</b>	Position controller		
	<b>Unit:</b> rpm			
	<b>Description:</b>	Signal for limiting the position controller output.		
	<b>Dependency:</b>	See also: p2540		
	<b>p2542</b>	<b>LR standstill window</b>		
		<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
<b>Read permission:</b>		Read drive data or acknowledge messages		
<b>Write permission:</b>		Edit device configuration or drive applications		
<b>Can be changed in the operating state:</b>		Operation		
<b>Parameter group:</b>		Position controller monitoring		
<b>Unit:</b> mm				
<b>Min:</b> 0.0000 [mm]		<b>Max:</b> 2.1474839e+09 [mm]	<b>Factory setting:</b> 0.2500 [mm]	
<b>Description:</b>		Sets the standstill window for the standstill monitoring function. After the standstill monitoring time expires, it is cyclically checked whether the difference between the setpoint and actual position is located within the standstill window and, if required, an appropriate fault is output. Value = 0 --> The standstill monitoring is deactivated.		

**Dependency:** See also: p2543, p2544

**Note**

The following applies for the setting of the standstill window and positioning window:  
Standstill window (p2542) >= positioning window (p2544)

**p2542****LR standstill window**

S200 Basic PN (EPOS  
Lastseite rotierend),  
S200 PN (EPOS  
Lastseite rotierend)

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:**

Position controller monitoring

**Unit:** °

**Min:**

0.0000 [°]

**Max:**

2.1474839e+09 [°]

**Factory setting:**

10.0000 [°]

**Description:**

Sets the standstill window for the standstill monitoring function.

After the standstill monitoring time expires, it is cyclically checked whether the difference between the setpoint and actual position is located within the standstill window and, if required, an appropriate fault is output.

Value = 0 --> The standstill monitoring is deactivated.

**Dependency:**

See also: p2543, p2544

**Note**

The following applies for the setting of the standstill window and positioning window:  
Standstill window (p2542) >= positioning window (p2544)

**p2543****LR standstill monitoring time**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:**

Position controller monitoring

**Unit:** ms

**Min:**

0.00 [ms]

**Max:**

100000.00 [ms]

**Factory setting:**

200.00 [ms]

**Description:**

Sets the standstill monitoring time for the standstill monitoring function.

After the standstill monitoring time expires, it is cyclically checked whether the difference between the setpoint and actual position is located within the standstill window and, if required, an appropriate fault is output.

**Dependency:**

See also: p2542, p2545

**Note**

The following applies for the setting of the standstill and positioning monitoring time:  
Standstill monitoring time (p2543) <= positioning monitoring time (p2545)

**p2544****LR positioning window**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:**

Position controller monitoring

**Unit:** mm



	<b>Min:</b> 0.0000 [mm]	<b>Max:</b> 2.1474839e+09 [mm]	<b>Factory setting:</b> 0.0500 [mm]
<b>Description:</b>	Sets the positioning window for the positioning monitoring function. After the positioning monitoring time expires, it is checked once as to whether the difference between the setpoint and actual position lies within the positioning window and if required an appropriate fault is output. Value = 0 --> The positioning monitoring function is deactivated.		
<b>Dependency:</b>	See also: p2542, p2545, r2684		
<b>Note</b> The following applies for the setting of the standstill and positioning window: Standstill window (p2542) >= positioning window (p2544)			

<b>p2544</b>	<b>LR positioning window</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Position controller monitoring	
	<b>Unit:</b> °		
	<b>Min:</b> 0.0000 [°]	<b>Max:</b> 2.1474839e+09 [°]	<b>Factory setting:</b> 2.0000 [°]
<b>Description:</b>	Sets the positioning window for the positioning monitoring function. After the positioning monitoring time expires, it is checked once as to whether the difference between the setpoint and actual position lies within the positioning window and if required an appropriate fault is output. Value = 0 --> The positioning monitoring function is deactivated.		
<b>Dependency:</b>	See also: p2542, p2545, r2684		
<b>Note</b> The following applies for the setting of the standstill and positioning window: Standstill window (p2542) >= positioning window (p2544)			

<b>p2545</b>	<b>LR positioning monitoring time</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Position controller monitoring	
	<b>Unit:</b> ms		
	<b>Min:</b> 0.00 [ms]	<b>Max:</b> 100000.00 [ms]	<b>Factory setting:</b> 1000.00 [ms]
<b>Description:</b>	Sets the positioning monitoring time for the positioning monitoring. After the positioning monitoring time expires, it is checked once as to whether the difference between the setpoint and actual position lies within the positioning window and if required an appropriate fault is output.		
<b>Dependency:</b>	See also: p2543, p2544, r2684		
<b>Note</b> The following applies for the setting of the standstill and positioning monitoring time: Standstill monitoring time (p2543) <= positioning monitoring time (p2545)			

---

<b>p2546[0]</b>	<b>LR dynamic following error monitoring tolerance</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Position controller monitoring	
	<b>Unit:</b> mm		
	<b>Min:</b> 0.0000 [mm]	<b>Max:</b> 2.1474839e+09 [mm]	<b>Factory setting:</b> 1.0000 [mm]
<b>Description:</b>	Sets the tolerance for the dynamic following error monitoring. If the dynamic following error (r2563) exceeds the selected tolerance, then an appropriate fault is output. Value = 0 --> The dynamic following error monitoring is deactivated.		
<b>Dependency:</b>	See also: r2563, r2684		
	<b>Note</b> The tolerance bandwidth is intended to prevent the dynamic following error monitoring incorrectly responding due to operational control sequences (e.g. during load surges).		

---

<b>p2546[0]</b>	<b>LR dynamic following error monitoring tolerance</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Position controller monitoring	
	<b>Unit:</b> °		
	<b>Min:</b> 0.0000 [°]	<b>Max:</b> 2.1474839e+09 [°]	<b>Factory setting:</b> 36.0000 [°]
<b>Description:</b>	Sets the tolerance for the dynamic following error monitoring. If the dynamic following error (r2563) exceeds the selected tolerance, then an appropriate fault is output. Value = 0 --> The dynamic following error monitoring is deactivated.		
<b>Dependency:</b>	See also: r2563, r2684		
	<b>Note</b> The tolerance bandwidth is intended to prevent the dynamic following error monitoring incorrectly responding due to operational control sequences (e.g. during load surges).		

---

<b>r2556</b>	<b>LR position setpoint after setpoint smoothing</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Position controller	
	<b>Unit:</b> mm		
<b>Description:</b>	Displays the position setpoint after the setpoint smoothing.		

<b>r2556</b> S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>LR position setpoint after setpoint smoothing</b> <b>Data type:</b> FloatingPoint32 <b>Read permission:</b> <b>Write permission:</b> <b>Parameter group:</b> <b>Unit:</b> °	<b>Visible in:</b> Standard display Read drive data or acknowledge messages Edit device configuration or drive applications Position controller
<b>Description:</b>	Displays the position setpoint after the setpoint smoothing.	
<b>r2557</b>	<b>LR position controller input system deviation</b> <b>Data type:</b> FloatingPoint32 <b>Read permission:</b> <b>Write permission:</b> <b>Parameter group:</b> <b>Unit:</b> mm	<b>Visible in:</b> Standard display Read drive data or acknowledge messages Edit device configuration or drive applications Position controller
<b>Description:</b>	Displays the difference between the position setpoint and the position actual value at the position controller input.	
<b>r2557</b> S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>LR position controller input system deviation</b> <b>Data type:</b> FloatingPoint32 <b>Read permission:</b> <b>Write permission:</b> <b>Parameter group:</b> <b>Unit:</b> °	<b>Visible in:</b> Standard display Read drive data or acknowledge messages Edit device configuration or drive applications Position controller
<b>Description:</b>	Displays the difference between the position setpoint and the position actual value at the position controller input.	
<b>r2558</b>	<b>LR position controller output P component</b> <b>Data type:</b> FloatingPoint32 <b>Read permission:</b> <b>Write permission:</b> <b>Parameter group:</b> <b>Unit:</b> rpm	<b>Visible in:</b> Extended display Read drive data or acknowledge messages Edit device configuration or drive applications Position controller
<b>Description:</b>	Displays the P component at the output of the position controller (speed setpoint).	
<b>r2559</b>	<b>LR position controller output I component</b> <b>Data type:</b> FloatingPoint32 <b>Read permission:</b> <b>Write permission:</b> <b>Parameter group:</b> <b>Unit:</b> rpm	<b>Visible in:</b> Extended display Read drive data or acknowledge messages Edit device configuration or drive applications Position controller
<b>Description:</b>	Displays the I component at the output of the position controller (speed setpoint).	
<b>r2560</b>	<b>LR speed setpoint</b> <b>Data type:</b> FloatingPoint32 <b>Read permission:</b> <b>Write permission:</b> <b>Parameter group:</b> <b>Unit:</b> rpm	<b>Visible in:</b> Standard display Read drive data or acknowledge messages Edit device configuration or drive applications Position controller
<b>Description:</b>	Displays the speed setpoint after limiting (c2541).	

<b>r2561</b>	<b>LR speed precontrol value</b>
	<b>Data type:</b> FloatingPoint32 <b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Position controller
	<b>Unit:</b> rpm
<b>Description:</b>	Displays the speed setpoint due to the precontrol.
<b>r2562</b>	<b>LR total speed setpoint</b>
	<b>Data type:</b> FloatingPoint32 <b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Position controller
	<b>Unit:</b> rpm
<b>Description:</b>	Displays the total speed setpoint This value is obtained from the sum of the speed precontrol and position controller output.
<b>Dependency:</b>	See also: r2560, r2561
<b>r2563</b>	<b>LR following error dynamic model</b>
	<b>Data type:</b> FloatingPoint32 <b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Jog, Homing, Traversing blocks, Direct setpoint input (MDI), Position controller monitoring
	<b>Unit:</b> mm
<b>Description:</b>	Displays the dynamic following error. This value is the deviation, corrected by the velocity-dependent component, between the position setpoint and the position actual value.
	<b>Note</b> For p2534 $\geq$ 100 % (precontrol activated) the following applies: The dynamic following error (r2563) corresponds to the system deviation (r2557) at the position controller input. For 0 % < p2534 < 100 % (precontrol activated) or p2534 = 0 % (precontrol deactivated) the following applies: The dynamic following error (r2563) is the deviation between the measured position actual value and a value that is calculated from the position setpoint via a PT1 model. This compensates the system-related velocity-dependent system deviation for a P controller.
<b>r2563</b>	<b>LR following error dynamic model</b>
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32 <b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Jog, Homing, Traversing blocks, Direct setpoint input (MDI), Position controller monitoring
	<b>Unit:</b> °
<b>Description:</b>	Displays the dynamic following error. This value is the deviation, corrected by the velocity-dependent component, between the position setpoint and the position actual value.

**Note**

For p2534  $\geq$  100 % (precontrol activated) the following applies:

The dynamic following error (r2563) corresponds to the system deviation (r2557) at the position controller input.

For 0 %  $<$  p2534  $<$  100 % (precontrol activated) or p2534 = 0 % (precontrol deactivated) the following applies:

The dynamic following error (r2563) is the deviation between the measured position actual value and a value that is calculated from the position setpoint via a PT1 model. This compensates the system-related velocity-dependent system deviation for a P controller.

**r2564****LR torque precontrol value**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Position controller

**Unit:** Nm

**Description:**

Displays the torque precontrol value.

**Note**

The torque precontrol value is the derivation over time of the speed precontrol value and is referred to a moment of inertia of 1 kgm<sup>2</sup>/2 Pl. When using the precontrol, then this should be evaluated corresponding to the actual moment of inertia.

**r2565****LR following error actual**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Position controller

**Unit:** mm

**Description:**

Displays the actual following error.

This value is the deviation between the position setpoint - after fine interpolation - and the position actual value.

**NOTICE**

When speed precontrol is active (p2534  $>$  0 %), the following applies:

To calculate this value, the position setpoint is delayed by two position controller sampling times.

When speed precontrol is inactive (p2534 = 0 %), the following applies:

To calculate this value, the position setpoint is delayed by two position controller clock cycles.

**r2565****LR following error actual**

S200 Basic PN (EPOS  
Lastseite rotierend),  
S200 PN (EPOS  
Lastseite rotierend)

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Position controller

**Unit:** °

**Description:**

Displays the actual following error.

This value is the deviation between the position setpoint - after fine interpolation - and the position actual value.

**NOTICE**

When speed precontrol is active (p2534  $>$  0 %), the following applies:

To calculate this value, the position setpoint is delayed by two position controller sampling times.

When speed precontrol is inactive (p2534 = 0 %), the following applies:

To calculate this value, the position setpoint is delayed by two position controller clock cycles.

<b>p2567[0]</b>	<b>LR torque precontrol moment of inertia</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Position controller	
	<b>Unit:</b> kgm <sup>2</sup>		
	<b>Min:</b> 0.000000 [kgm <sup>2</sup> ]	<b>Max:</b> 100000.000000 [kgm <sup>2</sup> ]	<b>Factory setting:</b> 0.000000 [kgm <sup>2</sup> ]
<b>Description:</b>	Sets the moment of inertia for the torque precontrol.		
<b>Dependency:</b>	See also: p2534, r2564		
	<b>Note</b>		
	When calculating the torque precontrol value (c2654), the time derivation of the speed precontrol value is multiplied by 2 PI * p2567.		
	For reasons associated with the compatibility to earlier firmware versions, the factory setting for p2567 = 1 kgm <sup>2</sup> /2 PI. This means that r2564 remains as standard the derivation over time of the speed precontrol value and is referred, as before, to a moment of inertia of 1 kgm <sup>2</sup> /2 PI. For torque precontrol, the moment of inertia can now be directly entered into p2567 (instead of subsequently evaluating the precontrol value).		
<b>c2568</b>	<b>EPOS hardware limit switch activation</b>		
	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Limit	
	<b>Unit:</b> -		
<b>Description:</b>	Signal to activate the hardware limit switch. For c2568 = 1 signal: Negative hardware limit switch (c2569) and positive hardware limit switch (c2570) are activated. For c2568 = 0 signal: Negative hardware limit switch (c2569) and positive hardware limit switch (c2570) are not evaluated.		
<b>Dependency:</b>	See also: c2569, c2570		
	<b>Note</b>		
	The traversing range can also be limited using software limit switches.		
<b>c2569</b>	<b>EPOS negative hardware limit switch</b>		
	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Limit	
	<b>Unit:</b> -		
<b>Description:</b>	Signal for the hardware limit switch in the negative direction of travel.		
<b>Recommendation:</b>	Set the OFF3 ramp-down time (p1135) so that after the axis reaches the hardware limit switch at maximum velocity, the braking distance traveled by the axis is not greater than the distance that is available.		
<b>Dependency:</b>	See also: p1135, c2568, c2570, p2573, r2684		

<b>⚠ CAUTION</b>
The hardware limit switch is low active. For a 0 signal, the drive stops with the OFF3 ramp-down time (p1135), status signal r2684.13 = 1 is set, saved and the corresponding fault is output. After the fault has been acknowledged, only motion moving away from the hardware limit switch is permitted. For a 0/1 signal and valid travel direction, when the hardware limit switch is exited, this is detected and status signal r2684.13 is set to 0.

**c2570****EPOS positive hardware limit switch**

<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Limit
<b>Unit:</b> -	

**Description:** Signal for the hardware limit switch in the positive direction of travel.

**Recommendation:** Set the OFF3 ramp-down time (p1135) so that after the axis reaches the hardware limit switch at maximum velocity, the braking distance traveled by the axis is not greater than the distance that is available.

**Dependency:** See also: p1135, c2568, c2569, p2573, r2684

<b>⚠ CAUTION</b>
The hardware limit switch is low active. For a 0 signal the drive stops with the OFF3 ramp-down time (p1135), status signal r2684.14 = 1 is set, saved and the corresponding fault is output. After the fault has been acknowledged, only motion moving away from the hardware limit switch is permitted. For a 0/1 signal and valid travel direction, when the hardware limit switch is exited, this is detected and status signal r2684.14 is set to 0.

**p2571****EPOS maximum velocity**

<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Operation	
<b>Parameter group:</b>	Limit	
<b>Unit:</b> mm/s		
<b>Min:</b> 0.010 [mm/s]	<b>Max:</b> 4e+07 [mm/s]	<b>Factory setting:</b> 500.000 [mm/s]

**Description:** Sets the maximum velocity for the "basic positioner" function (EPOS).

**Dependency:** See also: p2503, p2504, p2505, p2506

**Note**

The maximum velocity is active in all of the operating modes of the basic positioner.

The maximum velocity for the basic positioner should be aligned with the maximum speed/velocity of the speed/velocity controller:

Rotary encoders:

$$p2571[1000 \text{ LU/min}] = \min(p1082, p1083, |p1086|)[\text{rpm}] \times p2505/p2504 \times p2506/1000$$

Linear encoders:

$$p2571[1000 \text{ LU/min}] = \min(p1082, p1083, |p1086|)[\text{m/min}] \times p2503/10[\text{m}]$$

<b>p2571</b>	<b>EPOS maximum velocity</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Limit	
	<b>Unit:</b> %/s		
	<b>Min:</b> 0.010 [%/s]	<b>Max:</b> 4e+07 [%/s]	<b>Factory setting:</b> 18000.000 [%/s]
<b>Description:</b>	Sets the maximum velocity for the "basic positioner" function (EPOS).		
<b>Dependency:</b>	See also: p2503, p2504, p2505, p2506		
	<b>Note</b>		
	The maximum velocity is active in all of the operating modes of the basic positioner.		
	The maximum velocity for the basic positioner should be aligned with the maximum speed/velocity of the speed/velocity controller:		
	Rotary encoders:		
	$p2571[1000 \text{ LU/min}] = \min(p1082, p1083,  p1086 )[\text{rpm}] \times p2505/p2504 \times p2506/1000$		
	Linear encoders:		
	$p2571[1000 \text{ LU/min}] = \min(p1082, p1083,  p1086 )[\text{m/min}] \times p2503/10[\text{m}]$		

<b>p2572</b>	<b>EPOS maximum acceleration</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Ready for operation	
	<b>Parameter group:</b>	Limit, Jog	
	<b>Unit:</b> mm/s <sup>2</sup>		
	<b>Min:</b> 0.001 [mm/s <sup>2</sup> ]	<b>Max:</b> 2e+06 [mm/s <sup>2</sup> ]	<b>Factory setting:</b> 10000.000 [mm/s <sup>2</sup> ]
<b>Description:</b>	Sets the maximum acceleration for the "basic positioner" function (EPOS).		
<b>Dependency:</b>	See also: p2619, c2644		
	<b>Note</b>		
	The maximum acceleration appears to exhibit jumps (without jerk).		
	"Traversing blocks" operating mode:		
	The programmed acceleration override (p2619) acts on the maximum acceleration.		
	"Direct setpoint input/MDI" operating mode:		
	The acceleration override is effective (c2644, 4000 hex = 100 %).		
	"Jog" and "Active homing" operating modes:		
	No acceleration override is active. The axis starts with the maximum acceleration.		

<b>p2572</b>	<b>EPOS maximum acceleration</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Ready for operation	
	<b>Parameter group:</b>	Limit, Jog	
	<b>Unit:</b> %/s <sup>2</sup>		



	<b>Min:</b> 0.001 [ $^{\circ}/s^2$ ]	<b>Max:</b> 2e+06 [ $^{\circ}/s^2$ ]	<b>Factory setting:</b> 360000.000 [ $^{\circ}/s^2$ ]
<b>Description:</b>	Sets the maximum acceleration for the "basic positioner" function (EPOS).		
<b>Dependency:</b>	See also: p2619, c2644		
<b>Note</b>			
The maximum acceleration appears to exhibit jumps (without jerk).			
"Traversing blocks" operating mode:			
The programmed acceleration override (p2619) acts on the maximum acceleration.			
"Direct setpoint input/MDI" operating mode:			
The acceleration override is effective (c2644, 4000 hex = 100 %).			
"Jog" and "Active homing" operating modes:			
No acceleration override is active. The axis starts with the maximum acceleration.			

<b>p2573</b>	<b>EPOS maximum deceleration</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Ready for operation	
	<b>Parameter group:</b>	Limit, Jog	
	<b>Unit:</b> mm/s <sup>2</sup>		
	<b>Min:</b> 0.001 [mm/s <sup>2</sup> ]	<b>Max:</b> 2e+06 [mm/s <sup>2</sup> ]	<b>Factory setting:</b> 10000.000 [mm/s <sup>2</sup> ]
<b>Description:</b>	Sets the maximum deceleration for the "basic positioner" function (EPOS).		
<b>Dependency:</b>	See also: p2620, c2645		
<b>Note</b>			
The maximum deceleration appears to exhibit jumps (without jerk).			
"Traversing blocks" operating mode:			
The programmed deceleration override (p2620) acts on the maximum deceleration.			
"Direct setpoint input/MDI" operating mode:			
The deceleration override is effective (c2645, 4000 hex = 100 %).			
"Jog" and "Active homing" operating modes:			
No deceleration override is effective. The axis breaks with the maximum deceleration.			

<b>p2573</b>	<b>EPOS maximum deceleration</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Ready for operation	
	<b>Parameter group:</b>	Limit, Jog	
	<b>Unit:</b> $^{\circ}/s^2$		
	<b>Min:</b> 0.001 [ $^{\circ}/s^2$ ]	<b>Max:</b> 2e+06 [ $^{\circ}/s^2$ ]	<b>Factory setting:</b> 360000.000 [ $^{\circ}/s^2$ ]
<b>Description:</b>	Sets the maximum deceleration for the "basic positioner" function (EPOS).		
<b>Dependency:</b>	See also: p2620, c2645		

**Note**

The maximum deceleration appears to exhibit jumps (without jerk).

"Traversing blocks" operating mode:

The programmed deceleration override (p2620) acts on the maximum deceleration.

"Direct setpoint input/MDI" operating mode:

The deceleration override is effective (c2645, 4000 hex = 100 %).

"Jog" and "Active homing" operating modes:

No deceleration override is effective. The axis breaks with the maximum deceleration.

**p2574****EPOS jerk limiting**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:** Limit

**Unit:** mm/s<sup>3</sup>

**Min:**

0.001 [mm/s<sup>3</sup>]

**Max:**

1e+08 [mm/s<sup>3</sup>]

**Factory setting:**

200000.000 [mm/s<sup>3</sup>]

**Description:**

Sets the jerk limiting

**Dependency:**

See also: p2572, p2573, c2575

**Note**

The jerk limiting is internally converted into a jerk time as follows:

Jerk time  $T_r = \max(p2572, p2573) / p2574$

The jerk time is internally limited to 1000 ms, and is rounded off to an integer multiple of the sampling time of the basic positioner cycle.

The jerk time is the same for the acceleration and deceleration phases, also if the maximum acceleration (p2572) and maximum deceleration (p2573) are set differently.

If the maximum acceleration and maximum deceleration are set differently, then motion is not optimal from a time perspective as the jerk limit cannot be utilized for the lower of the two values.

If, in the traversing profile, the acceleration time without jerk limiting is shorter than jerk time  $T_r$ , then motion with jerk limiting is not time-optimized.

For traversing motion with a direct transition between acceleration and deceleration (i.e. jerk time is greater than the constant velocity phase), jerk can increase up to twice the parameterized jerk.

CONTINUE\_FLYING with direction reversal acts internally just like a CONTINUE\_WITH\_STOP without the "Set position reached" being set. Without jerk limiting, this behavior can hardly be noticed as, when reversing, the position setpoint is only kept at zero for the duration of one interpolator clock cycle.

For block change enable CONTINUE\_WITH\_STOP, jerk limiting results in a longer delay time.

**p2574****EPOS jerk limiting**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:** Limit

**Unit:** °/s<sup>3</sup>

**Min:**

0.001 [°/s<sup>3</sup>]

**Max:**

1e+08 [°/s<sup>3</sup>]

**Factory setting:**

7.2e+06 [°/s<sup>3</sup>]

**Description:**

Sets the jerk limiting

**Dependency:**

See also: p2572, p2573, c2575

**Note**

The jerk limiting is internally converted into a jerk time as follows:

$$\text{Jerk time } T_r = \max(p2572, p2573) / p2574$$

The jerk time is internally limited to 1000 ms, and is rounded off to an integer multiple of the sampling time of the basic positioner cycle.

The jerk time is the same for the acceleration and deceleration phases, also if the maximum acceleration (p2572) and maximum deceleration (p2573) are set differently.

If the maximum acceleration and maximum deceleration are set differently, then motion is not optimal from a time perspective as the jerk limit cannot be utilized for the lower of the two values.

If, in the traversing profile, the acceleration time without jerk limiting is shorter than jerk time  $T_r$ , then motion with jerk limiting is not time-optimized.

For traversing motion with a direct transition between acceleration and deceleration (i.e. jerk time is greater than the constant velocity phase), jerk can increase up to twice the parameterized jerk.

CONTINUE\_FLYING with direction reversal acts internally just like a CONTINUE\_WITH\_STOP without the "Set position reached" being set. Without jerk limiting, this behavior can hardly be noticed as, when reversing, the position setpoint is only kept at zero for the duration of one interpolator clock cycle.

For block change enable CONTINUE\_WITH\_STOP, jerk limiting results in a longer delay time.

**c2575****EPOS jerk limiting activation**

**Data type:** Unsigned8

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Limit, Jog, Homing, Traversing blocks, Direct setpoint input (MDI)

**Unit:** -

**Description:**

Signal to activate jerk limiting.

Activating/deactivating:

- Using c2575 = 1 signal or 0 signal.

- Using the JERK command in the traversing block (only for c2575 = 0 signal).

**Dependency:**

See also: p2574

**Note**

A change to the signal state is only accepted at zero speed.

**p2576****EPOS modulo correction modulo range**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Ready for operation

**Parameter group:**

Basic positioner, Mechanics, Actual position value preprocessing

**Unit:** mm

**Min:**

0.0001 [mm]

**Max:**

2.1474828e+09 [mm]

**Factory setting:**

360.0000 [mm]

**Description:**

Sets the modulo range for axes with modulo correction.

**Dependency:**

See also: c2577

<b>p2576</b>	<b>EPOS modulo correction modulo range</b>				
	S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32 <b>Read permission:</b> <b>Write permission:</b> <b>Can be changed in the operating state:</b> <b>Parameter group:</b> <b>Unit:</b> ° <b>Min:</b> 0.0001 [°]	<b>Visible in:</b> Standard display Read drive data or acknowledge messages Edit device configuration or drive applications Ready for operation Basic positioner, Mechanics, Actual position value preprocessing <b>Max:</b> 2.1474828e+09 [°] <b>Factory setting:</b> 360.0000 [°]		
<b>Description:</b>	Sets the modulo range for axes with modulo correction.				
<b>Dependency:</b>	See also: c2577				
<b>c2577</b>	<b>EPOS modulo correction activation</b>				
		<b>Data type:</b> Unsigned8 <b>Read permission:</b> <b>Write permission:</b> <b>Parameter group:</b> <b>Unit:</b> -	<b>Visible in:</b> Standard display Read drive data or acknowledge messages Edit device configuration or drive applications Basic positioner, Mechanics, Actual position value preprocessing		
<b>Description:</b>	Signal to activate modulo correction.				
<b>Dependency:</b>	See also: p2576				
	<b>Note</b> When the signal state changes, this only becomes effective in the "ready for switching on" state. Selecting modulo correction: The actual position setpoint in the modulo range is corrected. The position actual value differs from the position setpoint by the following error and can also leave the modulo range. Deselecting modulo correction: It is based on the actual position actual value.				
<b>c2578</b>	<b>EPOS negative software limit switch</b>				
		<b>Data type:</b> FloatingPoint32 <b>Read permission:</b> <b>Write permission:</b> <b>Parameter group:</b> <b>Unit:</b> mm	<b>Visible in:</b> Standard display Read drive data or acknowledge messages Edit device configuration or drive applications Limit		
<b>Description:</b>	Signal for the negative software limit switch.				
<b>Dependency:</b>	See also: c2579, p2580, p2581, c2582				
	<table border="1"> <tbody> <tr> <td><b>NOTICE</b></td> </tr> <tr> <td>A change to the software limit switch immediately becomes effective. If the software limit switch is changed, then this results in the positions in the traversing blocks being checked.</td> </tr> </tbody> </table>			<b>NOTICE</b>	A change to the software limit switch immediately becomes effective. If the software limit switch is changed, then this results in the positions in the traversing blocks being checked.
<b>NOTICE</b>					
A change to the software limit switch immediately becomes effective. If the software limit switch is changed, then this results in the positions in the traversing blocks being checked.					
	<b>Note</b> The following applies for the setting of the software limit switch: Negative software limit switch < positive software limit switch				

<b>c2578</b>	<b>EPOS negative software limit switch</b>	
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Parameter group:</b>	Limit
	<b>Unit:</b> °	
<b>Description:</b>	Signal for the negative software limit switch.	
<b>Dependency:</b>	See also: c2579, p2580, p2581, c2582	

<b>NOTICE</b>
A change to the software limit switch immediately becomes effective. If the software limit switch is changed, then this results in the positions in the traversing blocks being checked.

**Note**  
The following applies for the setting of the software limit switch:  
Negative software limit switch < positive software limit switch

<b>c2579</b>	<b>EPOS positive software limit switch</b>	
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Parameter group:</b>	Limit
	<b>Unit:</b> mm	
<b>Description:</b>	Signal for the positive setpoint limit switch.	
<b>Dependency:</b>	See also: c2578, p2580, p2581, c2582	

<b>NOTICE</b>
A change to the software limit switch immediately becomes effective. If the software limit switch is changed, then this results in the positions in the traversing blocks being checked.

**Note**  
The following applies for the setting of the software limit switch:  
Negative software limit switch < positive software limit switch

<b>c2579</b>	<b>EPOS positive software limit switch</b>	
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Parameter group:</b>	Limit
	<b>Unit:</b> °	
<b>Description:</b>	Signal for the positive setpoint limit switch.	
<b>Dependency:</b>	See also: c2578, p2580, p2581, c2582	

<b>NOTICE</b>
A change to the software limit switch immediately becomes effective. If the software limit switch is changed, then this results in the positions in the traversing blocks being checked.

**Note**  
The following applies for the setting of the software limit switch:  
Negative software limit switch < positive software limit switch

---

<b>p2580</b>	<b>EPOS negative software limit switch</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Limit	
	<b>Unit:</b> mm		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	-2.1474828e+09 [mm]	2.1474828e+09 [mm]	-2.1474828e+09 [mm]
<b>Description:</b>	Sets the software limit switch, in the negative direction of travel.		
<b>Dependency:</b>	See also: c2578, c2579, p2581, c2582		

---

<b>p2580</b>	<b>EPOS negative software limit switch</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Limit	
	<b>Unit:</b> °		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	-2.1474828e+09 [°]	2.1474828e+09 [°]	-2.1474828e+09 [°]
<b>Description:</b>	Sets the software limit switch, in the negative direction of travel.		
<b>Dependency:</b>	See also: c2578, c2579, p2581, c2582		

---

<b>p2581</b>	<b>EPOS positive software limit switch</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Limit	
	<b>Unit:</b> mm		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	-2.1474828e+09 [mm]	2.1474828e+09 [mm]	2.1474828e+09 [mm]
<b>Description:</b>	Sets the software limit switch, in the positive direction of travel.		
<b>Dependency:</b>	See also: c2578, c2579, p2580, c2582		

---

<b>p2581</b>	<b>EPOS positive software limit switch</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Limit	
	<b>Unit:</b> °		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	-2.1474828e+09 [°]	2.1474828e+09 [°]	2.1474828e+09 [°]

**Description:** Sets the software limit switch, in the positive direction of travel.

**Dependency:** See also: c2578, c2579, p2580, c2582

### c2582 EPOS software limit switch activation

**Data type:** Unsigned8

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Limit

**Unit:** -

**Description:** Signal to activate the software limit switch.

**Dependency:** See also: c2578, c2579, p2580, p2581

#### CAUTION

Software limit switch is effective for:

- Axis is homed (r2684.11 = 1) and
- c2582 = 1 signal.

Software limit switch is ineffective for:

- Modulo correction active (c2577 = 1 signal) or
- "Active homing" is executed.

#### NOTICE

Target position for relative positioning outside software limit switch:

The traversing block is started and the axis comes to a standstill at the software limit switch. An appropriate alarm is output and the traversing block is interrupted. Traversing blocks with valid position can be activated.

Target position for absolute positioning outside software limit switch:

In the "traversing blocks" mode, the traversing block is not started and an appropriate fault is output.

Axis outside the valid traversing range:

If the axis is already outside the valid traversing range, then an appropriate fault is output. The fault can be acknowledged at standstill. Traversing blocks with valid position can be activated.

#### Note

The traversing range can also be limited using hardware limit switches.

### p2583 EPOS backlash compensation

**Data type:** FloatingPoint32

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:**

Basic positioner

**Unit:** mm

**Min:**

-200000.0000 [mm]

**Max:**

200000.0000 [mm]

**Factory setting:**

0.0000 [mm]

**Description:** Sets the amount of play (backlash) for positive or negative play.

0: backlash compensation is deactivated.

> 0: Positive backlash (normal case)

When the direction is reversed, the encoder actual value leads the actual value.

< 0: Negative backlash

When the direction is reversed, the actual value leads the encoder actual value.

**Dependency:** If a stationary axis is referenced by "setting the home position", or an adjusted with absolute encoder is switched on, then the setting of c2604 is relevant for entering the compensation value.

c2604 = 1:  
Traveling in the positive direction -> A compensation value is immediately entered.  
Traveling in the negative direction -> A compensation value is not entered

c2604 = 0:  
Traveling in the positive direction -> A compensation value is not entered  
Traveling in the negative direction -> A compensation value is immediately entered.

When again setting the home position (a homed axis) or for "passive homing", c2604 is not relevant but instead the history of the axis.

See also: c2604

**p2583****EPOS backlash compensation**

S200 Basic PN (EPOS Lastseite rotierend),  
S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation**Parameter group:** Basic positioner**Unit:** °**Min:**

-200000.0000 [°]

**Max:**

200000.0000 [°]

**Factory setting:**

0.0000 [°]

**Description:**

Sets the amount of play (backlash) for positive or negative play.

0: backlash compensation is deactivated.

&gt; 0: Positive backlash (normal case)

When the direction is reversed, the encoder actual value leads the actual value.

&lt; 0: Negative backlash

When the direction is reversed, the actual value leads the encoder actual value.

**Dependency:**

If a stationary axis is referenced by "setting the home position", or an adjusted with absolute encoder is switched on, then the setting of c2604 is relevant for entering the compensation value.

c2604 = 1:

Traveling in the positive direction -&gt; A compensation value is immediately entered.

Traveling in the negative direction -&gt; A compensation value is not entered

c2604 = 0:

Traveling in the positive direction -&gt; A compensation value is not entered

Traveling in the negative direction -&gt; A compensation value is immediately entered.

When again setting the home position (a homed axis) or for "passive homing", c2604 is not relevant but instead the history of the axis.

See also: c2604

**p2584.0...3****EPOS functions configuration****Data type:** Unsigned32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Ready for operation**Parameter group:** Basic positioner**Unit:** -**Min:**

-

**Max:**

-

**Factory setting:**

0100 bin

**Description:**

Sets the configuration for additional functions for the basic positioner (EPOS).



Bit array:	Bit	Signal name	1 signal	0 signal
	00	Activate position feedback signal	Yes	No
	01	Hardware limit switch evaluation	Level evaluation	Edge evaluation
	02	Travel to fixed stop - torque calculation based on the offset	Yes	No
	03	Active homing with absolute encoder adjustment	Yes	No

**Note**

For bit 00:

When the bit is set, for traversing blocks with absolute target positions (p2617[x]) when the tolerance window (p2688) is reached, the traversing block number (p2616[x]) is output bit-coded (r2689).

For bit 01:

When the bit is set, the hardware limit switch is evaluated, level-triggered.

This setting is recommended for a poor position actual value resolution, as in this case the direction does not have to be evaluated.

For bit 02:

When the bit is set, for "Travel to fixed stop", the torque setpoints are calculated based on the offset for the torque limit (p1532).

For bit 03:

After successful active homing, an absolute encoder is adjusted (p2507).

**p2585****EPOS jog 1 setpoint velocity**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:**

Jog

**Unit:** mm/s

**Min:**

-4e+07 [mm/s]

**Max:**

4e+07 [mm/s]

**Factory setting:**

-5.000 [mm/s]

**Description:**

Sets the setpoint velocity for jog 1.

**Dependency:**

See also: p2587, c2589, c2591

**p2585****EPOS jog 1 setpoint velocity**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:**

Jog

**Unit:** °/s

**Min:**

-4e+07 [°/s]

**Max:**

4e+07 [°/s]

**Factory setting:**

-180.000 [°/s]

**Description:**

Sets the setpoint velocity for jog 1.

**Dependency:**

See also: p2587, c2589, c2591

---

<b>p2586</b>	<b>EPOS jog 2 setpoint velocity</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Jog	
	<b>Unit:</b> mm/s		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	-4e+07 [mm/s]	4e+07 [mm/s]	5.000 [mm/s]
<b>Description:</b>	Sets the setpoint velocity for jog 2.		
<b>Dependency:</b>	See also: p2588, c2590, c2591		

---

<b>p2586</b>	<b>EPOS jog 2 setpoint velocity</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Jog	
	<b>Unit:</b> °/s		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	-4e+07 [°/s]	4e+07 [°/s]	180.000 [°/s]
<b>Description:</b>	Sets the setpoint velocity for jog 2.		
<b>Dependency:</b>	See also: p2588, c2590, c2591		

---

<b>p2587</b>	<b>EPOS jog 1 traversing distance</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Jog	
	<b>Unit:</b> mm		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.0000 [mm]	2.1474828e+09 [mm]	1.0000 [mm]
<b>Description:</b>	Sets the traversing distance for incremental jog 1.		
<b>Dependency:</b>	See also: p2585, c2589, c2591		

---

**Note**

Incremental jog 1 is started with c2591 = 1 signal and c2589 = 0/1 signal.  
With c2589 = 0 signal, incremental jogging is interrupted.

---

<b>p2587</b>	<b>EPOS jog 1 traversing distance</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Jog	
	<b>Unit:</b> °		
	<b>Min:</b> 0.0000 [°]	<b>Max:</b> 2.1474828e+09 [°]	<b>Factory setting:</b> 36.0000 [°]
<b>Description:</b>	Sets the traversing distance for incremental jog 1.		
<b>Dependency:</b>	See also: p2585, c2589, c2591		
	<b>Note</b> Incremental jog 1 is started with c2591 = 1 signal and c2589 = 0/1 signal. With c2589 = 0 signal, incremental jogging is interrupted.		

<b>p2588</b>	<b>EPOS jog 2 traversing distance</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Jog	
	<b>Unit:</b> mm		
	<b>Min:</b> 0.0000 [mm]	<b>Max:</b> 2.1474828e+09 [mm]	<b>Factory setting:</b> 1.0000 [mm]
<b>Description:</b>	Sets the traversing distance for incremental jog 2.		
<b>Dependency:</b>	See also: p2586, c2590, c2591		
	<b>Note</b> Incremental jog 2 is started with c2591 = 1 signal and c2590 = 0/1 signal. Incremental jogging is interrupted with c2590 = 0 signal.		

<b>p2588</b>	<b>EPOS jog 2 traversing distance</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Jog	
	<b>Unit:</b> °		
	<b>Min:</b> 0.0000 [°]	<b>Max:</b> 2.1474828e+09 [°]	<b>Factory setting:</b> 36.0000 [°]
<b>Description:</b>	Sets the traversing distance for incremental jog 2.		
<b>Dependency:</b>	See also: p2586, c2590, c2591		
	<b>Note</b> Incremental jog 2 is started with c2591 = 1 signal and c2590 = 0/1 signal. Incremental jogging is interrupted with c2590 = 0 signal.		

---

<b>c2589</b>	<b>EPOS jog 1</b>	
	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Parameter group:</b>	Jog
	<b>Unit:</b> -	
<b>Description:</b>	Signal for jog 1.	
<b>Dependency:</b>	When jogging, the axis is accelerated or braked with the maximum acceleration/deceleration (p2572/p2573). c2591 = 0 signal The axis endlessly moves with the setpoint velocity, jog 1 (p2585). c2591 = 1 signal The axis traverses through a parameterized distance (p2585) with the setpoint velocity, jog 1 (p2587). See also: p2572, p2573, p2585, p2587, c2591	

**NOTICE**

The parameter may be protected as a result of r0922 and cannot be changed.

---

<b>c2590</b>	<b>EPOS jog 2</b>	
	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Parameter group:</b>	Jog
	<b>Unit:</b> -	
<b>Description:</b>	Signal for jog 2.	
<b>Dependency:</b>	When jogging, the axis is accelerated or braked with the maximum acceleration/deceleration (p2572/p2573). c2591 = 0 signal The axis endlessly moves with the setpoint velocity, jog 2 (p2586). c2591 = 1 signal The axis traverses through a parameterized distance (p2586) with the setpoint velocity, jog 2 (p2588). See also: p2572, p2573, p2586, p2588, c2591	

**NOTICE**

The parameter may be protected as a result of r0922 and cannot be changed.

---

<b>c2591</b>	<b>EPOS jogging incremental</b>	
	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Parameter group:</b>	Jog
	<b>Unit:</b> -	
<b>Description:</b>	Signal for incremental jogging.	
<b>Dependency:</b>	See also: p2585, p2586, p2587, p2588, c2589, c2590	

---

<b>c2595</b>	<b>EPOS homing start</b>	
	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Parameter group:</b>	Homing
	<b>Unit:</b> -	

**Description:** Signal to start "Active homing" or "Passive homing".  
0/1 signal edge: Homing is started.  
1/0 signal edge: Homing is interrupted.

**Dependency:** See also: c2597, c2598, p2599, r2684

<b>NOTICE</b>
The parameter may be protected as a result of r0922 and cannot be changed.

**Note**

Active homing (c2597 = 0 signal):  
Active homing can only be activated (0/1 edge) after traversing motion that is being processed has been completed. With the start, where relevant, the state signal "home position set" (r2684.11) is reset.  
Passive homing (c2597 = 1 signal):  
With the start, the state signal "home position set" (r2684.11) is not reset.

**c2596 EPOS set home position**

**Data type:** Unsigned8                      **Visible in:** Standard display  
**Read permission:**                      Read drive data or acknowledge messages  
**Write permission:**                      Edit device configuration or drive applications  
**Parameter group:**                      Homing  
**Unit:** -

**Description:** Signal for "Set home position".

**Dependency:** See also: c2598, p2599, r2684

<b>NOTICE</b>
The parameter may be protected as a result of r0922 and cannot be changed.

**Note**

Home position setting is effective in the following operating states:  
- In the basic state.  
- For FIXED STOP with progress condition END (corresponds to the initial state).  
- For traversing block interrupted via c2640 = 0 signal (intermediate stop).  
- For EPOS not enabled and position actual value valid

**c2597 EPOS homing type selection**

**Data type:** Unsigned8                      **Visible in:** Standard display  
**Read permission:**                      Read drive data or acknowledge messages  
**Write permission:**                      Edit device configuration or drive applications  
**Parameter group:**                      Homing  
**Unit:** -

**Description:** Signal to select homing type.  
1 signal: Passive homing  
0 signal: Active homing

**Dependency:** See also: c2595

**Note**

Homing is activated as follows:  
- Select homing type (c2597)  
- Start homing (c2595 = 0/1 signal edge)

---

<b>c2598[0...3]</b>	<b>EPOS home position signal</b>
	<b>Data type:</b> FloatingPoint32 <b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Homing
	<b>Unit:</b> mm
<b>Description:</b>	Signal for the home position. This value is used as reference for the following homing operations: - Active homing - Set home position - Passive homing - Absolute value adjustment
<b>Index:</b>	[0] = Position control [1] = Motor encoder [2] = Reserved [3] = Reserved
<b>Dependency:</b>	See also: p2502, p2507, c2595, c2596, c2597, p2599
	<b>Note</b> When function "Basic positioner" is activated, the following applies: Incremental measuring system: After the home position is reached, the drive accepts the actual axis position from the position value received via c2598[0]. Absolute encoder: When adjusting the encoder, the position received is set as the actual axis position.

---

<b>c2598[0...3]</b>	<b>EPOS home position signal</b>
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32 <b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Homing
	<b>Unit:</b> °
<b>Description:</b>	Signal for the home position. This value is used as reference for the following homing operations: - Active homing - Set home position - Passive homing - Absolute value adjustment
<b>Index:</b>	[0] = Position control [1] = Motor encoder [2] = Reserved [3] = Reserved
<b>Dependency:</b>	See also: p2502, p2507, c2595, c2596, c2597, p2599
	<b>Note</b> When function "Basic positioner" is activated, the following applies: Incremental measuring system: After the home position is reached, the drive accepts the actual axis position from the position value received via c2598[0]. Absolute encoder: When adjusting the encoder, the position received is set as the actual axis position.

---

<b>p2599</b>	<b>EPOS home position value</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> mm		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	-2.1474828e+09 [mm]	2.1474828e+09 [mm]	0.0000 [mm]
<b>Description:</b>	Sets the position value for the home position. This value is set as the actual axis position after homing or adjustment.		
<b>Dependency:</b>	See also: p2507, c2595, c2596, c2597, c2598		

<b>p2599</b>	<b>EPOS home position value</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> °		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	-2.1474828e+09 [°]	2.1474828e+09 [°]	0.0000 [°]
<b>Description:</b>	Sets the position value for the home position. This value is set as the actual axis position after homing or adjustment.		
<b>Dependency:</b>	See also: p2507, c2595, c2596, c2597, c2598		

<b>p2600</b>	<b>EPOS active homing home position offset</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> mm		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	-2.1474828e+09 [mm]	2.1474828e+09 [mm]	0.0000 [mm]
<b>Description:</b>	Sets the home position shift for active homing.		
<b>Dependency:</b>	See also: c2598		

<b>p2600</b>	<b>EPOS active homing home position offset</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> °		

	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	-2.1474828e+09 [°]	2.1474828e+09 [°]	0.0000 [°]
<b>Description:</b>	Sets the home position shift for active homing.		
<b>Dependency:</b>	See also: c2598		

---

<b>c2604</b>	<b>EPOS active homing start direction</b>		
	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> -		

**Description:** Signal for the start direction for active homing.

1 signal: Start in the negative direction.

0 signal: Start in the positive direction.

**Dependency:** See also: p2583, c2595, c2597

---

<b>p2605</b>	<b>EPOS active homing approach velocity reference cam</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> mm/s		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.001 [mm/s]	4e+07 [mm/s]	100.000 [mm/s]

**Description:** Sets the approach velocity to the reference cam for active homing.

**Dependency:** Active homing only starts with the approach velocity to the reference cam when there is a reference cam (p2607 = 1).  
See also: c2595, c2597, c2604, p2606, p2607

**Note**

When traversing to the reference cam, the velocity override is effective.

If, at the start of active homing, the axis is already at the reference cam, then the axis immediately starts to traverse to the zero mark.

---

<b>p2605</b>	<b>EPOS active homing approach velocity reference cam</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> °/s		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.001 [°/s]	4e+07 [°/s]	3600.000 [°/s]

**Description:** Sets the approach velocity to the reference cam for active homing.

**Dependency:** Active homing only starts with the approach velocity to the reference cam when there is a reference cam (p2607 = 1).  
See also: c2595, c2597, c2604, p2606, p2607



**Note**

When traversing to the reference cam, the velocity override is effective.  
If, at the start of active homing, the axis is already at the reference cam, then the axis immediately starts to traverse to the zero mark.

**p2606**

**EPOS active homing reference cam maximum distance**

**Data type:** FloatingPoint32      **Visible in:** Extended display  
**Read permission:**                      Read drive data or acknowledge messages  
**Write permission:**                      Edit device configuration or drive applications  
**Can be changed in the operating state:** Operation  
**Parameter group:**                      Homing  
**Unit:** mm  
**Min:**                                              **Max:**                                              **Factory setting:**  
0.0000 [mm]                                      2.1474828e+09 [mm]                                      2.1474828e+09 [mm]

**Description:** Sets the maximum distance after starting active homing when traversing to the reference cam.

**Dependency:** See also: c2595, c2597, c2604, p2605, p2607

**Note**

When using a reversing cam, the maximum distance must be set appropriately long.

**p2606**

**EPOS active homing reference cam maximum distance**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32      **Visible in:** Extended display  
**Read permission:**                      Read drive data or acknowledge messages  
**Write permission:**                      Edit device configuration or drive applications  
**Can be changed in the operating state:** Operation  
**Parameter group:**                      Homing  
**Unit:** °  
**Min:**                                              **Max:**                                              **Factory setting:**  
0.0000 [°]                                              2.1474828e+09 [°]                                              2.1474828e+09 [°]

**Description:** Sets the maximum distance after starting active homing when traversing to the reference cam.

**Dependency:** See also: c2595, c2597, c2604, p2605, p2607

**Note**

When using a reversing cam, the maximum distance must be set appropriately long.

**p2607**

**EPOS active homing reference cam available**

**Data type:** Unsigned8                      **Visible in:** Standard display  
**Read permission:**                      Read drive data or acknowledge messages  
**Write permission:**                      Edit device configuration or drive applications  
**Can be changed in the operating state:** Operation  
**Parameter group:**                      Homing  
**Unit:** -  
**Min:**                                              **Max:**                                              **Factory setting:**  
0                                                              1                                                              1

**Description:** Sets whether or not a reference cam is available for active homing.  
Value = 1: Reference cam present.  
Value = 0: No reference cam present.

**Dependency:** See also: c2595, c2597, c2604, p2605, p2606

<b>p2608</b>	<b>EPOS active homing approach velocity zero mark</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> mm/s		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.001 [mm/s]	4e+07 [mm/s]	25.000 [mm/s]
<b>Description:</b>	Sets the approach velocity after detecting the reference cam to search for the zero mark for active homing.		
<b>Dependency:</b>	If there is no reference cam (p2607 = 0), active homing starts immediately with the axis traversing to the zero mark. See also: c2595, c2597, c2604, p2607, p2609		
<p><b>⚠ CAUTION</b></p> <p>If the reference cam is not adjusted so that for each active homing the same zero mark for synchronization is detected, then an "incorrect" axis reference point is obtained. After the reference cam has been left, the search for the zero mark is activated with a time delay due to internal factors. This is the reason that the reference cam should be adjusted in this center between two zero marks and the approach velocity should be adapted to the distance between two zero marks.</p>			
<b>Note</b>			
The velocity override is not effective when traversing to the zero mark.			

<b>p2608</b>	<b>EPOS active homing approach velocity zero mark</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> %/s		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.001 [%/s]	4e+07 [%/s]	900.000 [%/s]
<b>Description:</b>	Sets the approach velocity after detecting the reference cam to search for the zero mark for active homing.		
<b>Dependency:</b>	If there is no reference cam (p2607 = 0), active homing starts immediately with the axis traversing to the zero mark. See also: c2595, c2597, c2604, p2607, p2609		
<p><b>⚠ CAUTION</b></p> <p>If the reference cam is not adjusted so that for each active homing the same zero mark for synchronization is detected, then an "incorrect" axis reference point is obtained. After the reference cam has been left, the search for the zero mark is activated with a time delay due to internal factors. This is the reason that the reference cam should be adjusted in this center between two zero marks and the approach velocity should be adapted to the distance between two zero marks.</p>			
<b>Note</b>			
The velocity override is not effective when traversing to the zero mark.			

---

<b>p2609</b>	<b>EPOS active homing max distance reference cam and zero mark</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> mm		
	<b>Min:</b> 0.0000 [mm]	<b>Max:</b> 2.1474828e+09 [mm]	<b>Factory setting:</b> 20.0000 [mm]
<b>Description:</b>	Sets the maximum distance after leaving the reference cam when traversing to the zero mark.		
<b>Dependency:</b>	See also: c2595, c2597, c2604, p2607, p2608		

---

<b>p2609</b>	<b>EPOS active homing max distance reference cam and zero mark</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> °		
	<b>Min:</b> 0.0000 [°]	<b>Max:</b> 2.1474828e+09 [°]	<b>Factory setting:</b> 720.0000 [°]
<b>Description:</b>	Sets the maximum distance after leaving the reference cam when traversing to the zero mark.		
<b>Dependency:</b>	See also: c2595, c2597, c2604, p2607, p2608		

---

<b>p2611</b>	<b>EPOS active homing approach velocity home position</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> mm/s		
	<b>Min:</b> 0.001 [mm/s]	<b>Max:</b> 4e+07 [mm/s]	<b>Factory setting:</b> 25.000 [mm/s]
<b>Description:</b>	Sets the approach velocity after detecting the zero mark to approach the home position.		
<b>Dependency:</b>	See also: c2595, c2597, c2604, p2607, p2609		

---

**Note**

When traversing to the home position, the velocity override is not effective.

---



---

<b>p2611</b>	<b>EPOS active homing approach velocity home position</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> %s		

	<b>Min:</b> 0.001 [%/s]	<b>Max:</b> 4e+07 [%/s]	<b>Factory setting:</b> 900.000 [%/s]
<b>Description:</b>	Sets the approach velocity after detecting the zero mark to approach the home position.		
<b>Dependency:</b>	See also: c2595, c2597, c2604, p2607, p2609		
	<b>Note</b> When traversing to the home position, the velocity override is not effective.		

<b>c2612[0...1]</b>	<b>EPOS active homing reference cam</b>		
	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> -		
<b>Description:</b>	Signal for the reference cam.		
<b>Index:</b>	[0] = Reference cam selection 1 [1] = Reference cam selection 2		
<b>Dependency:</b>	See also: r0922, p2607		
	<b>NOTICE</b> Parameter c2612[0] may be protected as a result of r0922 and cannot be changed.		
	<b>Note</b> The selection of reference cam 1 or 2 can be configured using p11550.		

<b>c2613</b>	<b>EPOS active homing negative reversing cam</b>		
	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> -		
<b>Description:</b>	Signal for the reversing cam in the negative direction of travel. 1 signal: Reversing cam not reached. 0 signal: Reversing cam reached.		
<b>Dependency:</b>	See also: c2614		
	<b>Note</b> If, during active homing of the positive and negative reversing cam, a 0 signal is detected, then the axis remains at a standstill.		

<b>c2614</b>	<b>EPOS active homing positive reversing cam</b>		
	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Homing	
	<b>Unit:</b> -		
<b>Description:</b>	Signal for the reversing cam in the positive direction of travel. 1 signal: Reversing cam not reached. 0 signal: Reversing cam reached.		
<b>Dependency:</b>	See also: c2613		

**Note**

If, during active homing of the positive and negative reversing cam, a 0 signal is detected, then the axis remains at a standstill.

**p2615**

**EPOS maximum number of traversing blocks**

<b>Data type:</b> Unsigned8	<b>Visible in:</b> Extended display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Commissioning	
<b>Parameter group:</b>	Traversing blocks	
<b>Unit:</b> -		
<b>Min:</b> 1	<b>Max:</b> 32	<b>Factory setting:</b> 32

**Description:** Sets the maximum number of traversing blocks that are available.  
**Dependency:** See also: p2616, p2617, p2618, p2619, p2620, p2621, p2622, p2623

**p2616[0...n]**

**EPOS traversing block block number**

<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Operation	
<b>Parameter group:</b>	Traversing blocks	
<b>Unit:</b> -		
<b>Min:</b> -1	<b>Max:</b> 31	<b>Factory setting:</b> -1

**Description:** Sets a block number.  
 -1: Invalid block number. These blocks are not taken into account.  
 0 ... 31: Valid block number.  
**Dependency:** The number of indices depends on p2615.  
 See also: p2615, p2617, p2618, p2619, p2620, p2621, p2622, p2623

**p2617[0...n]**

**EPOS traversing block position**

<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
<b>Read permission:</b>	Read drive data or acknowledge messages	
<b>Write permission:</b>	Edit device configuration or drive applications	
<b>Can be changed in the operating state:</b>	Operation	
<b>Parameter group:</b>	Traversing blocks	
<b>Unit:</b> mm		
<b>Min:</b> -2.1474828e+09 [mm]	<b>Max:</b> 2.1474828e+09 [mm]	<b>Factory setting:</b> 0.0000 [mm]

**Description:** Sets the target position for the traversing block.  
**Dependency:** The number of indices depends on p2615.  
 See also: p2615, p2616, p2618, p2619, p2620, p2621, p2622, p2623

**Note**

The target position is approached in either relative or absolute terms depending on p2623.

---

<b>p2617[0...n]</b>	<b>EPOS traversing block position</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Traversing blocks	
	<b>Unit:</b> °		
	<b>Min:</b> -2.1474828e+09 [°]	<b>Max:</b> 2.1474828e+09 [°]	<b>Factory setting:</b> 0.0000 [°]
<b>Description:</b>	Sets the target position for the traversing block.		
<b>Dependency:</b>	The number of indices depends on p2615. See also: p2615, p2616, p2618, p2619, p2620, p2621, p2622, p2623		
	<b>Note</b> The target position is approached in either relative or absolute terms depending on p2623.		

---

<b>p2618[0...n]</b>	<b>EPOS traversing block velocity</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Traversing blocks	
	<b>Unit:</b> mm/s		
	<b>Min:</b> 0.001 [mm/s]	<b>Max:</b> 4e+07 [mm/s]	<b>Factory setting:</b> 100.000 [mm/s]
<b>Description:</b>	Sets the velocity for the traversing block.		
<b>Dependency:</b>	The number of indices depends on p2615. See also: p2615, p2616, p2617, p2619, p2620, p2621, p2622, p2623, c2646		
	<b>Note</b> The velocity can be influenced using the velocity override (c2646).		

---

<b>p2618[0...n]</b>	<b>EPOS traversing block velocity</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Traversing blocks	
	<b>Unit:</b> °/s		
	<b>Min:</b> 0.001 [°/s]	<b>Max:</b> 4e+07 [°/s]	<b>Factory setting:</b> 3600.000 [°/s]
<b>Description:</b>	Sets the velocity for the traversing block.		
<b>Dependency:</b>	The number of indices depends on p2615. See also: p2615, p2616, p2617, p2619, p2620, p2621, p2622, p2623, c2646		
	<b>Note</b> The velocity can be influenced using the velocity override (c2646).		

---

<b>p2619[0...n]</b>	<b>EPOS traversing block acceleration override</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Traversing blocks	
	<b>Unit:</b> %		
	<b>Min:</b> 1.0 [%]	<b>Max:</b> 100.0 [%]	<b>Factory setting:</b> 100.0 [%]
<b>Description:</b>	Sets the acceleration override for the traversing block. The override refers to the maximum acceleration (p2572).		
<b>Dependency:</b>	The number of indices depends on p2615. See also: p2572, p2615, p2616, p2617, p2618, p2620, p2621, p2622, p2623		

<b>p2620[0...n]</b>	<b>EPOS traversing deceleration override</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Traversing blocks	
	<b>Unit:</b> %		
	<b>Min:</b> 1.0 [%]	<b>Max:</b> 100.0 [%]	<b>Factory setting:</b> 100.0 [%]
<b>Description:</b>	Sets the deceleration override for the traversing block. The override refers to the maximum deceleration (p2573).		
<b>Dependency:</b>	The number of indices depends on p2615. See also: p2573, p2615, p2616, p2617, p2618, p2619, p2621, p2622, p2623		

**NOTICE**

If, when calculating the traversing profile, it is identified that the target position of the next block with the programmed deceleration override will not be reached without direction reversal (flying block change), then the old (actual) deceleration override remains effective.

<b>p2621[0...n]</b>	<b>EPOS traversing block task</b>		
	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Traversing blocks	
	<b>Unit:</b> -		
	<b>Min:</b> 1	<b>Max:</b> 9	<b>Factory setting:</b> 1
<b>Description:</b>	Sets the required task for the traversing block.		
<b>Value:</b>	1:       POSITIONING 2:       FIXED STOP 3:       ENDLESS_POS 4:       ENDLESS_NEG 5:       WAITING		

6: GOTO  
 7: SET\_O  
 8: RESET\_O  
 9: JERK

**Dependency:** The number of indices depends on p2615.  
 See also: p2615, p2616, p2617, p2618, p2619, p2620, p2622, p2623

**p2622[0...n]****EPOS traversing block task parameter**

**Data type:** Integer32                      **Visible in:** Standard display  
**Read permission:**                      Read drive data or acknowledge messages  
**Write permission:**                      Edit device configuration or drive applications  
**Can be changed in the operating state:** Operation  
**Parameter group:**                      Traversing blocks  
**Unit:** -

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
-2147483648	2147483647	0

**Description:** Sets additional information/data of the appropriate task for the traversing block.

**Dependency:** The number of indices depends on p2615.  
 See also: p2615, p2616, p2617, p2618, p2619, p2620, p2621, p2623

**Note**

The following should be set depending on the task:  
 FIXED STOP: Clamping torque and clamping force (rotary 0...65536 [0.01 Nm], linear 0...65536 [N])  
 WAIT: Wait time [ms]  
 GOTO: Block number  
 SET\_O: 1, 2 or 3 - set direct output 1, 2 or 3 (both)  
 RESET\_O: 1, 2 or 3 - reset direct output 1, 2 or 3 (both)  
 JERK: 0 - deactivate, 1 - activate

**p2623[0...n]****EPOS traversing block task mode**

**Data type:** Unsigned16                      **Visible in:** Standard display  
**Read permission:**                      Read drive data or acknowledge messages  
**Write permission:**                      Edit device configuration or drive applications  
**Can be changed in the operating state:** Operation  
**Parameter group:**                      Traversing blocks  
**Unit:** -

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0	65535	0



**Description:** Sets the influence of the task for the traversing block.  
 Value = 0000 cccc bbbb aaaa  
 cccc: Positioning mode  
 cccc = 0000 --> ABSOLUTE  
 cccc = 0001 --> RELATIVE  
 cccc = 0010 --> ABS\_POS (only for a rotary axis with modulo correction)  
 cccc = 0011 --> ABS\_NEG (only for a rotary axis with modulo correction)  
 bbbb: Progression condition  
 bbbb = 0000 --> END  
 bbbb = 0001 --> CONTINUE\_WITH\_STOP  
 bbbb = 0010 --> CONTINUE\_FLYING  
 bbbb = 0011 --> CONTINUE\_EXTERNAL  
 bbbb = 0100 --> CONTINUE\_EXTERNAL\_WAIT  
 bbbb = 0101 --> CONTINUE\_EXTERNAL\_ALARM  
 aaaa: IDs  
 aaaa = 000x --> show/hide block (x = 0: show, x = 1: hide)

**Dependency:** The number of indices depends on p2615.  
 See also: p2615, p2616, p2617, p2618, p2619, p2620, p2621, p2622

**c2625 EPOS traversing block selection bit 0**

**Data type:** Unsigned8                      **Visible in:** Standard display  
**Read permission:**                              Read drive data or acknowledge messages  
**Write permission:**                              Edit device configuration or drive applications  
**Parameter group:**                              Traversing blocks  
**Unit:** -

**Description:** Signal to select the traversing block, bit 0.  
**Dependency:** Parameters c2625, c2626, c2627, c2628 and c2629 are used to select one of the maximum 64 traversing blocks.  
 See also: c2626, c2627, c2628, c2629

**c2626 EPOS traversing block selection bit 1**

**Data type:** Unsigned8                      **Visible in:** Standard display  
**Read permission:**                              Read drive data or acknowledge messages  
**Write permission:**                              Edit device configuration or drive applications  
**Parameter group:**                              Traversing blocks  
**Unit:** -

**Description:** Signal to select the traversing block, bit 1.  
**Dependency:** Parameters c2625, c2626, c2627, c2628 and c2629 are used to select one of the maximum 64 traversing blocks.  
 See also: c2625, c2627, c2628, c2629

**c2627 EPOS traversing block selection bit 2**

**Data type:** Unsigned8                      **Visible in:** Standard display  
**Read permission:**                              Read drive data or acknowledge messages  
**Write permission:**                              Edit device configuration or drive applications  
**Parameter group:**                              Traversing blocks  
**Unit:** -

**Description:** Signal to select the traversing block, bit 2.  
**Dependency:** Parameters c2625, c2626, c2627, c2628 and c2629 are used to select one of the maximum 64 traversing blocks.  
 See also: c2625, c2626, c2628, c2629

---

<b>c2628</b>	<b>EPOS traversing block selection bit 3</b>
	<b>Data type:</b> Unsigned8 <b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Traversing blocks
	<b>Unit:</b> -
<b>Description:</b>	Signal to select the traversing block, bit 3.
<b>Dependency:</b>	Parameters c2625, c2626, c2627, c2628 and c2629 are used to select one of the maximum 64 traversing blocks. See also: c2625, c2626, c2627, c2629

---

<b>c2629</b>	<b>EPOS traversing block selection bit 4</b>
	<b>Data type:</b> Unsigned8 <b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Traversing blocks
	<b>Unit:</b> -
<b>Description:</b>	Signal to select the traversing block, bit 4.
<b>Dependency:</b>	Parameters c2625, c2626, c2627, c2628 and c2629 are used to select one of the maximum 64 traversing blocks. See also: c2625, c2626, c2627, c2628

---

<b>c2631</b>	<b>EPOS activate traversing task (0 -&gt; 1)</b>
	<b>Data type:</b> Unsigned8 <b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Traversing blocks
	<b>Unit:</b> -
<b>Description:</b>	Signal for "Activate traversing task". c2631 = 0/1 signal The traversing task, selected using c2625 ... c2629, is started.
<b>Dependency:</b>	See also: c2625, c2626, c2627, c2628, c2629, c2640, c2641

**NOTICE**

The parameter may be protected as a result of r0922 and cannot be changed.

**Note**

To start a traversing block, the axis must be referenced (r2684.11 = 1).

The status signal r2684.12 = 0/1 signal is used for acknowledgment.

A traversing task can be influenced using the following signals:

- Intermediate stop via c2640.
- Reject traversing task via c2641.

---

<b>p2632</b>	<b>EPOS external block change evaluation</b>	
	<b>Data type:</b> Integer16 <b>Visible in:</b> Extended display	
	<b>Read permission:</b> Read drive data or acknowledge messages	
	<b>Write permission:</b> Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b> Ready for operation	
	<b>Parameter group:</b> Traversing blocks	
	<b>Unit:</b> -	
<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0	1	0

**Description:** Sets the mode to evaluate "external block change".  
**Value:** 0: External block change via a measuring probe  
 1: External block change via c2633  
**Dependency:** See also: p2623, c2633, r2677, r2678

**Note**

In the mode "external block change via measuring probe" (p2632 = 0), the following applies:  
 When starting a traversing block with the block change enable CONTINUE\_EXTERNAL, CONTINUE\_EXTERNAL\_WAIT and CONTINUE\_EXTERNAL\_ALARM, an activated "passive homing" is interrupted.  
 After ending the block, "Passive homing" must be reactivated using a 0/1 edge in c2595.

**c2633 EPOS external block change (0 -> 1)**

**Data type:** Unsigned8                      **Visible in:** Extended display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Parameter group:** Traversing blocks  
**Unit:** -

**Description:** Signal for the "External block change".  
 c2633 = 0/1 signal  
**Dependency:** The evaluation of the signal is only active p2632 = 1.  
 See also: p2623, p2632, c2640, c2641, r2677, r2678

<b>NOTICE</b>
The parameter may be protected as a result of r0922 and cannot be changed.

**Note**

A 0/1 edge initiates a flying block change in the subsequent traversing block.  
 When the external block change is identified, the actual position is saved in r2678.  
 A traversing task can be influenced using the following signals:  
 - Intermediate stop via c2640.  
 - Reject traversing task via c2641.

**p2634[0] EPOS fixed stop maximum following error**

**Data type:** FloatingPoint32                      **Visible in:** Standard display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Can be changed in the operating state:** Operation  
**Parameter group:** Traversing blocks  
**Unit:** mm  
**Min:** 0.0000 [mm]                      **Max:** 2.1474828e+09 [mm]                      **Factory setting:** 1.0000 [mm]

**Description:** Sets the following error to detect the "fixed stop reached" state (r2526.4).  
**Dependency:** See also: r2526, p2621, r2675


**Note**


The state "fixed stop reached" is detected if the following error exceeds the theoretically calculated following error value by p2634.

<b>p2634[0]</b>	<b>EPOS fixed stop maximum following error</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Traversing blocks	
	<b>Unit:</b> °		
	<b>Min:</b> 0.0000 [°]	<b>Max:</b> 2.1474828e+09 [°]	<b>Factory setting:</b> 36.0000 [°]
<b>Description:</b>	Sets the following error to detect the "fixed stop reached" state (r2526.4).		
<b>Dependency:</b>	See also: r2526, p2621, r2675		
	<b>Note</b>		
	The state "fixed stop reached" is detected if the following error exceeds the theoretically calculated following error value by p2634.		

<b>p2635</b>	<b>EPOS fixed stop monitoring window</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Traversing blocks	
	<b>Unit:</b> mm		
	<b>Min:</b> 0.0000 [mm]	<b>Max:</b> 2.1474828e+09 [mm]	<b>Factory setting:</b> 0.1250 [mm]
<b>Description:</b>	Sets the monitoring window of the actual position after the fixed stop is reached.		
<b>Dependency:</b>	See also: r2526, r2683		
	<b>Note</b>		
	If, after the fixed stop is reached, the end stop shifts in either the positive or negative direction by more than the value set here, then r2526.5 is set to 1 and an appropriate message is output.		

<b>p2635</b>	<b>EPOS fixed stop monitoring window</b>		
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Traversing blocks	
	<b>Unit:</b> °		
	<b>Min:</b> 0.0000 [°]	<b>Max:</b> 2.1474828e+09 [°]	<b>Factory setting:</b> 3.6000 [°]
<b>Description:</b>	Sets the monitoring window of the actual position after the fixed stop is reached.		
<b>Dependency:</b>	See also: r2526, r2683		
	<b>Note</b>		
	If, after the fixed stop is reached, the end stop shifts in either the positive or negative direction by more than the value set here, then r2526.5 is set to 1 and an appropriate message is output.		

<b>c2640</b>	<p><b>EPOS intermediate stop (0 signal)</b></p> <p><b>Data type:</b> Unsigned8      <b>Visible in:</b> Standard display</p> <p><b>Read permission:</b>      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>      Edit device configuration or drive applications</p> <p><b>Parameter group:</b>      Traversing blocks, Direct setpoint input (MDI)</p> <p><b>Unit:</b> -</p>
<b>Description:</b>	<p>Signal for "No intermediate stop/intermediate stop".</p> <p>1 signal: No intermediate stop</p> <p>0 signal: Intermediate stop.</p>
<b>Dependency:</b>	<p>See also: c2631, c2641, c2647, c2649</p>
<p> <b>CAUTION</b></p> <p>For c2649 = 1 signal, the following applies: Motion starts without any explicit control signal.</p>	
<p><b>NOTICE</b></p> <p>The parameter may be protected as a result of r0922 and cannot be changed.</p>	
<p><b>Note</b></p> <p>This signal is only effective in the modes "traversing blocks" and "direct setpoint input/MDI". When the intermediate stop is activated, then the axis brakes with the parameterized deceleration (p2620 or c2645).</p>	

<b>c2641</b>	<p><b>EPOS reject traversing task (0 signal)</b></p> <p><b>Data type:</b> Unsigned8      <b>Visible in:</b> Standard display</p> <p><b>Read permission:</b>      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>      Edit device configuration or drive applications</p> <p><b>Parameter group:</b>      Traversing blocks, Direct setpoint input (MDI)</p> <p><b>Unit:</b> -</p>
<b>Description:</b>	<p>Signal for "Do not reject traversing task/reject traversing task".</p> <p>1 signal: Do not reject traversing task.</p> <p>0 signal: Reject traversing task</p>
<b>Dependency:</b>	<p>See also: c2631, c2640, c2647, c2649</p>
<p> <b>CAUTION</b></p> <p>For c2649 = 1 signal, the following applies: Motion starts without any explicit control signal.</p>	
<p><b>NOTICE</b></p> <p>The parameter may be protected as a result of r0922 and cannot be changed.</p>	
<p><b>Note</b></p> <p>This signal is only effective in the modes "traversing blocks" and "direct setpoint input/MDI". When activating reject traversing tasks, then the axis brakes with the maximum deceleration (p2573).</p>	

<b>c2642</b>	<p><b>EPOS direct setpoint input/MDI position setpoint</b></p> <p><b>Data type:</b> FloatingPoint32      <b>Visible in:</b> Standard display</p> <p><b>Read permission:</b>      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>      Edit device configuration or drive applications</p> <p><b>Parameter group:</b>      Direct setpoint input (MDI)</p> <p><b>Unit:</b> mm</p>
<b>Description:</b>	<p>Signal for the position setpoint in the mode "direct setpoint input/MDI".</p>
<b>Dependency:</b>	<p>See also: c2648, c2649, c2650</p>

<b>NOTICE</b>
The parameter may be protected as a result of r0922 and cannot be changed.

**Note**

Depending on c2649, the position setpoint is either transferred continuously or edge-triggered.  
The position setpoint input is interpreted as length unit [LU].

**c2642**

S200 Basic PN (EPOS Lastseite rotierend),  
S200 PN (EPOS Lastseite rotierend)

**EPOS direct setpoint input/MDI position setpoint**

**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:**                      Read drive data or acknowledge messages  
**Write permission:**                      Edit device configuration or drive applications  
**Parameter group:**                      Direct setpoint input (MDI)  
**Unit:** °

**Description:** Signal for the position setpoint in the mode "direct setpoint input/MDI".

**Dependency:** See also: c2648, c2649, c2650

<b>NOTICE</b>
The parameter may be protected as a result of r0922 and cannot be changed.

**Note**

Depending on c2649, the position setpoint is either transferred continuously or edge-triggered.  
The position setpoint input is interpreted as length unit [LU].

**c2643****EPOS direct setpoint input/MDI velocity setpoint**

**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:**                      Read drive data or acknowledge messages  
**Write permission:**                      Edit device configuration or drive applications  
**Parameter group:**                      Direct setpoint input (MDI)  
**Unit:** mm/s

**Description:** Signal for the velocity setpoint in the mode "Direct setpoint input/MDI".

**Dependency:** See also: c2649, c2650

<b>NOTICE</b>
The parameter may be protected as a result of r0922 and cannot be changed.

**Note**

Depending on c2649, the velocity setpoint is either transferred continuously or edge-triggered.  
The velocity setpoint input is interpreted as [1000 LU/min].

**c2643**

S200 Basic PN (EPOS Lastseite rotierend),  
S200 PN (EPOS Lastseite rotierend)

**EPOS direct setpoint input/MDI velocity setpoint**

**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:**                      Read drive data or acknowledge messages  
**Write permission:**                      Edit device configuration or drive applications  
**Parameter group:**                      Direct setpoint input (MDI)  
**Unit:** °/s

**Description:** Signal for the velocity setpoint in the mode "Direct setpoint input/MDI".

**Dependency:** See also: c2649, c2650

<b>NOTICE</b>
The parameter may be protected as a result of r0922 and cannot be changed.

**Note**

Depending on c2649, the velocity setpoint is either transferred continuously or edge-triggered.  
The velocity setpoint input is interpreted as [1000 LU/min].

**c2644**      **EPOS direct setpoint input/MDI acceleration override**  
**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Direct setpoint input (MDI)  
**Unit:** %  
**Description:**      Signal for acceleration override in the operating mode "direct setpoint input/MDI".  
**Dependency:**      See also: c2649, c2650, c11560

<b>NOTICE</b>
The parameter may be protected as a result of r0922 and cannot be changed.

**Note**  
Depending on c2649, the acceleration override is either transferred continuously or edge-triggered.  
The signal value 4000 hex (16384 dec) corresponds to 100 %.

**c2645**      **EPOS direct setpoint input/MDI deceleration override**  
**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Traversing blocks  
**Unit:** %  
**Description:**      Signal for the deceleration override in the operating mode "Direct setpoint input/MDI".  
**Dependency:**      See also: c2649, c2650, c11561

<b>NOTICE</b>
If, when calculating the traversing profile, it is identified that the target position with the programmed deceleration override cannot be reached without reversing the direction, then when accepting the dynamic values, the larger deceleration override is accepted and becomes effective. The parameter may be protected as a result of r0922 and cannot be changed.

**Note**  
Depending on c2649, the deceleration override is either transferred continuously or edge-triggered.  
The signal value 4000 hex (16384 dec) corresponds to 100 %.

**c2646**      **EPOS velocity override**  
**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Jog, Homing, Traversing blocks, Direct setpoint input (MDI)  
**Unit:** %  
**Description:**      Signal for the velocity override.  
This velocity override is effective in the following operating modes "Direct setpoint input/MDI", "Traversing blocks", "Jogging" and "Active homing" (when approaching the reference cam).  
**Dependency:**      See also: p2571, p2585, p2586, p2605, p2618, c2643, r2681

<b>NOTICE</b>
The parameter may be protected as a result of r0922 and cannot be changed.

**Note**  
The effective override (r2681) can differ from the specified override due to limits (e.g. maximum velocity).

---

<b>c2647</b>	<b>EPOS direct setpoint input/MDI selection</b>
	<b>Data type:</b> Unsigned8 <b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Direct setpoint input (MDI)
	<b>Unit:</b> -
<b>Description:</b>	Signal to select operating mode "Direct setpoint input/MDI".
<b>Dependency:</b>	See also: c2640, c2641, c2642, c2643, c2644, c2645, c2646, c2648, c2649, c2650, c2651, c2652, c2653

---

**Note**

In this mode, using c2653, a flying changeover can be made between setting-up and positioning.  
 In this mode, even if the axis is not referenced ( $r2684.11 = 0$ ) relative positioning is possible.

---



---

<b>c2648</b>	<b>EPOS direct setpoint input/MDI positioning type</b>
	<b>Data type:</b> Unsigned8 <b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Direct setpoint input (MDI)
	<b>Unit:</b> -
<b>Description:</b>	Signal for the positioning type in mode "Direct setpoint input/MDI". 1 signal: Absolute positioning is selected. 0 signal: Relative positioning is selected.
<b>Dependency:</b>	See also: c2649, c2650, c2654

**NOTICE**

Absolute positioning: To traverse, the home position must be set ( $r2684.11 = 1$ ). Relative positioning: To traverse, "Home position set" is not required.
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------

---

**Note**

Depending on c2649, the positioning type is either transferred continuously or edge-triggered.  
 This parameter is only evaluated for  $c2654 = 0$ .  
 This parameter is possibly not evaluated as a result of the selected telegram.

---



---

<b>c2649</b>	<b>EPOS direct setpoint input/MDI transfer type selection</b>
	<b>Data type:</b> Unsigned8 <b>Visible in:</b> Standard display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b> Direct setpoint input (MDI)
	<b>Unit:</b> -
<b>Description:</b>	Signal to define how values are transferred in operating mode "Direct setpoint input/MDI". 1 signal: Values are continually transferred (refer to parameter under dependency). 0 signal: The values are transferred for $c2650 = 0/1$ signal.
<b>Dependency:</b>	See also: c2642, c2643, c2644, c2645, c2648, c2650, c2651, c2652

**CAUTION**

For a 1 signal, the following applies: Motion starts without any explicit control signal.
----------------------------------------------------------------------------------------------

---

**Note**

Parameter c2649 can only be changed when  $r0922 = 999$ .

---



<b>c2650</b>	<b>EPOS direct setpoint input/MDI setpoint acceptance edge</b>		
	<b>Data type:</b> Unsigned8 <b>Visible in:</b> Standard display <b>Read permission:</b> Read drive data or acknowledge messages <b>Write permission:</b> Edit device configuration or drive applications <b>Parameter group:</b> Direct setpoint input (MDI) <b>Unit:</b> -		
<b>Description:</b>	Signal to accept the values for edge-triggered selection (c2649 = 0 signal) in the operating mode "Direct setpoint input/MDI". c2650 = 0/1 signal and c2649 = 0 signal Values are accepted, edge-triggered (refer to parameter under dependency).		
<b>Dependency:</b>	See also: c2640, c2641, c2642, c2643, c2644, c2645, c2648, c2649, c2651, c2652, r2684		
	<table border="1"> <tr> <td><b>NOTICE</b></td> </tr> <tr> <td>The parameter may be protected as a result of r0922 and cannot be changed.</td> </tr> </table>	<b>NOTICE</b>	The parameter may be protected as a result of r0922 and cannot be changed.
<b>NOTICE</b>			
The parameter may be protected as a result of r0922 and cannot be changed.			
	<b>Note</b> The status signal r2684.12 = 0/1 signal is used for acknowledgment. The operating mode "direct setpoint input/MDI" can be influenced via the following signals: - Intermediate stop via c2640. - Reject traversing task via c2641.		
<b>c2651</b>	<b>EPOS direct setpoint input/MDI direction selection, positive</b>		
	<b>Data type:</b> Unsigned8 <b>Visible in:</b> Standard display <b>Read permission:</b> Read drive data or acknowledge messages <b>Write permission:</b> Edit device configuration or drive applications <b>Parameter group:</b> Direct setpoint input (MDI) <b>Unit:</b> -		
<b>Description:</b>	Signal for the positive direction selection in operating mode "Direct setpoint input/MDI".		
<b>Dependency:</b>	See also: p2576, c2648, c2649, c2650, c2652, c2653, c2654		
	<b>Note</b> For "setting up" (c2653 = 1 signal), the following applies: - The traversing direction can be specified using this parameter. - If both directions (c2651, c2652) are selected, then the axis remains stationary (zero speed). - If both directions (c2651, c2652) are deselected, then the axis remains stationary (zero speed). For "Positioning" (c2653 = 0 signal), the following applies: Using parameters c2651 and c2652, when the modulo correction (c2577 = 1 signal) is activated and absolute positioning (c2648 = 1 signal), the travel direction is specified as follows: c2651 / c2652 0 signal / 0 signal: Absolute positioning through the shortest distance. 1 signal / 0 signal: Absolute positioning in the positive direction. 0 signal / 1 signal: Absolute positioning in the negative direction. 1 signal / 1 signal: Absolute positioning through the shortest distance.		
<b>c2652</b>	<b>EPOS direct setpoint input/MDI direction selection negative</b>		
	<b>Data type:</b> Unsigned8 <b>Visible in:</b> Standard display <b>Read permission:</b> Read drive data or acknowledge messages <b>Write permission:</b> Edit device configuration or drive applications <b>Parameter group:</b> Direct setpoint input (MDI) <b>Unit:</b> -		
<b>Description:</b>	The signal for the negative direction selection in the operating mode "Direct setpoint input/MDI".		
<b>Dependency:</b>	See also: p2576, c2648, c2649, c2650, c2651, c2653, c2654		

**Note**

For "setting up" (c2653 = 1 signal), the following applies:

- The travel direction is specified using this signal.
- If both directions (c2651, c2652) are selected, then the axis remains stationary (zero speed).
- If both directions (c2651, c2652) are deselected, then the axis remains stationary (zero speed).

For "Positioning" (c2653 = 0 signal), the following applies:

Using c2651 and c2652, when the modulo correction (c2577 = 1 signal) is activated and absolute positioning (c2648 = 1 signal), the travel direction can be specified as follows:

c2651 / c2652

0 signal / 0 signal: Absolute positioning through the shortest distance.

1 signal / 0 signal: Absolute positioning in the positive direction.

0 signal / 1 signal: Absolute positioning in the negative direction.

1 signal / 1 signal: Absolute positioning through the shortest distance.

**c2653****EPOS direct setpoint input/MDI setting-up selection**

**Data type:** Unsigned8

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Direct setpoint input (MDI)

**Unit:** -

**Description:**

Signal for setting-up in operating mode "Direct setpoint input/MDI".

1 signal: Setting-up selected.

0 signal: Positioning selected.

**Dependency:**

See also: c2651, c2652

**Note**

In the operating mode "direct setpoint input/MDI", it is possible to make a flying changeover between setting-up and positioning.

For "setting up" (c2653 = 1 signal), the following applies:

A traversing direction must be selected using parameters c2651 and c2652.

**c2654****EPOS direct setpoint input/MDI mode adaptation**

**Data type:** Unsigned16

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Direct setpoint input (MDI)

**Unit:** -

**Description:**

Signal of the MDI mode via PROFIBUS telegram 110 in operating mode "direct setpoint input/MDI".

c2654 = 0: Signals are evaluated.

c2654 > 0: Signals are not evaluated.

The evaluation involves the following signals:

- c2648 (positioning type)
- c2651 (positive direction selection)
- c2652 (negative direction selection)

In this case, the following definitions apply:

Signal via c2654 = xx0x hex -> absolute

Signal via c2654 = xx1x hex -> relative

Signal via c2654 = xx2x hex -> abs\_pos (only for modulo correction)

Signal via c2654 = xx3x hex -> abs\_neg (only for modulo correction)

**Dependency:**

See also: c2648, c2651, c2652

**c2655[0...1]**      **EPOS select tracking mode**

**Data type:** Unsigned8      **Visible in:** Extended display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Parameter group:**      Basic positioner

**Unit:** -

**Description:**      Signal to select tracking operation.  
c2655[0] or c2655[1] = 1 signal  
Tracking mode after withdrawing the enable signal from EPOS (c2656 = 0 signal).  
c2655[0] and c2655[1] = 0 signal  
No tracking mode after withdrawing the enable signal from EPOS (c2656 = 0 signal).

<b>NOTICE</b>
The parameter may be protected as a result of r0922 and cannot be changed.

**Note**

For the following events, independent of the signal that is present, tracking mode is selected:

- After booting.
- After a 0/1 signal at c2658 (EPOS position actual value, valid feedback signal).
- While a fault is present.

**r2665**      **EPOS position setpoint**

**Data type:** FloatingPoint32      **Visible in:** Standard display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Parameter group:**      Jog, Homing, Traversing blocks, Direct setpoint input (MDI)

**Unit:** mm

**Description:**      Displays the actual absolute position setpoint.

**Dependency:**      See also: c2530

**Note**

As default, c2530 is interconnected with r2665.

**r2665**      **EPOS position setpoint**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32      **Visible in:** Standard display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Parameter group:**      Jog, Homing, Traversing blocks, Direct setpoint input (MDI)

**Unit:** °

**Description:**      Displays the actual absolute position setpoint.

**Dependency:**      See also: c2530

**Note**

As default, c2530 is interconnected with r2665.

**r2666**      **EPOS velocity setpoint**

**Data type:** FloatingPoint32      **Visible in:** Standard display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Parameter group:**      Jog, Homing, Traversing blocks, Direct setpoint input (MDI)

**Unit:** mm/s

**Description:**      Displays the actual velocity setpoint.

**Dependency:** See also: c2531

**Note**

As default, c2531 is interconnected with r2666.

**r2666****EPOS velocity setpoint**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Jog, Homing, Traversing blocks, Direct setpoint input (MDI)

**Unit:** %/s

**Description:**

Displays the actual velocity setpoint.

**Dependency:**

See also: c2531

**Note**

As default, c2531 is interconnected with r2666.

**r2669.0...5****EPOS actual operating mode**

**Data type:** Unsigned32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Jog, Homing, Traversing blocks, Direct setpoint input (MDI)

**Unit:** -

**Description:**

Displays the actual active operating mode.

**Bit array:**

Bit	Signal name	1 signal	0 signal
00	Jog operating mode	Active	Not active
01	Operating mode active homing	Active	Not active
02	Operating mode traversing blocks	Active	Not active
03	Operating mode positioning for direct setpoint input / MDI	Active	Not active
04	Operating mode setting up for direct setpoint input / MDI	Active	Not active
05	Option passive homing	Active	Not active

**Dependency:**

See also: c2589, c2590, c2595, c2631, c2647, c2653

**r2670.0...15****EPOS status word active traversing block**

**Data type:** Unsigned32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Traversing blocks

**Unit:** -

**Description:**

Displays the status word for the active traversing block.

r2670.0: Active traversing block, bit 0

...

r2670.5: Active traversing block, bit 5

r2670.15: MDI active

**Bit array:**

Bit	Signal name	1 signal	0 signal
00	Active traversing block bit 0	Active	Not active
01	Active traversing block bit 1	Active	Not active
02	Active traversing block bit 2	Active	Not active
03	Active traversing block bit 3	Active	Not active
04	Active traversing block bit 4	Active	Not active

05	Active traversing block bit 5	Active	Not active
15	MDI active	Active	Not active

**Dependency:** See also: c2631, c2647

---

**Note**

For bit 00 ... 05:

Displays the active traversing block in the traversing blocks operating mode.

For bit 15:

For a 1 signal, the operating mode - direct setpoint input/MDI - is active

---



---

**r2671** **EPOS actual position setpoint**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Jog, Traversing blocks, Direct setpoint input (MDI)

**Unit:** mm

**Description:** Displays the position setpoint presently being processed.

---

**Note**

A position of 0 is displayed for non position-related tasks (e.g. ENDLESS\_POS, ENDLESS\_NEG).

---



---

**r2671** **EPOS actual position setpoint**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Jog, Traversing blocks, Direct setpoint input (MDI)

**Unit:** °

**Description:** Displays the position setpoint presently being processed.

---

**Note**

A position of 0 is displayed for non position-related tasks (e.g. ENDLESS\_POS, ENDLESS\_NEG).

---



---

**r2672** **EPOS actual velocity setpoint**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Jog, Homing, Traversing blocks, Direct setpoint input (MDI)

**Unit:** mm/s

**Description:** Displays the velocity setpoint presently being processed.

---



---

**r2672** **EPOS actual velocity setpoint**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Jog, Homing, Traversing blocks, Direct setpoint input (MDI)

**Unit:** °/s

**Description:** Displays the velocity setpoint presently being processed.

---

<b>r2673</b>	<b>EPOS actual acceleration override</b>
<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Jog, Traversing blocks, Direct setpoint input (MDI)
<b>Unit:</b> %	

**Description:** Displays the acceleration override presently being processed.

**Note**

An override of 100% is effective in the "Jogging" and "Active homing" operating modes.

---



---

<b>r2674</b>	<b>EPOS actual deceleration override</b>
<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Jog, Traversing blocks, Direct setpoint input (MDI)
<b>Unit:</b> %	

**Description:** Displays the deceleration override presently being processed.

**Note**

An override of 100% is effective in the "Jogging" and "Active homing" operating modes.

---



---

<b>r2675</b>	<b>EPOS actual task</b>
<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Traversing blocks
<b>Unit:</b> -	

**Description:** Display for the task presently being processed.

**Value:**

0:	Inactive
1:	POSITIONING
2:	FIXED STOP
3:	ENDLESS_POS
4:	ENDLESS_NEG
5:	WAITING
6:	GOTO
7:	SET_O
8:	RESET_O
9:	JERK

**Dependency:** See also: p2621

---

<b>r2676</b>	<b>EPOS actual task parameter</b>
<b>Data type:</b> Integer32	<b>Visible in:</b> Standard display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Traversing blocks
<b>Unit:</b> -	

**Description:** Displays the task parameter presently being processed in the "traversing blocks" operating mode.

**Dependency:** See also: p2622

**Note**

The following is displayed depending on the task:  
 FIXED STOP: Clamping torque (0 ... 65536 [0.01 Nm]) or clamping force (0 ... 65536 [N])  
 WAIT: Wait time [ms]  
 GOTO: Block number  
 SET\_O: 1, 2, 3 --> direct output 1, 2 or 3 (both) is set  
 RESET\_O: 1, 2, 3 --> direct output 1, 2 or 3 (both) is reset  
 JERK: 0 --> deactivate, 1 --> activate

**r2677**                    **EPOS actual task mode**

**Data type:** Unsigned16                    **Visible in:** Standard display

**Read permission:**                    Read drive data or acknowledge messages

**Write permission:**                    Edit device configuration or drive applications

**Parameter group:**                    Traversing blocks

**Unit:** -

**Description:**                    Displays the task mode presently being processed.

**Dependency:**                    See also: p2623

**r2678**                    **EPOS external block change actual position**

**Data type:** FloatingPoint32                    **Visible in:** Standard display

**Read permission:**                    Read drive data or acknowledge messages

**Write permission:**                    Edit device configuration or drive applications

**Parameter group:**                    Traversing blocks, Direct setpoint input (MDI)

**Unit:** mm

**Description:**                    Displays the actual position for the following events:  
 - External block change via measuring probe (p2632 = 0, c2661 = 0/1 signal).  
 - External block change via c2633 (p2632 = 1, c2633 = 0/1 signal).  
 - Activate traversing task (c2631 = 0/1 signal).

**Dependency:**                    See also: c2631, p2632, c2633

**r2678**                    **EPOS external block change actual position**

S200 Basic PN (EPOS Lastseite rotierend),  
 S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32                    **Visible in:** Standard display

**Read permission:**                    Read drive data or acknowledge messages

**Write permission:**                    Edit device configuration or drive applications

**Parameter group:**                    Traversing blocks, Direct setpoint input (MDI)

**Unit:** °

**Description:**                    Displays the actual position for the following events:  
 - External block change via measuring probe (p2632 = 0, c2661 = 0/1 signal).  
 - External block change via c2633 (p2632 = 1, c2633 = 0/1 signal).  
 - Activate traversing task (c2631 = 0/1 signal).

**Dependency:**                    See also: c2631, p2632, c2633

**r2680**                    **EPOS clearance reference cam and zero mark**

**Data type:** FloatingPoint32                    **Visible in:** Standard display

**Read permission:**                    Read drive data or acknowledge messages

**Write permission:**                    Edit device configuration or drive applications

**Parameter group:**                    Homing

**Unit:** mm

**Description:** Display for the distance (clearance) between the reference cam and zero mark.  
The value is determined for active homing.

**r2680****EPOS clearance reference cam and zero mark**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Homing

**Unit:** °

**Description:** Display for the distance (clearance) between the reference cam and zero mark.  
The value is determined for active homing.

**r2681****EPOS velocity override effective**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Jog, Homing, Traversing blocks, Direct setpoint input (MDI)

**Unit:** %

**Description:** Displays the actual effective velocity override.

**Dependency:** See also: p2571, c2646

**Note**

The effective override can differ from the specified override due to limits (e.g. p2571, maximum velocity).

**r2682****EPOS residual distance to go**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Jog, Traversing blocks, Direct setpoint input (MDI)

**Unit:** mm

**Description:** Displays the current residual distance.

The remaining distance is the distance to still to be moved through up to the end of the actual positioning task.

**Dependency:** See also: r2665, r2671, r2678

**r2682****EPOS residual distance to go**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Jog, Traversing blocks, Direct setpoint input (MDI)

**Unit:** °

**Description:** Displays the current residual distance.

The remaining distance is the distance to still to be moved through up to the end of the actual positioning task.

**Dependency:** See also: r2665, r2671, r2678



**r2683.0...14**      **EPOS status word 1**  
**Data type:** Unsigned16      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Control/status words, Jog, Homing, Traversing blocks, Direct setpoint input (MDI), Position controller monitoring

**Unit:** -

**Description:** Display for status word 1 of the basic positioner (EPOS).

Bit	Signal name	1 signal	0 signal
00	Tracking mode active	Yes	No
01	Speed limiting active	Yes	No
02	Setpoint fixed	Yes	No
03	Set position reached	Yes	No
04	Axis moves forward	Yes	No
05	Axis moves backward	Yes	No
06	Negative software limit switch reached	Yes	No
07	Positive software limit switch reached	Yes	No
10	Direct output 1 via traversing block	Yes	No
11	Direct output 2 via traversing block	Yes	No
12	Fixed stop reached	Yes	No
13	Fixed stop clamping torque reached	Yes	No
14	Travel to fixed stop active	Yes	No

**Dependency:** See also: r2684

**Note**

For bit 02, 04, 05, 06, 07:

This signals designate the state after jerk limiting.

For bits 08, 09:

These signals are generated in function "Closed-loop position control".

**r2684.0...15**      **EPOS status word 2**  
**Data type:** Unsigned16      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Control/status words, Limit, Jog, Homing, Traversing blocks, Direct setpoint input (MDI), Mechanics, Position controller monitoring

**Unit:** -

**Description:** Display for status word 2 of the basic positioner (EPOS).

Bit	Signal name	1 signal	0 signal
00	Active homing active	Active	Not active
01	Passive homing active	Active	Not active
02	Homing active	Active	Not active
03	Printing mark outside outer window	Yes	No
04	Axis accelerating	Yes	No
05	Axis decelerating	Yes	No
06	Jerk limiting active	Yes	No
07	Activate correction	Yes	No
08	Following error in tolerance	Yes	No
09	Modulo correction active	Yes	No
10	Target position reached	Yes	No

11	Home position set	Yes	No
12	Acknowledgment traversing block activated	Yes	No
13	Positive hardware limit switch reached	Yes	No
14	Negative hardware limit switch reached	Yes	No
15	Traversing command active	Yes	No

**Note**

For bit 02:

The "homing active" signal is an OR logic operation of "active homing active" and "passive homing active"

For bit 00 ... 07 and 11 ... 14:

For bit 08:

The signal is generated in function "Closed-loop position control".

**r2685****EPOS corrective value**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Basic positioner

**Unit:** mm

**Description:**

Display for the correction value of the position actual value.

**Dependency:**

See also: r2684

**Note**

Using this value, for example, modulo corrections are carried out.

**r2685****EPOS corrective value**

S200 Basic PN (EPOS  
Lastseite rotierend),  
S200 PN (EPOS  
Lastseite rotierend)

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Basic positioner

**Unit:** °

**Description:**

Display for the correction value of the position actual value.

**Dependency:**

See also: r2684

**Note**

Using this value, for example, modulo corrections are carried out.

**r2686[0...1]****EPOS torque limiting effective**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Basic positioner

**Unit:** %

**Description:**

Displays the effective torque limiting.

r2686[0]:

Displays the active upper torque limiting when traversing to fixed stop.

r2686[1]:

Displays the active lower torque limiting when traversing to fixed stop.

**Index:**

[0] = Upper

[1] = Lower

**Dependency:**

See also: p1520, p1521, r2676

<b>r2687</b>	<b>EPOS torque setpoint</b>	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display
		<b>Read permission:</b>	Read drive data or acknowledge messages
		<b>Write permission:</b>	Edit device configuration or drive applications
		<b>Parameter group:</b>	Traversing blocks
		<b>Unit:</b> Nm	
<b>Description:</b>	Displays the active torque setpoint when reaching the fixed stop.		
<b>Dependency:</b>	See also: p1520, p1521, r2676		
<b>p2688</b>	<b>EPOS position feedback signal tolerance window</b>	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display
		<b>Read permission:</b>	Read drive data or acknowledge messages
		<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Basic positioner	
	<b>Unit:</b> mm		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.0000 [mm]	2.1474828e+09 [mm]	0.0500 [mm]
<b>Description:</b>	Sets the tolerance window for the position feedback signal. If, for a positioning operation, the actual value (r2521) lies within this tolerance window of the target position, then the traversing block number is displayed at connector output r2689.		
<b>Dependency:</b>	This parameter is only active when the "Position feedback signal" function is activated (p2584.0 = 1). See also: p2584, r2689		
<b>p2688</b>	<b>EPOS position feedback signal tolerance window</b>	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)		<b>Read permission:</b>	Read drive data or acknowledge messages
		<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Can be changed in the operating state:</b>	Operation	
	<b>Parameter group:</b>	Basic positioner	
	<b>Unit:</b> °		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0.0000 [°]	2.1474828e+09 [°]	1.5000 [°]
<b>Description:</b>	Sets the tolerance window for the position feedback signal. If, for a positioning operation, the actual value (r2521) lies within this tolerance window of the target position, then the traversing block number is displayed at connector output r2689.		
<b>Dependency:</b>	This parameter is only active when the "Position feedback signal" function is activated (p2584.0 = 1). See also: p2584, r2689		
<b>r2689[0...1]</b>	<b>EPOS position feedback signal display</b>	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display
		<b>Read permission:</b>	Read drive data or acknowledge messages
		<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Parameter group:</b>	Basic positioner	
	<b>Unit:</b> -		
<b>Description:</b>	Displays the traversing block numbers for bit-coded position feedback whose absolute target positions lie within the tolerance window around the actual position.		

**Index:** [0] = Position feedback signal low  
[1] = Position feedback signal high

**Dependency:** This parameter is only active when the "Position feedback signal" function is activated (p2584.0 = 1).  
See also: p2584, p2688

**Note**

r2689[0]:  
Bit-coded display of traversing block numbers 0 to 31  
r2689[1]:  
Bit-coded display of traversing block numbers 32 to 63

**r2741****LR acceleration precontrol value**

**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:**                Read drive data or acknowledge messages  
**Write permission:**                Edit device configuration or drive applications  
**Parameter group:**                Position controller  
**Unit:** rev/s<sup>2</sup>

**Description:** Displays the acceleration precontrol value.

**Note**

The acceleration precontrol value is a derivation of the speed precontrol value with respect to time.

**p3117****Change safety message type**

S200 PN

**Data type:** Unsigned32      **Visible in:** Extended display  
**Read permission:**                Read drive data or acknowledge messages  
**Write permission:**                Edit device configuration or drive applications  
**Can be changed in the operating state:** Commissioning (Safety Integrated)  
**Parameter group:**                Safety Integrated, Faults / alarms  
**Unit:** -  
**Min:**                                **Max:**                                **Factory setting:**  
0                                        1                                        0

**Description:** Sets the re-parameterization of all safety messages for faults and alarms.  
The relevant message type during changeover is selected by the firmware.  
0: Safety messages are not reparameterized (safety message buffer)  
1: Safety messages are reparameterized (no safety message buffer)

**Note**

When online safety commissioning has been completed, a change results in an automatic restart.

**r3122[0...63].0...20 Diagnostic attribute fault**

**Data type:** Unsigned32      **Visible in:** Extended display  
**Read permission:**                Read drive data or acknowledge messages  
**Write permission:**                Edit device configuration or drive applications  
**Parameter group:**                Faults / alarms  
**Unit:** -

**Description:** Displays the diagnostic attribute of the fault which has occurred.

Bit array:	Bit	Signal name	1 signal	0 signal
	00	Hardware replacement recommended	Yes	No
	15	Message has gone	Yes	No
	16	PROFIdrive fault class bit 0	High	Low
	17	PROFIdrive fault class bit 1	High	Low

18	PROFIdrive fault class bit 2	High	Low
19	PROFIdrive fault class bit 3	High	Low
20	PROFIdrive fault class bit 4	High	Low

**Dependency:** See also: r0945, r0947, r0948, r0949, r2109, r2130, r2133, r2136

---

**Note**

The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

The structure of the fault buffer and the assignment of the indices is shown in r0945.

For bits 20 ... 16:

Bits 20, 19, 18, 17, 16 = 0, 0, 0, 0, 0 --> PROFIdrive message class 0: not assigned

Bits 20, 19, 18, 17, 16 = 0, 0, 0, 0, 1 --> PROFIdrive message class 1: hardware fault/software error

Bits 20, 19, 18, 17, 16 = 0, 0, 0, 1, 0 --> PROFIdrive message class 2: line fault

Bits 20, 19, 18, 17, 16 = 0, 0, 0, 1, 1 --> PROFIdrive message class 3: supply voltage fault

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 0, 0 --> PROFIdrive message class 4: DC link fault

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 0, 1 --> PROFIdrive message class 5: power electronics faulted

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 1, 0 --> PROFIdrive message class 6: overtemperature electronic components

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 1, 1 --> PROFIdrive message class 7: ground fault/phase fault detected

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 0, 0 --> PROFIdrive message class 8: motor overload

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 0, 1 --> PROFIdrive message class 9: communication error to the higher-level control

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 1, 0 --> PROFIdrive message class 10: safe monitoring channel has identified an error

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 1, 1 --> PROFIdrive message class 11: incorrect position actual value/speed actual value or not available

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 0 --> PROFIdrive message class 12: internal (DRIVE-CLiQ) communication error

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 1 --> PROFIdrive message class 13: infeed unit faulted

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 1, 0 --> PROFIdrive message class 14: braking controller/Braking Module faulted

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 1, 1 --> PROFIdrive message class 15: line filter faulted

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 0, 0 --> PROFIdrive message class 16: external measured value/signal state outside the permissible range

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 0, 1 --> PROFIdrive message class 17: application/technology function faulted

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 1, 0 --> PROFIdrive message class 18: error in the parameterization/configuration/commissioning sequence

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 1, 1 --> PROFIdrive message class 19: general drive fault

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 0 --> PROFIdrive message class 20: auxiliary unit faulted

---

### r3123[0...63].0...20 Diagnostic attribute alarm

**Data type:** Unsigned32

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Faults / alarms

**Unit:** -

**Description:** Displays the diagnostic attribute of the alarm which has occurred.

<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Hardware replacement recommended	Yes	No
	11	Alarm class bit 0	High	Low
	12	Alarm class bit 1	High	Low
	13	Maintenance required	Yes	No
	14	Maintenance urgently required	Yes	No
	15	Message has gone	Yes	No
	16	PROFIdrive fault class bit 0	High	Low
	17	PROFIdrive fault class bit 1	High	Low
	18	PROFIdrive fault class bit 2	High	Low
	19	PROFIdrive fault class bit 3	High	Low
	20	PROFIdrive fault class bit 4	High	Low

**Dependency:** See also: r2122, r2123, r2124, r2125, r2134, r2145, r2146

---

**Note**

The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

The structure of the alarm buffer and the assignment of the indices is shown in r2122.

For bit 12, 11:

These status bits are used for the classification of internal alarm classes and are intended for diagnostic purposes only on certain automation systems with integrated SINAMICS functionality.

For bits 20 ... 16:

Bits 20, 19, 18, 17, 16 = 0, 0, 0, 0, 0 --> PROFIdrive message class 0: not assigned

Bits 20, 19, 18, 17, 16 = 0, 0, 0, 0, 1 --> PROFIdrive message class 1: hardware fault/software error

Bits 20, 19, 18, 17, 16 = 0, 0, 0, 1, 0 --> PROFIdrive message class 2: line fault

Bits 20, 19, 18, 17, 16 = 0, 0, 0, 1, 1 --> PROFIdrive message class 3: supply voltage fault

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 0, 0 --> PROFIdrive message class 4: DC link fault

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 0, 1 --> PROFIdrive message class 5: power electronics faulted

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 1, 0 --> PROFIdrive message class 6: overtemperature electronic components

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 1, 1 --> PROFIdrive message class 7: ground fault/phase fault detected

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 0, 0 --> PROFIdrive message class 8: motor overload

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 0, 1 --> PROFIdrive message class 9: communication error to the higher-level control

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 1, 0 --> PROFIdrive message class 10: safe monitoring channel has identified an error

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 1, 1 --> PROFIdrive message class 11: incorrect position actual value/speed actual value or not available

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 0 --> PROFIdrive message class 12: internal (DRIVE-CLiQ) communication error

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 1 --> PROFIdrive message class 13: infeed unit faulted

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 1, 0 --> PROFIdrive message class 14: braking controller/Braking Module faulted

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 1, 1 --> PROFIdrive message class 15: line filter faulted

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 0, 0 --> PROFIdrive message class 16: external measured value/signal state outside the permissible range

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 0, 1 --> PROFIdrive message class 17: application/technology function faulted

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 1, 0 --> PROFIdrive message class 18: error in the parameterization/configuration/commissioning sequence

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 1, 1 --> PROFIdrive message class 19: general drive fault

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 0 --> PROFIdrive message class 20: auxiliary unit faulted

---

**p3234**

**Delay line voltage failure detection**

**Data type:** Unsigned16

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:**

Load torque monitoring

**Unit:** ms

**Min:**

**Max:**

**Factory setting:**

0 [ms]

100 [ms]

10 [ms]

**Description:**

Sets the time delay for detecting the line voltage failure.

The function must be activated via p2149.16.

**Dependency:**

See also: p2149

See also: F30265

<b>r3988</b>	<b>Final boot state</b>	
	<b>Data type:</b> Integer16	<b>Visible in:</b> Extended display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Parameter group:</b>	System identification
	<b>Unit:</b> -	
<b>Description:</b>	Displays the final boot states.	
	001 - Software error	
	200 - Carry out first commissioning	
	250 - Topology error (check the connected hardware)	
	800 - Ready	
	The following options are available to reach the "Ready" state:	
	- Check the project and load again.	
	- Restore factory setting.	
	- Check the hardware.	
	- Carry out a POWER ON (switch-off/switch-on).	

<b>p4405</b>	<b>PTO maximum output frequency</b>	
S200 PN	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Can be changed in the operating state:</b>	Commissioning
	<b>Parameter group:</b>	Pulse encoder emulation
	<b>Unit:</b> kHz	
	<b>Min:</b>	<b>Max:</b>
	1 [kHz]	5000 [kHz]
		<b>Factory setting:</b>
		1000 [kHz]
<b>Description:</b>	Sets the maximum output frequency for encoder emulation.	
	<b>NOTICE</b> The hardware is designed for a maximum PTO output frequency of 4 MHz. To tolerate any overshoot as a result of the motor control, p4405 can be set approximately 10 % above 4 MHz.	

<b>p4408</b>	<b>PTO pulse number</b>	
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Standard display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Can be changed in the operating state:</b>	Commissioning
	<b>Parameter group:</b>	Pulse encoder emulation
	<b>Unit:</b> -	
	<b>Min:</b>	<b>Max:</b>
	0	16777216
		<b>Factory setting:</b>
		1024
<b>Description:</b>	Sets the pulse number output from the PTO.	

<b>p4409</b>	<b>Gearbox encoder (motor)/PTO denominator (Control Unit)</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>		
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	1	2147000000	1
<b>Description:</b>	Sets the denominator for the gearbox between the encoder and PTO.		
	<b>Note</b>		
	This parameter is only of significance for p4408 = 0. A change only becomes effective after a POWER ON.		
<b>p4410</b>	<b>Gearbox encoder (motor)/PTO numerator (Control Unit)</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>		
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	1	2147000000	1
<b>Description:</b>	Sets the numerator for the gearbox between the encoder and PTO.		
	<b>Note</b>		
	This parameter is only of significance for p4408 = 0. A change only becomes effective after a POWER ON.		
<b>r4419</b>	<b>PTO diagnostics position setpoint</b>		
S200 PN	<b>Data type:</b> Integer32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Pulse encoder emulation	
	<b>Unit:</b> -		
<b>Description:</b>	Displays the position setpoint after taking into account the step up / step down.		
<b>c4420</b>	<b>PTO position setpoint</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Pulse encoder emulation	
	<b>Unit:</b> -		
<b>Description:</b>	Signal for the incremental encoder emulation position setpoint.		
<b>Recommendation:</b>	The position actual value of the leading encoder in the current controller clock cycle is available in r0479.		



<b>p4422.0</b>	<b>PTO configuration</b>		
S200 PN	<b>Data type:</b> Unsigned16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Pulse encoder emulation	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	-	-	0000 bin
<b>Description:</b>	Settings for Pulse Train Output (PTO).		
<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b> <b>0 signal</b>
	00	PTO position actual value	Inverted      Not inverted
<b>Dependency:</b>	See also: c4420		

<b>p4426</b>	<b>PTO zero mark offset</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b>	Commissioning	
	<b>Parameter group:</b>	Pulse encoder emulation	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0	16777215	0
<b>Description:</b>	Sets a zero mark offset to shift the zero mark within one mechanical revolution. Example: p0408 = 2048 (encoder pulses) p4426 = 512 (zero mark offset in pulses) --> Positive direction: The zero mark is output offset by 512 pulses. --> Negative direction: The zero mark is output offset by 1536 pulses.		
<b>Dependency:</b>	See also: p0408		

**Note**  
The setting for the zero mark offset (p4426) must be less than the encoder pulse number (p4408).

<b>r4479</b>	<b>PTO diagnostics position actual value</b>		
	<b>Data type:</b> Integer32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Pulse encoder emulation	
	<b>Unit:</b> -		
<b>Description:</b>	Display and numerical signal source for the PTO position actual value.		

**p5271[0].0...7****Online / One Button Tuning configuration****Data type:** Unsigned16**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Ready for operation**Parameter group:****Unit:** -**Min:****Max:****Factory setting:**

-

-

0000 1100 bin

**Description:**

Sets the configuration for online tuning / One Button Tuning.

**Bit array:**

Bit	Signal name	1 signal	0 signal
00	PD controller for large load moments of inertia	Yes	No
01	Reduce gain at low speeds	Yes	No
02	Load adaptation Kp	Yes	No
03	Setting the speed precontrol	Yes	No
04	Setting the torque precontrol	Yes	No
05	Setting the maximum acceleration for the basic positioner	Yes	No
06	Do not change Kp	Yes	No
07	Setting the voltage precontrol	Yes	No

**Dependency:**

See also: p5272, r5274, p5275

**Note**

For bit 00:

For significant differences between the motor moment of inertia and load moment of inertia - or for a low controller dynamic response - the P controller in the position control loop is transformed into a PD controller. As a consequence, the dynamic performance of the position controller is increased.

This function should only be set when the speed precontrol (bit 3 = 1) or the torque precontrol (bit 4 = 1) is active.

For bit 01:

At low speeds, the controller gain factors are automatically reduced in order to avoid noise and oscillation at standstill.

For bit 02:

The estimated load moment of inertia is taken into account for the speed controller gain.

For bit 03:

Activates the speed precontrol for the basic positioner (EPOS).

For bit 04:

Activation of the torque precontrol for the basic positioner (EPOS); if this is not active, then the internal drive speed/ torque precontrol is parameterized.

For bit 05:

The maximum acceleration (p2572) and maximum deceleration (p2573) for the basic positioner (EPOS) are determined using the estimated moment of inertia. This is only realized once by setting the bit.

**Prerequisite:**

The drive pulses are inhibited and the moment of inertia was previously determined.

For bit 06:

The speed controller gain set in p1460 is not changed when calculating the controller data.

For bit 07:

Activation of the voltage precontrol.

<b>p5272[0]</b>	<p><b>Online tuning dynamic factor</b></p> <p><b>Data type:</b> FloatingPoint32      <b>Visible in:</b> Extended display</p> <p><b>Read permission:</b>                      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>                      Edit device configuration or drive applications</p> <p><b>Can be changed in the operating state:</b>      Operation</p> <p><b>Parameter group:</b></p> <p><b>Unit:</b> %</p> <table border="0"> <tr> <td><b>Min:</b></td> <td><b>Max:</b></td> <td><b>Factory setting:</b></td> </tr> <tr> <td>5.0 [%]</td> <td>1000.0 [%]</td> <td>100.0 [%]</td> </tr> </table>	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>	5.0 [%]	1000.0 [%]	100.0 [%]
<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>					
5.0 [%]	1000.0 [%]	100.0 [%]					
<b>Description:</b>	Sets the dynamic factor for the proportional gain of the speed controller for online tuning.						
<b>Dependency:</b>	See also: p5271, r5274, p5275						
	<p><b>NOTICE</b></p> <p>The speed control can become unstable for excessively high values.</p>						
	<p><b>Note</b></p> <p>The stiffer the mechanical load coupling, the higher the dynamic factor can be set.</p>						

<b>r5274</b>	<p><b>Online / One Button Tuning dynamic response estimated</b></p> <p><b>Data type:</b> FloatingPoint32      <b>Visible in:</b> Standard display</p> <p><b>Read permission:</b>                      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>                      Edit device configuration or drive applications</p> <p><b>Parameter group:</b></p> <p><b>Unit:</b> ms</p>
<b>Description:</b>	Display and signal source for the estimated dynamic response of the speed control loop as PT1 time constant for online tuning/One Button Tuning. This position controller setting is required if the closed-loop position control is in an external control system.
<b>Dependency:</b>	See also: p5271, p5272, p5275

<b>p5275[0]</b>	<p><b>Online / One Button Tuning dynamic response time constant</b></p> <p><b>Data type:</b> FloatingPoint32      <b>Visible in:</b> Extended display</p> <p><b>Read permission:</b>                      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>                      Edit device configuration or drive applications</p> <p><b>Can be changed in the operating state:</b>      Operation</p> <p><b>Parameter group:</b></p> <p><b>Unit:</b> ms</p> <table border="0"> <tr> <td><b>Min:</b></td> <td><b>Max:</b></td> <td><b>Factory setting:</b></td> </tr> <tr> <td>0.0 [ms]</td> <td>60.0 [ms]</td> <td>7.5 [ms]</td> </tr> </table>	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>	0.0 [ms]	60.0 [ms]	7.5 [ms]
<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>					
0.0 [ms]	60.0 [ms]	7.5 [ms]					
<b>Description:</b>	Sets the time constant for the precontrol symmetrization for online tuning / One Button Tuning. As a consequence, the drive is allocated a defined, dynamic response via its precontrol. For axes, which must interpolate with one another, the same value must be entered. Examples: 0 ms = travel without following error (Kv factor is infinity) 5 ms = settling behavior as for PT1 with 5 ms (Kv factor = 12 [1000/min])						
<b>Dependency:</b>	See also: p5271, p5272, r5274						
	<p><b>Note</b></p> <p>This time constant is only effective if p5302.7 is set = 1. Otherwise, the precontrol symmetrization is adapted to the estimated dynamic response, therefore setting positioning without any overshoot.</p>						

**r5276[0] Online / One Button Tuning maximum Kv factor estimated****Data type:** FloatingPoint32**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:****Unit:** 1000 rpm**Description:**

Displays the estimated maximum position controller gain for online tuning/One Button Tuning.

**Dependency:**

See also: p5271, p5272, p5275

**WARNING**

The calculation assumes that the DSC is activated in the drive and is controlled on the motor measuring system.

If this is not the case, then excessively high values are displayed.

The value that is displayed does not take into account low-frequency resonance effects in the drive train. If necessary, the value must be significantly reduced.

**Note**

The value for the closed-loop position control is required by a higher-level control system.

**r5277[0] Online/One Button Tuning precontrol symmetrizing time estimated****Data type:** FloatingPoint32**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:****Unit:** ms**Description:**

Displays the estimated time constant for symmetrization of the speed precontrol.

This is required to symmetrize the position controller for online tuning / One Button Tuning if the position control is realized in an external control system.

**Dependency:**

See also: p5271, p5272, p5275

**WARNING**

The calculation assumes that the DSC is activated in the drive and is controlled on the motor measuring system.

If this is not the case, then the time is not correctly calculated.

**p5291.0...16 FFT tuning configuration****Data type:** Unsigned32**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation**Parameter group:****Unit:** -**Min:**

-

**Max:**

-

**Factory setting:**0000 0000 0000 0000 0000 0000 0011  
1001 bin**Description:**

Sets the configuration for the "FFT tuning" function.

This function is used for One Button Tuning (p5300 = 1).

**Bit array:**

Bit	Signal name	1 signal	0 signal
00	Noise excitation after pulse enable	Yes	No
01	Set current setpoint filter (HF)	Yes	No
02	Set speed controller gain (HF)	Yes	No
03	Length of FFT window bit 0 (LF, HF)	Yes	No
04	Length of FFT window bit 1 (LF, HF)	Yes	No

05	Windowing the time signals using a Hamming window (LF, HF)	Yes	No
06	Measure current controller	Yes	No
07	Bandwidth bit 0 (LF)	Yes	No
08	Bandwidth bit 1 (LF)	Yes	No
09	Bandwidth bit 2 (LF)	Yes	No
10	Measuring periods bit 0	Yes	No
11	Measuring periods bit 1	Yes	No
12	Inject noise onto speed setpoint	Yes	No
13	Do not reduce Kp for measurement	Yes	No
14	Set the current setpoint filter with loop compensation	Yes	No
16	Torque in front of the current setpoint filter	Yes	No

**Dependency:** See also: r5293, p5296

**Note**

HF: high frequency

LF: low frequency

For bit 00:

A PRBS signal (pseudo random binary signal) is superimposed on the current setpoint to be able to better identify the mechanical controlled system.

For bit 01:

The identified mechanical resonance points are suppressed using current setpoint filters.

For bit 02:

The maximum speed controller gain is determined from the identified mechanical controlled system.

For bits 03, 04:

The measured value buffer length is set using these bits:

Bit 04 = 0 and bit 03 = 0 -> buffer length = 256

Bit 04 = 0 and bit 03 = 1 -> buffer length = 512

Bit 04 = 1 and bit 03 = 0 -> buffer length = 1024

Bit 04 = 1 and bit 03 = 1 -> buffer length = 2048

For bit 05:

A Hamming window is used to filter the measured time signals.

For bit 06:

The measurement checks the current controller frequency response and this is taken into account in the speed controller loop.

For bits 07, 08, 09:

The measurement bandwidth is set using these bits:

Bit 09 = 0, bit 08 = 0, bit 07 = 0 -> bandwidth = 50 Hz

Bit 09 = 0, bit 08 = 0, bit 07 = 1 -> bandwidth = 100 Hz

Bit 09 = 0, bit 08 = 1, bit 07 = 0 -> bandwidth = 200 Hz

Bit 09 = 0, bit 08 = 1, bit 07 = 1 -> bandwidth = 400 Hz

Bit 09 = 1, bit 08 = 0, bit 07 = 0 -> bandwidth = 800 Hz

Bit 09 = 1, bit 08 = 0, bit 07 = 1 -> bandwidth = 1600 Hz

For bits 10, 11:

Number of measuring periods.

Bit 11 = 0 and bit 10 = 0 -> number of measurements = 1

Bit 11 = 0 and bit 10 = 1 -> number of measurements = 2

Bit 11 = 1 and bit 10 = 0 -> number of measurements = 4

Bit 11 = 1 and bit 10 = 1 -> number of measurements = 8

For bit 12:

The PRBS signal is switched to the speed setpoint (in front of the filter).

For bit 13:

The input signal for the torque actual value is taken from in front of the current setpoints filters.

For bit 14:

When the bit is set, a current setpoint filter is used to partially compensate the mechanical system.

This is recommended for the following machine attributes:

- The load moment of inertia is significantly higher than the motor moment of inertia (e.g. > 6x).
- The coupling between the machine elements has almost no backlash (no play).
- The stiffness of the mechanical transmission elements does not change significantly in the traversing range.

**p5292****FFT tuning dynamic factor**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:**

**Unit:** %

	<b>Min:</b> 25.0 [%]	<b>Max:</b> 125.0 [%]	<b>Factory setting:</b> 80.0 [%]
<b>Description:</b>	Sets the dynamic factor for the proportional gain of the speed controller for FFT tuning. This function is used for One Button Tuning (p5300 = 1).		
<b>Dependency:</b>	See also: p5291		

**r5293**      **FFT tuning speed controller P gain identified**

	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>		
	<b>Unit:</b> Nms/rad		
<b>Description:</b>	Displays the determined proportional gain Kp of the speed controller before FFT tuning. This function is used for One Button Tuning (p5300 = 1).		
<b>Dependency:</b>	See also: p5291		

**p5296[0...2]**      **Controller optimization noise amplitude**

	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b> Operation		
	<b>Parameter group:</b>		
	<b>Unit:</b> %		
	<b>Min:</b> 1.0 [%]	<b>Max:</b> 300.0 [%]	<b>Factory setting:</b> [0] 10.0 [%] [1] 30.0 [%] [2] 5.0 [%]
<b>Description:</b>	The drive determines the noise amplitude for One Button Tuning and writes the value to p5296.		
<b>Dependency:</b>	See also: p5291		

**p5300[0]**      **Autotuning selection**

	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Can be changed in the operating state:</b> Ready for operation		
	<b>Parameter group:</b>		
	<b>Unit:</b> -		
	<b>Min:</b> -1	<b>Max:</b> 2	<b>Factory setting:</b> 0
<b>Description:</b>	Setting to activate/deactivate the One Button Tuning function. For p5300 = 1: Function One Button Tuning is configured using p5271 and p5301. If p5300 = 2: The "Online tuning" function is configured using p5302.		
<b>Value:</b>	-1:      Reset controller parameters 0:      Inactive 1:      One Button Tuning 2:      Online tuning		

**Dependency:** The motor must have already been commissioned so that One Button Tuning functions perfectly. The One Button Tuning function is configured using p5271 and p5301. The required dynamic performance of the control loop is set in p5292. The traversing path for the test signal is parameterized in p5308.

Online tuning:  
 p5302 configures the "Online tuning" function.  
 p5272 if the required dynamic response of the control loops is set.  
 Other relevant parameters: p5271, p5275, r5274  
 See also: p5271, p5272, r5274, p5275, p5292, r5293, p5296, p5301, p5302, p5308, p5309

**CAUTION**

For some drive trains, the "online tuning" function can result in unstable settings (motor makes a whistling sound). This is especially the case for high load moments of inertia, which are coupled to the motor through a low-frequency connection/coupling. In this case, the value in parameter p5272 must be reduced.

**Note**

For p5300 = -1:

Autotuning is deactivated, and p5300 is automatically set to 0. In addition, the default setting values for the speed and position controller are restored.

For p5300 = 0:

Online tuning is inactive.

To permanently save the values determined for the speed and position controllers, the parameters must be saved in a non-volatile manner (p0977 = 1 or "copy RAM to ROM").

For p5300 = 1:

One Button Tuning is active.

The moment of inertia is determined once using a test signal. The controller parameters and current setpoint filters are additionally determined once using a noise signal as excitation source. The steps to be executed can be configured using p5301.

If p5300 = 2:

Online tuning is active.

The moment of inertia is estimated. The controller parameters are recalculated if the moment of inertia noticeably changes. The steps to be executed can be configured using p5302.

**p5301[0].0...8****One Button Tuning configuration 2**

**Data type:** Unsigned32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:**

**Unit:** -

**Min:**

-

**Max:**

-

**Factory setting:**

0000 0000 0000 0111 bin

**Description:**

Setting the functions for One Button Tuning (p5300 = 1).

A test signal is required for some functions. To do this, observe parameters p5308 and p5309.

**Bit array:**

Bit	Signal name	1 signal	0 signal
00	Setting the proportional gain Kp	Yes	No
01	Setting current setpoint filter	Yes	No
02	Estimate moment of inertia	Yes	No
08	Moment of inertia determination from frequency response	Yes	No

**Dependency:**

It is only possible to change the configuration if One Button Tuning is not active (p5300 = 0).

See also: p5292, r5293, p5296, p5300, p5308, p5309



**Note**

For bit 00:  
The speed controller gain is determined and set using a noise signal.

For bit 01:  
Possibly required current setpoint filters are determined and set using a noise signal.  
As a consequence, a higher dynamic performance can be achieved in the speed control loop.

For bit 02:  
Using this bit, the moment of inertia is determined using a test signal. If this bit is not set, then the load moment of inertia must be manually set using parameter p1498. The test signal must have been previously set using parameters p5308 and p5309.

For bit 08:  
Using this bit, the moment of inertia is determined from the frequency characteristic using a test signal, and is transferred to p1498. The traversing path must first be set using parameter p5308.

**p5302[0].2...8**

**Online tuning configuration**

**Data type:** Unsigned32      **Visible in:** Extended display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:**

**Unit:** -

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
-	-	0000 0000 0000 1100 bin

**Description:**


Setting the functions for online tuning (p5300 = 2).

**Bit array:**

<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
02	Estimate moment of inertia	Yes	No
03	Configuring the moment of inertia estimator	Cyclic	Once
06	Activating the current setpoint filter adaptation	Yes	No
07	Activating synchronized axes	Yes	No
08	Moment of inertia determination from frequency response	Yes	No

**Dependency:**

It is only possible to change the configuration if autotuning is not active (p5300 = 0).  
See also: p5271, p5272, r5274, p5275, p5300

<p> <b>CAUTION</b></p> <p>Please note the general conditions for the moment of inertia estimator, online tuning as well as adaptive resonance filter in the following reference: SINAMICS S120 Function Manual Drive Functions</p>
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**Note**

For bit 00:  
The speed controller gain is determined and set using a noise signal.

For bit 01:  
Possibly required current setpoint filters are determined and set using a noise signal.  
As a consequence, a higher dynamic performance can be achieved in the speed control loop.

For bit 02:  
Using this bit, the moment of inertia is determined using a test signal. If this bit is not set, then the load moment of inertia must be manually set using parameter p1498. The test signal must be previously set via parameters p5308 and p5309.

For bit 08:  
Using this bit, the moment of inertia is determined from the frequency characteristic using a test signal, and is transferred to p1498.  
The traversing path must first be set using parameter p5308.

**r5306[0].0...14 Autotuning status**

**Data type:** Unsigned16      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications

**Parameter group:**

**Unit:** -

**Description:** Displays the status of the auto tuning functions performed - "Online tuning" and "One Button Tuning".  
The functions can be activated via p5300.

Bit array:	Bit	Signal name	1 signal	0 signal
	00	Proportional gain Kp set	Yes	No
	01	Current setpoint filter set	Yes	No
	02	Moment of inertia estimation carried out	Yes	No
	04	Load vibration detection performed	Yes	No
	05	Detected load oscillation set	Yes	No
	06	Current setpoint filter adaptation active	Yes	No
	07	EPOS set	Yes	No
	12	Online tuning active	Yes	No
	13	One Button Tuning successfully completed	Yes	No
	14	Controller parameters reset due to fault	Yes	No

**Dependency:** See also: p5300, p5301, p5302

**Note**

For bit 00 = 1: The speed controller gain was set using One Button Tuning.  
For bit 01 = 1: The current setpoint filter was set using One Button Tuning  
For bit 02 = 1: The moment of inertia was determined.  
For bit 04 = 1: Load oscillation detection was performed using One Button Tuning  
For bit 05 = 1: Detected load oscillation suppression was set using One Button Tuning.  
For bit 06 = 1: Adaptive resonance filters of the online tuning are active.  
For bit 12 = 1: Online tuning is active and modifies the controller.

**p5308[0]****One Button Tuning distance limiting**

**Data type:** Integer32      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications

**Can be changed in the operating state:** Ready for operation

**Parameter group:**

**Unit:** °

Min:	Max:	Factory setting:
-30000 [°]	30000 [°]	0 [°]

**Description:** Setting the distance limiting (permissible traversing range of the motor).  
The traversing range is limited in the positive and negative directions.

**Note**

A value of 360 degrees corresponds to one motor revolution.  
The position before the pulse enable is used as zero point.

<b>p5309[0]</b>	<p><b>One Button Tuning test signal duration</b></p> <p><b>Data type:</b> Unsigned32      <b>Visible in:</b> Standard display</p> <p><b>Read permission:</b>      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>      Edit device configuration or drive applications</p> <p><b>Can be changed in the operating state:</b> Ready for operation</p> <p><b>Parameter group:</b></p> <p><b>Unit:</b> ms</p> <p><b>Min:</b>      <b>Max:</b>      <b>Factory setting:</b></p> <p>0 [ms]      5000 [ms]      2000 [ms]</p>
<b>Description:</b>	Sets the test signal sequence duration (several acceleration operations). This function is used for One Button Tuning (p5300 = 1) to identify the total moment of inertia of the drive train.
<b>Dependency:</b>	See also: F07093

<b>p5375[0].0...1</b>	<p><b>Additional motor overload protection configuration</b></p> <p><b>Data type:</b> Unsigned16      <b>Visible in:</b> Extended display</p> <p><b>Read permission:</b>      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>      Edit device configuration or drive applications</p> <p><b>Can be changed in the operating state:</b> Operation</p> <p><b>Parameter group:</b>      Motor temperature</p> <p><b>Unit:</b> -</p> <p><b>Min:</b>      <b>Max:</b>      <b>Factory setting:</b></p> <p>-      -      0000 bin</p>												
<b>Description:</b>	Sets the configuration for additional motor overload protection.												
<b>Bit array:</b>	<table border="0" style="width: 100%;"> <thead> <tr> <th style="text-align: left;">Bit</th> <th style="text-align: left;">Signal name</th> <th style="text-align: left;">1 signal</th> <th style="text-align: left;">0 signal</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>Activate monitoring</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>01</td> <td>Activation of speed dependency</td> <td>Yes</td> <td>No</td> </tr> </tbody> </table>	Bit	Signal name	1 signal	0 signal	00	Activate monitoring	Yes	No	01	Activation of speed dependency	Yes	No
Bit	Signal name	1 signal	0 signal										
00	Activate monitoring	Yes	No										
01	Activation of speed dependency	Yes	No										
	<p><b>Note</b></p> <p>To comply with standard UL 61800-5-1 Ed. 2, bit 0 and bit 1 must be set. These bits activate electronic motor overload protection according to IEC 61800-5-1 Ed. 3 / UL 61800-5-1 Ed. 2, with the emulation of an electronic overload relay, Class 20 and the speed sensitivity.</p> <p>For bit 00: This bit activates electronic motor overload protection with emulation of an electronic overload relay, Class 20.</p> <p>For bit 01: This bit activates the speed dependency of the electronic motor overload protection. Not active, if bit 00 is also set.</p>												

<b>r8400[0...2]</b>	<p><b>Date</b></p> <p><b>Data type:</b> Unsigned16      <b>Visible in:</b> Standard display</p> <p><b>Read permission:</b>      Read drive data or acknowledge messages</p> <p><b>Write permission:</b>      Edit device configuration or drive applications</p> <p><b>Parameter group:</b>      Diagnostics general</p> <p><b>Unit:</b> -</p>
<b>Description:</b>	Displays the actual date in year, month and day.
<b>Index:</b>	<p>[0] = Year (YYYY)</p> <p>[1] = Month (1 ... 12)</p> <p>[2] = Day (1 ... 31)</p>

**Note**

The time in r8400 and r8401 is used to display the fault and alarm times.

Possible date/time setting:

- Web server (manually)
- NTP (Network Time Protocol)

When the converter is switched off, date/time are not updated.

After the converter has restarted, the date and time that the converter was in a no-current condition applies.

**r8401[0...2]****Time**

**Data type:** Unsigned16

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Diagnostics general

**Unit:** -

**Description:**

Displays the current time in hours, minutes and seconds.

**Index:**

[0] = Hour (0 ... 23)

[1] = Minute (0 ... 59)

[2] = Second (0 ... 59)

**Note**

The time in r8400 and r8401 is used to display the fault and alarm times.

The time is displayed in the 24-hour format.

Possible date/time setting:

- Web server (manually)
- NTP (Network Time Protocol)

When the converter is switched off, date/time are not updated. After power on the instant of the previous power off is valid.

**r8600[0...20]****PROFIdrive PZD receive Float32**

**Data type:** FloatingPoint32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Configuration

**Unit:** -

**Description:**

Displays the PZD (setpoints) in the Float32 format received from the fieldbus controller.

<b>Index:</b>	[0] = PZD 1 + 2
	[1] = PZD 2 + 3
	[2] = PZD 3 + 4
	[3] = PZD 4 + 5
	[4] = PZD 5 + 6
	[5] = PZD 6 + 7
	[6] = PZD 7 + 8
	[7] = PZD 8 + 9
	[8] = PZD 9 + 10
	[9] = PZD 10 + 11
	[10] = PZD 11 + 12
	[11] = PZD 12 + 13
	[12] = PZD 13 + 14
	[13] = PZD 14 + 15
	[14] = PZD 15 + 16
	[15] = PZD 16 + 17
	[16] = PZD 17 + 18
	[17] = PZD 18 + 19
	[18] = PZD 19 + 20
	[19] = PZD 20 + 21
	[20] = PZD 21 + 22

---

**c8601[0...26] PROFIdrive PZD send Float32**

<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Configuration
<b>Unit:</b> -	

**Description:** Displays the PZD (actual values) in the Float32 format that are sent to the fieldbus controller.

<b>Index:</b>	[0] = PZD 1 + 2
	[1] = PZD 2 + 3
	[2] = PZD 3 + 4
	[3] = PZD 4 + 5
	[4] = PZD 5 + 6
	[5] = PZD 6 + 7
	[6] = PZD 7 + 8
	[7] = PZD 8 + 9
	[8] = PZD 9 + 10
	[9] = PZD 10 + 11
	[10] = PZD 11 + 12
	[11] = PZD 12 + 13
	[12] = PZD 13 + 14
	[13] = PZD 14 + 15
	[14] = PZD 15 + 16
	[15] = PZD 16 + 17
	[16] = PZD 17 + 18
	[17] = PZD 18 + 19
	[18] = PZD 19 + 20
	[19] = PZD 20 + 21
	[20] = PZD 21 + 22
	[21] = PZD 22 + 23
	[22] = PZD 23 + 24
	[23] = PZD 24 + 25
	[24] = PZD 25 + 26
	[25] = PZD 26 + 27
	[26] = PZD 27 + 28

---

<b>r8936[0...1]</b>	<b>PN cyclic connection state</b>
	<b>Data type:</b> Integer16 <b>Visible in:</b> Extended display
	<b>Read permission:</b> Read drive data or acknowledge messages
	<b>Write permission:</b> Edit device configuration or drive applications
	<b>Parameter group:</b>
	<b>Unit:</b> -
<b>Description:</b>	Displays the status of the cyclic PROFINET connection.
<b>Value:</b>	0:      Canceled
	1:      Not connected
	2:      Connection starts to be established
	3:      Module information expected
	4:      Module information received
	5:      Module address expected
	6:      Module address received
	7:      Parameterization data expected
	8:      Parameterization data received
	9:      Evaluate parameterization data
	10:      Connection being established completion expected
	12:      Configured controller STOP
	13:      Configured controller RUN
<b>Index:</b>	[0] = Controller 1
	[1] = Reserved

**Dependency:** See also: r8961

**Note**

For value = 10:

If the connection remains in this state, then when using PROFINET IRT the following can apply:

- Topology error (incorrect port assignment).

- Synchronization missing.

**r8937[0...5] PN cyclic connection diagnostics**

**Data type:** Unsigned32

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

**Unit:** -

**Description:** Display to diagnose the cyclic PROFINET connection.

**Index:**

[0] = Number of cyclic connections

[1] = Number of send subslots of all connections

[2] = Number of send net data (bytes) of all connections

[3] = Number of receive subslots of all connections

[4] = Number of receive net data (bytes) of all connections

[5] = Connection type (RT, IRT)

**Note**

The parameter is active when the "PROFINET Device" protocol is selected.

For index [5]:

Bit 0 = 1: there is at least one RT connection.

Bit 1 = 1: there is an IRT connection.

**r8961[0...3] PN controller IP address**

**Data type:** Unsigned8

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Configuration

**Unit:** -

**Description:** Displays the IP address of the PROFINET controller.

**c8995[0...3] Ethernet X127 enable**

**Data type:** Unsigned8

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Configuration

**Unit:** -

**Description:** Signal to enable the Ethernet interface X127 for applications.

**Index:**

[0] = Secure S7 Protocol Startdrive

[1] = Web server HTTPS

[2] = S7 protocol PCS7

[3] = Web server HTTP

**Note**

The parameter influences the access from applications.

1 signal:

Ethernet interface X127 is enabled for access.

0 signal:

Ethernet interface X127 is blocked and cannot be accessed.

The signal is not influenced by restoring the factory settings.

**c8997[0...2]****PROFINET X150 enable**

**Data type:** Unsigned8

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Configuration

**Unit:** -

**Description:**

Signal to enable PROFINET interface X150 for applications.

**Index:**

[0] = Secure S7 Protocol Startdrive

[1] = Web server HTTPS

[2] = S7 protocol PCS7

**Note**

The parameter influences the access from applications.

1 signal:

PROFINET interface X150 is enabled for access.

0 signal:

PROFINET interface X150 is inhibited for access.

The signal is not influenced by restoring the factory settings.

**p9603.0****SI control**

S200 PN

**Data type:** Unsigned32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit Safety Integrated application

**Can be changed in the operating state:** Commissioning (Safety Integrated)

**Parameter group:**

Safety Integrated

**Unit:** -

**Min:**

-

**Max:**

-

**Factory setting:**

0001 bin

**Description:**

Sets the type of control for the safety functions integrated in the drive.

**Bit array:**

**Bit**    **Signal name**

00    Control via F-DI

**1 signal**

Enable

**0 signal**

Inhibit

**Note**

When online safety commissioning has been completed, a change results in an automatic restart.

**p9604.0****SI enable**

S200 PN

**Data type:** Unsigned32

**Visible in:** Standard display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit Safety Integrated application

**Can be changed in the operating state:** Commissioning (Safety Integrated)

**Parameter group:**

Safety Integrated

**Unit:** -



	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>	
	-	-	0001 bin	
<b>Description:</b>	Sets the enable signal for the safety functions integrated in the drive.			
<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Enable STO	Enable	Inhibit

**p9670 SI module identification drive**

S200 PN  
**Data type:** Unsigned32      **Visible in:** Extended display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit Safety Integrated application  
**Can be changed in the operating state:** Ready for operation  
**Parameter group:** Safety Integrated

**Unit:** -

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0	4294967295	0

**Description:** Safety Integrated module identifier for the drive.  
Replacement of the drive is identified when the safety functions are activated.

**Note**

After replacement, when the drive runs up, an alarm is output

**p9699 SI configuration alarm filtering**

S200 PN  
**Data type:** Integer16      **Visible in:** Extended display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Can be changed in the operating state:** Ready for operation  
**Parameter group:** Basic functions

**Unit:** -

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0	1	1

**Description:** Sets the enable for the "Alarm filtering" function.

**Value:**  
0: Deactivate alarm filtering  
1: Activate alarm filtering

**Note**

Parameter is active after a POWER ON

**r9720.0...7 SI control word**

S200 PN  
**Data type:** Unsigned32      **Visible in:** Standard display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Parameter group:** Extended functions  
**Unit:** -

**Description:** Control signals for safety functions integrated in the drive.

<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Deselect STO	Yes	No
	07	Acknowledgment	Signal edge active	No

**r9722.0...7**

S200 PN

**SI status signals****Data type:** Unsigned32**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Extended functions

**Unit:** -**Description:**

Display and signal source for the status signals for the safety functions (synchronized signal).

**Bit array:**

Bit	Signal name	1 signal	0 signal
00	STO or safe pulse cancellation active	Yes	No
07	Internal event	No	Yes

**NOTICE**

For bit 07:

An internal event is displayed if a stop function is active.

**r9725[0...2]**

S200 PN

**SI diagnostics data cross-check****Data type:** Unsigned32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Extended functions

**Unit:** -**Description:**

Displays the diagnostics of the data cross-check.

For index [0]

Number of the data, which, for the data cross-check between the two monitoring channels, led to the SCF (Safety Channel Failure) on the drive.

For index [1]:

Displays the value from channel A for a KDV error.

For index [2]:

Displays the value from channel B for a KDV error.

**Index:**

[0] = Message value for KDV

[1] = KDV actual value channel A

[2] = KDV actual value channel B

**Note**

KDV: Data cross-check

**r9728**

S200 PN

**SI actual checksum configuration of the safety functions****Data type:** Unsigned32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Extended functions

**Unit:** -**Description:**

Displays the checksum over the checked parameters used to configure safety functions (actual checksum).

**Dependency:**

See also: p9729

**p9729 SI reference checksum configuration of the safety functions**

S200 PN

**Data type:** Unsigned32      **Visible in:** Extended display

**Read permission:** Read drive data or acknowledge messages

**Write permission:** Edit Safety Integrated application

**Can be changed in the operating state:** Commissioning (Safety Integrated)

**Parameter group:** Extended functions

**Unit:** -

**Min:** 0000 hex      **Max:** FFFF FFFF hex      **Factory setting:** A1A1 A1A1 hex

**Description:** Sets the checksum over the checked parameters used to configure safety functions (reference checksum).

**Dependency:** See also: r9728

**r9750[0...63].0...20 SI diagnostic attributes**

**Data type:** Unsigned32      **Visible in:** Extended display

**Read permission:** Read drive data or acknowledge messages

**Write permission:** Edit device configuration or drive applications

**Parameter group:** Extended functions

**Unit:** -

**Description:** Displays the diagnostic attributes of the safety messages that have occurred.

<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Hardware replacement recommended	Yes	No
	15	Message has gone	Yes	No
	16	PROFIdrive fault class bit 0	High	Low
	17	PROFIdrive fault class bit 1	High	Low
	18	PROFIdrive fault class bit 2	High	Low
	19	PROFIdrive fault class bit 3	High	Low
	20	PROFIdrive fault class bit 4	High	Low

**Note**

The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

The structure of the safety message buffer and the assignment of the indices is shown in r60045.

For bits 20 ... 16:

Bits 20, 19, 18, 17, 16 = 0, 0, 0, 0, 0 --> PROFIdrive message class 0: not assigned

Bit 20, 19, 18, 17, 16 = 0, 0, 0, 0, 1 --> PROFIdrive message class 1: hardware fault/software error

Bits 20, 19, 18, 17, 16 = 0, 0, 0, 1, 0 --> PROFIdrive message class 2: line fault

Bits 20, 19, 18, 17, 16 = 0, 0, 0, 1, 1 --> PROFIdrive message class 3: supply voltage fault

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 0, 0 --> PROFIdrive message class 4: DC link fault

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 0, 1 --> PROFIdrive message class 5: power electronics faulted

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 1, 0 --> PROFIdrive message class 6: overtemperature electronic components

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 1, 1 --> PROFIdrive message class 7: ground fault/phase fault detected

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 0, 0 --> PROFIdrive message class 8: motor overload

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 0, 1 --> PROFIdrive message class 9: communication error to the higher-level control

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 1, 0 --> PROFIdrive message class 10: safe monitoring channel has identified an error

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 1, 1 --> PROFIdrive message class 11: incorrect position actual value/speed actual value or not available

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 0 --> PROFIdrive message class 12: internal (DRIVE-CLiQ) communication error

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 1 --> PROFIdrive message class 13: infeed unit faulted

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 1, 0 --> PROFIdrive message class 14: braking controller/Braking Module faulted

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 1, 1 --> PROFIdrive message class 15: line filter faulted

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 0, 0 --> PROFIdrive message class 16: external measured value/signal state outside the permissible range

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 0, 1 --> PROFIdrive message class 17: application/technology function faulted

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 1, 0 --> PROFIdrive message class 18: error in the parameterization/configuration/commissioning sequence

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 1, 1 --> PROFIdrive message class 19: general drive fault

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 0 --> PROFIdrive message class 20: auxiliary unit faulted

**r9753[0...63]**

**SI message value for float values**

S200 PN

**Data type:** FloatingPoint32

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Extended functions

**Unit:** -

**Description:**

Displays additional information about the safety message that has occurred for float values.

**Dependency:**

See also: r9754, r9755, r9756, r60044, r60045, r60048, r60049, p60052

**r9754[0...63]**

**SI message time received in days**

S200 PN

**Data type:** Unsigned16

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Extended functions

**Unit:** -

**Description:**

Displays the relative system runtime in days when the safety message occurred.

**Dependency:**

See also: r9753, r9755, r9756, r60044, r60045, r60048, r60049, p60052



**Index:** [0] = SI checksum to track functional changes  
[1] = SI checksum to track hardware-specific changes

**Dependency:** See also: p9729

**r9781[0...1]****SI change control time stamp days**

S200 PN

**Data type:** Unsigned16      **Visible in:** Standard display

**Read permission:** Read drive data or acknowledge messages

**Write permission:** Edit device configuration or drive applications

**Parameter group:** Safety Integrated

**Unit:** -

**Description:** Displays the day component of the time stamp for the checksums for tracking changes for Safety Integrated. The time stamps are generated for the checksums (r9780[0...1]) (fingerprint for the "safety logbook" functionality)

**Index:** [0] = SI time stamp for checksum to track functional changes  
[1] = SI time stamp for checksum to track hardware-specific changes

**Dependency:** See also: p9729, p9799

**Note**

The time comprises r9781 (days) and r9782 (milliseconds).

**r9782[0...1]****SI change control time stamp milliseconds**

S200 PN

**Data type:** Unsigned32      **Visible in:** Standard display

**Read permission:** Read drive data or acknowledge messages

**Write permission:** Edit device configuration or drive applications

**Parameter group:** Safety Integrated

**Unit:** ms

**Description:** Displays the millisecond component of the time stamp for the checksums for tracking changes for Safety Integrated. The time stamps are generated for the checksums (r9780[0...1]) (fingerprint for the "safety logbook" functionality)

**Index:** [0] = SI time stamp for checksum to track functional changes  
[1] = SI time stamp for checksum to track hardware-specific changes

**Dependency:** See also: p9729, p9799

**Note**

The time comprises r9781 (days) and r9782 (milliseconds).

**r9794****SI actual checksum safety enable**

S200 PN

**Data type:** Unsigned32      **Visible in:** Extended display

**Read permission:** Read drive data or acknowledge messages

**Write permission:** Edit device configuration or drive applications

**Parameter group:** Basic functions

**Unit:** -

**Description:** Displays the checksum over the parameters to enable the safety functions (actual checksum).

**Dependency:** See also: p9795

<b>p9795</b>	<b>SI reference checksum safety enable</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit Safety Integrated application	
	<b>Can be changed in the operating state:</b>	Commissioning (Safety Integrated)	
	<b>Parameter group:</b>	Basic functions	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0000 hex	FFFF FFFF hex	A1A1 A1A1 hex
<b>Description:</b>	Sets the checksum over the parameters for enabling the safety functions (reference checksum).		
<b>Dependency:</b>	See also: r9794		
<b>r9798</b>	<b>SI actual checksum over the drive configuration</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Basic functions	
	<b>Unit:</b> -		
<b>Description:</b>	Displays the checksum over the checksum-checked parameters to configure the drive (actual checksum).		
<b>Dependency:</b>	See also: p9799		
<b>p9799</b>	<b>SI reference checksum over the configuration of the drive</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit Safety Integrated application	
	<b>Can be changed in the operating state:</b>	Commissioning (Safety Integrated)	
	<b>Parameter group:</b>	Basic functions	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0000 hex	FFFF FFFF hex	A1A1 A1A1 hex
<b>Description:</b>	Sets the checksum over the checksum-checked parameters to configure the drive (reference checksum).		
<b>Dependency:</b>	See also: r9798		
<b>r9828</b>	<b>SI actual checksum configuration of safety functions channel B</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Extended functions	
	<b>Unit:</b> -		
<b>Description:</b>	Displays the checksum over the checksum-checked parameters to configure safety functions (actual checksum) channel B.		
<b>Dependency:</b>	See also: p9829		

<b>p9829</b>	<b>SI reference checksum configuration of safety functions chan. B</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit Safety Integrated application	
	<b>Can be changed in the operating state:</b>	Commissioning (Safety Integrated)	
	<b>Parameter group:</b>	Extended functions	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0000 hex	FFFF FFFF hex	B2B2 B2B2 hex
<b>Description:</b>	Sets the checksum over the checked parameters used to configure safety functions (reference checksum).		
<b>Dependency:</b>	See also: r9828		
<b>r9894</b>	<b>SI actual checksum safety enable channel B</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>		
	<b>Unit:</b> -		
<b>Description:</b>	Displays the checksum over the parameters to enable the safety functions (actual checksum) channel B.		
<b>Dependency:</b>	See also: p9895		
<b>p9895</b>	<b>SI reference checksum safety enable channel B</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit Safety Integrated application	
	<b>Can be changed in the operating state:</b>	Commissioning (Safety Integrated)	
	<b>Parameter group:</b>		
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0000 hex	FFFF FFFF hex	B2B2 B2B2 hex
<b>Description:</b>	Sets the checksum over the parameters for enabling the safety functions (reference checksum) channel B.		
<b>Dependency:</b>	See also: r9894		
<b>r9898</b>	<b>SI actual checksum configuration of the drive, channel B</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Basic functions	
	<b>Unit:</b> -		
<b>Description:</b>	Displays the checksum over the checksum-checked parameters to configure the drive (actual checksum) channel B.		
<b>Dependency:</b>	See also: p9899		



<b>p9899</b>	<b>SI reference checksum over the drive configuration, channel B</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit Safety Integrated application	
	<b>Can be changed in the operating state:</b>	Commissioning (Safety Integrated)	
	<b>Parameter group:</b>	Basic functions	
	<b>Unit:</b> -		
	<b>Min:</b> 0000 hex	<b>Max:</b> FFFF FFFF hex	<b>Factory setting:</b> B2B2 B2B2 hex
<b>Description:</b>	Sets the checksum over the checksum-checked parameters to configure the drive (reference checksum) channel B.		
<b>Dependency:</b>	See also: r9898		

<b>p10000.0</b>	<b>SI F-DI enable</b>		
S200 PN	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit Safety Integrated application	
	<b>Can be changed in the operating state:</b>	Commissioning (Safety Integrated)	
	<b>Parameter group:</b>	Safety Integrated	
	<b>Unit:</b> -		
	<b>Min:</b> -	<b>Max:</b> -	<b>Factory setting:</b> 0001 bin
<b>Description:</b>	Sets the enable signal for the failsafe digital inputs.		
<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b> <b>0 signal</b>
	00	F-DI 0 (X131.1/2, X131.5/6)	Enabled      Not enabled
	<b>Note</b>		
	F-DI that have been enabled are monitored in a safety-relevant way. It is neither permissible that the associated DI are set to simulation nor used as non-safety-related functions, as they can be subject to test pulses.		

<b>p10002</b>	<b>SI F-DI changeover discrepancy time</b>		
S200 PN	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit Safety Integrated application	
	<b>Can be changed in the operating state:</b>	Commissioning (Safety Integrated)	
	<b>Parameter group:</b>	Safety Integrated	
	<b>Unit:</b> ms		
	<b>Min:</b> 1.00 [ms]	<b>Max:</b> 2000.00 [ms]	<b>Factory setting:</b> 500.00 [ms]
<b>Description:</b>	Sets the discrepancy time for digital inputs. The signal states at the two associated digital inputs (F-DI) must assume the same state within this discrepancy time.		
	<b>Note</b>		
	The time must be set longer than the SI monitoring clock cycle.		

<b>p10017[0...2]</b>	<b>SI digital inputs input filter</b>		
S200 PN	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit Safety Integrated application	
	<b>Can be changed in the operating state:</b>	Commissioning (Safety Integrated)	
	<b>Parameter group:</b>	Safety Integrated	
	<b>Unit:</b> ms		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	1.00 [ms]	100.00 [ms]	4.00 [ms]
<b>Description:</b>	Setting of the input filter for the digital inputs. The input filter is rounded off to whole milliseconds and accepted. The input filter acts on the following digital inputs: - Failsafe digital inputs (F-DI).  Example: Input filter = 1 ms: Fault pulses of 1 ms are filtered; only pulses longer than 2 ms are processed. Input filter = 3 ms: Fault pulses of 3 ms are filtered; only pulses longer than 4 ms are processed. The input filtering result can be read in r10051 and r10151. The set input filter impacts the response time of the safety function.		
<b>Index:</b>	[0] = F-DI 0 [1] = Reserved [2] = Reserved		
	<b>Note</b> If the self test is enabled using externally specified dark pulses (p10041 = 3) for at least one F-DI, then p10017 must be set longer than the maximum duration of the dark pulses + 2 ms. If the test pulses are specified using the switchable power supply (p10041 = 1), then this means p10017 > p10018 + 2 ms.		
<b>p10018</b>	<b>SI F-DI self test length dark pulses VS+</b>		
S200 PN	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit Safety Integrated application	
	<b>Can be changed in the operating state:</b>	Commissioning (Safety Integrated)	
	<b>Parameter group:</b>	Safety Integrated	
	<b>Unit:</b> ms		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0 [ms]	50 [ms]	0 [ms]
<b>Description:</b>	Sets the dark pulse length of the switchable power supply for the self test using specified dark pulses (p10041) of the F-DI. Value = 0: switchable power supply, permanently switched on. Value > 0: dark pulse length for the switchable power supply. The test cycle is fixed at 5 s.		
	<b>Note</b> The dark pulses of the switchable power supply are only enabled for the self test using specified dark pulses (p10041 = 1). The switchable power supply is continuously switched on if another self test was set		

---

<b>p10019</b>	<b>SI F-DI self test external dark pulses wait time</b>		
S200 PN	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit Safety Integrated application	
	<b>Can be changed in the operating state:</b>	Commissioning (Safety Integrated)	
	<b>Parameter group:</b>	Safety Integrated	
	<b>Unit:</b> s		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	10 [s]	3600 [s]	1020 [s]
<b>Description:</b>	Sets the maximum wait time for the dark pulses for the F-DI self test using an externally specified test pulses.		
	<b>Note</b>		
	This parameter is only active for F-DIs that are tested using external test pulses (p10041[x] = 3).		

---

<b>c10022</b>	<b>SI STO input terminal</b>		
S200 PN	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit Safety Integrated application	
	<b>Parameter group:</b>	Safety Integrated	
	<b>Unit:</b> -		
<b>Description:</b>	Signal for the axis-specific selection of function "STO (Safe Torque Off)" (control via F-DI).		
	<b>Note</b>		
	F-DI: Failsafe Digital Input		

---

<b>p10040.0</b>	<b>SI F-DI input mode</b>		
S200 PN	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit Safety Integrated application	
	<b>Can be changed in the operating state:</b>	Commissioning (Safety Integrated)	
	<b>Parameter group:</b>	Safety Integrated	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	-	-	0000 bin
<b>Description:</b>	Sets the input mode for the safety digital inputs (F-DI).		
<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b> <b>0 signal</b>
	00	F-DI 0, DI 11+ (X131.5/6)	NO contact      NC contact

---

<b>p10041[0...2]</b>	<b>SI F-DI self test mode selection</b>		
S200 PN	<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit Safety Integrated application	
	<b>Can be changed in the operating state:</b>	Commissioning (Safety Integrated)	
	<b>Parameter group:</b>	Safety Integrated	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0	3	0
<b>Description:</b>	Enable for the F-DI self test.		

A.3 Parameters

<b>Value:</b>	0: Self test using internal test signals
	1: Self test using specified dark pulses (VS+)
	3: Self test using externally specified dark pulses
<b>Index:</b>	[0] = F-DI 0
	[1] = Reserved
	[2] = Reserved

---

**Note**

Mode 1:

A check is made whether p10017 is > p10018 + 2 ms and whether p10018 is set > 0.

---



---

**r10051.0 SI digital inputs status channel A**

S200 PN	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Parameter group:</b>	Safety Integrated
	<b>Unit:</b> -	

**Description:** Display and signal source for the single-channel, logical and debounced status of the failsafe digital inputs of channel A.

<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Status of DI 10+ (X131.1/2)	Logical 1	Logical 0

**Dependency:** See also: p10017

---

**Note**

The relationship between the logic level and the external voltage level at the input is intended for the use of a safety function:

With 24 V at the input, NC contacts have a logical "1" level, for 0 V at the input, a logical "0" level.

This means that an NC/NC contact parameterization for 0 V at both inputs of the F-DI leads to a status of the F-DI equal to "0" (safety function selected), for 24 V at both inputs of the F-DI, to a status of the F-DI equal to "1" (safety function deselected).

F-DI: Failsafe Digital Input

NC contact:

24V at the input -> logical "1"

0V at the input -> logical "0"

---



---

**r10071.0 SI F-DI status**

S200 PN	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display
	<b>Read permission:</b>	Read drive data or acknowledge messages
	<b>Write permission:</b>	Edit device configuration or drive applications
	<b>Parameter group:</b>	Safety Integrated
	<b>Unit:</b> -	

**Description:** Display for the status of the failsafe digital inputs.

<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Status of the F-DI 0	Logical 1	Logical 0

---

**Note**

The following applies:

- Logical "0": Safety function is selected

- Logical "1": safety function is deselected

F-DI: Failsafe Digital Input

---

<b>r10080.0...7</b>	<b>SI status signals channel A</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>		
	<b>Unit:</b> -		
<b>Description:</b>	Status signals (channel A) for safety-relevant motion monitoring functions integrated in the drive.		
<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b> <b>0 signal</b>
	00	STO or safe pulse cancellation active	Yes      No
	07	Internal event	No      Yes
	<b>NOTICE</b> For bit 07: An internal event is displayed if STO is active.		

<b>r10098</b>	<b>SI actual checksum across device-specific parameters</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Basic functions	
	<b>Unit:</b> -		
<b>Description:</b>	Displays the checksum over the checksum-checked parameters for the device-specific parameters of the drive system (actual checksum).		
<b>Dependency:</b>	See also: p10099		

<b>p10099</b>	<b>SI reference checksum across device-specific parameters</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit Safety Integrated application	
	<b>Can be changed in the operating state:</b>	Commissioning (Safety Integrated)	
	<b>Parameter group:</b>	Basic functions	
	<b>Unit:</b> -		
	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	0000 hex	FFFF FFFF hex	A1A1 A1A1 hex
<b>Description:</b>	Displays the checksum over the checksum-checked parameters for the device-specific parameters of the drive system (reference checksum).		
<b>Dependency:</b>	See also: r10098		

<b>r10151.0</b>	<b>SI digital inputs status channel B</b>		
S200 PN	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>		
	<b>Unit:</b> -		
<b>Description:</b>	Display for the single-channel, logical and debounced status of the failsafe digital inputs of channel B.		
<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b> <b>0 signal</b>
	00	Status of DI 11+ (X131.5/6)	Logical 1      Logical 0
<b>Dependency:</b>	See also: p10017, p10040		

**Note**

The relationship between the logic level and the external voltage level at the input depends on the parameterization (see p10040) of the input as NC contact or NO contact, and is aligned to the use of a safety function:

With 24 V at the input, NC contacts have a logical "1" level, for 0 V at the input, a logical "0" level.

This means that an NC/NC contact parameterization of 0 V at both inputs of the F-DI leads to a status of the F-DI equal to "0" (safety function selected), for 24 V at both inputs of the F-DI, to a status of the F-DI equal to "1" (safety function deselected).

With 24 V at the input, NO contacts have a logical "0" level, for 0 V at the input, a logical "1" level. This means that for an NC/NO contact parameterization, the level 0 V/24 V leads to a status of the F-DI equal to "0" (safety function selected), the level 24 V/0 V leads to status of the F-DI equal to "1" (safety function deselected).

F-DI: Failsafe Digital Input

**r10171.0**

S200 PN

**SI F-DI status channel B****Data type:** Unsigned8**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Safety Integrated

**Unit:** -**Description:**

Display for the status of the failsafe digital inputs.

**Bit array:**

Bit	Signal name	1 signal	0 signal
00	Status of the F-DI 0	Logical 1	Logical 0

**Note**

If a safety function (e.g. via c10022) is controlled via an F-DI, then the following applies:

- Logical "0": Safety function is selected

- Logical "1": safety function is deselected

F-DI: Failsafe Digital Input

**r10180.0...7**

S200 PN

**SI status signals channel B****Data type:** Unsigned32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:****Unit:** -**Description:**

Status signals (channel B) for safety-relevant motion monitoring functions integrated in the drive.

**Bit array:**

Bit	Signal name	1 signal	0 signal
00	STO or safe pulse cancellation active	Yes	No
07	Internal event	No	Yes

**NOTICE**

For bit 07:

An internal event is displayed if STO is active.

**r10198**

S200 PN

**SI actual checksum across device-specific parameters channel B****Data type:** Unsigned32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Basic functions

**Unit:** -**Description:**

Displays the checksum over the checksum-checked parameters for the device-specific parameters of the drive system (actual checksum) channel B.

**Dependency:**

See also: p10199

<b>p10199</b>	<b>SI reference checksum across device-specific parameters chan B</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit Safety Integrated application	
	<b>Can be changed in the operating state:</b>	Commissioning (Safety Integrated)	
	<b>Parameter group:</b>	Basic functions	
	<b>Unit:</b> -		
	<b>Min:</b> 0000 hex	<b>Max:</b> FFFF FFFF hex	<b>Factory setting:</b> B2B2 B2B2 hex
<b>Description:</b>	Displays the checksum over the checksum-checked parameters for the device-specific parameters of the drive system (reference checksum) channel B.		
<b>Dependency:</b>	See also: r10198		

<b>r10352.0...15</b>	<b>SI STO select cause</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Safety Integrated	
	<b>Unit:</b> -		
<b>Description:</b>	Reason that STO (Safe Torque Off) function was selected.		
<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b> <b>0 signal</b>
	00	Selection via F-DI	High      Low
	04	Safety commissioning mode active	High      Low
	12	Stop response	High      Low
	14	Response to parameterizing error	High      Low
	15	Response to internal software error	High      Low

<b>r10452.0...15</b>	<b>SI STO select cause channel B</b>		
S200 PN	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Safety Integrated	
	<b>Unit:</b> -		
<b>Description:</b>	Reason for the selection of function STO (Safe Torque Off) on channel B.		
<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b> <b>0 signal</b>
	00	Selection via F-DI	High      Low
	04	Safety commissioning mode active	High      Low
	12	Stop response	High      Low
	14	Response to parameterizing error	High      Low
	15	Response to internal software error	High      Low

<b>c11500[0...3]</b>	<b>LR initiate absolute encoder adjustment</b>		
	<b>Data type:</b> Unsigned8	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Position control	
	<b>Unit:</b> -		

<b>Description:</b>	Initiate adjustment for absolute encoder A 0/1 signal starts the absolute encoder adjustment.
<b>Index:</b>	[0] = Position control [1] = Motor encoder [2] = Reserved [3] = Reserved
<b>Dependency:</b>	See also: p2507, r2526, c2598, p2599

<b>⚠ CAUTION</b>
For rotating absolute encoders, when adjusting, a range is set up symmetrically around zero with half of the encoder range, within which the position must be re-established after switch-off/switch-on. In this range, it is only permissible that the encoder overflows. After the adjustment has been completed, it must be guaranteed that the range is not exited. The reason for this is that outside the range, there is no clear reference any longer between the encoder actual value and mechanical system. If the home position (c2598) lies in this range, then the position actual value is set when adjusting to the home position. Otherwise, adjustment is canceled with F07443. There is no overflow for linear absolute encoders. This means that after the adjustment, the position can be re-established in the complete traversing range after switch-off/switch-on. When adjusting, the position actual value is set to the home position.

**Note**

The status of the absolute encoder adjustment is indicated via p2507 and in status word r2526.  
To permanently accept the determined position offset, it must be retentively saved (p0977).  
This adjustment can only be initiated for an absolute encoder.

**p11550****EPOS active homing reference cam selection**

<b>Data type:</b> Integer16	<b>Visible in:</b> Standard display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Can be changed in the operating state:</b>	Ready for operation
<b>Parameter group:</b>	Homing

Unit: -

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
0	1	0

<b>Description:</b>	Signal to evaluate "Active homing reference cam".
<b>Value:</b>	0: Reference cam selection 1 1: Reference cam selection 2
<b>Dependency:</b>	See also: p2607, c2612

**c11560****EPOS direct setpoint input/MDI acceleration setpoint**

<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Direct setpoint input (MDI)
<b>Unit:</b> mm/s <sup>2</sup>	

<b>Description:</b>	Signal for the acceleration setpoint in mode "direct setpoint input/MDI".
<b>Dependency:</b>	See also: c2649, c2650

<b>NOTICE</b>
The parameter may be protected as a result of r0922 and cannot be changed.

**Note**

Depending on c2649, the acceleration setpoint is either transferred continuously or edge-triggered.



**c11560**

**EPOS direct setpoint input/MDI acceleration setpoint**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Parameter group:** Direct setpoint input (MDI)  
**Unit:** °/s<sup>2</sup>

**Description:** Signal for the acceleration setpoint in mode "direct setpoint input/MDI".

**Dependency:** See also: c2649, c2650

**NOTICE**  
The parameter may be protected as a result of r0922 and cannot be changed.

**Note**  
Depending on c2649, the acceleration setpoint is either transferred continuously or edge-triggered.

**c11561**

**EPOS direct setpoint input/MDI deceleration setpoint**

**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Parameter group:** Traversing blocks  
**Unit:** mm/s<sup>2</sup>

**Description:** Signal for the deceleration setpoint in mode "direct setpoint input/MDI".

**Dependency:** See also: c2649, c2650

**NOTICE**  
If, when calculating the traversing profile, it is identified that the target position with the programmed deceleration setpoint cannot be reached without reversing the direction, then when accepting the dynamic response values, the higher deceleration setpoint is accepted and becomes effective.  
The parameter may be protected as a result of r0922 and cannot be changed.

**Note**  
Depending on c2649, the deceleration setpoint is either transferred continuously or edge-triggered.

**c11561**

**EPOS direct setpoint input/MDI deceleration setpoint**

S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)

**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:** Read drive data or acknowledge messages  
**Write permission:** Edit device configuration or drive applications  
**Parameter group:** Traversing blocks  
**Unit:** °/s<sup>2</sup>

**Description:** Signal for the deceleration setpoint in mode "direct setpoint input/MDI".

**Dependency:** See also: c2649, c2650

**NOTICE**  
If, when calculating the traversing profile, it is identified that the target position with the programmed deceleration setpoint cannot be reached without reversing the direction, then when accepting the dynamic response values, the higher deceleration setpoint is accepted and becomes effective.  
The parameter may be protected as a result of r0922 and cannot be changed.

**Note**  
Depending on c2649, the deceleration setpoint is either transferred continuously or edge-triggered.

---

<b>r11570</b>	<b>EPOS actual acceleration</b>
<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Standard display
<b>Read permission:</b>	Read drive data or acknowledge messages
<b>Write permission:</b>	Edit device configuration or drive applications
<b>Parameter group:</b>	Jog, Traversing blocks, Direct setpoint input (MDI)
<b>Unit:</b> mm/s <sup>2</sup>	
<b>Description:</b>	Displays the acceleration value currently being processed.
<b>Dependency:</b>	See also: p2572
<b>Note</b>	
The maximum acceleration from p2572 is effective in operating mode "Jog" and "Active homing".	

---

<b>r11570</b>	<b>EPOS actual acceleration</b>
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32
	<b>Visible in:</b> Standard display
	<b>Read permission:</b>
	Read drive data or acknowledge messages
	<b>Write permission:</b>
	Edit device configuration or drive applications
	<b>Parameter group:</b>
	Jog, Traversing blocks, Direct setpoint input (MDI)
	<b>Unit:</b> °/s <sup>2</sup>
<b>Description:</b>	Displays the acceleration value currently being processed.
<b>Dependency:</b>	See also: p2572
<b>Note</b>	
The maximum acceleration from p2572 is effective in operating mode "Jog" and "Active homing".	

---

<b>r11571</b>	<b>EPOS actual deceleration</b>
	<b>Data type:</b> FloatingPoint32
	<b>Visible in:</b> Standard display
	<b>Read permission:</b>
	Read drive data or acknowledge messages
	<b>Write permission:</b>
	Edit device configuration or drive applications
	<b>Parameter group:</b>
	Jog, Traversing blocks, Direct setpoint input (MDI)
	<b>Unit:</b> mm/s <sup>2</sup>
<b>Description:</b>	Displays the deceleration value currently being processed.
<b>Dependency:</b>	See also: p2573
<b>Note</b>	
The maximum deceleration from p2573 is effective in operating mode "Jog" and "Active homing".	

---

<b>r11571</b>	<b>EPOS actual deceleration</b>
S200 Basic PN (EPOS Lastseite rotierend), S200 PN (EPOS Lastseite rotierend)	<b>Data type:</b> FloatingPoint32
	<b>Visible in:</b> Standard display
	<b>Read permission:</b>
	Read drive data or acknowledge messages
	<b>Write permission:</b>
	Edit device configuration or drive applications
	<b>Parameter group:</b>
	Jog, Traversing blocks, Direct setpoint input (MDI)
	<b>Unit:</b> °/s <sup>2</sup>
<b>Description:</b>	Displays the deceleration value currently being processed.
<b>Dependency:</b>	See also: p2573
<b>Note</b>	
The maximum deceleration from p2573 is effective in operating mode "Jog" and "Active homing".	

---

**c29048**      **Torque limit selection bit 0**

**Data type:** Unsigned8      **Visible in:** Standard display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Parameter group:**      Torque limiting, Technology Extensions

**Unit:** -

**Description:**      Signal of bit 0 for the torque limit.

**c29049**      **Torque limit selection bit 1**

**Data type:** Unsigned8      **Visible in:** Standard display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Parameter group:**      Torque limiting, Technology Extensions

**Unit:** -

**Description:**      Signal of bit 1 for the torque limit.

**p29050[0...3]**      **Upper torque limit**

**Data type:** FloatingPoint32      **Visible in:** Standard display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Can be changed in the operating state:**      Ready for operation

**Parameter group:**      Technology Extensions

**Unit:** %

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
-150.0 [%]	350.0 [%]	350.0 [%]

**Description:**      Sets the upper torque limit.  
Three internal torque limits in total are available.  
With the combination of the digital input signals Torque limit selection bit 0 and Torque limit selection bit 1, you can select one of the three internal torque limits as the source of the upper torque limit.

**Index:**      [0] = Upper torque limit 0  
[1] = Upper torque limit 1  
[2] = Upper torque limit 2  
[3] = Upper torque limit 3

**p29051[0...3]**      **Lower torque limit**

**Data type:** FloatingPoint32      **Visible in:** Standard display

**Read permission:**      Read drive data or acknowledge messages

**Write permission:**      Edit device configuration or drive applications

**Can be changed in the operating state:**      Ready for operation

**Parameter group:**      Technology Extensions

**Unit:** %

<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
-350.0 [%]	150.0 [%]	-350.0 [%]

**Description:**      Sets the lower torque limit.  
Three internal torque limits in total are available.  
With the combination of the digital input signals Torque limit selection bit 0 and Torque limit selection bit 1, you can select one of the three internal torque limits as the source of the lower torque limit.

**Index:**

- [0] = Lower torque limit 0
- [1] = Lower torque limit 1
- [2] = Lower torque limit 2
- [3] = Lower torque limit 3

---

### c29063 Speed limit selection bit 0

**Data type:** Unsigned8      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Speed limiting, Technology Extensions  
**Unit:** -

**Description:** Signal of bit 0 for the speed limit.

---

### c29064 Speed limit selection bit 1

**Data type:** Unsigned8      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Parameter group:**      Speed limiting, Technology Extensions  
**Unit:** -

**Description:** Signal of bit 1 for the speed limit.

---

### p29070[0...3] Speed limit in positive direction of rotation

**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Can be changed in the operating state:** Ready for operation  
**Parameter group:**      Technology Extensions  
**Unit:** rpm  
**Min:**      **Max:**      **Factory setting:**  
0.00 [rpm]      210000.00 [rpm]      210000.00 [rpm]

**Description:** Sets the maximum speed for the positive direction.  
Three internal speed limits in total are available.  
With the combination of the digital input signals Speed limit selection bit 0 and Speed limit selection bit 1, you can select one of the three internal speed limits as the source of the speed limit.

**Index:**

- [0] = Speed limit for positive direction 0
- [1] = Speed limit for positive direction 1
- [2] = Speed limit for positive direction 2
- [3] = Speed limit for positive direction 3

**Dependency:** The default value depends on the maximum motor speed.

---

### p29071[0...3] Speed limit in negative direction of rotation

**Data type:** FloatingPoint32      **Visible in:** Standard display  
**Read permission:**      Read drive data or acknowledge messages  
**Write permission:**      Edit device configuration or drive applications  
**Can be changed in the operating state:** Ready for operation  
**Parameter group:**      Technology Extensions  
**Unit:** rpm

	<b>Min:</b>	<b>Max:</b>	<b>Factory setting:</b>
	-210000.00 [rpm]	0.00 [rpm]	-210000.00 [rpm]
<b>Description:</b>	Sets the maximum speed for the negative direction. Three internal speed limits in total are available. With the combination of the digital input signals Speed limit selection bit 0 and Speed limit selection bit 1, you can select one of the three internal speed limits as the source of the speed limit.		
<b>Index:</b>	[0] = Speed limit for negative direction 0 [1] = Speed limit for negative direction 1 [2] = Speed limit for negative direction 2 [3] = Speed limit for negative direction 3		
<b>Dependency:</b>	The default value depends on the maximum motor speed.		

---

<b>r29404.0...5</b>	<b>DO status word</b>		
	<b>Data type:</b> Unsigned32	<b>Visible in:</b> Standard display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Technology Extensions	
	<b>Unit:</b> -		
<b>Description:</b>	Displays the status word of the digital outputs.		
<b>Bit array:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b> <b>0 signal</b>
	00	ready for servo on	
	01	current control mode	
	02	overload level reached	
	03	speed reached	
	04	warning1	
	05	warning2	

---

<b>r60000</b>	<b>PROFIdrive reference speed</b>		
	<b>Data type:</b> FloatingPoint32	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>		
	<b>Unit:</b> rpm		
<b>Description:</b>	Sets the reference quantity for the speed values. All speeds specified as relative values refer to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
<b>Dependency:</b>	See also: p2000		
	<b>Note</b> Parameter r60000 is an image of parameter p2000 in conformance with PROFIdrive.		

---

<b>r60044</b>	<b>SI message buffer counter changes</b>		
S200 PN	<b>Data type:</b> Unsigned16	<b>Visible in:</b> Extended display	
	<b>Read permission:</b>	Read drive data or acknowledge messages	
	<b>Write permission:</b>	Edit device configuration or drive applications	
	<b>Parameter group:</b>	Extended functions	
	<b>Unit:</b> -		
<b>Description:</b>	Displays the changes of the safety message buffer. This counter is incremented every time that the safety message buffer changes.		
<b>Recommendation:</b>	This is used to check whether the safety message buffer has been read out consistently.		

**Dependency:** See also: r9753, r9754, r9755, r9756, r60045, r60048, r60049, p60052

**r60045[0...63]****SI message code**

S200 PN

**Data type:** Unsigned16**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Extended functions

**Unit:** -**Description:**

Displays the numbers of safety messages that have occurred.

**Dependency:**

See also: r9753, r9754, r9755, r9756, r60044, r60048, r60049, p60052

**Note**

The messages type "safety message" (Cxxxxx) are entered in the message fault buffer.

Message buffer structure (principle):

r60045[0], r60048[0], r60049[0], r9753[0], r9754[0], r9755[0], r9756[0] --&gt; safety message 1 (oldest active message) of the actual message case.

...

r60045[7], r60048[7], r60049[7], r9753[7], r9754[7], r9755[7], r9756[7] --&gt; safety message 8 (latest active message) of the actual message case,

Safety messages that have gone are automatically acknowledged.

History of acknowledged messages:

r60045[8], r60048[8], r60049[8], r9753[8], r9754[8], r9755[8], r9756[8] --&gt; safety message 1 of the 1st acknowledged message case,

...

r60045[16], r60048[16], r60049[16], r9753[16], r9754[16], r9755[16], r9756[16] --&gt; safety message 1 of the 2nd acknowledged message case,

...

r60045[56], r60048[56], r60049[56], r9753[56], r9754[56], r9755[56], r9756[56] --&gt; safety message 1 of the 7th acknowledged message case,

...

r60045[63], r60048[63], r60049[63], r9753[63], r9754[63], r9755[63], r9756[63] --&gt; safety message 8 (oldest gone message) of the 7th acknowledged message case,

**r60047[0...63]****SI message number**

S200 PN

**Data type:** Unsigned16**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Extended functions

**Unit:** -**Description:**

Displays the numbers of safety messages that have occurred.

**Dependency:**

See also: r9753, r9754, r9755, r9756, r60044, r60048, r60049, p60052

**Note**

The messages type "safety message" (Cxxxx) are entered in the message fault buffer.

Message buffer structure (principle):

r60045[0], r60048[0], r60049[0], r9753[0], r9754[0], r9755[0], r9756[0] --> safety message 1 (oldest active message) of the actual message case.

...

r60045[7], r60048[7], r60049[7], r9753[7], r9754[7], r9755[7], r9756[7] --> safety message 8 (latest active message) of the actual message case,

Safety messages that have gone are automatically acknowledged.

History of acknowledged messages:

r60045[8], r60048[8], r60049[8], r9753[8], r9754[8], r9755[8], r9756[8] --> safety message 1 of the 1st acknowledged message case,

...

r60045[16], r60048[16], r60049[16], r9753[16], r9754[16], r9755[16], r9756[16] --> safety message 1 of the 2nd acknowledged message case,

...

r60045[56], r60048[56], r60049[56], r9753[56], r9754[56], r9755[56], r9756[56] --> safety message 1 of the 7th acknowledged message case,

...

r60045[63], r60048[63], r60049[63], r9753[63], r9754[63], r9755[63], r9756[63] --> safety message 8 (oldest gone message) of the 7th acknowledged message case,

**r60048[0...63]**

**SI message time received in milliseconds**

S200 PN

**Data type:** Unsigned32

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Extended functions

**Unit:** ms

**Description:**

Displays the relative system runtime in milliseconds when the safety message occurred.

**Dependency:**

See also: r9753, r9754, r9755, r9756, r60044, r60045, r60049, p60052

**r60049[0...63]**

**SI message value**

S200 PN

**Data type:** Integer32

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Parameter group:**

Extended functions

**Unit:** -

**Description:**

Displays the additional information about the safety message that occurred (as integer number).

**Dependency:**

See also: r9753, r9754, r9755, r9756, r60044, r60045, r60048, p60052

**p60052**

**SI message cases counter**

S200 PN

**Data type:** Unsigned16

**Visible in:** Extended display

**Read permission:**

Read drive data or acknowledge messages

**Write permission:**

Edit device configuration or drive applications

**Can be changed in the operating state:** Operation

**Parameter group:**

Extended functions

**Unit:** -

**Min:**

0

**Max:**

65535

**Factory setting:**

0

**Description:**

Number of safety message cases that have occurred since the last reset.

**Dependency:** The safety message buffer is cleared by resetting the parameter to 0.  
See also: r9753, r9754, r9755, r9756, r60044, r60045, r60048, r60049

---

### r6100[0...4] PROFIdrive telegram display total

**Data type:** Unsigned16                      **Visible in:** Extended display  
**Read permission:**                              Read drive data or acknowledge messages  
**Write permission:**                              Edit device configuration or drive applications  
**Parameter group:**                              Configuration  
**Unit:** -

**Description:** Displays the send and receive telegrams.

**Index:** [0] = Subslot 1: MAP  
[1] = -  
[2] = Subslot 3: standard/SIEMENS  
[3] = Subslot 4: supplementary telegram  
[4] = Subslot 5: supplementary telegram

**Dependency:** See also: r0922

---

**Note**  
Value = 65534: No telegram  
Value = 65535: MAP "Module Access Point"

---



---

### r61000[0...239] PROFINET Name of Station

**Data type:** Unsigned8                      **Visible in:** Extended display  
**Read permission:**                              Read drive data or acknowledge messages  
**Write permission:**                              Edit device configuration or drive applications  
**Parameter group:**                              Configuration  
**Unit:** -

**Description:** Displays PROFINET Name of Station.

---

### r61001[0...3] PROFINET IP of Station

**Data type:** Unsigned8                      **Visible in:** Extended display  
**Read permission:**                              Read drive data or acknowledge messages  
**Write permission:**                              Edit device configuration or drive applications  
**Parameter group:**                              Configuration  
**Unit:** -

**Description:** Displays PROFINET IP of Station.



## A.4 Assembling cables

### Description

Cables are important components of a servo drive system. They are essential to the stable and reliable operation of the system.

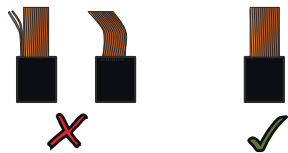
Siemens recommends that you use Siemens cable assemblies and connectors. All Siemens cable assemblies and connectors are tested and compliant with CE standards and EMC requirements. If you use non-Siemens cable assemblies, for example, cables made by yourself or third-party cables, Siemens does not guarantee that the servo drive system meets CE standards. In this case, if the drive system is required to be operated in a CE-compliant environment, you should reapply for the certification.

Siemens does not provide any guarantee or warranty regarding the functionality, reliability or quality of non-Siemens cables used with the S200 servo drive system, and is not responsible for device (e.g. motor and converter) damages due to use with non-Siemens cables.

Siemens allows you to assemble your own cables in case that, for example, cables of special length are needed; therefore, Siemens provides instructions for assembling cables and connectors. Siemens does not guarantee that your cables meet CE standards and EMC requirements.

When assembling the cables, observe the following instructions:

- The assembly must be performed by qualified personnel.
- Prepare appropriate tools, raw cables, and Siemens connectors.
- To avoid splaying or fraying of the strands, strip the wires squarely and evenly.



- To avoid short-circuiting between wires and unused pins on the connector, cover the unused pins with heat-shrinkable tubes.

### More information

For more information about Siemens cables and connectors, see Section "Cables and connectors (Page 130)".

## A.4.1 Assembling connectors on the converter side

### A.4.1.1 Assembling the cable lugs

#### Overview

This section offers general assembly instructions for cable lugs and is applicable to the following cables:


- Mains supply cable
- 24 V DC power supply cable
- Motor holding brake cable
- Motor power cable
- External braking resistor cable
- STO connection cable

#### Requirement

You have prepared appropriate tools, raw cables, and cable lugs.

#### Procedure

1. Remove the outer sheath of the cable.
2. Remove the insulation from the conductor. For more information about stripping length, see Section "Cables and connectors (Page 130)".



3. Insert the stripped end into the cable end sleeve.




4. Crimp the cable end sleeve.



## A.4.1.2 Assembling the encoder connector
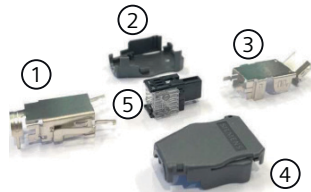
### Overview

The Siemens IX-C connector is used for encoder connection to the converter. It consists of the following components:



- |   |             |   |                                                |
|---|-------------|---|------------------------------------------------|
| ① | Shielding A | ④ | Front cover                                    |
| ② | Back cover  | ⑤ | Insulation-displacement contact (IDC) terminal |
| ③ | Shielding B |   |                                                |


Figure A-1 IX-C connector

### Requirement

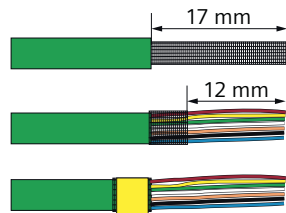You have prepared appropriate tools, a raw cable, and the Siemens IX-C connector.

### Procedure

1. Prepare the cable.
  - Remove the outer sheath of the cable by 17 mm.
  - Remove the cable shield by 12 mm.
  - Fold the remaining cable shield backward over the cable sheath, and wrap the folded cable shield with copper tape.




2. Arrange the conductors as shown below.




A.4 Assembling cables

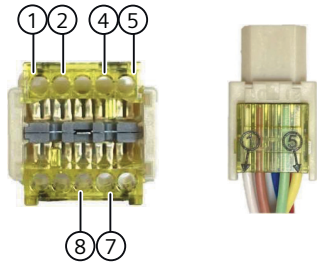3. Insert the conductors into the connector with the correct order, pushing through until the conductor ends reach the end of the connector.




Pin	Conductor color	Pin	Conductor color
1	White	5	Yellow
2	Red	7	Pink
4	Green	8	Blue


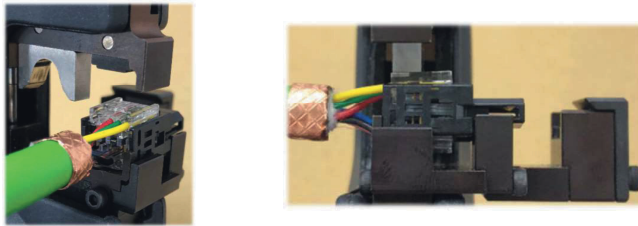
4. Insert the connector into the IDC slot in the crimping tool and crimp the connector. Make sure that red, yellow, and green conductors face up.



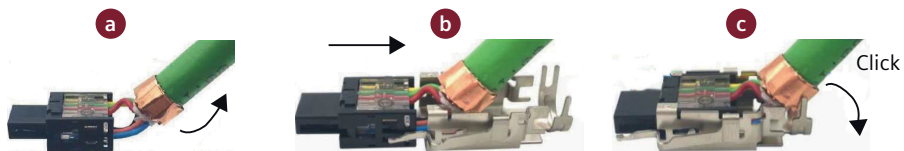
5. Assemble the shielding A.



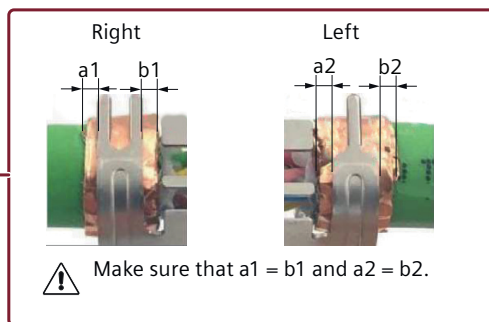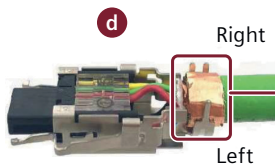
⚠ Make sure that red, yellow, and green conductors face up.



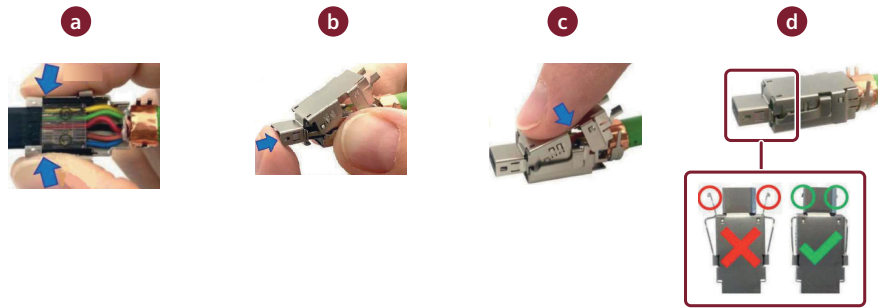
6. Assemble the shielding B.



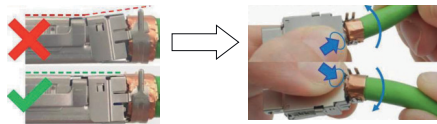
Make sure that the installed shielding B is level. If it tilts upward, adjust as follows.



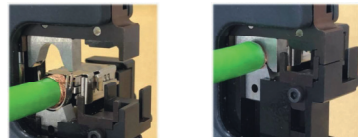7. Insert the connector into the cable crimp slot in the crimping tool and crimp the cable shield.



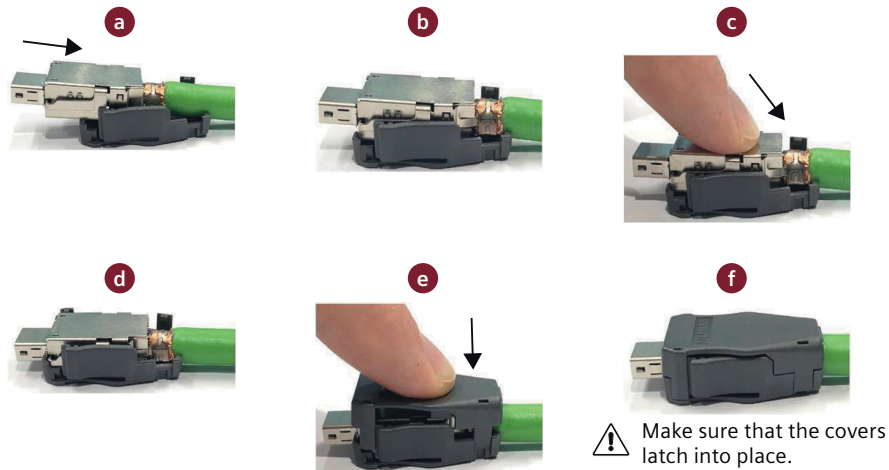8. Install the housing.



### A.4.1.3 Assembling the I/O connector

#### Requirement

You have prepared appropriate tools, raw cables, and the Siemens 20-pin MDR connector.

#### Procedure

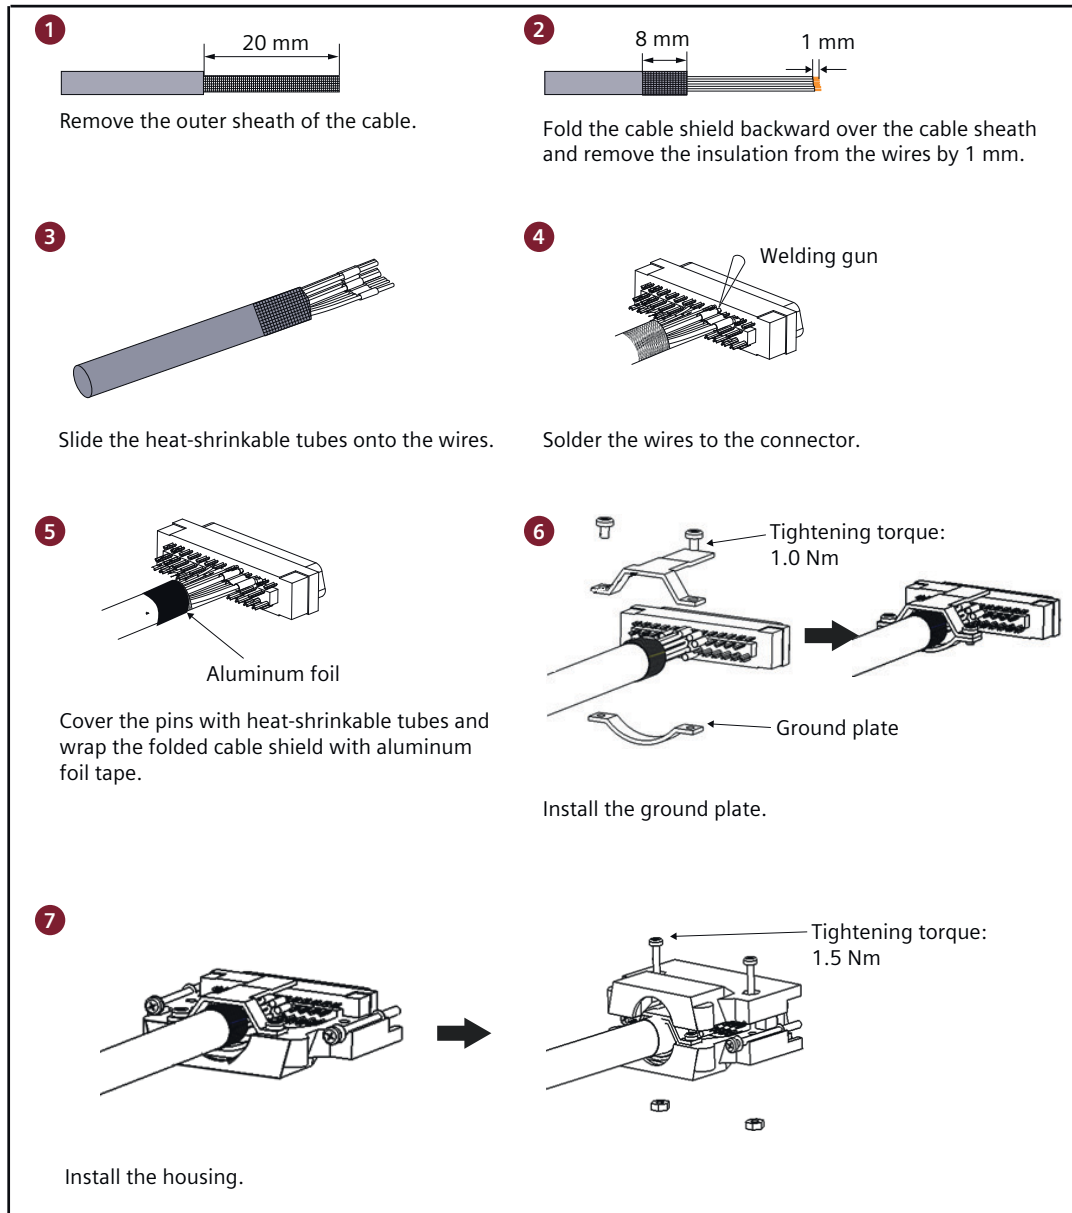



Figure A-2 Assembling the I/O cable

## A.4.2 Assembling connectors on the motor side
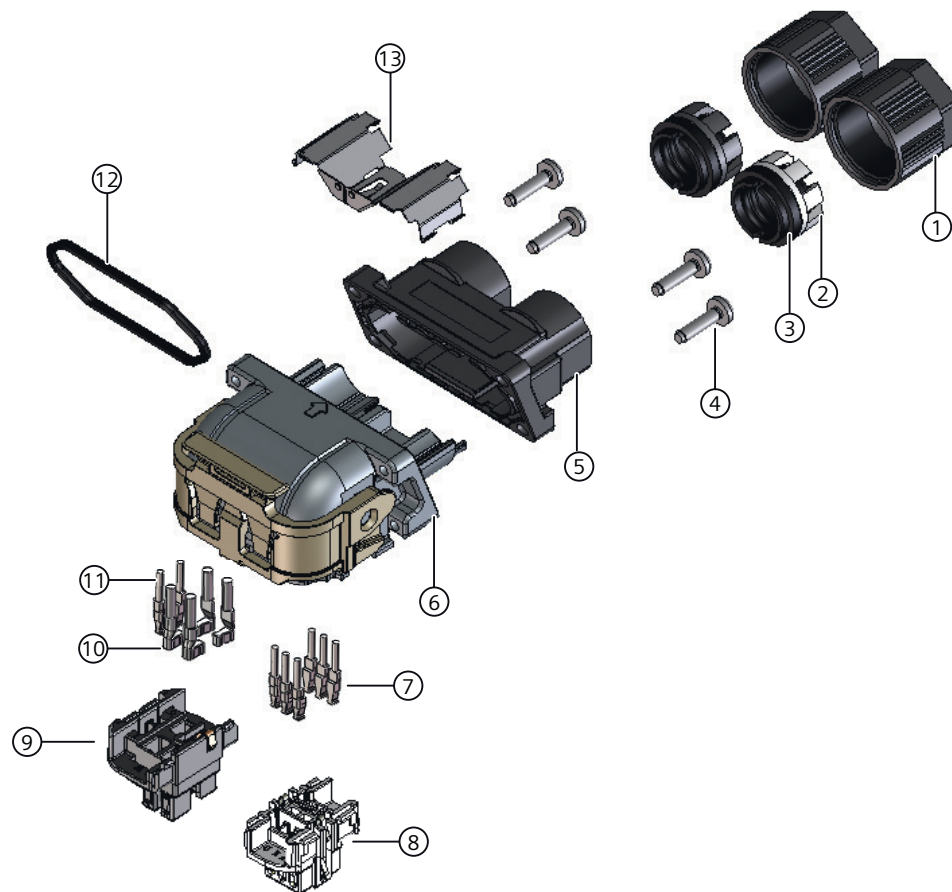
### A.4.2.1 Assembling the hybrid plug for 1FL2 motors, shaft heights 20, 30, and 40

#### Overview

The Siemens hybrid plug is used for connecting the converter to the motor and the encoder in the motor. It consists of the following components:




- |   |                       |   |                      |
|---|-----------------------|---|----------------------|
| ① | Cap                   | ⑧ | Signal unit case     |
| ② | Clamp                 | ⑨ | Power unit case      |
| ③ | Gasket                | ⑩ | Hybrid power contact |
| ④ | M2 screw              | ⑪ | Hybrid brake contact |
| ⑤ | Seal case             | ⑫ | Sealing ring         |
| ⑥ | Housing               | ⑬ | Shield holding plate |
| ⑦ | Hybrid signal contact |   |                      |

Figure A-3 Hybrid plug overview

## Requirement

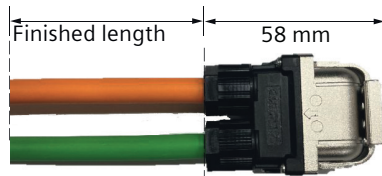You have prepared the following items:

- Raw cables  
Reserve 58 mm at the ends of the cables for termination into the hybrid connector.




- Siemens hybrid plug
- Copper tapes
- Scissor
- Screwdriver
- Crimping tool



## Procedure

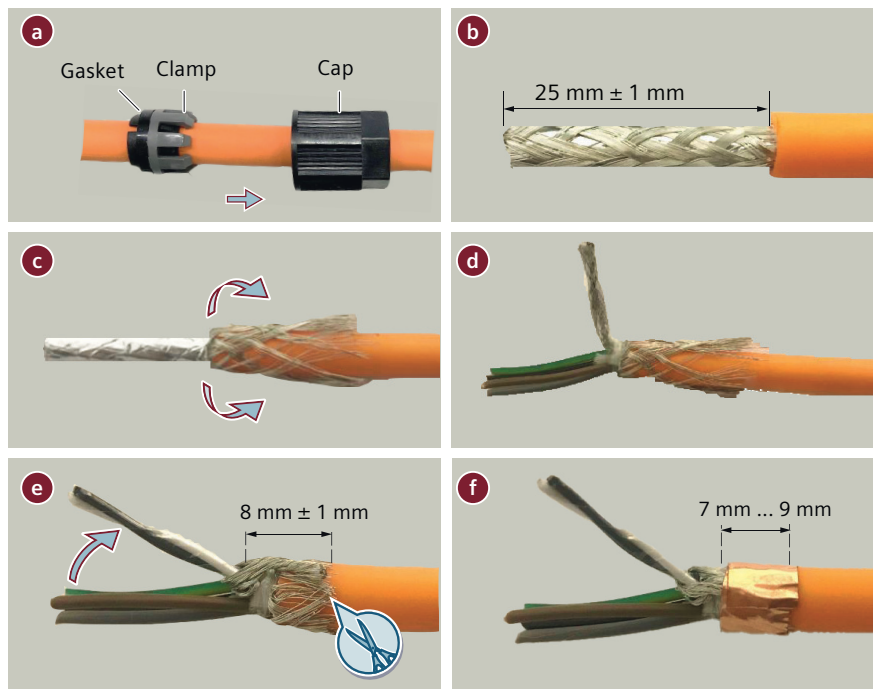
### 1. Prepare the power cable.

- Slide the cap, the clamp, and the gasket onto the power cable.
- Remove the outer sheath of the cables by  $25\text{ mm} \pm 1\text{ mm}$ .
- Loosen the braided shield of the cable and fold the shield backward over the cable sheath.
- Remove the foil shield. If the power cable is integrated with the brake conductors, additionally loosen the braided shield of the brake cable and fold its shield backward over the cable sheath.
- Cut the folded shield to make sure that the length of the folded shield is  $8\text{ mm} \pm 1\text{ mm}$ . Remove the debris to ensure cable insulation.
- Wrap around the shield 1.5 to 2 times with copper tapes.



### 2. Prepare the encoder cable.

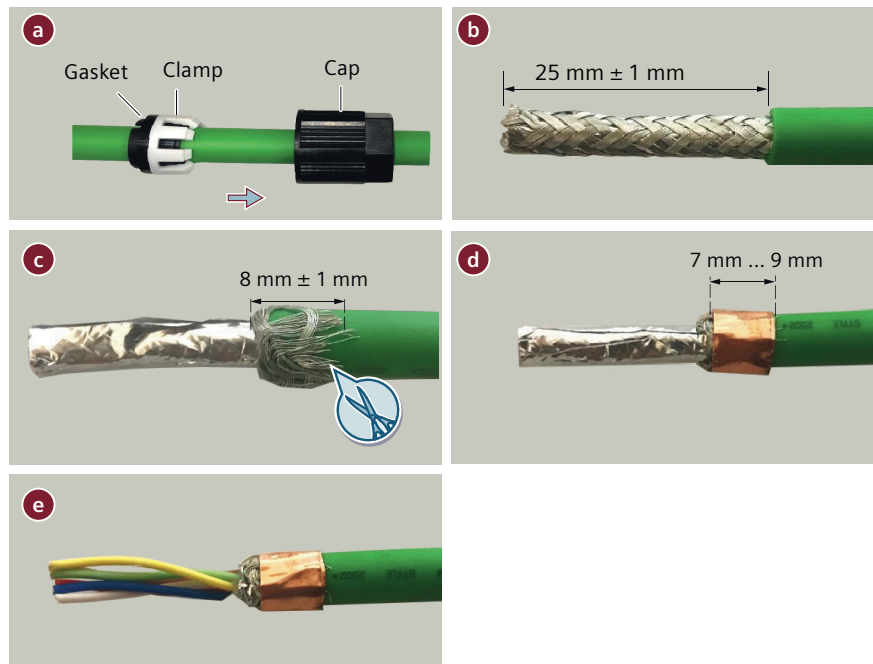- Slide the cap, the clamp, and the gasket onto the encoder cable.
- Remove the outer sheath of the cables by  $25\text{ mm} \pm 1\text{ mm}$ .
- Loosen the braided shield of the cable and fold the shield backward over the cable sheath. Cut the folded shield to make sure that the length of the folded shield is  $8\text{ mm} \pm 1\text{ mm}$ . Remove the debris to ensure cable insulation.
- Wrap around the shield 1.5 to 2 times with copper tapes.
- Remove the foil shield.




3. Arrange and cut the conductors.

The conductor length required for termination into the hybrid plug varies depending on the variant of the hybrid plug and the contacts. Conductors that are close to the cable outlet should be cut 3 mm more.


Conductor	Conductor length requirement (mm)	
	Drive-end variant	Non-drive end variant
Power conductor U	25 ± 1	22 ± 1
Power conductor V	22 ± 1	25 ± 1
Power conductor W	25 ± 1	22 ± 1
PE conductor	22 ± 1	25 ± 1
Brake conductor +	25 ± 1	25 ± 1
Brake conductor -	25 ± 1	25 ± 1
Signal conductors A, B, and C	22 ± 1	25 ± 1
Signal conductors D, E, and F	25 ± 1	22 ± 1

The following images show the conductor length requirement of the drive-end hybrid plug.

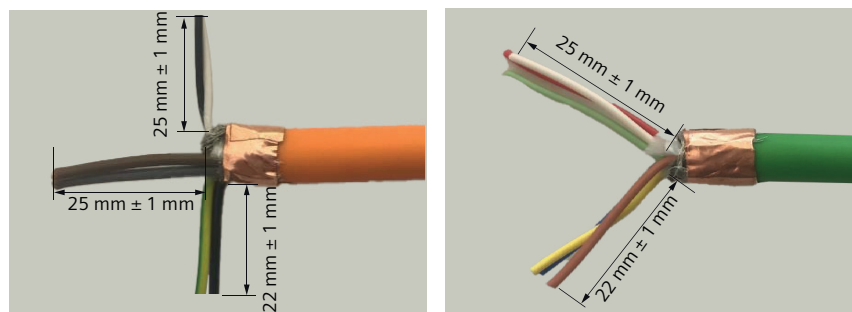


4. Strip the power and PE conductors by  $2.4 \text{ mm} \pm 0.5 \text{ mm}$ , and encoder and brake conductors by  $2.2 \text{ mm} \pm 0.5 \text{ mm}$ .

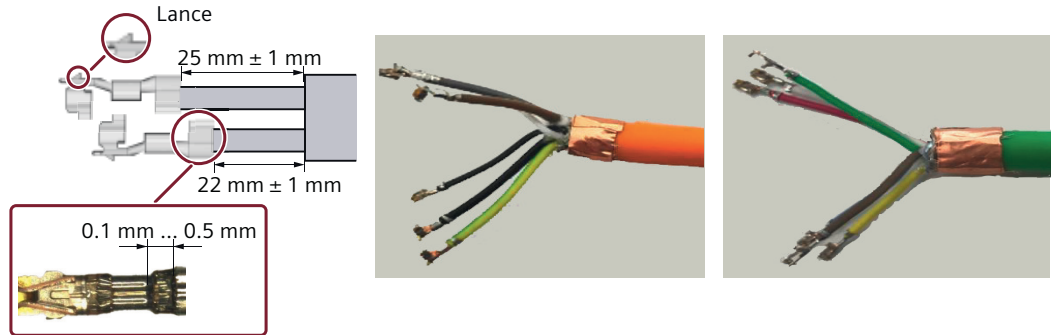
5. Crimp the contacts onto the conductors. Make sure that the lance side of the contacts face outwards.



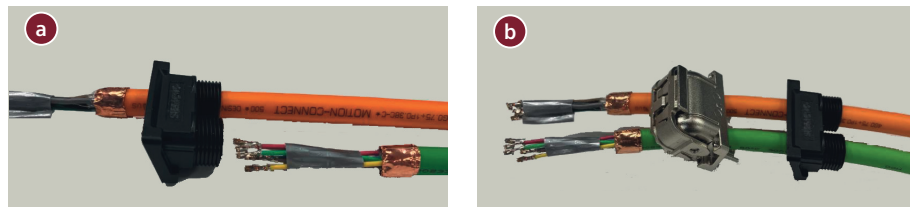
6. Slide the power and signal cables through the seal case and the housing. Avoid deforming the contact tips. Siemens recommends that you protect the conductors with a tape during the process.



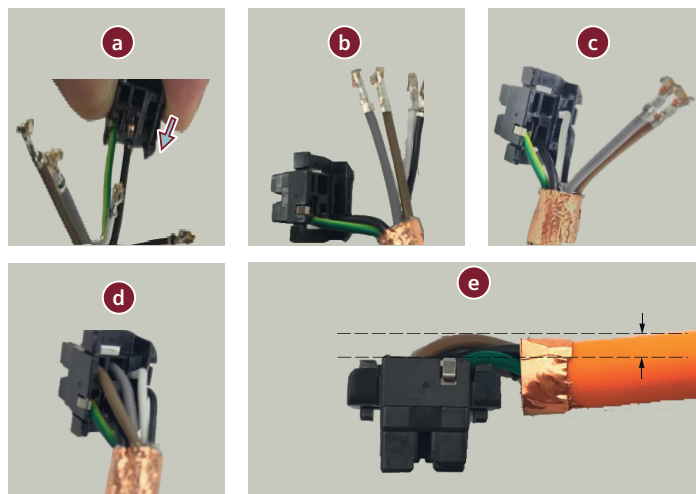
7. Insert the power and brake contacts into the power unit case and adjust the conductors to make sure that the cable does not rise up.



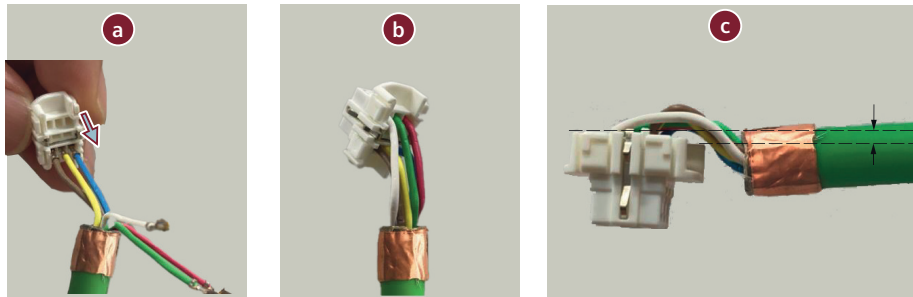
8. Insert the signal contacts into the signal unit case and adjust the conductors to make sure that the cable does not rise up.



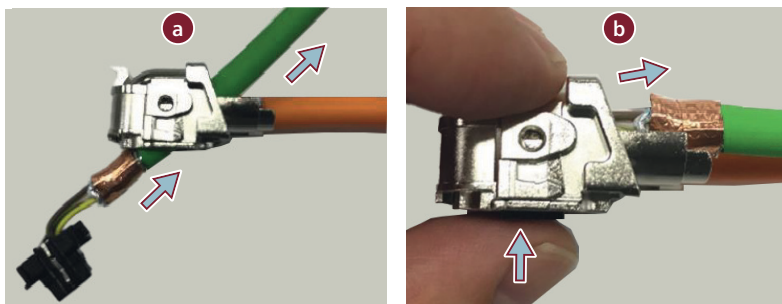9. Insert the signal and the power unit cases into the housing by pulling the cables back. Make sure that the signal and the power unit cases are latched to the housing.




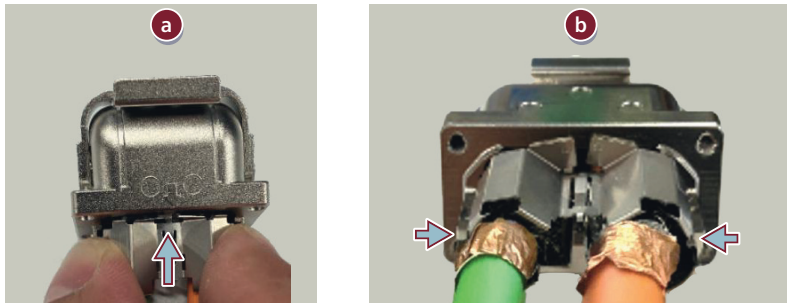10. Insert the shield holding plate into the housing.




11. Assemble the housing and the seal case.

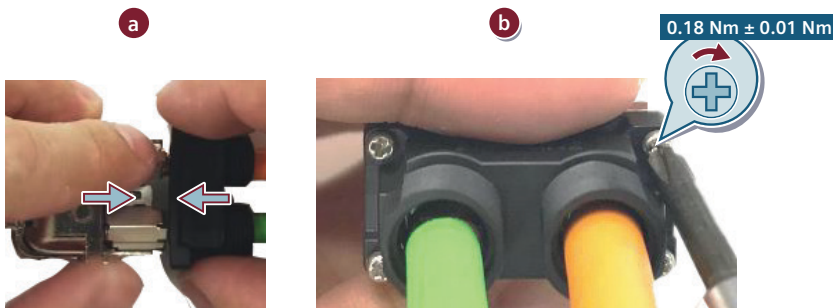- Hold the shield holding plate and slide the seal case to the housing.
- Tighten the M2 screws with a tightening torque of  $0.18 \text{ Nm} \pm 0.01 \text{ Nm}$ .




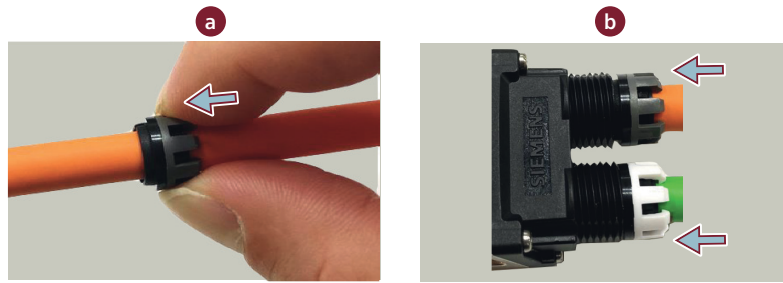12. Insert the gaskets and the clamps to the seal case.



13. Tighten the caps.

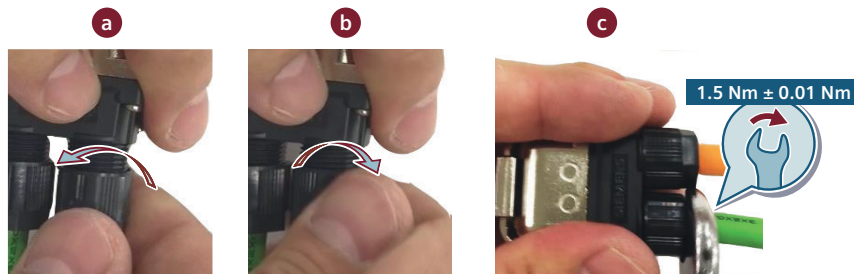- Rotate the caps in the counterclockwise direction to match the threads of the seal case and the caps.
- Rotate the caps in the clockwise direction.
- Tighten the caps by wrench with a tightening torque of  $1.5 \text{ Nm} \pm 0.01 \text{ Nm}$ .



### More information

For more information about connecting the converter and the motor, see Section "Connecting the motor (Page 135)".

### A.4.2.2 Disassembling the hybrid plug for 1FL2 motors, shaft heights 20, 30, and 40

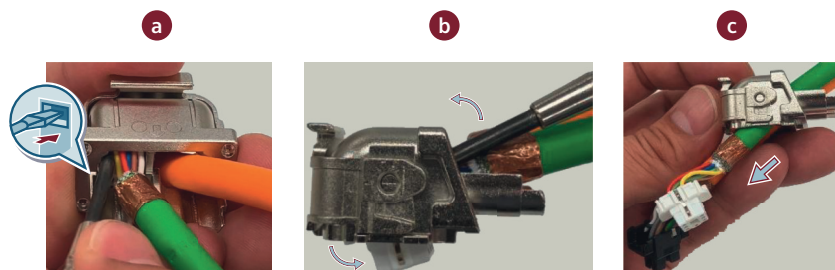
#### Requirement

You have prepared the following items:


- Assembled Siemens hybrid plug
- Pin removal tool
- Screwdriver

## Procedure


1. Remove the signal and the power unit cases from the housing.
  - Insert the screwdriver into the unit cases from the side of the cable outlet.
  - Press down the tip of the screwdriver to remove the unit cases from the housing.



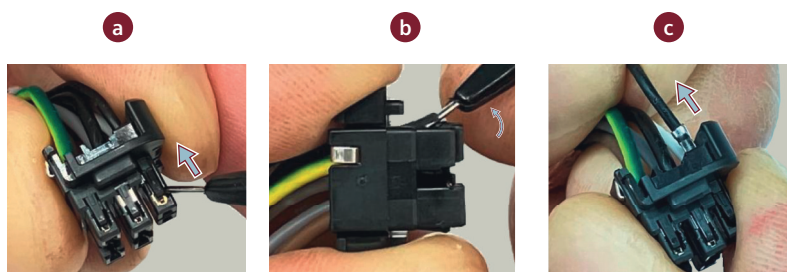
2. Remove the hybrid brake contacts from the power unit case.
  - Insert the tip of the pin removal tool into the gap between the contact and its latch.
  - Lift up the latch and pull out the contact.



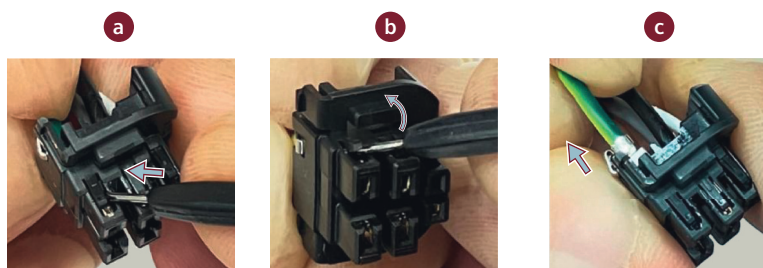3. Repeat Step 2 to remove the hybrid power contacts from the power unit case.



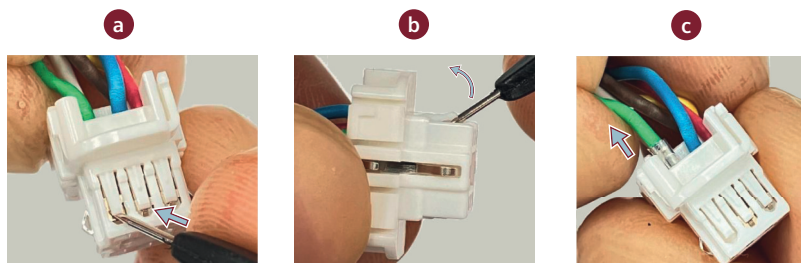4. Repeat Step 2 to remove the hybrid signal contacts from the signal unit case.



**Result**

You have disassembled the hybrid plug.

---

**Note**

The removal of contacts deforms the signal unit case; therefore, the disassembled signal unit case cannot be reused.

Siemens does not recommend that you reuse the disassembled power unit case. Before reusing the power unit case, check to make sure that there is no deformation or damage.

---

**A.4.2.3 Assembling connectors for 1FL2 motors, shaft heights 48 and 52****Overview**

This section offers assembly instructions for power and encoder cables of the 1FL2 motors shaft heights 48 and 52.

**Requirement**

You have prepared appropriate tools, raw cables, and the Siemens M17 connector.

Procedure

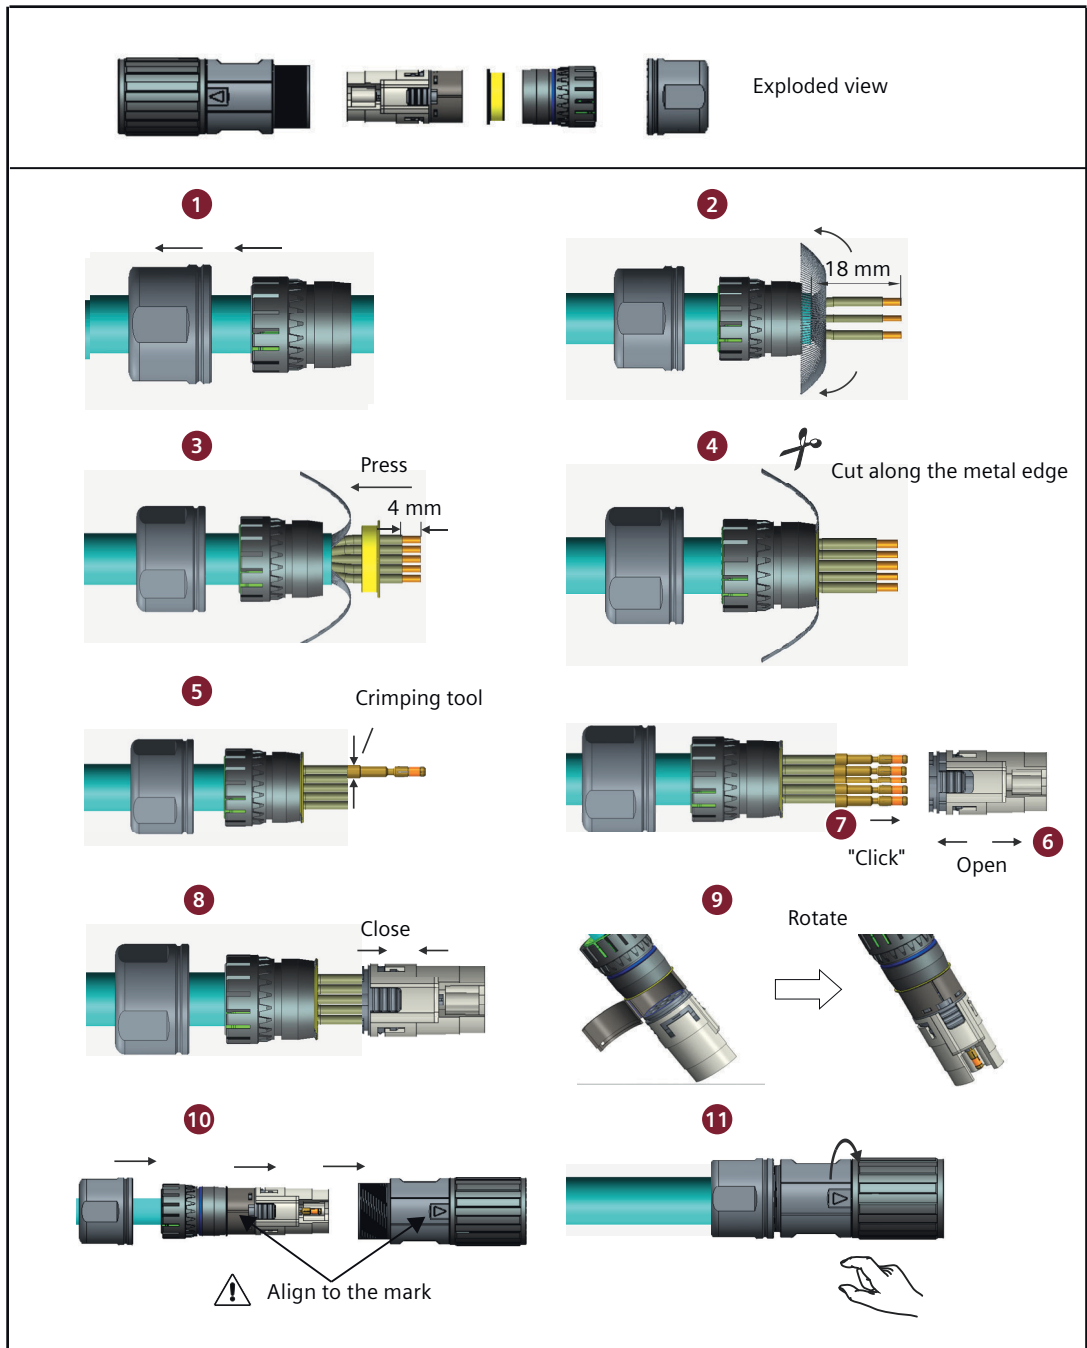


Figure A-4 Assembling the power or encoder cable of the 1FL2 motor shaft height 48 or 52

More information

For more information about connecting the converter and the motor, see Section "Connecting the motor (Page 135)".



#### A.4.2.4 Assembling connectors for 1FL2 motors, shaft heights 45, 65, and 90

##### Assembling the power connector

##### Requirement

You have prepared appropriate tools, raw cables, and the Siemens M23 connector.

Procedure

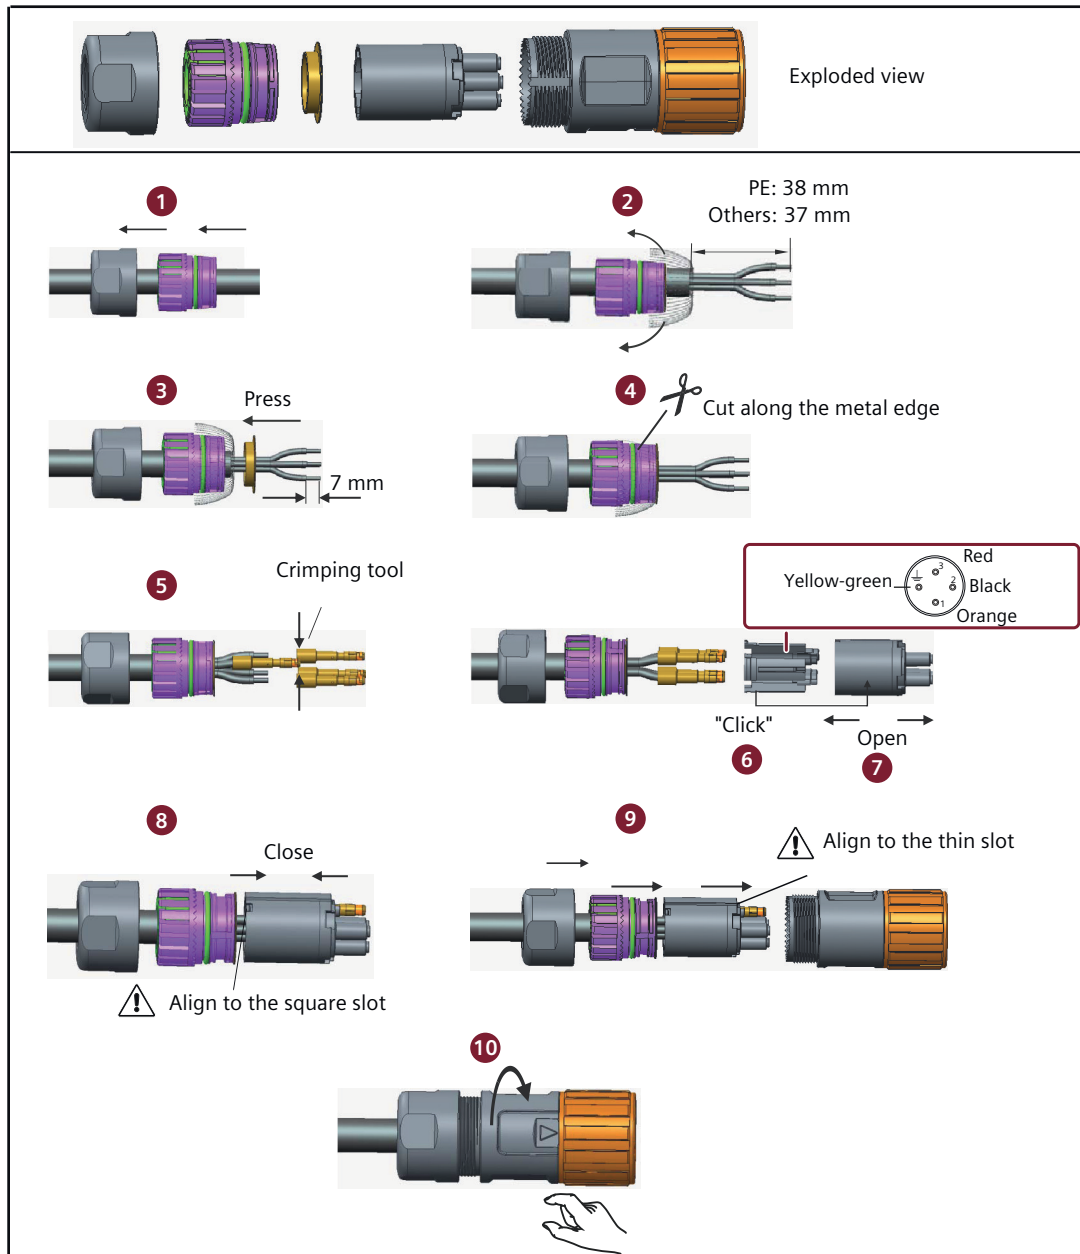


Figure A-5 Assembling the power cable of the 1FL2 motor shaft height 45, 65, or 90

More information

For more information about connecting the converter and the motor, see Section "Connecting the motor (Page 135)".

### Assembling the encoder connector

#### Requirement

You have prepared appropriate tools, raw cables, and the Siemens M17 connector.

#### Procedure

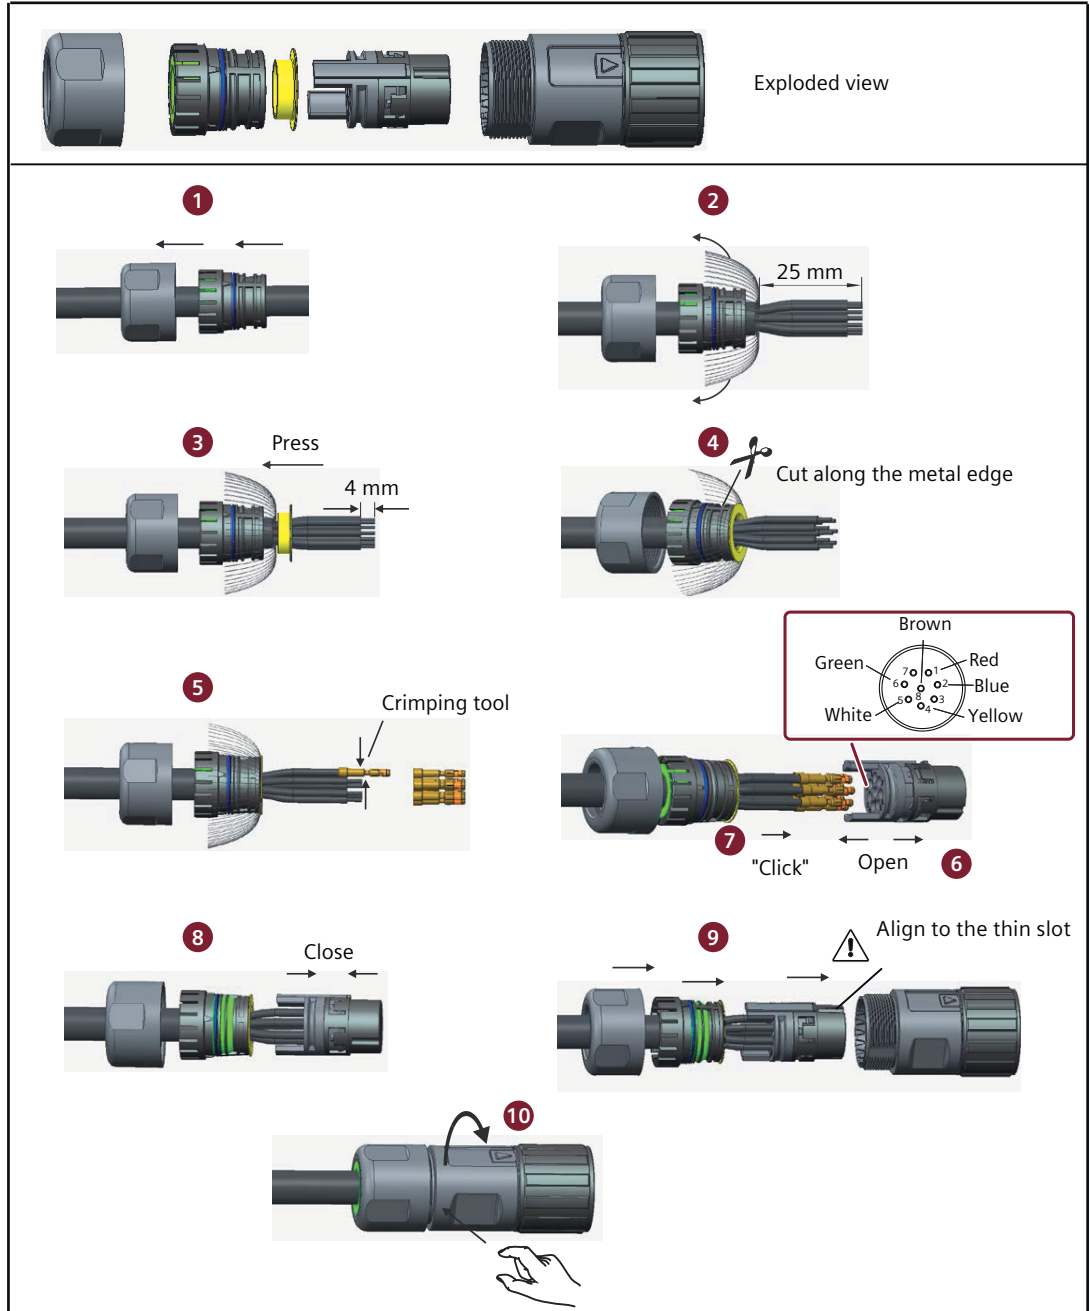


Figure A-6 Assembling the encoder cable of the 1FL2 motor shaft height 45, 65, or 90

### **More information**

For more information about connecting the converter and the motor, see Section "Connecting the motor (Page 135)".

### **Assembling the motor holding brake connector**

#### **Requirement**

You have prepared appropriate tools, raw cables, and the Siemens M17 connector.

Procedure

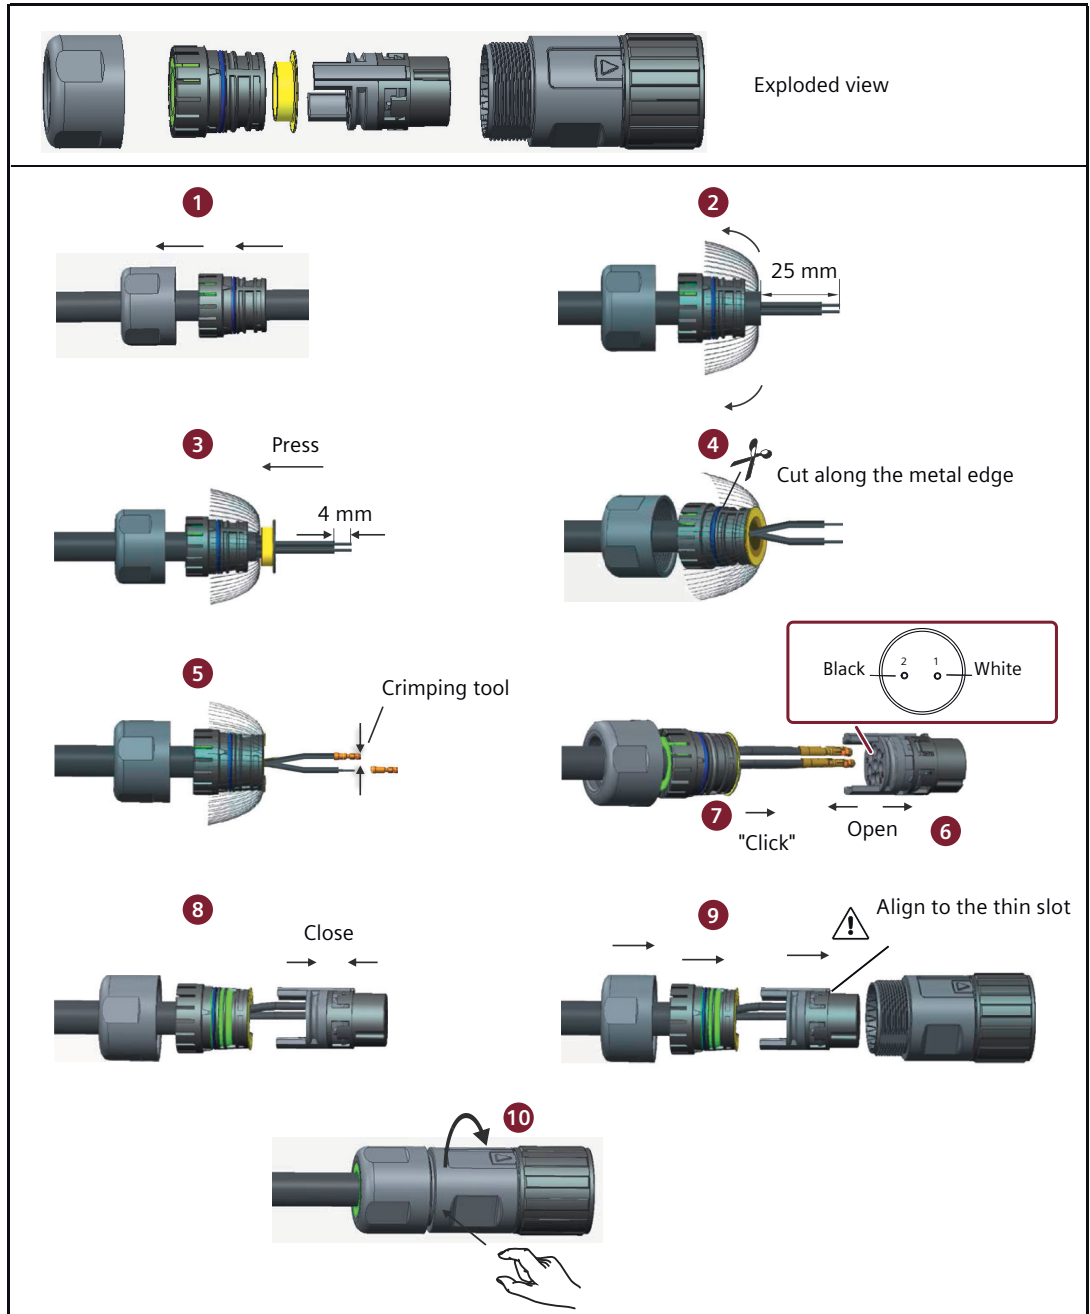


Figure A-7 Assembling the holding brake cable the 1FL2 motor shaft height 45, 65, or 90

More information

For more information about connecting the converter and the motor, see Section "Connecting the motor (Page 135)".

## A.5 Motor selection

### A.5.1 Selection procedure

#### Overview

The following section shows the principal steps for selecting a suitable motor. Then you can calculate the moment of inertia of your system and the braking energy accordingly.

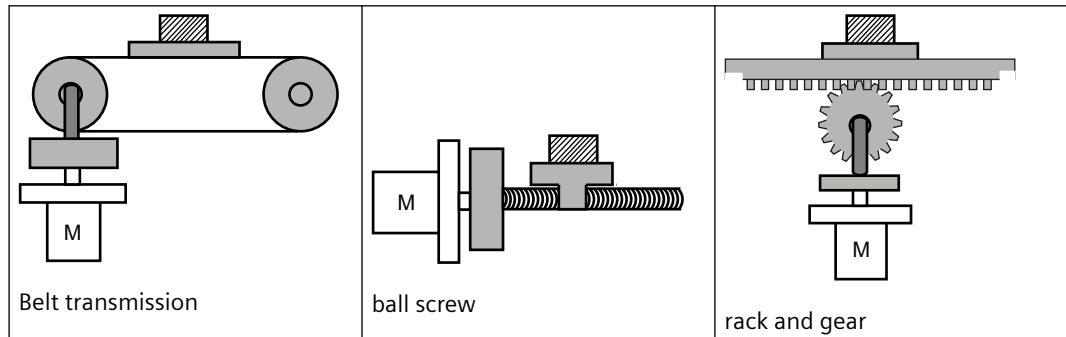
#### Requirement

None

#### Procedure









Proceed as follows to select a motor:

1. Determine the mechanism type as well as the detailed data of the related mechanical parts, such as ball screw lead, diameter, lead, and gear diameter. Three mechanism types are shown below:



2. Determine the operation pattern including such parameters as acceleration time ( $t_a$ ), constant motion time ( $t_u$ ), deceleration time ( $t_d$ ), stopping time ( $t_s$ ), cycle time ( $t_c$ ), and travel distance ( $L$ ).
3. Calculate load inertia and inertia ratio.  
The inertia ratio can be obtained by dividing the load inertia by the rotor inertia of the selected motor. The unit of inertia is  $\times 10^{-4} \text{ kg}\cdot\text{m}^2$ .
4. Calculate the speed.  
Calculate the speed according to the travel distance, acceleration time, deceleration time, and constant motion time.
5. Calculate the torque.  
Calculate the torque according to the load inertia, acceleration time, deceleration time, and constant motion time.
6. Select the motor.  
Select the motor that matches the data in step 3 to step 5.

## Typical load inertia equations

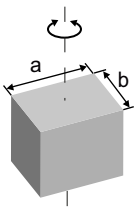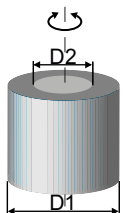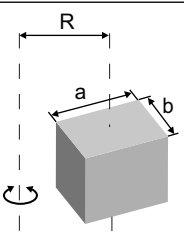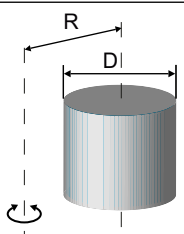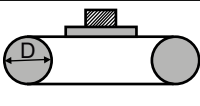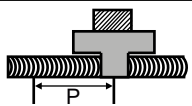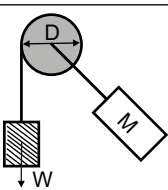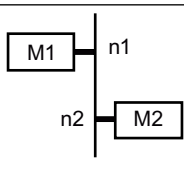Mechanism	Equation	Mechanism	Equation
 <p>Axis of rotation on center</p>	$J = \frac{W}{12} (a^2 + b^2)$ <p>W: Mass (kg) a: Length (m) b: Width (m)</p>	 <p>Axis of rotation on center</p>	$J = \frac{W}{8} (D_1^2 + D_2^2)$ <p>W: Mass (kg) D<sub>1</sub>: External diameter (m) D<sub>2</sub>: Internal diameter (m)</p>
 <p>Axis of rotation off center</p>	$J = W \cdot \left( \frac{a^2 + b^2}{3} + R^2 \right)$ <p>W: Mass (kg) a: Length (m) b: Width (m) R: Rotational diameter (m)</p>	 <p>Axis of rotation off center</p>	$J = \frac{W}{8} (D^2 + 8R^2)$ <p>W: Mass (kg) D: Workpiece diameter (m) R: Rotational diameter (m)</p>
 <p>Conveyor</p>	$J = \frac{W \cdot D^2}{4}$ <p>W: Mass (kg) D: Pulley wheel diameter (m)</p>	 <p>Ball screw</p>	$J = \frac{W \cdot P^2}{4\pi^2} + J_b$ <p>W: Mass (kg) P: Lead (m) J<sub>b</sub>: Ball screw inertia (kg·m<sup>2</sup>)</p>
 <p>Object hung with pulley</p>	$J = W \cdot \left( \frac{D}{2} \right)^2 + J_p$ <p>W: Mass (kg) D: Pulley wheel diameter (m) J<sub>p</sub>: Pulley inertia (kg·m<sup>2</sup>)</p>	 <p>Reducer</p>	$J = J_1 \cdot \frac{n_1^2}{n_2^2} + J_2$ <p>W: Mass (kg) n<sub>1</sub>/n<sub>2</sub>: Speed of each motor (rpm) J<sub>1</sub>/J<sub>2</sub>: Inertia of each motor (kg·m<sup>2</sup>)</p>

## A.5.2 Selection examples

## Description

This section uses a ball screw mechanism as an example to illustrate the motor selection procedure.

## Exemplary data

The following table lists the data related to the ball screw mechanism and operation pattern.

Workpiece weight	W	40 kg
Material density of the ball screw	ρ	7.9 × 10 <sup>3</sup> kg/m <sup>3</sup>

Ball screw length	$B_l$	2 m
Ball screw diameter	$B_d$	0.04 m
Ball screw pitch	$B_p$	0.04 m
Mechanical efficiency	$B_\eta$	0.9
Coupler inertia (refer to the supplier's product catalog)	$J_c$	$20 \times 10^{-6} \text{ kgm}^2$
Acceleration time	$t_a$	0.15 s
Constant motion time	$t_u$	0.7 s
Deceleration time	$t_d$	0.15 s
Cycle time	$t_c$	2 s
Travel distance	$L$	0.5 m
Gravitational acceleration	$g$	$9.81 \text{ m/s}^2$
Frictional coefficient	$\mu$	0.025

### Calculating velocity

Maximum traveling velocity:

$$V_{\max} = \frac{2 \cdot L}{t_a + 2 \cdot t_u + t_d} = \frac{2 \times 0.5}{0.15 + 2 \times 0.7 + 0.15} = 0.588 \text{ m/s}$$

### Calculating forces, pitch angle and friction angle

Frictional force:

$$F_R = \mu \cdot W \cdot g = 0.025 \times 40 \times 9.81 = 9.81 \text{ N}$$

Accelerating force/decelerating force:

$$F_a = F_d = W \cdot \frac{V_{\max}}{t_a} = 40 \times \frac{0.588}{0.15} = 156.8 \text{ N}$$

Pitch angle of the ball screw:

$$\alpha_B = \arctan \frac{B_p}{\pi \cdot B_d} = \arctan \frac{0.04}{3.14 \times 0.04} = 0.308 \text{ rad}$$

Friction angle of the ball screw:

$$\beta = \arctan \frac{B_p}{\pi \cdot B_d \cdot B_\eta} - \alpha_B = \arctan \frac{0.04}{3.14 \times 0.04 \times 0.9} - 0.308 = 0.0321 \text{ rad}$$

### Calculating torques for the ball screw and the coupling when accelerating and decelerating

Angular velocity of the ball screw at  $V_{\max}$ :

$$\omega_{\max B} = \frac{2 \cdot \pi \cdot V_{\max}}{B_p} = \frac{2 \times 3.14 \times 0.588}{0.04} = 92.316 \text{ s}^{-1}$$



Maximum rotating velocity:

$$n_{motor\ max} = \frac{\omega_{max\ B} \cdot 60}{2 \cdot \pi} = \frac{92.316 \times 60}{2 \times 3.14} = 882\ rpm$$

Angular acceleration of the ball screw:

$$\alpha_{aB} = \frac{\omega_{max\ B}}{t_a} = \frac{92.316}{0.15} = 615.44\ s^{-2}$$

Ball screw weight:

$$B_W = \rho \cdot \pi \cdot \left(\frac{B_d}{2}\right)^2 \cdot B_l = 7.9 \times 10^3 \times 3.14 \times \left(\frac{0.04}{2}\right)^2 \times 2 = 19.84\ kg$$

Moment of inertia of the ball screw:

$$J_B = \frac{B_W}{8} \cdot B_d^2 = \frac{19.84}{8} \times 0.04^2 = 0.00397\ kgm^2$$

Moment of inertia of the ball screw + coupling:

$$J_{B+c} = J_B + J_c = 0.00397 + 0.00002 = 0.00399\ kgm^2$$

Accelerating torque and decelerating torque for the ball screw + coupling:

$$M_{aB+c} = M_{dB+c} = J_{B+c} \cdot \alpha_{aB} = 0.00399 \times 615.44 = 2.46\ Nm$$

### Preselecting the motor

Based on the calculated torques, if we select the 1FL2306-2AC motor:

$$n_n = 2000\ rpm, M_n = 4.78\ Nm, J_{motor} = 1.326 \times 10^{-3}\ kgm^2$$

Then the inertia ratio:

$$\frac{J_{load}}{J_{motor}} = \frac{J_{B+c} + J_W}{J_{motor}} = \frac{0.00399 + 0.0016}{1.326 \times 10^{-3}} = 4.22$$

Wherein,  $J_W$  is the moment of inertia of the workpiece:

$$J_W = W \cdot \frac{B_p^2}{4 \cdot \pi^2} = 40 \times \frac{0.04}{4 \times 3.14^2} = 0.0016\ kgm^2$$

### Calculating the motor torques during the constant motion phase

$$M_{motor} = F_R \cdot \frac{B_d}{2} \cdot \tan(\alpha_B + \beta) = 9.81 \times \frac{0.04}{2} \times \tan(0.308 + 0.0318) = 0.069\ Nm$$

### Calculating the motor torques when accelerating and decelerating

Accelerating torque and decelerating torque for the motor:

$$M_{amotor} = M_{dmotor} = J_{motor} \cdot \alpha_{aB} = 1.326 \times 10^{-3} \times 615.44 = 0.82 Nm$$

Motor torque when accelerating:

$$\begin{aligned} M_{motor} &= M_{amotor} + M_{dB+c} + (F_a + F_R) \cdot \frac{B_d}{2} \cdot \tan(\alpha_B + \beta) \\ &= 0.82 + 2.46 + (156.8 + 9.81) \times \frac{0.04}{2} \times \tan(0.308 + 0.0318) = 4.458 Nm \end{aligned}$$

Motor torque when decelerating:

$$\begin{aligned} M_{motor} &= -M_{dmotor} - M_{dB+c} + (-F_a + F_R) \cdot \frac{B_d}{2} \cdot \tan(\alpha_B + \beta \cdot \text{sign}(+)^*) \\ &= -0.82 - 2.46 + (-156.8 + 9.81) \times \frac{0.04}{2} \times \tan(0.308 - 0.0318) = -4.113 Nm \end{aligned}$$

\* If the expression in brackets has a negative sign, the sign of  $\beta$  changes to minus.

### Final selection

According to the above calculated speed, torque, and inertia ratio, 1FL2306-2AC motor is suitable.



## Further information

SINAMICS:  
[www.siemens.com/sinamics](http://www.siemens.com/sinamics)

SIMOTICS:  
[www.siemens.com/simotics](http://www.siemens.com/simotics)

Siemens AG  
Digital Industries  
Motion Control  
P.O. Box 3180  
91050 Erlangen  
Germany

Scan the QR code  
for additional  
information about  
the product.

