

SIEMENS



Industrial Controls

Block Library Soft Starter SIRIUS 3RW44 for SIMATIC PCS 7
SIRIUS Soft Starter 3RW44 PCS 7 Library V8.0+SP1

Programming and Operating Manual

Edition

03/2015

Answers for industry.

Industrial Controls

Soft starter SIRIUS Soft Starter 3RW44 PCS 7 Library V8.0 + SP1




Programming and Operating Manual

<u>Introduction</u>	1
<u>Information about the library</u>	2
<u>Templates</u>	3
<u>Faceplate - Views</u>	4
<u>Description of the blocks</u>	5
<u>Module drivers of the soft starter</u>	6
<u>Parameter</u>	A
<u>Technical data</u>	B
<u>Abbreviations</u>	C

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 DANGER
indicates that death or severe personal injury will result if proper precautions are not taken.
 WARNING
indicates that death or severe personal injury may result if proper precautions are not taken.
 CAUTION
indicates that minor personal injury can result if proper precautions are not taken.
NOTICE
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

 WARNING
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Table of contents

1	Introduction.....	9
1.1	Security information	9
1.2	Components of the software package	10
1.3	Installing the library	11
1.4	Configuration steps	12
1.5	Driver generator	13
1.6	Configuring in HW Config	14
1.7	Configuring in Soft Starter ES.....	17
1.8	Further documentation.....	18
2	Information about the library	19
2.1	Blocks - overview	19
2.2	Faceplates	20
2.3	Block icons.....	24
2.4	Supported functions	25
2.4.1	Maintenance Station	25
2.4.2	Web Navigator	25
3	Templates.....	27
3.1	Using templates	28
3.2	Direct soft starter template.....	30
4	Faceplate - Views	33
4.1	Batch view @PG_APL_Batch.pdl	33
4.2	Trend view @PG_APL_Trend.pdl.....	34
4.3	Alarm view (@PG_APL_Message.pdl)	36
4.4	Preview view	37
4.5	SSMeas - Views.....	39
4.5.1	SSMeas - Standard.....	39
4.5.2	SSMeas - Diagnostics.....	41
4.6	SSStat - Views	42
4.6.1	SSStat - Standard	42
4.6.2	SSStat - Maximum pointer	44
4.6.3	SSStat - Logbook.....	46
4.7	SSOprtn - Views	48
4.7.1	SSOprtn - Standard	48
4.7.2	SSOprtn - Maintenance	50

4.7.3	SSOprtn - Limits	51
4.7.4	SSOprtn - Diagnostics	53
4.7.5	SSOprtn - Process image	55
5	Description of the blocks	57
5.1	Functions for all blocks	57
5.1.1	Calling OBs	57
5.1.2	Called blocks	58
5.1.3	Worst signal status	58
5.1.4	Quality code	59
5.1.5	Error numbers	61
5.1.6	Parameterizable functions via the Feature connection	62
5.2	SSDiag diagnostics block	63
5.2.1	SSDiag description	63
5.2.2	Message characteristics	63
5.2.3	Driver generator	65
5.2.4	Start-up characteristics	65
5.2.5	Module error	65
5.2.6	Failure of the DP master/DP slave	66
5.2.7	PROFIBUS connection error	66
5.2.8	Slave diagnostics of the 3RW44	67
5.2.9	Malfunction when loading the OB	68
5.2.10	Interconnections of the SSDiag block	69
5.3	Block for SSMeas measured value function	69
5.3.1	SSMeas description	69
5.3.2	Operating modes	70
5.3.3	Measured values	71
5.3.4	Reading and writing data records	71
5.3.5	Message characteristics	73
5.3.6	Start-up characteristics	74
5.3.7	Status information	75
5.3.8	Enabled operations	76
5.3.9	Assigning addresses in HW Config	76
5.4	Block for SSStat statistical function	78
5.4.1	SSStat description	78
5.4.2	Operating modes	79
5.4.3	Statistical values	80
5.4.4	Reading and writing data records	80
5.4.5	Message characteristics	82
5.4.6	Start-up characteristics	83
5.4.7	Status information	84
5.4.8	Enabled operations	85
5.4.9	Assigning addresses in HW Config	86
5.5	SSOprtn driver block	87
5.5.1	Description of SSOprtn	87
5.5.2	Operating modes	88
5.5.3	Process image input and output	90
5.5.4	Diagnostics information	90
5.5.5	Group error	94
5.5.6	Trip reset	95

5.5.7	Emergency start.....	95
5.5.8	Slow speed	96
5.5.9	Output 1 and output 2	97
5.5.10	Active parameter sets	97
5.5.11	Status of the Forward / Reverse command in Local mode.....	98
5.5.12	Disable Quick Stop	98
5.5.13	Motor current display	99
5.5.14	Substitute value	99
5.5.15	Message characteristics	100
5.5.16	Reading and writing data records	101
5.5.17	Fault handling	102
5.5.18	Invalid input signals.....	102
5.5.19	Operator permissions.....	103
5.5.20	Enable for measurement and statistics.....	104
5.5.21	Status information	104
5.5.22	Assigning addresses in HW Config	105
5.6	SSChn channel block	107
5.6.1	SSChn description	107
5.6.2	Configuration.....	107
5.6.3	Control word.....	108
5.6.4	Assigning addresses in HW Config	108
6	Module drivers of the soft starter	111
6.1	Released modules	111
6.2	Object lists and action lists	112
6.3	Driver blocks	113
A	Parameter.....	115
A.1	SSDiag block parameters	115
A.2	Structure of UDTs for SSDiag.....	117
A.3	SSMeas block parameters.....	121
A.4	SSStat block parameters	124
A.5	SSOpn block parameters	128
A.6	SSChn block parameters.....	133
B	Technical data	135
B.1	Technical data.....	135
C	Abbreviations.....	137
C.1	Abbreviations	137

Introduction

1.1 Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, solutions, machines, equipment and/or networks. They are important components in a holistic industrial security concept. With this in mind, Siemens' products and solutions undergo continuous development. Siemens recommends strongly that you regularly check for product updates.

For the secure operation of Siemens products and solutions, it is necessary to take suitable preventive action (e.g. cell protection concept) and integrate each component into a holistic, state-of-the-art industrial security concept. Third-party products that may be in use should also be considered. For more information about industrial security, visit <http://www.siemens.com/industrialsecurity>.

To stay informed about product updates as they occur, sign up for a product-specific newsletter. For more information, visit <http://support.automation.siemens.com>.

1.2 Components of the software package

The Soft Starter 3RW44 PCS 7 Library V8.0 + SP1 integrates PROFIBUS and PROFINET 3RW44 soft starters into the PCS 7 environment.

The software package includes the following components:

No.	Functions	Name	FB no.
1	Diagnostics function	SSDiag (Page 63)	FB1325
2	Measured value function	SSMeas (Page 69)	FB1327
3	Statistics function	SSStat (Page 78)	FB1328
4	Driver block for operating 3RW44 soft starters	SSOprtn (Page 87)	FB1326
5	Channel block for 3RW44 soft starters	SSChn (Page 107)	FB1329

- Block library (function blocks and faceplates):
 - SSDiag diagnostics block
 - SSMeas, SSStat blocks
 - SSOprtn driver block
 - SSChn channel block
- Online help in German and English
- Installation program
- Readme file for installation

1.3 Installing the library

Starting the installation

1. Place the CD in the CD-ROM drive of your PG/PC.
2. Launch the "setup.exe" program.

All the other information you need will be provided during the installation process.

Note

You can find the current system requirements and further information for the installation of the PCS7 Library in the Readme file.

1.4 Configuration steps

Procedure

1. Configuring with HW Config
2. Make the necessary interconnections for the inputs and outputs in the CFC Editor
In so doing, all of the inputs and outputs used must be within the process image.
3. Compile the CFC chart using the "Generate Module Driver" function.

1.5 Driver generator

The "Generate Module Driver" function is available for signal processing in PCS 7. Once the hardware has been configured in HW Config and the technological functions have been configured in the CFC, this function automatically generates, interconnects, and parameterizes the required module drivers. These module drivers are responsible for diagnosing and reporting errors during signal processing.

The Setup program installs XML files for the connection between the 3RW44 soft starter and the installed driver generator.

Supported modules and configurations

The driver concept for the 3RW44 soft starter includes operation:

- as a DP slave direct on the DP master system (connection via GSD, PDM object or S7 module via OM)
- As a DP slave behind a Y-link (connection via GSD or PDM object)

More information

The GSD files for the 3RW44 soft starter are available for download on the Internet (<http://support.automation.siemens.com/WW/view/en/26380436>).

Purpose of the driver generator

The signal-processing blocks, the diagnostics blocks, and the channel block are inserted in the CFC for each soft starter, and the connection to the hardware is established using symbolic addressing.

The "Generate Module Driver" option inserts the additionally required blocks, and then connects and assigns the corresponding parameters.

See also

Templates (Page 27)

Object lists and action lists (Page 112)

Driver blocks (Page 113)

1.6 Configuring in HW Config

In HW Config, the 3RW44 soft starter is inserted and configured with the associated components (GSD, OM or EDD files).

Note

The following diagrams show example configurations to illustrate configuring in HW Config.

3RW44 soft starter on the master system (PROFIBUS)

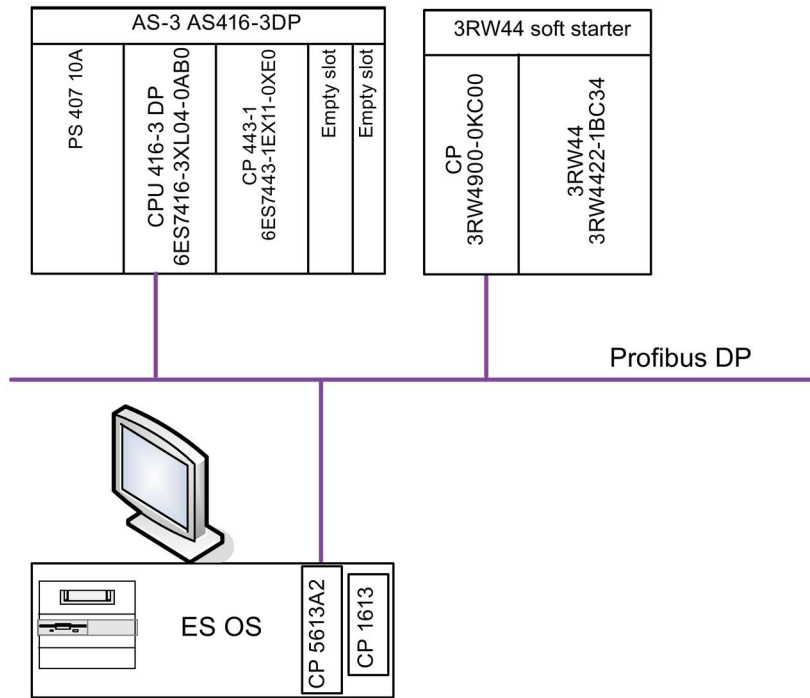


Figure 1-1 3RW44 soft starter on the master system (PROFIBUS)

3RW44 soft starter on the master system (PROFINET)

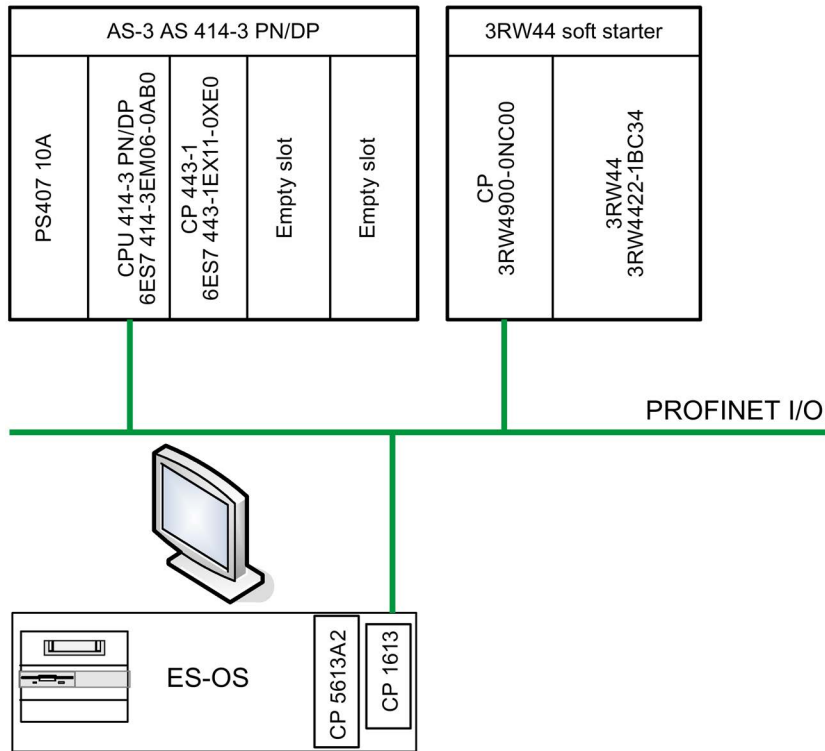


Figure 1-2 3RW44 soft starter on the master system (PROFINET)

3RW44 soft starter on PROFIBUS DP behind a Y-link

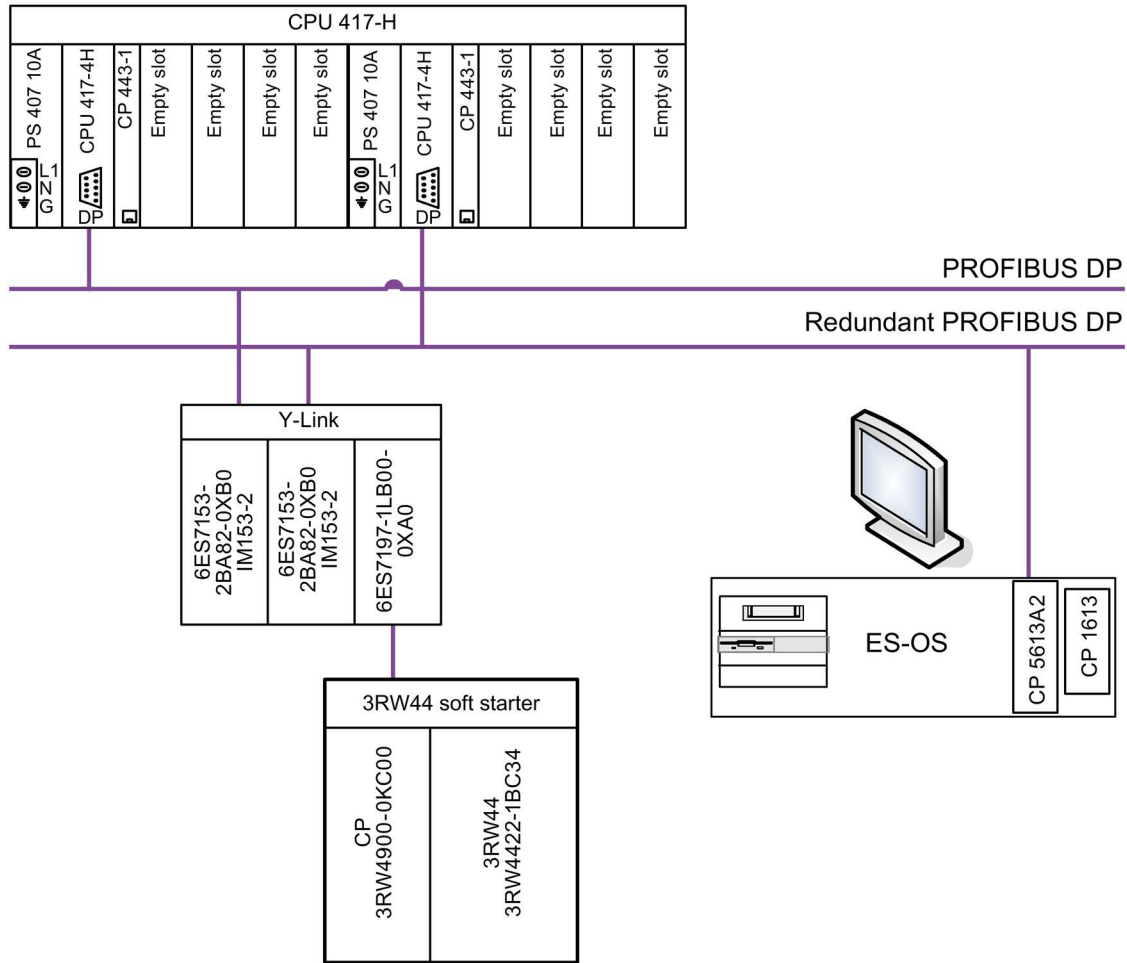


Figure 1-3 3RW44 soft starter on PROFIBUS DP behind a Y-link

1.7 Configuring in Soft Starter ES

Soft Starter ES is used for parameterizing 3RW44 soft starters, diagnosing their status, and controlling them, where applicable.

You can connect Soft Starter ES to the soft starter for PC/PG communication in the following ways:

- Via the COM interface with PC cable (Article No. 3UF7940-0AA00-0)
- Via the USB interface with USB PC cable (Article No. 3UF7941-0AA00-0).

1.8 Further documentation

Overview

You can find more information here:

- In the Programming and Operating Manual for the Soft Starter 3RW44 PCS 7 Library V8.0 + SP1 on the Internet.
- In the "Advanced Process Library (V8.0 SP2)" Function Manual on the Internet.
- Online help for SIMATIC Process Control System PCS 7
- Manuals for SIMATIC PCS 7 Process Control System

Information about the library

2.1 Blocks - overview

The following blocks can be used with the 3RW44 soft starters :

Table 2- 1 Soft starter blocks

Name	FB no.	Description
SSDiag (Page 63)	FB1325	Diagnostic functions
SSOprtn (Page 87)	FB1326	Control function that supports specific functions for operating the soft starter
SSMeas (Page 69)	FB1327	Measurement functions
SSStat (Page 78)	FB1328	Statistical functions
SSChn (Page 107)	FB1329	Channel block for 3RW44 soft starters

2.2 Faceplates

A faceplate displays all elements of a block graphically. The faceplate is displayed in a separate window on the Operator Station (OS). You can call the faceplate:

- Using picture selection keys
- From the process tag list
- By clicking the specific block icon

Typical structure of a faceplate


The file name of the faceplate is structured as follows:

"@<PG>_<XXX>_<YYY>.pdl"

Table 2-2 Meaning of tags

Tag	Replaced with
<PG>	<ul style="list-style-type: none"> • PG for block-specific elements • PCS7 for elements provided by PCS 7
<XXX>	Name of the block, e.g. SSOprtn
<YYY>	Name of view

Example: "@PG_SSOprtn.pdl"

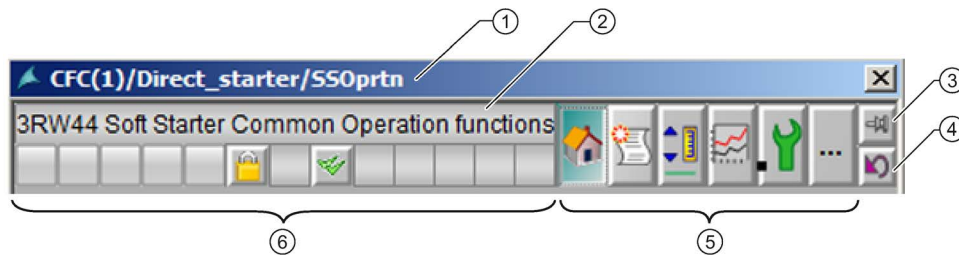

- ① Name of block
- ② Comment, e.g., name of starter
- ③ "Pin faceplate" button:
You can use this button to secure the faceplate when switching the range.
- ④ "Back to Process Picture" button:
You can use this button to return to the original process picture.
- ⑤ Toolbar for selecting the view
- ⑥ Overview window

Figure 2-1 Example of the header structure of a faceplate

Toolbar

Every button in the toolbar represents a view. Click on the appropriate button to open the view. Right-click on the name of the view in the toolbar to open the view in a separate window.

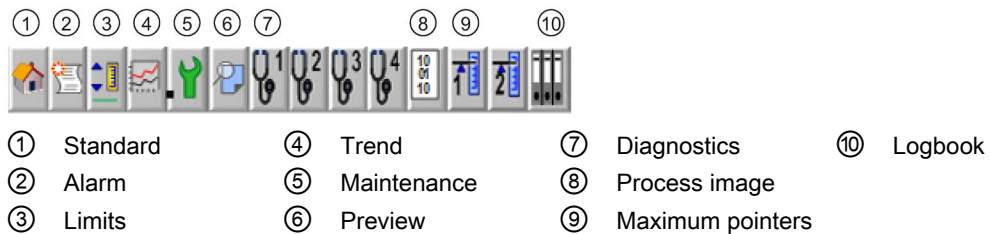


Figure 2-2 Icons for views

Overview window

The overview window shows the overall status of the block:

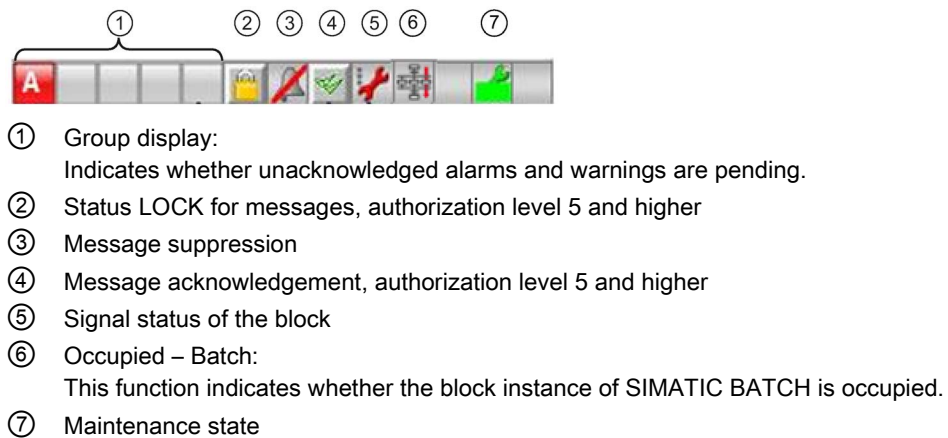


Figure 2-3 Overview window

Expanded command area

For inputs in the dialog window that require confirmation by the operator, the command area is expanded in the faceplate. The corresponding options are then available, depending on the selection.



Figure 2-4 Example of expanded command area

The expanded command area can be programmed with a 2- or 3-level access concept for the operator. The access can be changed in the WinCC Explorer using the internal @APLCommandExecutionSteps variable.

Level 2: The operator only needs to press the command to execute.

Level 3: The operator must also press the OK button to execute the command.

Authorization levels

Some commands are subject to permission with authorization levels via WIN CC. The authorization levels are updated when a view is opened. The user can only execute the commands that are enabled for him.

The authorization levels are created for the project by means of a user ID.

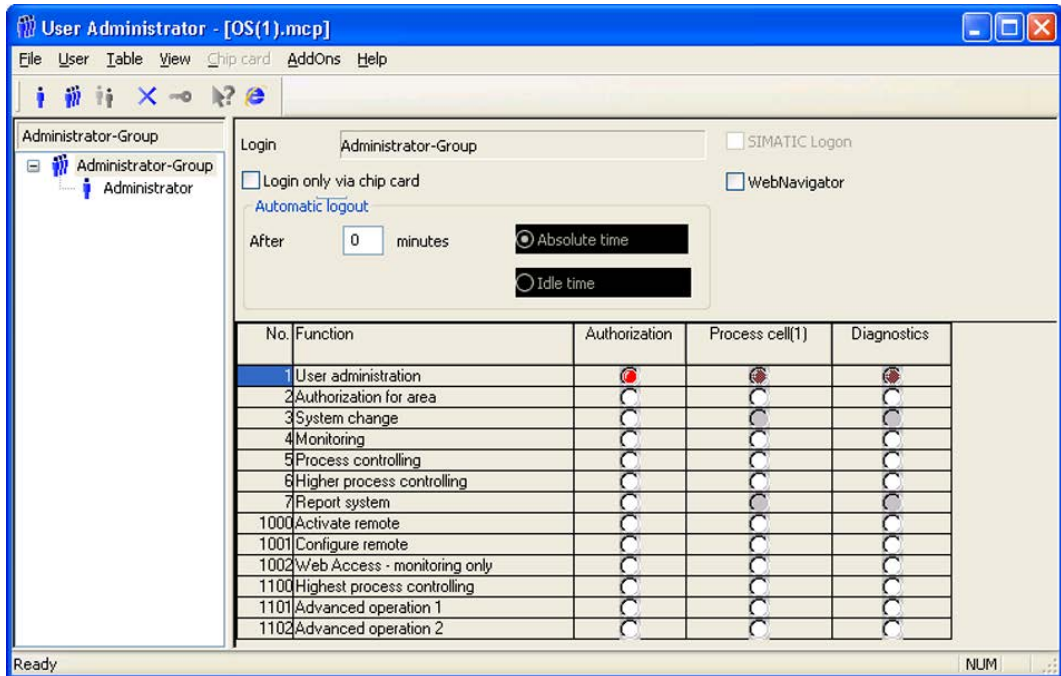


Figure 2-5 Assigning authorization levels in WinCC

Configuration aids

The following software and templates are available for configuring the faceplates:

- In WinCCExplorer: the Graphics Designer
- Templates available from the Faceplate Designer
- PCS 7-specific standard views
 - Trend
 - Alarms
- Additionally required views, user objects, and functions

More information

The faceplates described are available as functional, tested components. Along with the faceplates, you receive a description that enables you to adapt the faceplates:

- Description of the interface to the blocks
- Description of the operator input functions and the display functions.

2.3 Block icons

The block symbols are contained in the following file: "@PCS7TypicalsSSV8.pdl"

The SSdiag, SSMeas, SSStat and SSOprtn blocks can each be displayed via various block icons.


The block icons of the soft starter are displayed as follows:



Figure 2-6 Block icons, example SSOprtn

Structure

Structure of a block icon:

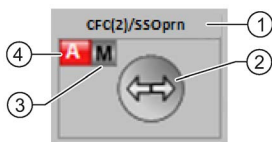

- ① Process type
- ② Motor status display
- ③ Operating mode
- ④ Error messages

Figure 2-7 Structure of a block icon, example SSOprtn

Creating block icons in CFC

To create a block icon, select the number for the appropriate block icon in the object properties of the block.

During the AS-OS compilation, the block icons are extracted from the file @PCS7TypicalsSSV8.pdl to the picture file of the current project.

Clicking on the block icon opens the corresponding faceplate and the block icon remains highlighted as long as this faceplate is opened.

2.4 Supported functions

2.4.1 Maintenance Station

The Soft Starter 3RW44 PCS 7 Library V8.0 + SP1 supports the function of the Maintenance Station via GSD, via PDM object and via the Object Manager.

2.4.2 Web Navigator

The Soft Starter 3RW44 PCS 7 Library V8.0 + SP1 supports the Web Navigator functions.

You can find additional information on configuring the Web Navigator functions in the manual "PCS 7 - OS Web Option" under C:\Program Files\SIEMENS\Documentation\English.

Templates

Templates from the SIRIUS Soft Starter 3RW44 PCS 7 Library V8.0 +SP1 are templates that you can adopt to implement control functions in your project. Templates thus simplify the engineering for configuring the blocks, and they support their problem-free functioning.

You can also modify the templates or create completely new ones. The interconnections that must then be created manually can be found in the available templates.

Template for the control function Direct starter

Control function	Template	APL blocks	Soft starter blocks
Direct starter	Direct_Soft-Starter (Page 30)	MotRevL EventTs Or04	SSOprtn ¹ SSMeas SSStat SSChn

¹ Block icon available

For more information about the APL blocks, refer to the Function Manual "PCS7 Process Control System, PCS7 Advanced Process Library V8.0" on the Internet (<http://support.automation.siemens.com/WW/view/de/57265842>).

3.1 Using templates

The template for the control function Direct starter is located in the SIRIUS 3RW44 Soft Starter Library under:
SS_PCS7_LibV80_SP1 > Blocks+Templates\Templates >

Select the template *Direct Soft Starter* and drag-and-drop onto the CFC. Alternatively, you can also copy the template direct to the chart container or to the required location in the technological hierarchy view.

To edit the template, right-click on the template and select "Open" from the shortcut menu. The template is opened as a CFC.

Manual interconnections

In the CFC, connect "Input Word Address of Soft Starter Module" in the right-hand sheet bar with the logical address of the basic unit.

There are two ways of doing this:

- Via the already created symbolic name
- Via direct input of the calculated address

Repeat the procedure on CFC sheet 2. To do so, change the view in CFC with the selection list Sheet / Overview in the symbol bar.

Automatic interconnections

If the option "Generate Block Driver" is activated in the "Compile Program" dialog, interconnections that are not yet available but that are necessary will be automatically executed.

In addition to the interconnections, the driver generator automatically generates the following charts and connects them with the template:

- SUBNET DP
- OB_DIAG1
- RACK
- SSDiag
- MOD_SWT

The textual interconnections supplied in the template can be deleted individually or entirely. The driver generator replaces the textual interconnections automatically.

You control deletion of the textual interconnections using the menu command Options → Delete Textual Interconnections.

Note

To view generated interconnections after executing the driver generator, close the CFC and open it again.

Remove unused blocks

The following blocks (CFC Sheet 2) are not absolutely necessary for operating 3RW44 soft starters:

- SSMeas
- SSSStat

They provide further functions such as measured values (e.g. temperature) and statistical data.

These blocks can be deleted (right mouse key → delete or select block → Del). After renewed compiling and downloading to the PLC, these functionalities are no longer available for the user program.

3.2 Direct soft starter template

This template supports the control function **Direct starter**.

It contains one instance each of the following blocks:

- MotRevL
- EventTs
- Or04
- And04
- SSOprtn
- SSMeas
- SSStat
- SSChn

Interconnections

1. Instantiate the template from the 3RW44 Library.
2. Interconnect the following parameters with the logical input address of the soft starter:
 - PZDIn1 (SSChn)
 - PZDIn01 (SSOprtn)
 - PZDIn01 (SSMeas)
 - PZDIn01 (SSStat)

Starting the motor in the opposite direction

In the template *Direct Soft-Starter*, the button for starting the motor in the opposite direction is deactivated in the faceplate MotRevL. Bit6 in the parameter `OS_Perm` was set to "0" for this purpose.

Note

Starting the motor in the opposite direction is only possible if slow speed is active.

Slow speed is activated using the "Slow speed" button in the SSOprtn faceplate. In this faceplate, you can start the motor in the opposite direction using the "Slow speed Reverse" button.

The "Slow speed Reverse" command of the faceplate SSOprtn always takes priority over the command of the faceplate MotRevL.

See also

SSOprtn - Standard (Page 48)

Slow speed (Page 96)

Emergency start (Page 95)

Faceplate - Views

4.1 Batch view @PG_APL_Batch.pdl

The "Batch" view is available for all signal blocks.

Batch view

Batch allocation	
Enabled	✓
Allocated	✓
Batch name	
Soft starters	
Batch ID	35
Batch step	0

- ① Enable status of the batch (BatchEn)
- ② Occupied status of batch (Occupied)
- ③ Name of the batch (BatchName)
- ④ Identification number of the batch (BatchID)
- ⑤ Number of steps (StepNo)

Figure 4-1 Batch view

4.2 Trend view @PG_APL_Trend.pdl

The "Trend" view is available in blocks in which curves are generated online from measured values, for example, the motor current.

Trend view

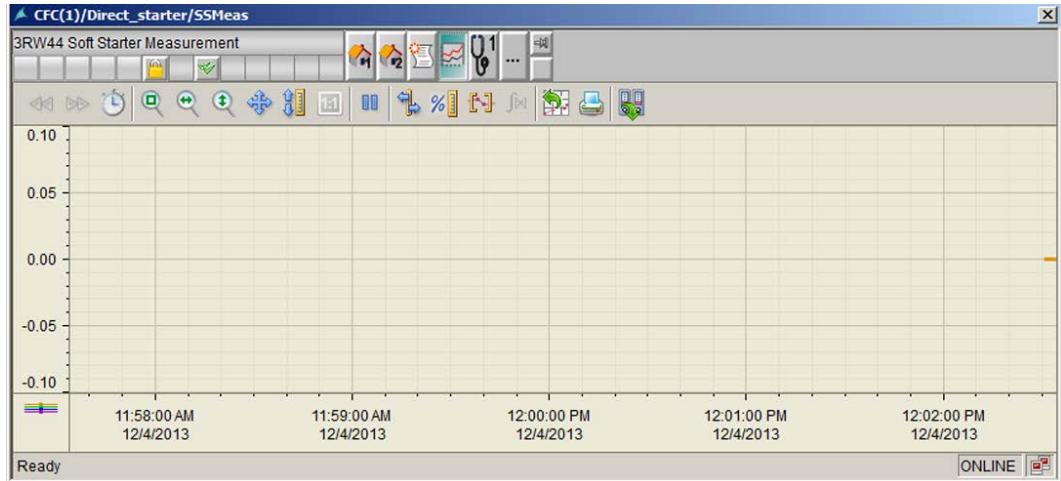


Figure 4-2 Trend view, SSMeas example


Configuring the view

The block parameters that are evaluated for the trend are configured in the block icon of the block.

To configure the view, use the properties TrendPictureName, TrendConfiguration and Trend color. Up to 10 parameters can be used for the view

1. The file name TrendPictureName is identical for all the blocks in the library: "@PCS7_APL_Trend.PDL".
2. TrendConfiguration is entered in the following format:
<ParameterName>;<TrendControl>;<Reserved>;<Name of the Curve>
For example, MotCurr#Value;_TrendCtrl1_;Reserved;MotorCurrent
3. Trend color determines the color of the curve.

Object properties TrendConfiguration

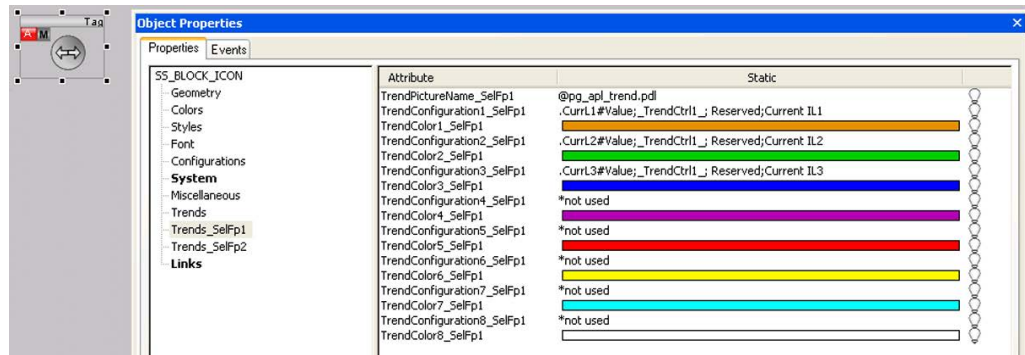

- Trends Trend curves configuration for the SSOprtn block
- Trends_SelfP1 Trend curves configuration for the block connected via the parameter Trends_SelfP1 (e.g. SSMeas).
- Trends_SelfP2 Trend curves configuration for the block connected via the parameter Trends_SelfP2.

Figure 4-3 Object properties TrendConfiguration

4.3 Alarm view (@PG_APL_Message.pdl)

The "Alarm" view is available for all signal blocks.

Alarm view

	Date	Time	Class	Status	Event	Batch name	Source
1	04/12/13	20:04:36.553	Alarm	<input checked="" type="checkbox"/> C	Temperature Sensor Overload		CFC(1)/Direct_starter/SSMeas
2							
3							
4							
5							
6							
7							
8							
9							
10							
11							
12							
13							
14							
15							

Ready Pending: 2 To acknowledge: 0 Hidden 0 List: 1

Figure 4-4 Alarm view, SSMeas example

4.4 Preview view

The preview shows the enabled operations for each signal block.



The operator may execute the command.




The operator may execute the command. The command is currently blocked by a process in the block.




The operator is not permitted to execute the command.


Preview – SSOprtn

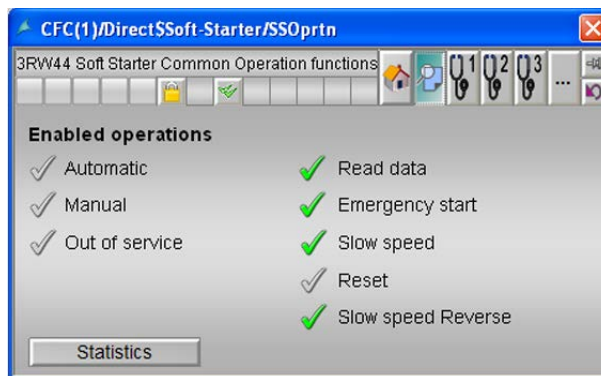

Preview – SSMeas

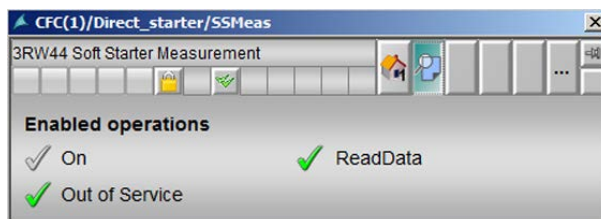


Preview – SSStat

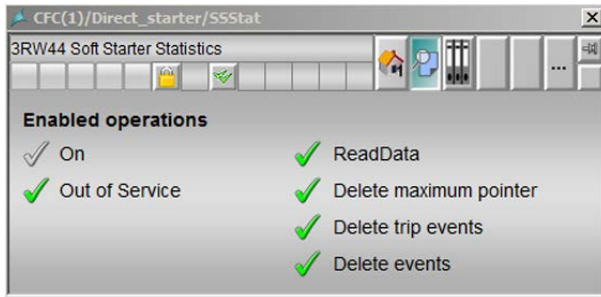

4.5 SSMeas - Views


4.5.1 SSMeas - Standard

Standard 1 View

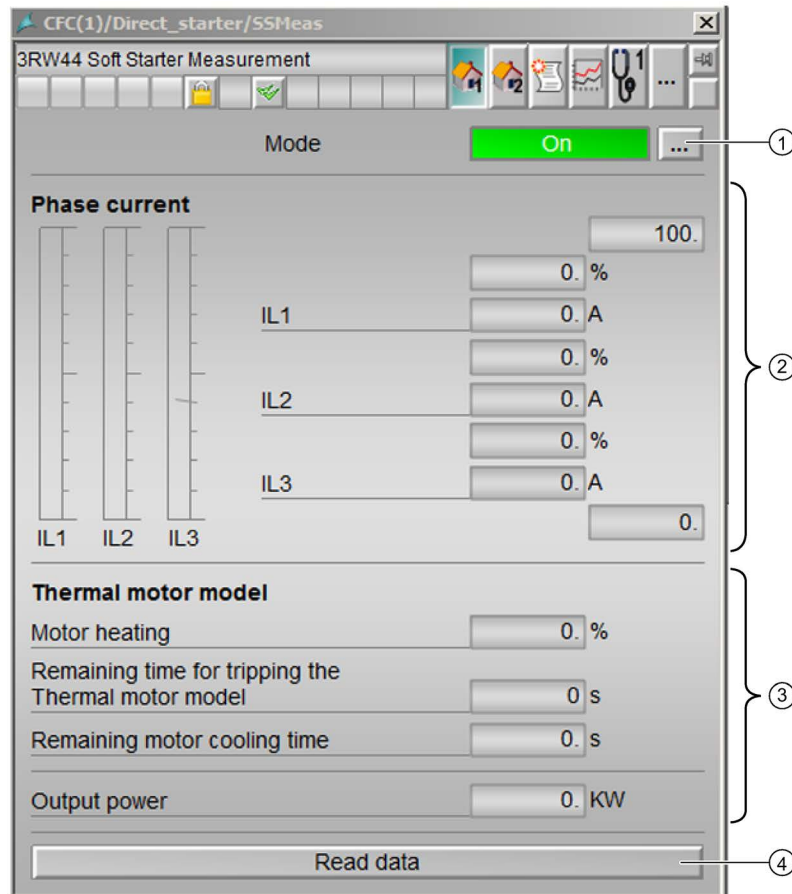

- ① Display of the operating mode
- ② **Phase current**
Current values as bars (Curr_OpScale high value, low value)
Phase current in % and amperes (CurrL1, CurrL2, CurrL3, CurrL1E, CurrL2E, CurrL3E)
- ③ **Thermal motor model**
Motor heating in % (MotHtBld)
Remaining time for tripping the thermal motor model (TrpTm)
Remaining motor cooling time (MotcolTm)
Output power (OutPwr)
- ④ Button for updating the data (RdDataOp).
Button is deactivated if RackFAct = 1.

Standard 2 View

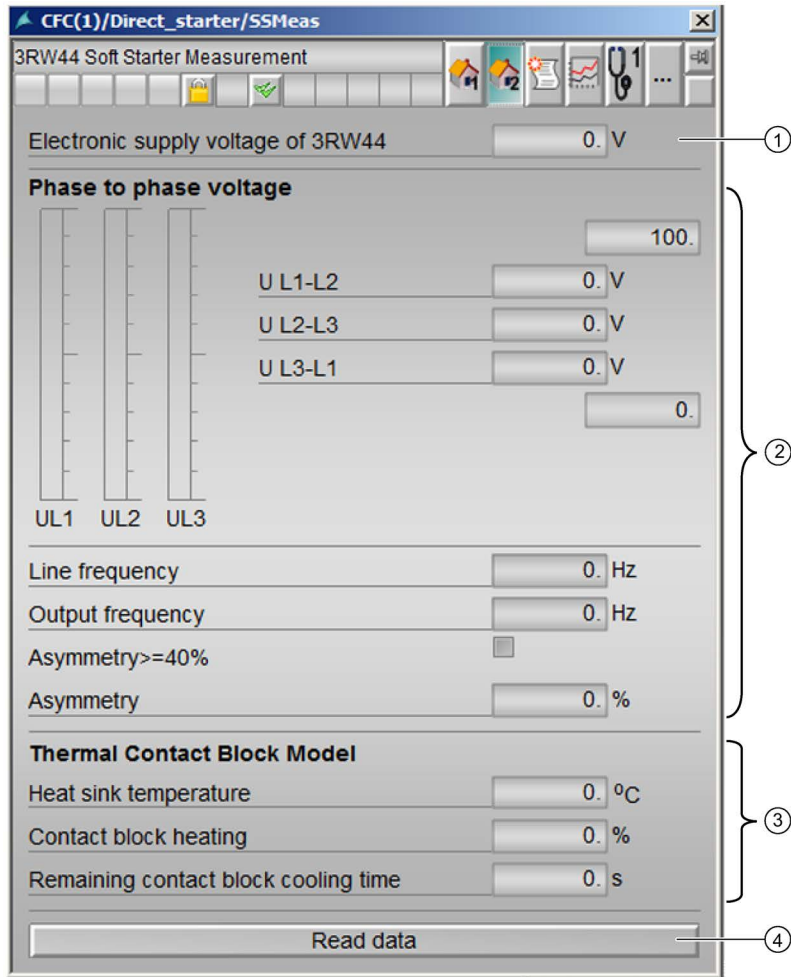


- ① Supply voltage of the soft starter (SupVol)
- ② **Phase-to-phase voltage**
 Voltage values as bars (Volt_OpScale high value, low value)
 Voltage values in volts (VolL1L2, VolL2L3, VolL3L1)
 Line frequency (LineFreq)
 Activate / deactivate Asymmetry >= 40% (AsymtryEn)
 Asymmetry (Asymtry)
- ③ **Thermal contact block model**
 Heat sink temperature (HtSnkTmp)
 Contact block heating (CntBlkHeat)
 Remaining contact block cooling time (CntBlkColTm)
- ④ Button for updating the data (RdDataOp).
 Button is deactivated if RackFAct = 1.

4.5.2 SSMeas - Diagnostics

Protection diagnostics view (DiagMeas)


All the available diagnostics messages are displayed in this view.

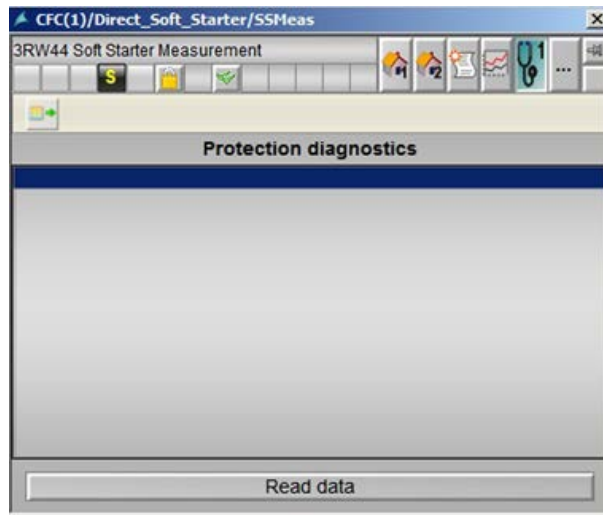

4.6 SSSStat - Views


4.6.1 SSSStat - Standard

Standard 1 View

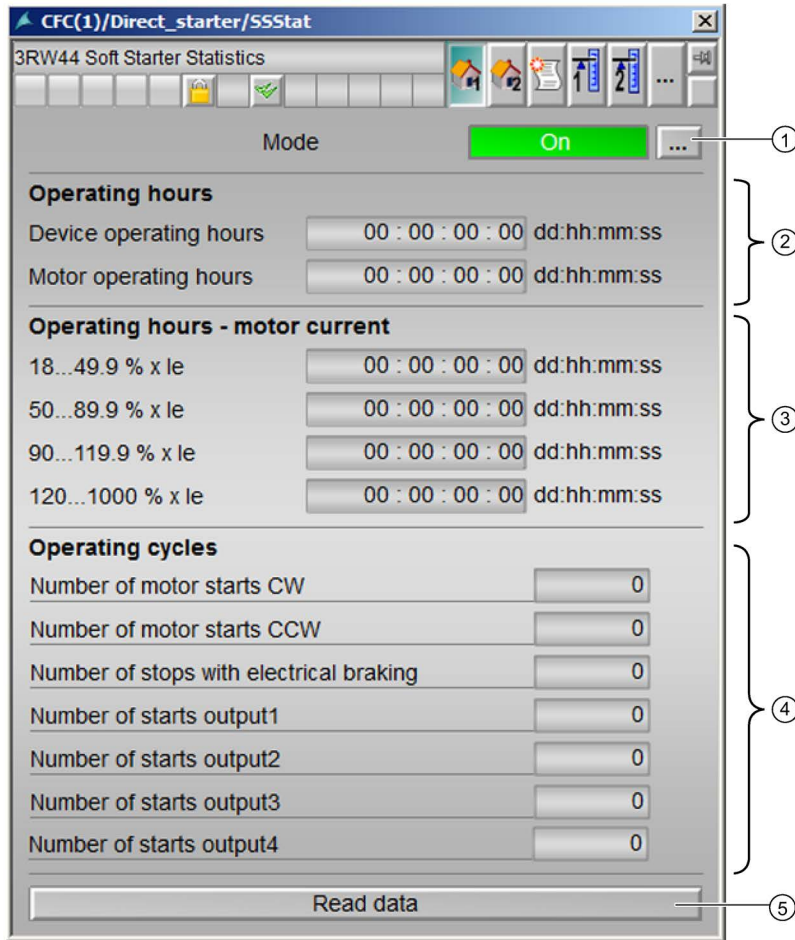

- ① Operating mode
- ② **Operating hours**
Device (D_OpH), motor (M_OpH)
- ③ **Operating hours**
Motor current (OphI18, OphI50, OphI90, OphI120)
- ④ **Operating cycles**
Number of motor starts CW / CCW (N_StCw, N_StCcw)
Number of stops with electrical braking (N_BrkStp)
Number of starts output 1–4 (Output1, Output2, Output3, Output4)
- ⑤ Button for updating the data (RdDataOp).
Button is deactivated if `RackFAct = 1`.

Standard 2 View

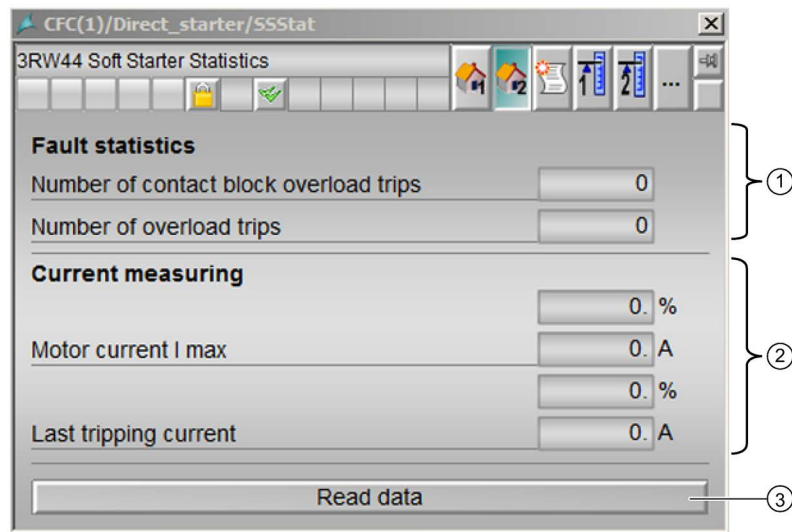


- ① **Fault statistics**
 Number of contact block overload trips (N_CntTrp)
 Number of overload trips (N_OvITrp)
- ② **Current measuring**
 Maximum motor current I_{max} in % and amperes (ImMax, ImMaxE)
 Last tripping current in % and amperes (Trg_I, Trg_IE)
- ③ Button for updating the data (RdDataOp).
 Button is deactivated if RackFact = 1.

4.6.2 SStat - Maximum pointer


Maximum pointer 1

This Maximum pointer 1 view displays statistical data of the SStat block.

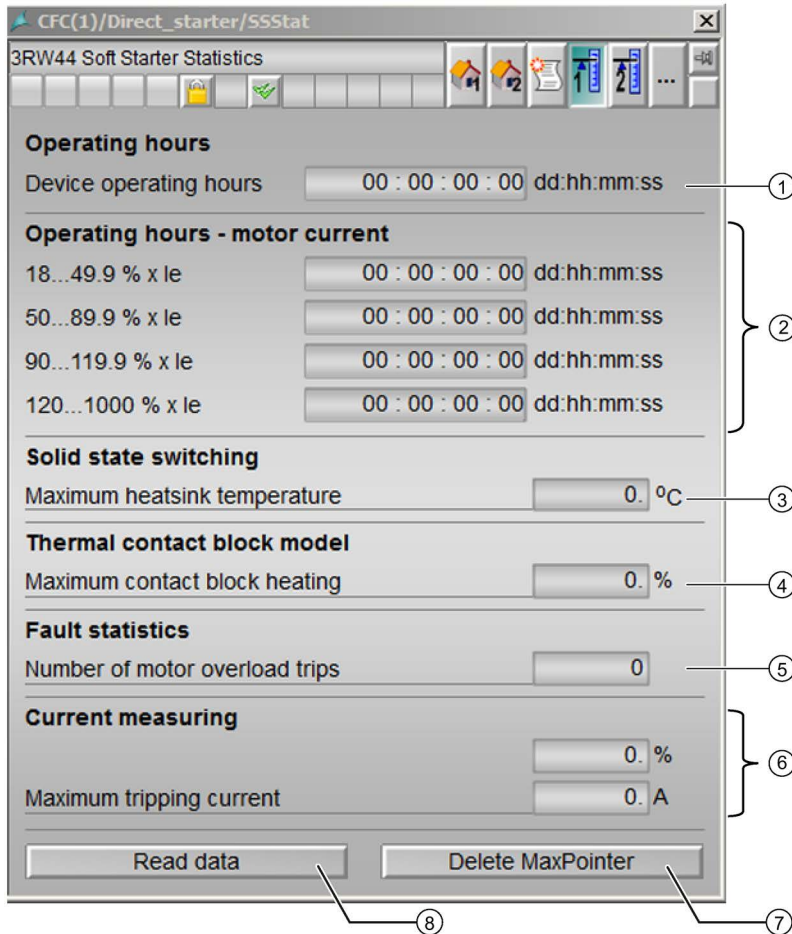

- ① **Operating hours** Device (D_OpH)
- ② **Operating hours** Motor current (OhI18Mp, OhI50Mp, OhI90Mp, OhI120Mp)
- ③ **Solid-state switching**
Maximum heat sink temperature (HtSkTmpMax)
- ④ **Thermal contact block model**
Maximum contact block heating (CntBlkMp)
- ⑤ **Error statistics** Number of motor overload trips (N_OvITrpMp)
- ⑥ **Current measuring**
Maximum tripping current in % and amperes (I1TrpMx, I1TrpMxE)
- ⑦ Button for deleting the maximum pointer, authorization level 5 and higher
- ⑧ Button for updating the data, button is deactivated, if `RackFAct = 1.`

Maximum pointer 2

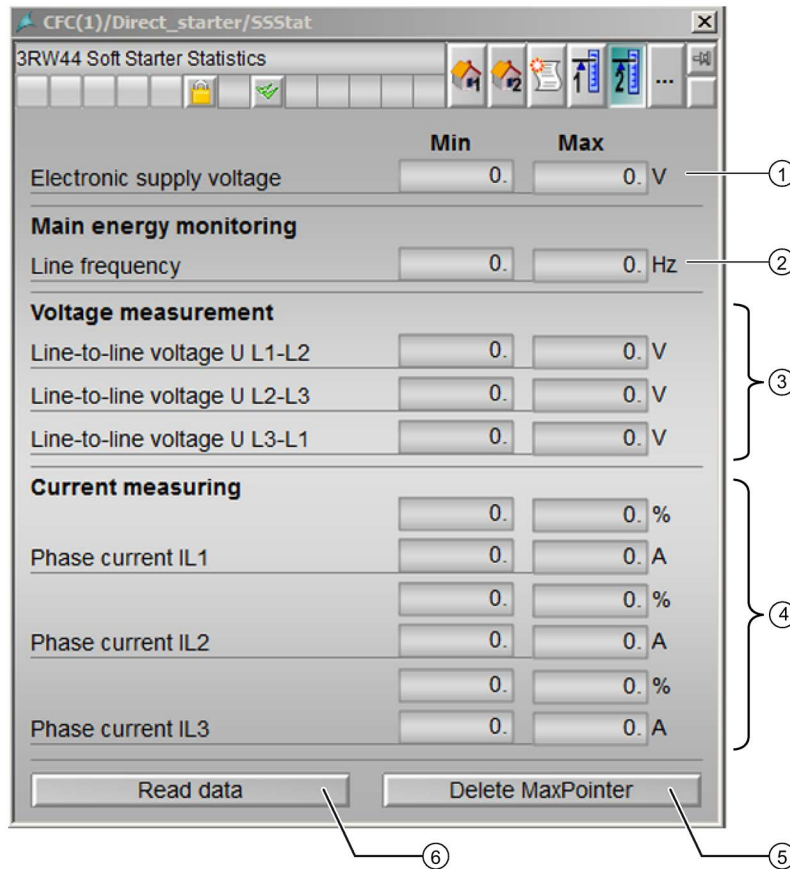


- ① Electronics supply voltage (VoltMin, VoltMax)
- ② **Main energy monitoring**
Line frequency (LFreqMin, LFreqMax)
- ③ **Voltage measurement**
Line-to-line voltage in volts (UI1I2Min, UI1I2Max, UI2I3Min, UI2I3Max, UI3I1Min, UI3I1Max)
- ④ **Current measuring**
Phase current IL1, IL2, IL3 in amperes and %
(CurrL1MinE, CurrL1MaxE, CurrL1Min, CurrL1Max, CurrL2MinE, CurrL2MaxE, CurrL2Min, CurrL2Max, CurrL3MinE, CurrL3MaxE, CurrL3Min, CurrL3Max)
- ⑤ Button for deleting the maximum pointer, only in REMOTE mode, authorization level 5 and higher.
- ⑥ Button for updating the data (`RdDataOp`), authorization level 5 and higher.
Button is deactivated if `RackFAct = 1`.

4.6.3 SStat - Logbook


Logbook view

The logbook contains device faults, trip faults and events with the corresponding fault numbers.

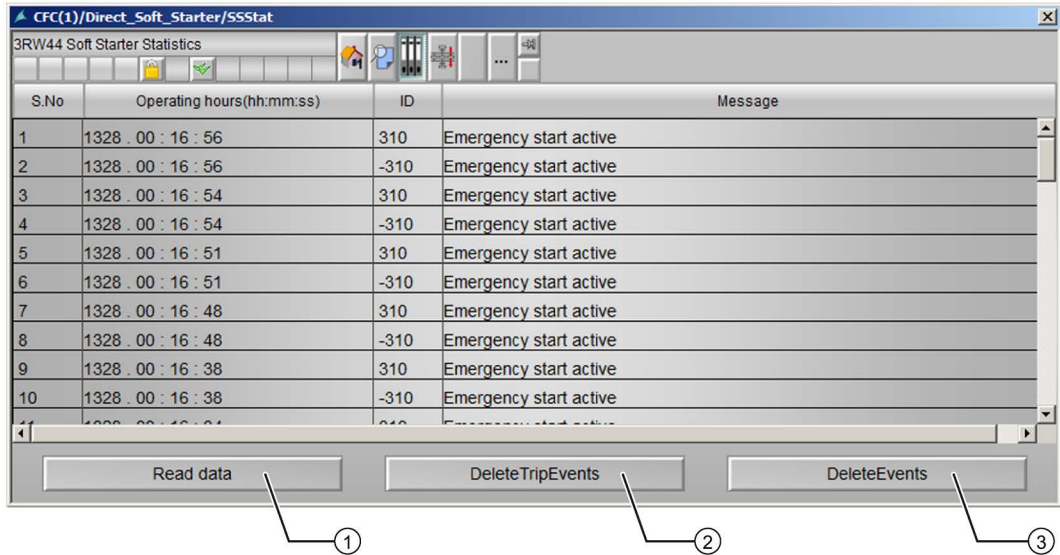

- ① Refresh logbook
- ② Delete logbook trips
- ③ Delete logbook events

Figure 4-5 Logbook view for PROFIBUS

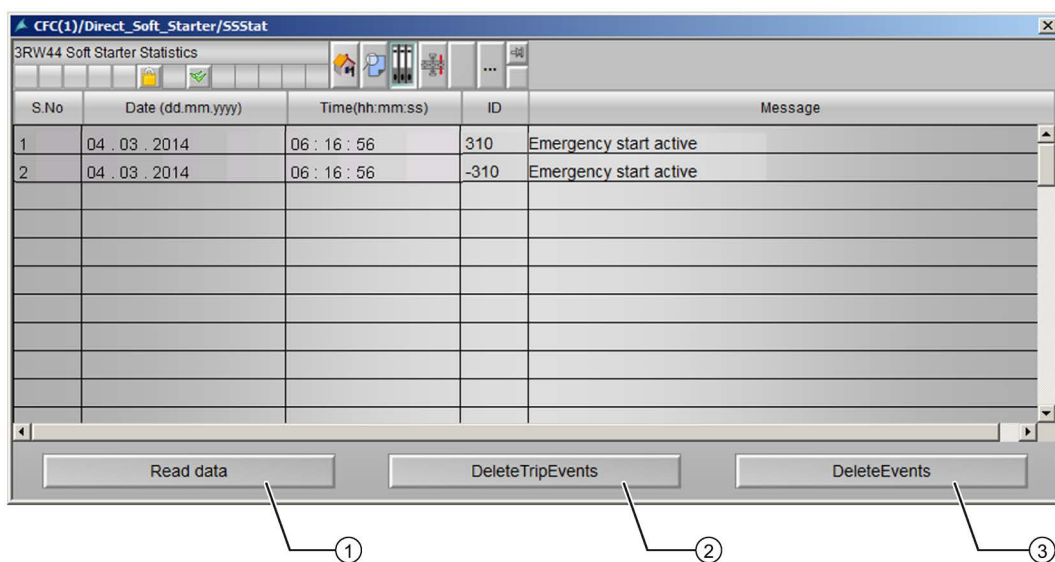


- ① Refresh logbook
- ② Delete logbook trips
- ③ Delete logbook events

Figure 4-6 Logbook view for PROFINET

4.7 SSOprtn - Views





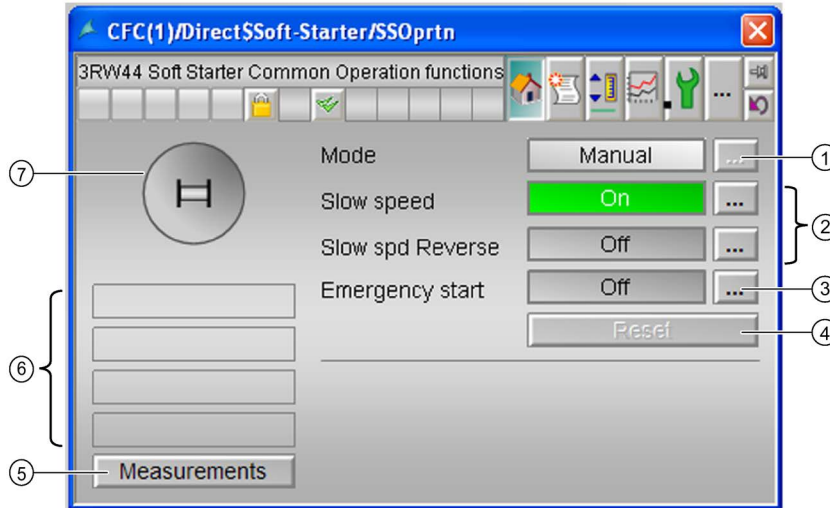

4.7.1 SSOprtn - Standard

Standard view




- ① Button for changing the operating mode (AutoModOp, ManModOp, OosOp) opens the expanded command area; authorization level 5 and higher, authorization level 6 and higher for OosOp.
- ② Button for activating Slow speed (Page 96) (SISpdMan); authorization level 5 and higher. Only this faceplate shows whether or not slow speed is active!
To start the motor with slow speed in the forward direction, you use the "Forward" button in the faceplate MotRevL (see the chapter Templates (Page 30)).
The "Slow speed Reverse" button for starting the motor with slow speed in the reverse direction. This button is only active if slow speed has been activated previously.
- ③ Emergency start (Page 95) button; opens the expanded command area; authorization level 6 and higher.
- ④ Button for resetting the trip (TrpRstOp) opens the expanded command area; authorization level 5 and higher.
- ⑤ Button for switching to the Standard view of a faceplate; visible if the `selfp1` input parameter of the SSOprtn block is configured.
- ⑥ Status display of the block, e.g. monitoring, maintenance, group errors.
- ⑦ **Motor status** (see table)

Icons for motor status ⑦

Status	Symbol	Status	Symbol
Motor ON		Motor stops	
Motor running forward		Motor stationary	
Motor running in reverse		Group error	




4.7.2 SSOprtn - Maintenance

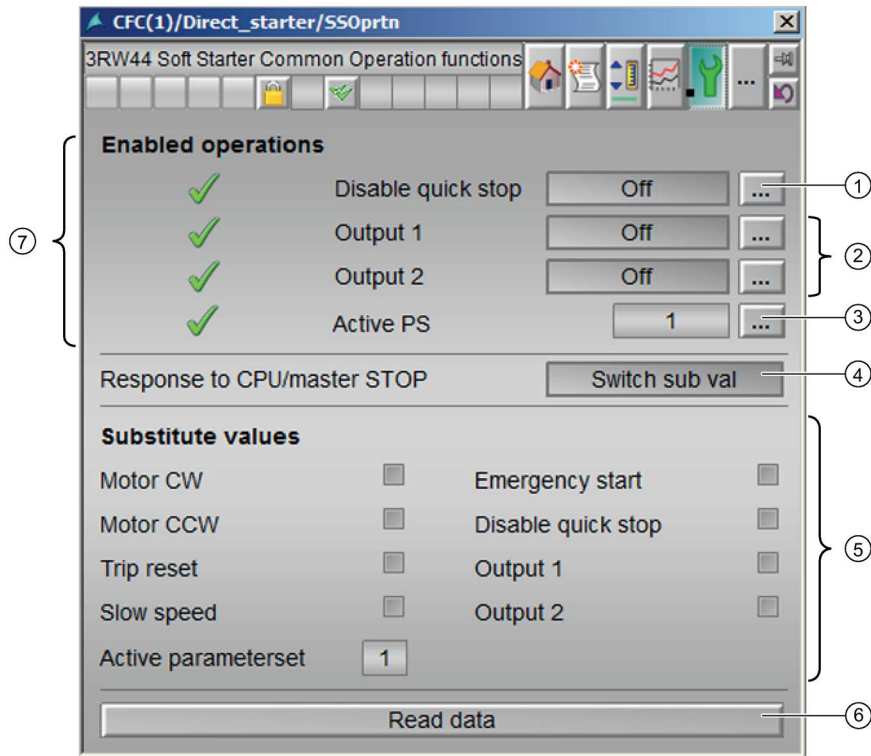Maintenance view




- ① Button for activating Disable quick stop (DsQkSpMan), opens the expanded command area; authorization level 6 and higher.
- ② Output 1, output 2
- ③ Active parameter set
- ④ Response to CPU / master STOP (Feature Bit 0).
- ⑤ Substitute values that can be activated
- ⑥ Button for updating the data (RdDataOp).
Button is deactivated if $RackFAct = 1$.

⑦ Operator control enable

-  • The operator may execute the command.
 -  • The operator cannot execute the command because the command is currently blocked by a process.
 -  • The operator is not permitted to execute the command (OS_Perm).
- The displays are dependent on the bit values in the OS_PermOut and OS_PermLog parameters.

4.7.3 SSOprtn - Limits

Limits view

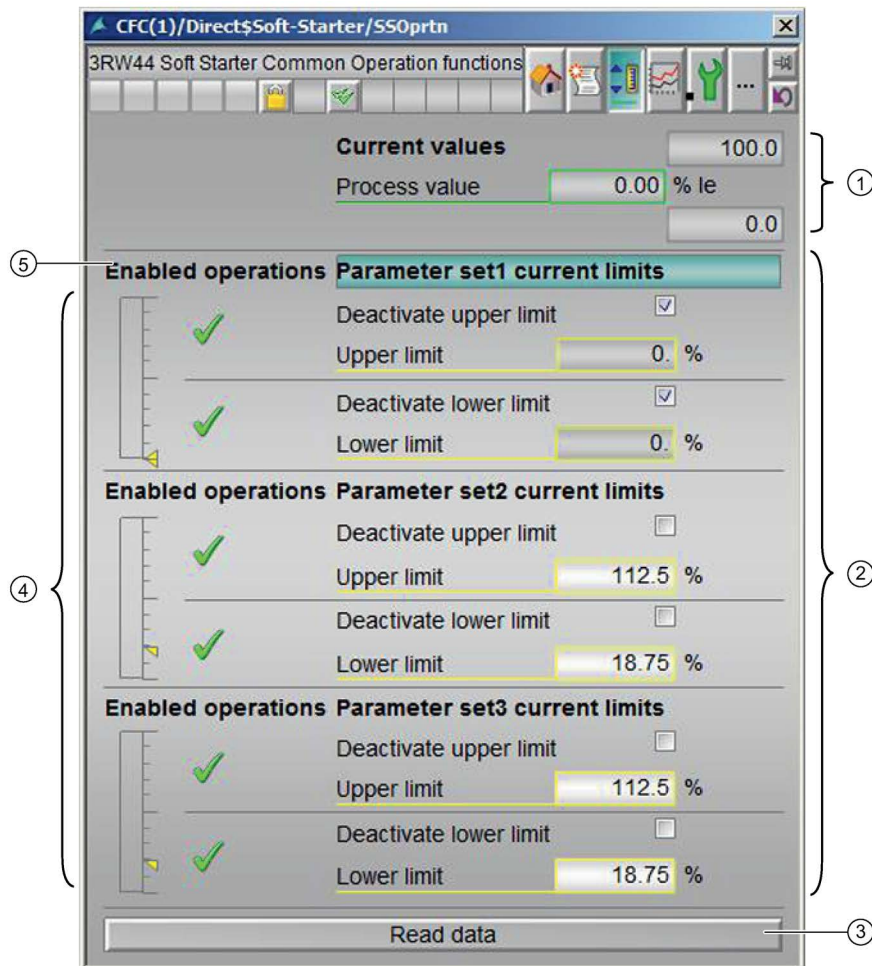

- ① **Current values**
 Display of the drawn motor current under the selected parameter set (shown in blue) and its limit values (MotCurr).
 Upper and lower limits for motor current (PS1_OpScale, PS2_OpScale, PS3_OpScale).
 The values show the display range of the process value. The scale range is defined in the Engineering Station.

- ② **Parameter set 1–3 - Current limits**
 - Deactivate upper / lower limit
 - Upper limit (PS1CurHi, PS2CurHi, PS3CurHi)
 - Lower limit (PS1CurLo, PS2CurLo, PS3CurLo)

If the background color of the field is white, you can change the value in the expanded operating area in 3 ways (authorization level 6 and higher):

- Entry in the input box
- Setting using the slider
- Entry by direct operation



- ③ Button for updating the data (RdDataOp); opens the expanded command range; authorization level 5 and higher.

Button is deactivated if $RackFAct = 1$.

- ④ **Bar graph for current - Parameter set 1–3**

The visible range in the bar graph depends on the configuration in the Engineering Station.

The colored triangles show the specified limits:

- Red: Alarm
- Yellow: Warning

- ⑤ **Operator control enable**



- The operator may execute the command.



- The operator cannot execute the command because the command is currently blocked by a process.



- The operator is not permitted to execute the command (OS_Perm).


The displays are dependent on the bit values in the OS_PermOut and OS_PermLog parameters.

4.7.4 SSOprtn - Diagnostics


For the SSOprtn block there are diagnostics views for station, control, device and parameters.

All the available diagnostics messages are displayed in the Diagnostics view.


Station diagnostics (DiagStn)

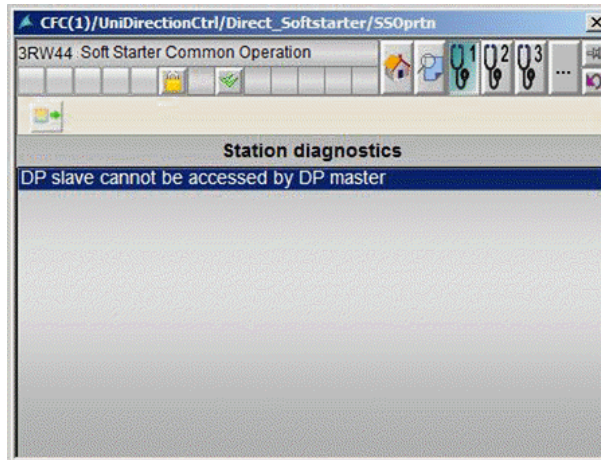


Control diagnostics (DiagCom)

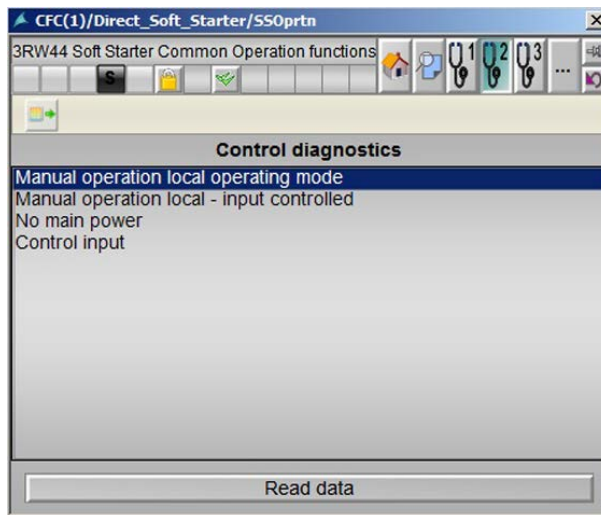

Device diagnostics (DiagPar)

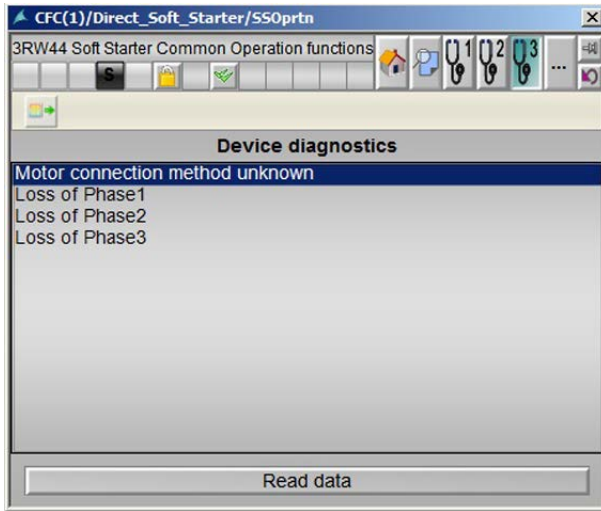


Parameter diagnostics (DiagPar)

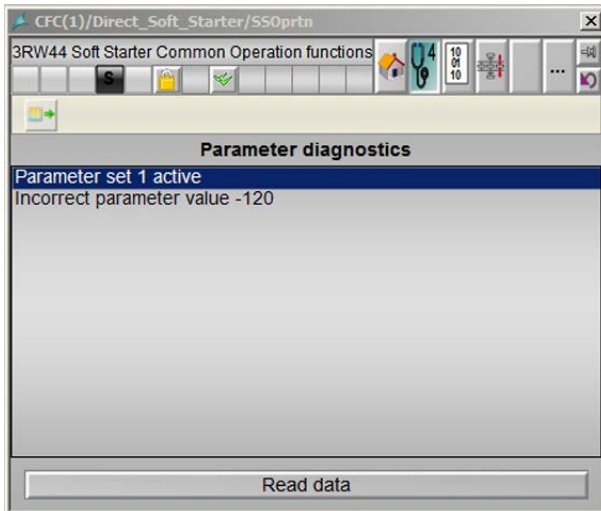

4.7.5 SSOprtn - Process image

The Process image view displays the values for the process image inputs (PII) and the process image outputs (PIQ).

Process image – Soft starter

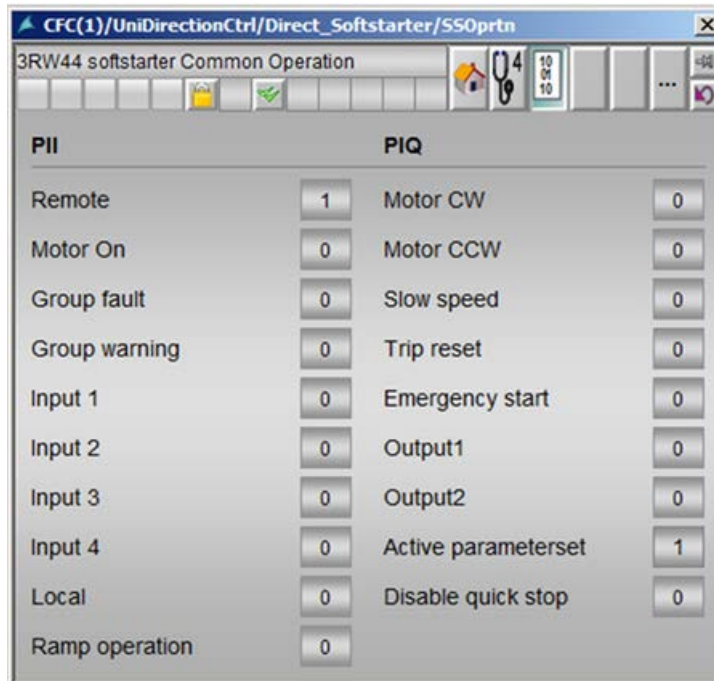

Description of the blocks

5.1 Functions for all blocks

5.1.1 Calling OBs

The "Generate Module Driver" function automatically inserts the soft starter blocks into the following organization blocks within the run sequence of the CFC:

Table 5- 1 Organization blocks

OB	Description	SSDiag	SSMeas	SSStat	SSOpn	SSChn
OB1	Cyclic program	X	X	X	X	X
OB30...OB38 ¹	Cyclic alarms	X	X	X	X	X
OB82	Diagnostics alarm	X	–	–	–	–
OB83	Insert/remove interrupt	X	–	–	–	–
OB85	Program execution error	X	–	–	–	–
OB86	Rack fault	X	–	–	–	–
OB100	Restart (warm restart)	X	X	X	X	X

¹ Insert the block into the OB32 , if read/write access is slow.

"X" = OB calls the block, "–" = OB calls does not call the block.

Reference

You can obtain further information on the organization blocks in the "Process Control System PCS 7 System Functions" manual and in the system and standard functions reference manual for S7-300/400 on the Internet

(<http://support.automation.siemens.com/WW/view/en/44240604>).

5.1.2 Called blocks

The soft starter blocks call the following blocks:

Table 5- 2 Called blocks

Block		Description	SSDiag	SSMeas	SSStat	SSOprtn	SSChn
SFB35	ALARM_8P	Generates block-specific messages with values for eight signals	X	X	X	X	
SFB52	RDREC	Read data set	X	X	X	X	
SFB53	WRREC	Writes a data record	–	–	X	X	
SFB54	RALRM	Receives alarm	X	–	–	X	
SFC6	RD_SINFO	Reading of OB start information	X	X	X	X	
SFC13	DPNRM_DG	Reads the diagnostic data of the DP slave	X	–	–	–	
SFC51	RDSYSST	Reads the system status list or the sublist	X	–	–	–	
SFC64	TIME_TCK	Reads the system time	X	X	X	X	
FC369			X	X	X	X	

"X" = The block calls this block, "–" = The block does not call this block.

5.1.3 Worst signal status

Worst Signal Status `ST_Worst` is formed from the following parameters:

Block	Parameter
SSMeas, SSStat, SSOprtn	ModFact.ST RackFact.ST GrpErr.ST RdErr.ST
SSDiag	ModFact.ST RackFact.ST GrpErr.ST RdErr.ST Rack1Err.ST Rack2Err.ST

5.1.4 Quality code

The status and quality of a rack is checked by means of the quality code.

Table 5-3 Quality code

Quality code	Priority ¹	Occurs when...	Meaning	SSDiag	SSMeas	SSStat	SSOprtn
16#80	6	No error	Good	X	X	X	X
16#60	–	SimOn	Simulated value	–	–	–	–
16#00	0	<ul style="list-style-type: none"> • RackFAct • ModFAct • BusFlt 	Bad, device related, value not valid	X			
	1				X	X	X
16#28	1	<ul style="list-style-type: none"> • Subnet error Rack1Err or Rack2Err • OB not loaded. 	Bad, device related	X	–	–	–
16#28	2	From preceding blocks	Bad, process-specific	–	X	X	X
16#68	3	Group warning	Bad	X			
		From preceding blocks	Uncertain, device related		X	X	X
16#78	4	CST	Uncertain, process-specific	X	–	–	–
16#FF	–	Default setting	–	–	X	X	X








¹ 0 = low; > 0 = high

² X = The quality code occurs in this block, – = The quality code does not occur in this block.

Icons

The icons for the quality code are displayed in the block icon and in the overview window of the faceplates.

Table 5- 4 Icons for quality code display

Quality code	Symbol	Meaning
16#80		Good
16#60		Local function check / simulation
16#00 ¹		Bad, device related, value not valid
16#28 ¹		Bad, process-specific
16#68		Uncertain, device related
16#78		Uncertain, process-specific
16#A4		Maintenance demand

¹ Active Quality Codes for the Trip, Intlock, Permit, and Protect parameters in the interlock status.

Reference

You can find more information on quality code display in the Programming Manual PCS 7 Libraries APL Styleguide on the Internet (<http://support.automation.siemens.com/WW/view/en/59062870>).

5.1.5 Error numbers

Table 5- 5 Error numbers per block

Error number	Error type	Description	SSDiag	SSMeas	SSStat	SSOprtn	SSChn
-1	–	Predefined value when inserting the block; the block is not processed.	X	X	X	X	X
0	–	No error	X	X	X	X	X
1	System error	Rack failure	X	X	X	X	X
3	System error	The module does not respond.	X	X	X	X	–
4	System error	Subnet 1 or subnet 2 error	X	–	–	–	–

"X" = Error occurs in this block, "–" = Error does not occur in this block.

See also

Failure of the DP master/DP slave (Page 66)
 Fault handling (Page 102)

5.1.6 Parameterizable functions via the Feature connection

The modules of the library have an input named `Feature`. You can influence various responses of the block via this input.

The Feature Bits are assigned in the following order:

Table 5- 6 Meaning of the Feature.Bits

Feature.Bit	Meaning ¹	SSMeas	SSStat	SSOprtn	SSChn
Feature.Bit0	Set startup characteristics 0 = Reset outputs to substitute value (OB100) 1 = Outputs are assigned the last valid value	–	X	X	–
Feature.Bit1	1 = Input "OosLi" can be used to switch to the "Out of Service" mode.	X	X	X	–
Feature.Bit2	1 = Reset commands for switching the operating mode	–	–	X	–
Feature.Bit4	Set switch mode or pushbutton mode 0 = Pushbutton mode 1 = Switch mode	–	–	X	–
Feature.Bit10	Exit local mode 1 = When Manual LOCAL mode is exited, switch to the last setting of AUTO / MANUAL mode.	–	–	X	–
Feature.Bit22	1 = Update acknowledgment and error status of the message call	X	X	X	–
Feature.Bit23	0 = Messages are forwarded via an EventTS block to the APL motor block (e.g. MotL) and displayed there; 1 = Messages are displayed on the SSOprtn block	–	–	X	–
Feature.Bit24	1 = "Local operator authorization" function is activated	X	X	X	–
Feature.Bit25	1 = Suppression of all messages is activated if <code>MsgLock = 1</code>	X	X	X	–
Feature.Bit28	1 = Motor starter is operated without the "Slow speed" command	–	–	–	X
Feature.Bit29	1 = DataXchg is updated with the status information (Motor ready, Motor on, Group fault and Group warning)	–	–	–	X
Feature.Bit30	1 = De-energized (lowest) value is output in the case of block-external simulation (standard setting = 1)	–	–	–	X

¹ The standard setting is 0 if no other value is specified.

For more information about the parameterizable functions, refer to the function manual "Process Control System PCS 7. PCS 7 Advanced Process Library V8.0" in the Internet (<http://support.automation.siemens.com/WW/view/de/57265842>).

5.2 SSDiag diagnostics block

5.2.1 SSDiag description

Purpose of the block

The SSDiag block handles the diagnostics of the 3RW44 direct-on-line soft starters.

- It evaluates the acyclic events:
 - Start
 - DP station failure
 - Module fault
- It signals module failure on the DP master system (`RackF`) and behind the Y-link (`ModF`).
- It generates the associated Quality Codes.
- It reads the messages of the station diagnostics and channel diagnostics.
- It transmits the status information to the signal processing block via the `RackFAct` and `ModFAct` parameter outputs.

Views

The SSDiag block does not support views.

5.2.2 Message characteristics

SSDiag signals the following errors:

- DP station fault (`Rack1Err`, `Rack2Err`)
- Rack failure (`RackFAct`)
- Module fault (`ModFAct`)
- Connection fault (`BusFlt`)

An error generates a group error in output parameter `GrpErr`.

The `Subn1_Id` and `Subn2_Id` parameters of the SUBNET function block (FB106) are combined with the `Subn1Id` and `Subn2Id` parameters of the SSDiag block. These parameters forward the error information of the primary and redundant master system. This information is provided to output parameters `Rack1Err` and `Rack2Err` of the SSDiag block.

Message block MsgEvid1

Table 5-7 Output SSdiag messages

Message block	Message No.	Block parameters	Message text	Message class *
MsgEvid1	1	Rack1Err	\$\$BlockComment\$\$ Subnet1@1%d@: Fault	S
	2	Rack2Err	\$\$BlockComment\$\$ Subnet2@2%d@: Fault	S
	3	RackFAct	\$\$BlockComment\$\$ DP Slave @3%d@: Failure	S
	4	ModFAct	\$\$BlockComment\$\$ DP Slave Rack@3%d@/Module@4%d@: Module fault	S
	5	BusFlt	\$\$BlockComment\$\$ DP Slave Rack@3%d@: cannot be reached	S
	6	ExtMsg1 **	\$\$BlockComment\$\$ External message 1	S
	7	ExtMsg2 **	\$\$BlockComment\$\$ External message 2	S
	8	ExtMsg3 **	\$\$BlockComment\$\$ External message 3	S

* S = AS, OS process control fault; A = Alarm

** User-definable message

Auxiliary values

Table 5-8 Structure of the auxiliary values ALARM_8P

Message No.	Auxiliary value	Block parameters	Meaning
1	1	Subn1Id	ID of the primary DP master system
2	2	Subn2Id	ID of the redundant DP master system
3	3	RackNo	Field device address
4	4	SlotNo	Slot number
5	5	ExtVal05	Auxiliary value 5, user-definable
6	6	ExtVal06	Auxiliary value 6, user-definable
7	7	ExtVal07	Auxiliary value 7, user-definable
8	8	ExtVal08	Auxiliary value 8, user-definable
9	9	ExtVal09	Auxiliary value 9, user-definable
10	10	ExtVal10	Auxiliary value 10, user-definable

The `MsgStat1`, `MsgAckn1`, and `MsgErr1` parameters transfer the following information:

- Message status
- Message error
- Message acknowledgment status

5.2.3 Driver generator

The "Generate Module Driver" function automatically inserts the SSDiag block into the following organization blocks within the run sequence:

- OB1 (cyclic program)
- OB82 (diagnostics alarm)
- OB83 (pull/plug alarm)
- OB85 (program execution error)
- OB86 (rack failure)
- OB100 (cold restart)

The block is inserted behind the OB_DIAG1 block in the CFC chart.

The `RackNo`, `SlotNo`, `SubSlotNo`, `SubAddr`, `DAddr`, `LAddr`, `Subn1Id`, `Subn2Id` and `SubNTyp` inputs are configured using the information from HW Config.

5.2.4 Start-up characteristics

In OB100, the identifier for "Start up" is entered in output `OMODE` (`OMODE = 16#xx01xxxx`).

The messages are suppressed in OB100 for the number of cycles that have been programmed for runup in parameter `RunUpCyc`.

Acknowledge the errors `GrpErr`, `RackFact`, `ModFact`, `Rack1Err`, and `Rack2Err`.

5.2.5 Module error

Following a restart and when `AccId = TRUE`, a check of the module addressed with `LAddr` is carried out. The SZL ID xC91 is read for this purpose. If the module addressed with `LAddr` is missing, the `ModFact` output is set and the identifier for "higher-level fault" is entered for the `OMODE` output (`OMODE = 16#40xxxxxx`).

The module fault is detected by the event number 16#61 for PROFIBUS for event class 16#39.

The module fault is detected while the soft starter is configured behind a Y-link.

The logical address of the module (`LAddr`) is derived derived from the geographical address of the module, e.g. from `Subn1Id`, `RackNo`, `SlotNo`, `SubSlotNo` and `SubAddr`.

Note

The "module rack fault" takes precedence over the module fault.

5.2.6 Failure of the DP master/DP slave

The OB_DIAG1 block detects the failure of DP master and DP slave and evaluates it via the inputs `RackF`, `Subn1Id` and `Subn2Id`.

In the case of an error, the identifier for "Higher-level fault" (`OMODE = 16#40xxxxxx`) is entered for in the `OMODE` output.

Fault	Event number	Event class
Distributed I/O devices: Failure of the DP master system (<code>RackFact</code>)	16#C3	16#39
PROFIBUS DP station failure (<code>RackFact</code>)	16#C4	16#39
PROFIBUS DP station return	16#C4	16#38
PROFIBUS DP station fault	16#C5	16#39
Reset PROFIBUS DP station fault	16#C5	16#38
PROFIBUS DP station return, but error in assignment of the module parameters	16#C6, 16#C7	16#38

If the "Rack failure" error (`RackFact = 1`) occurs, the PROFIBUS connection to the device is lost (`BusFlt = 1`).

See also

Error numbers (Page 61)

5.2.7 PROFIBUS connection error

Failure of the PROFIBUS connection to the DP slave (3RW44 device) is detected by reading out the diagnostics information of the device. The information is saved in bit 0 of byte 0 of the device.

The diagnostics information is read from SFC13 (DPNRM_DG) and saved in a temporary buffer.

The PROFIBUS connection error is reported at the `BusFlt` output of the SSDiag block and as an alarm in WinCC.

Table 5- 9 Possible reasons for the connection error

Byte 0	Meaning	Reason or remedy
Bit 0	1: DP slave cannot be accessed by the DP master.	<ul style="list-style-type: none"> • DP slave cannot be accessed by the DP master. • Is the station address of the DP slave set correctly? • Is the bus connection plug connected? • Is voltage applied to the DP slave? • Is the RS 485 Repeater secured correctly? • Has a reset been performed on the DP slave?

5.2.8 Slave diagnostics of the 3RW44

The following system function and diagnostic interrupt calls read the diagnostic information of the 3RW44 slave.

Block	Description	
SFC 13	DPNRM_DG	Reads the diagnostic data of the PROFIBUS DP slave
SFB 52	RDREC	If diagnostic interrupt 82 occurs, this block reads a process data set.
SFC 64	TIME_TCK	Reads the system time

Diagnostic messages that relate to communication and operation are read:

- Cyclically every 5 seconds.
- If interrupt OB 82 occurs.

This diagnostic information is mapped onto the DiagOprtn and DiagMeas output parameters. These parameters are interconnected with the SSOprtn and SSMeas blocks.

The information from the station diagnostics of the PROFIBUS DP slave is read out using SFC 13 DPNRM_DG.

Table 5- 10 Status of the station

Number of the bus node	Byte containing the diagnostic information
1	Byte 0
2	Byte 1
3	Byte 2

DiagOprtn

DiagOprtn transfers the following information:

Table 5- 11 Diagnostic information in DiagOprtn.DIAG for each bit

DiagOprtn.DIAG Bit	Diagnostic message
0	DP slave cannot be accessed by DP master. ¹
1	DP slave is not yet ready for data exchange.
2	Config data to DP slave from DP master does not match.
3	External diagnostics pending (Group diagnostics display)
4	The function is not supported by the DP slave, e.g. node address change by the software.
5	DP master cannot interpret DP slave response.
6	DP slave type does not match the software configuration.
7	DP slave parameterized by a different DP master
8	DP slave parameters must be reassigned.
9	Static diagnostic message: A diagnostics message is pending. DP slave will not function until the error is corrected.
10	Bit is set to "1" as long as DP slave address exists.
11	Watchdog function activated for DP slave
12	DP slave has received "FREEZE" command.
13	DP slave has received "SYNC" command.
14	The DP slave has been deactivated, e.g. it is not included in the current processing.
15	More diagnostic messages than DP slave can store. The DP master cannot write all diagnostic messages to its diagnostic buffer that were sent by the DP slave.
16...31	Not used

¹ The lost connection is signaled with `BusFlt` and as an alarm in WinCC.

5.2.9 Malfunction when loading the OB

Interrupt OB85 sets or resets the priority class error `GrpErr` (malfunction when loading OBs).

Table 5- 12 Events during which OB 85 `GrpErr` is reset

Fault	Event number	Event class
Error when creating a start event for an OB. This is not loaded to the CPU.	16#A1, 16#A2, or 16#A3	16#35
Error when the operating system accesses a module.	16#B1, 16#B2	16#39
	16#B3	16#39 or 16#38

`GrpErr` is only triggered once for one execution cycle of the block.

5.2.10 Interconnections of the SSDiag block

The Generate module driver function generates the driver blocks and creates all the required interconnections between the driver blocks automatically.

Use the templates supplied. These contain all the necessary blocks for operating the soft starter.

For additional information, refer to the section Templates (Page 27).

Diagnostic information

The SSDiag block reads the diagnostic information and transfers it to the SSOprtn block using the `DiagOprtn` output parameter.

5.3 Block for SSMeas measured value function

5.3.1 SSMeas description

Purpose of the block

The SSMeas block provides the following measurement information:

- Current values
- Voltage values
- Output frequency
- Line frequency
- Output power
- Thermal motor model
- Temperature
- Asymmetry

The block receives the information from the SSDiag block.

Views


The SSMeas block supports the following views:

- Trend (Page 34)
- Alarm (Page 36)
- Preview (Page 37)
- Standard (Page 39)
- Diagnostics (Page 41)

5.3.2 Operating modes

The following modes are available for the block:

- Local
- ON
- Out of service(Oos)

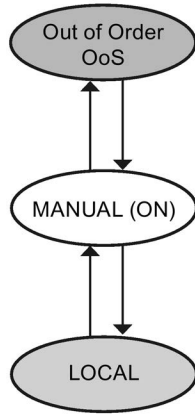

Local mode

The process image input bit 1.6 indicates whether the mode is local or remote.

- DP bit 1.6 = 1: Ready (automatic) or PLC operation or Remote. The PLC controls all operations of the soft starter.
- DP bit 1.6 = 0: Local ($LocalAct = 1$). The soft starter ES Premium application (PC software) controls all operations of the soft starter.

ON mode

The ON mode tells you that the block algorithm is being processed (output parameter $OnAct = 1$).

The ON mode can only be activated via a control on the faceplate (input parameter $OnOp = 1$). The block must be in the Out of service operating mode for this to be possible.

Out of service mode

The mode is intended for maintenance and servicing purposes (replacing the device, for example). All of the block's functions are disabled. No incoming or outgoing messages are generated. The only function still possible is an operating mode switchover.

It is only possible to switch to this operating mode if the block is in "Manual mode" or ON mode.

The mode can only be switched on by using the faceplate when it is in the standard block view (parameter `oosOp = 1`). The block must be in ON mode.

The mode is activated via the interconnectable parameter `oosLi = 1`.

From this mode (depending on the value of the PIQ to `PZDI01`), a block can be switched to the MANUAL or Local modes only by operator input to the faceplate. The block must be in ON mode.

Reference

You will find more information in the Function Manual "Process Control System PCS7, PCS7 Advanced Process Library V8.0" on the Internet (<http://support.automation.siemens.com/WW/view/en/57265842>).

5.3.3 Measured values

The SSMeas block reads measured values via data set DS94.

Table 5- 13 DS94

No.	Data set number	Read access/write access	Number of bytes	Description
1	DS94	R	64	Read measured values

The values are read from the soft starter with the RDREC function. This information is written to the output parameters.

5.3.4 Reading and writing data records

The RDREC function is used to read the data sets, and the WRREC function is used to write commands and values to the soft starter.

The "Read Data" button in the faceplates is used to update the displayed values.

Parameter Read data set

Reading data sets is performed irrespective of the current mode.

Reading is performed with the following parameters:

Table 5- 14 Parameter Read data set

Parameter	Value	Meaning
RdDataOp ¹	1	Read data set
RdDataLi ¹	0 → 1	Read data set
RdEn	1	Read data set enable
RdErr	1	Error when reading
WrErr	1	Error when writing
RdWrAct	1	Reading/writing data set ended

¹ not in Out of service mode and in case of rack failure

Errors when reading/writing data set

The following errors can occur when reading/writing the data set:

Table 5- 15 Errors when reading/writing data set

Error code (W#16#...)	Description
8085	Due to a problem in the system, information is not currently available (for example, due to a lack of resources).
80A2	DP protocol error at layer 2
80A3	PROFIBUS DP: DP protocol error with Direct-Data-Link-Mapper or user interface / user
80A4	Bus communication disrupted
80C0	The module has not yet read the data.
80C2	The module currently processes the maximum possible jobs for a CPU.
80C3	The required operating resources (memory, etc.) are currently occupied.
80C4	Internal temporary error. Job could not be carried out. Repeat the job. If this error occurs often, check your installation for sources of electrical interference.
80C6	Data set transfer was canceled due to priority class cancellation.
80C7	Job cancelled due to restart (warm restart) or cold restart of DP master.

If any of these errors is detected, the function call to read or write data set is executed again. The maximum count of these repetitive calls is set to 300 beyond which an error is reported as a read error or write error at the `RdErr` or `WrErr` output parameter respectively.

5.3.5 Message characteristics

SSMeas reports the following errors at the block output:

- Rack failure ($_{RackFAct}$)
- Module fault ($_{ModFAct}$)

An error generates a group error in output parameter $_{GrpErr}$.

These errors are not signaled as alarms as they are already part of the SSdiag block (both on the DP master system and behind the Y-link). The alarms are output using the ALARM_8P function.

The messages can be enabled or disabled using the $_{MsgLock}$ input.
The alarms are suppressed when the block is in Out of service mode.

Message block MsgEvid1

Table 5- 16 Output messages

Message block	Message No.	Block parameters	Message text	Message class *
MsgEvId1	1	Diag-Meas.TMPSNSOVL	\$\$BlockComment\$\$ Temperature sensor overload	A
	2	DiagMeas.TMMOVLD	\$\$BlockComment\$\$ Thermal motor model overload	A
	3	DiagMeas.CURHI	\$\$BlockComment\$\$ Current limit overshoot	A
	4	DiagMeas.CURLO	\$\$BlockComment\$\$ Current limit undershot	A
	5	ExtMsg1 **	\$\$BlockComment\$\$ External message 1	S
	6	ExtMsg2 **	\$\$BlockComment\$\$ External message 2	S
	7	ExtMsg3 **	\$\$BlockComment\$\$ External message 3	S
	8	ExtMsg4 **	\$\$BlockComment\$\$ External message 4	S

* S = AS, OS process control fault; A = Alarm

** User-definable message

Auxiliary values

The block supports 10 programmable auxiliary values.

Table 5- 17 Structure of the auxiliary values ALARM_8P

Message No.	Auxiliary value	Block parameter	Meaning
1	1	ExtVal01	External value 1, user-definable
2	2	ExtVal02	External value 2, user-definable
3	3	ExtVal03	External value 3, user-definable
4	4	ExtVal04	External value 4, user-definable
5	5	ExtVal05	External value 5, user-definable
6	6	ExtVal06	External value 6, user-definable
7	7	ExtVal07	External value 7, user-definable
8	8	ExtVal08	External value 8, user-definable
9	9	ExtVal09	External value 9, user-definable
10	10	ExtVal10	External value 10, user-definable

The `MsgStat1`, `MsgAckn1`, and `MsgErr1` parameters transfer the following information:

- Message status
- Message error
- Message acknowledgment status

5.3.6 Start-up characteristics

The alarm messages are suppressed in the OB100 for the `RunUpCyc` no. of times.

5.3.7 Status information

Status information SSMeas

The status information is passed to WinCC for display in the faceplates.

Table 5- 18 Status information – SSMeas

Status1 Bit	Description
0	Occupied
1	BatchEn
2	Reserved
3	OosAct.Value
4	OosLi active
5	Reserved
6	LocalAct.Value
7...27	Reserved
28	GrpErr.Value
29	MsgLock
30	NOT RackF.Value
31	Reserved

5.3.8 Enabled operations

Operator permissions

The operator permissions for control commands are configured in the `OS_Perm` structured parameters. These are transferred to WinCC via the `OS_PermOut` and `OS_PermLog` parameters.

The operator permissions control operation only in the faceplate.

Table 5- 19 Operator permissions – SSMeas

OS_Perm Bit	OS_PermOut Bit	OS_PermLog Bit	Description
0	0	0	Reserved
1	1	1	1 = Operator is permitted to change to ON mode.
2	2	2	Reserved
3	3	3	1 = Operator is permitted to change to "Out of service" (Oos) mode.
4...20	4...20	4...20	Reserved
21	21	21	1 = Operator is permitted to read data from the device.
22...31	22...31	22...31	Reserved

`OS_PermOut` contains the release information of all parameters.

`OS_PermLog` contains the release based on the current modes.

5.3.9 Assigning addresses in HW Config

The 2 bytes of the process image inputs (PII) are transferred by the soft starter based on the logical address of the device. The user has to configure the inputs.

Symbolic name in HW Config

The `PZDIn01` input parameter of the block is interconnected with the corresponding input of the logical address of the device (`LAddr`). The logical word address can be assigned to a symbolic name (*).

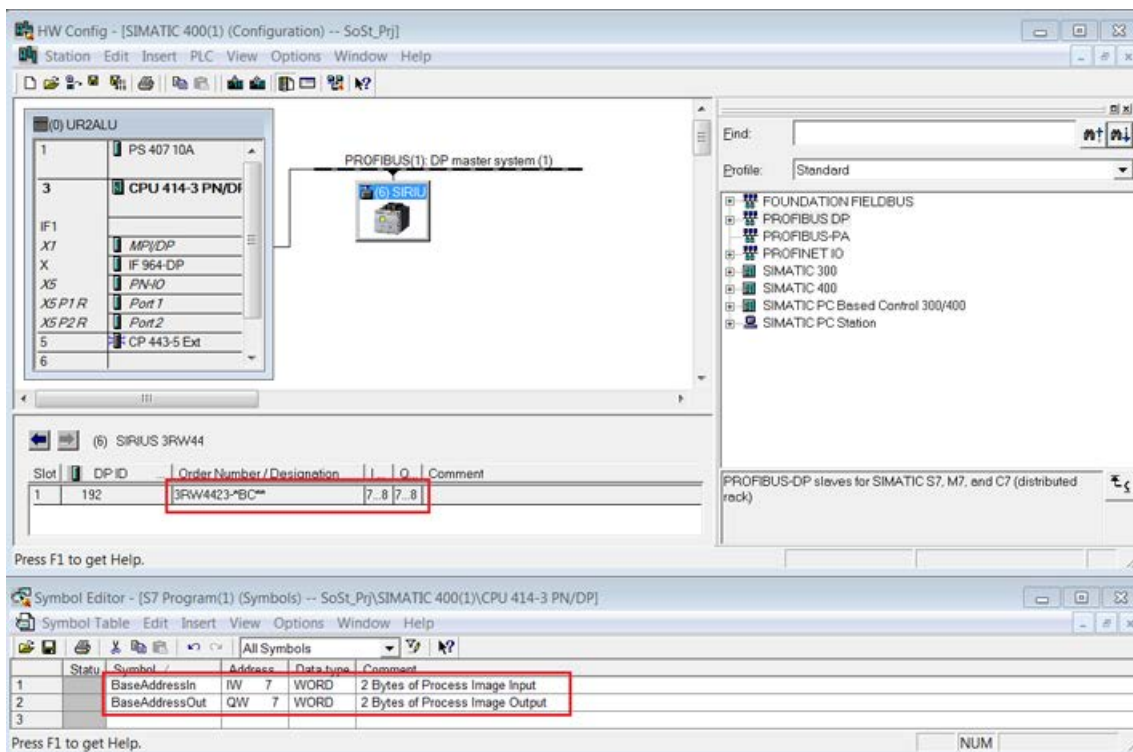
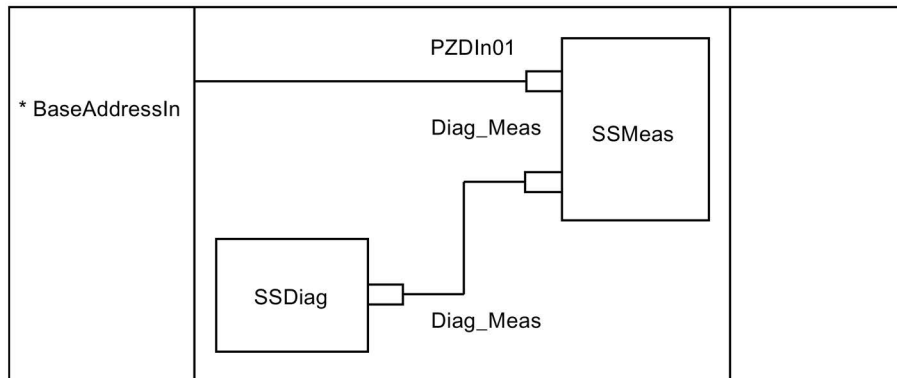


Figure 5-1 Symbolic name in HW Config

5.4 Block for SSStat statistical function

5.4.1 SSStat description

Purpose of the block

The SSStat block gathers statistical data from data set 95. It receives diagnostic data from the SSDiag block.

For soft starters, the SSStat block provides information about the following topics:

- Device operating hours
- Motor hours run
- Operating cycles
- Fault statistics
- Current measuring

Views


The SSStat block supports the following views:

- Alarm (Page 36)
- Preview (Page 37)
- Standard (Page 42)
- Maximum pointer (Page 44)
- Logbook (Page 46)

5.4.2 Operating modes

The following modes are available for the block:

- Local
- ON
- Out of service(Oos)

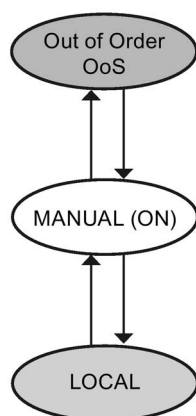

Local mode

The process image input bit 1.6 indicates whether the mode is local or remote.

- DP bit 1.6 = 1: Ready (automatic) or PLC operation or Remote.
The PLC controls all operations of the soft starter.
- DP bit 1.6 = 0: Local ($LocalAct = 1$).
The soft starter ES Premium application (PC software) controls all operations of the soft starter.

ON mode

The ON mode tells you that the block algorithm is being processed (output parameter $OnAct = 1$).

The ON mode can only be activated via a control on the faceplate (input parameter $OnOp = 1$). The block must be in the Out of service operating mode for this to be possible.

Out of service mode

The mode is intended for maintenance and servicing purposes (replacing the device, for example). All of the block's functions are disabled. No incoming or outgoing messages are generated. The only function still possible is an operating mode switchover.

It is only possible to switch to this operating mode if the block is in "Manual mode" or ON mode.

The mode can only be switched on by using the faceplate when it is in the standard block view (parameter $OosOp = 1$). The block must be in ON mode.

The mode is activated via the interconnectable parameter $oosLi = 1$.

From this mode (depending on the value of the PIQ to $PZDI_{n01}$), a block can be switched to the MANUAL or Local modes only by operator input to the faceplate. The block must be in ON mode.

Reference

You will find more information in the Function Manual "Process Control System PCS7, PCS7 Advanced Process Library V8.0" on the Internet (<http://support.automation.siemens.com/WW/view/en/57265842>).

5.4.3 Statistical values

Data set 95 reads statistical information, and data set 96 reads the maximum pointer. The values are read from the soft starter with the RDREC function. This information is written to the output parameters.

Table 5- 20 Data set table

No.	Data set number	Read access/write access	Number of bytes	Description
1	DS93	R/W	10	Write command
2	DS95	R	90	Read statistics data
3	DS96	R	86	Read maximum pointer
4	DS72	R	126	Read logbook - Device errors
5	DS73	R	126	Read logbook - Trips
6	DS75	R	126	Read logbook - Events
7	DS204	R	200	Read logbook - Device errors time stamp
8	DS205	R	200	Read logbook - Trip time stamp
9	DS206	R	200	Read logbook - Events time stamp

5.4.4 Reading and writing data records

The RDREC function is used to read the data sets, and the WRREC function is used to write commands and values to the soft starter.

The "Read Data" button in the faceplates is used to update the displayed values.

Parameter Read data set

Reading data sets is performed irrespective of the current mode.

Reading is performed with the following parameters:

Table 5- 21 Parameter Read data set

Parameter	Value	Meaning
RdDataOp ¹	1	Read data set
RdDataLi ¹	0 → 1	Read data set
RdEn	1	Read data set enable
RdErr	1	Error when reading
WrErr	1	Error when writing
RdWrAct	1	Reading/writing data set ended

¹ not in Out of service mode and in case of rack failure

Errors when reading/writing data set

The following errors can occur when reading/writing the data set:

Table 5- 22 Errors when reading/writing data set

Error code (W#16#...)	Description
8085	Due to a problem in the system, information is not currently available (for example, due to a lack of resources).
80A2	DP protocol error at layer 2
80A3	PROFIBUS DP: DP protocol error with Direct-Data-Link-Mapper or user interface / user
80A4	Bus communication disrupted
80C0	The module has not yet read the data.
80C2	The module currently processes the maximum possible jobs for a CPU.
80C3	The required operating resources (memory, etc.) are currently occupied.
80C4	Internal temporary error. Job could not be carried out. Repeat the job. If this error occurs often, check your installation for sources of electrical interference.
80C6	Data set transfer was canceled due to priority class cancellation.
80C7	Job cancelled due to restart (warm restart) or cold restart of DP master.

If any of these errors is detected, the function call to read or write data set is executed again. The maximum count of these repetitive calls is set to 300 beyond which an error is reported as a read error or write error at the `RdErr` or `WrErr` output parameter respectively.

5.4.5 Message characteristics

SSStat reports the following errors at the block output:

- Rack failure (`RackFAct`)
- Module fault (`ModFAct`)

An error generates a group error in output parameter `GrpErr`.

These errors are not signaled as alarms as they are already part of the SSDiag block (both on the DP master system and behind the Y-link). The alarms are output using the `ALARM_8P` function.

The messages can be enabled or disabled using the `MsgLock` input. The alarms are suppressed when the block is in Out of service mode.

Message block MsgEvid1

Table 5- 23 Output messages

Message block	Message No.	Block parameter	Message text	Message class *
MsgEvid1	1	ExtMsg1 **	\$\$BlockComment\$\$External Message 1	S
	2	ExtMsg2 **	\$\$BlockComment\$\$External Message 2	S
	3	ExtMsg3 **	\$\$BlockComment\$\$External Message 3	S
	4	ExtMsg4 **	\$\$BlockComment\$\$External Message 4	S
	5	ExtMsg5 **	\$\$BlockComment\$\$External Message 5	S
	6	ExtMsg6 **	\$\$BlockComment\$\$External Message 6	S
	7	ExtMsg7 **	\$\$BlockComment\$\$External Message 7	S
	8	ExtMsg8 **	\$\$BlockComment\$\$External Message 8	S

* S = AS, OS process control fault

** User-definable message

Auxiliary values

The block supports 10 programmable auxiliary values.

Table 5- 24 Structure of the auxiliary values ALARM_8P

Message No.	Auxiliary value	Block parameter	Meaning
1	1	ExtVa101	External value 1, user-definable
2	2	ExtVa102	External value 2, user-definable
3	3	ExtVa103	External value 3, user-definable
4	4	ExtVa104	External value 4, user-definable
5	5	ExtVa105	External value 5, user-definable
6	6	ExtVa106	External value 6, user-definable
7	7	ExtVa107	External value 7, user-definable
8	8	ExtVa108	External value 8, user-definable
9	9	ExtVa109	External value 9, user-definable
10	10	ExtVa110	External value 10, user-definable

The `MsgStat1`, `MsgAckn1`, and `MsgErr1` parameters transfer the following information:

- Message status
- Message error
- Message acknowledgment status

5.4.6 Start-up characteristics

The alarm messages are suppressed in the OB100 for the `RunUpCyc` no. of times.

5.4.7 Status information

Status information SStat

The status information is passed to WinCC for display in the faceplates.

Table 5- 25 Status information – SStat

Status1 Bit	Description
0...2	Reserved
3	OosAct.Value
4	OosLi active
5	Reserved
6	LocalAct.Value
7...27	Reserved
28	1 = Group fault
29	MsgLock activated
30	1 = Rack failure
31	Logbook update

5.4.8 Enabled operations

Operator permissions

The operator permissions for control commands are configured in the `OS_Perm` structured parameters. These are transferred to WinCC via the `OS_PermOut` and `OS_PermLog` parameters.

The operator permissions control operation only in the faceplate.

Table 5- 26 Operator permissions – SSSStat

OS_Perm Bit	OS_PermOut Bit	OS_PermLog Bit	Description
0	0	0	Reserved
1	1	1	1 = Operator is permitted to change to ON mode.
2	2	2	Reserved
3	3	3	1 = Operator is permitted to change to "Out of service" (Oos) mode.
4...16	4...16	4...16	Reserved
17	17	17	1 = Operator is permitted to delete trips in the logbook.
18	18	18	1 = Operator is permitted to delete events in the logbook.
19	19	19	Reserved
20	20	20	1 = Operator is permitted to delete the maximum pointer.
21	21	21	1 = Operator is permitted to read data from the device.
22...31	22...31	22...31	Reserved

`OS_PermOut` contains the permission information of all the parameters.

`OS_PermLog` contains the permission evaluated based on the current operating states.

5.4.9 Assigning addresses in HW Config

The 2 bytes of the process image inputs (PII) are transferred by the soft starter based on the logical address of the device. The user has to configure the inputs.

Symbolic name in HW Config

The `PZDIn01` input parameter of the block is interconnected with the corresponding input of the logical address of the device (`LAddr`). The logical word address can be assigned to a symbolic name (*).

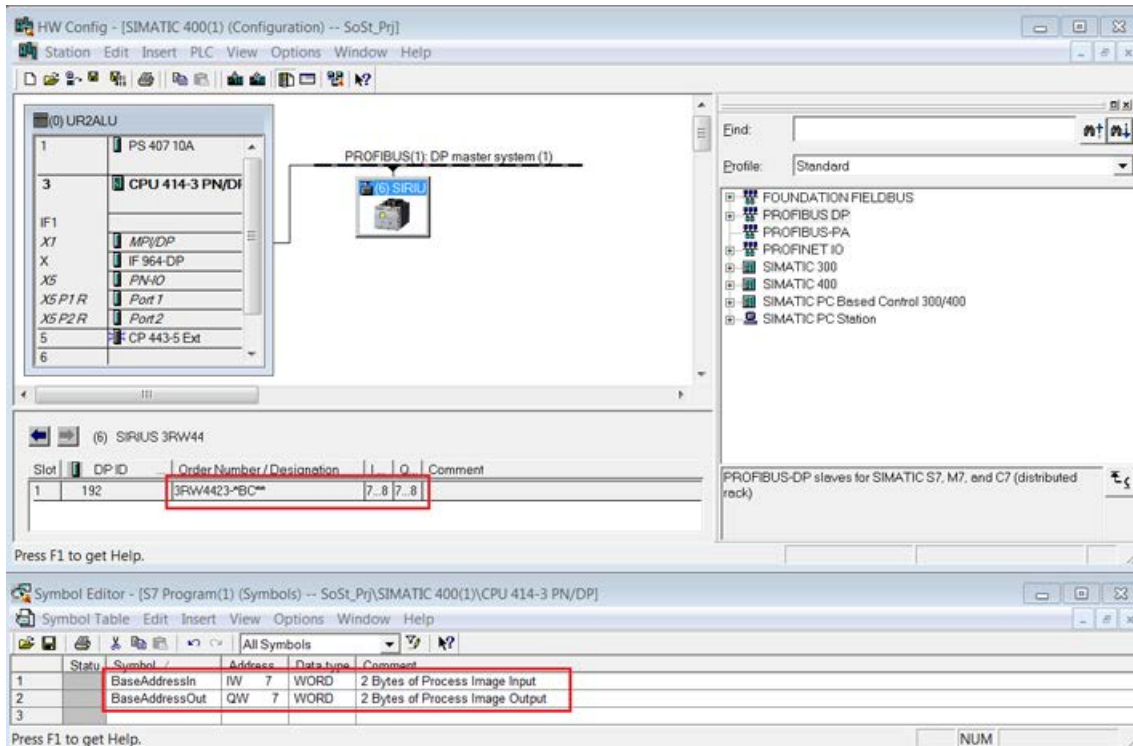
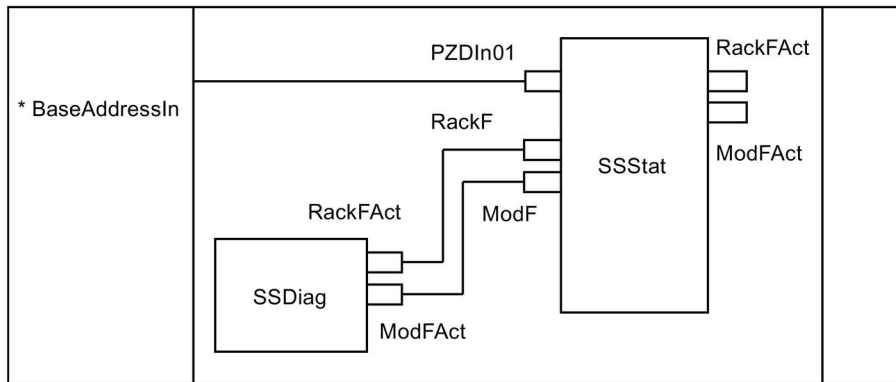


Figure 5-2 Symbolic name in HW Config

5.5 SSOprtn driver block

5.5.1 Description of SSOprtn

Purpose of the block

The Advanced Process Library (APL) offers fundamental control functionality that can be expanded by the SSOprtn block.

- Via the block, commands such as emergency start, test, trip reset are started because these functions are not supported by the APL themselves.
- The block reads data sets.
- Soft starter data sets are configured via the block.

Views

The SSOprtn block supports the following views:

- Trend (Page 34)
- Alarm (Page 36)
- Preview (Page 37)
- Standard (Page 48)
- Maintenance (Page 50)
- Limits (Page 51)
- Diagnostics (Page 53)
- Process image (Page 55)

See also

Block icons (Page 24)

5.5.2 Operating modes


The following modes are available for the SSOprtn block:

- Local
- Automatic
- Manual
- Out of service

In conjunction with APL blocks, the block is used, for example, for the emergency start and test modes.

An APL block is interconnected with SSOprtn to control the Local / Remote (automatic / MANUAL) mode.

Dependent on the value of the process image input at PZDIn01, the block is switched to Local mode. The command for switching modes changes the process input image PZDIn01.

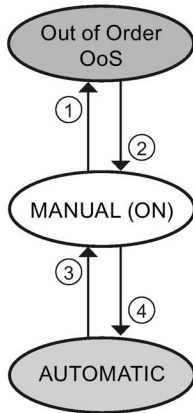

Conditions for changing the mode

Table 5- 27 Conditions for changing the mode


No.	Conditions
①	MANUAL (ON) → Out of service (Oos) <ul style="list-style-type: none"> Via faceplate ($OosOp = 1$) if $ModLiOp = 0$ or on an edge transition $0 \rightarrow 1$ from $OosLi$, if $Feature.Bit1 = 1$ (response for Out of service mode)
②	Out of service (Oos) → MANUAL (ON) <ul style="list-style-type: none"> Via faceplate ($ManModOp = 1$)
③	AUTOMATIC → MANUAL <ul style="list-style-type: none"> Via faceplate ($ManModOp = 1$) if $ModLiOp = 0$ or via $ManModLi = 1$ if $ModLiOp = 1$ and $Feature.Bit4 = 0$ (pushbutton mode) or via $AutModLi = 0$ if $ModLiOp = 1$ and $Feature.Bit4 = 1$ (switch mode)
④	MANUAL → AUTOMATIC <ul style="list-style-type: none"> Via faceplate ($AutModOp = 1$) if $ModLiOp = 0$ or via $AutModLi = 1$ if $ModLiOp = 1$

If $ModLiOp = 1$, the enabled operations for all mode changes will be deactivated.

If the block is in local mode, no other mode can be activated for it.

Switching between the operating modes

The switchover between "Manual and Automatic mode" takes place as shown in the following schematic:

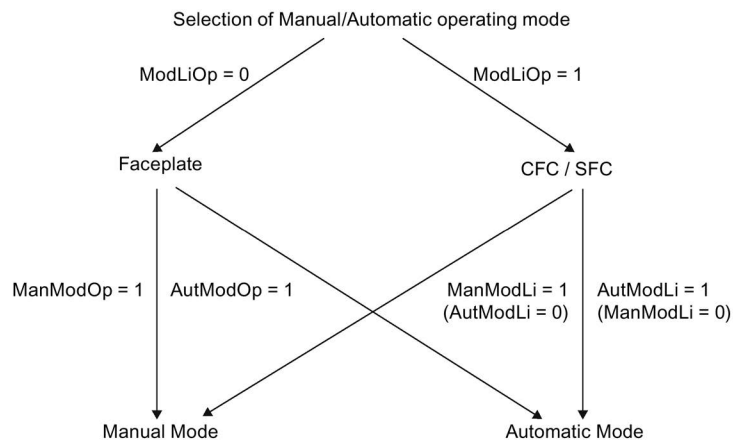

Reference

You will find more information in the function manual "Process Control System PCS7, PCS7 Advanced Process Library V8.0" on the Internet

(<http://support.automation.siemens.com/WW/view/en/57265842>).

5.5.3 Process image input and output

Bit assignment

Table 5- 28 Process image input and output: Bit assignment of byte 0 and byte 1

Byte.Bit	PII meaning	Byte.Bit	PIQ meaning
0.0	Ready to start (automatic)	0.0	Motor CW
0.1	Motor ON	0.1	Motor CCW
0.2	Group error	0.2	Brake
0.3	Group warning	0.3	Trip reset
0.4	Input 1	0.4	Emergency start
0.5	Input 2	0.5	Self-test
0.6	Input 3	0.6	Slow speed
0.7	Input 4	0.7	Reserved
1.0	Motor current (Page 99)	1.0	Output 1
1.1		1.1	Output 2
1.2		1.2	Active parameter sets 1, 2, 3
1.3			
1.4		1.4	Reduction factor
1.5			
1.6	Manual Local mode	1.6	
1.7	Ramp mode	1.7	Disable quick stop

5.5.4 Diagnostics information

The diagnostic information is communicated to WinCC for display in the faceplates.

The following diagnostic information is available for soft starters:

- 3RW44 soft starters PROFIBUS DP slave diagnostics, output via the parameter output `DiagStn`
- Diagnostics communication, switching and controlling, output via parameter output `DiagCom`
- Diagnostics parameter and device function, output via the parameter output `DiagPar`
- Diagnostics error parameter number, output via parameter output `FltPar`

Bit assignment DiagStn

Table 5- 29 Bit assignment DiagStn

Output parameter	Auxiliary variable	DiagStn Bit	Message
DiagStn 3RW44 PROFIBUS DP slave diagnostics	DiagStn	0	DP slave cannot be accessed by DP master. ¹
	DiagStn	1	DP slave is not yet ready for data exchange.
	DiagStn	2	Config data to DP slave from DP master does not match.
	DiagStn	3	External diagnostics pending (Group diagnostics display)
	DiagStn	4	The function is not supported by DP slave, e.g. node address change by the software
	DiagStn	5	DP master cannot interpret DP slave response.
	DiagStn	6	DP slave type does not match the software configuration.
	DiagStn	7	DP slave parameterized by a different DP master
	DiagStn	8	DP slave parameters must be reassigned.
	DiagStn	9	Static diagnostic message: A diagnostics message is pending. DP slave will not function until the error is corrected.
	DiagStn	10	Bit is set to "1" as long as DP slave address exists.
	DiagStn	11	Watchdog function activated for DP slave
	DiagStn	12	DP slave has received "FREEZE" command.
	DiagStn	13	DP slave has received "SYNC" command.
	DiagStn	14	The DP slave has been deactivated, e.g. it is not included in the current processing.
	DiagStn	15	More diagnostic messages than DP slave can store. The DP master cannot write all diagnostic messages to its diagnostic buffer that were sent by the DP slave.
		15...31	Not used

Bit assignment DiagCom

Table 5- 30 Bit assignment DiagCom1

Output parameter	Auxiliary variable DiagCom1	DiagCom Bit	Message
DiagCom1 Diagnostics communication, switching, and controlling	BUSERR	0	Bus error
	CPUMSTRSTOP	1	CPU / master stop
	AUTOPLCCNTRL	2	Automatic mode (CPU controls)
	MANBUSCNTRL	3	Manual Bus mode (OCM-controlled)
	MANLOCCNTRL	4	Manual Local mode
	CONNBRK	5	Connection break in Manual Local mode
	PIERROR	6	Process image error
	MANBUSPCCNT	7	Manual Bus - PC controls
	MANLOCINCNT	8	Manual Local mode - input controls
	MANLOCOMCNT	9	Manual Local mode - OCM controls
	MANLOCPCNT	10	Manual Local mode - PC controls
	CNTOVLD	11	Contact block overload
	CNTDMAG	12	Contact block defective
	NOMAINPWR	13	No supply voltage
	STRMODACT	14	Start mode active
	STPMODACT	15	Stop mode active
	ELEBRKACT	16	Electrical braking active
	SLWSPDACT	17	Slow speed active
	CTRLINPUT	18	Input control
	QCKSTPACT	19	Quick stop active
	ELEVLTHI	20	Electronics supply voltage too high
	ELEVLTLO	21	Electronics supply voltage too low
	RDYMOTON	22	Ready for motor ON
	CNTSHRT	23	Contact block short-circuited
	BYPPRTFLT	24	Bypass element defective
	SWELE1FAIL	25	Contact block 1 failed
	SWELE2FAIL	26	Contact block 2 failed
	SWELE3FAIL	27	Contact block 3 failed
	NOEXTSTPAR	28	No external startup parameters received
	BYPPRTTRP	29	Bypass element protective tripping
		30...31	Not used

Table 5- 31 Bit assignment DiagCom2

Output parameter	Auxiliary variable DiagCom2	DiagCom Bit	Message
DiagCom2 Diagnostics communication, switching, and controlling	READY	0	Ready (automatic)
	MOTCW	1	Motor right
	MOTCCW	2	Motor left
	EMGSTART	3	Emergency start is active
	GRPERR	4	Group error
	GRPWARN	5	Group warning
		6...31	Not used

Bit assignment DiagPar

Table 5- 32 Bit assignment DiagPar

Output parameter	Auxiliary variable DiagPar	DiagPar Bit	Message
DiagPar Parameter and device function diagnostics	FACTSETRSTR	0	Factory settings restored
	FWUPDTACT	1	FW update active
	FWUPDTSCFL	2	FW update successful
	FWUPDTUNSCFL	3	FW update not successful
	FWUPDTREJ	4	FW update rejected
	IMPERCLASS	5	Impermissible le / CLASS settings
	PSACTIVE	6	Parameter assignment active
	PS1ACTIVE	7	Parameter set 1 active
	PS2ACTIVE	8	Parameter set 2 active
	PS3ACTIVE	9	Parameter set 3 active
	IMPCHNGPS	10	Parameter set change impermissible
	INCORPSVAL	11	Incorrect parameter value
	PSPERMIT	12	Parameter changes not permissible when ON
	PSDISCPUACT	13	Parameters disabled CPU/master active
	28...31	Not used	

Bit assignment FltPar

Table 5- 33 Bit assignment FltPar

Output parameter	Auxiliary variable FltPar	FltPar BYTE	Message
FltPar Fault parameter number diag- nostics	FLTPARLB	BYTE 0	Incorrect parameter number (least significant byte)
	FLTPARHB	BYTE 1	Incorrect parameter number (most significant byte)

Bit assignment DiagDev

Output parameter	Auxiliary variable DiagDev	DiagDev BYTE	Message
DiagDev Device functions diagnostics	MOTHEATACT	0	Motor heating active
	DCBRKACT	1	DC braking active
	DYNDCBRK	2	Dynamic braking active
	CONSTDELTA	3	Motor connection type start/delta
	CONINSDDelta	4	Motor connection type inside delta
	CONUNKWN	5	Motor connection type unknown
	NOLOAD	6	No load
	PHS1LOSS	7	Phase failure L1
	PHS2LOSS	8	Phase failure L2
	PHS3LOSS	9	Phase failure L3
	LIPHDIR	10	Line phase direction right
	LIPHREV	11	Line phase direction left
	OUT1ACT	12	Output 1 active
	OUT2ACT	13	Output 2 active
	OUT3ACT	14	Output 3 active
	OUT4ACT	15	Output 4 active
	TRPRSTCARID	16	Trip reset successful
	TRPRSTNOTPOS	17	Trip reset not possible
	MAXPNTRDEL	18	Maximum pointer deleted
	19 ... 31	Not used	

5.5.5 Group error

The output parameter `GrpErr` is set when one of the errors listed below is detected. The Standard view displays these errors as a group error in plain text.

- Group error: Process image bit 0.2
- Module failure
- Rack failure
- Monitoring error

5.5.6 Trip reset

Soft starters can be reset with the trip reset command in the following situations:

- No contact block supply voltage.
- Motor overload.
- `RdytoReset` generated in the previous APL.

A trip resets the process image output PIQ DP 0.3.

Reset trip

A trip can be reset as follows:

Table 5- 34 Trip reset

Operating mode	Parameter	Value	Meaning	Assigned PIQ bits
AUTO	<code>TrpRstLi</code>	0 → 1	Trip reset active, trip is reset.	DP 0.3 = 1
MANUAL	<code>TrpRstOp</code> ^{1,2}	1	Trip reset active, trip is reset.	DP 0.3 = 1

¹ The command is reset at the end of the execution cycle of the block.

² In the Standard view if the operation has been enabled (`OS_Perm = 1`).

5.5.7 Emergency start

Purpose of emergency start

The emergency start function sets the process image output DP 0.4, that issues the emergency start command to the soft starter.

The following parameters are active in the various operating modes of the block:

Table 5- 35 Emergency start

Operating mode	Parameter	Value	Meaning	Assigned PIQ bits
AUTO	<code>EmrgStAut</code>	0 → 1 1 → 0	Enable emergency start Disable emergency start	DP 0.4 = 1
MANUAL	<code>EmrgStMan</code> ^{1,2}	0 → 1 1 → 0	Enable emergency start Disable emergency start	DP 0.4 = 1

¹ In the Standard view if the operator control enable exists (`OS_Perm`).

² The emergency start command of MANUAL mode monitors the respective command in AUTO mode to guarantee bumpless transfer of the command state during mode switchover from AUTO to MANUAL.

Status displays with activated Emergency start function




Note

The *Direct Soft-Starter* template prevents forwarding of a group error to the MotRevL block when the Emergency start function is activated. Only in this way is it possible to still send start and stop commands to the soft starter via MotRevL while a group error is active.

However, this has the result that different motor states can be displayed in the faceplates of SSOprtn and MotRevL while the Emergency start function is active.

While the SSOprtn icon displays an active group error, the MotRevL icon shows the current operating state of the motor when the Emergency start function is active, e.g.:

Table 5- 36 Example: Status displays with activated Emergency start function

SSOprtn faceplate		MotRevL faceplate	
Status display	Symbol	Status display	Symbol
Group error		Motor is running	
		Motor stationary	

See also

Direct soft starter template (Page 30)

5.5.8 Slow speed

The Slow speed function allows you to temporarily operate an induction motor in both directions of rotation at a speed that is less than the rated speed.

The following parameters are active in the various operating modes of the block:

Table 5- 37 Slow speed

Operating mode	Input parameter	Assigned PIQ bits	Control via
Manual Local	—	PIQ 0.6	Soft Starter ES
Auto	SISpdAut = 1	PIQ 0.6	Automation system
Manual	SISpdMan = 1	PIQ 0.6	Automation system

SISpdOn = 1 indicates that slow speed is activated.

Start motor in slow speed

1. Activate the Slow speed function in the SSOprtn faceplate.
2. Start the motor at the slower speed using the corresponding forward / reverse command in the MotRevL faceplate.

See also

Direct soft starter template (Page 30)
SSOprtn - Standard (Page 48)

5.5.9 Output 1 and output 2

The following parameters are active in the various operating modes of the block:

Table 5- 38 Output 1, output 2

Operating mode Manual Input parameter	Operating mode Auto Input parameter	Value	Output parameter	Process image output Bits
Out1Man	Out1Aut	0 → 1	Out1On	PIQ 1.0
Out2Man	Out2Aut	0 → 1	Out2On	PIQ 1.1

5.5.10 Active parameter sets

The process images of the outputs bit PIQ 1.2 and PIQ 1.3 correspond to the settings that the operator makes for the active parameter sets. For this purpose, parameter sets 1, 2 and 3 are assigned via the parameter `ParaSet = 1, 2 or 3`.

`ParaSet = 1 (Standard)`

PIQ 1.2 = FALSE
PIQ 1.3 = FALSE

`ParaSet = 2`

PIQ 1.2 = TRUE
PIQ 1.3 = FALSE

`ParaSet = 3`

PIQ 1.2 = FALSE
PIQ 1.3 = TRUE

5.5.11 Status of the Forward / Reverse command in Local mode

Status of the Forward command in Local mode

The `Fwd` parameter of SSOprtn reads the status of the `Fwd` command of the process image output (PIQ) from data set 68 and sends the status to the `Fwd` parameter of SSChn.

The `Fwd` and `MotRevL` parameters are interconnected via an OR block with the `Fwd` parameter of the SSChn channel block.

Status of the Reverse command in Local mode

The `Rev` parameter of SSOprtn reads the status of the `Fwd` command of the process image output (PIQ) from data set 68 and sends the status to the `Fwd` parameter of SSChn.

The `Rev` and `MotRevL` parameters are interconnected via an OR block with the `Rev` parameter of the SSChn channel block.

5.5.12 Disable Quick Stop

The Quick Stop function enables the motor and switches off the brake output without a group error. This function can be disabled.

The following parameters are active in the various operating modes of the block:

Table 5- 39 Disable quick stop

Operating mode Manual Input parameter	Operating mode Auto Input parameter	Value	Meaning	Process image output Bit
DsQkSpMan	DsQkSpAut	0	Deactivate Disable quick stop	PIQ 1.7
		1	Activate Disable quick stop	

5.5.13 Motor current display

Display for motor current

The PROFIBUS DP Bits 1.0 to 1.5 of the process image input describe the current consumption when the motor is connected. The current value is displayed in the Limits view as a percentage via the `MotCurr` output parameter.

Note

Soft starter DPV0

If the soft starter is configured in the DPV0 Interrupt mode, the values are not transferred to the device.

To transfer the values, parameterize the rated current of the device in HW Config as follows: **Device Properties > Device-specific Parameters > "Rated operating current"**.

Calculation of the motor current

Table 5- 40 Calculation of the motor current

PII						
DP 1.5	DP 1.4	DP 1.3	DP 1.2	DP 1.1	DP 1.0	Max.
2 ⁰	2 ⁻¹	2 ⁻²	2 ⁻³	2 ⁻⁴	2 ⁻⁵	
1	0,5	0,25	0,125	0,0625	0,03125	1,96875
Example						
0	1	0	1	0	1	0,65625 *

* The sum of the values is the motor current:

$$\text{Ratio} = 0.5 + 0.125 + 0.03125 = 0.65625$$

$$\text{MotCurr} = 0.65625 * 100 \text{ (current in \%)}$$

5.5.14 Substitute value

The operator parameterizes the substitute value. The `SubValue` parameter is 2 bytes long. The data contained are written to the soft starter via data set 131. If the Response to CPU/master stop event occurs, the soft starter is switched to the substitute value parameterized in `SubValue` or it retains the last value.

5.5.15 Message characteristics

SSOprtn reports the following errors at the block output:

- Rack failure (`RackFAct`)
- Module fault (`ModFAct`)

An error generates a group error in output parameter `GrpErr`.

These errors are not signaled as alarms as they are already part of the SSDiag block (both on the DP master system and behind the Y-link).

The alarms are output using the ALARM_8P function.

The messages can be enabled or disabled using the `MsgLock` input. The alarms are suppressed when the block is in Out of service mode.

Message block MsgEvid1

Table 5- 41 Output messages

Message block	Message No.	Block parameter	Message text	Message class *
MsgEvid1	1	PZDIn01.GrpWarn	\$\$BlockComment\$\$Group Warning	W
	2	PZDIn01.GrpFlt	\$\$BlockComment\$\$Group Fault	S
	3	CSF	\$\$BlockComment\$\$Control System Fault	S
	4	ExtMsg1	\$\$BlockComment\$\$External message 1	S
	5	ExtMsg2	\$\$BlockComment\$\$External message 2	S
	6	ExtMsg3	\$\$BlockComment\$\$External message 3	S
	7	ExtMsg4	\$\$BlockComment\$\$External message 4	S
	8	ExtMsg5	\$\$BlockComment\$\$External message 5	S

* W = Warning; S = AS, OS process control fault; A = Alarm

Auxiliary value

The block supports 10 programmable auxiliary values.

Table 5- 42 Structure of the auxiliary values ALARM_8P

Message No.	Auxiliary value	Block parameters	Meaning
1	1	ExtVa101	External value 1, user-definable
2	2	ExtVa102	External value 2, user-definable
3	3	ExtVa103	External value 3, user-definable
4	4	ExtVa104	External value 4, user-definable
5	5	ExtVa105	External value 5, user-definable
6	6	ExtVa106	External value 6, user-definable
7	7	ExtVa107	External value 7, user-definable
8	8	ExtVa108	External value 8, user-definable
9	9	ExtVa109	External value 9, user-definable
10	10	ExtVa110	External value 10, user-definable

The `MsgStat1`, `MsgAckn1`, and `MsgErr1` parameters transfer the following information:

- Message status
- Message error
- Message acknowledgment status

5.5.16 Reading and writing data records

Read function

The RDREC function is used to read the data sets, and the WRREC function is used to write commands and values to the soft starter.

The "Read Data" button in the faceplates is used to update the displayed values.

Reading can only be performed successfully if the function Write to data sets (WRREC) is not executed at the same time.

Table 5- 43 Parameter Read/write data set

Parameter	Value	Meaning
RdDataOp ¹	1	Read data set
RdDataLi ¹	0 → 1	Read data set
EnRdWr	1	Enable reading/writing data set
RdErr	1	Error when reading
WrErr	1	Error when writing
RdWrAct	1	Reading/writing data set ended

¹ not in Out of service mode and in case of rack failure

Data set table

Table 5- 44 Data set table

No.	Data set number	Read access/write access	Number of bytes	Description
1	DS68	R/W	8	Reading/writing the process image of the outputs
2	DS72	R	126	Logbook – Reading device errors
3	DS73	R	126	Logbook – Reading the trippings
4	DS75	R	126	Logbook – Reading events
5	DS92	R	30	Reading the device diagnosis
6	DS93	W	10	Write command
7	DS131	R/W	138	Technology parameter 2 set 1
8	DS132	R/W	64	Technology parameter 3 set 1
9	DS141	R/W	138	Technology parameter 2 set 2
10	DS142	R/W	64	Technology parameter 3 set 2
11	DS151	R/W	138	Technology parameter 2 set 3
12	DS152	R/W	64	Technology parameter 3 set 3

Write function

Writing of data sets is only possible when the block is in REMOTE mode.

See also

Enable for measurement and statistics (Page 104)

5.5.17 Fault handling

The following errors can be displayed for this block:

- Error numbers (Page 61)
- Mode changeover error
- Invalid input signals

5.5.18 Invalid input signals

The "Invalid input signals" error is output if there are inconsistencies between associated inputs and outputs. For example, you cannot issue start commands and stop commands to the motor simultaneously.

If the block algorithm detects an invalid combination of input signals, it will issue an error number at the `ErrorNum` output, depending on the block.

The STANDARD view displays this error in plain text.

5.5.19 Operator permissions

Operator permissions SSOprtn

The operator permissions for control commands are configured in the `OS_Perm` structured parameters. These are transferred to WinCC via the `OS_PermOut` and `OS_PermLog` parameters.

The operator permissions control operation only in the faceplate.

Table 5- 45 Operator permissions – SSOprtn

OS_Perm Bit	OS_PermOut Bit	OS_PermLog Bit	Description
0	0	0	1 = Operator is permitted to change to AUTO mode.
1	1	1	1 = Operator is permitted to change to MANUAL mode.
2	2	2	Reserved
3	3	3	1 = Operator is permitted to change to "Out of service" (Oos) mode.
4...7	4...7	4...7	Reserved
8	8	8	1 = Operator is permitted to activate Trip reset.
9	9	9	1 = Operator is permitted to activate Slow speed.
10	10	10	1 = Operator is permitted to activate Output 1.
11	11	11	1 = Operator is permitted to activate Output 2.
12	12	12	1 = Operator is permitted to change parameter set.
13	13	13	1 = Operator is permitted to deactivate Disable quick stop.
14	14	14	1 = Operator is permitted to activate emergency start.
15...20	15...20	15...20	Reserved
21	21	21	1 = Operator is permitted to update data.
22	22	22	1 = Operator is permitted to change the upper current limit PS1.
23	23	23	1 = Operator is permitted to change the lower current limit PS1.
24	24	24	1 = Operator is permitted to change the upper current limit PS2.
25	25	25	1 = Operator is permitted to change the upper current limit PS2.
26	26	26	1 = Operator is permitted to change the upper current limit PS3.
27	27	27	1 = Operator is permitted to change the upper current limit PS3.
28...31	28...31	28...31	Reserved

`OS_PermOut` contains the permission information of all the parameters.

`OS_PermLog` contains the permission evaluated based on the current operating states.

5.5.20 Enable for measurement and statistics

You can open the Standard view of the SSMeas and SSStat blocks using buttons in the Maintenance view of the SSOprtn block.

To display buttons in the faceplate, connect the selFp1 and selFp2 input parameters to an output parameter of the SSMeas and SSStat blocks in the CFC chart.

See also

Reading and writing data records (Page 101)

5.5.21 Status information

Status information SSOprtn

Table 5- 46 Status1 – SSOprtn

Status1 Bit	Description
0	Occupied
1	BatchEn
2	Reserved
3	1 = Out of service
4	1 = Out of service via interconnection
5	1 = AUTO mode active 0 = MANUAL mode active
6	1 = Local active
7	1 = Forward command (PIQ)
8	1 = Disable Quick stop (PIQ)
9	1 = Reverse command (PIQ)
10	1 = Slow speed (PIQ)
11	1 = Output 1 (PIQ)
12	1 = Output 2 (PIQ)
13	1 = Emergency start active, 0 = Emergency start inactive (PIQ)
14	1 = Parameter set bit0 (PIQ)
15	1 = Parameter set bit1 (PIQ)
16	1 = Trip reset active; 0 = Trip reset inactive (PIQ)
17	1 = Motor ON feedback
18	1 = Input 1 (PIQ)
19	1 = Input 2 (PIQ)
20	1 = Input 3 (PIQ)


Status1 Bit	Description
21	1 = Input 4 (PIQ)
22	1 = Ramp mode ((PII))
23	1 = Status – Group fault (PII)
24	1 = Status – Group warning (PII)
25	1 = Current limit trip 0 = Current limit warning
26	Reserved
27	Startup with OB100
28	1 = Group fault 0 = No error
29	MsgLock activated
30	1 = Rack failure
31	Invalid signal status

5.5.22 Assigning addresses in HW Config

The 2 bytes of the process image inputs (PII) are transferred by the soft starter based on the logical address of the device. The user has to configure the inputs.

Symbolic name in HW Config

The `PZDIn01` input parameter of the block is interconnected with the corresponding input of the logical address of the device (`LAddr`). The logical word address can be assigned to a symbolic name (*).

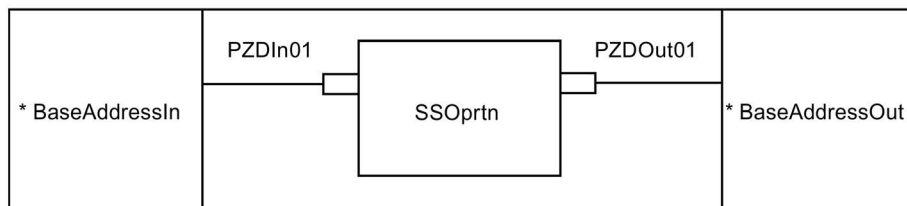

5.5 SSOprtn driver block

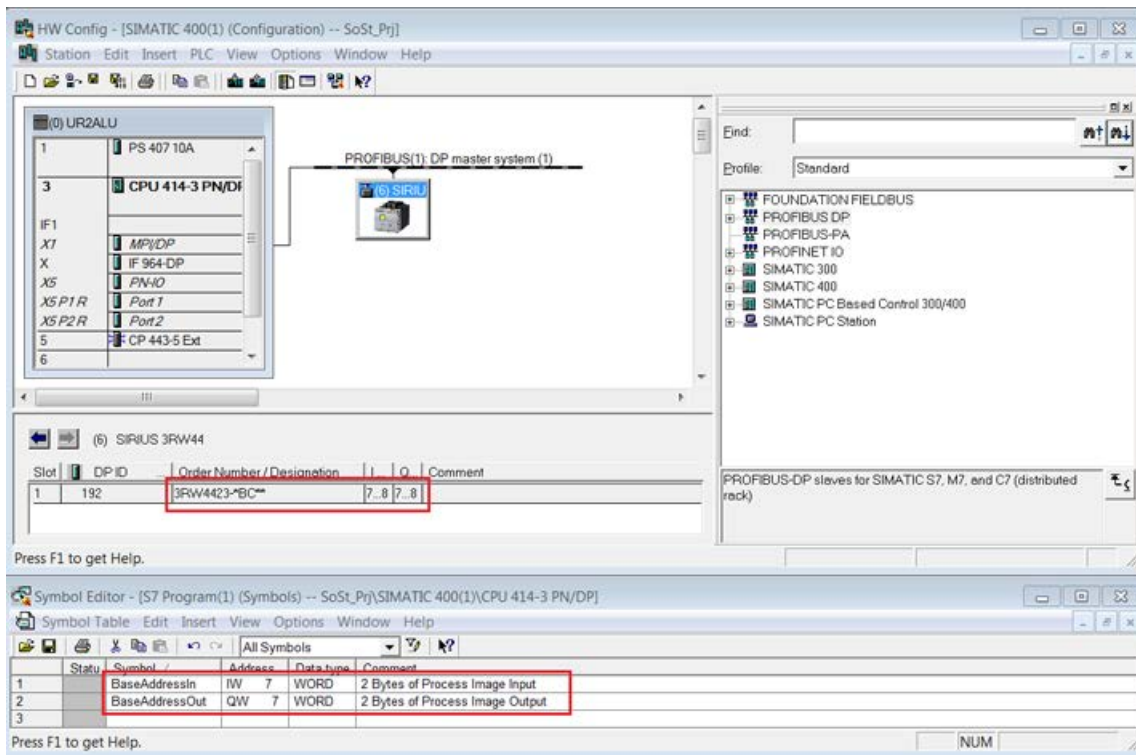


Figure 5-3 Symbolic name in HW Config

5.6 SSChn channel block

5.6.1 SSChn description

Purpose of the block

The SSChn channel block is used for processing 3RW44 soft starter signals.
The block has no operating modes.

Views

The SSChn block does not support views.

5.6.2 Configuration

Interconnection of the SSChn channel block

The interconnection is made symbolically to the first input word or output word. The input word and output word must have the same start in HW Config.

Use the CFC editor to install the block in a cyclic interrupt OB (OB30 to OB38).

The block is automatically installed in the startup OB (OB100).

Use the templates supplied. These contain all the necessary interconnections between the blocks.

Note

Please observe the information in Chapter Templates (Page 27).

5.6.3 Control word

If the control word STW1 is formed and the signal status Stw1ST is good (16#80), the control inputs listed in the table are ineffective. The control word STW1 is set at process value output PZDOUT1.

If the signal status Stw1ST has a bad value, the data of the control inputs are used.


Signal status Stw1ST	Control inputs
Fwd	Control word 1, bit 0
Rev	Control word 1, bit 1
BrakeRel	Control word 1, bit 2
ResetTrip	Control word 1 bit 3 or (STW1ST = 16#80 AND STW1 control word bit 3)
StartEmerg	Control word 1, bit 4
StartTest	Control word 1, bit 5
LowSpeed	Control word 1, bit 6
Ctrl7	Control word 1, bit 7
Out1	Control word 1, bit 8
Out2	Control word 1, bit 9
ManSpec1	Control word 1, bit 10
ManSpec2	Control word 1, bit 11
ManSpec3	Control word 1, bit 12
ManSpec4	Control word 1, bit 13
ManSpec5	Control word 1, bit 14
ManSpec6	Control word 1, bit 15

5.6.4 Assigning addresses in HW Config

The 2 bytes of the process image inputs (PII) are transferred by the soft starter based on the logical address of the device. The user has to configure the inputs.

Symbolic name in HW Config

The PZDIn01 input parameter of the block is interconnected with the corresponding input of the logical address of the device (LAddr). The logical word address can be assigned to a symbolic name (*).

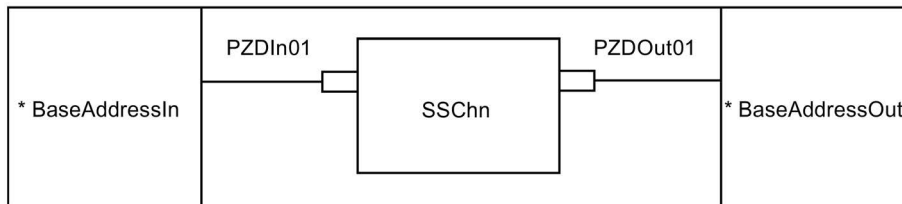

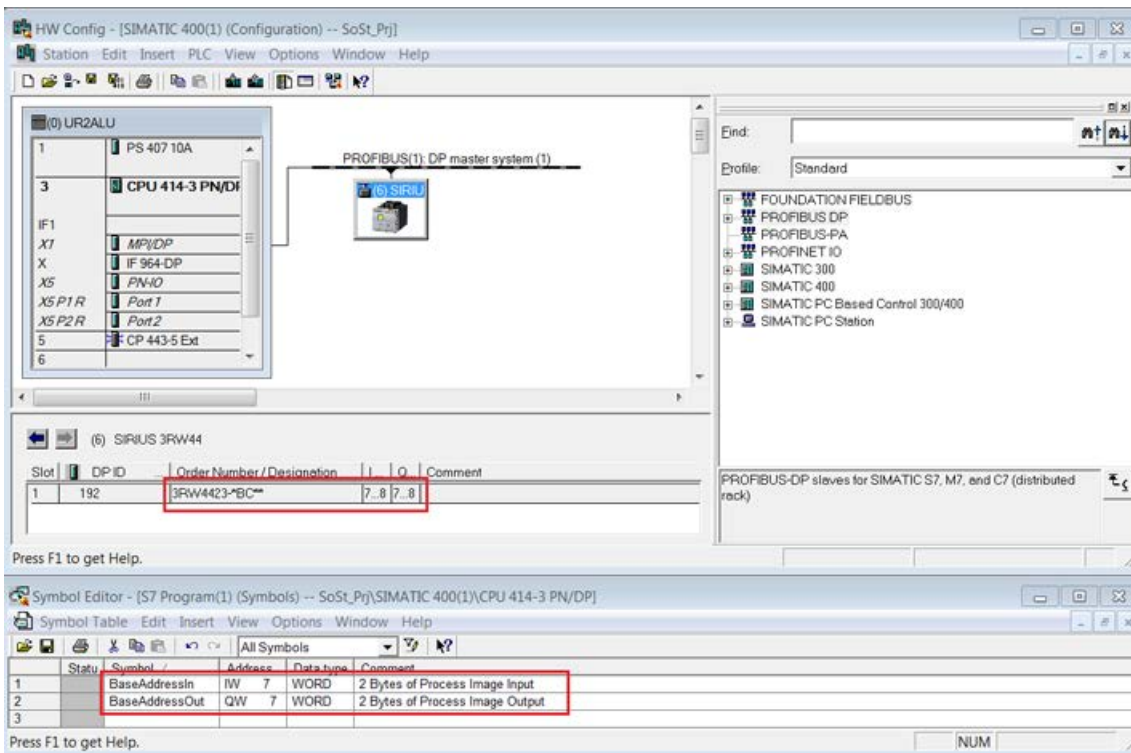


Figure 5-4 Symbolic name in HW Config

Module drivers of the soft starter

6.1 Released modules

The following soft starters are available for the PCS 7 Library V8.0 SP2:

Article number	Compatible modules
3RW4422-*BC**	Yes
3RW4423-*BC**	
3RW4424-*BC**	
3RW4425-*BC**	
3RW4426-*BC**	
3RW4427-*BC**	
3RW4434-*BC**	
3RW4435-*BC**	
3RW4436-*BC**	
3RW4443-*BC**	
3RW4444-*BC**	
3RW4445-*BC**	
3RW4446-*BC**	
3RW4447-*BC**	
3RW4453-*BC**	
3RW4454-*BC**	
3RW4455-*BC**	
3RW4456-*BC**	
3RW4457-*BC**	
3RW4458-*BC**	
3RW4465-*BC**	
3RW4466-*BC**	

6.2 Object lists and action lists

Hardware modules, among other things, are configured in HW Config.

Description

The object lists and the action lists are used to generate the module drivers for these hardware modules.

The object list contains a unique object identification number for each of these hardware modules. Each object list is assigned to a particular hardware configuration.

The action list contains a list of actions. These actions must be executed for the object identification numbers that appear in the object list. Examples of such actions include:

- Assigning the device address
- Interconnecting the input and output parameters of the driver block

The "Generate Module Driver" function generates the module drivers when the CFC is compiled.

6.3 Driver blocks

3RW44 soft starter Profinet directly on the PROFINET IO master system - Configuration using the hardware catalog or a GSD / EDD file

The following driver blocks are generated when the CFC is compiled:

- SSDiag diagnostics for the SIRIUS 3RW44 soft starter
- OB_DIAG1_PN - OB diagnostics function
- OB_BEGIN - CPU function block
- MOD_SWT - Message diagnostics for PA slave DPV0 connected to the DP master system

3RW44 soft starter directly on the DP master system - Configuration using the hardware catalog or a GSD file

The following driver blocks are generated when the CFC is compiled:

- SSDiag diagnostics for the SIRIUS 3RW44 soft starter
- OB_DIAG1 - OB diagnostics function
- OB_BEGIN - CPU function block
- MOD_SWT - Message diagnostics for PA slave DPV0 connected to the DP master system

3RW44 soft starter behind a Y-link - Configuration using the Object Manager

This configuration cannot be applied.

3RW44 soft starter following a Y-link - Configuration using GSD file or PDM object

The following driver blocks are generated when the CFC is compiled:

- SSDiag diagnostics for the SIRIUS 3RW44 soft starter
- OB_DIAG1 - OB diagnostics function
- OB_BEGIN - CPU function block
- MOD_SWT - Message diagnostics for PA slave DPV0 connected to the DP master system

Note

3RW44 soft starter following a Y link - Configuration using GSD file

If you are using the communication module with firmware version < E*04, a DPV1 following the Y link is not possible.

More information

Additional information regarding GSD files is available in the "SIRIUS 3RW44 Soft Starter" System Manual > section "Configuration with the GSD File".

Additional information on:

DPV1 functionality for SIRIUS 3RW44 soft starter following a Y link

(<http://support.automation.siemens.com>)

1. Enter the following search term in the "Product Name or Part Number" field: **y link 3rw44**
2. Select the entry.

See also

Driver generator (Page 13)

Parameter

A.1 SSDiag block parameters

Input parameters

Table A- 1 SSDiag input parameters

Parameter	Data format	Default setting	Meaning
EnDiagn	BOOL	TRUE	1 = Enable reading of diagnostic data
Mode	WORD	16#00	SSDiag OMODE
DAddr	INT	0	Soft starter diagnostics address
DPALink	BOOL	FALSE	Device connection: 0= DP-MASTER, 1 = DP-LINK
SubNTyp	BOOL	FALSE	1 = External DP interface
SI_Typ	BOOL	FALSE	0 = PROFIBUS, 1 = PROFINET
SubN1Id	BYTE	16#FF	ID of the primary master system
SubN2Id	BYTE	16#FF	ID of the redundant master system
RackNo	BYTE	16#FF	Rack number
SlotNo	BYTE	16#FF	Slot address of the module
SubSlotNo	BYTE	16#FF	Channel address of signal module
SubAddr	BYTE	16#FF	Subaddress
LAddr	WORD	16#0000	Soft starter logical address
RackF	BOOL	FALSE	1 = Rack failure
Subn1Err	BOOL	FALSE	1 = Failure slave 1
Subn2Err	BOOL	FALSE	1 = Failure slave 2
RunUpCyc	INT	3	Number of cycles in which all messages are suppressed
MsgEvid1	DWORD	16#FF	Message event ID
AcclId	BOOL	TRUE	1 = Accept new operating mode settings
ExtMsg1	STRUCT	–	External message 1
ExtMsg2	STRUCT	–	External message 2
ExtMsg3	STRUCT	–	External message 3
ExtVal05	ANY	–	External value 5
ExtVal06	ANY	–	External value 6
ExtVal07	ANY	–	External value 7
ExtVal08	ANY	–	External value 8
ExtVal09	ANY	–	External value 9
ExtVal10	ANY	–	External value 10
ReserveIn	WORD	–	Reserved

Output parameters

Table A- 2 SSdiag output parameters

Parameter	Data format	Default setting	Meaning
GrpErr	DigVal	–	1 = Group fault active
RackFAct	DigVal	–	1 = Rack failure
ModFAct	DigVal	–	1 = Module failure
Rack1Err	DigVal	–	1 = Error in the primary DP slave system
Rack2Err	DigVal	–	1 = Error in the redundant DP slave system
Slv_Typ	BOOL	FALSE	0 = PROFIBUS, 1 = PROFINET
BusFlt	BOOL	FALSE	1 = PROFIBUS connection to DP slave lost
RdEn	BOOL	FALSE	1 = Enable reading of data set
RdErr	DigVal	–	1 = Error reading data set
PA_Diag	DWORD	16#00	Diagnostic information for maintenance
DiagOprtn	SSDIAGOPRTN	–	Diagnostic information for SSOprtn
DiagMeas	SSDIAGMEAS	–	Diagnostic information for SSMeas
ST_Worst	BYTE	16#80	Worst Signal Status
OMode	DWORD	16#00	Status MODE
ErrorNum	INT	-1	Output of current error number
MsgErr1	BOOL	FALSE	Output error 1 (output ERROR of first ALARM_8P)
MsgStat1	WORD	16#00	Output status 1 (output ERROR of first ALARM_8P)
MsgAckn1	WORD	16#00	Message acknowledgment status 1 (output STATUS of first ALARM_8P)
ReserveOut	WORD	–	Reserved

Structure of OMODE

Table A- 3 Structure of OMODE – SSdiag

Byte	Value	Meaning	
Byte 3	16#80: 16#40: 16#20:	Valid data Invalid data Redundancy error	Irrelevant
Byte 2	16#01:	Warm restart (OB100)	–
Byte 1; 0	16#0000	–	Irrelevant

A.2 Structure of UDTs for SSdiag

UDTs for diagnostic information

The following diagnostic information is available for 3RW44 soft starters:

- SSDIAGOPRTN – Status, output via the `DiagOpRtn` parameter output
- SSDIAGMEAS – Status, output via the `DiagMeas` parameter output

SSDIAGOPRTN and SSDIAGMEAS are structured parameters for diagnostic information. They are composed of a number of elements.

SSDIAGOPRTN

Table A- 4 Diagnostic information

Element	Data format	Message	Diagnostic type
DIAG ¹	DWORD	3RW44 PROFIBUS DP slave diagnostics (Page 67)	Station diagnostics
BUSERR	BOOL	Bus error	Communication
CPUMSTRSTOP	BOOL	CPU / master stop	
AUTOPLCCNTRL	BOOL	Automatic mode (CPU controls)	
MANBUSCNTRL	BOOL	Manual Bus mode (OCM-controlled)	
MANLOCCNTRL	BOOL	Manual Local mode	
CONNBRK	BOOL	Connection break in Manual Local mode	
PIERROR	BOOL	Process image error	
NOEXTSTPAR	BOOL	No external startup parameters received	
MANBUSPCCNT	BOOL	Manual Bus - PC controls	
MANLOCINCNT	BOOL	Manual Local mode - input controls	
MANLOCOMCNT	BOOL	Manual Local mode - OCM controls	
MANLOCPCNT	BOOL	Manual Local mode - PC controls	

Element	Data format	Message	Diagnostic type	
READY	BOOL	Ready (automatic)	Switching and controlling	
MOTCW	BOOL	Motor right		
MOTCCW	BOOL	Motor left		
CNTOVLD	BOOL	Contact block overload		
CNTDMAG	BOOL	Contact block defective		
EMGSTART	BOOL	Emergency start is active		
GRPERR	BOOL	Group error		
GRPWARN	BOOL	Group warning		
NOMAINPWR	BOOL	No supply voltage		
STRMODACT	BOOL	Start mode active		
STPMODACT	BOOL	Stop mode active		
ELEBRKACT	BOOL	Electrical braking active		
SLWSPDACT	BOOL	Slow speed active		
CTRLINPUT	BOOL	Input control		
QCKSTPACT	BOOL	Quick stop active		
ELEVLTHI	BOOL	Electronics supply voltage too high		
ELEVLTO	BOOL	Electronics supply voltage too low		
RDYMOTON	BOOL	Ready for motor ON		
CNTSHRT	BOOL	Contact block short-circuited		
BYPPRTFLT	BOOL	Bypass element defective		
BYPPRTTRP	BOOL	Bypass element protective tripping		
SWELE1FAIL	BOOL	Contact block 1 failed		
SWELE2FAIL	BOOL	Contact block 2 failed		
SWELE3FAIL	BOOL	Contact block 3 failed		
FACTSETRSTR	BOOL	Factory settings restored		Parameter
FWUPDTACT	BOOL	FW update active		
FWUPDTSCFL	BOOL	FW update successful		
FWUPDTUNSCFL	BOOL	FW update not successful		
FWUPDTREJ	BOOL	FW update rejected		
IMPERCLASS	BOOL	Impermissible le / CLASS settings		
PSACTIVE	BOOL	Parameter assignment active		
PS1ACTIVE	BOOL	Parameter set 1 active		
PS2ACTIVE	BOOL	Parameter set 2 active		
PS3ACTIVE	BOOL	Parameter set 3 active		
IMPCHNGPS	BOOL	Parameter set change impermissible		
INCORPSVAL	BOOL	Incorrect parameter value		
PSPERMIT	BOOL	Parameter changes not permissible when ON		
PSDISCPUACT	BOOL	Parameters disabled CPU/master active		
MOTHEATACT	BOOL	Motor heating active		
DCBRKACT	BOOL	DC braking active		
DYNDCBRK	BOOL	Dynamic braking active		
CONSTDELT	BOOL	Motor connection type start/delta		

Element	Data format	Message	Diagnostic type
CONINSDELTA	BOOL	Motor connection type inside delta	
CONUNKWN	BOOL	Motor connection type unknown	
NOLOAD	BOOL	No load	
PHS1LOSS	BOOL	Phase failure L1	
PHS2LOSS	BOOL	Phase failure L2	
PHS3LOSS	BOOL	Phase failure L3	
LIPHDIR	BOOL	Line phase direction right	
LIPHREV	BOOL	Line phase direction left	
OUT1ACT	BOOL	Output 1 active	
OUT2ACT	BOOL	Output 2 active	
OUT3ACT	BOOL	Output 3 active	
OUT4ACT	BOOL	Output 4 active	
TRPRSTCARID	—	Trip reset successful	
TRPRSTNOTPOS	BOOL	Trip reset not possible	
MAXPNTRDEL	BOOL	Maximum pointer deleted	

¹ The information of the station diagnostics is mapped to the DiagOprtn.DIAG parameter.

SSDIAGMEAS

Table A- 5 Diagnostic information

Element	Data format	Meaning	Diagnostic type
TMPSNSOVL	BOOL	Temperature sensor overload	Protective function motor/cable/short-circuited
TMPSNSOPEN	BOOL	Temperature sensor wire break	
TMPSNSSHORT	BOOL	Temperature sensor short-circuit	
TMMOVL	BOOL	Thermal motor model overload	
OVLDSWOFF	BOOL	Overload switch off	
IDLETMACT	BOOL	Idle time active	
COOLDNTMACT	BOOL	Cooling time active	
ASYMREC	BOOL	Asymmetry detected	
ASYMSWOFF	BOOL	Asymmetry tripping	
CURLMACT	BOOL	Current limiting active	
CURHI	BOOL	Current limit overshoot	
CURLO	BOOL	Current limit undershoot	
CURLMSWOFF	BOOL	le limit value tripping	
MOTSTLSWOFF	BOOL	Motor block tripping	
INPUT1	BOOL	Input 1 active	
INPUT2	BOOL	Input 2 active	
INPUT3	BOOL	Input 3 active	
INPUT4	BOOL	Input 4 active	
GNDFLT	BOOL	Ground fault	
GNDFLTSWOFF	BOOL	Ground fault tripping	
TMMDEACT	BOOL	Thermal motor model deactivated	
PHANGCTRFLT	BOOL	Generalized phase error	
COOLCNTACT	BOOL	Contact block cooling time active	
CTNHOTSTART	BOOL	Contact block too hot for start	
CUROVERFLOW	BOOL	Current measuring range exceeded	
PREWRNUNDSHT	BOOL	Prewarning limit - prewarning time undershoot	
PREWRNHTEXED	BOOL	Prewarning limit - motor heating overshoot	
CMDSTRPAUACT	BOOL	Start command pause active	
ENRGSAVMACT	BOOL	Energy saving mode active	

A.3 SSMeas block parameters

Input parameters

Table A- 6 SSMeas input parameters

Parameter	Data format	Default setting	Meaning
Mode	DWORD	16#8000FFFF	OMODE parameter from SSDiag block
DAddr	INT	0	Soft starter diagnostics address
LAddr	INT	0	Soft starter logical address
Slv_Typ	BOOL	0	0 = PROFIBUS, 1 = PROFINET
RackF	DigVal	-	1 = Information on rack failure from the SSDiag block
ModF	DigVal	-	1 = Information on module failure from the SSDiag block
RdEn	BOOL	TRUE	1 = Enable reading of data set
RdDataLi	DigVal	-	Input 0 → 1: Read data set via link or SFC
RdDataOp	BOOL	FALSE	1 = Read data from data set
DiagMeas	SSDIAGMEAS (Page 117)	-	Diagnostic information from SSDiag
PZDIn01	WORD	16#00	Value of process image input DP 0.0–1.7
OnOp	BOOL	FALSE	1 = ON mode: ON mode by operator
OosOp	BOOL	FALSE	1 = Out of Service mode: Out of Service mode by operator
OosLi	DigVal	-	1 = Out of Service mode: Out of Service mode via field signal
Curr_OpScale	ScaVal	-	Current – bar of limit value display
Volt_OpScale	ScaVal	-	Voltage – bar of limit value display
SampleTime	REAL	0.1	Sampling time in seconds [s]
RunUpCyc	INT	3	Number of cycles in which all messages are suppressed
BatchEn	BOOL	FALSE	1 = Enable status Enabling the block for operation via SIMATIC BATCH
BatchID	DWORD	16#00	Current batch number
BatchName	STRING[32]	-	Current batch name
StepNo	DWORD	16#00	Batch step number
Occupied	BOOL	FALSE	1 = Occupied by batch control
MsgEvid1	DWORD	16#FF	Message number 1
MsgLock	STRUCT	-	Suppress process messages
ExtMsg1	STRUCT	-	External message 1
ExtMsg2	STRUCT	-	External message 2
ExtMsg3	STRUCT	-	External message 3
ExtMsg4	STRUCT	-	External message 4

A.3 SSMeas block parameters

Parameter	Data format	Default setting	Meaning
ExtVal01	ANY	–	External value 1
ExtVal02	ANY	–	External value 2
ExtVal03	ANY	–	External value 3
ExtVal04	ANY	–	External value 4
ExtVal05	ANY	–	External value 5
ExtVal06	ANY	–	External value 6
ExtVal07	ANY	–	External value 7
ExtVal08	ANY	–	External value 8
ExtVal09	ANY	–	External value 9
ExtVal10	ANY	–	External value 10
OS_Perm	STRUCT	–	Operator authorizations
OpSt_In	DWORD	16#0	Enabled operator stations Input parameters for local operator authorization to be interconnected with the output parameter <i>Out</i> of the OpStations block connected upstream
Feature	STRUCT	–	I/O for additional functions
ReserveIn	WORD	–	Reserved

Output parameters

Table A- 7 SSMeas output parameters

Parameter	Data format	Default setting	Meaning
RackFAct	DigVal	–	1 = Rack failure
ModFAct	DigVal	–	1 = Module failure
GrpErr	DigVal	–	1 = Group error
RdErr	DigVal	–	1 = Error reading data set
RdAct	DigVal	–	1 = Enable reading of data set
LocalAct	DigVal	–	1 = Local mode
OnAct	STRUCT	–	ON mode active
OosAct	DigVal	–	Out of Service mode active
DiagProt	DWORD	16#00	Current diagnostics and thermal diagnostics
CurrL1	AnaVal	–	Phase current IL1 in %
CurrL2	AnaVal	–	Phase current IL2 in %
CurrL3	AnaVal	–	Phase current IL3 in %
CurrL1E	AnaVal	–	Effective phase current IL1 in A
CurrL2E	AnaVal	–	Effective phase current IL2 in A
CurrL3E	AnaVal	–	Effective phase current IL3 in A
VoIL1L2	AnaVal	–	Effective external conductor voltage UL1L2 in V
VoIL2L3	AnaVal	–	Effective external conductor voltage UL2L3 in V
VoIL3L1	AnaVal	–	Effective external conductor voltage UL3L1 in V
SupVol	AnaVal	–	Electronics supply voltage

Parameter	Data format	Default setting	Meaning
OutPwr	AnaVal	–	Output power in kW
LineFreq	AnaVal	–	Line frequency
OutFreq	AnaVal	–	Output frequency
MotHtBld	STRUCT	–	Motor heating
Asymtry	STRUCT	–	Asymmetry
AsymtryEn	DigVal	–	0 = No asymmetry 1 = Asymmetry >= 40%
HtSnkTmp	STRUCT	–	Heat sink temperature
CntBlkHeat	STRUCT	–	Contact block heating
CntBlkColTm	AnaVal	–	Remaining contact block cooling time in [s]
TrpTm	STRUCT	0.0	Remaining time for tripping the thermal motor model in [s]
MotcolTm	AnaVal	–	Remaining motor cooling time in [s]
CurrHi	DigVal	–	Current limit overshoot
CurrLo	DigVal	–	Current limit undershot
OS_PermOut	DWORD	16#FFFFFFFF	Operating authorization: Output for OS
OS_PermLog	DWORD	16#FFFFFFFF	Display of OS_Perm with settings changed by block algorithm
OpSt_Out	DWORD	16#00	Value of the <code>OpSt_In</code> input parameter for further connection to other blocks. Bit 31 of this parameter is assigned to <code>feature bit 24</code> .
ST_Worst	BYTE	16#80	Worst signal status
Status1	DWORD	16#00000000	Status word 1
ErrorNum	INT	-1	Output of current error number
MsgErr1	BOOL	FALSE	Message error (ERROR output of first ALARM_8P)
MsgStat1	WORD	16#00	Message status (ERROR output of first ALARM_8P)
MsgAckn1	WORD	16#00	Message acknowledgement status (STATUS output of first ALARM_8P)
ReserveOut	WORD	–	Reserved

A.4 SSStat block parameters

Input parameters

Table A- 8 SSStat input parameters

Block parameters	Data format	Default setting	Meaning
Mode	DWORD	16#8000FFFF	OMODE information from the SSdiag block
DAddr	INT	0	Soft starter diagnostics address
LAddr	INT	0	Soft starter logical address
Slv_Typ	BOOL	0	0 = PROFIBUS, 1 = PROFINET
RackF	DigVal	–	1 = Information on rack failure from the SSdiag block
ModF	DigVal	–	1 = Information on module fault from SSdiag block
RdWrEn	BOOL	TRUE	1 = Enable reading/writing of data set
RdDataLi	DigVal	–	Input 0 → 1: Read data set via link or SFC
RdDataOp	BOOL	FALSE	1 = Read data from data set
PZDIn01	WORD	16#00	Value of process image input DP 0.0–1.7
MotCurrE	AnaVal	–	Effective motor current in amperes from the SSOpPrtn block
VoltE	AnaVal	–	Effective motor voltage
Eff	AnaVal	–	Motor efficiency
MotCosPhi	AnaVal	–	Motor power factor in %
RstTIErg	BOOL	FALSE	Reset total energy consumption
OnOp	BOOL	FALSE	1 = ON mode: ON mode by operator
OosOp	BOOL	FALSE	1 = Oos mode: Oos mode by operator
OosLi	DigVal	–	1 = Oos mode: Oos mode via field signal
RunUpCyc	INT	3	Number of cycles in which all messages are suppressed
MsgEvd1	DWORD	16#FF	Message event ID 1
MsgLock	DigVal	–	Suppress messages
ExtMsg1	DigVal	–	External message 1
ExtMsg2	DigVal	–	External message 2
ExtMsg3	DigVal	–	External message 3
ExtMsg4	DigVal	–	External message 4
ExtMsg5	DigVal	–	External message 5
ExtMsg6	DigVal	–	External message 6
ExtMsg7	DigVal	–	External message 7
ExtMsg8	DigVal	–	External message 8
ExtVa101	ANY	–	Auxiliary value 1
ExtVa102	ANY	–	Auxiliary value 2
ExtVa103	ANY	–	Auxiliary value 3

Block parameters	Data format	Default setting	Meaning
ExtVa104	ANY	–	Auxiliary value 4
ExtVa105	ANY	–	Auxiliary value 5
ExtVa106	ANY	–	Auxiliary value 6
ExtVa107	ANY	–	Auxiliary value 7
ExtVa108	ANY	–	Auxiliary value 8
ExtVa109	ANY	–	Auxiliary value 9
ExtVa110	ANY	–	Auxiliary value 10
OS_Perm	STRUCT	–	Operator enables
OpSt_In	DWORD	–	ReleaseOperator Station (OS)
Feature	STRUCT	–	I/O for additional functions
DelMaxPtr	BOOL	FALSE	Delete maximum pointer
DelLogTrp	BOOL	FALSE	Delete logbook trips
DelLogEvtnt	BOOL	FALSE	Delete logbook events
ReserveIn	WORD	–	Reserved

Output parameters

Table A- 9 SSStat output parameters

Parameter	Data format	Default setting	Meaning
RackFAct	DigVal	–	1 = Rack failure
ModFAct	DigVal	–	1 = Module error
GrpErr	DigVal	–	1 = Group fault is active
RdErr	DigVal	–	1 = Error reading data set
WrErr	DigVal	–	1 = Error writing data set
RdWrAct	DigVal	–	1 = Enable reading/writing of data set
LocalAct	DigVal	–	1 = Motor in Local mode: Local display
OnAct	STRUCT	–	1 = ON mode active
OosAct	DigVal	–	1 = Out of service active
EffPwr	AnaVal	–	Effective calculated power in kW
TotlEnrg	AnaVal	–	Total energy consumption in kWh
InstEnrg	AnaVal	–	Currently consumed energy in kWh
D_OpH	STRUCT	–	Device operating hours
M_OpH	STRUCT	–	Motor operating hours
N_OvlTrp	STRUCT	–	Number of overload trips
N_CntTrp	STRUCT	–	Number of contact block overload trips
N_StCw	STRUCT	–	Number of motor starts CW
N_StCcw	STRUCT	–	Number of motor starts CCW
N_BrkStp	STRUCT	–	Number of stops with electrical braking
Output1	STRUCT	–	Number of starts – output1
Output2	STRUCT	–	Number of starts – output2
Output3	STRUCT	–	Number of starts – output3

Parameter	Data format	Default setting	Meaning
Output4	STRUCT	-	Number of starts – output4
ImMax	AnaVal	-	Motor current I _{max} in %
ImMaxE	AnaVal	-	Effective motor current I _{max}
Trg_I	AnaVal	-	Last tripping current I _A in %
Trg_IE	AnaVal	-	Effective last tripping current I _A
OphI18	STRUCT	-	Operating hours motor current = 18...49.9% x I _e (max.)
OphI50	STRUCT	-	Operating hours motor current = 50...89.9% x I _e (max.)
OphI90	STRUCT	-	Operating hours motor current = 90...119.9% x I _e (max.)
OphI120	STRUCT	-	Operating hours motor current = 120...1000% x I _e (max.)
S_OpHmp	STRUCT	-	Device operating hours: Maximum pointer
HtSkTmpMax	STRUCT	-	Max. heat sink temperature
CntBlkMp	STRUCT	-	Max. contact block heating
N_OvITrpMp	STRUCT	-	Number of motor overload trips (motor protection, temperature sensor, blocking)
VoltMin	AnaVal	-	Min. electronics power supply
VoltMax	AnaVal	-	Max. electronics power supply
LFreqMin	AnaVal	-	Min. line frequency
LFreqMax	AnaVal	-	Max. line frequency
UI1I2Min	AnaVal	-	Effective phase-to-phase voltage UL1-L2 min.
UI2I3Min	AnaVal	-	Effective phase-to-phase voltage UL2-L3 min.
UI3I1Min	AnaVal	-	Effective phase-to-phase voltage UL3-L1 min.
UI1I2Max	AnaVal	-	Effective phase-to-phase voltage UL1-L2 max.
UI3I1Min	AnaVal	-	Effective phase-to-phase voltage UL3-L1 min.
UI1I2Max	AnaVal	-	Effective phase-to-phase voltage UL1-L2 max.
UI2I3Max	AnaVal	-	Effective phase-to-phase voltage UL2-L3 max.
UI3I1Max	AnaVal	-	Effective phase-to-phase voltage UL3-L1 max.
CurrL1Min	AnaVal	-	Phase current I _{L1} min in %
CurrL2Min	STRUCT	-	Phase current I _{L2} min in %
CurrL3Min	AnaVal	-	Phase current I _{L3} min in %
CurrL1Max	AnaVal	-	Phase current I _{L1} max in %
CurrL2Max	AnaVal	-	Phase current I _{L2} max in %
CurrL3Max	AnaVal	-	Phase current I _{L3} max in %
CurrL1MinE	AnaVal	-	Effective phase current I _{L1} min.
CurrL2MinE	AnaVal	-	Effective phase current I _{L2} min.
CurrL3MinE	AnaVal	-	Effective phase current I _{L3} min.
CurrL1MaxE	AnaVal	-	Effective phase current I _{L1} max.
CurrL2MaxE	AnaVal	-	Effective phase current I _{L2} max.
CurrL3MaxE	AnaVal	-	Effective phase current I _{L3} max.
IITrpMx	AnaVal	-	Max. tripping current in %

Parameter	Data format	Default setting	Meaning
IITrpMxE	AnaVal	–	Effective max. tripping current
OhII18Mp	STRUCT	–	Maximum pointer: Operating hours motor current = 18...49.9% x I _e (max.)
OhII50Mp	STRUCT	–	Maximum pointer: Operating hours motor current = 50...89.9% x I _e (max.)
OhII90Mp	STRUCT	–	Maximum pointer: Operating hours motor current = 90...119.9% x I _e (max.)
OhII120Mp	STRUCT	–	Maximum pointer: Operating hours motor current = 120...1000% x I _e (max.)
OS_PermOut	DWORD	16#FFFFFFFF	Display of OS_Perm
OS_PermLog	DWORD	16#FFFFFFFF	Display of OS_Perm with settings changed by block algorithm
OpSt_Out	DWORD	16#00	Value of the OpSt_In input parameter for further connection to other blocks. Bit 31 of the parameter is assigned to feature bit 24.
ST_Worst	BYTE	16#80	Worst Signal Status
Status1	DWORD	16#00000000	Status word 1
ErrorNum	INT	-1	Output of current error number
MsgErr1	BOOL	FALSE	Output error 1 (output ERROR of first ALARM_8P)
MsgStat1	WORD	16#00	Output status 1 (output ERROR of first ALARM_8P)
MsgAckn1	WORD	16#00	Message acknowledgement status 1 (STATUS output of first ALARM_8P)
LogId1 ... LogId21	INT	–	Message ID number 1 to 21
LogTm1 ... LogTm21	DWORD	16#00	Time stamp 1 to 21
LogDs	INT	–	Logbook data set
ReserveOut	WORD	–	Reserved

A.5 SSOprtn block parameters

Input parameters

Table A- 10 SSOprtn input parameters

Parameter	Data format	Default setting	Meaning
Mode	DWORD	16#8000FFFF	OMODE parameter from SSDiag
DAddr	INT	0	Soft starter diagnostics address
LAddr	INT	0	Soft starter logical address
Slv_Typ	BOOL	0	0 = PROFIBUS, 1 = PROFINET
RackF	DigVal	–	1 = Information on rack failure from the SSDiag block
ModF	DigVal	–	1 = Module failure
RdWrEn	BOOL	TRUE	1 = Enable reading/writing of data set
RdDataLi	DigVal	–	Input 0 → 1: Read data set via link or SFC
RdDataOp	BOOL	FALSE	1 = Read data from data set
DiagOprtn	SSDIAGOPRTN (Page 117)		Diagnostic information from SSDiag
PZDIn01	WORD	16#00	Value of process image input DP 0.0–1.7
PZDOut01	WORD	16#00	Process image output of SSChn
ModLiOp	DigVal	–	Changing modes between: 0 = Operator 1 = Interconnection
AutModOp	BOOL	FALSE	1 = AUTO mode: via operator
ManModOp	BOOL	TRUE	1 = MANUAL mode: via OS operator
AutModLi	DigVal	–	1 = AUTO mode: via interconnection or SFC
ManModLi	DigVal	–	1 = MANUAL mode: via interconnection or SFC
OosOp	BOOL	FALSE	1 = Out of service, via OS operator
OosLi	DigVal	–	1 = Out of service, via interconnection
TrpRstLi	DigVal	–	1 = Trip reset active, via interconnection or SFC
TrpRstOp	BOOL	FALSE	1 = Trip reset active, in MANUAL mode
RdyToRst	DigVal	–	Ready to reset active
EmrgStMan	BOOL	FALSE	1 = Activate emergency start in MANUAL mode
EmrgStAut	DigVal	–	1 = Activate emergency start in AUTO mode
SlSpdMan	BOOL	FALSE	1 = Activate Slow speed in MANUAL mode
SlSpdAut	DigVal	–	1 = Activate Slow speed in AUTO mode
Out1Man	BOOL	FALSE	1 = Output 1 active, in MANUAL mode
Out1Aut	DigVal	–	1 = Activate Output 1 in AUTO mode
Out2Man	BOOL	FALSE	1 = Activate Output 2 in MANUAL mode
Out2Aut	DigVal	–	1 = Activate Output 2 in AUTO mode
DsQkSpMan	BOOL	FALSE	1 = Activate Disable quick stop in MANUAL mode
DsQkSpAut	DigVal	–	1 = Activate Disable quick stop in AUTO mode
ParaSet	INT	1	Parameter set active

Parameter	Data format	Default setting	Meaning
PS1CurHi	STRUCT	–	Parameter set 1: Upper current limit (warning/trip)
PS1CurLo	STRUCT	–	Parameter set 1: Lower current limit (warning/trip)
PS2CurHi	STRUCT	–	Parameter set 2: Upper current limit (warning/trip)
PS2CurLo	STRUCT	–	Parameter set 2: Lower current limit (warning/trip)
PS3CurHi	STRUCT	–	Parameter set 3: Upper current limit (warning/trip)
PS3CurLo	STRUCT	–	Parameter set 3: Lower current limit (warning/trip)
SubVal	WORD	16#00	Substitute value as Response to CPU/master stop
CSF	DigVal	–	1 = External error (control system error)
BatchEn	BOOL	FALSE	1 = Enable status Enabling the block for operation via SIMATIC BATCH
BatchID	DWORD	16#00	Current batch number
BatchName	STRING[32]	–	Current batch name
StepNo	DWORD	16#00	Batch step number
Occupied	BOOL	FALSE	1 = Occupied by batch control
MsgLock	DigVal	FALSE	Suppress process message
SampleTime	REAL	0.1	Sampling time in [s]
RunUpCyc	INT	3	Number of cycles in which all messages are suppressed
PulseWidth	REAL	3	Controller output Fwd/Rev pulse width in [s]
PS1_OpScale	STRUCT	–	Parameter set 1: Op_Scale
PS2_OpScale	STRUCT	–	Parameter set 2: Op_Scale
PS3_OpScale	STRUCT	–	Parameter set 3: Op_Scale
MsgEvid1	DWORD	16#00	Message number 1
ExtMsg1	DigVal	–	External message 1
ExtMsg2	DigVal	–	External message 2
ExtMsg3	DigVal	–	External message 3
ExtMsg4	DigVal	–	External message 4
ExtMsg5	DigVal	–	External message 5
ExtVal01	ANY	–	External value 1
ExtVal02	ANY	–	External value 2
ExtVal03	ANY	–	External value 3
ExtVal04	ANY	–	External value 4
ExtVal05	ANY	–	External value 5
ExtVal06	ANY	–	External value 6
ExtVal07	ANY	–	External value 7
ExtVal08	ANY	–	External value 8
ExtVal09	ANY	–	External value 9
ExtVal10	ANY	–	External value 10
Selfp1	ANY	–	Call a block saved in this parameter as an additional faceplate in standard view
Selfp2	ANY	–	Call a block saved in this parameter as an additional faceplate in standard view

Parameter	Data format	Default setting	Meaning
OS_Perm	STRUCT	–	Operator authorizations
OpSt_In	DWORD	16#0	Operation Station release Input parameters for local operator authorization to be interconnected with the output parameter <i>Out</i> of the OpStations block connected upstream
Feature	STRUCT	–	Connection for additional functions
ReserveIn	WORD	–	Reserved

Output parameters

Table A- 11 SSOprtn output parameters

Parameter	Data format	Default setting	Meaning
RackFAct	DigVal	–	1 = Rack failure
ModFAct	DigVal	–	1 = Module error
GrpErr	DigVal	–	1 = Group fault is active
RdErr	DigVal	–	1 = Error reading data set
WrErr	DigVal	–	1 = Error writing data set
RdWrAct	DigVal	–	1 = Enabled operation Read/write data set
LocalAct	DigVal	–	1 = Local mode
AutAct	DigVal	–	1 = AUTO mode
ManAct	DigVal	–	1 = MANUAL mode
OutIn01	WORD	16#00	Process image input <i>PZDIIn01</i>
OosAct	DigVal	–	1 = Block is out of service
SubAct	DigVal	–	Substitute value active
SubFwd	DigVal	–	Substitute value Motor CW active
SubRev	DigVal	–	Substitute value Motor CCW active
SubTrpRt	DigVal	–	Substitute value
SubEmgSt	DigVal	–	Substitute value Substitute value
SubSISpd	DigVal	–	Substitute value Slow speed
SubOut1	DigVal	–	Substitute value Output 1 active
SubOut2	DigVal	–	Substitute value Output 2 active
SubPBit1	DigVal	–	Substitute value Parameter set bit 0
SubDQkSp	DigVal	–	Substitute value Disable quick stop
Fwd	DigVal	–	Local: Motor CW active
Rev	DigVal	–	Local: Motor CCW active
TrpRstOn	DigVal	–	Trip reset
EmrgStOn	DigVal	–	Emergency start
SlwSpdOn	DigVal	–	Slow speed
Out1On	DigVal	–	Output 1 active
Out2On	DigVal	–	Output 2 active
PSBit0	DigVal	–	Parameter set bit 0

Parameter	Data format	Default setting	Meaning
PSBit1	DigVal	–	Parameter set bit 1
DsQkSpOn	DigVal	–	Disable quick stop
DiagStn	DWORD	16#00	3RW44 PROFIBUS DP slave diagnostics
DiagCom1	DWORD	16#00	Diagnostics communication, switching, and controlling
DiagCom2	DWORD	16#00	Diagnostics communication, switching, and controlling
DiagPar	DWORD	16#00	Parameter and device function diagnostics
FltPar	WORD	16#00	Wrong parameter number diagnostics
RampOn	DigVal	–	Ramp mode
GrpFlt	DigVal	–	1 = Group fault
CSFlt	DigVal	–	1 = External error active (control system error)
GrpWarn	DigVal	–	1 = Group warning
OosAct	STRUCT	FALSE	1 = Block is out of service
MotCurr	AnaVal	–	Instantaneous motor current in %
MotCurrE	AnaVal	–	Current motor current in amperes
OS_PermOut	DWORD	16#FFFFFFFF	Display of OS_Perm
OS_PermLog	DWORD	16#FFFFFFFF	Display of OS_Perm with settings changed by block algorithm
OpSt_Out	DWORD	16#00000000	Value of the OpSt_In input parameter for further connection to other blocks. Bit 31 of the parameter is assigned to feature bit 24.
ST_Worst	BYTE	16#80	Worst signal status
Status1	DWORD	16#00000000	Status word 1
ErrorNum	INT	-1	Output of current error number
MsgErr1	BOOL	FALSE	Output error 1 (output ERROR of first ALARM_8P)
MsgStat1	WORD	16#00	Output status 1 (output ERROR of first ALARM_8P)
MsgAckn1	WORD	16#00	Message acknowledgement status 1 (STATUS output of first ALARM_8P)
ExtMsg1Act	DigVal	–	External message 1 active
ExtMsg2Act	DigVal	–	External message 2 active
ExtMsg3Act	DigVal	–	External message 3 active
ExtMsg4Act	DigVal	–	External message 4 active
ExtMsg5Act	DigVal	–	External message 5 active
ReserveOut	WORD	–	Reserved

Note

Note the following rules when assigning parameters:

- Maximum current limit > minimum current limit
 - Minimum start time \geq start time
 - Limiting torque > start torque
 - To select "DC braking", the "DC braking" function must be assigned to an output.
 - Enter the parameter values of the parameter sets as multiples.
-

A.6 SSChn block parameters

Input parameters

Table A- 12 SSChn input parameters

Parameter	Data format	Default setting	Meaning
PZDIn1	WORD	16#00	Input word 1
MS_Release	DigVal	–	Release for maint.
MS	DWORD	0	Maintenance State
MS_Ext	DWORD	–	Maintenance status external
FlutEn	BOOL	0	1 = Chatter suppression active
FlutTmIn	INT	0	Chatter suppression time
Stw1	WORD	16#00	Control word
Stw1ST	BYTE	16#00	Status control word
Fwd	DigVal	–	Forward
Rev	DigVal	–	Reverse
BrakeRel	DigVal	–	Brake off
ResetTrip	DigVal	–	Delete last trip
StartEmrg	DigVal	–	Emergency start
StartTest	DigVal	–	Self-test
LowSpeed	DigVal	–	Slow speed
Ctrl7	DigVal	–	Control input 7
Out1	DigVal	–	Output 1
Out2	DigVal	–	Output 2
ManSpec1	DigVal	–	Vendor-specific command 1
ManSpec2	DigVal	–	Vendor-specific command 2
ManSpec3	DigVal	–	Vendor-specific command 3
ManSpec4	DigVal	–	Vendor-specific command 4
ManSpec5	DigVal	–	Vendor-specific command 5
ManSpec6	DigVal	–	Vendor-specific command 6
IScale	ScaVal	–	End of measurement
IUnit	INT	1342	Unit of measurement for measured current
Feature	STRUCT	–	Connection for additional functions
ReserveIn	WORD	–	Reserved

Output parameters

Table A- 13 SSChn output parameters

Parameter	Data format	Default setting	Meaning
PZDOut1	WORD	16#00	Output word 1
Bad	DigVal	1	Process value invalid
ErrorNum	INT	-1	Error number
ModErr	DigVal	1	Drive out of service
OosAct	DigVal	-	Out of service active
OMS_Ext	DWORD	-	Reserved
Zsw1	WORD	-	Status word
FdkRdy	DigVal	-	Ready feedback
FdkFwd	DigVal	-	Forward feedback from controller
FdkRev	DigVal	-	Reverse feedback from controller
ErrAct	DigVal	-	Internal device error
WarnAct	DigVal	-	Internal warning activated
In1Act	DigVal	-	Input 1 activated
In2Act	DigVal	-	Input 2 activated
In3Act	DigVal	-	Input 3 activated
In4Act	DigVal	-	Input 4 activated
Imax	AnaVal	-	Instantaneous current in %
FdkLocal	DigVal	-	Feedback Local control
RampAct	DigVal	-	Ramp operation activated
IScaleOut	ScaVal	-	End of measurement
IUnitOut	INT	0	Unit of measurement for measured current
ReserveOut	WORD	-	Reserved

Input and output parameters

Table A- 14 SSChn input and output parameters

Parameter	Data format	Default setting	Meaning
Mode	DWORD	16#00000030	Quality and Mode
DataXchg	DWORD	0	Data exchange

Technical data

B.1 Technical data

Table B- 1 Memory requirement, FB number, and called blocks, per block type

Name of block ¹⁾	FB no. ²⁾	Length of block in the load memory, in bytes ³⁾	Length of block in the work memory, in bytes ³⁾	Length of instance data in the load memory, in bytes ⁴⁾	Length of instance data in the work memory, in bytes ⁴⁾	Temporary memory, in bytes ⁵⁾	Blocks called ⁶⁾
SSDiag	FB 1325	5658	4662	1224	408	232	SFB 35 SFB 52 SFB 54 FC 369 SFC 13 SFC 51 SFC 6 SFC 64
SSOprtn	FB 1326	14842	12608	2906	1184	226	SFB 35 SFB 52 SFB 53 SFB 54 FC 369 SFC 6 SFC 64
SSMeas	FB 1327	4946	3878	1618	666	76	SFB 35 SFB 52 FC 369 SFC 6

B.1 Technical data

Name of block ¹⁾	FB no. ²⁾	Length of block in the load memory, in bytes ³⁾	Length of block in the work memory, in bytes ³⁾	Length of instance data in the load memory, in bytes ⁴⁾	Length of instance data in the work memory, in bytes ⁴⁾	Temporary memory, in bytes ⁵⁾	Blocks called ⁶⁾
SSStat	FB 1328	18784	16574	3876	2260	84	SFB 35 SFB 52 SFB 53 FC 369 SFC 6 SFC 64
SSChn	FB 1329	3454	2780	690	170	74	SFC 6

- 1) The symbolic designator in the symbol table of the library for the respective function block (FB). It must be unique within the project.
- 2) Composed of the block type, e.g., FB for function block and the number.
- 3) Memory requirement of program code, once per block type
- 4) Memory requirement for an instance data block.
- 5) The memory required for the local data when the block is called in an execution level. This is limited according to the specific CPU. If this amount is exceeded, you must check the setting in the CPU configuration and redistribute it among the organization blocks based on the actual requirement.
- 6) The relevant driver block uses these blocks. They are now located in the user program They are stored in the same library.

Abbreviations

C.1 Abbreviations

Table C- 1 Meaning of abbreviations

Abbreviation	Meaning
AS	Automation station
CFC	Continuous Function Chart
CCW	Counter-clockwise
CW	Clockwise
DC	Direct-current voltage
DP	Distributed Peripherals
ES	Engineering system
FB	Function block
GSD	Generic Station Description
HW Config	"Hardware configuration" module in SIMATIC Manager
HMI	Human Machine Interface
ID	Identification number
OB	Organization block
OM	Object Manager
OoS	Out of Service
OS	Operator station
PCS 7	Process Control System 7
PIQ	Process image output
PII	Process image input
PDM	Process Device Manager
PG	Programming device
PS	Parameter set
SFB	System function block
SFC	Sequential function chart
SS	Soft starter
SSL	System status list
TIA	Totally Integrated Automation

