

SIEMENS

SIMATIC NET

S7-1500 - PROFIBUS SIMATIC CM 1542-5

Operating Instructions

Preface

Application and functions

1

**Installation, wiring,
commissioning, operation,
disassembly**

2

**Configuration, program
blocks**

3

Diagnostics and upkeep

4

Technical specifications

5

Approvals

6

Dimension drawings

7

CM 1542-5, firmware V2.0 (6GK7542-5DX00-0XE0)
CM 1542-5, firmware V3.0 (6GK7542-5DX10-0XE0)

01/2023

C79000-G8976-C290-07

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 DANGER
indicates that death or severe personal injury will result if proper precautions are not taken.
 WARNING
indicates that death or severe personal injury may result if proper precautions are not taken.
 CAUTION
indicates that minor personal injury can result if proper precautions are not taken.
NOTICE
indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

 WARNING
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Preface


Article number, validity and product names

This description contains information on the following product:

- CM 1542-5
Article number 6GK7 542-5DX00-0XE0
Hardware version 1
Firmware version V2.0.24
- CM 1542-5
Article number 6GK7 542-5DX10-0XE0
Hardware version 1
Firmware version V3.0

Communications modules for connecting S7-1500 to PROFIBUS DP

View of the module

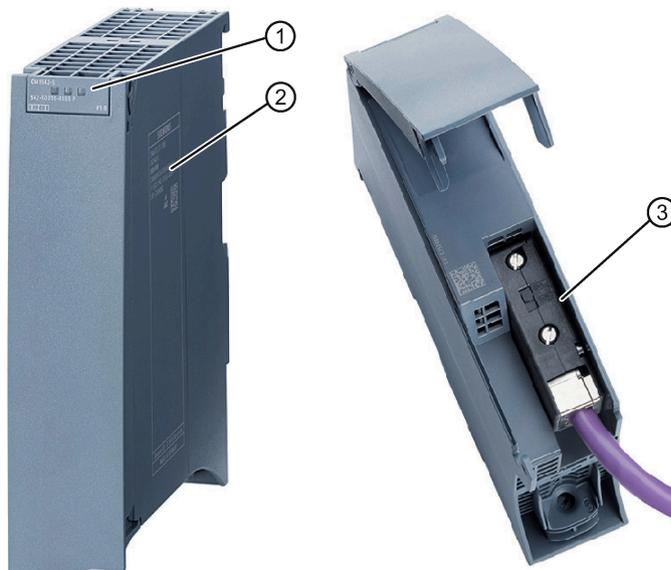

- ① LEDs
- ② Type plate
- ③ PROFIBUS interface: 1 x 9-pin D-sub female connector (RS-485)

Figure 1 CM 1542-5 with closed (left) and open (right) front cover

Abbreviations and reference to the module version

- CM / module / device

These terms are used in the following instead of the complete product designation. In this case, the information applies equally to both firmware versions or hardware product versions of the module.

If the data of the two devices differs, the firmware version or the hardware version of the respective device is explicitly stated.

- STEP 7

The name STEP 7 is used to mean the STEP 7 Professional configuration tool.

Purpose of the documentation

This device manual supplements the system manual of the automation system S7-1500 and the function manuals. All functions that go beyond the system are described in the system manual.

With the information in this manual and the system manual, you will be able to commission the CM 1542-5 communications module.

New in this edition

- New module with new article number, see above.
- New firmware versions with the following extensions:
 - Setting the PROFIBUS address from the user program, see section Setting the PROFIBUS address from the user program (Page 29).
 - Improvements of the operating behavior
- New approvals: CCC / UKEX
- Editorial revision

Replaced edition

Edition 06/2021

New in edition 06/2021: Additions for FDL communication in the extended LSAP range 1...56, see section Configuration of the extended LSAP area (Page 30).

Manual on DVD

You will find the manual on the DVD supplied with the product. This DVD contains the product manuals valid at the time it is created.

Current manual edition on the Internet

You will also find the current version of this manual on the Internet pages of Siemens Industry Online Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15671/man>)

License conditions

Note

Open source software

The product contains open source software. Read the license conditions for open source software carefully before using the product.

You will find license conditions in the following document on the supplied data medium:

- OSS_CM15425_86.pdf
- OSS_CM15425_99.pdf

Firmware

The firmware is signed and encrypted. This ensures that only firmware created by Siemens can be downloaded to the device.

Note on firmware/software support

Check regularly for new firmware/software versions or security updates and apply them. After the release of a new version, previous versions are no longer supported and are not maintained.

Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit

Link: (<http://www.siemens.com/industrialsecurity>)

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customers' exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under

Link: (<https://www.siemens.com/cert>)

Observe the following security recommendations to prevent unauthorized access to the system.

- Evaluate your plant as a whole in terms of security. Use a cell protection concept with suitable products.
- Keep the firmware up to date. Check regularly for security updates of the firmware and use them.
- Restrict physical access to the device to qualified personnel.
- Configure a protection level of the CPU.

Documentation guide

The documentation of the SIMATIC products has a modular structure and covers topics relating to your automation system.

The complete documentation for the S7-1500 system consists of a system manual, function manuals and device manuals.

The STEP 7 information system (online help) also supports you in configuring and programming your automation system.

Overview of the documentation on communication with S7-1500

The following table lists additional documents, which supplement this description of the CM 1542-5. The documents are available on the Internet.

Table 1 Documentation for the CM 1542-5

Topic	Documentation	Important contents
System description	S7-1500 automation system (https://support.industry.siemens.com/cs/ww/en/view/59191792) system manual	<ul style="list-style-type: none"> • Application planning • Installation • Connecting • Commissioning
Module properties	Power supplies (https://support.industry.siemens.com/cs/ww/en/ps/13743/man) manual	<ul style="list-style-type: none"> • Connecting • Parameter assignment/ addressing • Interrupts, error messages, diagnostics and system alarms • Technical specifications • Dimension drawing
	Signal modules (https://support.industry.siemens.com/cs/ww/en/ps/13721/man) manual	
System diagnostics	System diagnostics (https://support.industry.siemens.com/cs/ww/en/view/59192926) function manual	<ul style="list-style-type: none"> • Overview • Diagnostics evaluation for hardware/software
Communication	Communication (https://support.industry.siemens.com/cs/ww/en/view/59192925) function manual	<ul style="list-style-type: none"> • Overview

Topic	Documentation	Important contents
	Function manual PROFINET with STEP 7 (https://support.industry.siemens.com/cs/ww/en/view/49948856)	<ul style="list-style-type: none"> • PROFINET basics • PROFINET functions • PROFINET diagnostics
	Function manual PROFIBUS with STEP 7 (https://support.industry.siemens.com/cs/ww/en/view/59193579)	<ul style="list-style-type: none"> • PROFIBUS basics • PROFIBUS functions • PROFIBUS diagnostics
	Web server (https://support.industry.siemens.com/cs/ww/en/view/59193560) function manual	<ul style="list-style-type: none"> • Function • Operation
Interference-free installation of control systems	Designing interference-free controllers (https://support.industry.siemens.com/cs/ww/en/view/59193566) function manual	<ul style="list-style-type: none"> • Basics • Electromagnetic compatibility • Lightning protection • Housing selection
Memory concept	Structure and Use of the CPU Memory (https://support.industry.siemens.com/cs/ww/en/view/59193101) function manual	<ul style="list-style-type: none"> • Design • Principle of operation • Use
Cycle and response times	Function manual: Cycle and Response Times (https://support.industry.siemens.com/cs/ww/en/view/59193558)	<ul style="list-style-type: none"> • Basics • Calculations
Analog value processing	Function manual: Analog value processing (https://support.industry.siemens.com/cs/ww/en/view/67989094)	<ul style="list-style-type: none"> • Wiring options • Tables of measured values

SIMATIC manuals

The current manuals for SIMATIC products are available on the Internet:
Link: (<http://www.siemens.com/automation/service&support>)

CP/CM documentation on DVD

You can find the documentation on the product and the configuration on the "SIMATIC NET Manual Collection" or "SIMATIC Communication Products" DVD. This DVD contains the product manuals valid at the time it is created.

Recycling and disposal



The product is low in pollutants, can be recycled and meets the requirements of the WEEE directive 2012/19/EU "Waste Electrical and Electronic Equipment".

Do not dispose of the product at public disposal sites. For environmentally friendly recycling and the disposal of your old device contact a certified disposal company for electronic scrap or your Siemens contact.

Keep to the local regulations.

You will find information on returning the product on the Internet pages of Siemens Industry Online Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/view/109479891>)

SIMATIC NET glossary

The SIMATIC NET glossary describes terms that may be used in this document.

You will find the SIMATIC NET glossary in the Siemens Industry Online Support at the following address:

Link: (<https://support.industry.siemens.com/cs/ww/en/view/50305045>)

Table of contents

	Preface	3
1	Application and functions.....	11
1.1	Application	11
1.2	Further functions	12
1.3	Configuration limits and performance data.....	13
1.3.1	Configuration limits - number of CMs	13
1.3.2	Transmission speeds supported.....	14
1.3.3	Characteristic data of the DP interface	14
1.3.4	Characteristic data of FDL communication.....	15
1.3.5	Characteristics of S7 communication.....	15
1.3.6	Performance data / operation	16
1.4	Requirements for use.....	16
1.4.1	Usable CPUs.....	16
1.4.2	Project engineering.....	17
1.4.3	Program blocks	17
1.5	LEDs	18
1.6	PROFIBUS interface	19
2	Installation, wiring, commissioning, operation, disassembly	21
2.1	Important notes on using the device	21
2.1.1	Notes on use in hazardous areas	21
2.1.2	Notes on use in hazardous areas according to ATEX / UKEX / IECEx / CCC-Ex	22
2.1.3	Notes on use in hazardous areas according to UL HazLoc and FM.....	22
2.2	Installation, removal and repairs in hazardous areas	23
2.3	Installing, connecting and commissioning.....	25
2.4	Mode of the CPU - effect on the CM.....	26
2.5	Disassembly.....	27
3	Configuration, program blocks.....	29
3.1	Configuration in STEP 7.....	29
3.2	Configuring in third-party systems.....	29
3.3	Setting the PROFIBUS address from the user program	29
3.4	Configuration of the extended LSAP area.....	30
3.5	Program blocks for communication and distributed I/O	35
3.6	Program blocks for FDL	36
4	Diagnostics and upkeep.....	43
4.1	Diagnostics.....	43

4.1.1	Diagnostics options.....	43
4.1.2	DP slave diagnostics.....	44
4.1.3	Standard diagnostics.....	45
4.1.4	Device-specific diagnostics in DP-V1	47
4.1.5	DP diagnostics frames when the CPU is in STOP.....	50
4.2	Maintenance	50
4.2.1	Update firmware.....	51
4.2.2	Module replacement.....	53
5	Technical specifications.....	55
5.1	Technical specifications of the CM (6GK7542-5DX00-0XE0)	55
5.2	Technical specifications of the CM (6GK7542-5DX10-0XE0)	56
5.3	PROFIBUS interface terminal assignment.....	57
5.4	Ambient temperature	57
6	Approvals.....	59
7	Dimension drawings.....	65
	Index.....	67

Application and functions

1.1 Application

Application

The communications module CM 1542-5 is intended for operation in an S7-1500 automation system. The CM 1542-5 allows the connection of an S7-1500 station to a PROFIBUS fieldbus system.

As an alternative, the CM can be operated in the following modes:

- Class 1 DP master
- DP slave

Supported communications services

In its current configuration, the CM 1542-5 communications module supports the following communications services:

- **PROFIBUS DP master (class 1)**
 - DP master according to EN 50170, DP-V1
 - DP master mode for DP slaves according to PROFIBUS DP-V0 and DP-V1
 - DP master mode for Siemens DP slaves
 - Direct data exchange (DP slave to DP slave)

As a DP master, the CM 1542-5 is capable of enabling direct data exchange for its assigned DP slaves.

- SYNC/FREEZE

The outputs or inputs can be synchronized and frozen by the user program using system function DPSYNC_FR.

- **PROFIBUS DP slave**
DP slave according to EN 50170, DP-V0 / DP-V1

Note**DP master or DP slave**

The CM only supports operation either as DP master or DP slave.

- **FDL**

The CM handles the FDL communication using program blocks of Open User Communication (OUC) see section Configuration, program blocks (Page 29).

- **S7 communication**
 - PG communication for uploading / downloading of S7 configuration, diagnostics and routing
 - Operator control and monitoring functions (HMI communication)
 - Data exchange over S7 connections

- **Data record routing / field device parameter assignment**

You can use the CM as a router for data records intended for field devices (DP slaves). Data records from devices that are not connected directly to PROFIBUS and therefore have no direct access to the DP slaves are forwarded to the DP slaves by the CM.

The services of the CM 1542-5 listed above can be used independently at the same time.

Note

Requirement for FDL, data record routing, loading of configuration/diagnostics data

For the functions FDL, data record routing and loading configuration and diagnostics data the CM must either be operated in the mode DP master mode or as a DP slave with the option "Test, Commissioning and Routing" enabled.

1.2 Further functions

Enabling /disabling DP slave - in the standard system

DP slaves can be activated and deactivated by the user program using system function D_ACT_DP.

Diagnostics requests

As a DP master (class 1), the CM 1542-5 supports diagnostics requests of a DP master (class 2).

Getting the bus topology in a DP master system

The CM 1542-5 operating as DP master supports the measurement of the PROFIBUS bus topology in a DP master system using a diagnostics repeater (DP slave).

System function DP_TOPOL in the user program can instruct diagnostics repeaters to measure the PROFIBUS BUS topology in a DP master system.

Time-of-day synchronization - time master or time slave

The CM 1542-5 can be enabled for time-of-day synchronization. As an alternative, the CM can be configured as time master or time slave on PROFIBUS.

- Time master: The CM is synchronized using the time of day in the S7-1500 station and outputs the time of day on PROFIBUS. The output interval can be set.
- Time slave: The CM receives time-of-day frames on PROFIBUS and outputs the time within the S7-1500 station. The output interval within the S7-1500 station is set permanently to 10 seconds.

Note

Recommendation for setting the time

It is advisable to set the time-of-day master so that time-of-day frames are sent at intervals of approximately 10 seconds. This achieves as small a deviation as possible between the internal time and the absolute time.

Web diagnostics

With the aid of Web diagnostics of the CPU, you read the diagnostics data from an S7 station via the Web browser on the PG/PC.

In terms of the CM, the Web pages provide the following information:

- Module and status information
- Special information on the DP master system (status of the DP slaves)

1.3 Configuration limits and performance data

1.3.1 Configuration limits - number of CMs

When using the CM type described here, the following limits apply:

- The number of CMs that can be operated in a rack depends on the CPU type being used.
Refer to the information in the system manual (hardware configuration) Preface (Page 3) > Documentation guide.

1.3.2 Transmission speeds supported

The transmission speed is set in STEP 7.

Note

Remember the cable length

For the selected transmission speed, the permitted cable length must be kept to.

For this refer to the information in the PROFIBUS function manual:

Link: (<https://support.industry.siemens.com/cs/ww/en/view/59193579>)

1.3.3 Characteristic data of the DP interface

Characteristic data of DP mode

No special program blocks are required for DP mode. The interfacing to the distributed I/O is by direct I/O access or using program blocks (SFCs/SFBs) of the CPU.

Table 1- 1 Characteristic data of DP mode

Characteristic	Explanation / values
Max. number of operable DP slaves	125 *
Max. size of the input area of all DP slaves	8 KByte
Max. size of the output area of all DP slaves	8 KByte
Maximum number of inputs per DP slave	244 Byte
Maximum number of outputs per DP slave	244 Byte
Max. size of the consistent area for a module	128 Byte

* When using DP slaves with extensive configuration data e.g. SINAMICS devices, the number of DP slaves that can be operated on the CM sinks.

Diagnostics requests

As a DP master (class 1), the CM 1542-5 supports diagnostics requests of a DP master (class 2).

DP startup behavior

Note

Increasing the default value for startup parameters - configuration of the CPU

In some situations, it is necessary to increase the default value for the startup parameter "Parameter assignment time for the distributed I/O" in the configuration of the CPU:

- A large number of modules (DP slaves) is configured.
 - When a high value is configured for the constant bus cycle time in the network properties of the PROFIBUS DP line.
-

1.3.4 Characteristic data of FDL communication

Characteristic data FDL

The characteristic data is important when operating FDL connections (specified, free layer 2 (SDA and SDN), broadcast, multicast):

Table 1- 2 Characteristic data FDL

Characteristic	Explanation / values
Total number of S7 connections via PROFIBUS and FDL connections together	Operable in total: Max. 48
<ul style="list-style-type: none"> Of which, FDL connections 	<ul style="list-style-type: none"> Max. 30
<ul style="list-style-type: none"> Size of the transferable data area for FDL connections 	<ul style="list-style-type: none"> 1...240 bytes max. per specified FDL connection (for sending and receiving) Free layer 2, broadcast and multicast: Up to 236 bytes of payload can be transferred per job. The job header occupies an additional 4 bytes.

Note

Connection resources of the CPU

Depending on the CPU type, different numbers of connection resources are available. The number of connection resources is the decisive factor for the number of configurable connections. For this reason, lower values than specified here can result.

You will find detailed information on the topic of connection resources in the "Communication" function manual:

Link: (<http://support.automation.siemens.com/WW/view/en/59192925>)

1.3.5 Characteristics of S7 communication

Characteristics of S7 communication

The following information is important when operating S7 connections:

Table 1- 3 Characteristics of S7 connections

Characteristic	Explanation / values
Total number of S7 connections via PROFIBUS and FDL connections together	Operable in total: Max. 48
<ul style="list-style-type: none"> Of which, S7 connections via PROFIBUS 	<ul style="list-style-type: none"> Max. 48 <p>The value depends on the S7-1500 CPU being used.</p>

Note

PG or HMI functions or data record routing

If PG or HMI functions or data record routing are used, a suitable number of S7 connections must be reserved during configuration!

Help provided by STEP 7

The number of connections on PROFIBUS shown in the table above can vary due to other influencing factors. The STEP 7 configuration tool displays warnings and help messages as soon as limit values are exceeded.

1.3.6 Performance data / operation

Measured values of transfer or reaction times

Measured values of transfer and reaction times in Ethernet, PROFIBUS and PROFINET networks for a series of configurations can be found on the Internet:

Link: (<https://support.industry.siemens.com/cs/ww/en/view/25209605>)

1.4 Requirements for use

1.4.1 Usable CPUs

The following CPUs can be used as local CPU of the communications module:

- Compatible CPUs

All CPUs that can be configured in STEP 7 as of firmware version V2.1 from the following series:

- Standard CPUs (CPU 15xx)
- Compact CPUs (CPU 15xxC)
- Technology CPUs (CPU 15xxT / TF)
- Fail-safe CPUs (CPU 15xxF)

The following CPUs cannot be used:

- Non-compatible CPUs
 - H-CPU (CPU 1517H / HF)
 - R-CPU (CPU 151xR)

Note**Keep the firmware version of the CPUs and communications modules up to date**

To avoid possible problems when using newer CPUs together with older communications modules, you should keep the firmware of both your communications modules and your CPUs up to date.

Check regularly for security updates for the firmware and use them.

Information regarding product news and new firmware versions of the communications module is available at the following address:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15671/dl>)

1.4.2 Project engineering

Configuration

To configure the CM, the following configuration tool is required:

STEP 7 version	CM (6GK7542-5DX00-0XE0)	CM (6GK7542-5DX10-0XE0)
STEP 7 Professional V17	The functionality of the CM with firmware version V2.0.24 can be configured.	The CM is configurable, but with the functionality of the CM (6GK7542-5DX00-0XE0) with firmware version V2.0.24.
STEP 7 Professional V18	The functionality of the CM with firmware version V2.0.24 can be configured.	The functionality of the CM with firmware version V3.0 can be configured.

Downloading configuration data

When the configuration data is loaded on the CPU, the CM is supplied with the relevant configuration data. The configuration data can be downloaded to the CPU via PROFIBUS or any PROFINET interface of the S7-1500 station.

1.4.3 Program blocks

Program blocks

For the use of the program blocks for the CM, STEP 7 in the following version is required:

STEP 7 version	CM (6GK7542-5DX00-0XE0)	CM (6GK7542-5DX10-0XE0)
STEP 7 Professional V17	Using the program blocks for the CM with firmware version V2.0.24	Using the program blocks for the CM with firmware version V2.0.24
STEP 7 Professional V18	Using the program blocks for the CM with firmware version V2.0.24	Using the program blocks for the CM with firmware version V3.0

Use of FDL

The following minimum firmware versions are required for using the FDL functionality:

- CM: V2.0.20
- CPU: V2.0

1.5 LEDs

The status and error displays of the CM 1542-5 are described below.

You can find additional information on "Interrupts" in the STEP 7 online help.

You can find additional information on "Diagnostics" and "System alarms" in the function manual on the Internet:

Link: (<https://support.industry.siemens.com/cs/ww/en/view/59192926>)

LED display

The following figure shows the LEDs of the CM 1542-5.



- ① RUN/STOP LED
- ② ERROR LED
- ③ MAINT LED

Figure 1-1 LED display of the CM 1542-5 (without front cover)

Meaning of the LED displays

The CM 1542-5 has 3 LEDs to display the current operating status and the diagnostics status and these have the following meanings:

- RUN/STOP LED (one-color LED: green)
- ERROR LED (one-color LED: red)
- MAINT LED (one-color LED: yellow)

The following table shows the meaning of the various combinations of colors of the RUN/STOP, ERROR and MAINT LEDs.

Table 1- 4 Meaning of the LEDs

RUN/STOP LED	ERROR LED	MAINT LED	Meaning
 LED off	 LED off	 LED off	No supply voltage on the CM or supply voltage too low.
 LED lit green	 LED lit red	 LED lit yellow	LED test during startup
 LED lit green	 LED lit red	 LED off	Startup (booting the CM)
 LED lit green	 LED off	 LED off	CM is in RUN mode. No disruptions
 LED flashing green	 LED off	 LED off	No CM configuration exists Loading firmware
 LED lit green	 LED flashing red	 LED off	A diagnostics event has occurred.
 LED lit green	 LED off	 LED lit yellow	Maintenance is demanded.
 LED lit green	 LED off	 LED flashing yellow	Maintenance is required.
 LED flashing green	 LED flashing red	 LED flashing yellow	Module fault

1.6 PROFIBUS interface

9-pin D-sub female connector (PROFIBUS)

The PROFIBUS connector is located behind the cover of the housing. The interface is a 9-pin D-sub female connector operating according to the RS-485 standard.

You also have the option of connecting to optical PROFIBUS networks via an Optical Bus Terminal OBT or an Optical Link Module OLM.

You will find the pin assignment of the D-sub socket in section PROFIBUS interface terminal assignment (Page 57).

Installation, wiring, commissioning, operation, disassembly

2

2.1 Important notes on using the device

Safety notices on the use of the device

Note the following safety notices when setting up and operating the device and during all associated work such as installation, connecting up or replacing the device.

2.1.1 Notes on use in hazardous areas

 **WARNING**

The device may only be operated in an environment with pollution degree 1 or 2 as described in EN/IEC 60664-1, GB/T 16935.1.

 **WARNING**

EXPLOSION HAZARD

Replacing components may impair suitability for Class 1, Division 2 or Zone 2.

 **WARNING**

EXPLOSION HAZARD

Do not connect or disconnect cables to or from the device when a flammable or combustible atmosphere is present.

 **WARNING**

When used in hazardous environments corresponding to Class I, Division 2 or Class I, Zone 2, the device must be installed in a cabinet or a suitable enclosure.

2.1.2 Notes on use in hazardous areas according to ATEX / UKEX / IECEx / CCC-Ex

 **WARNING**

Requirements for the cabinet

To comply with EU Directive 2014/34 EU (ATEX 114), UK Regulation SI 2016/1107 or the conditions of IECEx or CCC-Ex, the housing or cabinet must meet the requirements of at least IP54 (according to EN/IEC 60529, GB/T 4208) in compliance with EN IEC/IEC 60079-7, GB 3836.8.

 **WARNING**

Suitable cables at high ambient temperatures in hazardous area

At an ambient temperature of ≥ 60 °C, use heat-resistant cables designed for an ambient temperature at least 20 °C higher. The cable entries used on the enclosure must comply with the IP degree of protection required by EN IEC / IEC 60079-0, GB 3836.1.

 **WARNING**

Transient overvoltages

Take measures to prevent transient overvoltages of more than 40% of the rated voltage (or more than 119 V). This is the case if you only operate devices with SELV (safety extra-low voltage).

2.1.3 Notes on use in hazardous areas according to UL HazLoc and FM

This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.

This equipment is suitable for use in Class I, Zone 2, Group IIC or non-hazardous locations only.

 **WARNING**

When used in hazardous environments corresponding to Class I, Division 2 or Class I, Zone 2, the device must be installed in a cabinet or a suitable enclosure.

 **WARNING**

Wall mounting outside of the control cabinet or housing does not fulfill the requirements of the FM approval.

 **WARNING**

EXPLOSION HAZARD

Replacing components may impair suitability for Class 1, Division 2 or Zone 2.

 **WARNING**

If the device is installed in a cabinet, the inner temperature of the cabinet corresponds to the ambient temperature of the device.

 **WARNING**

EXPLOSION HAZARD

The equipment is intended to be installed within an ultimate enclosure. The inner service temperature of the enclosure corresponds to the ambient temperature of the module. Use installation wiring connections with admitted maximum operating temperature of at least 30 °C higher than maximum ambient temperature.

2.2 Installation, removal and repairs in hazardous areas

 **WARNING**

Impermissible accessories and spare parts

Risk of explosion in hazardous areas

- Only use original accessories and original spare parts.
- Observe all relevant installation and safety instructions described in the manuals for the device or supplied with the accessories or spare parts.

 **WARNING**

Unsuitable cables or connectors

Risk of explosion in hazardous areas

- Only use connectors that meet the requirements of the relevant type of protection.
- If necessary, tighten the connector screw connections, device fastening screws, grounding screws, etc. according to the specified torques.
- Close unused cable openings for electrical connections.
- Check the cables for a tight fit after installation.

 **WARNING**

Improper installation of shielded cables

There is a risk of explosion due to equalizing currents between the hazardous area and the non-hazardous area.

- Ground shielded cables that cross hazardous areas at one end only.
- Lay a potential equalization conductor when grounding at both ends.

 **WARNING**

Lack of equipotential bonding

If there is no equipotential bonding in hazardous areas, there is a risk of explosion due to equalizing current or ignition sparks.

- Ensure that equipotential bonding is available for the device.

 **WARNING**

Unprotected cable ends

There is a risk of explosion due to unprotected cable ends in hazardous areas.

- Protect unused cable ends according to IEC/EN 60079-14.

 **WARNING**

Insufficient isolation of intrinsically safe and non-intrinsically safe circuits

Risk of explosion in hazardous areas

- When connecting intrinsically safe and non-intrinsically safe circuits, ensure that the galvanic isolation is performed properly in compliance with local regulations (e.g. IEC 60079-14).
- Observe the device approvals applicable for your country.

 **WARNING**

Unauthorized repair of devices in explosion-proof design

Risk of explosion in hazardous areas

- Repair work may only be performed by personnel authorized by Siemens.

2.3 Installing, connecting and commissioning

WARNING

Read the system manual "S7-1500 Automation System"

Prior to mounting, connection and commissioning, read the relevant sections in the system manual "S7-1500 Automation System", see Preface (Page 3) > Documentation guide.

Make sure that the power supply is turned off when installing/uninstalling the devices.

NOTICE

Improper mounting

Improper mounting may damage the device or impair its operation.

- Before mounting the device, always ensure that there is no visible damage to the device.
- Mount the device using suitable tools. Observe the information in the respective section about mounting.

WARNING

Open equipment

The devices are "open equipment" acc. to the standard IEC 61010-2-201 or UL 61010-2-201 / CSA C22.2 No. 61010-2-201. To fulfill requirements for safe operation with regard to mechanical stability, flame retardation, stability, and protection against contact, the following alternative types of installation are specified:

- Installation in a suitable cabinet.
- Installation in a suitable enclosure.
- Installation in a suitably equipped, enclosed control room.

WARNING

Power supply

The device is designed for operation with a directly connectable safety extra low voltage (SELV) from a limited power source (LPS).

The power supply therefore needs to meet at least one of the following conditions:

- Only safety extra low voltage (SELV) with limited power source (LPS) complying with IEC 60950-1 / EN 60950-1 / VDE 0805-1 or IEC 62368-1 / EN 62368-1 / VDE 62368-1 may be connected to the power supply terminals.

If the equipment is connected to a redundant power supply (two separate power supplies), both must meet these requirements.

Procedure for connection and mounting

Step	Execution	Notes and explanations
1	Install the CM as described in the system manual "S7 1500 Automation System", section "Installing I/O devices".	
2	Connect the CM to PROFIBUS via the RS-485 socket.	Lower surface of the CM
3	Turn on the power supply.	
4	Close the front covers of the module and keep them closed during operation.	

Commissioning

Requirement: Configuration

One requirement for the commissioning of the CP is the completeness of the STEP 7 project data.

Procedure

The remaining steps in commissioning involve downloading the STEP 7 project data.

The STEP 7 project data of the CM is transferred when you download to the station. To load the station, connect the engineering station on which the project data is located to the Ethernet/MPI interface of the CPU.

You will find more detailed information on loading in the following sections of the STEP 7 online help:

- Downloading project data
- Using online and diagnostics functions

PROFIBUS connection

Only use 90° connectors for the PROFIBUS connection. With other connector types, you cannot close the front cover of the device.

2.4 Mode of the CPU - effect on the CM

You can change the mode of the CPU between RUN and STOP using STEP 7 or the switch.

Depending on the operating status of the CPU, the CM behaves as described below.

Changing the CPU from STOP to RUN

- Programmed connections are established.
- In DP master mode:
 - Change from CLEAR to the OPERATE mode
- In DP slave mode:
 - Going diagnostics interrupt to the master
 - Current input data is transferred.

Changing the CPU from RUN to STOP

The reaction is as follows in STOP:

- Programmed connections are terminated.
- In DP master mode:
 - Change to the CLEAR mode
- In DP slave mode:
 - Input data is sent to the DP master with the value "0" and a DP diagnostics alarm is sent.
- Regardless of the mode, the following functions remain enabled:
 - The configuration and diagnostics of the CM
 - Relevant system connections for configuration, diagnostics and PG channel routing still exist.
 - Data record routing
 - S7 routing function
 - Time-of-day synchronization
 - Configured connections remain established.

2.5 Disassembly

WARNING

Improper disassembly

Improper disassembly may result in a risk of explosion in hazardous areas.

For proper disassembly, observe the following:

- Before starting work, ensure that the electricity is switched off.
- Secure remaining connections so that no damage can occur as a result of disassembly if the system is accidentally started up.

Configuration, program blocks

3.1 Configuration in STEP 7

Configuration in STEP 7

You configure the CM in SIMATIC STEP 7. You will find the required version in the section Project engineering (Page 17).

You will find complete information on configuration in the STEP 7 information system.

Loading and saving the configuration data

When you load the station, the project data of the station including the configuration data of the CP is stored on the CPU. You will find information on loading the station in the STEP 7 information system.

3.2 Configuring in third-party systems

Configuring in third-party systems via GSD file

To allow configuration as DP slave in third-party systems, a GSD file is available. You will find this on the following page of Siemens Industry Online Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/view/113652>)

The protocol variant DP-V1 or DP-V0 is decided during operation by the setting of the connected DP master.

3.3 Setting the PROFIBUS address from the user program

Writing the PROFIBUS address

As of firmware version V3.0 of the CM, you can set the PROFIBUS address of the CM in the user program.

To do this, enable the following option in the configuration of the CM:
PROFIBUS interface > Advanced settings > Setting PROFIBUS address in the user program

When this option is enabled, the CM does not go to the bus at startup and the bus fault LED lights up.

The CM becomes the bus node and the error message disappears only when the PROFIBUS address has been written to the CM by the user program.

Writing address with WRREC

To write the PROFIBUS address, use the instruction WRREC.

You enter the PROFIBUS address in the "RECORD" parameter (data record number 2101) of the block according to the following structure:

record	Struct	
• BlockType	UInt	16#2101
• BlockLength	UInt	8
• Version	USInt	1
• Subversion	USInt	0
• Reserved	Int	0
• ProfibusStationNumber	Int	35 *
• Reserved2	Int	0

* 35 as an example from the possible range 1...126 (127 is reserved for broadcast.)

3.4 Configuration of the extended LSAP area

Using LSAPs of the CM for FDL

Each FDL connection requires the configuration of an LSAP for the two end points (Link ServiceAccessPoint).

For FDL connections of the CM, you can configure an extended LSAP area if you enable the option "Enable LSAP reservation for FDL". For the procedure, see below.

- Option disabled

The standard LSAPs 2..32 can be used for all FDL connection types.

- Option enabled

You can reserve selected LSAPs for FDL connections.

The reserved LSAPs also apply to programmed connections.

The following areas apply to the different connection types:

- Specified/unspecified: 2..33
- Unspecified free layer 2 connections: 1..53, 55..56
- Broadcast/multicast as DP master with master system: 1..53, 55..56
- Broadcast/multicast as DP master without master system: 1..53, 55..56
- Broadcast/multicast as DP slave: 1..48, 54

LSAP 63 is permanently reserved for broadcast reception.

Requirements for the LSAP reservation

- CM 1542-5 with firmware version V2.0.20 or higher
- STEP 7 Professional V15.1 Update 2

Preparation of existing projects

If you want to use the function in an existing STEP 7 project up to V15.1, do the following:

1. Load the firmware version mentioned above into the respective CMs.
2. Update your version of STEP 7 to the version mentioned above or a higher version.
3. Open your STEP 7 project.
4. Select a CM in which you have loaded the current firmware.
5. Select the "General" parameter group and click on "Update module description".

If you use several identical CMs in your project, you have the following choice:

- Update only the selected CM
- Update all CM of this type in the project

Update the CM(s) according to one of these two options.

Reservation of the LSAPs

1. Select the parameter group "PROFIBUS interface > FDL-LSAP configuration" in an updated CM.

The table of LSAPs is disabled by default. Only the standard LSAPs 2..32 can be used for FDL connections.

2. Select the option "Enable LSAP reservation for FDL".

The individual LSAPs of the table can be enabled. You can reserve LSAPs for FDL connections in the above areas.

FDL: Receiving data in CM via programmed layer 2 connection

Programmed connections are not configured on the modules. Connection establishment works dynamically via a block.

Proceed as follows to receive data from multiple PROFIBUS nodes and remoteLSAPs:

1. Open the program editor of the station.

The "Instructions" task card opens.

2. Create a "TCON" block to establish the FDL connection:

Instructions > Communication > Open user communication > Others > TCON

3. Create a global data block for the connection description of the FDL connection.

- In the global data block, create a variable of the data type "TCON_FDL".

To do this, enter "TCON_FDL" in the data type field.

The connection description for an FDL connection is created automatically.

CONNECT	TCON_FDL	
InterfacelId	HW_ANY	277
ID	CONN_OUC	16#1BF
ConnectionType	Byte	16#15
ActiveEstablished	Bool	false
ServiceId	Byte	16#0
RemotePAddress	Byte	255
LocalPAddress	Byte	4
RemoteLSAP	Byte	255
LocalLSAP	Byte	3

Figure 3-1 Parameters of the TCON_FDL variable in the connection description DB

The connection type ("ConnectionType" variable) for FDL is "16#15".

- Use the hardware identifier of the CM for "InterfacelD".
 - Under "ID", assign a connection ID that has not been used yet.
 - Enter the local PROFIBUS address and the local LSAP:
 - LocalPAddress: Local PROFIBUS address
 - LocalLSAP: Local LSAP
 - Configure "RemotePAddress" with 255.
 - Configure "RemoteLSAP" with 255.
- In the program editor, interconnect the parameter "CONNECT" of the block "TCON" with the variable of the FDL connection ("TCON_FDL" data type) of the connection description DB.

FDL: Receiving data via "TRCV / TURCV" blocks

- Open the program editor of the station.
The "Instructions" task card opens.
- To receive the data, create a "TRCV" or "TURCV" block:
Instructions > Communication > Open user communication > Others > TRCV / TURCV
- Create a global data block for the connection description of the FDL connection.
- In the global data block, create a variable of the data type "TCON_FDL".
To do this, enter "TCON_FDL" in the data type field.
The connection description for an FDL connection is created automatically.
The connection type ("ConnectionType" variable) for FDL is "16#15".
 - Use the hardware identifier of the CM for "InterfacelD".
 - Assign the connection ID used in "TCON" under "ID".
 - Configure "RemotePAddress" with 255.
 - Configure "RemoteLSAP" with 255.

TRCV

- Use the same connection ID as previously configured in "TCON".

Please note:

The payload received with this block does not contain the "RemotePAddress" and "RemoteLSAP" parameters. Therefore, these parameters cannot be evaluated.

TURCV

- Use the same connection ID as previously configured in "TCON".

Please note:

The payload received with this block does not contain the "RemotePAddress" and "RemoteLSAP" parameters.

However, this header data of the receive telegram is entered in the following block parameters of the "Parameters" block of the "TURCV" block:

- Addr.RemotePAddress
- Addr.Local PAddress
- Addr.RemoteLSAP
- Addr.LocalLSAP

This means that the header data of the receive telegram can be processed by the program.

5. In the program editor, interconnect the parameter "ADDR" of the block "TURCV" with the variable of the FDL connection ("TCON_FDL" data type) of the connection description DB.

Note:

The "TRCV_C" block can also be used for connection establishment and sending.

FDL: Sending data via free layer 2 connection

Free layer 2 connections are not configured at the modules. Connection establishment works dynamically via a block.

Proceed as follows to send data to different PROFIBUS nodes and remoteLSAPs:

Connection establishment via TCON

1. Open the program editor of the station.
The "Instructions" task card opens.
2. Create a "TCON" block to establish a free layer 2 connection:
Instructions > Communication > Open user communication > Others > TCON
3. Create a global data block for the connection description of the FDL connection.

4. In the global data block, create a variable of the data type "TCON_FDL".

To do this, enter "TCON_FDL" in the data type field.

The connection description for an FDL connection is created automatically.

The connection type ("ConnectionType" variable) for FDL is "16#15".

- Use the hardware identifier of the CM for "InterfaceID".
- Under "ID", assign a connection ID that has not been used yet.
- Enter the local PROFIBUS address and the local LSAP:
 - LocalPBAAddress
 - LocalLSAP

Any RemoteLSAP and RemotePB address can be used; they are immaterial for connection establishment when sending. They are configured in the "TUSEND" block.

5. In the program editor, interconnect the parameter "CONNECT" of the "TCON" with the variable of the FDL connection ("TCON_FDL" data type) of the connection description DB.

Sending data via TUSEND

1. Open the program editor of the station.

The "Instructions" task card opens.

2. Create a "TUSEND" block for sending data:

Instructions > Communication > Open user communication > Others > TUSEND

3. Create a global data block for the connection description of the FDL connection.

4. In the global data block, create a variable of the data type "TCON_FDL".

To do this, enter "TCON_FDL" in the data type field.

The connection description for an FDL connection is created automatically.

The connection type ("ConnectionType" variable) for FDL is "16#15".

- Use the hardware identifier of the CM for "InterfaceID".
- Assign the connection ID used in "TCON" under "ID".
- Enter the corresponding values for the following parameters:
 - Addr.RemotePBAAddress
 - Addr.Local PBAAddress
 - Addr.RemoteLSAP
 - Addr.LocalLSAP

These parameters are used for sending. The parameters of the "TCON" are not relevant. To send data to a different PROFIBUS address or a different LSAP, change them in "TUSEND". The "TCON" connection can remain open during this process; this means that changes are possible without having to establish a new connection.

5. In the program editor, interconnect the parameter "ADDR" of the block "TUSEND" with the variable of the FDL connection ("TCON_FDL" data type) of the connection description DB.

Note:


The "TSEND_C" block can also be used for connection establishment and sending.

Configuration in the "Network data" editor

Proceed as follows to assign the reserved LSAPs to a connection:

1. Open the network view of the project.

On the right you will find the collapsed "Network data" editor.

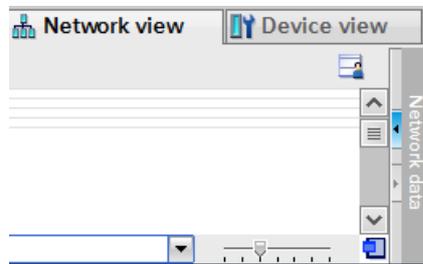

2. Open the "Network data" editor using the arrow symbol.

The editor is displayed with several tabs, on the left the "Network overview" tab.

3. Select the desired FDL connection in the "Connections" tab.
4. Select the "Address details" parameter group in the connection properties.
5. Select one of the LSAPs reserved by the CMs for each end point from the "LSAP" drop-down list.

Ensure that the respective LSAPs for the CM and for the connection configuration in the "Network data" editor match. If you use a LSAP in the "Network data" editor which is not reserved for the CM, no connection is established.

3.5 Program blocks for communication and distributed I/O

Program blocks (instructions) for communications services

For communications services, there are preprogrammed program blocks (instructions) available as the interface in your STEP 7 user program.

Table 3- 1 Instructions for PROFIBUS DP

System blocks and system functions	Meaning when used with CM
DPSYC_FR	DP slaves synchronize / freeze inputs (SYNC/FREEZE instruction)
DPNRM_DG	Reading the diagnostics data of a DP slave
DP_TOPOL	Detecting the topology for the DP master system
WRREC	Writing the data record of a DP slave
RDREC	Reading the data record of a DP slave
GETIO	Reading the process image of a DP standard slave

System blocks and system functions	Meaning when used with CM
SETIO	Transferring the process image of a DP standard slave
GETIO_PART	Reading the process image partition of a DP standard slave
SETIO_PART	Transferring the process image partition of a DP standard slave
D_ACT_DP	Disable / enable DP slaves
DPRD_DAT	Reading consistent data of a DP standard slave (user data)
DPWR_DAT	Writing consistent data of a DP standard slave
RALRM	Event-driven reading of interrupt information (diagnostics, pull/plug, hardware interrupt) and DPV1-specific interrupts (update, status, vendor-specific interrupt)

Refer to the documentation of the program blocks in the information system of STEP 7.

Calling program blocks (instructions) for distributed I/O

Several calls are necessary for the instructions of the distributed I/O.

The time required to process the job depends on load, round-trip time and transmission speed. If these instructions are called in a loop within one cycle, the cycle time could be exceeded.

Exception: Only one call is required for RALRM "receive alarm".

Program blocks for DPV1 according to the PNO standard (PROFIBUS user organization):

- RDREC
"Read data record from a DP slave" corresponds to SFC59 in terms of function
- WRREC
"Write data record to a DP slave" corresponds to SFC58 in terms of function
- RALRM
"Read interrupt information from a DP slave" - call in an interrupt OB

3.6 Program blocks for FDL

Program blocks of Open User Communication (OUC) for FDL

To use the bus access protocol FDL (Fieldbus Data Link) use the program blocks of Open User Communication (OUC). For this, create a suitable program blocks. You will find details on the program blocks in the information system of STEP 7.

The end point of an FDL connection is an S7-1500 CPU with communications module CM 1542-5. For the required firmware versions of the modules, see section Program blocks (Page 17).

Supported program blocks for OUC

The following instructions in the specified minimum version are available for programming Open User Communication to use FDL:

- **TSEND_C V3.1 / TRCV_C V3.1**

Compact blocks for connection establishment and for sending and receiving data via a configured or programmed connection

As an alternative:

- **TCON V4.0 / TDISCON V2.1**

Connection establishment / connection termination

- **TSEND V4.0 / TRCV V4.0**

Sending or receiving data over a configured connection

- **TUSEND V4.0 / TURCV V4.0**

Sending or receiving data over a configured connection

With these blocks the connection parameters can be changed at runtime.

The program block can be found in STEP 7 in the "Instructions > Communication > Open User Communication" window.

Connection description of the type "TCON_FDL"

To reference the connection description, the blocks "TCON" and "TSEND_C / TRCV_C" use the CONNECT parameter. The connection description is stored in a data block whose structure is specified by the system data type (SDT) "TCON_FDL".

Creating an SDT for the data block

You create the SDT required for every connection description as a data block. You generate the SDT type in STEP 7 by entering the name ("TCON_FDL") in the "Data type" box manually in the declaration table of block instead of selecting an entry from the "Data type" drop-down list. The SDT is then created with its preset parameters.

For FDL the following SDTs are used:

- **TCON_FDL**

For transferring data via FDL

You will find the description of TCON_FDL in the STEP 7 information system (keyword "TCON_FDL").

Programmed connection establishment or termination with TCON / TDISCON

Connections are established using the program block TCON. Note that a separate program block TCON must be called for each connection.

A separate connection must be established for each communications partner even if identical blocks of data are being sent.

After a successful transfer of the data, a connection can be terminated. A connection is also terminated by calling "TDISCON".

Note

Connection abort

If an existing connection is aborted by the communications partner or due to disturbances on the network, the connection must also be terminated by calling TDISCON. Make sure that you take this into account in your programming.

Configured and programmed FDL connections

The following types of FDL connections can be established:

- **Configured FDL connections**

These connection types are configured in the STEP 7 program editor, see below. TSEND / TRCV or TUSEND / TURCV are used as the blocks.

- Specified connection
Fully configured connection between two partners
- Unspecified connection
Configured connection with an unspecified partner
- Broadcast connection
Connection with all connected partners
- Multicast connection
Connection with several defined partners

- **Programmed FDL connections**

These connection types cannot be configured in the STEP 7 program editor. Instead for these connection types either calling TCON along with TSEND/TRCV or TUSEND/TURCV is required or TSEND_C / TRCV_C.

- Specified connection
Fully configured connection between two partners
- Unspecified connection
Configured connection with an unspecified partner
- Unspecified Layer 2 connection
Programmed FDL-Verbindung with an unspecified partner with free layer 2 access
- Broadcast connection
Connection to all connected partners
- Multicast connection
Connection to several defined partners

The specific settings for the individual connection types are explained in the STEP 7 information system in TCON_FDL.

Setting up a configured FDL connection using TSEND_C

Proceed as follows to set up a configured FDL connection in STEP 7:

1. Create a TSEND_C instruction in the program editor.
You will be prompted to create the relevant data block.
2. Select the TSEND_C instruction and navigate in the Inspector window to "Properties" > "Configuration" > parameter group "Connection parameters".
3. In type of configuration, select "Use configured connection"
4. In connection type, select "FDL".
5. Under End point, select the partner end point. Use one of the two following partner end points.
 - CPU S7-1500 with CM 1542-5
 - Unspecified
6. Select the following interfaces under Interfaces:
 - Local: PROFIBUS interface of CM 1542-5
 - Specified partner: PROFIBUS interface of CM 1542-5
7. Select the setting <new> under Connection data.

This creates a new connection between the two partners.

The figure below shows a fully configured FDL connection in STEP 7.

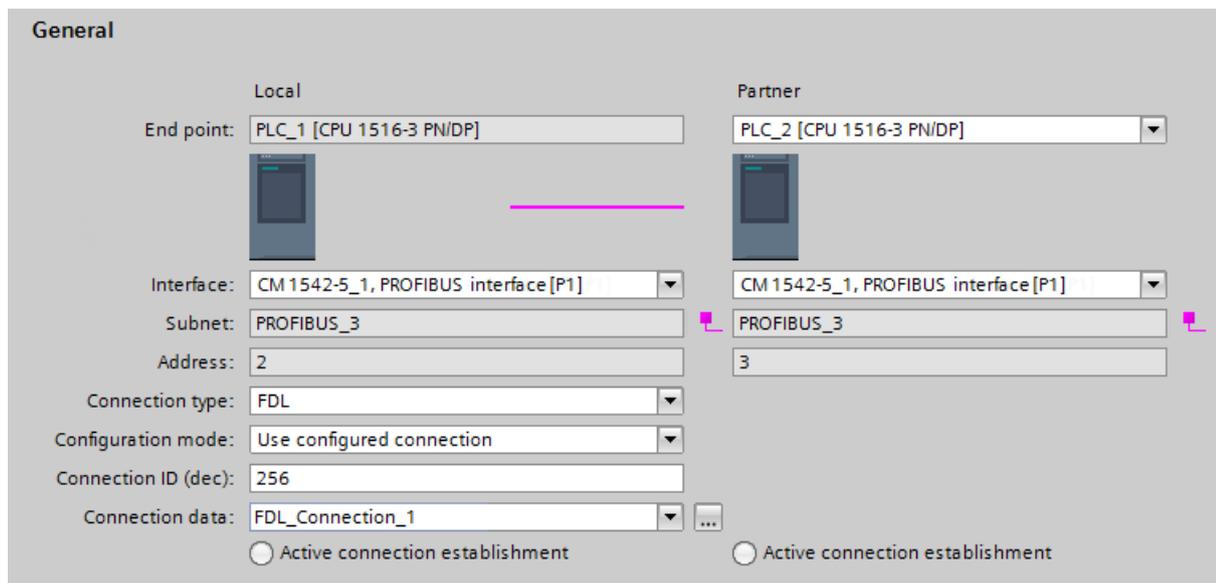


Figure 3-2 Configuring the FDL connection

8. Configure the further block parameters.

Setting up a programmed FDL connection using TSEND_C

To set up a programmed FDL connection in STEP 7, follow the steps below:

1. Create a TSEND_C instruction in the program editor.
You will be prompted to create the relevant data block.
2. Program the block parameters.

Interconnect the CONNECT parameter of the TCON instruction with the previously created variable "FDL_Connection" of the data type TCON_FDL.

The FDL connection is established and used for sending and receiving data.

Setting up an FDL connection in the user program

For programmed communication via FDL, you need to create and program the data block of the system data type TCON_FDL yourself and call it directly at the instruction. Follow these steps:

1. Create a global data block in the project tree.
2. In the global data block create a variable of the data type TCON_FDL.

The following example shows the global data block "FDL_connection" with the variable "FDL_connection" of the data type TCON_FDL.

FDL_connection									
	Name	Data type	Start value	R...	A...	W...	V...	Comment	
1	Static			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
2	FDL_connection	TCON_FDL		<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>		
3	Interfaceld	HW_ANY	0	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	HW identifier of PB interface submodule	
4	ID	CONN_OUC	16#0	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	connection reference / identifier	
5	ConnectionType	Byte	16#15	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	type of connection: 21= FDL connection	
6	ActiveEstablished	Bool	false	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	active/passive connection establishment	
7	ServiceId	Byte	16#0	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	service id: 0 – default, 1 – SDA, 2 – SDN	
8	RemotePBAddress	Byte	16#0	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	remote Profibus partner address	
9	LocalPBAddress	Byte	16#0	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	local Profibus partner address	
10	RemoteLSAP	Byte	16#0	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	remote PB link-layer service access point	
11	LocalLSAP	Byte	16#0	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	local PB link-layer service access point	

Figure 3-3 Programming an FDL connection

3. In the data block program the parameters of the FDL cconnection, e.g. the PROFIBUS addresses.

The type of connection is specified with the "ServiceId" parameter. You will find details in the STEP 7 information system.

4. Create a TCON instruction in the program editor.
5. Interconnect the CONNECT parameter of the TCON instruction with the previously created variable "FDL_Connection" of the data type TCON_FDL.

In the example below, the CONNECT parameter of the TCON instruction is interconnected with the tag "FDL_Connection" (data type TCON_FDL).

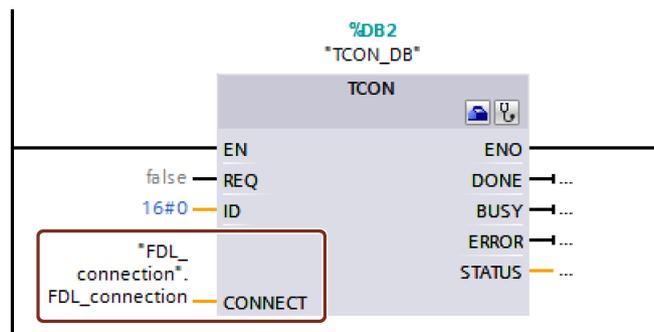


Figure 3-4 Example: TCON instruction for FDL connection

The parameters of TCON_FDL

You will find information on the parameters of TCON_FDL in the STEP 7 information system.

Note the special features of the parameters "RemoteSAP" and "RemotePBAAddress":

- **RemoteSAP = 255, RemotePBAAddress = 255**
If you program the value 255 both for RemoteSAP and RemotePBAAddress, data transfer from every partner will be accepted regardless of its SAP.
- **RemoteSAP = 255, RemotePBAAddress = specified**
If you program the value 255 for RemoteSAP and assign a specified value for RemotePBAAddress, data transfer from the specified partner via each of its programmed SAPs will be accepted via this connection.
- **RemoteSAP = specified, RemotePBAAddress = 255**
If you program a specific value for RemoteSAP and assign the value 255 for RemotePBAAddress, data transfer from every partner with the specified address will be accepted via this connection.

Diagnostics and upkeep

4.1 Diagnostics

4.1.1 Diagnostics options

Diagnostics options

You have the following diagnostics options available for the module:

- The LEDs of the module

Diagnostics using the LEDs is the first means of narrowing down errors/faults. To narrow the error/fault down even further, evaluate the message on the display of the S7-1500 CPU. If errors/faults occur, you can also identify them using the Web server or by evaluating the diagnostics buffer of the CPU. The diagnostics buffer of the CPU contains plain language information about the error/fault that has occurred. The diagnostics buffer is accessible via STEP 7, the display and the Web server.

For information on the LED displays, refer to the section LEDs (Page 18).

- STEP 7: The "Diagnostics" tab in the Inspector window

Here, you can obtain the following information on the selected module:

- Entries in the diagnostics buffer of the CPU
- Information on the online status of the module

- STEP 7: Diagnostics functions in the "Online > Online and diagnostics" menu

Here, you can obtain static information on the selected module:

- General information on the module
- Diagnostics status
- Information on the PROFIBUS interface

You can obtain further information on the diagnostics functions of STEP 7 in the STEP 7 online help.

- DP diagnostics

The DP diagnostics of the CM is described below.

The evaluation of diagnostics data records requested by the DP master and the diagnostics interrupts or diagnostics alarms of the DP slaves is handled in the user program of the DP master station.

4.1.2 DP slave diagnostics

DP-V1 slave: Diagnostics interrupt

The diagnostics data is transferred as a diagnostics interrupt. Diagnostics interrupts must be acknowledged by the DP master.

Supported diagnostics functions

The CM 1542-5 supports the following blocks of DP diagnostics:

- Standard diagnostics (6 bytes)
- Identifier-related diagnostics (2 to 17 bytes), depending on the number of configured transfer areas
- Module status (5 to 35 bytes), depending on the number of configured transfer areas
- If it exists: Diagnostics interrupt (8 bytes)

User program (DP master)

To read out the diagnostics data of the DP slave (DP single diagnostics), use the "DPNRM_DG" instruction on the DP master.

Diagnostics interrupts of DP-V1 slaves are evaluated in the user program of the master using the "RALRM" instruction.

You will find the required parameter assignment for the instructions in the STEP 7 online help.

Below, there is an overview of the structure of the diagnostics data.

Overview of standard diagnostics

Standard diagnostics	
Byte	Meaning
0	Station status 1
1	Station status 2
2	Station status 3
3	Master address
4...5	Vendor ID of the slave

Overview of device-specific diagnostics

The device-specific diagnostics data depends on the protocol variant operating on the DP slave:

DP-V1 slave

Table 4- 1 Overview of device-specific diagnostics of the CM with DP-V1 slaves

Device-specific diagnostics	
Byte	Meaning
0	Header
1	Variant Interrupt type Variant Status type
2	Slot number
3	Variant Interrupt specifier Variant Status specifier
4...62	Module-specific diagnostics data

4.1.3 Standard diagnostics

The coding of the standard diagnostics bytes is explained below.

Byte 0: Station status 1

Table 4- 2 Structure of station status byte 1

Bit no.	Name	Explanation
7	Master_Lock	The DP slave was assigned parameters by a different DP master. The DP slave can only be read by the configured productive DP master. This bit is set by the DP master when its bus address differs from the configured address.
6	Parameter_Fault	The last received parameter assignment frame was bad or not permitted. The DP slave sets this bit. Solution: Check the parameter settings for illegal parameters.
5	Invalid_Slave_Response	This bit is set by the DP master when no plausible response has been received from the DP slave.
4	Service_Not_Supported	This bit is set by the DP master when the master has requested a function that is not supported by the DP slave. Solution: Change the parameter setting to disable the function on the master.
3	Ext_Diag	This bit is set by the slave. <ul style="list-style-type: none"> Bit =1: There is diagnostics data in the slave-specific diagnostics area. The diagnostics data can be evaluated in the user program of the master. Bit =0: There may be status information in the slave-specific diagnostics area. The status information can be evaluated in the user program of the master.
2	Slave_Config_Check_Fault	The configuration data sent by the DP master is rejected by the DP slave. Cause: Configuration error. Solution: Change configuration.

4.1 Diagnostics

Bit no.	Name	Explanation
1	Station_Not_Ready	The DP slave is not ready for productive data exchange. This is a temporary status that cannot be influenced by the DP master.
0	Station_Non_Existent	The DP slave is not reacting on the bus. This bit is set by the DP master 1 (the slave sets this bit permanently to 0). If the bit is set, the diagnostic bits have the state of the last diagnostics alarm or the initial value.

Byte 1: Station status 2

Table 4-3 Structure of station status byte 2

Bit no.	Name	Explanation
7	Deactivated	The DP slave was identified as being not active in the local parameter record and it is not polled cyclically.
6	Reserved	- reserved -
5	Sync_Mode	The DP slave is in SYNC mode. The bit is set by the slave.
4	Freeze_Mode	The DP slave is in FREEZE mode. The bit is set by the slave.
3	Watchdog_On	Watchdog monitoring is active on the DP slave. The bit is set by the slave.
2	Status_From_Slave	Bit =1: The diagnostics information comes from the DP slave. The bit is set permanently to 1 by the slave.
1	Static_Diag	Static diagnostics If the DP slave sets this bit, the DP master must fetch diagnostics data from the DP slave until the DP slave resets the bit. The DP slave sets this bit, for example when it is not capable of data transfer.
0	Parameter_Request	The DP slave sets this bit when it needs to have new parameters assigned and be reconfigured. If bit 0 and bit 1 are both set, bit 0 has the higher priority.

Byte 2: Station status 3

Table 4-4 Structure of station status byte 3

Bit no.	Name	Explanation
7	Ext_Data_Overflow	If this bit is set, there is more diagnostics information available than indicated in the diagnostics data. This data cannot be displayed.
6...0	Reserved	- reserved -

Byte 3: Master address

The address of the DP master that assigned parameters to this DP slave is entered in the "Master_Add" byte.

If the DP slave did not have parameters assigned to it by any DP master, the DP slave sets the address 255 in this byte.

Bytes 4 and 5: Vendor ID of the slave ("Ident_Number")

The vendor ID ("Ident_Number") for the DP slave type is entered in bytes 4 and 5. This identifier can be used to identify the slave.

The more significant part of the value is in byte 5.

4.1.4 Device-specific diagnostics in DP-V1

There are two variants of device-specific diagnostics with DP-V1 slaves:

- Interrupt type
- Status type

The two variants differ from each other in the coding of byte 1, bit 7 of the device-specific diagnostics data. The difference is component-specific.

Byte 0: Header

The two most significant bits have the value 00. This identifies the "module-specific diagnostics data" field (see bytes 4... 62) as a whole.

The remaining six bits indicate the length of the data field including byte 0.

Byte 1: Variant "Interrupt type"

Table 4-5 Structure of byte 1 of the device-specific diagnostics (variant "interrupt type")

Bit no.	Meaning	
7	Value	Meaning
	0	Interrupt
6...0	Alarm_Type	
	0	- reserved -
	1	Diagnostics interrupt
	2	Hardware interrupt
	3	Pull interrupt
	4	Plug interrupt
	5	Status interrupt
	6	Update interrupt
	7...31	- reserved -
	32...126	Vendor-specific
127	- reserved -	

If status interrupts are received in quick succession, older status interrupts may be overwritten by newer interrupts.

Byte 1: Variant "Status type"

Table 4-6 Structure of byte 1 of the device-specific diagnostics (variant "status type")

Bit no.	Meaning	
7	Value	Meaning
	1	Status information
6...0	Status_Type	
	0	- reserved -
	1	Status information
	2	Modul_Status (see also bytes 4...62)
	3...31	- reserved -
	32...126	Vendor-specific
127	- reserved -	

Byte 2: Slot number

Slot number (1...n) of the slave module

0 is the placeholder for the entire device.

Byte 3: Variant "Interrupt specifier"

Table 4-7 Structure of byte 3 of the device-specific diagnostics (variant "interrupt specifier")

Bit no.	Meaning	
7...3	Seq_No	Unique identifier of an interrupt alarm
2	Add_Ack	If this bit is set, the DP-V1 master is indicating that this interrupt expects an acknowledgement in the form of a WRITE job.
1...0	Alarm_Specifier	
	0	No further distinction
	1	Interrupt appears, slot disrupted The slot generates an interrupt due to an error.
	2	Interrupt disappears, slot OK The slot generates the interrupt and indicates that it has no further errors.
3	Interrupt disappears, slot still disrupted The slot generates an interrupt and indicates that it has further errors.	

Byte 3: Variant "Status specifier"

Table 4- 8 Structure of byte 3 of the device-specific diagnostics (variant "status specifier")

Bit no.	Meaning	
7...2	- reserved -	
1...0	Status_Specifier	
	0	No further distinction
	1	Status appears
	2	Status disappears
	3	- reserved -

Bytes 4...62: Module-specific diagnostics: General coding

This byte contains data with module-specific information that is described in the relevant module documentation. The relevant module is identified by the slot (byte 2).

Bytes 4...62: Module-specific diagnostics with "status type" and "module status"

With the variant "status type" of the device-specific diagnostics of DP-V1 slaves (see byte 1, bit 7) and the setting "Modul_Status" (see byte 1, bits 0...6), there are two status bits here for each slot (= module). Bits not required are set to 0.

Table 4- 9 Structure of the bytes for module-specific diagnostics data

Byte	Bit assignment							
	7	6	5	4	3	2	1	0
4	Module status 4		Module status 3		Module status 2		Module status 1	
5	Module status 8		Module status 7		Module status 6		Module status 5	
...	
62	Module status 236		Module status 235		Module status 234		Module status 233	

The status bits are coded as follows:

Table 4- 10 Meaning of the values of the status bits

Value	Meaning
00	Data valid
01	Data invalid - error (for example short-circuit)
10	Data invalid - wrong module
11	Data invalid - no module plugged in

4.1.5 DP diagnostics frames when the CPU is in STOP

DP diagnostics frames when the CPU is in STOP

All diagnostics frames from DPV0 standard slaves and all DP interrupt frames from DP-S7/DPV1 standard slaves arriving when the CPU is in STOP are forwarded to the CPU. During module startup, the diagnostics frames must then be evaluated by a suitable user program.

4.2 Maintenance



! CAUTION

Hot surfaces

Risk of burns during maintenance work on parts with a surface temperature above 70 °C (158 °F).

- Take appropriate protective measures, for example, wear protective gloves.
- Once maintenance work is complete, restore the touch protection measures.

! WARNING

Cleaning the housing

- **In hazardous areas**
Only clean the outer parts of the housing with a damp, but not wet, cloth.
- **In non-hazardous areas**
Only clean the outer parts of the housing with a dry cloth.

Do not use any liquids or solvents.

! WARNING

Unauthorized repair of devices in explosion-proof design

Risk of explosion in hazardous areas

- Repair work may only be performed by personnel authorized by Siemens.

4.2.1 Update firmware

New firmware versions of the module

If a new firmware version is available for the communications module, you will find this on the Internet pages of Siemens Industry Online Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15671/dl>)

Firmware files have the file format *.upd. Save the file on your PC.

There are different ways of loading a new firmware file into the module:

- Online functions of STEP 7 via Ethernet
- Loading the firmware file into the CPU from an SD card

Note

SD card only for firmware file

For the firmware file, you need a SIMATIC SD memory card, for example (article numbers):

- 6AV6671-8XB10-0AX1
- 6AV2181-8XP00-0AX0
- 6AV2181-8AQ10-0AX0

The firmware update card may not contain any other files. An SD card with configuration data cannot be used.

Scenarios

It is not possible to upgrade the CM with article number 6GK7542-5DX00-0XE0 to firmware version V3.

The procedure for updating earlier versions differs depending on the installed and the desired firmware version:

- **V2.x → V2.y**

It is possible to upgrade from a version V2.x to a higher version V2.y in a single step.

- **V1.x → V2.x**

If you are using a CM with firmware version V1.x and wish to upgrade to a version > V2.0.15, you need to do this in two steps:

- In the first step, you need to upgrade the firmware to version V2.0.15.

You can find this at the following address:

Link: (<https://support.industry.siemens.com/cs/ww/en/view/109742135>)

- You can then upgrade the CM to the desired firmware version > V2.0.15.

- **V2.x → V1.x**

If you purchase a module with pre-installed firmware version V2.x but wish to operate it with an older firmware V1.x, this is not directly possible.

In this case, contact Siemens Customer Support.

Loading the firmware with the online functions of STEP 7 via Ethernet

Note

Duration of the firmware update

Downloading a new firmware file can take several minutes.

Always wait until the completion of the firmware update can be recognized from the LEDs (see below).

Requirements:

- The CPU of the station is accessible via Ethernet.
- The engineering station and the CPU are located in the same subnet.
- The new firmware file is stored on your engineering station.
- The engineering station is connected to the network.
- The relevant STEP 7 project is open on the engineering station.

Procedure:

1. Select the station that you want to update with a new firmware.
2. Enable the online functions using the "Connect online" icon.
3. In the "Connect online" dialog, select the Ethernet interface in the "Type of PG/PC interface" list box.
4. Select the CPU of the station.
5. Click on "Start search" to search for the module in the network and to specify the connection path.

When the module is found it is displayed in the table.

6. Connect using the "Connect" button.
The "Connect online" wizard guides you through the remaining steps in installation.
7. Select the CPU in the network view and select the "Online & Diagnostics" shortcut menu (right-click).
8. In the navigation panel of the Online & Diagnostics view, select the entry "Functions > Firmware update".
9. Using the "Browse" button (parameter group "Firmware loader") search for the new firmware file in the file system of the engineering station.
10. Start to download the firmware with the "Start update" button when the correct version of the signed firmware is displayed in the "Status" output box.

You will find further information on the online functions in the STEP 7 information system.

Loading the firmware via the SD card

You can find detailed information on using an SD card in the S7-1500 System Manual, see Preface (Page 3), Documentation guide.

Requirements:

- You have copied the new firmware file from your PC to the SD card using a suitable card reader.
- Optional: You have saved a backup file of the currently used firmware file.

Procedure:

1. Set the operating mode switch of the CPU to STOP.
Ensure that no write functions (e.g. online or test functions) are active in the STOP state.
2. Remove the SIMATIC Memory Card with the configuration data from the slot of the CPU.
3. Insert the SD card with the firmware file in the card slot of the CPU.
The firmware update starts shortly after the card has been inserted. The display shows the following: "STOP - FW UPDATE"
If errors occur, appropriate messages are displayed.
After completing the firmware update, the display shows a result page.
A successful firmware update can be recognized by the following LED pattern from the CPU:
 - RUN lights up yellow.
 - MAINT flashing yellow.For the LED pattern of the module during startup, refer to section LEDs (Page 18).
4. Remove the SD card and insert the SIMATIC Memory Card again.
5. Set the operating mode switch of the CPU to RUN.
The module uses the new firmware during startup.

4.2.2 Module replacement

General procedure

The configuration data of the module is stored on the CPU. This makes it possible to replace this module with a module of the same type (identical article number) without a programming device.

If you want to exchange a module with the article number of the predecessor module for a newer module with the current article number (same module name), the data of the older module is adopted when the newer module starts.

Note**Note the power loss**

When replacing an older module with a new module, note the power loss of the new module, see section Technical specifications (Page 55).

Check whether the power supply of the station is still ensured with the new module.

Technical specifications

5.1 Technical specifications of the CM (6GK7542-5DX00-0XE0)

You will find the product functions in the section Configuration limits and performance data (Page 13).

In the preface, "Guide to documentation" section, note the information in the SIMATIC S7-1500 System Manual (Page 3).

In addition to the information in the system description, the following technical specifications apply to the module.

Technical specifications - (6GK7542-5DX00-0XE0)		
Product name	CM 1542-5	
Article number	6GK7 542-5DX00-0XE0	
Connection to PROFIBUS		
• Number	1 x PROFIBUS interface	
• Design	D-sub socket (RS-485)	
• Transmission speed	9.6 kbps, 19.2 kbps, 45.45 kbps, 93.75 kbps, 187.5 kbps, 500 kbps, 1.5 Mbps, 3 Mbps, 6 Mbps, 12 Mbps	
Electrical data		
Power supply		
• Via S7-1500 backplane bus	15 V	
Current consumption (typical)		
• From backplane bus	200 mA	
Effective power loss (typical)	3 W	
Overvoltage category according to IEC / EN 60664-1	Category II	
Permissible ambient conditions		
Ambient temperature *	During operation with the rack installed horizontally	0 °C ... +60 °C
	During operation with the rack installed vertically	0 °C ... +40 °C
	During storage	-40 °C ... +70 °C
	During transportation	-40 °C ... +70 °C
Relative humidity	During operation	≤ 95 % at 30 °C, no condensation
Permitted contaminant concentration	Corrosive gas test according to ISA-S71.04 severity level G1, G2, G3	
Design, dimensions and weight		
Module format	Compact module S7-1500, single width	
Degree of protection	IP20	
Weight	400 g	
Dimensions (W x H x D)	35 x 147 x 129 mm	
Mounting type	Mounting in S7-1500 rack, S7-1500 mounting bar installation	

* Also read the information in the Ambient temperature (Page 57) section.

5.2 Technical specifications of the CM (6GK7542-5DX10-0XE0)

You will find the product functions in the section Configuration limits and performance data (Page 13).

In the preface, "Guide to documentation" section, note the information in the SIMATIC S7-1500 System Manual (Page 3).

In addition to the information in the system description, the following technical specifications apply to the module.

Technical specifications - 6GK7542-5DX10-0XE0		
Product name	CM 1542-5	
Article number	6GK7 542-5DX10-0XE0	
Connection to PROFIBUS		
• Quantity	1 x PROFIBUS interface	
• Design	D-sub socket (RS485)	
• Transmission speed	9.6 kbps, 19.2 kbps, 45.45 kbps, 93.75 kbps, 187.5 kbps, 500 kbps, 1.5 Mbps, 3 Mbps, 6 Mbps, 12 Mbps	
Electrical data		
Power supply		
• Via S7-1500 backplane bus	15 V	
Current consumption (typical)		
• From backplane bus	200 mA	
Effective power loss (typical)	3 W	
Overvoltage category according to IEC / EN 60664-1	Category II	
Permissible ambient conditions		
Ambient temperature *	During operation with the rack installed horizontally	-25 °C ... +60 °C, without condensation or ice
	During operation with the rack installed vertically	-25 °C ... +40 °C, without condensation or ice
	During storage	-40 °C ... +70 °C
	During transportation	-40 °C ... +70 °C
Relative humidity	During operation	≤ 95 % at 30 °C, no condensation
Permitted contaminant concentration	Corrosive gas test according to ISA-S71.04 severity level G1, G2, G3	
Design, dimensions and weight		
Module format	Compact module S7-1500, single width	
Degree of protection	IP20	
Weight	250 g	
Dimensions (W x H x D)	35 x 147 x 129 mm	
Mounting type	Mounting in S7-1500 rack, S7-1500 mounting bar installation	


* Also read the information in the Ambient temperature (Page 57) section.

5.3 PROFIBUS interface terminal assignment

PROFIBUS interface

The table below shows the terminal assignment of the PROFIBUS interface. The assignment corresponds to the standard assignment of RS485 interface.

Table 5- 1 Terminal assignment PROFIBUS interface

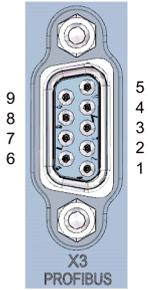View	Signal name	Designation	
	1	-	
	2	-	
	3	RxD/TxD-P	Data line B
	4	RTS	Request To Send
	5	M5V2	Data reference potential (from station)
	6	P5V2	Supply plus (from station)
	7	-	-
	8	RxD/TxD-N	Data line A
	9	-	-

Note

No 24 V DC supply voltage

The PROFIBUS interface does not provide a 24 V DC power supply. I/O devices (for example, PC adapter 6ES7972-0CB20-0XA0) are therefore not operational on the interface.

5.4 Ambient temperature

Restrictions of the maximum specified ambient temperature

The maximum permissible temperatures of the module for altitudes up to 2000 m can be found above in the technical specifications.

When using the module at higher altitudes, the decrease in the cooling effect due to convection as a result of the lower air pressure must be taken into account. According to IEC 61010-2-201 CD2 2015, the temperature at altitudes > 2000 m must be reduced.

The following derating factors and maximum ambient temperatures apply.

Table 5- 2 Restrictions of the maximum permissible ambient temperature in relation to the installation altitude

Installation altitude (Height above mean sea level)	Derating factor ¹⁾	Maximum ambient temperature when the rack is mounted horizontally
-1000 m to 2000 m	1.00	60 °C
2000 m to 3000 m	0.93	56 °C
3000 m to 4000 m	0.86	52 °C
4000 m to 5000 m	0.78	47 °C

¹⁾ Basic value for applying the derating factor is the maximum permissible ambient temperature in °C for 2000 m.

Note

- The derating factors compensate for the decreasing cooling effect of air at higher altitudes due to lower density.
 - Linear interpolation between altitudes is permissible.
-

Approvals

Approvals issued

Note

Issued approvals on the type plate of the device

The specified approvals - with the exception of the certificates for shipbuilding - have only been obtained when there is a corresponding mark on the product. You can check which of the following approvals have been granted for your product by the markings on the type plate. The approvals for shipbuilding are an exception to this.

Certificates for shipbuilding and national approvals

The device certificates for shipbuilding and special national approvals can be found in Siemens Industry Online Support on the Internet:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15671/cert>)

Documents on the Internet

You will find the declarations of conformity listed below and certificates of the product on the Internet at the following address:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15671/cert>)

You can see the current versions of the standards in the relevant certificate, which you will find on the Internet at the address specified above.

Address for declarations of conformity

The EU and the UK declarations of conformity are available to all responsible authorities at:

Siemens Aktiengesellschaft
Digital Industries
P.O. Box 48 48
90026 Nuremberg
Germany

EU declaration of conformity



The device meets the requirements and safety objectives of the following EC directives and it complies with the harmonized European standards (EN) for programmable logic controllers which are published in the official documentation of the European Union.

- **2014/34/EU (ATEX explosion protection directive)**

Directive of the European Parliament and the Council of 26 February 2014 on the approximation of the laws of the member states concerning equipment and protective systems intended for use in potentially explosive atmospheres, official journal of the EU L96, 29/03/2014, pages. 309-356

- **2014/30/EU (EMC)**

EMC directive of the European Parliament and of the Council of 26 February 2014 on the approximation of the laws of the member states relating to electromagnetic compatibility; official journal of the EU L96, 29/03/2014, p. 79-106

- **2011/65/EU (RoHS)**

Directive of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment

UK Declaration of Conformity



Importer UK:

Siemens plc
Sir William Siemens House
Princess Road
Manchester
M20 2UR

The product meets the requirements of the following directives:

- UKEX Regulations

SI 2016/1107 The Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres Regulations 2016, and related amendments.

- EMC Regulations

SI 2016/1091 The Electromagnetic Compatibility Regulations 2016, and related amendments.

- RoHS Regulations

SI 2012/3032 The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, and related amendments.

ATEX / IECEx / UKEX / CCC-Ex

Observe the information in the "Use of subassemblies/modules in a Zone 2 Hazardous Area" document, which you will find here:

- On the documentation DVD supplied with the product, under:
"All documents" > "Use of subassemblies/modules in a Zone 2 Hazardous Area"
- On the Internet at the following address:
Link: (<https://support.industry.siemens.com/cs/ww/en/view/78381013>)

The conditions must be met for safe usage of the product according to the section Notes on use in hazardous areas according to ATEX / UKEX / IECEx / CCC-Ex (Page 22).

The product meets the explosion protection requirements outlined below.

IECEX

Classification: Ex ec IIC T4 Gc, Certificate no.: IECEx DEK 18.0019X

The product meets the requirements of the standards:

- IEC 60079-0 - Explosive atmospheres - Part 0: Equipment - General requirements
- IEC 60079-7 - Explosive Atmospheres - Part 7: Equipment protection by increased safety 'e'



ATEX

Classification: II 3 G Ex ec IIC T4 Gc, Certificate no.:DEKRA 18ATEX0027 X

The product meets the requirements of the standards:

- EN IEC 60079-0 - Explosive atmospheres - Part 0: Equipment - General requirements
- EN 60079-7 - Explosive Atmospheres - Part 7: Equipment protection by increased safety 'e'



UKEX

Classification: II 3 G Ex ec IIC T4 Gc, Certificate no.:DEKRA 21UKEX0003 X

The product meets the requirements of the standards:

- EN IEC 60079-0 - Explosive atmospheres - Part 0: Equipment - General requirements
- EN 60079-7 - Explosive Atmospheres - Part 7: Equipment protection by increased safety 'e'

Importer UK: Siemens plc (see above)



CCC-Ex

classification:Ex na IIC T4 Gc

The product meets the requirements of the following standards:

- GB 3836.1
Hazardous areas - Part 0: Equipment - General requirements
- GB 3836.3
Explosive atmospheres - Part 3: Equipment protection by increased safety "e"
- GB 3836.8
Explosive atmospheres - Part 15: Equipment protection by type of protection 'n'

EMC

The device meets the requirements of the following guidelines:

- EU directive 2014/30/EU "Electromagnetic Compatibility" (EMC directive)
- EMC Regulations SI 2016/1091 The Electromagnetic Compatibility Regulations 2016, and related amendments.

Applied standards:

- EN 61000-6-2
Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments
- EN 61000-6-4
Electromagnetic compatibility (EMC) - Part 6-4: Generic standards - Emission standard for industrial environments

RoHS

The device meets the requirements of the following guidelines:

- EU directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment.
- SI 2012/3032 The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, and related amendments.

Applied standard: EN IEC 63000



Applied standards:

- Underwriters Laboratories, Inc.: UL 61010-1 (Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use - Part 1: General Requirements)
- IEC/UL 61010-2-201 (Safety requirements for electrical equipment for measurement, control and laboratory use. Particular requirements for control equipment)
- Canadian Standards Association: CSA C22.2 No. 142 (Process Control Equipment)

Report / UL file: E 85972 (NRAG, NRAG7)

cULus Hazardous (Classified) Locations



Underwriters Laboratories, Inc.: cULus IND. CONT. EQ. FOR HAZ. LOC.

Applied standards:

- ANSI ISA 12.12.01
- CSA C22.2 No. 213-M1987

APPROVED for Use in:

- Cl. 1, Div. 2, GP. A, B, C, D T3...T6
- Cl. 1, Zone 2, GP. IIC T3...T6

Ta: Refer to the temperature class on the type plate of the module

Report / UL file: E223122 (NRAG, NRAG7)

Note the conditions for the safe deployment of the product according to the section Notes on use in hazardous areas according to UL HazLoc and FM (Page 22).

Note

For devices with C-PLUG memory: The C-PLUG memory module may only be inserted or removed when the power is off.

CSA



CSA Certification Mark Canadian Standard Association (CSA) nach Standard C 22.2 No. 142:

- Certification Record 063533–C-000

FM



Factory Mutual Approval Standards:

- Class 3600
- Class 3611
- Class 3810
- ANSI/ISA 61010-1

Report Number 3049847

Class I, Division 2, Group A, B, C, D, T4

Class I, Zone 2, Group IIC, T4

You will find the temperature class on the type plate on the module.

Australia - RCM



The product meets the requirements of the AS/NZS 2064 standards (Class A).

Canada

This class A digital device meets the requirements of the Canadian standard ICES-003.

AVIS CANADIEN

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

MSIP 요구사항 - For Korea only

**A급 기기(업무용 방송통신기자재)**

이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.

Note that in terms of the emission of interference, this device corresponds to limit class A. This device can be used in all areas except for residential environments.

Current approvals

SIMATIC NET products are regularly submitted to the relevant authorities and approval centers for approvals relating to specific markets and applications.

If you require a list of the current approvals for individual devices, consult your Siemens contact or check the Internet pages of Siemens Industry Online Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15671/cert>)

Dimension drawings

All dimensions in the dimension drawings are in millimeters.

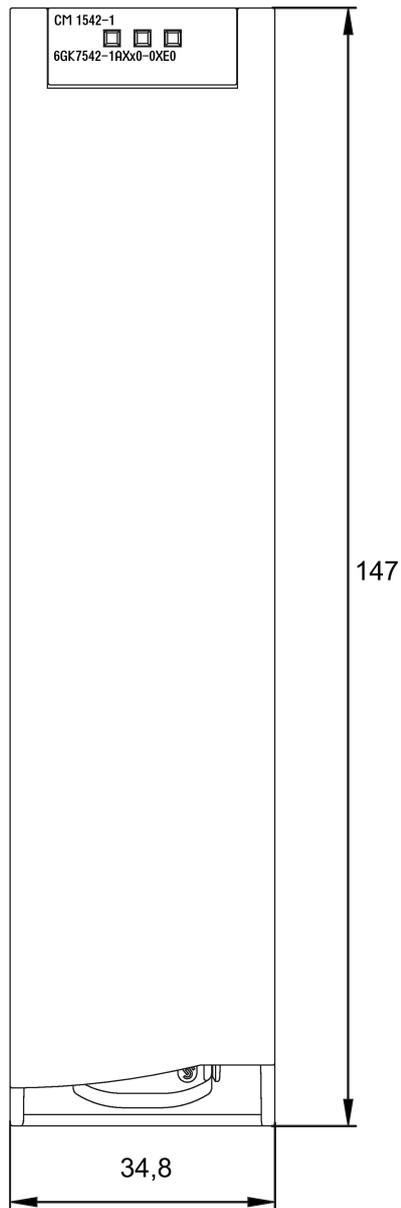


Figure 7-1 Front view

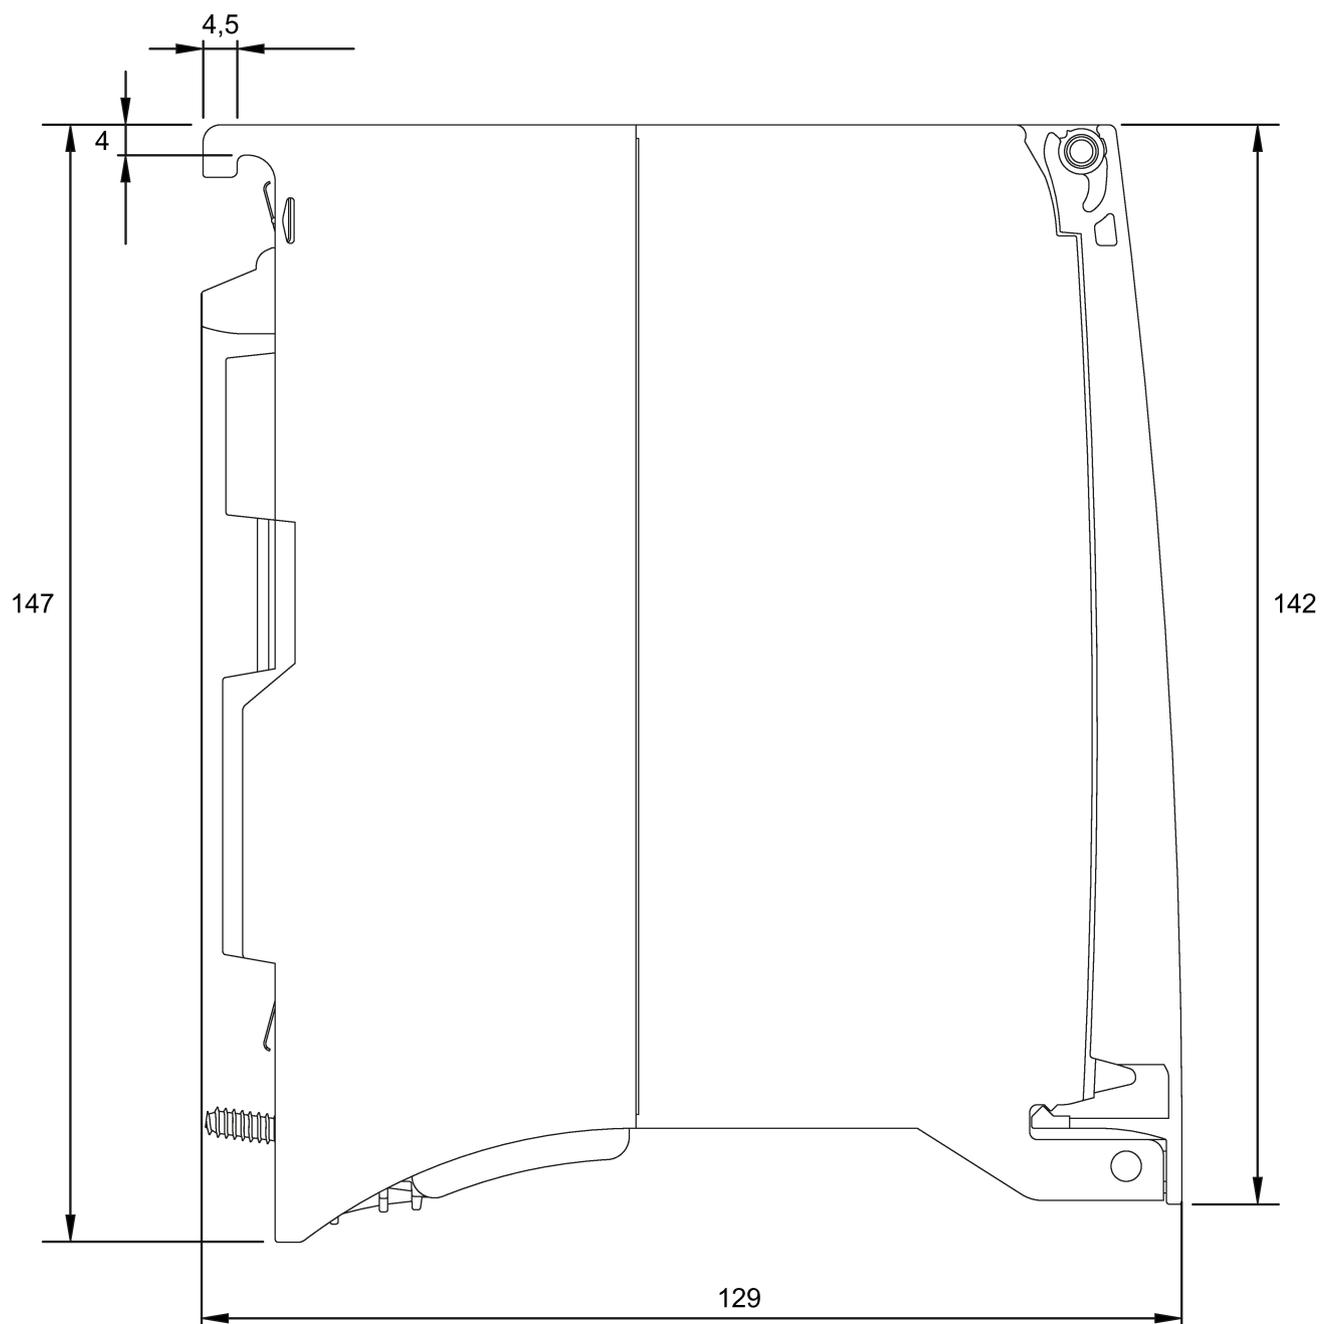


Figure 7-2 Side view

Index

B

Bus topology, 12

C

Cable length, 14
Characteristic data (DP), 14
Characteristic data (FDL), 15
Characteristics (S7 communication), 15
Configuration data
 Downloading, 17
Connection resources of the CPU, 15

D

Data record routing, 11, 15
Data storage of the configuration data of the module, 53
Diagnostics options, 43
Diagnostics repeater (DP slave), 12
Diagnostics requests, 12
Diagnostics requirements, 14
Direct data exchange, 11
Disposal, 7
Downloading project data, 26
DP diagnostics, 43
DP diagnostics frames when the CPU is in STOP, 50
DP master
 Master mode, 27
DP master (class 1), 11, 12
DP masters (class 2), 12
DP mode
 General characteristic data, 14
DP slave, 11, 12
 Slave mode, 27
DP slaves
 Quantity, 14

F

FDL connections, 11
Field device parameter assignment, 11

Firmware

CM (for FDL), 18
CPU, 18
Updating, 51

G

Glossary, 8

H

HMI functions, 15

I

Instruction
 DE_ACT, 12

M

Measured values
 Transfer/reaction times, 16

O

Operating mode of the CPU, 27
OUC (Open User Communication), 36

P

PG functions, 15
PG/OP communication, 11
PROFIBUS
 DP-V0 and DPV1 standard, 11
PROFIBUS DP
 EN 50170 DPV1, 11
PROFIBUS interface, 57

R

Recycling, 7
RS485 interface, 57

S

- S7 communication, 11
- S7 connections, 11, 15
- S7 routing function, 27
- Safety notices, 21
- Siemens DP slave, 11
- SIMATIC NET glossary, 8
- Startup parameters DP, 14
- STEP 7 (version), 17
- SYNC/FREEZE, 11

T

- TCON_FDL, 36, 40
- Time master, 13
- Time slave, 13
- Time synchronization, 27
- Time-of-day synchronization, 13
- Transmission speed, 14

W

- Web diagnostics, 13
 - S7 connections, 13