

# SIMATIC

## ET 200SP

Analog output module AQ 2xU ST (6ES7135-6FB00-0BA1)

Manual

Edition

12/2015

#### Preface

Documentation guide

1

Product overview

2

Wiring

3

Parameters/address space

4

Interrupts/diagnostics alarms

5

Technical specifications

6

Parameter data record

A

Representation of analog values

B

## Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

#### DANGER

indicates that death or severe personal injury **will** result if proper precautions are not taken.

#### WARNING

indicates that death or severe personal injury **may** result if proper precautions are not taken.

#### CAUTION

indicates that minor personal injury can result if proper precautions are not taken.

#### NOTICE

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

### Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions.

Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### Proper use of Siemens products

Note the following:

#### WARNING

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

### Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

# Preface

## Purpose of the documentation

This manual supplements the ET 200SP distributed I/O system (<http://support.automation.siemens.com/WW/view/en/58649293>) system manual.

Functions that generally relate to the system are described in this system manual.

The information provided in this manual and in the system/function manuals supports you in commissioning the system.

## Conventions

CPU: When the term "CPU" is used in this manual, it applies to the CPUs of the S7-1500 automation system as well as to the CPUs/interface modules of the ET 200SP distributed I/O system.

STEP 7: In this documentation, "STEP 7" is used as a synonym for all versions of the configuration and programming software "STEP 7 (TIA Portal)".

Please also observe notes marked as follows:

---

### Note

A note contains important information on the product described in the documentation, on the handling of the product or on the section of the documentation to which particular attention should be paid.

---

## Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, solutions, machines, equipment and/or networks. They are important components in a holistic industrial security concept. With this in mind, Siemens' products and solutions undergo continuous development. Siemens recommends strongly that you regularly check for product updates.

For the secure operation of Siemens products and solutions, it is necessary to take suitable preventive action (e.g. cell protection concept) and integrate each component into a holistic, state-of-the-art industrial security concept. Third-party products that may be in use should also be considered. You can find more information about industrial security on the Internet (<http://www.siemens.com/industrialsecurity>).

To stay informed about product updates as they occur, sign up for a product-specific newsletter. You can find more information on the Internet (<http://support.automation.siemens.com>).


# Table of contents

<b>Preface .....</b>	<b>4</b>
<b>1 Documentation guide .....</b>	<b>6</b>
<b>2 Product overview .....</b>	<b>9</b>
2.1 Properties.....	9
<b>3 Wiring .....</b>	<b>11</b>
3.1 Wiring and block diagram .....	11
<b>4 Parameters/address space .....</b>	<b>13</b>
4.1 Output ranges .....	13
4.2 Parameters .....	13
4.3 Explanation of the parameters .....	15
4.4 Address space .....	16
<b>5 Interrupts/diagnostics alarms.....</b>	<b>17</b>
5.1 Status and error display .....	17
5.2 Interrupts .....	19
5.3 Diagnostics alarms.....	19
<b>6 Technical specifications .....</b>	<b>20</b>
6.1 Technical specifications .....	20
<b>A Parameter data record .....</b>	<b>23</b>
A.1 Dependencies when configuring with GSD file.....	23
A.2 Parameter assignment and structure of the parameter data record.....	24
<b>B Representation of analog values .....</b>	<b>28</b>
B.1 Representation of analog values .....	28
B.2 Representation of output ranges .....	29
B.3 Representation of analog values in the voltage output ranges .....	30

# Documentation guide

The documentation for the SIMATIC ET 200SP distributed I/O system is arranged into three areas.

This arrangement enables you to access the specific content you require.

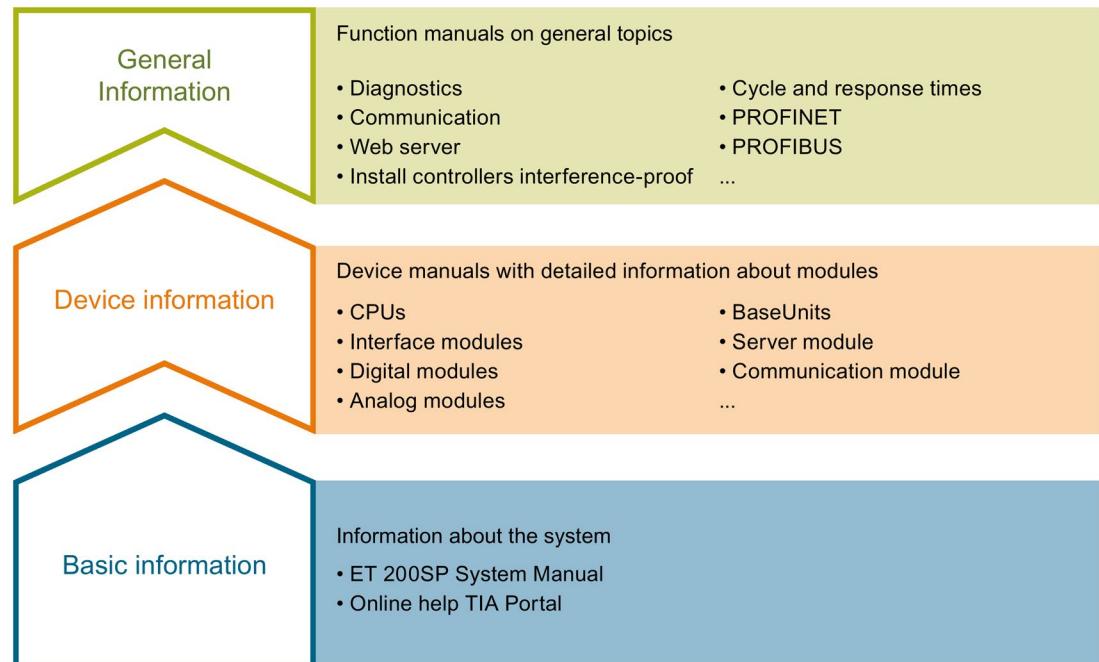

## Basic information

The system manual describes in detail the configuration, installation, wiring and commissioning of the SIMATIC ET 200SP distributed I/O system. The STEP 7 online help supports you in the configuration and programming.

## Device information

Product manuals contain a compact description of the module-specific information, such as properties, terminal diagrams, characteristics and technical specifications.

## General information

The function manuals contain detailed descriptions on general topics regarding the SIMATIC ET 200SP distributed I/O system, e.g. diagnostics, communication, Web server, designing interference-free controllers.

You can download the documentation free of charge from the Internet  
[\(<http://w3.siemens.com/mcms/industrial-automation-systems-simatic/en/manual-overview/tech-doc-et200/Pages/Default.aspx>\).](http://w3.siemens.com/mcms/industrial-automation-systems-simatic/en/manual-overview/tech-doc-et200/Pages/Default.aspx)

Changes and supplements to the manuals are documented in a Product Information.

You can download the product information free of charge from the Internet  
[\(<https://support.industry.siemens.com/cs/us/en/view/73021864>\).](https://support.industry.siemens.com/cs/us/en/view/73021864)

## Manual Collection ET 200SP

The Manual Collection contains the complete documentation on the SIMATIC ET 200SP distributed I/O system gathered together in one file.

You can find the Manual Collection on the Internet  
(<http://support.automation.siemens.com/WW/view/en/84133942>).

## "mySupport"

With "mySupport", your personal workspace, you make the most of your Industry Online Support.

In "mySupport" you can store filters, favorites and tags, request CAx data and put together your personal library in the Documentation area. Furthermore, your data is automatically filled into support requests and you always have an overview of your current requests.

You need to register once to use the full functionality of "mySupport".

You can find "mySupport" in the Internet (<https://support.industry.siemens.com/My/ww/en>).

## "mySupport" - Documentation

In the Documentation area of "mySupport", you have the possibility to combine complete manuals or parts of them to make your own manual.

You can export the manual in PDF format or in an editable format.

You can find "mySupport" - Documentation in the Internet  
(<http://support.industry.siemens.com/My/ww/en/documentation>).

## "mySupport" - CAx Data

In the CAx Data area of "mySupport", you can have access the latest product data for your CAx or CAe system.

You configure your own download package with a few clicks.

In doing so you can select:

- Product images, 2D dimension drawings, 3D models, internal circuit diagrams, EPLAN macro files
- Manuals, characteristics, operating manuals, certificates
- Product master data

You can find "mySupport" - CAx Data in the Internet  
(<http://support.industry.siemens.com/my/ww/en/CAxOnline>).

## Application examples

The application examples support you with various tools and examples for solving your automation tasks. Solutions are shown in interplay with multiple components in the system - separated from the focus in individual products.

You can find the application examples on the Internet  
(<https://support.industry.siemens.com/sc/ww/en/sc/2054>).

## TIA Selection Tool

With the TIA Selection Tool, you can select, configure and order devices for Totally Integrated Automation (TIA).

This tool is the successor of the SIMATIC Selection Tool and combines the known configurators for automation technology into one tool.

With the TIA Selection Tool, you can generate a complete order list from your product selection or product configuration.

You can find the TIA Selection Tool on the Internet

(<http://w3.siemens.com/mcms/topics/en/simatic/tia-selection-tool>).

# Product overview

## 2.1 Properties

### Article number

6ES7135-6FB00-0BA1

### View of the module

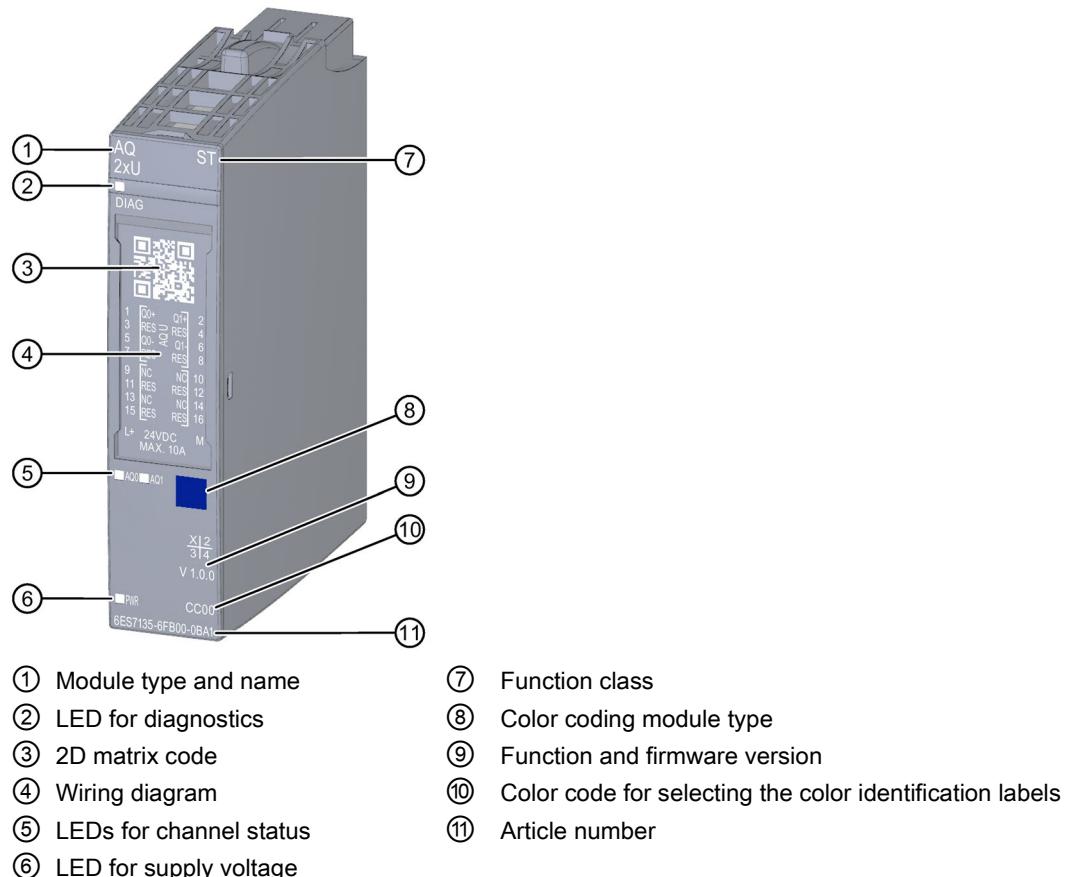


Image 2-1 View of the module AQ 2xU ST

## Properties

The module has the following technical properties:

- Analog output module with 2 outputs
  - for voltage output
- Output range for voltage output:
  - $\pm 10$  V, resolution 16 bits including sign
  - $\pm 5$  V, resolution 15 bits including sign
  - 0 to 10 V, resolution 15 bits
  - 1 to 5 V, resolution 13 bits
- Electrically isolated from supply voltage L+
- Configurable diagnostics (per module)

The module supports the following functions:

- Firmware update
- I&M identification data
- Configuration in RUN
- PROFenergy
- Value status

You can configure the module with STEP 7 (TIA Portal) and with a GSD file.

## Accessories

The following accessories must be ordered separately:

- Labeling strips
- Color identification labels
- Reference identification label
- Shield connector

## See also

You can find additional information on the accessories in the ET 200SP distributed I/O system (<http://support.automation.siemens.com/WW/view/en/58649293>) system manual.

### 3.1 Wiring and block diagram

This section includes the block diagram of the AQ 2xU ST module with the terminal assignments for a 2-wire connection.

You can find information on wiring the BaseUnit in the ET 200SP distributed I/O system (<http://support.automation.siemens.com/WW/view/en/58649293>) system manual.

---


#### Note

The load group of the module must begin with a light-colored BaseUnit. Keep this in mind also during the configuration.

---

## Wiring: Voltage output 2-wire connection

The following figure shows the block diagram and an example of the terminal assignment of the analog output module AQ 2xU ST on the BaseUnit BU type A0/A1.

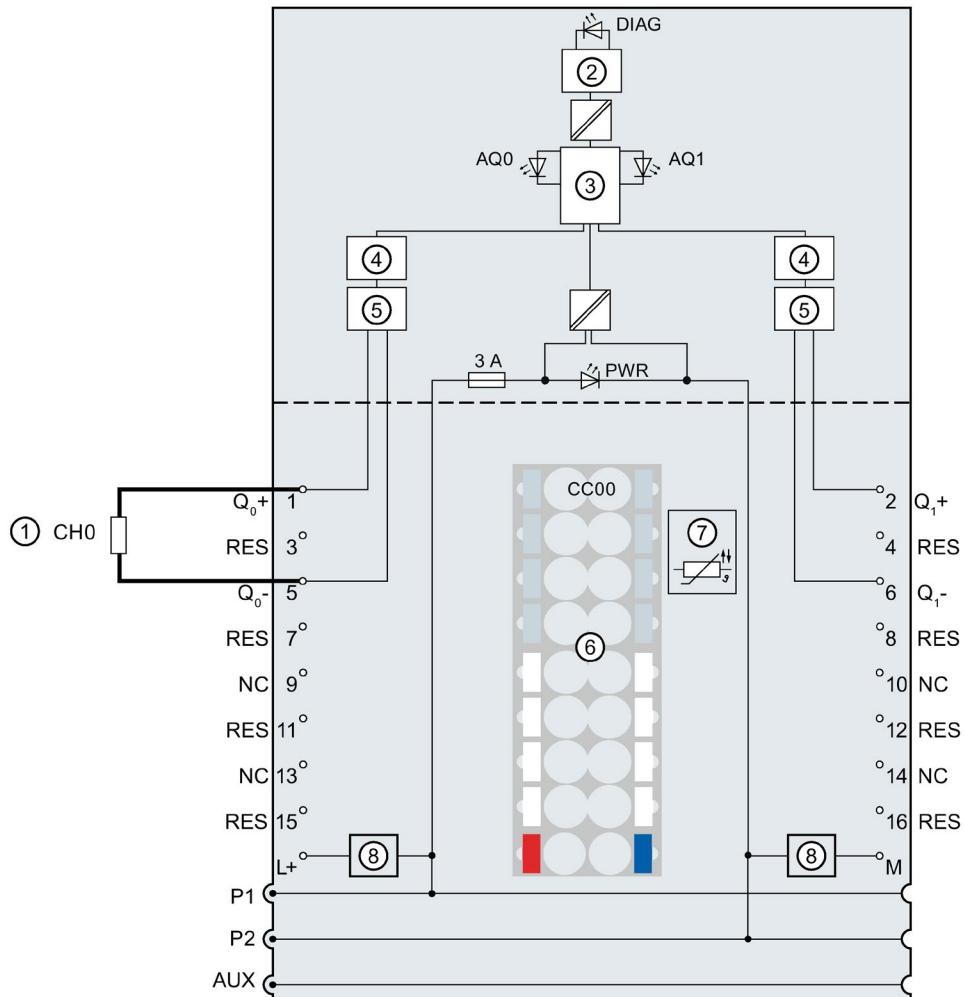

- ① 2-wire connection for voltage output
  - ② Backplane bus interface
  - ③ Microcontroller
  - ④ Digital-to-analog converter (DAC)
  - ⑤ Output conditioner
  - ⑥ Color-coded label with color code CC00 (optional)
  - ⑦ Temperature recording for BU type A1 only (function cannot be used for this module)
  - ⑧ Filter connection supply voltage (only when light-colored BaseUnit is present)
- |                  |   |
|------------------|---|
| Q <sub>n</sub> + | Analog output voltage positive, channel n   |
| Q <sub>n</sub> - | Analog output voltage negative, channel n   |
| NC               | Not connected   |
| RES              | Reserve, must remain unused for future function extensions  |
| L+               | 24 V DC (infeed only with light-colored BaseUnit)   |
| M                | Ground  |
| P1, P2, AUX      | Internal self-assembling voltage buses<br>Connection to left (dark-colored BaseUnit)<br>Connection to left interrupted (light-colored BaseUnit) |
| DIAG             | Diagnostics LED (green, red)  |
| AQ0, AQ1         | Channel status LED (green)  |
| PWR              | Power LED (green)   |

Image 3-1 Wiring and block diagram for voltage output 2-wire connection

# Parameters/address space

## 4.1 Output ranges

The analog output module AQ 2xU ST has the following output ranges:

Table 4- 1 Output ranges

Output type	Output ranges	Resolution
Voltage	± 10 V	16 bits incl. sign
	± 5 V	15 bits including sign
	0 to 10 V	15 bits
	1 to 5 V	13 bits

The tables of the output ranges, overflow, overrange, etc. can be found in section Representation of analog values (Page 28).

## 4.2 Parameters

### Parameters of the AQ 2xU ST

The effective range of the configurable parameters depends on the type of configuration. The following configurations are possible:

- Central operation with an ET 200SP CPU
- Distributed operation on PROFINET IO in an ET 200SP system
- Distributed operation on PROFIBUS DP in an ET 200SP system

When assigning parameters in the user program, use the "WRREC" instruction to transfer the parameters to the module using the data records; refer to section Parameter assignment and structure of the parameter data record (Page 24).

The following parameter settings are possible:

Table 4- 2 Configurable parameters and their defaults (GSD file)

Parameters	Range of values	Default	Parameter reassignment in RUN	Effective range with configuration software, e.g. STEP 7 (TIA Portal)	
				GSD file PROFINET IO	GSD file PROFIBUS DP
Diagnostics: No supply voltage L+	<ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Disable	Yes	Module	Module
Diagnostics Short-circuit to ground <sup>1</sup>	<ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Disable	Yes	Module	Module
Diagnostics: Overflow	<ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Disable	Yes	Module	Module <sup>2</sup>
Diagnostics: Underflow	<ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Disable	Yes	Module	

Parameters	Range of values	Default	Parameter reassignment in RUN	Effective range with configuration software, e.g. STEP 7 (TIA Portal)	
				GSD file PROFINET IO	GSD file PROFIBUS DP
Output type/range	<ul style="list-style-type: none"> <li>Deactivated</li> <li>Voltage +/- 10 V</li> <li>Voltage +/- 5 V</li> <li>Voltage 0..10 V</li> <li>Voltage 1..5 V</li> </ul>	Voltage +/- 10 V	Yes	Channel	Channel
Reaction to CPU STOP	<ul style="list-style-type: none"> <li>Turn off</li> <li>Keep last value</li> <li>Output substitute value</li> </ul>	Turn off	Yes	Channel	Module
Substitute value	For permissible substitute values for the various output ranges, see appendix Parameter assignment and structure of the parameter data record (Page 24), Substitute values → Codes for substitute values table	0	Yes	Channel	Channel
Potential group	<ul style="list-style-type: none"> <li>Use potential group of the left module (module plugged into a dark-colored BaseUnit)</li> <li>Enable new potential group (module plugged into light-colored BaseUnit)</li> </ul>	Use potential group of the left module	No	Module	Module

<sup>1</sup> No diagnostics detection between -0.5 V and +0.5 V (no short-circuit detection)

<sup>2</sup> Due to the limited number of parameters of a maximum of 244 bytes per ET 200SP station with a PROFIBUS GSD configuration, the parameter assignment options are restricted. If required, you can assign these parameters using data record 128 as described in the "GSD file PROFINET IO" column (see table above). The parameter length of the I/O module is 7 bytes.

---

#### Note

#### Unused channels

A deactivated channel always returns the value "no voltage".

---

## 4.3 Explanation of the parameters

### Diagnostics: No supply voltage L+

Enabling of the diagnostics for no or insufficient supply voltage L+.

### Diagnostics: Short-circuit

Enabling of the diagnostics when a short-circuit of the actuator supply occurs.

### Diagnostics: Overflow

Enabling of the diagnostics when the output value exceeds the overrange.

### Diagnostics: Underflow

Enabling of the diagnostics when the output value exceeds the overrange, falls below the minimum output value or reaches underflow.

### Output type / output range

See section Output ranges (Page 13)

### Reaction to CPU STOP

Determines the behavior of the module at CPU STOP.

### Substitute value

The substitute value is the value that the module outputs in case of a CPU STOP.

### Potential group

A potential group consists of a group of directly adjacent I/O modules within an ET 200SP station, which are supplied via a common supply voltage.

A potential group begins with a light-colored BaseUnit through which the required voltage is supplied for all modules of the potential group. The light-colored BaseUnit interrupts the three self-assembling voltage buses P1, P2 and AUX to the left neighbor.

All additional I/O modules of this potential group are plugged into dark-colored BaseUnits. You take the potential of the self-assembling voltage buses P1, P2 and AUX from the left neighbor.

A potential group ends with the dark-colored BaseUnit, which follows a light-colored BaseUnit or server module in the station configuration.

### See also

You can find additional information in the system manual ET 200SP distributed I/O system (<http://support.automation.siemens.com/WW/view/en/58649293>).

## 4.4 Address space

## Configuration options

The following configurations are possible:

- Configuration 1: Without value status
  - Configuration 2: With value status

## Evaluating the value status

If you enable the value status for the analog module, an additional byte is occupied in the input address space. Bits 0 and 1 in this byte are assigned to a channel. They provide information about the validity of the analog value.

Bit = 1: There are no errors on the module.


Bit = 0: Channel is deactivated or there is a fault on the module.

If a fault occurs on a channel with this module, the value status for all channels is 0.

## Address space

The following figure shows the assignment of the address space for the AQ 2×U ST with value status (Quality Information (QI)). The addresses for the value status are only available if the value status is enabled.

#### Assignment in the process image output (PIQ)

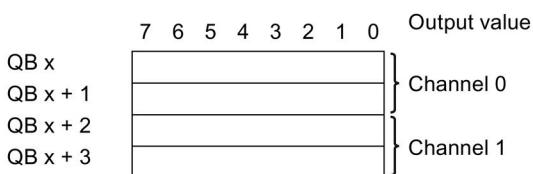

Assignment in the process image input (PII)



Image 4-1 Address space of the AQ 2×U ST with value status

# 5

## Interrupts/diagnostics alarms

### 5.1 Status and error display

#### LED display

The following figure shows you the LED display of the AQ 2xU ST.

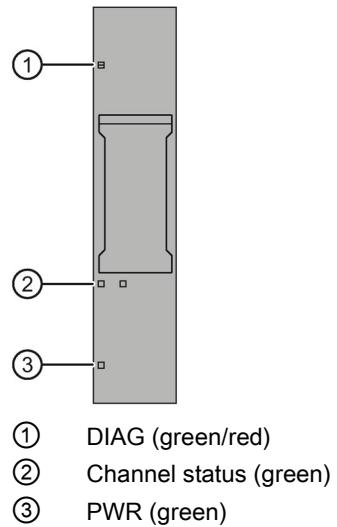


Image 5-1 LED display

**Meaning of the LEDs**

The following tables show the meaning of the status and error displays. Corrective measures for diagnostics alarms can be found in section Diagnostics alarms (Page 19).

**DIAG LED**

Table 5- 1 Error display of the DIAG LED

DIAG LED	Meaning
Off	Backplane bus supply of the ET 200SP not OK
Flashes	Module parameters not assigned
On	Module parameters assigned and no module diagnostics
Flashes	Module parameters assigned and module diagnostics

**Channel status LED**

Table 5- 2 Status display of the channel status LED

Channel status LED	Meaning
Off	Channel disabled
On	Channel activated

**PWR LED**

Table 5- 3 Status display of the PWR LED

PWR LED	Meaning
Off	Missing supply voltage L+
On	Supply voltage L+ present

## 5.2 Interrupts

The AQ 2xU ST analog output module supports diagnostics interrupts.

### Diagnostics interrupts

The module generates a diagnostic interrupt at the following events:

- Short-circuit (voltage)
- High limit violated
- Low limit violated
- Error
- Parameter assignment error
- Supply voltage missing
- Channel temporarily unavailable

## 5.3 Diagnostics alarms

A diagnostics alarm is generated and the DIAG-LED flashes on the module for each diagnostics event. You can read out the diagnostics alarms, for example, in the diagnostics buffer of the CPU. You can evaluate the error codes with the user program.

Table 5- 4 Diagnostics alarms, their meaning and corrective measures

Diagnostics alarm	Error code	Meaning	Solution
Short-circuit	1H	Short-circuit of the actuator supply	Correct the process wiring
High limit violated	7H	The output value specified by the user program exceeds the overrange.	Correct the output value
Low limit violated	8H	The output value specified by the user program is below the underrange.	Correct the output value
Error	9H	Internal module error occurred.	Replace module
Parameter assignment error	10H	<ul style="list-style-type: none"> <li>• The module cannot evaluate parameters for the channel.</li> <li>• Incorrect parameter assignment.</li> </ul>	Correct the parameter assignment
Supply voltage missing	11H	Missing or insufficient supply voltage L+	<ul style="list-style-type: none"> <li>• Check supply voltage L+ on the BaseUnit</li> <li>• Check BaseUnit type</li> </ul>
Channel temporarily unavailable	1FH	Firmware update is currently in progress or has been canceled. The module does not output any process or substitute values in this state.	<ul style="list-style-type: none"> <li>• Wait for firmware update</li> <li>• Restart the firmware update</li> </ul>

# 6

## Technical specifications

### 6.1 Technical specifications

#### Technical specifications of the AQ 2xU ST

	6ES7135-6FB00-0BA1
<b>General information</b>	
Product type designation	ET 200SP, AQ 2xU Standard
Firmware version	V1.0
Usable BaseUnits	BU type A0, A1
Color code for module-specific color identification label	CC00
<b>Product function</b>	
I&M data	Yes; I&M0 to I&M3
Scalable output range	No
<b>Engineering with</b>	
STEP 7 TIA Portal can be configured/integrated as of version	V13 SP1 / -
STEP 7 can be configured/integrated as of version	V5.5 SP3 / -
PROFIBUS as of GSD version/GSD revision	GSD revision 5
PROFINET as of GSD version/GSD revision	GSDML V2.3
<b>Operating mode</b>	
Oversampling	No
MSO	No
<b>CiR Configuration in RUN</b>	
Configuration in RUN possible	Yes
Calibration in RUN possible	No
<b>Supply voltage</b>	
Rated value (DC)	24 V
Valid range, low limit (DC)	19.2 V
Valid range, high limit (DC)	28.8 V
Polarity reversal protection	Yes
<b>Input current</b>	
Current consumption, max.	80 mA
<b>Power loss</b>	
Power loss, typ.	1 W
<b>Address area</b>	
<b>Address space per module</b>	
Address space per module, max.	4 bytes; + 1 byte for QI information

	6ES7135-6FB00-0BA1
<b>Analog outputs</b>	
Number of analog outputs	2
Voltage output, short-circuit current, max.	45 mA
Cycle time (all channels), min.	1 ms
Analog output with oversampling	No
<b>Output ranges, voltage</b>	
0 to 10 V	Yes; 15 bits
1 V to 5 V	Yes; 13 bits
-5 V to +5 V	Yes; 15 bits including sign
-10 V to +10 V	Yes; 16 bits incl. sign
<b>Connection of actuators</b>	
for voltage output two-wire connection	Yes
for voltage output four-wire connection	No
<b>Load resistance (in nominal range of the output)</b>	
For voltage outputs, min.	2 kΩ
For voltage outputs, capacitive load, max.	1 μF
<b>Destruction limit for externally applied voltages and currents</b>	
Voltages at the outputs	30 V
<b>Cable length</b>	
Shielded, max.	200 m
<b>Analog value generation for the outputs</b>	
<b>Oscillation time</b>	
For resistive load	0.1 ms
For capacitive load	1 ms
<b>Errors/accuracies</b>	
Linearity error (in relation to output range), (+/-)	0.03%
Temperature error (in relation to output range), (+/-)	0.005%/K
Crosstalk between outputs, min.	-50 dB
Repeat accuracy in settled state at 25 °C (in relation to output range), (+/-)	0.05%
<b>Operational limit in the entire temperature range</b>	
Voltage in relation to output range, (+/-)	0.5%
Current in relation to output range, (+/-)	0.5%
<b>Basic error limit (operational limit at 25 °C)</b>	
Voltage in relation to output range, (+/-)	0.3%
Current in relation to output range, (+/-)	0.3%
<b>Isochronous mode</b>	
Isochronous mode (application synchronized up to terminal)	No
<b>Interrupts/diagnostics/status information</b>	
Substitute values can be applied	Yes

## Technical specifications

### 6.1 Technical specifications

	6ES7135-6FB00-0BA1
<b>Interrupts</b>	
Diagnostics interrupt	Yes
<b>Diagnostics alarms</b>	
Diagnostics	Yes
Monitoring of the supply voltage	Yes
Short-circuit	Yes
Group error	Yes
Overflow/underflow	Yes
<b>Diagnostics indicator LED</b>	
Monitoring of the supply voltage (PWR LED)	Yes; green PWR LED
Channel status display	Yes; green LED
For channel diagnostics	No
For module diagnostics	Yes; green/red DIAG LED
<b>Electrical isolation</b>	
<b>Electrical isolation of channels</b>	
Between the channels	No
Between the channels and backplane bus	Yes
Between the channels and voltage supply of the electronics	Yes
<b>Permitted potential difference</b>	
Between different circuits	75 V DC / 60 V AC (basic isolation)
<b>Isolation</b>	
Isolation tested with	707 V DC (type test)
<b>Environmental conditions</b>	
<b>Ambient temperature in operation</b>	
Horizontal installation, min.	0 °C
Horizontal installation, max.	60 °C
Vertical installation, min.	0 °C
Vertical installation, max.	50 °C
<b>Dimensions</b>	
Width	15 mm
<b>Weights</b>	
Weight, approx.	31 g

### Dimension drawing

See manual ET 200SP BaseUnits

(<http://support.automation.siemens.com/WW/view/en/59753521>)

# A

## Parameter data record

### A.1 Dependencies when configuring with GSD file

When configuring the module with a GSD file, remember that the settings of some parameters are dependent on each other.

#### Configuring with a PROFINET GSD file

The table lists the properties and their dependencies on the output type and output range for PROFINET.

Output type	Output range	Diagnostics				Reaction to CPU STOP	Substitute value
		No supply voltage L+	Short-circuit to ground	Overflow	Underflow		
Deactivated	*	*	*	*	*	*	*
Voltage	±10 V	x	x	x	x	x	x
	±5 V	x	x	x	x	x	x
	0 V to 10 V	x	x	x	x	x	x
	1 V to 5 V	x	x	x	x	x	x

x = Property is allowed, - = Property is not allowed, \* = Property is not relevant

#### Configuring with a PROFIBUS GSD file

The table lists the properties and their dependencies on the output type and output range for PROFIBUS.

Output type	Output range	Diagnostics				Reaction to CPU STOP	Substitute value
		No supply voltage L+	Short-circuit to ground	Overflow	Underflow		
Deactivated	*	*	*	*	*	*	*
Voltage	±10 V	x	x	x	x	x	x
	±5 V	x	x	x	x	x	x
	0 V to 10 V	x	x	x	x	x	x
	1 V to 5 V	x	x	x	x	x	x

x = Property is allowed, - = Property is not allowed, \* = Property is not relevant

## A.2 Parameter assignment and structure of the parameter data record

### Parameter assignment in the user program

You can reassign the module parameters in RUN. For example, the voltage or current values of selected channels can be changed in RUN without having an effect on the other channels.

### Changing parameters in RUN

The "WRREC" instruction is used to transfer the parameters to the module using data record 128. The parameters set in STEP 7 are not changed in the CPU, which means that the parameters set in STEP 7 will be valid again after a restart.

### Output parameter STATUS

If errors occur when transferring parameters with the "WRREC" instruction, the module continues operation with the previous parameter assignment. The STATUS output parameter contains a corresponding error code.

You will find a description of the "WRREC" instruction and the error codes in the STEP 7 online help.

### Structure of data record 128

---

#### Note

Channel 0 includes the diagnostics enable for the entire module.

---

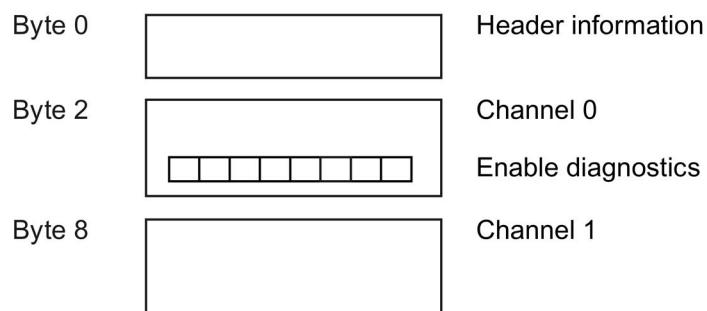


Image A-1 Structure of data record 128

## Header information

The figure below shows the structure of the header information.



Byte 1      

7	6	5	4	3	2	1	0
0	0	0	0	0	1	1	0


 Length of the parameter data per channel = 6

## Image A-2 Header information

## Parameters

The following figure shows the structure of the parameters for channels 0 and 1.

You enable a parameter by setting the corresponding bit to "1".

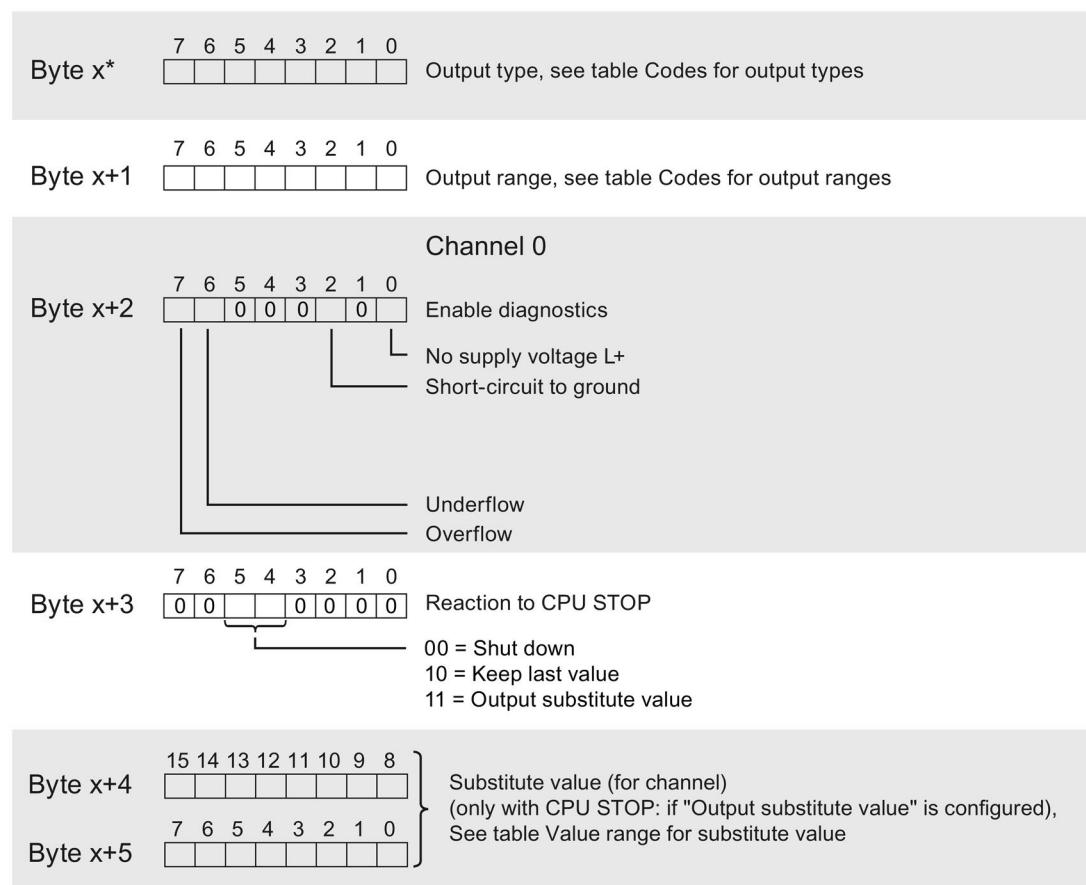

\*  $x = 2 + (\text{channel number} \times 6)$ ; channel number = 0 and 1

Image A-3 Structure of bytes x to x+5 for channels 0 and 1

## **Codes for output types**

The following table contains the codes for the output types of the analog output module. You enter this coding in byte x (see previous figure).

Table A- 1 Codes for output types

<b>Output type</b>	<b>Code</b>
Deactivated	0000 0000
Voltage	0000 0001

## **Codes for output ranges**

The following table contains the codes for the output ranges of the analog output module. You enter these codes in byte x+1 of data record 128 (see previous figure).

Table A- 2 Codes for output ranges

<b>Output range</b>	<b>Code</b>
<b>Voltage</b>	
±10 V	0000 0000
±5 V	0000 0001
0 to 10 V	0000 0010
1 to 5 V	0000 0011

## **Value range for substitute value**

The following table contains the value ranges for the substitute values. You must enter the corresponding codes in bytes x+4 and x+5 (see previous figure).

<b>Output range</b>	<b>Permissible value range</b>
<b>Voltage</b>	
±10 V	-32512 to 32511
±5 V	-32512 to 32511
0 to 10 V	0 to 32511
1 to 5 V	-6912 to 32511

## Error transmitting the data record

The module always checks all values of the transmitted data record. The module applies the values from the data record only when all values have been transmitted without errors.

The WRREC instruction for writing data records returns the appropriate error codes if there are errors in the STATUS parameter.

The following table shows the module-specific error codes and their meaning for parameter data record 128.

Error code in the STATUS parameter (hexadecimal)				Meaning	Solution
Byte 0	Byte 1	Byte 2	Byte 3		
DF	80	B0	xx	Number of the data record unknown	Enter valid number for data record.
DF	80	B1	xx	Length of the data record incorrect	Enter valid value for data record length.
DF	80	B2	xx	Slot invalid or unavailable	<ul style="list-style-type: none"> <li>Check the station to determine if the module is plugged in or pulled.</li> <li>Check assigned values for the parameters of the WREC instruction.</li> </ul>
DF	80	I0	xx	Incorrect version or error in the header information	Correct the version, length and number of parameter blocks.
DF	80	I1	xx	Parameter error	Check the parameters of the module.

# Representation of analog values

# B

## B.1 Representation of analog values

This appendix describes the analog values for all output ranges supported by the AQ 2xU ST analog module.

### Measured value resolution

The digitized analog value is the same for all output values at the same nominal range. Analog values are output as fixed point numbers in two's complement.

In the following table, you will find the representation of the binary analog values and the associated decimal or hexadecimal units of the analog values.

The resolutions 13, 14, 15 and 16 bits including sign are shown. Each analog value is entered left aligned into the ACCU. The bits marked with "x" are set to "0".

Table B- 1 Possible resolutions of the analog values

Resolution in bits	Values		Analog value	
	Decimal	Hexadecimal	High byte	Low byte
13	8	8 <sub>H</sub>	Sign 0 0 0 0 0 0 0	0 0 0 0 1 x x x
14	4	4 <sub>H</sub>	Sign 0 0 0 0 0 0 0	0 0 0 0 0 1 x x
15	2	2 <sub>H</sub>	Sign 0 0 0 0 0 0 0	0 0 0 0 0 0 1 x
16	1	1 <sub>H</sub>	Sign 0 0 0 0 0 0 0	0 0 0 0 0 0 0 1

## B.2 Representation of output ranges

In the following tables, you can find the digitized representation of the bipolar and unipolar range output ranges. The resolution is 16 bits.

Table B- 2 Bipolar output ranges

Dec. value	Output value in %	Data word																		Range
		2 <sup>15</sup>	2 <sup>14</sup>	2 <sup>13</sup>	2 <sup>12</sup>	2 <sup>11</sup>	2 <sup>10</sup>	2 <sup>9</sup>	2 <sup>8</sup>	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>			
≥32512	117.589	0	1	1	1	1	1	1	0	1	1	1	1	1	1	1	1	1	Maximum output value	
32511	117.589	0	1	1	1	1	1	1	0	1	1	1	1	1	1	1	1	1	Overrange	
27649	100.004	0	1	1	0	1	1	0	0	0	0	0	0	0	0	0	0	1		
27648	100.000	0	1	1	0	1	1	0	0	0	0	0	0	0	0	0	0	0	Nominal range	
1	0.003617	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1		
0	0.000	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0		
-1	-0.003617	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1		
-27648	-100.000	1	0	0	1	0	1	0	0	0	0	0	0	0	0	0	0	0		
-27649	100.004	1	0	0	1	0	0	1	1	1	1	1	1	1	1	1	1	1	Underrange	
-32512	-117.593	1	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0		
≤ -32513	-117.593	1	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	Minimum output value	

Table B- 3 Unipolar output ranges

Dec. value	Output value in %	Data word																		Range
		2 <sup>15</sup>	2 <sup>14</sup>	2 <sup>13</sup>	2 <sup>12</sup>	2 <sup>11</sup>	2 <sup>10</sup>	2 <sup>9</sup>	2 <sup>8</sup>	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>			
≥32512	117.589	0	1	1	1	1	1	1	1	x	x	x	x	x	x	x	x	x	Maximum output value	
32511	117.589	0	1	1	1	1	1	1	0	1	1	1	1	1	1	1	1	1	Overrange	
27649	100.004	0	1	1	0	1	1	0	0	0	0	0	0	0	0	0	0	1		
27648	100.000	0	1	1	0	1	1	0	0	0	0	0	0	0	0	0	0	0	Nominal range	
1	0.003617	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1		
0	0.000	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0		
≤ 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	Minimum output value	

## B.3 Representation of analog values in the voltage output ranges

The tables below list the decimal and hexadecimal values (codes) of the possible voltage output ranges.

Table B- 4 Voltage output ranges  $\pm 10$  V and  $\pm 5$  V

Values			Voltage output range		Range
	Dec.	Hex.	$\pm 10$ V	$\pm 5$ V	
118.5149%	32767	7FFF	11.76 V	5.88 V	Overflow*
	32512	7F00			
117.589%	32511	7EFF	11.76 V	5.88 V	Overrange
	27649	6C01			
100%	27648	6C00	10 V	5 V	Nominal range
75%	20736	5100	7.5 V	3.75 V	
0.003617%	1	1	361.7 $\mu$ V	180.8 $\mu$ V	
0%	0	0	0 V	0 V	
	-1	FFFF	-361.7 $\mu$ V	-180.8 $\mu$ V	
-75%	-20736	AF00	-7.5 V	-3.75 V	
-100%	-27648	9400	-10 V	-5 V	
	-27649	93FF			Underrange
-117.593%	-32512	8100	-11.76 V	-5.88 V	
	-32513	80FF	-11.76	-5.88 V	Underflow*
-118.519%	-32768	8000			

\* Outputs positive maximum value or negative minimum value

Table B- 5 Voltage output range 0 V to 10 V

Values			Voltage output range		Range
	Dec.	Hex.	0 to 10 V		
118.519%	32767	7FFF	11.76 V		Overflow*
	32512	7F00			
117.589%	32511	7EFF	11.76 V		Overrange
	27649	6C01			
100%	27648	6C00	10 V		Nominal range
75%	20736	5100	7.5 V		
0.003617%	1	1	361.7 $\mu$ V		
0%	0	0	0 V		
	-1	FFFF	0 V		Underflow*
-118.519%	-32768	8000			

\* Outputs positive maximum value or negative minimum value

Table B- 6 Voltage output range 1 V to 5 V

Values			Voltage output range	Range
	Dec.	Hex.	1 to 5 V	
118.519%	32767	7FFF	5.70 V	Overflow*
	32512	7F00		
117.589%	32511	7EFF	5.70 V	Overrange
	27649	6C01		
100%	27648	6C00	5 V	Nominal range
75%	20736	5100	4 V	
0.003617%	1	1	1 V + 144.7 µV	
0%	0	0	1 V	
	-1	FFFF	1 V - 144.7 µV	Underrange
-25%	-6912	E500	0 V	
	-6913	E4FF	0 V	Underflow*
-118.519%	-32768	8000		

\* outputs positive maximum value or negative minimum value