


# SIEMENS

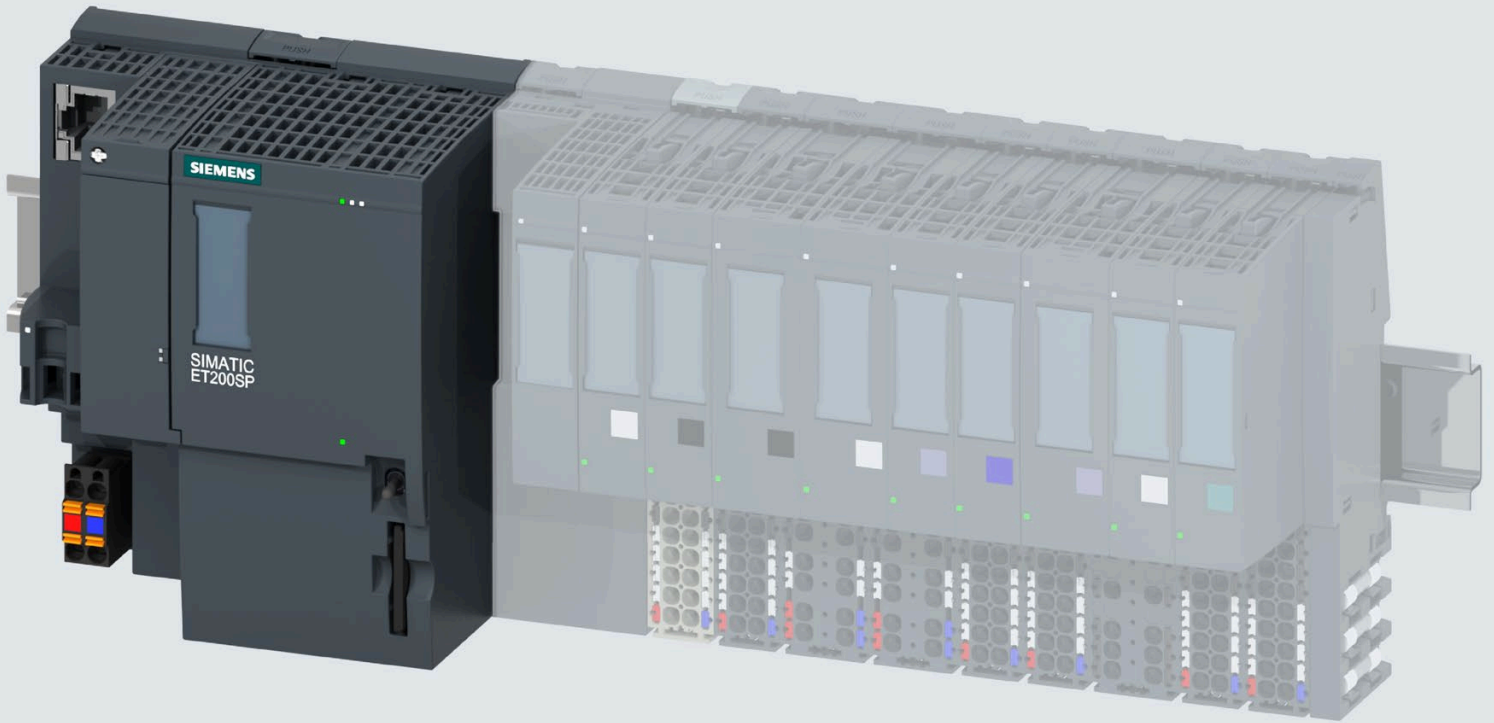

Manual

# SIMATIC

## ET 200SP

CPU 1510SP-1 PN  
(6ES7510-1DJ01-0AB0)

Edition

05/2021

[support.industry.siemens.com](https://support.industry.siemens.com)

# SIEMENS

## SIMATIC

### ET 200SP CPU 1510SP-1 PN (6ES7510-1DJ01-0AB0)

#### Equipment Manual

#### Preface

---

ET 200SP Documentation  
Guide

1

Product overview

2

Wiring

3

Interrupts, error messages,  
diagnostics and system  
alarms

4

Technical specifications

5




Dimension drawing

A

## Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 <b>DANGER</b>
indicates that death or severe personal injury <b>will</b> result if proper precautions are not taken.
 <b>WARNING</b>
indicates that death or severe personal injury <b>may</b> result if proper precautions are not taken.
 <b>CAUTION</b>
indicates that minor personal injury can result if proper precautions are not taken.
<b>NOTICE</b>
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

### Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### Proper use of Siemens products

Note the following:

 <b>WARNING</b>
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

### Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

# Preface

## Purpose of the documentation

This manual supplements the ET 200SP distributed I/O system (<http://support.automation.siemens.com/WW/view/en/58649293>) system manual as well as the function manuals. This manual contains a description of the module-specific information. The system-related functions are described in the system manual. All system-spanning functions are described in the function manuals.

The information provided in this manual and the system manual allows you to commission the CPU 1510SP-1 PN.

## Conventions

STEP 7: In this documentation, "STEP 7" is used as a synonym for all versions of the configuration and programming software "STEP 7 (TIA Portal)".

Please also observe the notes marked as follows:

---

### Note

A note contains important information on the product described in the documentation, on the handling of the product or on the section of the documentation to which particular attention should be paid.

---

## Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit (<https://www.siemens.com/industrialsecurity>).

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customers' exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed visit (<https://www.siemens.com/industrialsecurity>).

## Siemens Industry Online Support

You can find current information on the following topics quickly and easily here:

- **Product support**

All the information and extensive know-how on your product, technical specifications, FAQs, certificates, downloads, and manuals.

- **Application examples**

Tools and examples to solve your automation tasks – as well as function blocks, performance information and videos.

- **Services**

Information about Industry Services, Field Services, Technical Support, spare parts and training offers.

- **Forums**

For answers and solutions concerning automation technology.

- **mySupport**

Your personal working area in Industry Online Support for messages, support queries, and configurable documents.

This information is provided by the Siemens Industry Online Support in the Internet (<http://www.siemens.com/automation/service&support>).

## Industry Mall

The Industry Mall is the catalog and order system of Siemens AG for automation and drive solutions on the basis of Totally Integrated Automation (TIA) and Totally Integrated Power (TIP).

Catalogs for all the products in automation and drives are available on the Internet (<https://mall.industry.siemens.com>).


# Table of contents

- Preface ..... 3**
- 1 ET 200SP Documentation Guide ..... 6**
- 2 Product overview ..... 11**
  - 2.1 New functions ..... 11
  - 2.2 Operating principle ..... 13
  - 2.3 Properties ..... 14
  - 2.4 Operating and display elements ..... 19
  - 2.4.1 Front view of the module with BusAdapter ..... 19
  - 2.5 Mode switch ..... 20
- 3 Wiring ..... 21**
- 4 Interrupts, error messages, diagnostics and system alarms ..... 25**
  - 4.1 Status and error display of the CPU ..... 25
- 5 Technical specifications ..... 28**
- A Dimension drawing ..... 42**

# ET 200SP Documentation Guide

The documentation for the SIMATIC ET 200SP distributed I/O system is arranged into three areas.

This arrangement enables you to access the specific content you require.

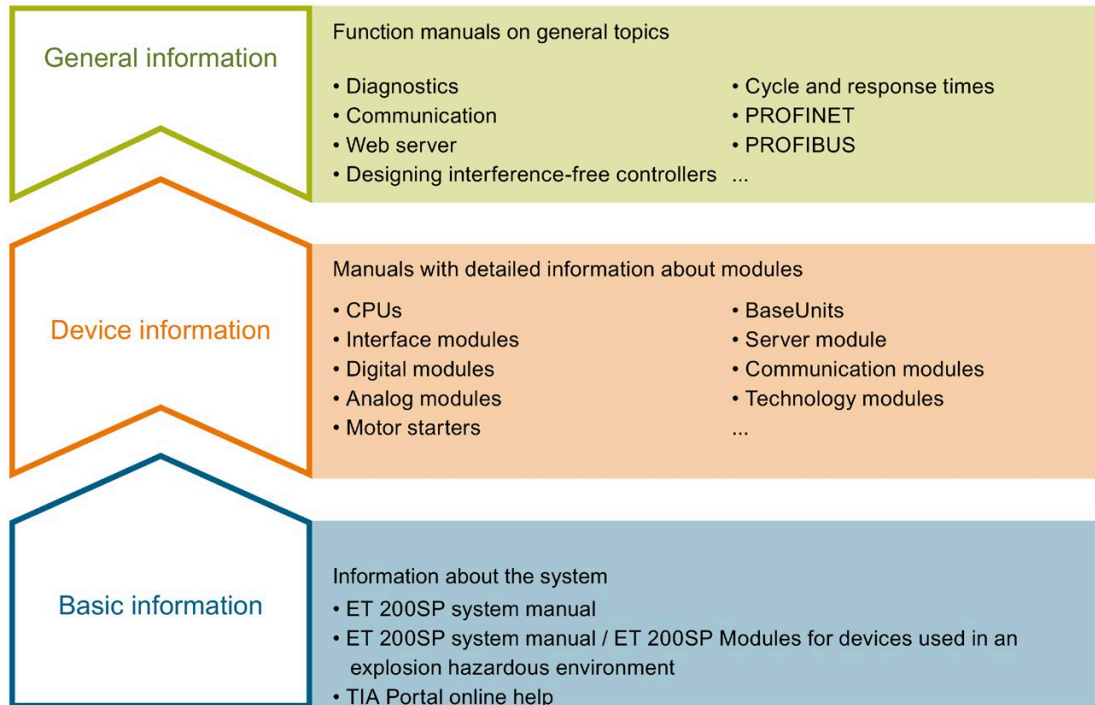

## Basic information

The System Manual and Getting Started describe in detail the configuration, installation, wiring and commissioning of the SIMATIC ET 200SP distributed I/O system. The STEP 7 online help supports you in the configuration and programming.

## Device information

Product manuals contain a compact description of the module-specific information, such as properties, wiring diagrams, characteristics and technical specifications.

### General information

The function manuals contain detailed descriptions on general topics regarding the SIMATIC ET 200SP distributed I/O system, e.g. diagnostics, communication, Web server, motion control and OPC UA.

You can download the documentation free of charge from the Internet (<https://support.industry.siemens.com/cs/ww/en/view/109742709>).

Changes and supplements to the manuals are documented in a Product Information.

You can download the product information free of charge from the Internet (<https://support.industry.siemens.com/cs/us/en/view/73021864>).

### Manual Collection ET 200SP

The Manual Collection contains the complete documentation on the SIMATIC ET 200SP distributed I/O system gathered together in one file.

You can find the Manual Collection on the Internet (<https://support.automation.siemens.com/WW/view/en/84133942>).

### "mySupport"

With "mySupport", your personal workspace, you make the best out of your Industry Online Support.

In "mySupport", you can save filters, favorites and tags, request CAx data and compile your personal library in the Documentation area. In addition, your data is already filled out in support requests and you can get an overview of your current requests at any time.

You must register once to use the full functionality of "mySupport".

You can find "mySupport" on the Internet (<https://support.industry.siemens.com/My/ww/en>).

### "mySupport" - Documentation

With "mySupport", your personal workspace, you make the best out of your Industry Online Support.

In "mySupport", you can save filters, favorites and tags, request CAx data and compile your personal library in the Documentation area. In addition, your data is already filled out in support requests and you can get an overview of your current requests at any time.

You must register once to use the full functionality of "mySupport".

You can find "mySupport" on the Internet (<https://support.industry.siemens.com/My/ww/en/documentation>).



## "mySupport" - CAx data

In the CAx data area of "mySupport", you can access the latest product data for your CAx or CAe system.

You configure your own download package with a few clicks.

In doing so you can select:

- Product images, 2D dimension drawings, 3D models, internal circuit diagrams, EPLAN macro files
- Manuals, characteristics, operating manuals, certificates
- Product master data

You can find "mySupport" - CAx data on the Internet (<https://support.industry.siemens.com/my/ww/en/CAxOnline>).

## Application examples

The application examples support you with various tools and examples for solving your automation tasks. Solutions are shown in interplay with multiple components in the system - separated from the focus on individual products.

You will find the application examples on the Internet (<https://support.industry.siemens.com/cs/ww/en/ps/ae>).

## TIA Selection Tool

With the TIA Selection Tool, you can select, configure and order devices for Totally Integrated Automation (TIA).

This tool is the successor of the SIMATIC Selection Tool and combines the known configurators for automation technology into one tool.

With the TIA Selection Tool, you can generate a complete order list from your product selection or product configuration.

You can find the TIA Selection Tool on the Internet (<https://support.industry.siemens.com/cs/ww/en/view/109767888>).

## SIMATIC Automation Tool

You can use the SIMATIC Automation Tool to perform commissioning and maintenance activities simultaneously on various SIMATIC S7 stations as a bulk operation independent of TIA Portal.

The SIMATIC Automation Tool provides a multitude of functions:

- Scanning of a PROFINET/Ethernet system network and identification of all connected CPUs
- Address assignment (IP, subnet, gateway) and station name (PROFINET device) to a CPU
- Transfer of the date and the programming device/PC time converted to UTC time to the module
- Program download to CPU
- RUN/STOP mode switchover
- CPU localization by means of LED flashing
- Reading out of CPU error information
- Reading of the CPU diagnostics buffer
- Reset to factory settings
- Firmware update of the CPU and connected modules

You can find the SIMATIC Automation Tool on the Internet (<https://support.industry.siemens.com/cs/ww/en/view/98161300>).

## PRONETA

SIEMENS PRONETA (PROFINET network analysis) allows you to analyze the plant network during commissioning. PRONETA features two core functions:

- The topology overview automatically scans the PROFINET and all connected components.
- The IO check is a fast test of the wiring and the module configuration of a plant, incl. fail-safe inputs and outputs.

You can find SIEMENS PRONETA on the Internet (<https://support.industry.siemens.com/cs/ww/en/view/67460624>).

## SINETPLAN

SINETPLAN, the Siemens Network Planner, supports you in planning automation systems and networks based on PROFINET. The tool facilitates professional and predictive dimensioning of your PROFINET installation as early as in the planning stage. In addition, SINETPLAN supports you during network optimization and helps you to exploit network resources optimally and to plan reserves. This helps to prevent problems in commissioning or failures during productive operation even in advance of a planned operation. This increases the availability of the production plant and helps improve operational safety.

The advantages at a glance

- Network optimization thanks to port-specific calculation of the network load
- Increased production availability thanks to online scan and verification of existing systems
- Transparency before commissioning through importing and simulation of existing STEP 7 projects
- Efficiency through securing existing investments in the long term and the optimal use of resources

You can find SINETPLAN on the Internet (<https://www.siemens.com/sinetplan>).

## Product overview

### 2.1 New functions

#### New functions of the CPU in firmware version V2.9

The following table provides an overview of the most important new functions of the CPU with firmware version V2.9.

New functions	Applications	Customer benefits	Where can I find information?
<b>Communication of the CPU</b>			
Secure PG/HMI communication	With STEP 7 and WinCC as of Version V17, SIMATIC S7-1500 CPUs and ET 200 CPUs from firmware version 2.9 support innovated and standardized secure PG/PC and HMI communication – referred to as Secure PG/HMI communication for short.	Secure and standardized creation or assignment of PLC communication certificates	Communication function manual ( <a href="https://support.industry.siemens.com/cs/ww/en/view/59192925">https://support.industry.siemens.com/cs/ww/en/view/59192925</a> )
Protection of confidential configuration data	You have the option of assigning a password for protecting confidential configuration data of the respective CPU. This refers to data such as private keys that are required for the proper functioning of certificate-based protocols.	Additional password protection of confidential configuration data	
OPC UA: Alarms & Conditions	OPC UA clients from any manufacturer can subscribe to alarms of the CPU via OPC UA Alarms & Conditions.	Without further measures, alarms created once via OPC UA are available as events and alarms. The alarms can be displayed by any display device with corresponding OPC UA client functionality.	
OPC UA: Certificate management via Global Discovery Server (GDS)	Via GDS push management functions: <ul style="list-style-type: none"> <li>Automated update of OPC UA certificates of an S7-1500 CPU</li> <li>Transfer of updated certificates and lists in RUN operating state of the CPU</li> </ul>	The automation of the certificate management eliminates any manual work required for reconfiguring the CPU, for example, after a certificate has expired, and a new download to the CPU.	

2.1 New functions

New functions	Applications	Customer benefits	Where can I find information?
DHCP (Dynamic Host Configuration Protocol)	<p>The CPU can use the DHCP communication protocol to assign the network configuration via a DHCP server.</p> <p>The CPU uses a client ID for identification on the DHCP server.</p> <p>The following parameters can be obtained:</p> <ul style="list-style-type: none"> <li>• IP Suite</li> <li>• DNS server</li> <li>• NTP server</li> </ul> <p>The CPU can also send its host name to the DHCP server.</p>	<p>With DHCP, you can integrate the CPU into an existing IT network without having to make additional changes to the PROFINET interface.</p>	<p>Communication function manual  <a href="https://support.industry.siemens.com/cs/ww/en/view/59192925">https://support.industry.siemens.com/cs/ww/en/view/59192925</a></p>
MRP interconnection in PROFINET networks	<p>The MRP interconnection procedure is an extension of MRP.</p> <p>MRP interconnection enables the redundant coupling of two or more rings with MRP in PROFINET networks.</p>	<p>There is no limit to the maximum number of 50 devices in a ring when setting up redundant network topologies.</p> <p>Monitoring of larger topologies with ring redundancy</p>	<p>PROFINET function manual  <a href="https://support.industry.siemens.com/cs/ww/en/view/49948856">https://support.industry.siemens.com/cs/ww/en/view/49948856</a></p>
<b>Web server of the CPU</b>			
Web applications that can be loaded by the user	<p>Additional methods to manage web applications via Web API</p> <p>You can use all available Web API methods within the web application</p>	<p>Web applications are also available in STOP mode of the CPU</p> <p>Reduced development times of web server user pages</p>	<p>Web server function manual  <a href="https://support.industry.siemens.com/cs/ww/en/view/59193560">https://support.industry.siemens.com/cs/ww/en/view/59193560</a></p>
New Web API methods	<p>Reading and changing the CPU operating state via Web API</p> <p>Ticket methods for transferring large amounts of data outside of the JSON RPC protocol</p>	<p>Additional applications for the web server</p>	
Diagnostic information on motion control	<p>Diagnostic information is available for all technology objects</p> <p>Improved display and grouping of the tags</p>	<p>Comprehensive diagnostic options by means of motion control applications are possible via the web server.</p>	
Optimizations to the DNS (Domain Name System) functionality with OPC UA/Open User Communication and on the web server	<p>The feedback messages of the OPC UA server with the "Application Name" can be sent via DNS.</p> <p>The NTP client of the CPU can address its relevant NTP servers via DNS.</p> <p>The Web server can be consistently reached via DNS addressing. DNS is taken into account during certificate handling.</p>	<p>A pool of NTP servers can be addressed.</p>	<p>Communication function manual  <a href="https://support.industry.siemens.com/cs/ww/en/view/59192925">https://support.industry.siemens.com/cs/ww/en/view/59192925</a></p> <p>Web server function manual  <a href="https://support.industry.siemens.com/cs/ww/en/view/59193560">https://support.industry.siemens.com/cs/ww/en/view/59193560</a></p>
<b>Technology functions of the CPU</b>			
Axis functions	<ul style="list-style-type: none"> <li>• Backlash compensation</li> <li>• Linear motor</li> </ul>	<p>The repeat accuracy of a movement is increased by compensation for the mechanical play of the real axis.</p> <p>Easier control of highly dynamic linear motors.</p>	<p>S7-1500T Motion Control function manuals  <a href="https://support.industry.siemens.com/cs/ww/en/view/109751049">https://support.industry.siemens.com/cs/ww/en/view/109751049</a></p>

## Reference

You can find an overview of all new functions, improvements and revisions in the respective firmware versions on the Internet (<https://support.industry.siemens.com/cs/ww/en/view/109478459>).

## 2.2 Operating principle

The CPU contains the operating system and executes the user program. The user program is located on the SIMATIC memory card and is processed in the work memory of the CPU.

The PROFINET interfaces on the CPU allow simultaneous communication with PROFINET devices, PROFINET controllers, HMI devices, programming devices, other controllers and other systems. The CPU 1510SP-1 PN supports operation as an IO controller, I-device or standalone CPU.

With its optional PROFIBUS interface, CM DP, CPU 1510SP-1 PN supports the configuration of PROFIBUS networks in addition to PROFINET IO. When you use the interface as a PROFIBUS DP interface, you can configure the CPU 1510SP-1 PN as a DP master or as an intelligent DP slave (I-slave).

### IO controller

CPU 1510SP-1 PN sends and receives data from the connected IO devices within a PROFINET IO system. You can operate the CPU with a maximum of 64 connected IO devices, a maximum of 64 of which use IRT (Isochronous Real Time).

### I-device

The "I-device" (intelligent IO device) functionality allows you to exchange data with an IO controller. CPU 1510SP-1 PN thus fulfills the role of an intelligent distributed pre-processing unit for sub-processes. The I-device is connected as an IO device to a higher-level IO controller for this purpose.

Advantages:

- Interference-resistant configuration due to short signal and encoder wiring
- Reduced wiring requirements for transmission of the data via PROFINET

### Standalone CPU

You can also use the CPU 1510SP-1 PN in the ET 200SP distributed I/O system as a "central system" without a higher-level controller.

### DP master

To use the ET 200SP as a DP master, you need the CPU and the optional communication module, CM DP. When used as a DP master, ET 200SP exchanges data with the connected DP slaves via PROFIBUS DP.

### Intelligent DP slave (I-slave)

To use the ET 200SP as an intelligent DP slave (I-slave), you need the CPU and the optional communication module, CM DP. As an I-slave, the ET 200SP CPU is connected via PROFIBUS DP to a higher-level DP master and exchanges data with it.

## 2.3 Properties

### Article number

6ES7510-1DJ01-0AB0

### View of the module

The following figure shows the CPU 1510SP-1 PN.

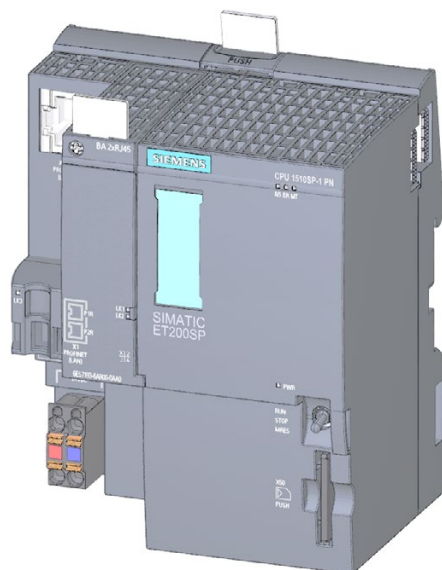


Figure 2-1 CPU 1510SP-1 PN

## Properties

The CPU 1510SP-1 PN has the following technical properties:

- Communication:

- Interfaces

The CPU 1510SP-1 PN has a PROFINET interface (X1 P3) with an integrated 3-port switch. Port 1 and port 2 are located on the optionally pluggable BusAdapter. Port 3 is integrated in the housing of the CPU. The CPU supports the BusAdapters BA 2xRJ45 and BA 2xFC. You connect the PROFINET IO to the CPU via the BusAdapter.

In addition to PROFINET basic functionality, the interface also supports PROFINET IO RT (real-time) and IRT (isochronous real-time). PROFINET IO communication or real-time settings can be configured. The basic functionality of PROFINET supports HMI communication, communication with the configuration system, communication with a higher-level network (backbone, router, Internet) and communication with another machine or automation cell.

Port 1 and port 2 can also be used as ring ports for the configuration of redundant ring structures in Ethernet.

---

### Note

The CPU is delivered without a BusAdapter. You can find the article numbers of the supported BusAdapters in the "Accessories/spare parts" section of the ET 200SP distributed automation system

(<http://support.automation.siemens.com/WW/view/en/58649293>) system manual.

---

The CM DP is optionally available with a PROFIBUS interface (X2). You can find additional information about this expansion module in the manual Communication module CM DP (<http://support.automation.siemens.com/WW/view/en/90156526>).

You can find information about connecting the PROFINET IO BusAdapter to the CPU as well as connecting the optional PROFIBUS interface to the interface module in the system manual ET 200SP distributed I/O system

(<http://support.automation.siemens.com/WW/view/en/58649293>).

- OPC UA

With OPC UA, data is exchanged via an open and vendor-neutral communication protocol. The CPU, as OPC UA server, can communicate with OPC UA clients such as HMI panels, SCADA systems, etc.

- Integrated Web server:

A Web server is integrated in the CPU. You can read out the following information with the Web server:

- Start page with general CPU information
  - Identification information
  - Contents of the diagnostics buffer
  - Query of module states
  - Firmware update
  - Alarms (without acknowledgment option)



- Information about communication
- PROFINET topology
- Tag status, writing tags
- Watch tables
- Memory usage
- User pages
- Data logs (if used)
- Online backup and restoration of the configuration.
- Diagnostic information for the motion control technology objects
- Display of trace recordings stored on the SIMATIC memory card
- Readout service data
- Basic Web pages
- Display of the Web server in 3 project languages, for example, comments and message texts
- Recipes
- User-defined Web pages
- Integrated technology:
  - Motion Control

The Motion Control functionality uses technology objects to support speed-controlled axes, positioning axes, synchronous axes, external encoders, cams, cam tracks and measuring inputs, as well as PLCopen blocks for programming the motion control functionality.  
You can find a detailed description of the use of Motion Control and its configuration in the S7-1500 Motion Control (<https://support.industry.siemens.com/cs/ww/en/view/109751049>) function manuals.
  - Integrated closed-loop control functionality
    - PID Compact (continuous PID controller)
    - PID 3Step (step controller for integrating actuators)
    - PID Temp (temperature controller for heating and cooling with two separate actuators)
- Trace functionality:
  - Trace functionality supports you in troubleshooting and optimizing the user program, especially for motion control or closed-loop control applications. Trace only supports saves measurements on a SIMATIC memory card. You will find additional information on "Trace" in the Using the trace and logic analyzer function (<http://support.automation.siemens.com/WW/view/en/64897128>) function manual.

- Integrated system diagnostics:
  - The alarms for the system diagnostics are automatically created by the system and displayed on a PG/PC, HMI device or the Web server. System diagnostics information is also available when the CPU is in STOP mode.
- Integrated security:
  - Know-how protection

The assignment of passwords protects user blocks against unauthorized access and modifications.
  - Copy protection

Copy protection links user blocks to the serial number of the SIMATIC memory card or to the serial number of the CPU. User programs cannot run without the corresponding SIMATIC memory card or CPU.
  - Access protection

Extended access protection provides high-quality protection against unauthorized configuration changes. You can use authorization levels to assign separate rights to different user groups.
  - Integrity protection

The system protects the data transferred to the CPU against manipulation. The CPU detects erroneous or manipulated engineering data.


You can find additional information on the topic of "Protection" in the system manual ET 200SP distributed I/O system (<http://support.automation.siemens.com/WW/view/en/58649293>).
- Support for ET 200AL
  - Simple connection of IP 65/67 I/O modules to the CPU.
- Communication CPs
  - CP 1542SP-1: Flexible expansion of the ET 200SP system with an additional Ethernet interface; network separation.
  - CP 1542SP-1 IRC: Seamless data recording with time stamping, support for standardized telecontrol protocols DNP3 and IEC.
  - CP 1543SP-1 ISEC: With the integrated security functions firewall (Stateful Inspection) and VPN protocol (IPSec), the communications processor protects ET200SP stations and subordinate networks against unauthorized access, and employs encryption to protect data transmission against manipulation and espionage.

- Address space
  - A larger address space of 2560 bytes (2048 bytes for ET 200SP module + 512 bytes for ET 200AL modules) is available within the station.
- CPU 1510SP-1 PN supports the following additional functions:
  - PROFlenergy  
You can find information on the topic of "PROFlenergy" in the PROFINET function manual (<https://support.industry.siemens.com/cs/ww/en/view/49948856>) and in the PROFINET specification on the Internet (<http://www.profibus.com>).
  - Shared device  
You can find information on the topic of "Shared device" in the PROFINET function manual (<https://support.industry.siemens.com/cs/ww/en/view/49948856>).
  - Configuration control  
You can find information on the topic of "Configuration control" in the system manual ET 200SP distributed I/O system (<http://support.automation.siemens.com/WW/view/en/58649293>).
  - Isochronous mode  
You can find information about the "Isochronous mode" topic in the PROFINET (<https://support.industry.siemens.com/cs/ww/en/view/49948856>) function manual.

## 2.4 Operating and display elements

### 2.4.1 Front view of the module with BusAdapter

The figure on the left shows the CPU 1510SP-1 PN including a plugged BA 2xRJ45 BusAdapter. The figure on the right shows a separate view of the BA 2xRJ45 BusAdapter.

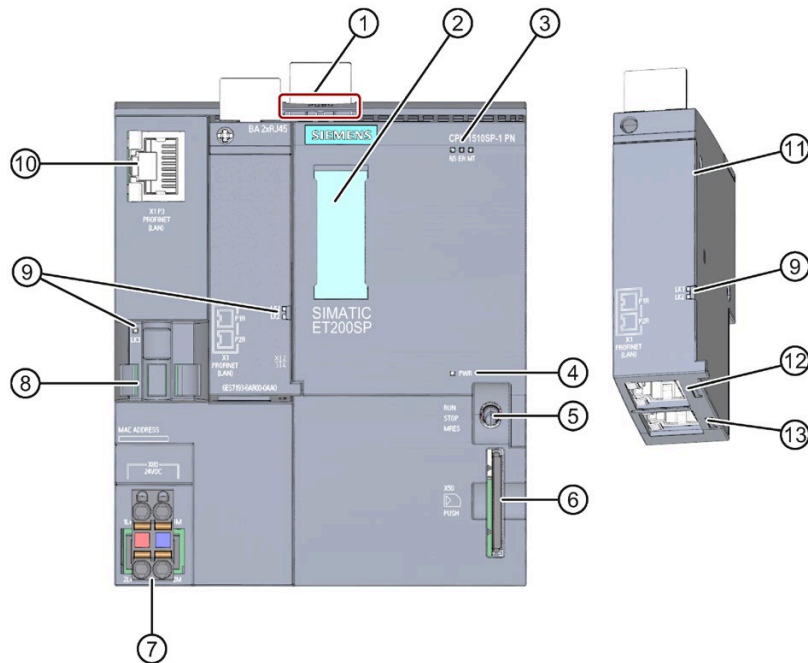

- ① Mounting rail release
- ② Labeling strips
- ③ LEDs for status and error displays
- ④ LED for display of the supply voltage
- ⑤ Mode switch
- ⑥ Slot for the SIMATIC memory card
- ⑦ Connection for supply voltage (included in product package)
- ⑧ Cable support and attachment for port P3 of the PROFINET interface
- ⑨ LEDs for status displays of the PROFINET interface: LK1 and LK2 on BusAdapter, LK3 on CPU
- ⑩ Port P3 of the PROFINET interface: RJ45 socket
- ⑪ Separate view of the BusAdapter
- ⑫ Port P1 R of the PROFINET interface: RJ45 socket on BusAdapter BA 2xRJ45  
R: Ring port for configuring a ring topology with media redundancy
- ⑬ Port P2 R of the PROFINET interface: RJ45 socket on BusAdapter BA 2xRJ45  
R: Ring port for configuring a ring topology with media redundancy

Figure 2-2 Front view of the CPU 1510SP-1 PN with BusAdapter

## 2.5 Mode switch

Use the mode switch to set the CPU operating mode.

The following table shows the position of the switch and the corresponding meaning.

Table 2-1 Mode switch settings

Position	Meaning	Explanation
RUN	RUN mode	The CPU is executing the user program.
STOP	STOP mode	The user program is not being executed.
MRES	Memory reset	Position for CPU memory reset.

## Wiring


This section provides information on the pin assignment of the individual interfaces and the block diagram of the CPU 1510SP-1 PN.

### 24 V DC supply voltage (X80)

The connector for the supply voltage is plugged in when the CPU ships from the factory.

The following table shows the signal names and the descriptions of the pin assignment of the 24 V DC supply voltage.

Table 3- 1 Pin assignment 24 V DC supply voltage

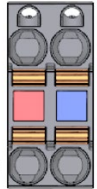View	Signal name <sup>1)</sup>		Description
Connector			
	1	1L+	+ 24 V DC of the supply voltage
	2	1M	Ground of the supply voltage
	3	2M	Ground of the supply voltage for loop-through <sup>2)</sup>
	4	2L+	+ 24 V DC of the supply voltage for loop-through <sup>2)</sup>


<sup>1)</sup> 1L+ and 2L+ as well as 1M and 2M are bridged internally

<sup>2)</sup> Maximum 10 A permitted

### PROFINET IO interface on the CPU (X1 P3)

The assignment corresponds to the Ethernet standard for an RJ45 connector.


- When autonegotiation is deactivated, the RJ45 socket is allocated as a switch (MDI-X).
- If autonegotiation is activated, then autocrossing is active and the RJ45 socket has either a device assignment (MDI) or switch assignment (MDI-X).

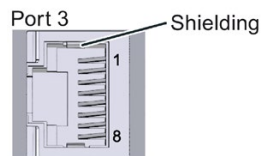

### PROFINET IO interface on the BusAdapter BA 2xRJ45 (X1 P1 R and X1 P2 R)

The assignment at the BA 2xRJ45 BusAdapter corresponds to the Ethernet standard for an RJ45 connector.


Table 3-2 Pin assignment PROFINET IO interface on the BusAdapter BA 2xRJ45

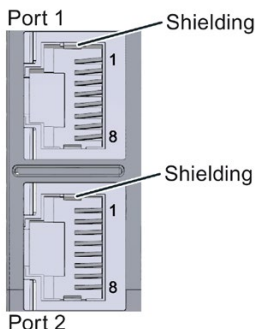View	Designation
 <p>Port 1</p> <p>Shielding</p> <p>1</p> <p>8</p> <p>Shielding</p> <p>1</p> <p>8</p> <p>Port 2</p>	<ul style="list-style-type: none"> <li>When autonegotiation is deactivated, the RJ45 socket is allocated as a switch (MDI-X).</li> <li>If autonegotiation is activated, then autocrossing is active and the RJ45 socket has either a device assignment (MDI) or switch assignment (MDI-X).</li> </ul>

### PROFINET IO interface on the BusAdapter BA 2xFC (X1 P1 R and X1 P2 R)

The following table shows the pin assignment for the PROFINET IO interface on the BusAdapter BA 2xFC.

Table 3-3 Pin assignment PROFINET IO interface on the BusAdapter BA 2xFC

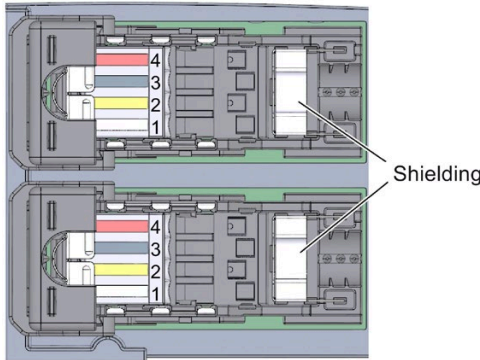View	Signal name	Designation	
 <p>Port 1</p> <p>4</p> <p>3</p> <p>2</p> <p>1</p> <p>Shielding</p> <p>4</p> <p>3</p> <p>2</p> <p>1</p> <p>Port 2</p>	1	TD	Transmit data +
	2	TD_N	Transmit data -
	3	RD	Receive data +
	4	RD_N	Receive data -

### Reference

You can find additional information on the topics of "Connecting the CPU" and "Accessories/spare parts" in the system manual ET 200SP distributed I/O system (<http://support.automation.siemens.com/WW/view/en/58649293>).

## Assignment of the MAC addresses

The MAC address is a globally unique device identifier that is assigned to each PROFINET device in the factory. Its 6 bytes are divided into 3 bytes for the manufacturer ID and 3 bytes for the device ID (serial number). The front of the CPU 1510SP-1 PN is lasered with the MAC address of the PROFINET interface.

The PROFINET interface (X1) of the CPU 1510SP-1 PN has three ports. Port 3 is located on the CPU. Ports 1 and 2 are located on the optional BusAdapter. In addition to the PROFINET interface, each PROFINET port also has a separate MAC address. There is therefore a total of four MAC addresses for the CPU 1510SP-1 PN.

The MAC addresses of the PROFINET ports are needed for the LLDP protocol, for example for the neighborhood discovery function.

The table below shows how the MAC addresses are assigned.


Table 3- 4 Assignment of the MAC addresses

	Assignment
<b>MAC address 1</b>	PROFINET interface X1 <ul style="list-style-type: none"> <li>• Visible in STEP 7 for accessible devices</li> <li>• Lasered on the front of the CPU (start of the number range)</li> </ul>
<b>MAC address 2</b>	Port X1 P1 R (required for LLDP, for example)
<b>MAC address 3</b>	Port X1 P2 R (required for LLDP, for example)
<b>MAC address 4</b>	Port X1 P3 (required for LLDP, for example)



**Block diagram**

The following figure shows the block diagram of the CPU 1510SP-1 PN.

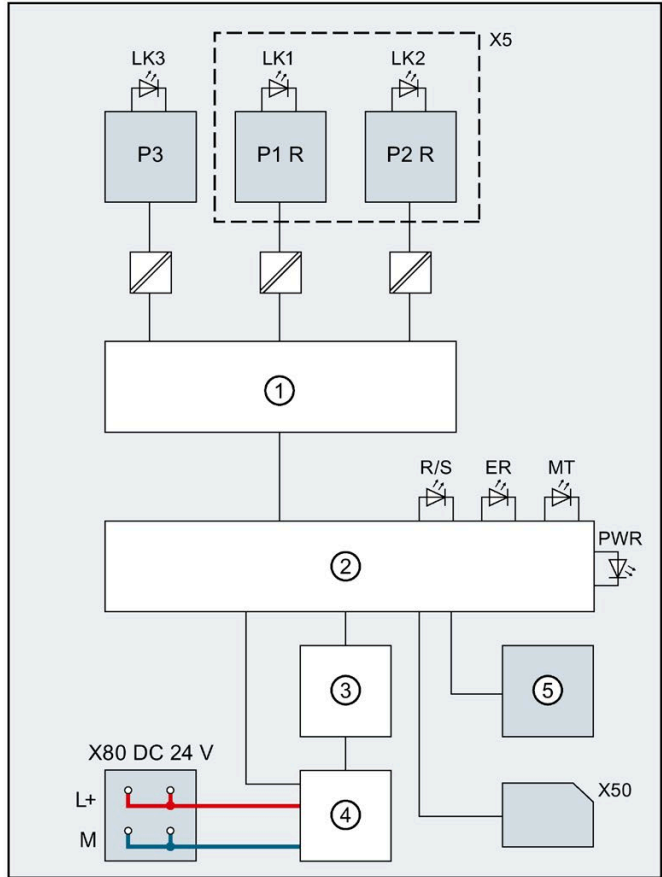

①	PROFINET switch	P1 R	PROFINET interface X1 Port 1
②	Electronics	P2 R	PROFINET interface X1 Port 2
③	Backplane bus interface	P3	PROFINET interface X1 Port 3
④	Internal supply voltage	L+	24 V DC supply voltage
⑤	RUN/STOP/MRES mode selector	M	Ground
X5	BusAdapter	LK1, 2, 3	LED Link TX/RX
X50	SIMATIC memory card	R/S	RUN/STOP LED (yellow/green)
X80 24 V DC	Infeed of supply voltage	ER	ERROR LED (red)
		MT	MAINT LED (yellow)
		PWR	POWER LED (green)

Figure 3-1 Block diagram of the CPU 1510SP-1 PN

# Interrupts, error messages, diagnostics and system alarms

# 4

The status and error displays of the CPU 1510SP-1 PN are described below.


You will find additional information on "Interrupts" in the STEP 7 online help.

You can find additional information on the topics of "Diagnostics" and "System alarms" in the Diagnostics (<http://support.automation.siemens.com/WW/view/en/59192926>) function manual.

## 4.1 Status and error display of the CPU

### LED displays

The figure below shows the LED displays of the CPU 1510SP-1 PN and the BA 2xRJ45 BusAdapter.

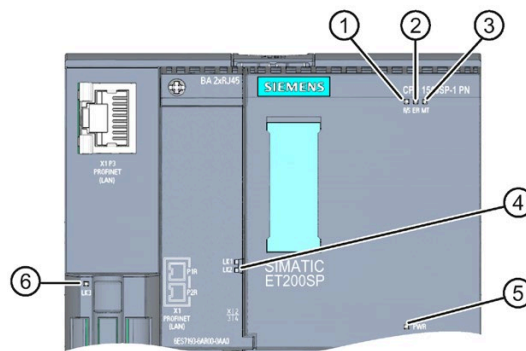

- ① RUN/STOP LED (yellow/green LED)
- ② ERROR LED (red LED)
- ③ MAINT LED (yellow LED)
- ④ LINK RX/TX LED for ports X1 P1 and X1 P2 (green LEDs on BusAdapter)
- ⑤ POWER LED (green LED)
- ⑥ LINK RX/TX LED for port X1 P3 (green LED on CPU)





















































Figure 4-1 LED displays on the CPU and BusAdapter

4.1 Status and error display of the CPU

**Meaning of the POWER, RUN/STOP, ERROR and MAINT LEDs**

CPU 1510SP-1 PN features an LED for monitoring the supply voltage of the electronics (PWR) and three LEDs for displaying the current operating and diagnostics status. The following table shows the meaning of the various combinations of colors for the POWER, RUN/STOP, ERROR and MAINT LEDs.

Table 4- 1 Meaning of the LEDs




POWER LED	RUN/STOP LED	ERROR LED	MAINT LED	Meaning
 LED off	 LED off	 LED off	 LED off	Missing or insufficient power supply on the CPU.
 LED lit green	 LED off	 LED flashes red	 LED off	An error has occurred.
 LED lit green	 LED lit green	 LED off	 LED off	CPU is in RUN mode.
 LED lit green	 LED lit green	 LED flashes red	 LED off	A diagnostics event is pending.
 LED lit green	 LED lit green	 LED off	 LED lit yellow	Maintenance demanded for the plant. The affected hardware must be checked/replaced within a short period of time.
 LED lit green	 LED lit green	 LED off	 LED flashes yellow	Active Force job Bad configuration
 LED lit green	 LED lit yellow	 LED flashes red	 LED off	A diagnostics event is pending.
 LED lit green	 LED lit yellow	 LED off	 LED flashes yellow	Firmware update successfully completed.
 LED lit green	 LED lit yellow	 LED off	 LED off	CPU is in STOP mode.
 LED lit green	 LED lit yellow	 LED flashes red	 LED flashes yellow	The program on the SIMATIC memory card is causing an error. Firmware update using SIMATIC memory card has failed. The CPU has detected an error state. Additional information is available via the CPU diagnostic buffer.
 LED lit green	 LED flashes yellow	 LED off	 LED off	CPU is performing internal activities during STOP, e.g. startup after STOP. Download of the user program from the SIMATIC memory card CPU carries out a program with active breakpoint.
 LED lit green	 LED flashes yellow/green	 LED off	 LED off	Startup (transition from STOP → RUN)
 LED lit green	 LED lit green	 LED flashes red	 LED flashes yellow	Startup (CPU booting)

POWER LED	RUN/STOP LED	ERROR LED	MAINT LED	Meaning
LED lit green	LED flashes yellow/green	LED flashes red	LED flashes yellow	Test of LEDs during startup, inserting a module.
				LED flashing test

### Meaning of the LINK LED

Each port has a LINK LED (LK1, LK2, LK3). The table below shows the various "LED scenarios" of the ports of the CPU 1510SP-1 PN.

Table 4- 2 Meaning of the LEDs

LINK LED	Meaning
 LED off	There is no Ethernet connection between the PROFINET interface of the PROFINET device and the communication partner. No data is currently being sent/received via the PROFINET interface. There is no LINK connection.
 LED flashes green	The "LED flashing test" is being performed.
 LED lit green	There is an Ethernet connection between the PROFINET interface of your PROFINET device and a communication partner.

### Note

#### "LED" instruction

You can read the status (e.g. "On" or "Off") of LEDs of a CPU or a module using the "LED" instruction. Note, however, that it is not possible to read the LED status of the LINK RX/TX LEDs on all S7-1500 CPUs.

You can find additional information on the "LED" instruction in the STEP 7 online help.

## Technical specifications

The following table shows the technical specifications as of 05/2021. You will find a data sheet including daily updated technical specifications on the Internet (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7510-1DJ01-0AB0/td?dl=en>).

<b>Article number</b>	<b>6ES7510-1DJ01-0AB0</b>
<b>General information</b>	
Product type designation	CPU 1510SP-1 PN
HW functional status	FS05
Firmware version	V2.9
<b>Product function</b>	
• I&M data	Yes; I&M0 to I&M3
• Module swapping during operation (hot swapping)	Yes; Multi-hot swapping
• Isochronous mode	Yes; Only with PROFINET; with minimum OB 6x cycle of 625 $\mu$ s
<b>Engineering with</b>	
• STEP 7 TIA Portal configurable/integrated from version	V17 (FW V2.9) / V13 SP1 Update 4 (FW V1.8) or higher
<b>Configuration control</b>	
via dataset	Yes
<b>Control elements</b>	
Mode selector switch	1
<b>Supply voltage</b>	
Type of supply voltage	24 V DC
permissible range, lower limit (DC)	19.2 V
permissible range, upper limit (DC)	28.8 V
Reverse polarity protection	Yes
<b>Mains buffering</b>	
• Mains/voltage failure stored energy time	5 ms
<b>Input current</b>	
Current consumption (rated value)	0.6 A
Current consumption, max.	0.9 A
Inrush current, max.	4.7 A; Rated value
$I^2t$	0.14 A <sup>2</sup> ·s
<b>Power</b>	
Infeed power to the backplane bus	8.75 W
<b>Power loss</b>	
Power loss, typ.	5.6 W
<b>Memory</b>	
Number of slots for SIMATIC memory card	1
SIMATIC memory card required	Yes

<b>Article number</b>	<b>6ES7510-1DJ01-0AB0</b>
<b>Work memory</b>	
<ul style="list-style-type: none"> <li>integrated (for program)</li> </ul>	100 kbyte
<ul style="list-style-type: none"> <li>integrated (for data)</li> </ul>	750 kbyte
<b>Load memory</b>	
<ul style="list-style-type: none"> <li>Plug-in (SIMATIC Memory Card), max.</li> </ul>	32 Gbyte
<b>Backup</b>	
<ul style="list-style-type: none"> <li>maintenance-free</li> </ul>	Yes
<b>CPU processing times</b>	
for bit operations, typ.	72 ns
for word operations, typ.	86 ns
for fixed point arithmetic, typ.	115 ns
for floating point arithmetic, typ.	461 ns
<b>CPU-blocks</b>	
Number of elements (total)	4 000; Blocks (OB, FB, FC, DB) and UDTs
<b>DB</b>	
<ul style="list-style-type: none"> <li>Number range</li> </ul>	1 ... 60 999; subdivided into: number range that can be used by the user: 1 ... 59 999, and number range of DBs created via SFC 86: 60 000 ... 60 999
<ul style="list-style-type: none"> <li>Size, max.</li> </ul>	750 kbyte; For DBs with absolute addressing, the max. size is 64 KB
<b>FB</b>	
<ul style="list-style-type: none"> <li>Number range</li> </ul>	0 ... 65 535
<ul style="list-style-type: none"> <li>Size, max.</li> </ul>	100 kbyte
<b>FC</b>	
<ul style="list-style-type: none"> <li>Number range</li> </ul>	0 ... 65 535
<ul style="list-style-type: none"> <li>Size, max.</li> </ul>	100 kbyte
<b>OB</b>	
<ul style="list-style-type: none"> <li>Size, max.</li> </ul>	100 kbyte
<ul style="list-style-type: none"> <li>Number of free cycle OBs</li> </ul>	100
<ul style="list-style-type: none"> <li>Number of time alarm OBs</li> </ul>	20
<ul style="list-style-type: none"> <li>Number of delay alarm OBs</li> </ul>	20
<ul style="list-style-type: none"> <li>Number of cyclic interrupt OBs</li> </ul>	20; With minimum OB 3x cycle of 500 µs
<ul style="list-style-type: none"> <li>Number of process alarm OBs</li> </ul>	50
<ul style="list-style-type: none"> <li>Number of DPV1 alarm OBs</li> </ul>	3
<ul style="list-style-type: none"> <li>Number of isochronous mode OBs</li> </ul>	1
<ul style="list-style-type: none"> <li>Number of technology synchronous alarm OBs</li> </ul>	2
<ul style="list-style-type: none"> <li>Number of startup OBs</li> </ul>	100
<ul style="list-style-type: none"> <li>Number of asynchronous error OBs</li> </ul>	4
<ul style="list-style-type: none"> <li>Number of synchronous error OBs</li> </ul>	2

<b>Article number</b>	<b>6ES7510-1DJ01-0AB0</b>
<ul style="list-style-type: none"> <li>• Number of diagnostic alarm OBs</li> </ul>	1
<b>Nesting depth</b>	
<ul style="list-style-type: none"> <li>• per priority class</li> </ul>	24
<b>Counters, timers and their retentivity</b>	
<b>S7 counter</b>	
<ul style="list-style-type: none"> <li>• Number</li> </ul>	2 048
<b>Retentivity</b>	
– adjustable	Yes
<b>IEC counter</b>	
<ul style="list-style-type: none"> <li>• Number</li> </ul>	Any (only limited by the main memory)
<b>Retentivity</b>	
– adjustable	Yes
<b>S7 times</b>	
<ul style="list-style-type: none"> <li>• Number</li> </ul>	2 048
<b>Retentivity</b>	
– adjustable	Yes
<b>IEC timer</b>	
<ul style="list-style-type: none"> <li>• Number</li> </ul>	Any (only limited by the main memory)
<b>Retentivity</b>	
– adjustable	Yes
<b>Data areas and their retentivity</b>	
Retentive data area (incl. timers, counters, flags), max.	128 kbyte; Available retentive memory for bit memories, timers, counters, DBs, and technology data (axes): 88 KB
<b>Flag</b>	
<ul style="list-style-type: none"> <li>• Size, max.</li> </ul>	16 kbyte
<ul style="list-style-type: none"> <li>• Number of clock memories</li> </ul>	8; 8 clock memory bit, grouped into one clock memory byte
<b>Data blocks</b>	
<ul style="list-style-type: none"> <li>• Retentivity adjustable</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• Retentivity preset</li> </ul>	No
<b>Local data</b>	
<ul style="list-style-type: none"> <li>• per priority class, max.</li> </ul>	64 kbyte; max. 16 KB per block
<b>Address area</b>	
Number of IO modules	1 024; max. number of modules / submodules
<b>I/O address area</b>	
<ul style="list-style-type: none"> <li>• Inputs</li> </ul>	32 kbyte; All inputs are in the process image
<ul style="list-style-type: none"> <li>• Outputs</li> </ul>	32 kbyte; All outputs are in the process image
<b>per integrated IO subsystem</b>	
– Inputs (volume)	8 kbyte
– Outputs (volume)	8 kbyte

<b>Article number</b>	<b>6ES7510-1DJ01-0AB0</b>
<b>per CM/CP</b>	
– Inputs (volume)	8 kbyte
– Outputs (volume)	8 kbyte
<b>Subprocess images</b>	
• Number of subprocess images, max.	32
<b>Address space per module</b>	
• Address space per module, max.	288 byte; For input and output data respectively
<b>Address space per station</b>	
• Address space per station, max.	2 560 byte; for central inputs and outputs; depending on configuration; 2 048 bytes for ET 200SP modules + 512 bytes for ET 200AL modules
<b>Hardware configuration</b>	
Number of distributed IO systems	32; A distributed I/O system is characterized not only by the integration of distributed I/O via PROFINET or PROFIBUS communication modules, but also by the connection of I/O via AS-i master modules or links (e.g. IE/PB-Link)
<b>Number of DP masters</b>	
• Via CM	1
<b>Number of IO Controllers</b>	
• integrated	1
• Via CM	0
<b>Rack</b>	
• Modules per rack, max.	80; CPU + 64 modules + server module (mounting width max. 1 m) + 16 ET 200AL modules
• Quantity of operable ET 200SP modules, max.	64
• Quantity of operable ET 200AL modules, max.	16
• Number of lines, max.	1
<b>PtP CM</b>	
• Number of PtP CMs	the number of connectable PtP CMs is only limited by the number of available slots
<b>Time of day</b>	
<b>Clock</b>	
• Type	Hardware clock
• Backup time	6 wk; At 40 °C ambient temperature, typically
• Deviation per day, max.	10 s; Typ.: 2 s
<b>Operating hours counter</b>	
• Number	16



<b>Article number</b>	<b>6ES7510-1DJ01-0AB0</b>
<b>Clock synchronization</b>	
<ul style="list-style-type: none"> <li>• supported</li> <li>• to DP, master</li> <li>• to DP, slave</li> <li>• in AS, master</li> <li>• in AS, slave</li> <li>• on Ethernet via NTP</li> </ul>	<p>Yes</p> <p>Yes; Via CM DP module</p> <p>Yes; Via CM DP module</p> <p>Yes</p> <p>Yes</p> <p>Yes</p>
<b>Interfaces</b>	
Number of PROFINET interfaces	1
Number of PROFIBUS interfaces	1; Via CM DP module
Optical interface	No
<b>1. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)</li> <li>• Number of ports</li> <li>• integrated switch</li> <li>• BusAdapter (PROFINET)</li> </ul>	<p>Yes; X1 P3; opt. X1 P1 and X1 P2 via BusAdapter BA 2x RJ45</p> <p>3; 1. integr. + 2. via BusAdapter</p> <p>Yes</p> <p>Yes; compatible BusAdapters: BA 2x RJ45, BA 2x FC, BA 2x M12</p>
<b>Protocols</b>	
<ul style="list-style-type: none"> <li>• IP protocol</li> <li>• PROFINET IO Controller</li> <li>• PROFINET IO Device</li> <li>• SIMATIC communication</li> <li>• Open IE communication</li> <li>• Web server</li> <li>• Media redundancy</li> </ul>	<p>Yes; IPv4</p> <p>Yes</p> <p>Yes</p> <p>Yes</p> <p>Yes; Optionally also encrypted</p> <p>Yes</p> <p>Yes; MRP Automanager according to IEC 62439-2 Edition 2.0</p>
<b>PROFINET IO Controller Services</b>	
<ul style="list-style-type: none"> <li>– PG/OP communication</li> <li>– Isochronous mode</li> <li>– Direct data exchange</li> <li>– IRT</li> <li>– PROFlenergy</li> <li>– Prioritized startup</li> <li>– Number of connectable IO Devices, max.</li> <li>– Of which IO devices with IRT, max.</li> </ul>	<p>Yes</p> <p>Yes</p> <p>Yes; Requirement: IRT and isochronous mode (MRPD optional)</p> <p>Yes</p> <p>Yes; per user program</p> <p>Yes; Max. 32 PROFINET devices</p> <p>64; In total, up to 256 distributed I/O devices can be connected via AS-i, PROFIBUS or PROFINET</p> <p>64</p>

Article number	6ES7510-1DJ01-0AB0
<ul style="list-style-type: none"> <li>– Number of connectable IO Devices for RT, max.</li> <li>– of which in line, max.</li> <li>– Number of IO Devices that can be simultaneously activated/deactivated, max.</li> <li>– Number of IO Devices per tool, max.</li> <li>– Updating times</li> </ul>	64 64 8; in total across all interfaces 8 The minimum value of the update time also depends on communication share set for PROFINET IO, on the number of IO devices, and on the quantity of configured user data
<b>Update time for IRT</b>	
<ul style="list-style-type: none"> <li>– for send cycle of 250 µs</li> <li>– for send cycle of 500 µs</li> <li>– for send cycle of 1 ms</li> <li>– for send cycle of 2 ms</li> <li>– for send cycle of 4 ms</li> <li>– With IRT and parameterization of "odd" send cycles</li> </ul>	250 µs to 4 ms; Note: In the case of IRT with isochronous mode, the minimum update time of 625 µs of the isochronous OB is decisive 500 µs to 8 ms; Note: In the case of IRT with isochronous mode, the minimum update time of 625 µs of the isochronous OB is decisive 1 ms to 16 ms 2 ms to 32 ms 4 ms to 64 ms Update time = set "odd" send clock (any multiple of 125 µs: 375 µs, 625 µs ... 3 875 µs)
<b>Update time for RT</b>	
<ul style="list-style-type: none"> <li>– for send cycle of 250 µs</li> <li>– for send cycle of 500 µs</li> <li>– for send cycle of 1 ms</li> <li>– for send cycle of 2 ms</li> <li>– for send cycle of 4 ms</li> </ul>	250 µs to 128 ms 500 µs to 256 ms 1 ms to 512 ms 2 ms to 512 ms 4 ms to 512 ms
<b>PROFINET IO Device</b>	
<b>Services</b>	
<ul style="list-style-type: none"> <li>– PG/OP communication</li> <li>– Isochronous mode</li> <li>– IRT</li> <li>– PROFlenergy</li> <li>– Shared device</li> <li>– Number of IO Controllers with shared device, max.</li> <li>– activation/deactivation of I-devices</li> <li>– Asset management record</li> </ul>	Yes No Yes Yes; per user program Yes 4 Yes; per user program Yes; per user program

<b>Article number</b>	<b>6ES7510-1DJ01-0AB0</b>
<b>2. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• RS 485</li> </ul>	Yes; Via CM DP module
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	1
<b>Protocols</b>	
<ul style="list-style-type: none"> <li>• PROFIBUS DP master</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• PROFIBUS DP slave</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• SIMATIC communication</li> </ul>	Yes
<b>PROFIBUS DP master</b>	
<ul style="list-style-type: none"> <li>• Number of connections, max.</li> </ul>	48; Of which 4 each reserved for ES and HMI
<ul style="list-style-type: none"> <li>• Number of DP slaves, max.</li> </ul>	125; In total, up to 256 distributed I/O devices can be connected via AS-i, PROFIBUS or PROFINET
<b>Services</b>	
<ul style="list-style-type: none"> <li>– PG/OP communication</li> </ul>	Yes
<ul style="list-style-type: none"> <li>– Equidistance</li> </ul>	No
<ul style="list-style-type: none"> <li>– Isochronous mode</li> </ul>	No
<ul style="list-style-type: none"> <li>– Activation/deactivation of DP slaves</li> </ul>	Yes
<b>Interface types</b>	
<b>RJ 45 (Ethernet)</b>	
<ul style="list-style-type: none"> <li>• 100 Mbps</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• Autonegotiation</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• Autocrossing</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• Industrial Ethernet status LED</li> </ul>	Yes
<b>RS 485</b>	
<ul style="list-style-type: none"> <li>• Transmission rate, max.</li> </ul>	12 Mbit/s
<b>Protocols</b>	
<b>Number of connections</b>	
<ul style="list-style-type: none"> <li>• Number of connections, max.</li> </ul>	96; via integrated interfaces of the CPU and connected CPs / CMs
<ul style="list-style-type: none"> <li>• Number of connections reserved for ES/HMI/web</li> </ul>	10
<ul style="list-style-type: none"> <li>• Number of connections via integrated interfaces</li> </ul>	64
<ul style="list-style-type: none"> <li>• Number of connections per CP/CM</li> </ul>	32
<ul style="list-style-type: none"> <li>• Number of S7 routing paths</li> </ul>	16

<b>Article number</b>	<b>6ES7510-1DJ01-0AB0</b>
<b>Redundancy mode</b>	
<ul style="list-style-type: none"> <li>• H-Sync forwarding</li> </ul>	Yes
<b>Media redundancy</b>	
<ul style="list-style-type: none"> <li>– Media redundancy</li> </ul>	Yes; only via BusAdapter
<ul style="list-style-type: none"> <li>– MRP</li> </ul>	Yes
<ul style="list-style-type: none"> <li>– MRP interconnection, supported</li> </ul>	Yes; as MRP ring node according to IEC 62439-2 Edition 3.0
<ul style="list-style-type: none"> <li>– MRPD</li> </ul>	Yes; Requirement: IRT
<ul style="list-style-type: none"> <li>– Switchover time on line break, typ.</li> </ul>	200 ms; For MRP, bumpless for MRPD
<ul style="list-style-type: none"> <li>– Number of stations in the ring, max.</li> </ul>	50
<b>SIMATIC communication</b>	
<ul style="list-style-type: none"> <li>• PG/OP communication</li> </ul>	Yes; encryption with TLS V1.3 pre-selected
<ul style="list-style-type: none"> <li>• S7 routing</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• Data record routing</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• S7 communication, as server</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• S7 communication, as client</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• User data per job, max.</li> </ul>	See online help (S7 communication, user data size)
<b>Open IE communication</b>	
<ul style="list-style-type: none"> <li>• TCP/IP</li> </ul>	Yes
<ul style="list-style-type: none"> <li>– Data length, max.</li> </ul>	64 kbyte
<ul style="list-style-type: none"> <li>– several passive connections per port, supported</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• ISO-on-TCP (RFC1006)</li> </ul>	Yes
<ul style="list-style-type: none"> <li>– Data length, max.</li> </ul>	64 kbyte
<ul style="list-style-type: none"> <li>• UDP</li> </ul>	Yes
<ul style="list-style-type: none"> <li>– Data length, max.</li> </ul>	2 kbyte; 1 472 bytes for UDP broadcast
<ul style="list-style-type: none"> <li>– UDP multicast</li> </ul>	Yes; Max. 5 multicast circuits
<ul style="list-style-type: none"> <li>• DHCP</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• DNS</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• SNMP</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• DCP</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• LLDP</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• Encryption</li> </ul>	Yes; Optional
<b>Web server</b>	
<ul style="list-style-type: none"> <li>• HTTP</li> </ul>	Yes; Standard and user pages
<ul style="list-style-type: none"> <li>• HTTPS</li> </ul>	Yes; Standard and user pages

Article number	6ES7510-1DJ01-0AB0
<b>OPC UA</b>	
• Runtime license required	Yes; "Small" license required
• OPC UA Client	Yes
– Application authentication	Yes
– Security policies	Available security policies: None, Basic128Rsa15, Basic256Rsa15, Basic256Sha256
– User authentication	"anonymous" or by user name & password
– Number of connections, max.	4
– Number of nodes of the client interfaces, max.	1 000
– Number of elements for one call of OPC-UA_NodeGetHandleList/OPC-UA_ReadList/OPC-UA_WriteList, max.	300
– Number of elements for one call of OPC-UA_NameSpaceGetIndexList, max.	20
– Number of elements for one call of OPC-UA_MethodGetHandleList, max.	100
– Number of simultaneous calls of the client instructions per connection (except OPC-UA_ReadList, OPC-UA_WriteList, OPC-UA_MethodCall), max.	1
– Number of simultaneous calls of the client instructions OPC-UA_ReadList, OPC-UA_WriteList and OPC-UA_MethodCall, max.	5
– Number of registerable nodes, max.	5 000
– Number of registerable method calls of OPC-UA_MethodCall, max.	100
– Number of inputs/outputs when calling OPC-UA_MethodCall, max.	20
• OPC UA Server	Yes; Data access (read, write, subscribe), method call, custom address space
– Application authentication	Yes
– Security policies	Available security policies: None, Basic128Rsa15, Basic256Rsa15, Basic256Sha256
– User authentication	"anonymous" or by user name & password
– GDS support (certificate management)	Yes
– Number of sessions, max.	32
– Number of accessible variables, max.	50 000
– Number of registerable nodes, max.	10 000
– Number of subscriptions per session, max.	20
– Sampling interval, min.	100 ms

Article number	6ES7510-1DJ01-0AB0
<ul style="list-style-type: none"> <li>– Publishing interval, min.</li> <li>– Number of server methods, max.</li> <li>– Number of inputs/outputs per server method, max.</li> <li>– Number of monitored items, max.</li> <li>– Number of nodes for user-defined server interfaces, max.</li> <li>• Alarms and Conditions               <ul style="list-style-type: none"> <li>– Number of program alarms</li> <li>– Number of alarms for system diagnostics</li> </ul> </li> </ul>	500 ms 20 20 1 000; for 1 s sampling interval and 1 s send interval 1 000 Yes 100 50
<b>Further protocols</b>	
<ul style="list-style-type: none"> <li>• MODBUS</li> </ul>	Yes; MODBUS TCP
<b>S7 message functions</b>	
Number of login stations for message functions, max.	32
Program alarms	Yes
Number of configurable program messages, max.	5 000; Program messages are generated by the "Program_Alarm" block, ProDiag or GRAPH
Number of loadable program messages in RUN, max.	2 500
<b>Test commissioning functions</b>	
Joint commission (Team Engineering)	Yes; Parallel online access possible for up to 5 engineering systems
Status block	Yes; Up to 8 simultaneously (in total across all ES clients)
Single step	No
Number of breakpoints	8
<b>Status/control</b>	
<ul style="list-style-type: none"> <li>• Status/control variable</li> <li>• Variables</li> <li>• Number of variables, max.               <ul style="list-style-type: none"> <li>– of which status variables, max.</li> <li>– of which control variables, max.</li> </ul> </li> </ul>	Yes Inputs/outputs, memory bits, DBs, distributed I/Os, timers, counters 200; per job 200; per job
<b>Forcing</b>	
<ul style="list-style-type: none"> <li>• Forcing</li> <li>• Forcing, variables</li> <li>• Number of variables, max.</li> </ul>	Yes Peripheral inputs/outputs 200

<b>Article number</b>	<b>6ES7510-1DJ01-0AB0</b>
<b>Diagnostic buffer</b>	
<ul style="list-style-type: none"> <li>• present</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• Number of entries, max.</li> </ul>	1 000
<ul style="list-style-type: none"> <li>– of which powerfail-proof</li> </ul>	500
<b>Traces</b>	
<ul style="list-style-type: none"> <li>• Number of configurable Traces</li> </ul>	4; Up to 512 KB of data per trace are possible
<b>Interrupts/diagnostics/status information</b>	
<b>Diagnostics indication LED</b>	
<ul style="list-style-type: none"> <li>• RUN/STOP LED</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• ERROR LED</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• MAINT LED</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• Monitoring of the supply voltage (PWR-LED)</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• Connection display LINK TX/RX</li> </ul>	Yes
<b>Supported technology objects</b>	
Motion Control	Yes; Note: The number of technology objects affects the cycle time of the PLC program; selection guide via the TIA Selection Tool
<ul style="list-style-type: none"> <li>• Number of available Motion Control resources for technology objects</li> </ul>	800
<ul style="list-style-type: none"> <li>• Required Motion Control resources</li> </ul>	
<ul style="list-style-type: none"> <li>– per speed-controlled axis</li> </ul>	40
<ul style="list-style-type: none"> <li>– per positioning axis</li> </ul>	80
<ul style="list-style-type: none"> <li>– per synchronous axis</li> </ul>	160
<ul style="list-style-type: none"> <li>– per external encoder</li> </ul>	80
<ul style="list-style-type: none"> <li>– per output cam</li> </ul>	20
<ul style="list-style-type: none"> <li>– per cam track</li> </ul>	160
<ul style="list-style-type: none"> <li>– per probe</li> </ul>	40
<ul style="list-style-type: none"> <li>• Positioning axis</li> </ul>	
<ul style="list-style-type: none"> <li>– Number of positioning axes at motion control cycle of 4 ms (typical value)</li> </ul>	5
<ul style="list-style-type: none"> <li>– Number of positioning axes at motion control cycle of 8 ms (typical value)</li> </ul>	10
Controller	
<ul style="list-style-type: none"> <li>• PID_Compact</li> </ul>	Yes; Universal PID controller with integrated optimization
<ul style="list-style-type: none"> <li>• PID_3Step</li> </ul>	Yes; PID controller with integrated optimization for valves
<ul style="list-style-type: none"> <li>• PID-Temp</li> </ul>	Yes; PID controller with integrated optimization for temperature
Counting and measuring	
<ul style="list-style-type: none"> <li>• High-speed counter</li> </ul>	Yes

<b>Article number</b>	<b>6ES7510-1DJ01-0AB0</b>
<b>Standards, approvals, certificates</b>	
<b>Highest safety class achievable in safety mode</b>	
<ul style="list-style-type: none"> <li>• Performance level according to ISO 13849-1</li> <li>• SIL acc. to IEC 61508</li> </ul>	<p>none</p> <p>No</p>
<b>Ambient conditions</b>	
<b>Ambient temperature during operation</b>	
<ul style="list-style-type: none"> <li>• horizontal installation, min.</li> <li>• horizontal installation, max.</li> <li>• vertical installation, min.</li> <li>• vertical installation, max.</li> </ul>	<p>-25 °C; No condensation</p> <p>60 °C</p> <p>-25 °C; No condensation</p> <p>50 °C</p>
<b>Altitude during operation relating to sea level</b>	
<ul style="list-style-type: none"> <li>• Installation altitude above sea level, max.</li> </ul>	5 000 m; Restrictions for installation altitudes > 2 000 m, see manual
<b>Configuration</b>	
<b>Programming</b>	
<b>Programming language</b>	
<ul style="list-style-type: none"> <li>– LAD</li> <li>– FBD</li> <li>– STL</li> <li>– SCL</li> <li>– GRAPH</li> </ul>	<p>Yes</p> <p>Yes</p> <p>Yes</p> <p>Yes</p> <p>Yes</p>
<b>Know-how protection</b>	
<ul style="list-style-type: none"> <li>• User program protection/password protection</li> <li>• Copy protection</li> <li>• Block protection</li> </ul>	<p>Yes</p> <p>Yes</p> <p>Yes</p>
<b>Access protection</b>	
<ul style="list-style-type: none"> <li>• protection of confidential configuration data</li> <li>• Protection level: Write protection</li> <li>• Protection level: Read/write protection</li> <li>• Protection level: Complete protection</li> </ul>	<p>Yes</p> <p>Yes</p> <p>Yes</p> <p>Yes</p>
<b>Cycle time monitoring</b>	
<ul style="list-style-type: none"> <li>• lower limit</li> <li>• upper limit</li> </ul>	<p>adjustable minimum cycle time</p> <p>adjustable maximum cycle time</p>
<b>Dimensions</b>	
Width	100 mm
Height	117 mm
Depth	75 mm



<b>Article number</b>	<b>6ES7510-1DJ01-0AB0</b>
<b>Weights</b>	
Weight, approx.	310 g

### Technical specifications of the BusAdapter BA 2×RJ45

<b>Article number</b>	<b>6ES7193-6AR00-0AA0</b>
<b>General information</b>	
Product type designation	BA 2x RJ45
<b>Interfaces</b>	
Number of PROFINET interfaces	1
<b>Supports protocol for PROFINET IO</b>	
• Number of RJ45 ports	2
• Number of SCRJ ports	0
• Number of LC ports	0
<b>Cable length</b>	
– Cu conductors	100 m
<b>Ambient conditions</b>	
<b>Ambient temperature during operation</b>	
• horizontal installation, min.	-30 °C
• horizontal installation, max.	60 °C
• vertical installation, min.	-30 °C
• vertical installation, max.	50 °C
<b>Altitude during operation relating to sea level</b>	
• Installation altitude above sea level, max.	2 000 m; On request: Installation altitudes greater than 2 000 m
<b>Dimensions</b>	
Width	20 mm
Height	69,5 mm
Depth	59 mm
<b>Weights</b>	
Weight, approx.	46 g

## Technical specifications of the BusAdapter BA 2xFC

<b>Article number</b>	<b>6ES7193-6AF00-0AA0</b>
<b>General information</b>	
Product type designation	BA 2xFC
<b>Interfaces</b>	
Number of PROFINET interfaces	1
<b>Supports protocol for PROFINET IO</b>	
<ul style="list-style-type: none"> <li>Number of FC (FastConnect) connections</li> </ul>	2
<b>Cable length</b>	
– Cu conductors	100 m
<b>Ambient conditions</b>	
<b>Ambient temperature during operation</b>	
<ul style="list-style-type: none"> <li>horizontal installation, min.</li> <li>horizontal installation, max.</li> <li>vertical installation, min.</li> <li>vertical installation, max.</li> </ul>	-30 °C 60 °C -30 °C 50 °C
<b>Altitude during operation relating to sea level</b>	
<ul style="list-style-type: none"> <li>Installation altitude above sea level, max.</li> </ul>	2 000 m; On request: Installation altitudes greater than 2 000 m
<b>Dimensions</b>	
Width	20 mm
Height	69.5 mm
Depth	59 mm
<b>Weights</b>	
Weight, approx.	53 g

## General technical specifications

You can find information on the general technical specifications, such as standards and approvals, electromagnetic compatibility, protection class, etc., in the system manual ET 200SP distributed I/O system (<http://support.automation.siemens.com/WW/view/en/58649293>).

## Dimension drawing

This section contains a dimension drawing of the module mounted on a mounting rail. Always observe the specified dimensions for installation in cabinets, control rooms, etc.

### Dimension drawing of the CPU 1510SP-1 PN

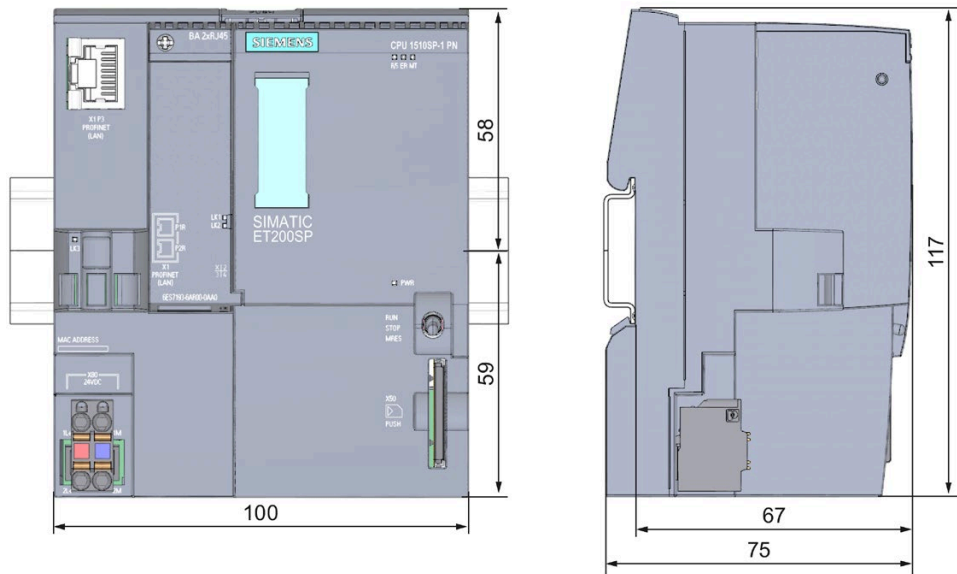


Figure A-1 Dimensional drawing CPU 1510SP-1 PN