



SIMATIC NET

**Industrial Remote Communication
Remote Networks
SCALANCE M874, M876**

Operating Instructions

Preface

Description of the device

1

Installation

2

Connecting up

3

Dimension drawing

4

Technical specifications

5

Approvals

A

07/2014

C79000-G89760-C331-03

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 DANGER
indicates that death or severe personal injury will result if proper precautions are not taken.
 WARNING
indicates that death or severe personal injury may result if proper precautions are not taken.
 CAUTION
indicates that minor personal injury can result if proper precautions are not taken.
NOTICE
indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

 WARNING
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Preface

Purpose of the Operating Instructions

These compact operating instructions contain information with which you will be able to install and connect up a device of the SCALANCE M874, M876 product line. The configuration and the integration of the device in a network are not described in these instructions.

Validity of the manual

These operating instructions apply to the following devices:

- SCALANCE M874-2
- SCALANCE M874-3
- SCALANCE M876-3

Naming of the devices

Classification	Description	Terms used
Product line	For all devices and variants of all product groups within the SCALANCE M-800 product line, the term M-800 is used.	M-800
Product group	For all devices and variants of a product group, only the product group is used.	M87x
Device	For a device, only the device name is used.	M876-3 M874-2 M874-3

Further documentation

- System manual "Industrial Ethernet"

The system manual contains information on other SIMATIC NET products that you can operate along with the devices of this product line in an Industrial Ethernet network.

There, you will find among other things optical performance data of the communications partner that you require for the installation.

The "SIMATIC NET Industrial Ethernet" system manual can be found on the Internet pages of Siemens Industry Online Support under the following entry ID:27069465 (<http://support.automation.siemens.com/WW/view/wn/27069465>)

- "Passive network components" system manual

This system manual contains installation instructions for several of the most common components and guidelines for setting up networked automation plants in buildings.

The "Passive Network Components" system manual can be found on the Internet pages of Siemens Industry Online Support under the following entry ID:84922825 (<http://support.automation.siemens.com/WW/view/en/84922825>)

SIMATIC NET manuals

You will find SIMATIC NET manuals on the Internet pages of Siemens Industry Online Support:

- using the search function:

Link to Siemens Industry Online Support (<http://support.automation.siemens.com/>)

Enter the entry ID of the relevant manual as the search item.

- In the navigation panel on the left hand side in the area "Industrial Communication":

Link to the area "Industrial Communication"

(<http://support.automation.siemens.com/WW/view/en/10805878/133400>)

Go to the required product group and make the following settings:
tab "Entry list", Entry type "Manuals"

You will find the documentation for the SIMATIC NET products relevant here on the data medium that ships with some products:

- Product CD / product DVD
- SIMATIC NET Manual Collection

You will find the order numbers for the Siemens products of relevance here in the following catalogs:

- SIMATIC NET Industrial Communication / Industrial Identification, catalog IK PI
- SIMATIC Products for Totally Integrated Automation and Micro Automation, catalog ST 70
- Industry Mall - catalog and ordering system for automation and drive technology, Online catalog (<http://eb.automation.siemens.com/>)

You can request the catalogs and additional information from your Siemens representative.

Security messages

Note

Siemens offers IT security mechanisms for its automation and drive product portfolio in order to support the safe operation of the plant/machine. Our products are also continuously developed further with regard to IT security. We therefore recommend that you regularly check for updates of our products and that you only use the latest versions. You will find information in:

(<http://support.automation.siemens.com/WW/llisapi.dll?func=cslib.csinfo2&aktprim=99&lang=en>)

Here, you can register for a product-specific newsletter.

For the safe operation of a plant/machine, however, it is also necessary to integrate the automation components into an overall IT security concept for the entire plant/machine, which corresponds to the state-of-the-art IT technology. You will find information on this in: (<http://www.siemens.com/industrialsecurity>)

Products from other manufacturers that are being used must also be taken into account.

License conditions

Note

Open source software

Read the license conditions for open source software carefully before using the product.

You will find license conditions in the following documents on the supplied data medium:

- DOC_OSS-SCALANCE-M_74.pdf
- DC_LicenseSummaryScalanceM874_76.htm
- DC_LicenseSummaryScalanceM876_76.htm

SIMATIC NET glossary

Explanations of many of the specialist terms used in this documentation can be found in the SIMATIC NET glossary.

You will find the SIMATIC NET glossary here:

- SIMATIC NET Manual Collection or product DVD
The DVD ships with certain SIMATIC NET products.
- On the Internet under the following entry ID:
50305045 (<http://support.automation.siemens.com/WW/view/en/50305045>)

Table of contents

	Preface	3
1	Description of the device	9
1.1	Product characteristics.....	9
1.1.1	SCALANCE M874-2, M874-3	9
1.1.2	SCALANCE M876-3	10
1.2	Unpacking and checking	12
1.3	Accessories	13
1.4	LED display	14
1.4.1	SCALANCE M874-2, M874-3	14
1.4.2	SCALANCE M876-3	16
1.5	SET button	18
1.6	C-PLUG and KEY-PLUG	20
2	Installation	23
2.1	Securing the housing	24
2.2	Wall mounting	25
2.3	Installing on the DIN rail	26
2.4	Installing on the S7-300 standard rail	27
2.5	Installing on the S7-1500 standard rail	28
3	Connecting up.....	31
3.1	Safety when connecting up.....	31
3.2	SIM card	33
3.3	Power supply.....	34
3.4	Grounding	36
3.5	Digital input/output	37
3.6	Antennas	39
3.7	Ethernet port	42
3.8	Replacing the PLUG	43
4	Dimension drawing	45
4.1	SCALANCE M874-2, M874-3	45
4.2	SCALANCE M876-3	47

5	Technical specifications	49
5.1	SCALANCE M874-2.....	49
5.2	SCALANCE M874-3.....	52
5.3	SCALANCE M876-3.....	55
A	Approvals	59
A.1	Note - products in general without shipbuilding approvals	59
A.2	INSTALLATION.....	60
A.3	EU declaration of conformity	62
A.4	ATEX	64
A.5	IECEX	64
A.6	EMC directive	65
A.7	RoHS directive	65
A.8	RCM / C-TICK	65
A.9	FM certification	66
A.10	Conformity with FCC	67
A.11	UL certification (product safety)	69
A.12	UL HAZ. LOC certification (explosion protection)	69
	Index	71

Description of the device

1.1 Product characteristics

1.1.1 SCALANCE M874-2, M874-3

Interfaces

Functionality	M874-2 M874-3
Connectors for external antennas	1 SMA antenna connector
Ethernet interface	2 x RJ-45 10 / 100 Mbps
Digital input/output	1/1

Scope of delivery

The following components ship with the product:

- One device
- A 5-pin terminal block for the power supply
- A 2-pin terminal block for the digital output
- A 2-pin terminal block for the digital input
- Product CD

Note

Not included with the product

The following components do not ship with the product:

- KEY-PLUG / C-PLUG
You will find more detailed information in "C-PLUG and KEY-PLUG (Page 20)".
 - Antennas
You will find more detailed information in "Accessories (Page 13)".
 - SIM card
Use the SIM card from the chosen mobile wireless provider
-

Order numbers

Type	Order number	Description
SCALANCE M874-2	6GK5 874-2AA00-2AA2	Mobile wireless router for 2G (EDGE)
SCALANCE M874-3	6GK5 874-3AA00-2AA2	Mobile wireless router for 3G (HSPA+)

1.1.2 SCALANCE M876-3

Interfaces

Functionality	M876-3
Connectors for external antennas	2 SMA antenna connector
Ethernet interface	4 x RJ-45 10 / 100 Mbps
Digital input/output	1/1

Scope of delivery

The following components ship with the product:

- One device
- A 5-pin terminal block for the power supply
- A 2-pin terminal block for the digital output
- A 2-pin terminal block for the digital input
- Product CD

Note

Not included with the product

The following components do not ship with the product:

- KEY-PLUG / C-PLUG
You will find more detailed information in "C-PLUG and KEY-PLUG (Page 20)".
 - Antennas
You will find more detailed information in "Accessories (Page 13)".
 - SIM card
Use the SIM card from the chosen mobile wireless provider
-

Order numbers

Type	Order number	Description
SCALANCE M876-3	6GK5876-3AA02-2BA2	Mobile wireless router for 3G with antenna diversity

1.2 Unpacking and checking

Unpacking and checking

WARNING
--

Do not use any parts that show evidence of damage
--

If you use damaged parts, there is no guarantee that the device will function according to the specification.

If you use damaged parts, this can lead to the following problems:
--

- | |
|--|
| <ul style="list-style-type: none">• Injury to persons• Loss of the approvals• Violation of the EMC regulations |
|--|

Use only undamaged parts.

1. Make sure that the package is complete.
2. Check all the parts for transport damage.

1.3 Accessories


You will find further information on the accessories program for the M874 in the Industry Mall (<https://eb.automation.siemens.com/goos/WelcomePage.aspx?regionUrl=/en&language=en>)

Antennas

Type	Properties	Order number
ANT 794-3M	Flat antenna for GSM networks, for tri-band with 900 / 1800 / 1900 MHz; weatherproof for indoor and outdoor areas; 1.2 m connecting cable connected permanently to the antenna; SMA connector, including adhesive mounting tape	6NH9870-1AA00
ANT794-4MR	Omnidirectional antenna for GSM and UMTS networks. For GSM with 850 / 900 / 1800 / 1900 MHz and for UMTS with 850 / 900 / 1800 / 1900 / 2200 MHz; omnidirectional; weatherproof for indoor and outdoor areas; 5 m connecting cable connected permanently to the antenna; SMA connector, including installation bracket, screws, wall plugs	6NH9860-1AA00

1.4 LED display


1.4.1 SCALANCE M874-2, M874-3

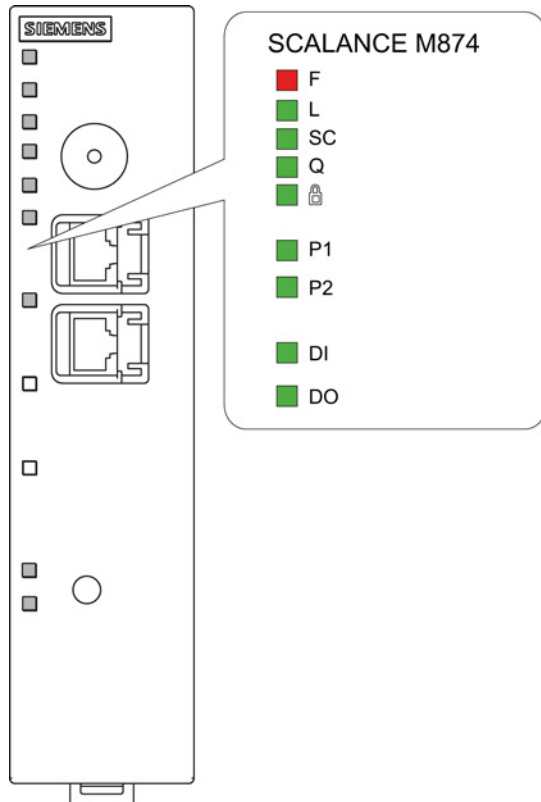

LED	Status	Meaning
F	OFF 	No fault/error.
	ON ■	The device is starting up or an error has occurred. Possible errors/faults: Wrong PIN number
	Flashing 	The bootloader waits in this state for a new firmware file that you can download using TFTP.
L	OFF 	Device turned off, no power supply.
	ON ■	Device turned on, power supply present.

LED	Status	Meaning
SC	OFF 	SIM card OK, no connection.
	ON 	Wrong PIN number / SIM card error
	ON 	Connection established
Q	OFF 	No reception Signal strength: < -109 dBm
	Flashing 	Signal strength poor: -89 dBm to -109 dBm
	On 	Signal strength medium: -73 dBm to -89 dBm
	ON 	Signal strength good: > -73 dBm
	OFF 	VPN not established
	ON 	VPN established
P1/P2	OFF 	Ethernet connection to local computer or LAN not established
	ON 	Ethernet connection to local computer or LAN established
	ON 	Device receiving / sending data
DI	OFF 	Digital input inactive
	ON 	Digital input active.
DO	OFF 	Digital output inactive
	ON 	Digital output active.

1.4.2 SCALANCE M876-3

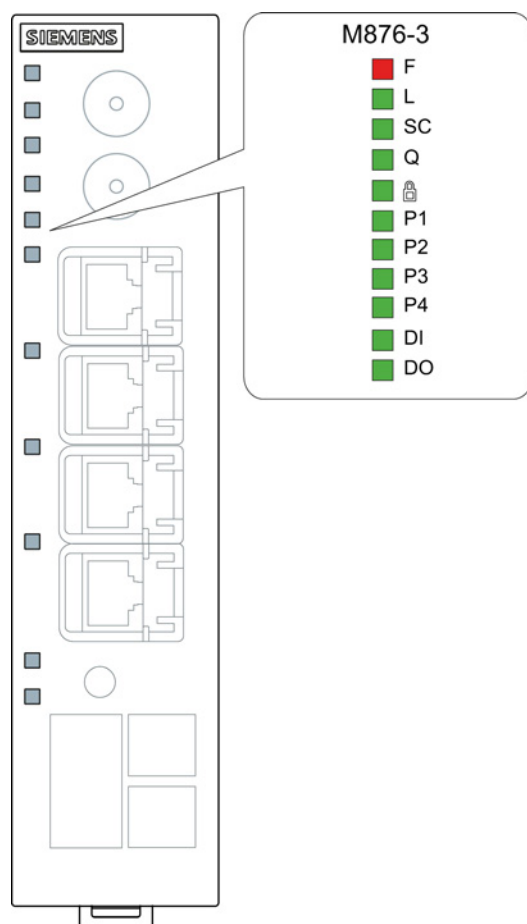


LED	Status	Meaning
F	OFF 	No fault/error.
	ON 	The device is starting up or an error has occurred. Possible errors/faults: Wrong PIN number
	Flashing 	The bootloader waits in this status for a new firmware file that you can download using TFTP.
L	OFF 	Device turned off, no power supply.
	ON 	Device turned on, power supply present.

LED	Status	Meaning
SC	OFF 	SIM card OK, no connection.
	ON 	Wrong PIN number / SIM card error
	ON 	Connection established
Q	OFF 	No reception Signal strength: < -109 dBm
	Flashing 	Signal strength poor: -89 dBm to -109 dBm
	On 	Signal strength medium: -73 dBm to -89 dBm
	ON 	Signal strength good: > -73 dBm
	OFF 	VPN not established
	ON 	VPN established
P1 P2 P3 P4	OFF 	Ethernet connection to local computer or LAN not established
	ON 	Ethernet connection to local computer or LAN established
	ON 	Device receiving / sending data
DI	OFF 	Digital input inactive
	ON 	Digital input active.
DO	OFF 	Digital output inactive
	ON 	Digital output active.

1.5 SET button

With a SCALANCE M-800, the SET button is on the front of the housing beside the LED display.

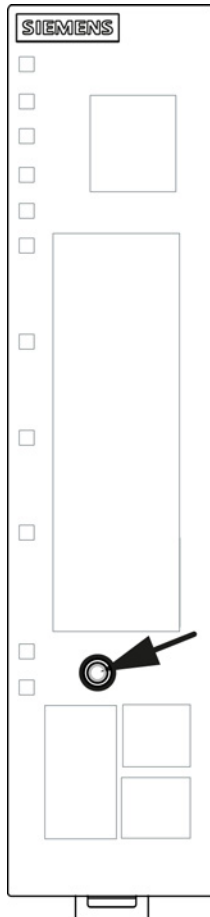

The SET button has the following functions:

- Restart

Hold down the button for longer than 3 seconds to run a restart.

- Loading new firmware

If the normal procedure with the "Load & Save" menu of Web Based Management does not work, the reset button can be used to load new firmware. This situation can occur if there is a power outage during the normal firmware update.

- Hold down the button until the red fault LED (F) starts to flash after approximately 3 seconds.
- Now release the button. The bootloader waits in this status for a new firmware file that you can download using TFTP.

You will find more information in the section "Service and Maintenance" in the SCALANCE M-800 Web Based Management configuration manual.

- Reset to factory defaults
 - Hold down the button until the red fault LED (F) stops flashing after approximately 10 seconds and is permanently lit.
 - Now release the button and wait until the fault LED (F) goes off again. The device then starts automatically with the factory settings and can be reached via the IP address 192.168.1.1.

You will find more information in the section "Service and Maintenance" in the SCALANCE M-800 Web Based Management configuration manual.

1.6 C-PLUG and KEY-PLUG

How it works

The C-PLUG or KEY-PLUG is used to transfer the configuration of the old device to the new device when a device is replaced.

NOTICE

Do not remove or insert a C-PLUG / KEY-PLUG during operation!

A PLUG may only be removed or inserted when the device is turned off.

The device checks whether or not a PLUG is present at one second intervals. If it is detected that the PLUG was removed, there is a restart.

If a valid KEY-PLUG was inserted in the device, the device changes to a defined error state following the restart.

When the new device starts up with the PLUG, it then continues automatically with exactly the same configuration as the old device. One exception to this can be the IP configuration if it is set over DHCP and the DHCP server has not been reconfigured accordingly.

A reconfiguration is necessary if you use functions based on MAC addresses.

If an incorrect PLUG, for example from another product or a damaged PLUG is inserted, the device signals an error with the "F" LED.

You can either remove the PLUG again or select the option to reformat the PLUG.

In terms of the PLUG, devices work in two modes:

- Without PLUG

The device stores the configuration in internal memory. This mode is active when no PLUG is inserted.

- With PLUG

The configuration stored on the PLUG is displayed in WBM in "Information > PLUG". If changes are made to the configuration, the device stores the configuration directly on the PLUG and in the internal memory. This mode is active as soon as a PLUG is inserted. As soon as the device is started with a PLUG inserted, the device starts up with the configuration data on the PLUG.

License information on the KEY-PLUG

In addition to the configuration, the KEY-PLUG also contains a license that allows the use of Siemens Remote Services.

Order numbers

Type	Order number	Description
C-PLUG	6GK1900-0AB00	Exchangeable storage medium (32 MB) for the configuration data
KEY-PLUG M800 SRS	6GK5908-0PA00	Exchangeable storage medium (256 MB) to enable Siemens Remote Services and receiving the configuration data.

See also

Replacing the PLUG (Page 43)

Installation

Safety notices

When installing the device, keep to the safety notices listed below.

WARNING

If a device is operated in an ambient temperature of more than 50 °C, the temperature of the device housing may be higher than 70 °C. The device must therefore be installed so that it is only accessible to service personnel or users that are aware of the reason for restricted access and the required safety measures at an ambient temperature higher than 50 °C.

Safety notices on use in hazardous areas

General safety notices relating to protection against explosion

WARNING

When used in hazardous environments corresponding to Class I, Division 2 or Class I, Zone 2, the device must be installed in a cabinet or a suitable enclosure.

General notes on use according to ATEX and IECEx

WARNING

To comply with EC Directive 94/9 (ATEX95) or the conditions of IECEx, this enclosure must meet the requirements of at least IP54 in compliance with EN 60529.

2.1 Securing the housing

Types of installation

For the device, you have the following options:

- Wall mounting
- Installation on a DIN rail
- Installing on the S7-300 standard rail
- Installing on the S7-1500 standard rail

Strain relief for the cables

Regardless of the type of installation, make sure that there is suitable strain relief for the connecting cable.

Permitted installation direction

- Vertical mounting (ventilation openings at the top and bottom)

Clearances

Keep to the minimum clearances to other components or to walls of a housing so that the convection ventilation of the device is not blocked.

- Below at least 10 cm
- Above at least 10 cm

2.2 Wall mounting

Note


The wall mounting must be capable of supporting four times the weight of the device, but at least 50 N. For information on the weight, refer to the section "Technical specifications (Page 49)".

Requirement

There is a SIM card for the device.

Installation

1. Insert the SIM card, see section "SIM card (Page 33)".
2. Prepare the drill holes for wall mounting. For the precise dimensions, refer to the section "Dimension drawing (Page 45)".
3. Secure the device to the wall with two screws. When mounting on a wall, use mounting fittings suitable for the type of wall.

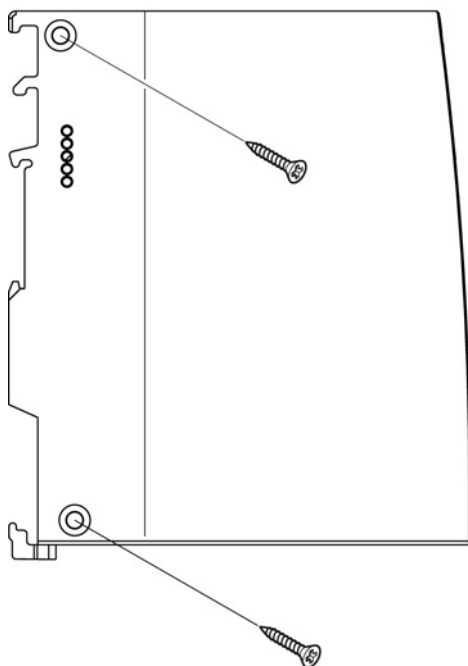

1. Connect the power supply, refer to the section "Power supply (Page 34)".
2. Fit the connectors for the digital input and digital output, refer to the section "Digital input/output (Page 37)".
3. Connect the antenna, refer to the section "Antennas (Page 39)".
4. Connect the device to the local network, refer to the section "Ethernet port (Page 42)".


2.3 Installing on the DIN rail

Requirement

There is a SIM card for the device.

Installation

1. Insert the SIM card, see section "SIM card (Page 33)".
2. Place the third housing guide of the device on the top edge of the DIN rail ①.

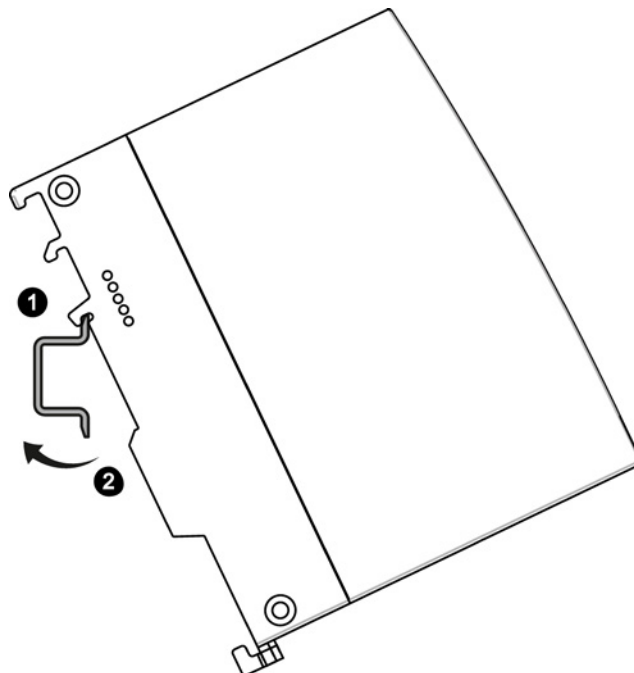

3. Press the device down against the DIN rail until the spring catch locks in place ②.
4. Connect the power supply, refer to the section "Power supply (Page 34)".
5. Fit the connectors for the digital input and digital output, refer to the section "Digital input/output (Page 37)".
6. Connect the antenna, refer to the section "Antennas (Page 39)".
7. Connect the device to the local network, refer to the section "Ethernet port (Page 42)".

Dismantling

1. Disconnect all connected cables.
2. Using a screwdriver, pull down the catch on the rear of the device.
3. Pull lower part of the device away from the DIN rail.


2.4 Installing on the S7-300 standard rail

Requirement

There is a SIM card for the device.

Installation

1. Insert the SIM card, see section "SIM card (Page 33)".
2. Place the second housing guide of the device on the top edge of the standard rail ①.

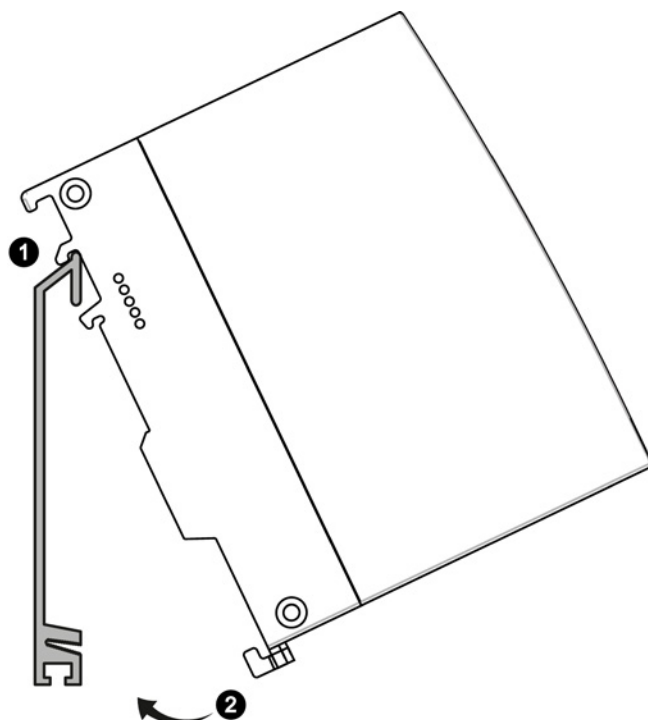

3. Press the device down against the standard rail until the spring catch locks in place ②.
4. Connect the power supply, refer to the section "Power supply (Page 34)".
5. Connect the connectors for the digital input to the digital output, see section "Digital input/output (Page 37)".
6. Connect the antenna, refer to the section "Antennas (Page 39)".
7. Connect the device to the local network, refer to the section "Ethernet port (Page 42)".

Dismantling

1. Disconnect all connected cables.
2. Using a screwdriver, pull down the catch on the rear of the device.
3. Remove the device from the standard rail.


2.5 Installing on the S7-1500 standard rail

Requirement

There is a SIM card for the device.

Installation

1. Insert the SIM card, see section "SIM card (Page 33)".
2. Place the first housing guide of the device on the top edge of the standard rail ①.

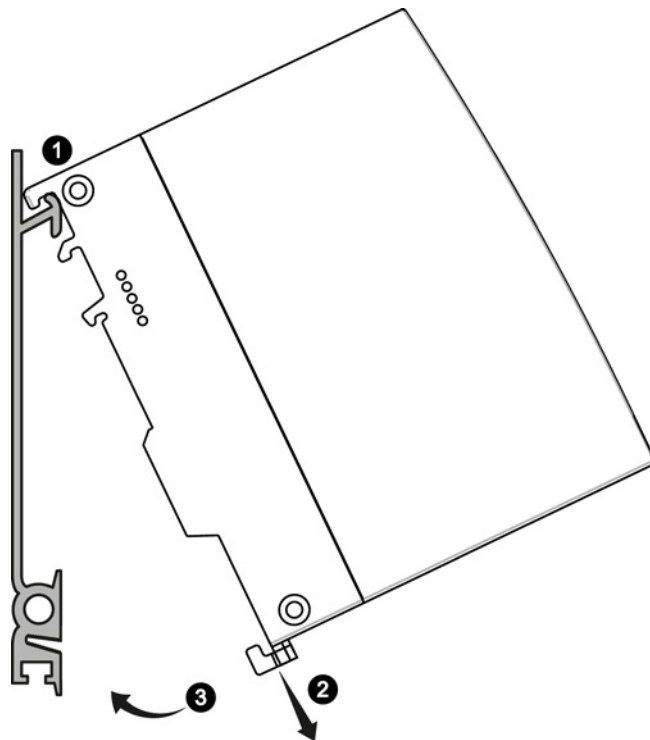

3. Using a screwdriver, pull down the catch ② on the rear of the device.
4. Swing the device down while pulling down the catch ③. After it is released, the spring catch locks in place.
5. Connect the power supply, refer to the section "Power supply (Page 34)".
6. Fit the connectors for the digital input and digital output, refer to the section "Digital input/output (Page 37)".
7. Connect the antenna, refer to the section "Antennas (Page 39)".
8. Connect the device to the local network, refer to the section "Ethernet port (Page 42)".

Dismantling

1. Disconnect all connected cables.
2. Using a screwdriver, pull down the catch on the rear of the device.
3. Remove the device from the standard rail.

Connecting up

3.1 Safety when connecting up

Safety notices

When connecting up the device, keep to the safety notices listed below.

 WARNING
The equipment is designed for operation with Safety Extra-Low Voltage (SELV) by a Limited Power Source (LPS). This means that only SELV / LPS complying with IEC 60950-1 / EN 60950-1 / VDE 0805-1 must be connected to the power supply terminals. The power supply unit for the equipment power supply must comply with NEC Class 2, as described by the National Electrical Code (r) (ANSI / NFPA 70). If the equipment is connected to a redundant power supply (two separate power supplies), both must meet these requirements.

Safety notices on use in hazardous areas

General safety notices relating to protection against explosion

 WARNING
EXPLOSION HAZARD SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2 OR ZONE 2.

 WARNING
EXPLOSION HAZARD DO NOT OPEN WHEN ENERGIZED.

3.1 Safety when connecting up

Safety notices when using the device according to ATEX

If you use the device under ATEX conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:



WARNING

Take measures to prevent transient voltage surges of more than 40% of the rated voltage. This is the case if you only operate devices with SELV (safety extra-low voltage).



WARNING

EXPLOSION HAZARD

DO NOT CONNECT OR DISCONNECT EQUIPMENT WHEN A FLAMMABLE OR COMBUSTIBLE ATMOSPHERE IS PRESENT.

Safety notices when using the device according to Hazardous Locations (HazLoc)

If you use the device under HazLoc conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:

This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.

This equipment is suitable for use in Class I, Zone 2, Group IIC or non-hazardous locations only.



WARNING

EXPLOSION HAZARD

DO NOT DISCONNECT WHILE CIRCUIT IS LIVE UNLESS AREA IS KNOWN TO BE NON-HAZARDOUS.

3.2 SIM card

NOTICE


Turn off the power supply before replacing SIM cards

Before you insert or remove the SIM card, turn off the power supply of the M-800.

Do not open the compartment for the SIM card during operation. This can damage the SIM card and the device.

Procedure


1. The compartment for the SIM card is located on the back of the device. Directly beside to the compartment for the SIM card in the opening in the housing, there is a small button. To open the drawer, press the button with a sharp object, for example a pencil.

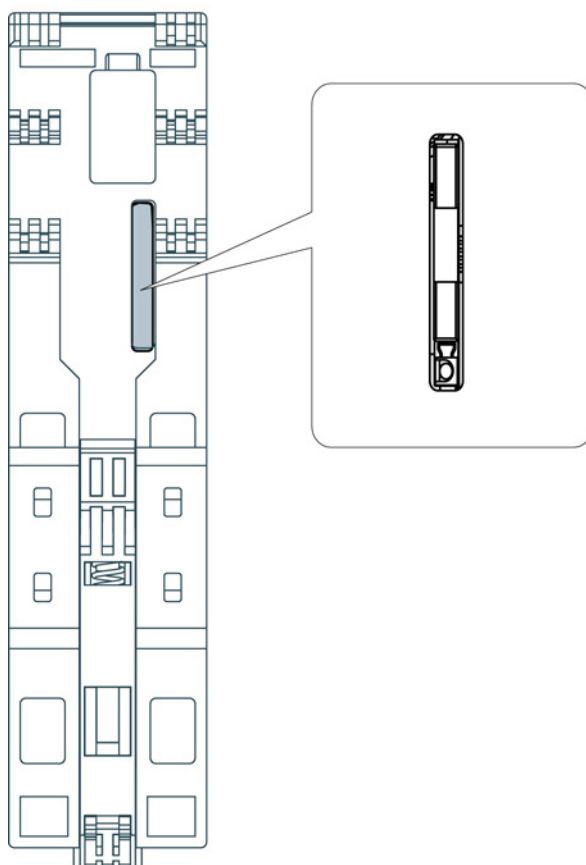

2. Place the SIM card in the tray so that the card audibly locks in place and so that its gold-plated contacts remain visible.
3. Then push the tray with the SIM card completely back into the housing.

3.3 Power supply

The power supply is connected using a 5-pin terminal block. The power supply is non-floating.

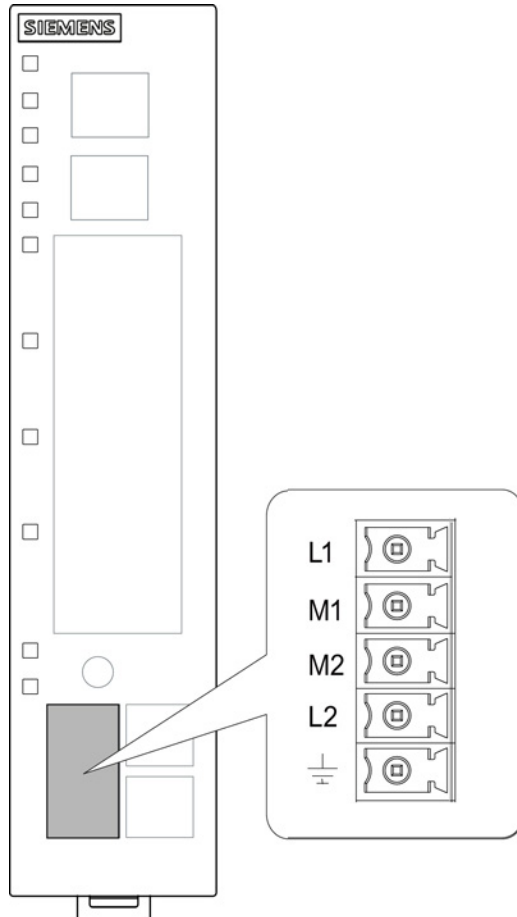

PIN	Signal	Description
1	L1+	24 VDC
2	M1	Ground
3	M2	Ground
4	L2+	24 VDC
5	⏏	Functional ground, refer to the section Grounding (Page 36)"

External power supply

Note

Permitted external power supplies

The power supply unit to supply the SCALANCE M-800 must comply with the requirements for a limited power source according to IEC/EN 60950-1, section 2.5.

The external power supply for the SCALANCE M-800 must meet the requirements for NEC class 2 circuits as specified in the National Electrical Code ® (ANSI/NFPA 70).

Refer to the section Connecting up (Page 31) and the installation instructions and instructions for use of the manufacturer of the power supply, the battery or the accumulator.

3.4 Grounding

A functional grounding must be established for example by connecting a cable from terminal 5 to the DIN rail, refer to the section "Power supply (Page 34)". Such a cable should be kept as short as possible.

3.5 Digital input/output

The digital input/output (relay contact) is a floating switch with which error/fault states can be signaled by breaking the contact.


CAUTION

Damage due to voltage being too high or too low

The voltage at the digital input/output must not exceed 30 VDC and not fall below -30 VDC, otherwise the digital input/output will be destroyed.

Digital input

The 2-pin terminal block has the following assignment:

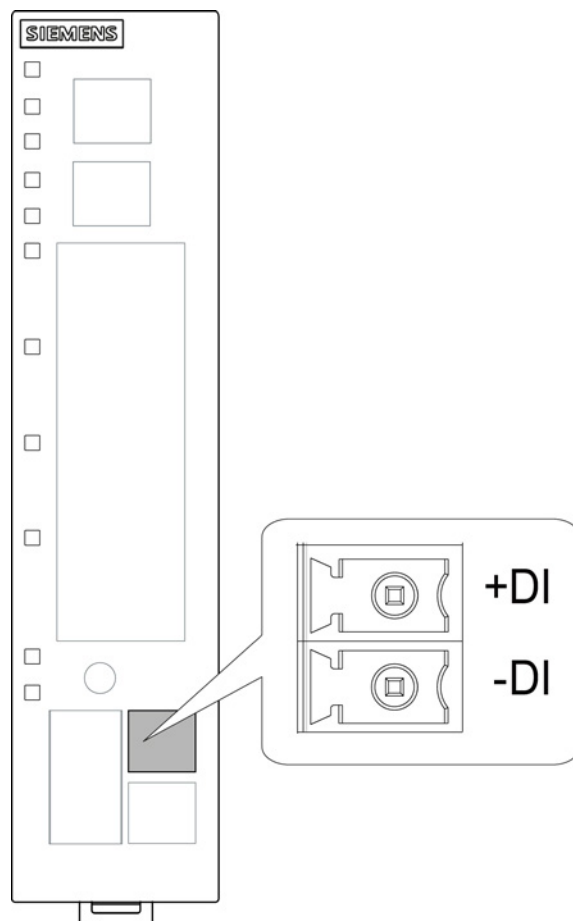


DI+	24 VDC
DI- (input ground)	-

If there is an adequate switching voltage at the digital input, the digital input is active and the "DI" LED is lit. This means that, for example a local application connected to the in port can trigger an alarm message by SMS outside the IP data connection.

Digital output

The 2-pin terminal block has the following assignment:

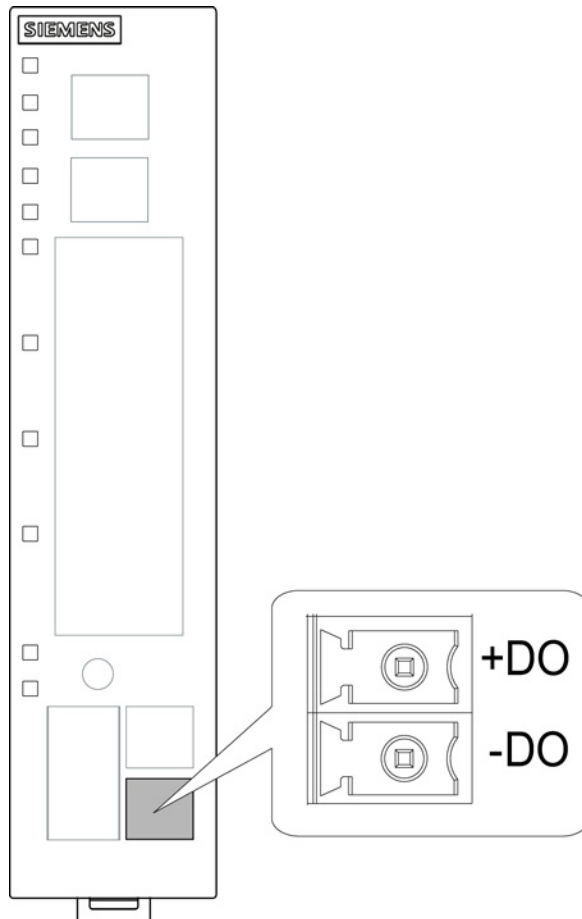

DO+	Relay 24 VDC / 1 A
DO-	Relay 24 VDC / 1 A

3.6 Antennas

Note

Use the antennas from the accessories program for the M-800 device. You will find more detailed information in "Accessories (Page 13)". If you use a different antenna, there is no guarantee that the device will function according to the specification.

The antenna socket for connecting the antenna is of the type SMA. The antenna used should have an impedance of about 50 ohms.

CAUTION

Minimum clearance to the device

The device may only be operated when the distance between the device (or antenna) and user is at least 20 cm.

Notes on lightning protection



WARNING

Danger due to lightning strikes

Antennas installed outdoors must be within the area covered by a lightning protection system. Make sure that all conducting systems entering from outdoors are protected by lightning protection electrical bonding.

When implementing your lightning protection concept, make sure you adhere to the requirements of the VDE 0182 or IEC 62305 standards.

Suitable lightning protectors are available in the range of accessories of SIMATIC NET Industrial WLAN:

- Lightning protector LP798-1N (order no. 6GK5798-2LP00-2AA6)
- Lightning protector LP798-2N (order no. 6GK5798-2LP10-2AA6)

Note

We recommend that you use the maintenance-free lightning protector LP798-2N. Exception:

When there is also DC power supplied via the antenna cable. In this case, only the lightning protector LP798-1N can be used.



⚠ WARNING

Danger due to lightning strikes

Installing this lightning protector between an antenna and a SCALANCE M-800 is not adequate protection against a lightning strike. The LP798-1N lightening protector only works within the framework of a comprehensive lightning protection concept. If you have questions, ask a qualified specialist company.

Note

The requirements of EN61000-4-5, "Surge Immunity Test" on power supply lines with 24 VDC are met only when a Blitzductor is used:

24 VDC: BVT AVD 24 type no. 918 422

Vendor: DEHN+SÖHNE GmbH+Co.KG, Hans Dehn Str. 1, Postfach 1640, D - 92306 Neumarkt, Germany

Frequency bands in Europe, China, the USA and other regions

Depending on the frequency bands used by your mobile wireless provider, antennas must be tuned to the following frequencies:

- In Europe, America, Africa, Asia and Australia:
 - GSM 900 MHz
 - DCS 1800 MHz
 - UMTS 2100 MHz
- In the USA:
 - GSM 850 MHz
 - PCS 1900 MHz (also for UMTS)

Check with your mobile wireless provider for the suitable frequencies.


Signal quality

During installation make sure that there is a good signal strength of > -73 dBm.

If the "Q" LED is lit permanently, the signal quality is good. For more detailed information, refer to the section "LED display (Page 14)".

Avoid large metal objects in the immediate vicinity.

SCALANCE M876-3 antenna connectors

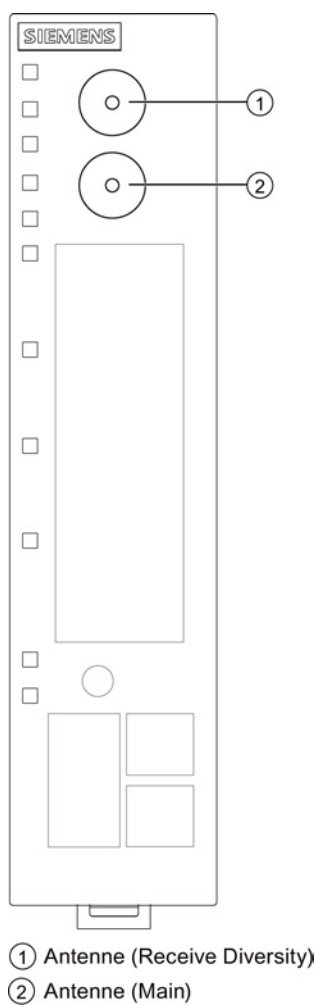

3.7 Ethernet port

Note

Do not use the M-800 as a router between internal subnets.

Connect the local network with the local applications to the Ethernet port, for example a programmable logic controller, a machine with an Ethernet interface for remote monitoring or a PC.

To set up the M-800, connect the Admin PC with a Web browser to one of the connectors.

For the connection, use a patch cable with an RJ-45 plug. You will find the properties of the Ethernet interface in the technical specifications.

3.8 Replacing the PLUG


NOTICE

Do not remove or insert a C-PLUG / KEY-PLUG during operation!

A PLUG may only be removed or inserted when the device is turned off.
The device checks whether or not a PLUG is present at one second intervals. If it is detected that the PLUG was removed, there is a restart. If a valid KEY-PLUG was inserted in the device, the device changes to a defined error state following the restart. With SCALANCE M, the wireless interface is deactivated in this case.

Inserting the PLUG

1. Turn off the power to the device.
2. The housing of the PLUG has a protruding ridge on the long side. The slot has a groove at this position.
Insert the PLUG correctly oriented into the slot.

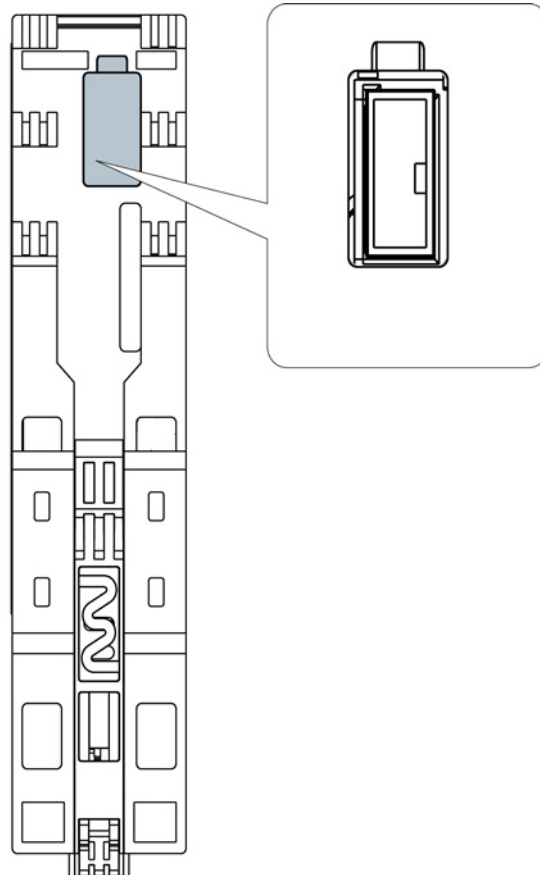

Removing the PLUG

1. Turn off the power to the device.
2. Insert a screwdriver between the front edge of the PLUG and the slot and release the PLUG.
3. Remove the PLUG.

Dimension drawing

4.1 SCALANCE M874-2, M874-3

Dimensions are specified in mm.

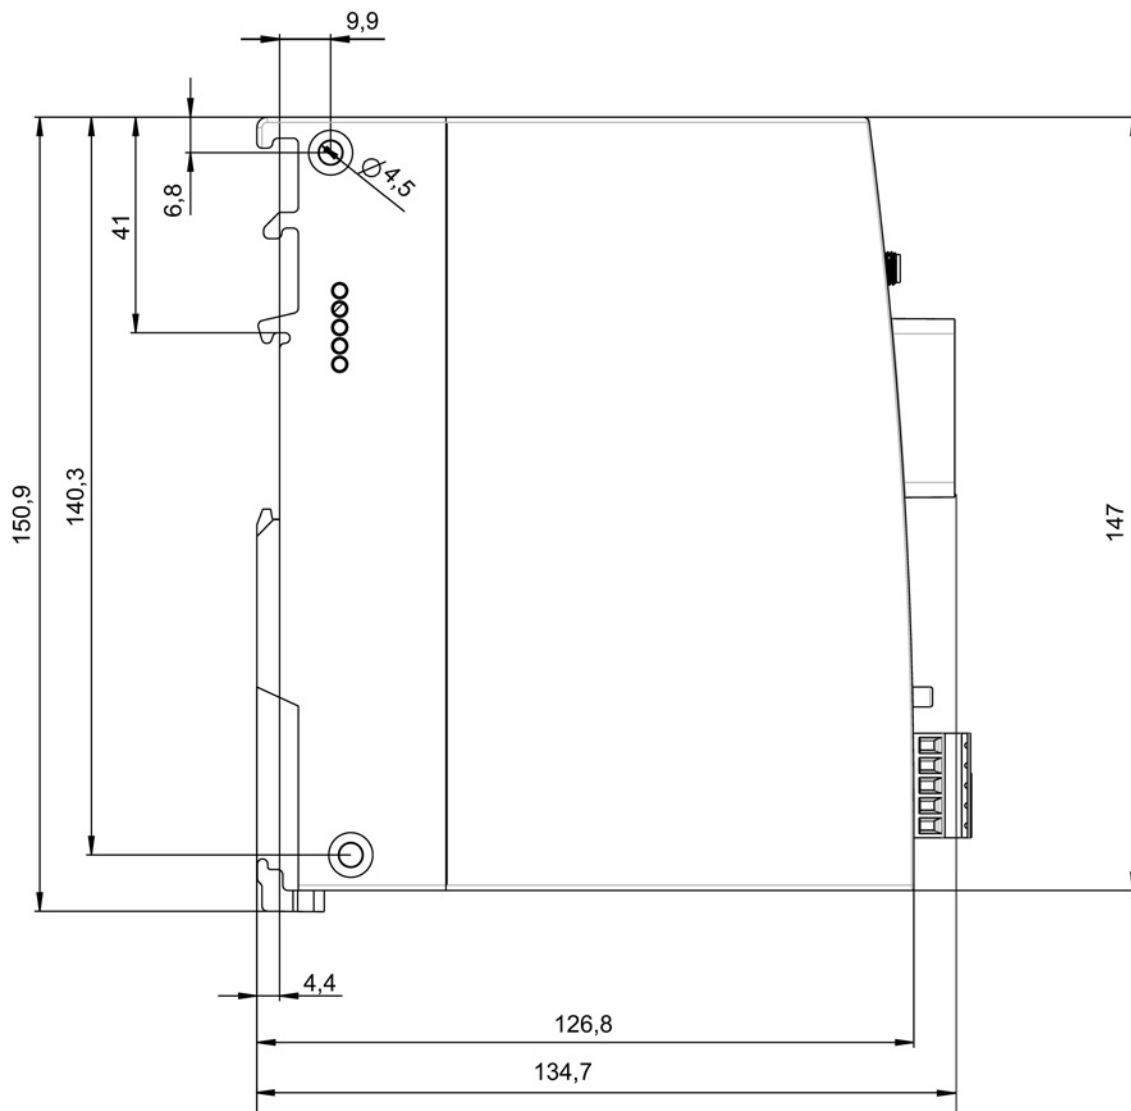


Figure 4-1 Side view M874-2 and M874-3

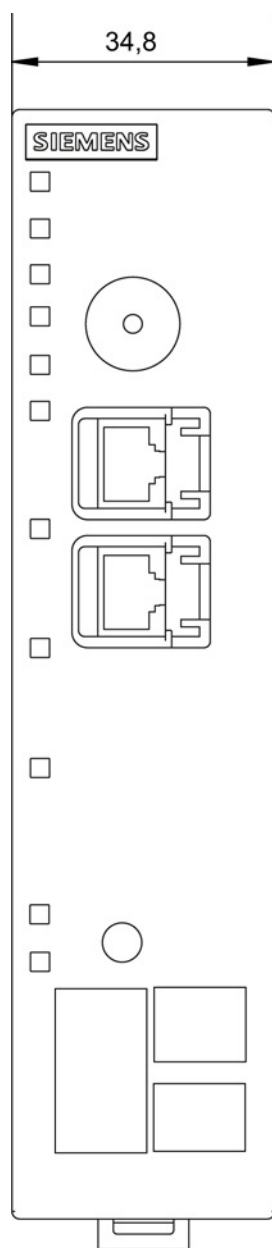


Figure 4-2 Front view M874-2 and M874-3

4.2 SCALANCE M876-3

Dimensions are specified in mm.

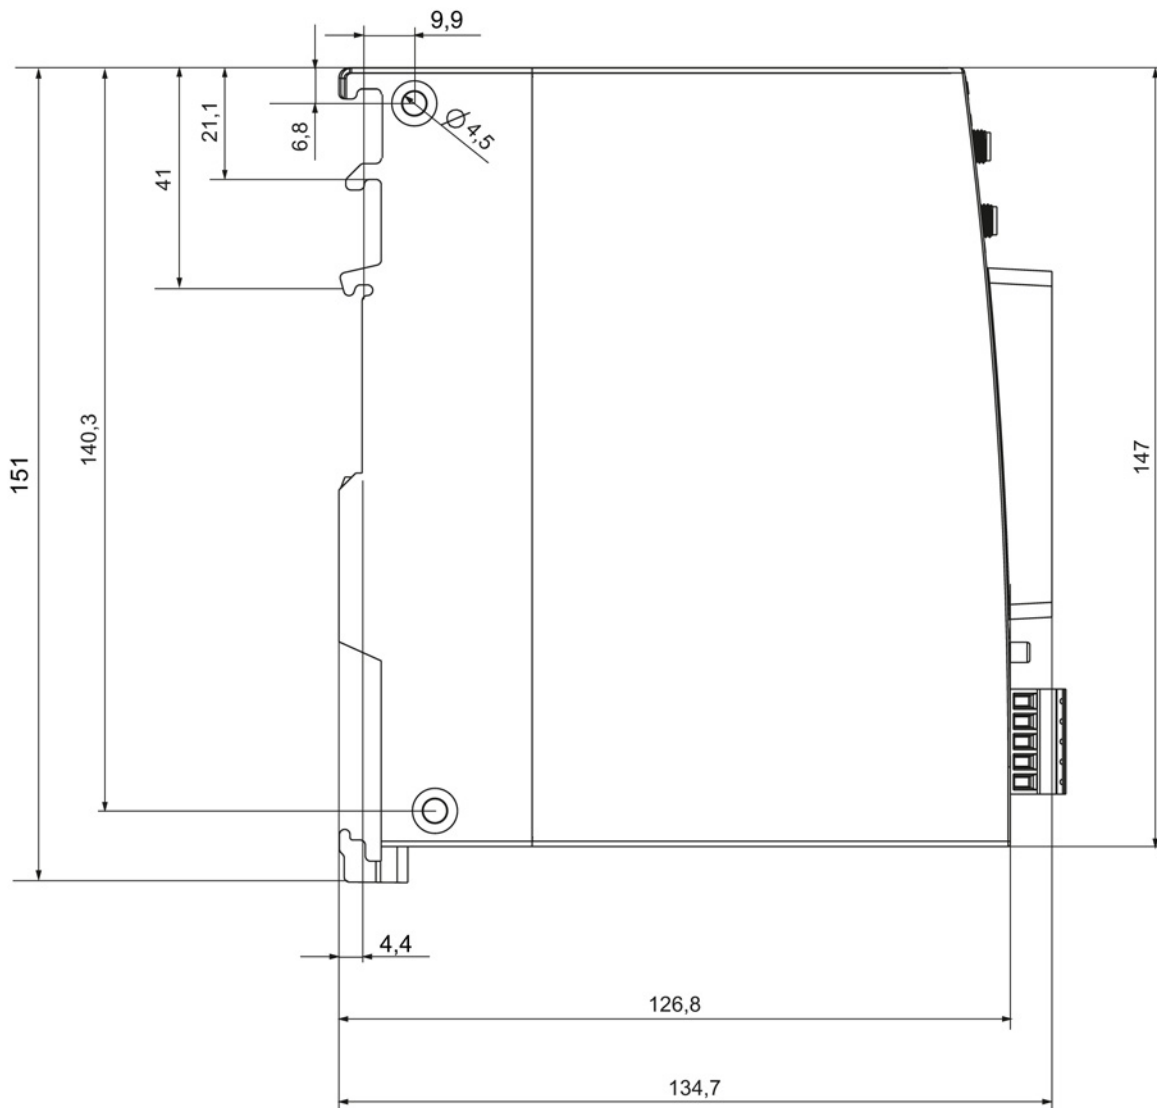


Figure 4-3 Side view M874-2 and M874-3

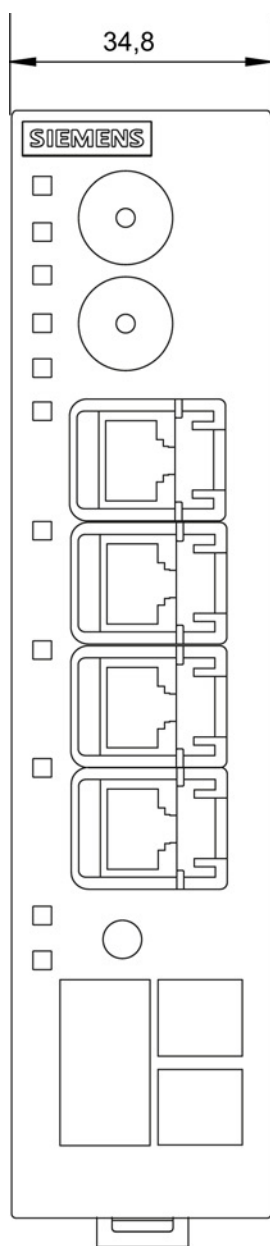


Figure 4-4 Front view M874-2 and M874-3

Technical specifications

5.1 SCALANCE M874-2

M874-2		
Order number		6GK5 874-2AA00-2AA2
Ethernet interface		
Attachment to Industrial Ethernet	Quantity	2
	Design	RJ-45 jack Characteristics: • 10/100BASE-T • Ethernet IEEE 802 • 10/100 Mbps
Wireless interface		
Antenna connector	Quantity	1
	Design	SMA socket (straight)
	Impedance	50 Ω nominal
Frequency band	GPRS	850, 900, 1800, 1900 MHz
EGPRS	Properties	Multislot class 12, end device class B • Coding scheme downlink: CS 1 ... 4, MCS 1 ... 9 • Coding scheme uplink: CS 1 ... 4, MCS 1 ... 9
	Transmission speed	• Downlink: 237 kbps • Uplink: 237 kbps
GPRS	Properties	Multislot class 12, end device class B, coding scheme 1 ... 4
	Transmission speed	• Downlink: 85.6 kbps • Uplink: 85.6 kbps
GSM (CSD dial-in)	Properties	Radio Link Protocol (RLP) V.110, non-transparent
	Transmission speed	max. 14.4 kbps
SMS (TX)	Properties	Text mode, SMSoverIP

M874-2		
Electrical data		
Power supply	Input voltage	12 ... 24 VDC min. 10.8 VDC, max. 28.8 V
	Power consumption	max. 8 W
Digital input	Quantity	1
	Design	Terminal block, 2 terminals
	Characteristics:	Rated voltage 24 VDC Safe Extra Low Voltage (SELV) For state "1": 13 to 30 VDC For state "0": -30 to 3 VDC Maximum input current 8 mA Maximum cable length 30 m Inputs isolated from electronics.
Digital output	Quantity	1
	Design	Terminal block, 2 terminals
	Properties	Rated voltage 24 VDC Safe Extra Low Voltage (SELV) Relay, internally not current limited Maximum current carrying capacity 1 A Maximum cable length 30 m Output isolated from electronics
Permitted ambient conditions		
Ambient temperature	During operation	-20 °C to +60 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation	≤ 95% at 25 °C, no condensation
Design, dimensions and weight		
Module format		Compact module S7-1500
Degree of protection		IP20
Weight		290 g
Dimensions (W x H x D)		34.8 x 150.9 x 134.7 mm
Installation options		• Wall mounting • Mounting on a DIN rail • Mounting on an S7-300 standard rail • Mounting on an S7-1500 standard rail
Installation direction		Vertical (ventilation openings at the top and bottom)

M874-2	
Product functions	
Firewall and security	• Stateful inspection • Packet filter • IPsec VPN for up to 20 connections • Password protection
Router functions	• NAT (port forwarding) • NAT (IP masquerading) • NAT traversal • 1:1 NAT • Dynamic DNS client • DNS cache • NTP • Remote logging • Connection monitoring • Alarm SMS • Sending SMS messages from the local area network
Configuration / management	• Web-based administration user interface (WBM) • Remote access with HTTPS • SNMP and SNMP traps

5.2 SCALANCE M874-3

M874-3		
Order number		6GK5 874-3AA00-2AA2
Ethernet interface		
Attachment to Industrial Ethernet	Quantity	2
	Design	RJ-45 jack
		Characteristics:
		• 10/100BASE-T • Ethernet IEEE 802 • 10/100 Mbps
Wireless interface		
Antenna connector	Quantity	1
	Design	SMA socket (straight)
	Impedance	50 Ω nominal
Frequency bands	UMTS	800, 850, 900, 1900, 2100 MHz
	GPRS	850, 900, 1800, 1900 MHz
UMTS with HSPA+	Transmission speed	• HSDPA (downlink): 14.4 Mbps • HSUPA (uplink): 5.76 Mbps
EGPRS	Properties	Multislot class 12, end device class B • Coding scheme downlink: CS 1 ... 4, MCS 1 ... 9 • Coding scheme uplink: CS 1 ... 4, MCS 1 ... 9
	Transmission speed	• Downlink: 237 kbps • Uplink: 237 kbps
GPRS	Properties	Multislot class 12, end device class B, coding scheme 1 ... 4
	Transmission speed	• Downlink: 85.6 kbps • Uplink: 85.6 kbps
GSM (CSD dial-in)	Properties	Radio Link Protocol (RLP) V.110, non-transparent
	Transmission speed	max. 14.4 kbps
SMS (TX)	Properties	Text mode, SMSoverIP

M874-3		
Electrical data		
Power supply	Input voltage	12 ... 24 VDC min. 10.8 VDC, max. 28.8 V
	Maximum power consumption	8 W
Digital input	Quantity	1
	Design	Terminal block, 2 terminals
	Characteristics:	Rated voltage 24 VDC Safe Extra Low Voltage (SELV) For state "1": 13 to 30 VDC For state "0": -30 to 3 VDC Maximum input current 8 mA Maximum cable length 30 m Inputs isolated from electronics.
Digital output	Quantity	1
	Design	Terminal block, 2 terminals
	Properties	Rated voltage 24 VDC Safe Extra Low Voltage (SELV) Relay, internally not current limited Maximum current carrying capacity 1 A Maximum cable length 30 m Output isolated from electronics
Permitted ambient conditions		
Ambient temperature	During operation	-20 °C to +60 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation	≤ 95% at 25 °C, no condensation
Design, dimensions and weight		
Module format		Compact module S7-1500
Degree of protection		IP20
Weight		290 g
Dimensions (W x H x D)		34.8 x 150.9 x 134.7 mm
Installation options		• Wall mounting • Mounting on a DIN rail • Mounting on an S7-300 standard rail • Mounting on an S7-1500 standard rail
Installation direction		Vertical (ventilation openings at the top and bottom)

M874-3	
Product functions	
Firewall and security	• Stateful inspection • Packet filter • IPsec VPN for up to 20 connections • Password protection
Router functions	• NAPT (port forwarding) • NAT (IP masquerading) • NAT traversal • 1:1 NAT • Dynamic DNS client • DNS cache • NTP • Remote logging • Connection monitoring • Alarm SMS • Sending SMS messages from the local area network
Configuration / management	• Web-based administration user interface (WBM) • Remote access with HTTPS • SNMP and SNMP traps

5.3 SCALANCE M876-3

M874-3		
Order number		6GK5876-3AA02-2BA2
Ethernet interface		
Attachment to Industrial Ethernet	Quantity	4
	Design	RJ-45 jack
	Characteristics:	• 10/100BASE-T • Ethernet IEEE 802 • 10/100 Mbps
Wireless interface		
Antenna connector	Quantity	2
	Design	SMA socket (straight)
	Impedance	50 Ω nominal
Frequency bands	GPRS/EGPRS	850, 900, 1800, 1900 MHz
	UMTS with HSPA+	800, 850, 900, 1900, 2100 MHz
	CDMA	800, 1900 MHz
UMTS with HSPA+	Transmission speed	• HSDPA (downlink): 14.4 Mbps • HSUPA (uplink): 5.76 Mbps
CDMA	Properties	EV-DO Rev.A
	Transmission speed	• Forward link: max. 3.1 Mbps • Reverse link: max. 1.8 Mbps
EGPRS	Properties	Multislot class 12, end device class B • Coding scheme downlink: CS 1 ... 4, MCS 1 ... 9 • Coding scheme uplink: CS 1 ... 4, MCS 1 ... 9
	Transmission speed	• Downlink: 237 kbps • Uplink: 237 kbps
GPRS	Properties	Multislot class 12, end device class B, coding scheme 1 ... 4
	Transmission speed	• Downlink: 85.6 kbps • Uplink: 85.6 kbps
GSM (CSD dial-in)	Properties	Radio Link Protocol (RLP) V.110, non-transparent
	Transmission speed	max. 14.4 kbps
SMS (TX)	Properties	Text mode, SMSoverIP

M874-3		
Electrical data		
Power supply	Input voltage	12 ... 24 VDC min. 10.8 VDC, max. 28.8 V
	Maximum power consumption	8 W
Digital input	Quantity	1
	Design	Terminal block, 2 terminals
	Characteristics:	Rated voltage 24 VDC Safe Extra Low Voltage (SELV) For state "1": 13 to 30 VDC For state "0": -30 to 3 VDC Maximum input current 8 mA Maximum cable length 30 m Inputs isolated from electronics.
Digital output	Quantity	1
	Design	Terminal block, 2 terminals
	Properties	Rated voltage 24 VDC Safe Extra Low Voltage (SELV) Relay, internally not current limited Maximum current carrying capacity 1 A Maximum cable length 30 m Output isolated from electronics
Permitted ambient conditions		
Ambient temperature	During operation	-20 °C to +60 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation	≤ 95% at 25 °C, no condensation
Design, dimensions and weight		
Module format		Compact module S7-1500
Degree of protection		IP20
Weight		290 g
Dimensions (W x H x D)		34.8 x 147 x 134.7 mm
Installation options		• Wall mounting • Mounting on a DIN rail • Mounting on an S7-300 standard rail • Mounting on an S7-1500 standard rail
Installation direction		Vertical (ventilation openings at the top and bottom)

M874-3	
Product functions	
Firewall and security	• Stateful inspection • Packet filter • IPsec VPN for up to 20 connections • Password protection
Router functions	• NAPT (port forwarding) • NAT (IP masquerading) • NAT traversal • 1:1 NAT • Dynamic DNS client • DNS cache • NTP • Remote logging • Connection monitoring • Alarm SMS • Sending SMS messages from the local area network
Configuration / management	• Web-based administration user interface (WBM) • Remote access with HTTPS • SNMP and SNMP traps

Approvals

A.1 Note - products in general without shipbuilding approvals

Approvals issued

Note**Issued approvals on the type plate of the device**

The specified approvals apply only when the corresponding mark is printed on the product. You can check which of the following approvals have been granted for your product by the markings on the type plate.

A.2 INSTALLATION

WARNING

Personal injury and property damage can occur

The installation of expansions that are not approved for SIMATIC NET products or their target systems may violate the requirements and regulations for safety and electromagnetic compatibility.

Only use expansions that are approved for the system.

- **Keep to the installation guidelines**
The devices meet the requirements if you adhere to the installation and safety instructions contained in this documentation and in the following documentation when installing and operating the devices.
- **You can always find the latest documentation on the Internet**
The current descriptions of the currently available products can always be found on the Internet under the specified entry IDs/Internet pages:
 - "Industrial Ethernet / PROFINET Industrial Ethernet" System Manual
 - "Industrial Ethernet / PROFINET - Passive network components" System Manual

You will find information on the system manuals in the section "ID = 27069465 (<http://support.automation.siemens.com/WW/view/en/27069465>)", in "Further documentation".

 - "EMC Installation Guidelines" configuration manual

ID = 60612658 (<http://support.automation.siemens.com/WW/view/en/60612658>)
- **Working on the device**
To protect the device from electrostatic discharge, personnel must first discharge any electrostatic charge from their body before touching the device.

Note

The test was performed with a device and a connected communications partner that also meets the requirements of the standards listed above.

When operating the device with a communications partner that does not comply with these standards, adherence to the corresponding values cannot be guaranteed.

Current approvals on the Internet

SIMATIC NET products are regularly submitted to the relevant authorities and approval centers for approvals relating to specific markets and applications.

You will also find the current approvals for the product on the Internet pages of Siemens Automation Customer Support under the following entry ID:

39971776 (<http://support.automation.siemens.com/WW/view/en/80046561>)

→ "Entry list" tab, entry type "Certificates"

National approvals

You will find an overview of the country-specific wireless approvals of SIMATIC NET devices with GSM or UMTS services on the Internet pages of Siemens Automation Customer Support. You will find the link to the document on the following page:

ik-Info (www.siemens.com/simatic-net/ik-info)

A.3 EU declaration of conformity



When used for its intended purpose, the product is compliant with the requirements of the following European directives:

- Directive 1999/5/EC (R&TTE) of 9 March 1999 of the European Parliament and of the Council on Radio Equipment and Telecommunications Terminal Equipment and the mutual recognition of their conformity

Applied standards:

- EN 301 511: v.9.0.2 (2003-03)
- 3GPP TS 51.010-1: v. 5.10.0

Classification

- Telecommunication equipment,
 - Wireless device
 - Device class 1
- EN 301 489-1 V1.9.2 (2011-09)
Electromagnetic compatibility and radio spectrum matters (ERM) - Electromagnetic compatibility for radio equipment and services - Part 1 : Common technical requirements.
 - EN 301 489-7 V1.3.1 (2005-11)
Electromagnetic compatibility and radio spectrum matters (ERM) - Electromagnetic compatibility for radio equipment and services - Part 7 : Specific conditions for mobile and portable radio and ancillary equipment of digital cellular radio telecommunications systems (GSM and DCS).
 - EN 301 489-24 v1.5.1 (2010-10)
Electromagnetic compatibility and radio spectrum matters (ERM) - Electromagnetic compatibility for radio equipment and services - Part 24 : Specific conditions for mobile and portable IMT-2000 CDMA Direct Spread (UTRA) radio and ancillary equipment.
 - EN 301 908-1 v5.2.1 (2011-05)
IMT cellular networks - Harmonized EN covering the essential requirements of article 3.2 of the R&TTE directive - Part 1: Introduction and common requirements
 - EN 301 908-2 v6.1.1 (2013-02)
IMT cellular networks - Harmonized EN covering the essential requirements of article 3.2 of the R&TTE directive - Part 2: CDMA Direct Spread (UTRA FDD) User Equipment (UE).

You will find the EC declaration of conformity for these products on the Internet under the following entry IDs/Internet page specified here:

ID = 80046561 (<http://support.automation.siemens.com/WW/view/en/80046561>)

- Entry list
- Entry type "Certificates"
- Type of certificate "Declaration of Conformity"

Maximum antenna gain

Users and installers must be provided with antenna installation instructions and transmitter operating conditions that must be followed to avoid exceeding the permitted RF exposure.

	Maximum antenna gain	
	GSM 1800	GSM 900
M874-2	10.04 dBi	4.05 dBi
M874-3	9.36 dBi	2.91 dBi

A.4 ATEX

Explosion protection directive (ATEX)

The SIMATIC NET product meets the requirements of the EC directive:94/9/EC "Equipment and Protective Devices for Use in Potentially Explosive Atmospheres".



WARNING

When using (installing) SIMATIC NET products in hazardous area zone 2, make absolutely sure that the associated conditions are adhered to:

You will find these conditions on the SIMATIC NET Manual Collection.

- "Approval of SIMATIC/ SIMATIC NET Products for Direct Installation in Ex-Zone 2"

ATEX code:

II 3 G Ex nA IIC T4 Gc

Test type certificate

KEMA 07 ATEX 0145X

The product meets the requirements of the standards

- EN 60079-0:2009 (Explosive atmospheres - Part 0: Equipment - General requirements)
- and EN 60079-15: 2010 (electrical apparatus for potentially explosive atmospheres; Type of protection "n")

A.5 IECEx

IECEx

The SIMATIC NET products meet the requirements of explosion protection according to IECEx.

IECEx classification:

Ex nA IIC T4 Gc

DEK 14.0025X

The products meet the requirements of the following standards:

- IEC 60079-15 : 2010 (Explosive atmospheres - Part 15: Equipment protection by type of protection "n")
- IEC 60079-0 : 2011 (Explosive atmospheres - Part 0: Equipment - General requirements)

A.6 EMC directive

EMC directive (electromagnetic compatibility)

The SIMATIC NET products described in these operating instructions meet the requirements of EC directive 2004/108/EC "Electromagnetic Compatibility" for the following areas of application:

Area of application	Requirements for	
	Emission	Immunity
Industry	EN 61000-6-4 : 2007 + A1 : 2011	EN 61000-6-2 : 2005 + AC : 2005

A.7 RoHS directive

RoHS directive (restriction of the use of certain hazardous substances)

The SIMATIC NET products described in these operating instructions meet the requirements of the EC directive 2011/65/EC for the restriction of the use of certain hazardous substances in electrical and electronic equipment:

Applied standard:

- EN 50581: 2012

A.8 RCM / C-TICK

The product meets the requirements of the AS/NZS 2064 standard (Class A).

A.9 FM certification



Approved for use in
Cl. 1, Div. 2, GP. A, B, C, D, T4
Cl. 1, Zone 2, GP. IIC T4

Ta: -40 °C to + 70 °C

For the use of the product in hazardous areas, the following requirements are met:

- Factory Mutual Approval Standard Class Number 3611
- FM Hazardous (Classified) Location Electrical Equipment:
Non Incendive / Class I / Division 2 / Groups A,B,C,D / T4 and
Non Incendive / Class I / Zone 2 / Group IIC / T4

A.10 Conformity with FCC

FCC approval

Applied standards

- FCC Part 15
- FCC Part 15.19
- FCC Part 15.21

Mandatory user information

FCC Part 15

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy.

If not installed and used in accordance with the instructions, this may cause harmful interference to wireless communications. There can be no guarantee with certain installations, even when complying with the instructions, that no interference will occur. If this equipment does cause harmful interference to radio or television reception that can be determined by turning the equipment off and on, the user is recommended to try to combat the interference with the following measures:

- Change the orientation of the receiving antenna or install it at a different location.
- Increase the distance between the SCALANCE M874-3, M876-3 and the radio or television receiver.
- Connect the device to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer / installer or an experienced radio / TV technician for help.

FCC Part 15.19

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

Modifications not expressly approved by this company could void the user's authority to operate the equipment.

The SCALANCE M874-3, M876-3 may only be operated with an antenna belonging to the accessories of the SCALANCE M874-3, M876-3 .

The installation of the SCALANCE M874-3 and the antenna as well as servicing must be performed by qualified technical personnel only. When servicing the antenna, or working at distances closer than those listed below, make sure that the transmitter has been disabled.

FCC ID used: QIPPHS8-P (GSM module)

This device contains GSM, GPRS Class12 and EGPRS Class 10 functions in the 900 and 1800 MHz band that may not be used in territories of the USA.

This device can be used for mobile and fixed applications. Internal / external antennas used with this device must be at a distance of at least 20 cm from all persons and must not be located so that they operate in combination with any other antenna or transmitter.

Users and installers must be provided with antenna installation instructions and transmitter operating conditions that must be followed to avoid exceeding the permitted RF exposure. Antennas used for this GSM module must not exceed 9.72 dBi gain (GSM 1900) and 3.92 dBi (GSM 850) for mobile and fixed operating configurations. This device is approved as a module for installation in other devices.

A.11 UL certification (product safety)



Applied standards

- UL 60950-1 (Information Technology Equipment)
- UL 508 (Industrial Control Equipment)
- CSA C22.2 No.60950-1 (Information Technology Equipment)

A.12 UL HAZ. LOC certification (explosion protection)



I.T.E. for HAZ.LOC.

CL.I, DIV.2, GP A,B,C,D T4

CL.1, Zone2, GP IIC, T4

Applied standards

- UL 60950-1 (Information Technology Equipment)
- CSA C22.2 No.60950-1 (Information Technology Equipment)
- ANSI/ISA 12.12.01-2007
- CSA C22.2 No. 213-M1987

Approvals

A.12 UL HAZ. LOC certification (explosion protection)

Index

A

Accessories, 13

C

Connecting up
 Digital input, 37
 Digital output, 38
 Ethernet interface, 42
 Grounding, 36
 Power supply, 34
 SIM card, 33
C-PLUG, 20

D

Digital input, 37
Digital output, 38
Dimension drawing
 SCALANCE M874-2, 45, 47
 SCALANCE M874-3, 45, 47
DIN rail, 26

E

Ethernet interface, 42

G

Glossary, 5
Grounding, 36

I

Installation
 DIN rail, 26
 S7-1500 standard rail, 28
 S7-300 standard rail, 27
 Wall, 25

K

KEY-PLUG, 20

L

LED display, 14, 16

P

Power supply, 34
Product property, 9, 10

S

S7-1500 standard rail, 28
S7-300 standard rail, 27
Safety notices
 for installation, 23
 Use in hazardous areas, 23, 31
 when connecting up, 31
Scope of delivery, 9, 10
SET button, 18
Signal quality, 40
SIM card, 33
SIMATIC NET glossary, 5
System manual, 60

W

Wall mounting, 25

