# SIEMENS

Introduction	
Safety notices	2
Security recommendations	3
Description of the device	4
Installation and disassembly	5
Connecting up	6
Upkeep and maintenance	7
Technical specifications	8
Dimension drawings	9
Approvals	Α

1

# SIMATIC NET

# Industrial Ethernet switches SCALANCE XB-200

**Operating Instructions** 

### Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

### A DANGER

indicates that death or severe personal injury **will** result if proper precautions are not taken.

### 🛕 WARNING

indicates that death or severe personal injury may result if proper precautions are not taken.

### 

indicates that minor personal injury can result if proper precautions are not taken.

### NOTICE

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

### **Qualified Personnel**

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### **Proper use of Siemens products**

Note the following:

#### 

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

#### Trademarks

All names identified by <sup>®</sup> are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### **Disclaimer of Liability**

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

# Table of contents

1	Introducti	ion	5
	1.1	Security information	7
2	Safety not	tices	9
3	Security r	ecommendations	11
4	Descriptio	on of the device	17
	4.1	Product overview	17
	4.2 4.2.1 4.2.2 4.2.3	Device views SCALANCE XB208 SCALANCE XB205-3 SCALANCE XB213-3	20 21
	4.3	RESET button	23
	4.4 4.4.1	LED display LED display "P"	
5	Installatio	on and disassembly	27
	5.1	Safety notices for installation	27
	5.2	Mounting on DIN rails	29
	5.3	Disassembly	31
6	Connectir	ng up	33
	6.1	Safety when connecting up	33
	6.2 6.2.1 6.2.2	Industrial Ethernet Electrical Optical	
	6.3	Wiring rules	38
	6.4	Power supply	39
	6.5	Serial interface	40
	6.6	Functional ground	41
7	Upkeep a	nd maintenance	43
	7.1	Downloading new firmware using TFTP without WBM and CLI	43
	7.2	Restoring the factory settings	44
8	Technical	specifications	47
	8.1	Technical specifications of the SCALANCE XB208	47
	8.2	Technical specifications of the SCALANCE XB205-3 (SC)	48
	8.3	Technical specifications of the SCALANCE XB205-3LD (SC)	49

	Index		71
Α	Approvals		63
9	Dimension	drawings	59
	8.10	Switching properties	57
	8.9	Cable lengths	57
	8.8	Technical specifications of the SCALANCE XB213-3	55
	8.7	Technical specifications of the SCALANCE XB213-3LD (SC)	54
	8.6	Technical specifications of the SCALANCE XB213-3 (SC)	53
	8.5	Technical specifications of the SCALANCE XB216	52
	8.4	Technical specifications of the SCALANCE XB205-3	50

# Introduction

### **Purpose of the Operating Instructions**

These operating instructions support you when installing and connecting up devices of the SCALANCE XB-200 product group.

The configuration and the integration of the devices in a network are not described in these operating instructions.

### Validity of the Operating Instructions

These operating instructions apply to the following devices:

- SCALANCE XB208
- SCALANCE XB205-3 (SC)
- SCALANCE XB205-3LD (SC)
- SCALANCE XB205-3
- SCALANCE XB216
- SCALANCE XB213-3 (SC)
- SCALANCE XB213-3LD (SC)
- SCALANCE XB213-3

Unless mentioned otherwise, the descriptions in these operating instructions refer to all devices of the SCALANCE XB-200 product group named above in the section on validity.

There are two variants of each device, refer to the section "Product overview (Page 17)".

#### **Designations used**

Classification	Description	Terms used
Product line	The product line includes all devices and variants of all product groups.	SCALANCE X-200
	If information applies to all product groups within the product line, the term SCALANCE X-200 is used.	
Product group	If information applies to all devices and variants of a product group, the term SCALANCE XB-200 is used.	SCALANCE XB-200
Device	If information relates to a specific device, the device name is used.	e.g. SCALANCE XB205-3

### Documentation on configuration

You will find detailed information on configuring the devices in the following configuration manuals:

- SCALANCE XB-200/XC-200/XF-200BA/XP-200/XR-300WG Web Based Management
- SCALANCE XB-200/XC-200/XF-200BA/XP-200/XR-300WG Command Line Interface

You will find the configuration manuals here:

- on the data medium that ships with some products:
  - Product CD / product DVD
  - SIMATIC NET Manual Collection
- On the Internet pages of Siemens Industry Online Support (<u>https://support.industry.siemens.com/cs/ww/en/ps/15291/man</u>).

#### Further documentation

In the system manuals "Industrial Ethernet / PROFINET Industrial Ethernet" and "Industrial Ethernet / PROFINET passive network components", you will find information on other SIMATIC NET products that you can operate along with the devices of this product line in an Industrial Ethernet network.

There, you will find among other things optical performance data of the communications partner that you require for the installation.

You will find the system manuals here:

- On the data medium that ships with some products:
  - Product CD / product DVD
  - SIMATIC NET Manual Collection
- On the Internet pages of Siemens Industry Online Support:
  - Industrial Ethernet / PROFINET Industrial Ethernet System Manual (<u>https://support.industry.siemens.com/cs/ww/en/view/27069465</u>)
  - Industrial Ethernet / PROFINET Passive Network Components System Manual (<u>https://support.industry.siemens.com/cs/ww/en/view/84922825</u>)

#### **SIMATIC NET manuals**

You will find the SIMATIC NET manuals here:

- On the data medium that ships with some products:
  - Product CD / product DVD
  - SIMATIC NET Manual Collection
- On the Internet pages of Siemens Industry Online Support (<u>https://support.industry.siemens.com/cs/ww/en/ps/15247</u>).

### SIMATIC NET glossary

Explanations of many of the specialist terms used in this documentation can be found in the SIMATIC NET glossary.

You will find the SIMATIC NET glossary here:

- SIMATIC NET Manual Collection or product DVD The DVD ships with certain SIMATIC NET products.
- On the Internet under the following address: 50305045 (<u>https://support.industry.siemens.com/cs/ww/en/view/50305045</u>)

### Security information

### 1.1 Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit

https://www.siemens.com/industrialsecurity (https://www.siemens.com/industrialsecurity).

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under

https://www.siemens.com/cert (https://www.siemens.com/cert).

#### Note on firmware/software support

Check regularly for new firmware/software versions or security updates and apply them. After the release of a new version, previous versions are no longer supported and are not maintained.

### Introduction

### 1.1 Security information

### Catalogs

You will find the article numbers for the Siemens products of relevance here in the following catalogs:

- SIMATIC NET Industrial Communication / Industrial Identification, catalog IK PI
- SIMATIC Products for Totally Integrated Automation and Micro Automation, catalog ST 70
- Industry Mall catalog and ordering system for automation and drive technology, Online catalog (<u>https://eb.automation.siemens.com/goos/WelcomePage.aspx?regionUrl=/</u>en&language=en)

You can request the catalogs and additional information from your Siemens representative.

### **Device defective**

If a fault develops, send the device to your SIEMENS representative for repair. Repairs on-site are not possible.

### Decommissioning

Shut down the device properly to prevent unauthorized persons from accessing confidential data in the device memory.

To do this, restore the factory settings on the device.

### **Recycling and disposal**



The products are low in pollutants, can be recycled and meet the requirements of the WEEE directive 2012/19/EU for the disposal of electrical and electronic equipment.

Do not dispose of the products at public disposal sites.

For environmentally friendly recycling and the disposal of your old device contact a certified disposal company for electronic scrap or your Siemens contact (Product return (<u>https://support.industry.siemens.com/cs/ww/en/view/109479891</u>)).

Note the different national regulations.

### Trademarks

The following and possibly other names not identified by the registered trademark sign <sup>®</sup> are registered trademarks of Siemens AG:

SCALANCE, C-PLUG, OLM

# **Safety notices**

### Read the safety notices

Note the following safety notices. These relate to the entire working life of the device.

You should also read the safety notices relating to handling in the individual sections, particularly in the sections "Installation" and "Connecting up".



To prevent injury and damage, read the manual before using the device.

### Safety notices on use in hazardous areas

#### General safety notices relating to protection against explosion

**EXPLOSION HAZARD** 

Do not open the device when the supply voltage is turned on.

#### Safety notices when using the device according to Hazardous Locations (HazLoc)

If you use the device under HazLoc conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:

This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.

This equipment is suitable for use in Class I, Zone 2, Group IIC or non-hazardous locations only.

# Security recommendations

#### NOTICE

#### Information security

Connect to the device and change the standard password for the user set in the factory "admin" and "" before you operate the device.

To prevent unauthorized access to the device and/or network, observe the following security recommendations.

#### General

- Check the device regularly to ensure that these recommendations and/or other internal security policies are complied with.
- Evaluate the security of your location and use a cell protection concept with suitable products (<u>https://www.industry.siemens.com/topics/global/en/industrial-security/pages/ default.aspx</u>).
- When the internal and external network are disconnected, an attacker cannot access internal data from the outside. Therefore operate the device only within a protected network area.
- No product liability will be accepted for operation in a non-secure infrastructure.
- Use VPN to encrypt and authenticate communication from and to the devices.
- For data transmission via a non-secure network, use an encrypted VPN tunnel (IPsec, OpenVPN).
- Separate connections correctly (WBM, SSH etc.).
- Check the user documentation of other Siemens products that are used together with the device for additional security recommendations.
- Using remote logging, ensure that the system protocols are forwarded to a central logging server. Make sure that the server is within the protected network and check the protocols regularly for potential security violations or vulnerabilities.

#### **Physical access**

- Restrict physical access to the device to qualified personnel.
- Lock unused physical ports on the device. Unused ports can be used to gain forbidden access to the plant.

### Software (security functions)

- Keep the firmware up to date. Check regularly for security updates for the device. You can
  find information on this at the Industrial Security (<u>https://www.siemens.com/</u>
  industrialsecurity) website.
- Inform yourself regularly about security recommendations published by Siemens ProductCERT (<u>https://www.siemens.com/cert/en/cert-security-advisories.htm</u>).
- Only activate protocols that you require to use the device.
- Restrict access to the management of the device with rules in an access control list (ACL).
- The option of VLAN structuring provides protection against DoS attacks and unauthorized access. Check whether this is practical or useful in your environment.
- Use a central logging server to log changes and accesses. Operate your logging server within the protected network area and check the logging information regularly.

### Authentication

### Note

### Accessibility risk - Risk of data loss

Do not lose the passwords for the device. Access to the device can only be restored by resetting the device to factory settings which completely removes all configuration data.

- Replace the default passwords for all user accounts, access modes and applications (if applicable) before you use the device.
- Define rules for the assignment of passwords.
- Use passwords with a high password strength. Avoid weak passwords, (e.g. password1, 123456789, abcdefgh) or recurring characters (e.g. abcabc).
   This recommendation also applies to symmetrical passwords/keys configured on the device.
- Make sure that passwords are protected and only disclosed to authorized personnel.
- Do not use the same passwords for multiple user names and systems.
- Store the passwords in a safe location (not online) to have them available if they are lost.
- Regularly change your passwords to increase security.
- A password must be changed if it is known or suspected to be known by unauthorized persons.
- When user authentication is performed via RADIUS, make sure that all communication takes place within the security environment or is protected by a secure channel.
- Watch out for link layer protocols that do not offer their own authentication between endpoints, such as ARP or IPv4. An attacker could use vulnerabilities in these protocols to attack hosts, switches and routers connected to your layer 2 network, for example, through manipulation (poisoning) of the ARP caches of systems in the subnet and subsequent interception of the data traffic. Appropriate security measures must be taken for non-secure layer 2 protocols to prevent unauthorized access to the network. Physical access to the local network can be secured or secure, higher layer protocols can be used, among other things.

### **Certificates and keys**

- There is a preset SSL/TLS (RSA) certificate with 2048 bit key length in the device. Replace this
  certificate with a user-generated, high-quality certificate with key. Use a certificate signed by
  a reliable external or internal certification authority. You can install the certificate via the
  WBM ("System > Load and Save").
- Use certificates with a key length of 4096 bits.
- Use the certification authority including key revocation and management to sign the certificates.
- Make sure that user-defined private keys are protected and inaccessible to unauthorized persons.
- If there is a suspected security violation, change all certificates and keys immediately.
- Use password-protected certificates in the format "PKCS #12".
- Verify certificates based on the fingerprint on the server and client side to prevent "man in the middle" attacks. Use a second, secure transmission path for this.
- Before sending the device to Siemens for repair, replace the current certificates and keys with temporary disposable certificates and keys, which can be destroyed when the device is returned.

### Secure/non-secure protocols and services

- Avoid or disable non-secure protocols and services, for example HTTP, Telnet and TFTP. For historical reasons, these protocols are available, however not intended for secure applications. Use non-secure protocols on the device with caution.
- Check whether use of the following protocols and services is necessary:
  - Non authenticated and unencrypted ports
  - MRP, HRP
  - IGMP snooping
  - LLDP
  - Syslog
  - RADIUS
  - DHCP Options 66/67
  - TFTP
  - GMRP and GVRP

- The following protocols provide secure alternatives:
  - HTTP → HTTPS
  - − Telnet  $\rightarrow$  SSH
  - SNMPv1/v2c → SNMPv3 Check whether use of SNMPv1/v2c. is necessary. SNMPv1/v2c is classified as non-secure. Use the option of preventing write access. The device provides you with suitable setting options.
     If SNMP is enabled, change the community names. If no unrestricted access is necessary, restrict access with SNMP.
     Use the authentication and encryption mechanisms of SNMPv3.
- Use secure protocols when access to the device is not prevented by physical protection measures.
- If you require non-secure protocols and services, operate the device only within a protected network area.
- Restrict the services and protocols available to the outside to a minimum.
- For the DCP function, enable the "Read Only" mode after commissioning.
- If you use RADIUS for management access to the device, activate secure protocols and services.

### Interfaces security

- Disable unused interfaces.
- Use IEEE 802.1X for interface authentication.
- Use the function "Locked Ports" to block interfaces for unknown nodes.
- Use the configuration options of the interfaces, e.g. the "Edge Type".
- Configure the receive ports so that they discard all untagged frames ("Tagged Frames Only").

### Available protocols

The following list provides you with an overview of the open protocol ports.

The table includes the following columns:

- Protocol
- Port
- Default port status
  - Open

The factory setting of the port is "Open".

 Closed The factory setting of the port is "Closed".

### • Configurable port

- 🗸

The port status can be changed.

- --

The port status cannot be changed.

- Authentication Specifies whether the communication partner is authenticated.
- Encryption

Specifies whether or not the transfer is encrypted.

### List of available protocols (local access via a local network)

The following is a list of all available protocols and services as well as their ports through which the device can be accessed.

Services	Protocol/ Port number	Default port sta- tus	Configurable port	Authentication	Encryption
DHCPv4 Server	UDP/67	Closed	1	No	No
DHCPv4 Client	UDP/68	Open	1	No	No
EtherNet/IP	TCP/44818 UDP/2222 UDP/44818	Closed (Open with EtherNetlP var- iants)	•	No	No
НТТР	TCP/80	Open	1	Yes	No
HTTPS	TCP/443	Open	1	Yes	Yes
NTP	UDP/123	Closed	1	No	No
SNTP					
NTP (secure)	UDP/123	Closed	1	Yes	No
PROFINET	UDP/34964 UDP/49151 49159 <sup>1)</sup>	Open	1	No	No
RADIUS	UPD/1812,1813	Closed	1	Yes	Yes
SMTP	TCP/25 TCP/465	Closed	1	Yes	Yes
SNMP	UDP/161	Open	1	Yes	Yes (when con- figured)
SSH	TCP/22	Open	1	Yes	Yes
Syslog	UPD/514 TCP/6514	Closed	1	Yes	Yes
TELNET	TCP/23	Open	1	Yes	No
TFTP	UDP/69	Open	1	No	No

<sup>1)</sup> Port number can be configured via the WBM.

# Description of the device

### 4.1 Product overview

### **Article numbers**

There are two variants of each device with different article numbers. The two variants differ only in their factory settings. All other properties are identical.

Device	Description	Article number (Ethernet/IP)	Article number (PROFINET)
SCALANCE XB208	8 x 10/100 Mbps RJ-45 ports	6GK5 208-0BA00-2TB2	6GK5 208-0BA00-2AB2
SCALANCE XB205-3 (SC)	5 x 10/100 Mbps RJ-45 ports, 3 x 10/100 Mbps SC ports, multimode fiber- optic cable	6GK5 205-3BD00-2TB2	6GK5 205-3BD00-2AB2
SCALANCE XB205-3LD (SC)	5 x 10/100 Mbps RJ-45 ports, 3 x 10/100 Mbps SC ports, single mode fiber- optic cable	6GK5 205-3BF00-2TB2	6GK5 205-3BF00-2AB2
SCALANCE XB205-3	5 x 10/100 Mbps RJ-45 ports, 3 x 10/100 Mbps ST ports, multimode fiber- optic cable	6GK5 205-3BB00-2TB2	6GK5 205-3BB00-2AB2
SCALANCE XB216	16 x 10/100 Mbps RJ-45 ports	6GK5 216-0BA00-2TB2	6GK5 216-0BA00-2AB2
SCALANCE XB213-3 (SC)	13 x 10/100 Mbps RJ-45 ports, 3 x 10/100 Mbps SC ports, multimode fiber- optic cable	6GK5 213-3BD00-2TB2	6GK5 213-3BD00-2AB2
SCALANCE XB213-3LD (SC)	13 x 10/100 Mbps RJ-45 ports, 3 x 10/100 Mbps SC ports, single mode fiber- optic cable	6GK5 213-3BF00-2TB2	6GK5 213-3BF00-2AB2
SCALANCE XB213-3	13 x 10/100 Mbps RJ-45 ports, 3 x 10/100 Mbps ST ports, multimode fiber- optic cable	6GK5 213-3BB00-2TB2	6GK5 213-3BB00-2AB2

### **Factory settings**

### EtherNet/IP variants

- Industrial Ethernet protocol: EtherNet/IP
- Base bridge mode: 802.1Q VLAN Bridge
- Redundancy mechanism: RSTP
- Trust mode: Trust CoS-DSCP
- IGMP Snooping/IGMP Querier: On
- IPv4 Address Collision Detection: Attempt to defend

### 4.1 Product overview

### **PROFINET** variants


- Industrial Ethernet protocol: PROFINET
- Base bridge mode: 802.1D transparent bridge
- Redundancy mechanism: Ring redundancy

Device	Factory setting ring ports
SCALANCE XB208 and XB216	P0.1 and P0.2
SCALANCE XB205-3, XB205-3 (SC) and XB205-3LD (SC)	P0.7 and P0.8
SCALANCE XB213-3, XB213-3 (SC) and XB213-3LD (SC)	P0.15 and P0.16

- Trust mode: Trust CoS
- IGMP Snooping/IGMP Querier: Off
- IPv4 Address Collision Detection: Never give up

### **Type designation**

The type designation of a SCALANCE XB-200 is made up of several parts that have the following meaning:

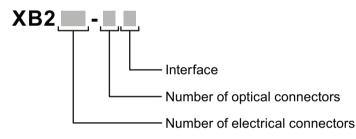

Interfaces of devices with optical connectors:

Interface	Property		
(SC)	10/100 Mbps SC port, multimode fiber-optic cable, up to 5 km		
LD (SC)	10/100 Mbps SC port, single mode fiber-optic cable, up to 26 km		
[-]	10/100 Mbps ST port, multimode fiber-optic cable, up to 5 km		

4.1 Product overview

### Unpacking and checking

### 

### Do not use any parts that show evidence of damage

If you use damaged parts, there is no guarantee that the device will function according to the specification.

If you use damaged parts, this can lead to the following problems:

- Injury to persons
- Loss of the approvals
- Violation of the EMC regulations
- Damage to the device and other components

Use only undamaged parts.

- 1. Make sure that the package is complete.
- 2. Check all the parts for transport damage.

### Components of the product

The following components are supplied with a SCALANCE XB-200:

- One device
- Two 3-terminal blocks for the power supply
- One product DVD with documentation and software

#### Accessories

The following accessories are available for SCALANCE XB-200:

### Cable


Component	Description	Article number
Connecting cable (RJ-11/ RS-232)	Preassembled, serial cable with RJ-11 and RS-232 plug,	6GK5 980-3BB00-0AA5
	Length: 3 m	
	pack of 1	

4.2 Device views

### 4.2 Device views

### 4.2.1 SCALANCE XB208

The following figure shows an overview of the components of the SCALANCE XB208.

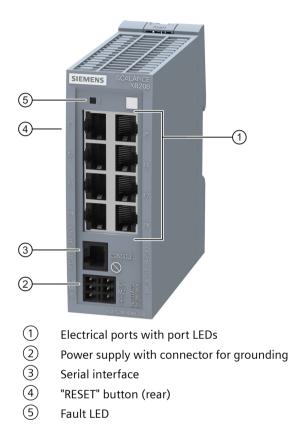

### 4.2.2 SCALANCE XB205-3

The following figure shows an overview of the components of the SCALANCE XB205-3.



- ① Optical ports with port LEDs
- 2 Power supply with connector for grounding
- ③ Serial interface
- (4) Electrical ports with port LEDs
- 5 "RESET" button (rear)
- 6 Fault LED

4.2 Device views

### 4.2.3 SCALANCE XB213-3

The following figure shows an overview of the components of the SCALANCE XB213-3.



- ① Optical ports with port LEDs
- 2 Power supply with connector for grounding
- ③ Serial interface
- (4) Electrical ports with port LEDs
- 5 "RESET" button (rear)
- 6 Fault LED

### 4.3 RESET button

### Position

The "RESET" button is located on the rear of the SCALANCE XB-200.

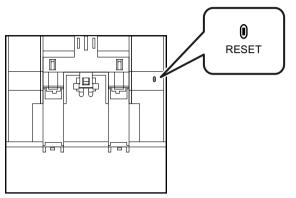


Figure 4-1 Position of the "RESET" button, for example on the SCALANCE XB213-3

### Resetting the device to factory defaults

### NOTICE

#### **Previous settings**

If you reset, all the settings you have made will be overwritten by factory defaults.

### NOTICE

#### Inadvertent reset

An inadvertent reset can cause disturbances and failures in a configured network with further consequences.

#### Note

#### Damage to the button

The RESET button is a short-stroke button with only a slight pressure point. To operate the button, you only need a force 2.5 N (approx. 250 g).

To avoid damaging the button press it with little force. Hold the tool you are using, for example, with only two fingers.

#### 4.4 LED display

#### Requirement

- The device is in operation.
- The function "Restore Factory Defaults" is enabled for the RESET button.

#### Note

#### Reset despite disabled "RESET" button

If you have disabled the "Restore Factory Defaults" function for the "RESET" button in the configuration, this does not apply during the startup phase, see section "Restoring the factory settings (Page 44)"

If the function has been disabled in the configuration, it is only disabled on completion of the startup phase.

#### Procedure

To reset the device to the factory defaults during operation, follow the steps below:

- 1. Press the "RESET" button with only slight force. A screwdriver for example with following size is suitable:
  - Blade thickness 0.8 1.8 mm
  - Blade width 4.0 4.8 mm
- 2. Hold down the button for approximately 12 seconds. After 9 seconds, the fault LED "F" flashes for 3 seconds.
  - If you release the button after approximately 12 seconds, the device is restarted and the factory settings are restored.
  - If you release the button before the 12 seconds have elapsed, the reset is canceled.

### Enabling and disabling the button

In the configuration, you can enable or disable the button function.

### 4.4 LED display

### Fault LED "F"

The fault LED "F" indicates the incorrect functioning of the device.

LED color	LED status	Meaning	
-	Off	The device is a turned off.	
Green	Lit	The device has not detected a problem.	
Red	Lit	The device has detected a problem.	
		The connected power supply is too low.	
		Using the WBM and CLI, you can set when the device sig- nals an error and which errors should be signaled.	

### 4.4.1 LED display "P"

### Port LEDs "P"

The port LEDs indicate the status of the ports.

### RJ-45 ports

Each RJ-45 port has 2 integrated LEDs.

The green LED shows the status of the link.

LED color	LED status	Meaning
Green	Lit	link exists
-	Off	No link exists

The yellow LED shows the status of data reception.

LED color	LED status	Meaning
Yellow	Flashing	Receiving data at port
-	Off	Not receiving data at port

### SC/ST ports

There is an LED for each SC/ST port.

LED color	LED status	Meaning
Green	Lit	link exists
-	Off	No link exists

4.4 LED display

# Installation and disassembly

### 5.1 Safety notices for installation

### **Safety notices**

When installing the device, keep to the safety notices listed below.

### 

If a device is operated in an ambient temperature of more than 50 °C, the temperature of the device housing may be higher than 70 °C. The device must therefore be installed so that it is only accessible to service personnel or users that are aware of the reason for restricted access and the required safety measures at an ambient temperature higher than 50 °C.

### 

If the device is installed in a cabinet, the inner temperature of the cabinet corresponds to the ambient temperature of the device.

### 

If the cable or conduit entry point exceeds 70 °C or the branching point of conductors exceeds 80 °C, special precautions must be taken. If the equipment is operated in an air ambient in excess of 60 °C, only use cables with admitted maximum operating temperature of at least 80 °C.

### NOTICE

### Improper mounting

Improper mounting may damage the device or impair its operation.

- Before mounting the device, always ensure that there is no visible damage to the device.
- Mount the device using suitable tools. Observe the information in the respective section about mounting.

5.1 Safety notices for installation

### Safety notices on use in hazardous areas

#### General safety notices relating to protection against explosion



### EXPLOSION HAZARD

Replacing components may impair suitability for Class 1, Division 2 or Zone 2.

### **M** WARNING

The device is intended for indoor use only.

### 🛕 WARNING

The device may only be operated in an environment of contamination class 1 or 2 (see EN/IEC 60664-1, GB/T 16935.1).

### 🛕 WARNING

When used in hazardous environments corresponding to Class I, Division 2 or Class I, Zone 2, the device must be installed in a cabinet or a suitable enclosure.

### Notes for use in hazardous locations according to ATEX, IECEx, UKEX and CCC Ex

If you use the device under ATEX, IECEx, UKEX or CCC Ex conditions you must also keep to the following safety instructions in addition to the general safety instructions for protection against explosion:

### 

To comply with EU Directive 2014/34 EU (ATEX 114), UK-Regulation SI 2016/1107 or the conditions of IECEx or CCC-Ex, the housing or cabinet must meet the requirements of at least IP54 (according to EN/IEC 60529, GB/T 4208) in compliance with EN IEC/IEC 60079-7, GB 3836.8.

### WARNING

If the temperature of the cable or housing socket exceeds 60 °C or the temperature at the branching point of the cables exceeds 80 °C, special precautions must be taken. If the equipment is operated in an air ambient in excess of 60 °C, only use cables with admitted maximum operating temperature of at least 80 °C.

### Devices with approval [op is Gb] for optical interfaces

Some devices have an additional ATEX approval according to II 3 (2) G Ex nA [op is Gb] IIC T4 Gc and an additional approval in compliance with IECEx according to Ex nA [op is Gb] IIC T4 Gc, see

section "Approvals (Page 63)". This is indicated on the type plate. The FO bus connections may run through or in a Zone 1 and Zone 2 hazardous area with these devices.

### Additional notes

### 

### Use only approved components

If you use components and accessories that are not approved for SIMATIC NET devices or their target systems, this may violate the requirements and regulations for safety and electromagnetic compatibility.

Only use components approved for the SIMATIC NET devices.

### NOTICE

### Warming and premature aging of the IE switch due to direct sunlight

Direct sunlight can heat up the device and can lead to premature aging of the IE switch and its cabling.

Provide suitable shade to protect the IE switch against direct sunlight.

### Note

During installation and operation, keep to the installation guidelines and safety notices described in this document and in the system manuals "Industrial Ethernet / PROFINET Industrial Ethernet" and "Industrial Ethernet / PROFINET passive network components".

You will find information on the system manuals in the section "Introduction", under "Further documentation".

### 5.2 Mounting on DIN rails

### Installation clearances

Keep to the following minimum clearances so that the convection ventilation of the device is not blocked:

- Below at least 10 cm
- Above at least 10 cm

5.2 Mounting on DIN rails

### Installation

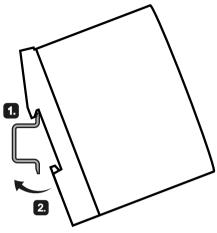


Figure 5-1 DIN rail mounting

To install the device on a 35 mm DIN rail complying with DIN EN 60715, follow the steps below:

- 1. Place the housing guide of the device on the top edge of the DIN rail 1.
- 2. Press the device down against the DIN rail until the spring catch locks in place (2).
- 3. Fit the connectors for the power supply, see the section "Power supply (Page 39)".
- 4. Insert the terminal blocks into the sockets on the device.

### Removal

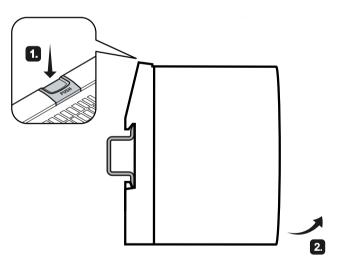


Figure 5-2 Removing from a DIN rail

To remove the device from a DIN rail, follow the steps below:

- 1. Disconnect all connected cables.
- 2. Release the DIN rail locking mechanism by pressing down on the release button 1.
- 3. Pull the lower part of the device away from the DIN rail 2.

## 5.3 Disassembly

### 

### Improper disassembly

Improper disassembly may result in a risk of explosion in hazardous areas.

For proper disassembly, observe the following:

- Before starting work, ensure that the electricity is switched off.
- Secure remaining connections so that no damage can occur as a result of disassembly if the system is accidentally started up.

5.3 Disassembly

# Connecting up

### 6.1 Safety when connecting up

### **Safety notices**

When connecting up the device, keep to the safety notices listed below.

### WARNING Power supply

The device is designed for operation with a directly connectable safety extra low voltage (SELV) from a limited power source (LPS).

The power supply therefore needs to meet at least one of the following conditions:

- Only safety extra low voltage (SELV) with limited power source (LPS) complying with IEC 60950-1 / EN 60950-1 / VDE 0805-1 or IEC 62368-1 / EN 62368-1 / VDE 62368-1 may be connected to the power supply terminals.
- The power supply unit for the device must meet NEC Class 2 according to the National Electrical Code (r) (ANSI / NFPA 70).

If the equipment is connected to a redundant power supply (two separate power supplies), both must meet these requirements.

#### Note

#### No light power measurement (PROFINET diagnostics)

The devices do not support diagnostics with light power measurement.

#### Safety notices on use in hazardous areas

General safety notices relating to protection against explosion

### 🛕 warning

### **EXPLOSION HAZARD**

Do not connect or disconnect cables to or from the device when a flammable or combustible atmosphere is present.

6.1 Safety when connecting up

### 

### EXPLOSION HAZARD

Do not press the RESET button if there is a potentially explosive atmosphere.

### 🛕 WARNING

### Suitable cables at high ambient temperatures in hazardous area

At an ambient temperature of  $\geq$  60 °C, use heat-resistant cables designed for an ambient temperature at least 20 °C higher. The cable entries used on the enclosure must comply with the IP degree of protection required by EN IEC / IEC 60079-0, GB 3836.1.

### 

### Unsuitable cables or connectors

Risk of explosion in hazardous areas

- Only use connectors that meet the requirements of the relevant type of protection.
- If necessary, tighten the connector screw connections, device fastening screws, grounding screws, etc. according to the specified torques.
- Close unused cable openings for electrical connections.
- Check the cables for a tight fit after installation.

### 🛕 WARNING

### Lack of equipotential bonding

If there is no equipotential bonding in hazardous areas, there is a risk of explosion due to equalizing current or ignition sparks.

• Ensure that equipotential bonding is available for the device.

### 

### Unprotected cable ends

There is a risk of explosion due to unprotected cable ends in hazardous areas.

• Protect unused cable ends according to IEC/EN 60079-14.

### 

#### Improper installation of shielded cables

There is a risk of explosion due to equalizing currents between the hazardous area and the nonhazardous area.

- Ground shielded cables that cross hazardous areas at one end only.
- Lay a potential equalization conductor when grounding at both ends.

### 

### Insufficient isolation of intrinsically safe and non-intrinsically safe circuits

Risk of explosion in hazardous areas

- When connecting intrinsically safe and non-intrinsically safe circuits, ensure that the galvanic isolation is performed properly in compliance with local regulations (e.g. IEC 60079-14).
- Observe the device approvals applicable for your country.

### Notes for use in hazardous locations according to ATEX, IECEx, UKEX and CCC Ex

If you use the device under ATEX, IECEx, UKEX or CCC Ex conditions you must also keep to the following safety instructions in addition to the general safety instructions for protection against explosion:

### 

### **Transient overvoltages**

Take measures to prevent transient overvoltages of more than 40% of the rated voltage (or more than 119 V). This is the case if you only operate devices with SELV (safety extra-low voltage).

### Safety notices when using the device according to Hazardous Locations (HazLoc)

If you use the device under HazLoc conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:

### 🛕 WARNING

### **EXPLOSION HAZARD**

You may only connect or disconnect cables carrying electricity when the power supply is switched off or when the device is in an area without inflammable gas concentrations.

6.2 Industrial Ethernet

### Further notes

### 🛕 WARNING

### Safety notice for connecting with a LAN ID (Local Area Network)

A LAN or LAN segment with all the interconnected devices should be contained completely in a single low voltage power distribution in a building. The LAN is designed either for "Environment A" according to IEEE802.3 or "Environment 0" according to IEC TR 62102.

Do not connect any electrical connectors directly to the telephone network (telephone network voltage) or a WAN (Wide Area Network).

### 6.2 Industrial Ethernet

### **Ring ports**

When shipped the ring ports are marked by a label. The labels are only clipped on and you can remove them if necessary.

### 6.2.1 Electrical

### Note

### Strain relief for the Ethernet cables

In order to avoid mechanical stress on the Ethernet cables and resulting interruption of the contact, fasten the cables at a short distance from the connector using a cable guide or busbar.

### R-45 connector technology

The attachment to Industrial Ethernet uses RJ-45 connected technology with MDI-X assignment.

### **Pin assignment**

The following table shows the pin assignment of the R-45 connectors.

Pin number	Assignment	R-45 connector
Pin 1	RD+	
Pin 2	RD-	
Pin 3	TD+	
Pin 4	n. c. (Not connected)	12345678
Pin 5	n. c. (Not connected)	
Pin 6	TD-	
Pin 7	n. c. (Not connected)	
Pin 8	n. c. (Not connected)	

### MDI / MDI-X autocrossover

With the MPI/MDI-X autocrossover function, the send and receive contacts of an Ethernet port are assigned automatically. The assignment depends on the cable with which the communications partner is connected. This means that it does not matter whether the port is connected using a patch cable or crossover cable. This prevents malfunctions resulting from mismatching send and receive wires. This makes installation much easier for the user.

#### Note

### **Formation of loops**

Please note that the direct connection of two ports on the IE switch or accidental connection over several IE switches causes an illegal loop. Such a loop can lead to network overload and network failures.

### Autonegotiation

Autonegotiation means the automatic detection/negotiation of the transmission rate and the operating mode of ports at the opposite end. This makes it possible to configure different devices automatically.

Two components connected to a link segment can exchange information about the transfer and can adapt their settings to each other. The mode with the highest possible speed is set.

### Note

- If a port is set permanently to full duplex, the connected partner port must also be set to full duplex.
- If a port operating in the "Auto negotiation" mode is connected to a partner port that is not operating in the "Auto negotiation" mode, the partner port setting must be fixed at 100 Mbps or 10 Mbps half duplex mode.
- If you disable the "Auto negotiation" function, the "MDI/MDI-X autocrossover" function is also turned off. Then use a crossover cable.

6.3 Wiring rules

## 6.2.2 Optical

### NOTICE

### Failure of the data traffic due to contamination of optical plug-in connections

Optical sockets and plugs are sensitive to contamination of the end face. Contamination can lead to the failure of the optical transmission network. Take the following precautions to avoid functional impairments:

- Clean the end face of field-assembled connectors carefully before connecting. No residues of processing may remain on the connector.
- Only remove the dust caps of optical transceivers and pre-configured cables shortly before connecting the cables.
- Close unused optical sockets and plugs as well as pluggable transceivers and slots with the supplied protective caps.

### SC connectors

The attachment to Industrial Ethernet uses SC connector technology (Subscriber Connector).



### **ST/BFOC** connectors

The attachment to Industrial Ethernet uses ST/BFOC connector technology (Straight Tip/Bayonet Fiber Optic Connector).



## 6.3 Wiring rules

When wiring use cables with the following AWG categories or cross sections.

Wiring rules for		Spring-loaded terminals
connectable cable cross sec-	without wire end ferrule	0.2 - 1.5 mm <sup>2</sup>
tions for flexible cables		AWG: 24 - 14
	with wire end ferrule with plastic ferrule**	0.25 - 0.75 mm <sup>2</sup>
		AWG: 24 - 18
	with TWIN wire end ferrule without	0.25 - 1.5 mm <sup>2</sup>
	plastic ferrule**	AWG: 24 - 14

6.4 Power supply

Wiring rules for	Spring-loaded terminals
Stripped length of the cable	10 mm
Wire end ferrule according to DIN 46228 without plastic ferrule**	10 mm

\* AWG: American Wire Gauge

\*\* See note "Wire end ferrules"

### Note

### Wire end ferrules

Use crimp shapes with smooth surfaces, such as provided by square and trapeze shaped crimp cross sections.

Crimp shapes with wave-shaped profile are unsuitable.

## 6.4 Power supply

### Notes on the power supply

WARNING

### Incorrect power supply

Never operate the device with AC voltage or DC voltage higher than 32 V DC.

## 

### Damage to the device due to overvoltage

The connector of the external power supply is not protected against strong electromagnetic pulses that can, for example, result from lightning strikes or switching large loads.

One of the tests used to attest the immunity of devices of the SCALANCE CB-200 IE switches to electromagnetic interference is the "surge immunity test" according to EN61000-4-5. This test requires overvoltage protection for the power supply lines. A suitable device is, for example, the Dehn Blitzductor BVT AVD 24, article number 918 422 or a comparable protective element.

Manufacturer: DEHN+SOEHNE GmbH+Co.KG, Hans-Dehn-Str.1, Postfach 1640, D92306 Neumarkt, Germany

Operate the SCALANCE XB-200 with suitable overvoltage protection.

### Information on the power supply

- The power supply is connected using a 3-pin plug-in terminal block (spring-loaded terminal). The terminal block ships with the device and can also be ordered as a spare part.
- The power supply can be connected redundantly. Both inputs are isolated. There is no distribution of load.

### 6.5 Serial interface

- The power supply is connected over a high resistance with the enclosure to allow an ungrounded set up. The two power inputs are non-floating.
- Note the wiring rules.

### Position and assignment

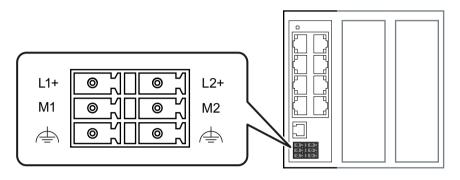


Figure 6-1 Position of the power supply, for example on the SCALANCE XB213-3

Contact	Assignment	Assignment	Contact
L1+	24 VDC	24 VDC	L2+
M1	Ground	Ground	M2
ĺ	Functional ground	Functional ground	Ē

## 6.5 Serial interface

### Information on the serial interface

- Via the serial interface (RJ-11 jack), you can access the CLI of the device directly via an RS-232 connection (115200 8N1) without assigning an IP address.
- Access to the device is also possible independent of the Ethernet ports.
- To connect the serial interface to the PC, you require a cable with an RJ-11 plug and 9-pin Dsub female connector. You can order the connecting cable for the serial interface as an accessory.

### Position and assignment

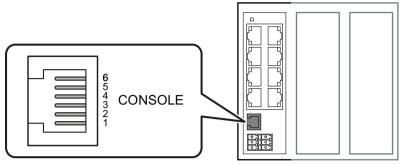


Figure 6-2 Position and pin assignment of the serial interface (RJ-11 jack), for example on the SCALANCE XB213-3

### Assignment of the terminal block

The connecting cable listed in the "Accessories" section has the following pin assignment:

Contact	Pin assignment of the RJ-11 plug	Pin assignment of the D-sub female con- nector
1	-	-
2	-	TD (Transmit Data)
3	TD (Transmit Data)	RD (Receive Data)
4	SG (Signal Ground)	-
5	RD (Receive Data)	SG (Signal Ground)
6	-	-
7		-
8		-
9		-

### Note

### Pin assignment of the RJ-11 jack on the device

The RJ-11 jack on the device has a pinout to match the RJ-11 plug of the connecting cable mentioned above.

## 6.6 Functional ground

EMC disturbances are diverted to ground via the functional ground. This ensures the immunity of the data transmission.

The functional ground must be implemented with low impedance. The connection of the functional ground must be established directly on the mounting plate or the DIN rail terminal.

The IE switch has a terminal for functional ground, refer to the section "Power supply (Page 39)". Keep to the specified cross-sectional area for the functional ground.

The terminal is identified by the following symbol for the functional ground  $\triangle$ .

Follow the steps below to connect the functional ground:

- 1. Connect the terminal of the IE switch with as short a cable as possible  $\leq$  150 mm and with the required cross-sectional area to a grounded part of the system (DIN rail).
- 2. Connect the DIN rail with the ground of the system.

### Protective/functional ground

The connection of the reference potential surface with the protective ground system is normally in the cabinet close to the power feed-in. This ground conducts fault currents to ground safely and according DIN/VDE 0100 is a protective ground to protect people, animals and property from too high contact voltages.

Apart from the protective ground, there is functional grounding in the cabinet. According to EN60204-1 (DIN/VDE 0113 T1) electrical circuits must be grounded. The chassis (0 V) is grounded at one defined point. Here, once again the grounding is implemented with the lowest leakage resistance to ground in the vicinity of the power feed-in.

With automation components, functional ground also ensures interference-free operation of a controller. Via the functional ground, interference currents coupled in via the connecting cables are discharged to ground.

# Upkeep and maintenance

### 

### Unauthorized repair of devices in explosion-proof design

Risk of explosion in hazardous areas

• Repair work may only be performed by personnel authorized by Siemens.

## 

### Impermissible accessories and spare parts

Risk of explosion in hazardous areas

- Only use original accessories (Page 17) and original spare parts.
- Observe all relevant installation and safety instructions described in the manuals for the device or supplied with the accessories or spare parts.



### 

### Hot surfaces

Risk of burns during maintenance work on parts with a surface temperature above 70  $^{\circ}\text{C}$  (158  $^{\circ}\text{F}).$ 

- Take appropriate protective measures, for example, wear protective gloves.
- Once maintenance work is complete, restore the touch protection measures.

### NOTICE

### Cleaning the housing

If the device is not in a hazardous area, only clean the outer parts of the housing with a dry cloth.

If the device is in a hazardous area, use a slightly damp cloth for cleaning.

Do not use solvents.

## 7.1 Downloading new firmware using TFTP without WBM and CLI

### Firmware

The firmware is signed and encrypted. This ensures that only firmware created by Siemens can be downloaded to the device.

### 7.2 Restoring the factory settings

### Pressing the "RESET" button

To load new firmware, you require the "RESET" button. When pressing the button, remember the information in the section "RESET button (Page 23)".

### **Procedure with Microsoft Windows**

You can download new firmware to the device using TFTP. To do this, the device does not need to be reachable either using Web Based Management (WBM) or using the Command Line Interface (CLI). This can be the case if there was a power failure during a firmware update.

When pressing the button, observe the information in the section "RESET button (Page 23)".

Follow the steps below to load new firmware using TFTP:

- 1. Turn off the power to the device.
- 2. Press the SELECT/SET button and reconnect the device to the power supply with the button pressed.
- 3. Hold down the button until the red fault LED "F" starts to flash.
- Release the button as long as the red error LED is still flashing.. This time only lasts a few seconds. The bootloader of the device waits in this status for a new firmware file that you can download by TFTP.
- 5. Connect a PC to an Ethernet port of the device with an Ethernet cable.
- 6. Assign an IP address to the device using DHCP or SINEC PNI.
- 7. In a Windows command prompt, go to the directory where the file with the new firmware is located and use the following command: tftp -i <IP address> put <firmware file>.

## Note

You can enable TFTP in Microsoft Windows as follows:

"Control Panel" > "Programs and Features" > "Turn Windows features on or off" > "TFTP Client".

Once the firmware has been transferred completely to the device and validated, the device restarts. This may take a few minutes.

## 7.2 Restoring the factory settings

### NOTICE

### **Previous settings**

If you reset, all the settings you have made will be overwritten by factory defaults.

7.2 Restoring the factory settings

#### NOTICE

Inadvertent reset

An inadvertent reset can cause disturbances and failures in the configured network.

### With the "RESET" button

#### Restoring the factory settings during the startup phase

### NOTICE

#### Reset despite disabled "RESET" button

Using the "RESET" button, you can always reset the device parameters to the factory settings during the startup phase of the device. This applies also if the "Reset to Factory Defaults" function was disabled in the configuration. This allows you to reset the device to the factory defaults in an emergency.

If the function has been disabled in the configuration, it is only disabled on completion of the startup phase.

To reset the device to the factory defaults during the startup phase, follow the steps below:

- 1. Turn off the power to the device.
- 2. Now press the "RESET" button and reconnect the power supply to the device while holding down the button.
- 3. Hold down the button until the red error LED "F" stops flashing and is permanently lit.
- 4. Now release the button and wait until the fault LED "F" goes off again.
- 5. The device starts automatically with the factory defaults.

### Restoring the factory defaults during operation

You can also reset the device to the factory defaults during operation, see section "RESET button (Page 23)".

### Via the configuration

You will find detailed information on resetting the device parameters using the WBM and CLI in the configuration manuals see also section "Introduction (Page 5)":

7.2 Restoring the factory settings

# **Technical specifications**

## 8.1 Technical specifications of the SCALANCE XB208

The following technical specifications apply to the SCALANCE XB208.

Technical specifications		
Attachment to Industrial Etherne	t	
	Quantity	8
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply	Rated voltage	24 VDC
	Voltage range	19.2 to 28.8 VDC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 3 terminals
	Property	Implemented redundantly
Current consumption	at 24 VDC	170 mA
Effective power loss	at 24 VDC	4.1 W
Fusing		F 2.5 A / 125 V
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	0 °C to +60 °C
	During storage	-40 ℃ to +70 ℃
	During transportation	-40 °C to +70 °C
Relative humidity	During operation at 25 $^\circ\!\!\! C$	≤ 95 % no condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	40 x 117 x 109 mm	
Weight	250 g	
Installation options	Installation on a DIN rail	
Mean time between failure (MTB	F)	
MTBF (EN/IEC 61709; 40 °C)	> 84 years	

8.2 Technical specifications of the SCALANCE XB205-3 (SC)

## 8.2 Technical specifications of the SCALANCE XB205-3 (SC)

The following technical specifications apply to the SCALANCE XB205-3 (SC).

Technical specifications		
Attachment to Industrial Ethe	ernet	
Electrical connectors	Quantity	5
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
Optical connectors	Quantity	3
	Connector	SC socket
	Properties	Full duplex acc. to 100Base-FX
	Transmission speed	100 Mbps
	Cable type	Multimode glass FO cable
	Transmitter output (optical)	
	Minimum	• -19 dBm
	Maximum	• -14 dBm
	Receiver input	
	• Sensitivity min.	• -34 dBm
	Input power max.	• -3 dBm
	Cable cross-section Cable length	Attenuation
	• 50/125 μm • 0 5 km	• ≤ 1 dB/km at 1310 nm; 1200 MHz * km
	• 62.5/125 μm • 0 5 km	• ≤ 1 dB/km at 1310 nm; 1200 MHz * km
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply	Rated voltage	24 VDC
	Voltage range	19.2 to 28.8 VDC Safety Extra Low Voltage (SELV)
	Design	Terminal block, 3 terminals
	Properties	Implemented redundantly
Current consumption	at 24 VDC	300 mA *)
Effective power loss	at 24 VDC	7.2 W
Fusing		F 2.5 A / 125 V
Permitted ambient condition	S	
Ambient temperature	During operation up to 2000 m	0 °C to +60 °C
	During storage	-40 ℃ to +70 ℃
	During transportation	-40 ℃ to +70 ℃
Relative humidity	During operation at 25 ℃	≤ 95 % no condensation
Housing, dimensions and we	ight	
Design	compact	

8.3 Technical specifications of the SCALANCE XB205-3LD (SC)

Technical specifications	
Housing material	Polycarbonate (PC-GF10)
Degree of protection	IP20
Dimensions (W x H x D)	80 x 117 x 109 mm
Weight	350 g
Installation options	Installation on a DIN rail
Mean time between failure (MT	3F)
MTBF (EN/IEC 61709; 40 °C)	> 55 years

\*)For every optical port that you set to "link down", the current consumption of the device is reduced by 30 mA.

## 8.3 Technical specifications of the SCALANCE XB205-3LD (SC)

The following technical specifications apply to the SCALANCE XB205-3LD (SC).

Technical specifications		
Attachment to Industrial Ethe	ernet	
Electrical connectors	Quantity	5
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
Optical connectors	Quantity	3
	Connector	SC socket
	Properties	Full duplex acc. to 100Base-FX
	Transmission speed	100 Mbps
	Cable type	Single mode glass FO cable
	Transmitter output (optical)	
	Minimum	• -15 dBm
	• Maximum	• -8 dBm
	Receiver input	
	Sensitivity min.	• -32 dBm
	Input power max.	• -3 dBm
	Cable cross-section Cable length	Attenuation
	• 9/125 µm • 0 to 26 km	• ≤ 0.5 dB/km at 1310 nm
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply	Rated voltage	24 VDC
	Voltage range	19.2 to 28.8 VDC Safety Extra Low Voltage (SELV)
	Design	Terminal block, 3 terminals
	Properties	Implemented redundantly

8.4 Technical specifications of the SCALANCE XB205-3

Technical specifications		
Current consumption	at 24 VDC	290 mA *)
Effective power loss	at 24 VDC	7 W
Fusing		F 2.5 A / 125 V
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	0 °C to +60 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation at 25 $^\circ\!$	$\leq$ 95 % no condensation
Housing, dimensions and weig	ht	
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	80 x 117 x 109 mm	
Weight	350 g	
Installation options	Installation on a DIN rail	
Mean time between failure (M	TBF)	
MTBF (EN/IEC 61709; 40 °C)	> 50 years	

\*)For every optical port that you set to "link down", the current consumption of the device is reduced by 30 mA.

## 8.4 Technical specifications of the SCALANCE XB205-3

The following technical specifications apply to the SCALANCE XB205-3.

Technical specifications		
Attachment to Industrial Eth	nernet	
Electrical connectors	Quantity	5
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps

## 8.4 Technical specifications of the SCALANCE XB205-3

Technical specifications		
Optical connectors	Quantity	3
	Connector	ST(BFOC) socket
	Properties	Full duplex acc. to 100Base-FX
	Transmission speed	100 Mbps
	Cable type	Multimode glass FO cable
	Transmitter output (optical)	
	Minimum	• -19 dBm
	Maximum	• -14 dBm
	Receiver input	
	Sensitivity min.	• -32 dBm
	Input power max.	• -3 dBm
	Cable cross-section Cable length	Attenuation
	• 50/125 μm • 0 5 km	• $\leq$ 1 dB/km at 1310 nm; 1200 MHz * km
	• 62.5/125 μm • 0 5 km	• ≤ 1 dB/km at 1310 nm; 1200 MHz * km
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply	Rated voltage	24 VDC
	Voltage range	19.2 to 28.8 VDC Safety Extra Low Voltage (SELV)
	Design	Terminal block, 3 terminals
	Properties	Implemented redundantly
Current consumption	at 24 VDC	300 mA *)
Effective power loss	at 24 VDC	7.2 W
Fusing		F 2.5 A / 125 V
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	0 ℃ to +60 ℃
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation at 25 °C	$\leq$ 95 % no condensation
Housing, dimensions and weig	ht	
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	80 x 117 x 109 mm	
Weight	350 g	
Installation options	Installation on a DIN rail	
Mean time between failure (M	ГВF)	
MTBF (EN/IEC 61709; 40 °C)	> 55 years	

\*)For every optical port that you set to "link down", the current consumption of the device is reduced by 30 mA.

8.5 Technical specifications of the SCALANCE XB216

## 8.5 Technical specifications of the SCALANCE XB216

The following technical specifications apply to the SCALANCE XB216.

Technical specifications		
Attachment to Industrial Etherne	t	
	Quantity	16
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply	Rated voltage	24 VDC
	Voltage range	19.2 to 28.8 VDC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 3 terminals
	Property	Implemented redundantly
Current consumption	at 24 VDC	280 mA
Effective power loss	at 24 VDC	6.7 W
Fusing		F 2.5 A / 125 V
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	0 °C to +60 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation at 25 $^\circ\!$	$\leq$ 95 % no condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	80 x 117 x 109 mm	
Weight	400 g	
Installation options	Installation on a DIN rail	
Mean time between failure (MTB	F)	
MTBF (EN/IEC 61709; 40 °C)	> 60 years	

8.6 Technical specifications of the SCALANCE XB213-3 (SC)

## 8.6 Technical specifications of the SCALANCE XB213-3 (SC)

Technical specifications		
Attachment to Industrial Eth		
Electrical connectors	Quantity	13
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
Optical connectors	Quantity	3
	Connector	SC socket
	Properties	Full duplex acc. to 100Base-FX
	Transmission speed	100 Mbps
	Cable type	Multimode glass FO cable
	Transmitter output (optical)	
	Minimum	• -19 dBm
	Maximum	• -14 dBm
	Receiver input	
	Sensitivity min.	• -34 dBm
	Input power max.	• -3 dBm
	Cable cross-section Cable length	Attenuation
	• 50/125 µm • 0 5 km	• ≤ 1 dB/km at 1310 nm; 1200 MHz * km
	• 62.5/125 μm • 0 5 km	• ≤ 1 dB/km at 1310 nm; 1200 MHz * km
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply	Rated voltage	24 VDC
	Voltage range	19.2 to 28.8 VDC Safety Extra Low Voltage (SELV)
	Design	Terminal block, 3 terminals
	Properties	Implemented redundantly
Current consumption	at 24 VDC	410 mA *)
Effective power loss	at 24 VDC	9.8 W
Fusing		F 2.5 A / 125 V
Permitted ambient condition	S	
Ambient temperature	During operation up to 2000 m	0 °C to +60 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation at 25 °C	≤ 95 % no condensation
Housing, dimensions and we	ight	
Design	compact	

The following technical specifications apply to the SCALANCE XB213-3 (SC).

### 8.7 Technical specifications of the SCALANCE XB213-3LD (SC)

Technical specifications		
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	120 x 117 x 109 mm	
Weight	500 g	
Installation options	Installation on a DIN rail	
Mean time between failure (MT	F)	
MTBF (EN/IEC 61709; 40 °C)	> 45 years	

\*)For every optical port that you set to "link down", the current consumption of the device is reduced by 30 mA.

## 8.7 Technical specifications of the SCALANCE XB213-3LD (SC)

The following technical specifications apply to the SCALANCE XB213-3LD (SC).

Technical specifications		
Attachment to Industrial Ether	net	
Electrical connectors	Quantity	13
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
Optical connectors	Quantity	3
	Connector	SC socket
	Properties	Full duplex acc. to 100Base-FX
	Transmission speed	100 Mbps
	Cable type	Single mode glass FO cable
	Transmitter output (optical)	
	• Minimum	• -15 dBm
	• Maximum	• -8 dBm
	Receiver input	
	Sensitivity min.	• -32 dBm
	Input power max.	• -3 dBm
	Cable cross-section Cable length	Attenuation
	• 9/125 μm • 0 to 26 km	• ≤ 0.5 dB/km at 1310 nm
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply	Rated voltage	24 VDC
	Voltage range	19.2 to 28.8 VDC Safety Extra Low Voltage (SELV)
	Design	Terminal block, 3 terminals
	Properties	Implemented redundantly

### 8.8 Technical specifications of the SCALANCE XB213-3

Technical specifications		
Current consumption	at 24 VDC	400 mA *)
Effective power loss	at 24 VDC	9.6 W
Fusing		F 2.5 A / 125 V
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	0 °C to +60 °C
	During storage	-40 ℃ to +70 ℃
	During transportation	-40 ℃ to +70 ℃
Relative humidity	During operation at 25 $^\circ\!\!\!C$	≤ 95 % no condensation
Housing, dimensions and weig	Jht	
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	120 x 117 x 109 mm	
Weight	500 g	
Installation options	Installation on a DIN rail	
Mean time between failure (M	TBF)	
MTBF (EN/IEC 61709; 40 °C)	> 40 years	

\*)For every optical port that you set to "link down", the current consumption of the device is reduced by 30 mA.

## 8.8 Technical specifications of the SCALANCE XB213-3

The following technical specifications apply to the SCALANCE XB213-3.

Technical specifications		
Attachment to Industrial Eth	ernet	
Electrical connectors	Quantity	13
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps

## 8.8 Technical specifications of the SCALANCE XB213-3

Optical connectors	Quantity	3
	Connector	ST(BFOC) socket
	Properties	Full duplex acc. to 100Base-FX
	Transmission speed	100 Mbps
	Cable type	Multimode glass FO cable
	Transmitter output (optical)	
	Minimum	• -19 dBm
	Maximum	• -14 dBm
	Receiver input	
	• Sensitivity min.	• -32 dBm
	Input power max.	• -3 dBm
	Cable cross-section Cable length	Attenuation
	• 50/125 µm • 0 5 km	• ≤ 1 dB/km at 1310 nm; 1200 MHz * km
	• 62.5/125 µm • 0 5 km	• ≤ 1 dB/km at 1310 nm; 1200 MHz * km
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply	Rated voltage	24 VDC
	Voltage range	19.2 to 28.8 VDC Safety Extra Low Voltage (SELV)
	Design	Terminal block, 3 terminals
	Properties	Implemented redundantly
Current consumption	at 24 VDC	410 mA *)
Effective power loss	at 24 VDC	9.8 W
Fusing		F 2.5 A / 125 V
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	0 °C to +60 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation at 25 $^{\circ}$ C	$\leq$ 95 % no condensation
Housing, dimensions and weigh	t	
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	120 x 117 x 109 mm	
Weight	500 g	
Installation options	Installation on a DIN rail	
Mean time between failure (MT		
MTBF (EN/IEC 61709; 40 °C)	> 45 years	

\*)For every optical port that you set to "link down", the current consumption of the device is reduced by 30 mA.

## 8.9 Cable lengths

The following cable lengths listed are valid for SCALANCE XB-200.

Cable	Permitted cable length	
IE TP torsion cable	0 to 45 m	
with IE FC Outlet RJ-45 + 10 m TP cord	+ 10 m TP cord	
IE TP torsion cable	0 to 55 m	
with IE FC RJ-45 Plug 180		
IE FC TP Marine / Trailing / Flexible cable	0 to 75 m	
with IE FC Outlet RJ-45 + 10 m TP cord	+ 10 m TP cord	
IE FC TP Marine / Trailing / Flexible cable	0 to 85 m	
with IE FC RJ-45 Plug 180		
IE FC TP standard cable	0 to 90 m	
with IE FC Outlet RJ-45 + 10 m TP cord	+ 10 m TP cord	
IE FC TP standard cable	0 to 100 m	
with IE FC RJ-45 Plug 180		

## 8.10 Switching properties

The following switching properties listed are valid for SCALANCE XB-200.

<b>C i i i i i i i i i i</b>		
Switching properties		
Aging time	Can be configured (default value	e: 30 seconds)
Maximum frame size	1632	
Max. number of learnable ad- dresses	8192	
Response to LLDP frames	Blocking	
Response to spanning tree BPDU frames	Forwarding	
CoS acc. to IEEE 802.1Q	Yes	
QoS priority queues	4	
Switching technique	Store and forward	
Latency	10 microseconds	
Full wire speed switching	Frame length (bytes)	Number of frames per second (at 100 Mbps)
	64	148810
	128	84459
	256	45290
	512	23496
	1024	11973
	1280	9615
	1518	8127

### 8.10 Switching properties

#### Note

The number of SCALANCE XB-200 modules connected in a line influences the frame delay. When a frame passes through the switch, this is delayed by the store-and-forward function of the SCALANCE XB-200 by 10-130 microseconds (at 100 Mbps).

# **Dimension drawings**

### Note

Dimensions are specified in mm.

## Front view of the SCALANCE XB208

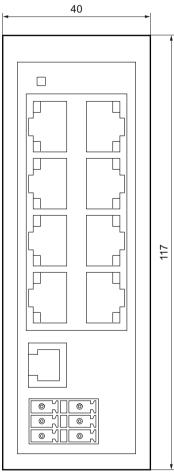


Figure 9-1 Width and height

## Front view of the SCALANCE XB205-3 (SC), XB205-3LD (SC), XB205-3 and XB216

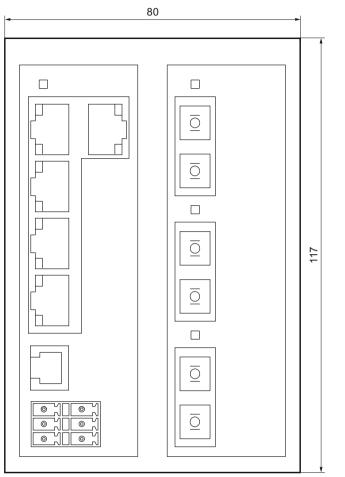


Figure 9-2 Width and height based on the example of the SCALANCE XB205-3

## Front view of the SCALANCE XB213-3 (SC), XB213-3LD (SC) and XB213-3

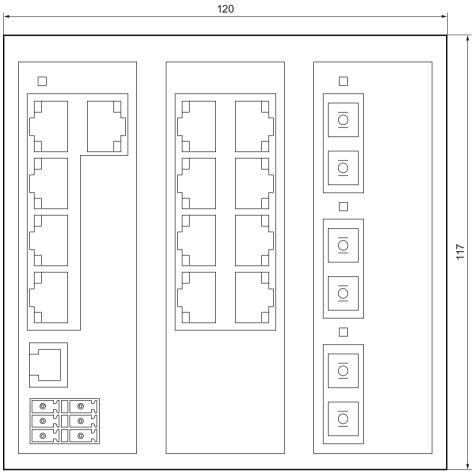


Figure 9-3 Width and height based on the example of the SCALANCE XB213-3

## Side view of the SCALANCE XB-200

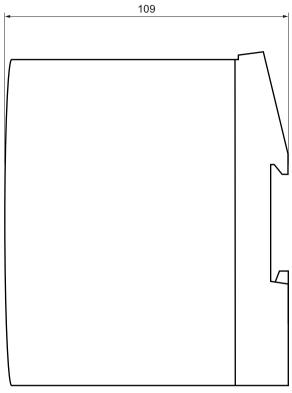


Figure 9-4 Depth

# Approvals

The SIMATIC NET products described in these Operating Instructions have the approvals listed below.

#### Note

#### Issued approvals on the type plate of the device

The specified approvals apply only when the corresponding mark is printed on the product. You can check which of the following approvals have been granted for your product by the markings on the type plate.

### Current approvals on the Internet

You will find the current approvals for the product on the Internet pages of Siemens Industry Online Support (<u>https://support.industry.siemens.com/cs/ww/en/ps/15273/cert</u>).

### Notes for the manufacturers of machines

This product is not a machine in the sense of the EC Machinery Directive or the Supply of Machinery (Safety) Regulations (UK).

There is therefore no declaration of conformity relating to the EC Machinery Directive 2006/42/ EEC or the Supply of Machinery (Safety) Regulations 2008 (UK) for this product.

If the product is part of the equipment of a machine, it must be included in the procedure for obtaining the EU/UK conformity assessment by the manufacturer of the machine.

### **Machinery directive**

The product is a component in compliance with the EC Machinery Directive 2006/42/EEC and the Supply of Machinery (Safety) Regulations 2008 (UK).

According to the Machinery Directive respectively the Supply of Machinery (Safety) Regulations (UK), we are obliged to point out that the product described is intended solely for installation in a machine.

Before the final product can be put into operation, it must be tested to ensure that it conforms with the Machinery Directive 2006/42/EEC and the Supply of Machinery (Safety) Regulations 2008 (UK).

### EC declaration of conformity



The SIMATIC NET products described in these operating instructions meet the requirements and safety objectives of the following EC directives and comply with the harmonized European

standards (EN) which are published in the official documentation of the European Union and here.

### • 2014/34/EU (ATEX explosion protection directive)

Directive of the European Parliament and the Council of 26 February 2014 on the approximation of the laws of the member states concerning equipment and protective systems intended for use in potentially explosive atmospheres, official journal of the EU L96, 29/03/2014, pages. 309-356

### • 2014/30/EU (EMC)

EMC directive of the European Parliament and of the Council of February 26, 2014 on the approximation of the laws of the member states relating to electromagnetic compatibility; official journal of the EU L96, 29/03/2014, pages. 79-106

### • 2011/65/EU (RoHS)

Directive of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment, official journal of the EC L174, 01/07/2011, pages 88-110

You will find the EC declaration of conformity for these products on the Internet pages of Siemens Industry Online Support (<u>https://support.industry.siemens.com/cs/ww/es/ps/15273/</u> <u>cert</u>).

The EC Declaration of Conformity is available for all responsible authorities at:

Siemens Aktiengesellschaft

Digital Industries DE-76181 Karlsruhe Germany

### **UK Declaration of Conformity**

UK

The UK declaration of conformity is available to all responsible authorities at:

Siemens Aktiengesellschaft Digital Industries Process Automation DE-76181 Karlsruhe Germany

### **Importer UK:**

Siemens plc, Manchester M20 2UR

You can find the current UK Declaration of Conformity for these products on the Internet pages under Siemens Industry Online Support (<u>https://support.industry.siemens.com/cs/ww/en/ps/15273/cert</u>).

The SIMATIC NET products described in this document meet the requirements of the following directives:

- UK-Regulation
   SI 2016/1107 Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres Regulations 2016, and related amendments
- EMC Regulation SI 2016/1091 Electromagnetic Compatibility Regulations 2016, and related amendments
- RoHS Regulation
   SI 2012/3032 Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, and related amendments

### ATEX, IECEx, UKEX and CCC Ex certification

### WARNING

### Risk of explosion in hazardous areas

When using SIMATIC NET products in hazardous area zone 2, make absolutely sure that the associated conditions in the following document are adhered to:


"SIMATIC NET Product Information Use of subassemblies/modules in a Zone 2 Hazardous Area".

You will find this document

- on the data medium that ships with some devices.
- on the Internet pages under Siemens Industry Online Support (<u>https://support.industry.siemens.com/cs/ww/en/view/78381013</u>).

Enter the document identification number "C234" as the search term.

The markings of the electrical devices are:

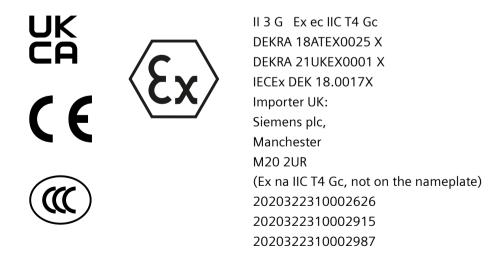

The products meet the requirements of the following standards:

- EN/IEC 60079-7, GB 3836.8
- EN IEC/IEC 60079-0, GB 3836.1

You will find the current versions of the standards in the currently valid certificates.

### Note for devices with CLASS 1 LASER

Important note on products certified according to Type Examination Certificate KEMA 07ATEX0145 X as of Issue 95 / DEKRA 18ATEX0025 X and IECEx Certificate of Conformity DEK 14.0025X as of Issue 43 / DEK 18.0017X and containing Class 1 optical radiation sources.

#### Note

### **CLASS 1 LASER**

The device contains optical radiation sources which comply with the limits of Class 1 according to IEC 60825-1. Fiber-optic cables connected to these optical radiation sources may therefore be routed either to or through hazardous areas requiring Category 2G, 3G, 2D or 3D equipment.

### EMC (electromagnetic compatibility)

The SIMATIC NET products described in these operating instructions meet the electromagnetic compatibility requirements according to the EU Directive 2014/30/EU as well as the UK-Regulation SI 2016/1091 and their associated amendments.

Applied standards:

- EN 61000-6-2 Electromagnetic compatibility (EMC) Part 6-2: Generic standards Immunity for industrial environments
- EN 61000-6-4 Electromagnetic compatibility (EMC) Part 6-4: Generic standards Emission standard for industrial environments

You will find the current versions of the standards in the currently valid EC/UK Declaration of Conformity.

### RoHS

The SIMATIC NET products described in these operating instructions meet the requirements on the restriction of the use of certain hazardous substances in electrical and electronic equipment according to the EU Directive 2011/65/EU as well as the UK-Regulation SI 2012/3032 and their associated amendments.

Applied standard:

• EN IEC 63000

FΜ

The product meets the requirements of the standards:

- Factory Mutual Approval Standard Class Number 3611
- FM Hazardous (Classified) Location Electrical Equipment: Non Incendive / Class I / Division 2 / Groups A,B,C,D / T4 and Non Incendive / Class I / Zone 2 / Group IIC / T4

### cULus Approval for Information Technology Equipment



cULus Listed I. T. E.

Underwriters Laboratories Inc. complying with

- UL 60950-1 (Information Technology Equipment)
- CSA C22.2 No. 60950-1-03

Report no. E115352

### cULus Approval Hazardous Location



cULus Listed I. T. E. FOR HAZ. LOC.

Underwriters Laboratories Inc. complying with

- UL 60950-1 (Information Technology Equipment)
- ANSI/ISA 12.12.01-2007
- CSA C22.2 No. 213-M1987

Approved for use in Cl. 1, Div. 2, GP A, B, C, D T4 Cl. 1, Zone 2, GP IIC T4

Report no. E240480

### Note for Australia - RCM

The product meets the requirements of the RCM standard.

Applied standards:

- AS/NZS CISPR11 (Industrial, scientific and medical equipment Radio-frequency disturbance characteristics Limits and methods of measurement).
- EN 61000-6-4 Electromagnetic compatibility (EMC) Part 6-4: Generic standards Emission standard for industrial environments

You will find the current versions of the standards in the currently valid RCM SDoCs (Self-Declaration of Conformity).

### MSIP 요구사항 - For Korea only

### A급 기기(업무용 방송통신기자재)

이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정 외의 지역에서 사용하는것을 목적으로 합니다.

### Marking for the customs union



EAC (Eurasian Conformity)

Eurasian Economic Union of Russia, Belarus, Armenia, Kazakhstan and Kyrgyzstan Declaration of conformity according to the technical regulations of the customs union (TR ZU)

### FDA and IEC marking

The following devices meet the FDA and IEC requirements listed below:

Device	CLASS 1 LASER Product
SCALANCE XB208	-
SCALANCE XB205-3 (SC)	•
SCALANCE XB205-3LD (SC)	•
SCALANCE XB205-3	•
SCALANCE XB216	-
SCALANCE XB213-3 (SC)	•
SCALANCE XB213-3LD (SC)	•
SCALANCE XB213-3	•

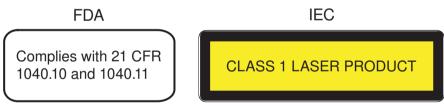


Figure A-1 FDA and IEC approvals

## 

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

### Mechanical stability (in operation)

Device	IEC 60068-2-27 shock	IEC 60068-2-6 vibration
	15 g, 11 ms duration 6 shocks per axis	10 - 58 Hz: 0.075 mm 85 - 150 Hz: 1 g 1 octave/min, 20 sweeps
SCALANCE XB208	•	•
SCALANCE XB205-3	•	•

Device	IEC 60068-2-27 shock	IEC 60068-2-6 vibration
	15 g, 11 ms duration 6 shocks per axis	10 - 58 Hz: 0.075 mm 85 - 150 Hz: 1 g 1 octave/min, 20 sweeps
SCALANCE XB205-3 (LD)	•	•
SCALANCE XB205-3 (ST)	•	•
SCALANCE XB216	•	•
SCALANCE XB213-3	•	•
SCALANCE XB213-3 (LD)	•	•
SCALANCE XB213-3 (ST)	•	•

### Installation guidelines

The devices meet the requirements if you adhere to the installation and safety instructions contained in this documentation and in the following documentation when installing and operating the devices.

- "Industrial Ethernet / PROFINET Industrial Ethernet" System Manual (<u>https://support.industry.siemens.com/cs/ww/en/view/27069465</u>)
- "Industrial Ethernet / PROFINET Passive Network Components" System Manual (<u>https://support.industry.siemens.com/cs/ww/en/view/84922825</u>)
- "EMC Installation Guidelines" configuration manual (<u>https://support.industry.siemens.com/cs/ww/en/view/60612658</u>)

## 🛕 WARNING

### Personal injury and property damage can occur

The installation of expansions that are not approved for SIMATIC NET products or their target systems may violate the requirements and regulations for safety and electromagnetic compatibility.

Only use expansions that are approved for the system.

### Note

The test was performed with a device and a connected communications partner that also meets the requirements of the standards listed above.

When operating the device with a communications partner that does not comply with these standards, adherence to the corresponding values cannot be guaranteed.

# Index

## Α

Accessories, 19 Ambient temperature, 47, 48, 50, 51, 52, 53, 55, 56 Approvals, 63 Article numbers, 17 Attachment to Industrial Ethernet, 47, 48, 49, 50, 52, 53, 54, 55 Autonegotiation, 37 AWG, 38

## С

Cable cross section, 38 CE mark, 63 CLI, 40 Command Line Interface, 40 Command Line Interface (CLI), 44 Components of the product, 19 Configuration, 24 Connecting up Grounding, 42 Cross section, 38

## D

Dimensions, 47, 48, 50, 51, 52, 53, 55, 56

## Е

Electrical data, 47, 48, 49, 51, 52, 53, 54, 56 Environmental conditions, 47, 48, 50, 51, 52, 53, 55, 56

## F

Factory defaults, 23, 44 Factory setting, 23, 44 Fault LED, 20, 21, 22

## G

Glossary, 7 Grounding, 20, 21, 22, 42

## Н

Housing, 47, 48, 50, 51, 52, 53, 55, 56

## I

Installation, 47, 48, 50, 51, 52, 53, 55, 56 Installation on a DIN rail, 30 Installation on a DIN rail, 30

## L

LED displays, 24, 25 Fault LED, 24 Port LEDs, 25

## Μ

MDI / MDI-X autocrossover, 37 MTBF, 47, 49, 50, 51, 52, 54, 55, 56

### Ρ

Permitted ambient conditions, 47, 48, 50, 51, 52, 53, 55, 56 Pin assignment, 37 Power supply, 20, 21, 22, 39

### R

RESET button, 20, 21, 22, 23, 45 Reset device, 23, 44 Reset to Factory Defaults, 44 Restore Factory Defaults, 24

## S

Safety notices for installation, 27 general, 9 Use in hazardous areas, 9, 27, 33 when connecting up, 33 SELECT/SET button, 44 Serial interface, 20, 21, 22, 40 SIMATIC NET glossary, 7 SIMATIC NET manual, 6 Spring-loaded terminal, 39 Startup phase, 24, 45 System manual, 6, 29, 69

## W

Web Based Management (WBM), 44 Weight, 47, 48, 50, 51, 52, 53, 55, 56 Wiring, 38